



ISIS DVR SYSTEM

version 4.1.1.0

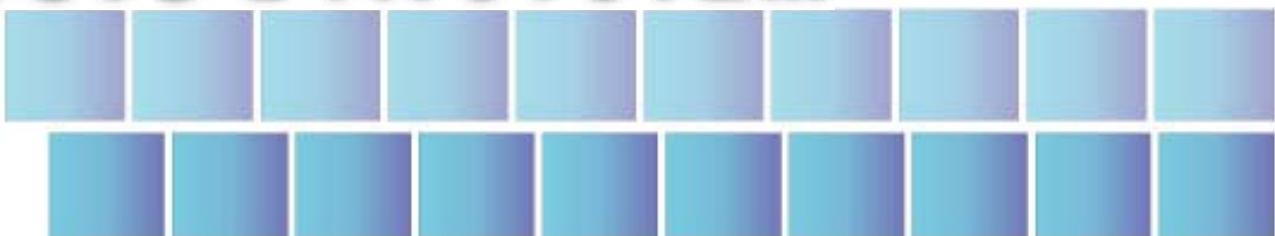


TABLE OF CONTENTS

APPENDIX

Appendix 1

| | |
|---------------------------------|----------|
| 1 POS DVR----- | 3 |
| 1.1 Hardware Installation----- | 4 |
| 1.1.1 Parts----- | 4 |
| 1.1.2 Installation----- | 6 |
| 1.2 Software Installation----- | 7 |
| 1.2.1 Installation & Setup----- | 7 |

Appendix 2

| | |
|-----------------------|-----------|
| 2 I-Phone----- | 10 |
| 2.1 Installation----- | 11 |
| 2.2 Execution----- | 12 |
| 2.3 Audio Setup----- | 13 |

Appendix 3

| | |
|---|-----------|
| 3 DVR Manager----- | 14 |
| 3.1 Installation----- | 15 |
| 3.1.1 Start----- | 15 |
| 3.1.2 Selection of Installation Method----- | 15 |
| 3.1.3 On Installing----- | 16 |
| 3.1.4 Finish----- | 16 |
| 3.2 Execution----- | 17 |
| 3.2.1 DVR----- | 17 |
| 3.2.1.1 Setup----- | 17 |
| 3.2.1.2 Control----- | 18 |
| 3.2.1.3 Search----- | 19 |
| 3.2.2 Multi-DVR----- | 21 |
| 3.2.2.1 Setup----- | 21 |
| 3.2.2.2 Control----- | 22 |
| 3.2.3 C & S (Central Station) ----- | 23 |
| 3.2.3.1 Setup----- | 23 |
| 3.2.3.2 Event----- | 24 |
| 3.2.3.3 E-Map----- | 25 |




**Appendix 1
POS DVR**

TABLE OF CONTENTS

- 1.1 Hardware Installation
 - 1.1.1 Parts
 - 1.1.2 Installation
- 1.2 Software Installation
 - 1.2.1 Installation & Setup

1.1 Hardware Installation

1.1.1. Parts

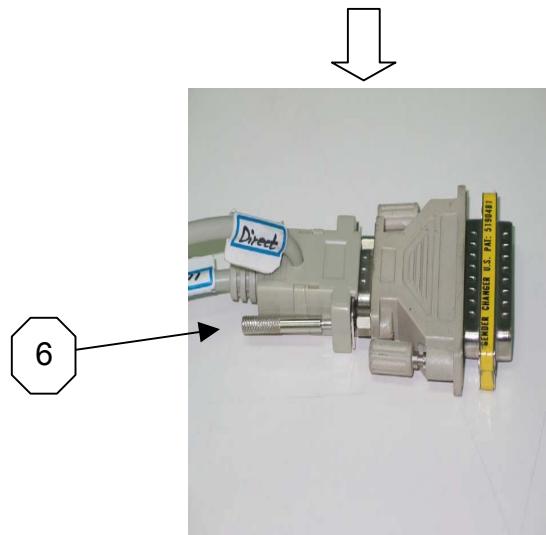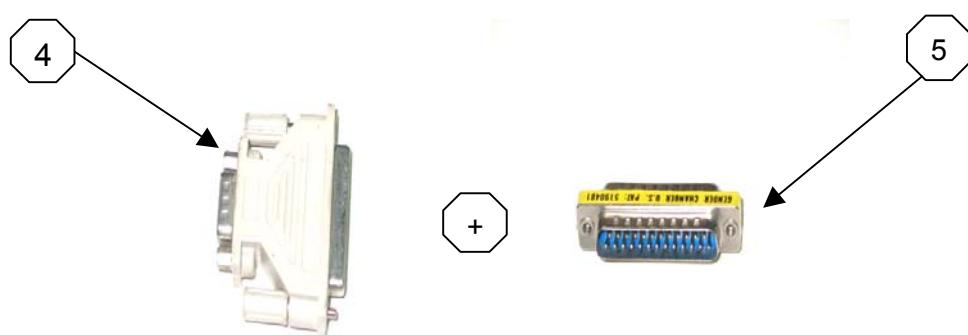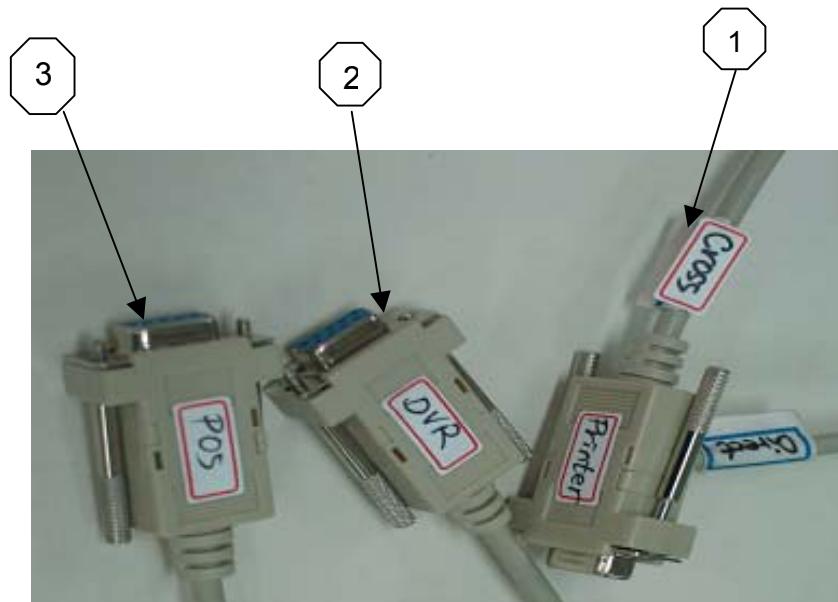

Part Names

1. RS232 Serial Cables (Cross & Direct)
2. RS232 Serial Cable
3. RS232 Serial Cable
4. RS232 Serial Converter (9 pins into 25 pins)
5. Gender Changer
6. #1 + #4 + #5
7. DVR
8. POS Printer
9. Point of Sales (POS)



1.1.2 Installation

Part # 2 goes into
COM Port 1 of Part # 7.



Part # 1 goes into
Serial Port of Part # 8.






Part # 3 goes into
Serial Port of Part # 9.




1.2 Software Installation

1.2.1 Installation & Setup

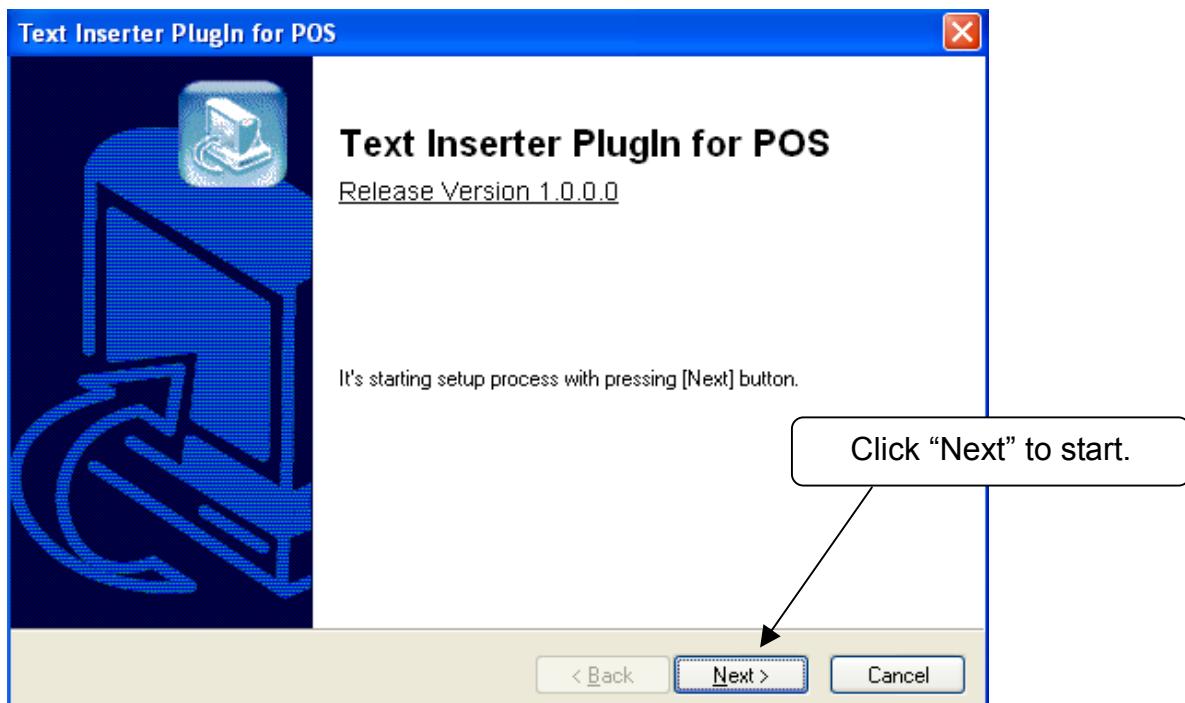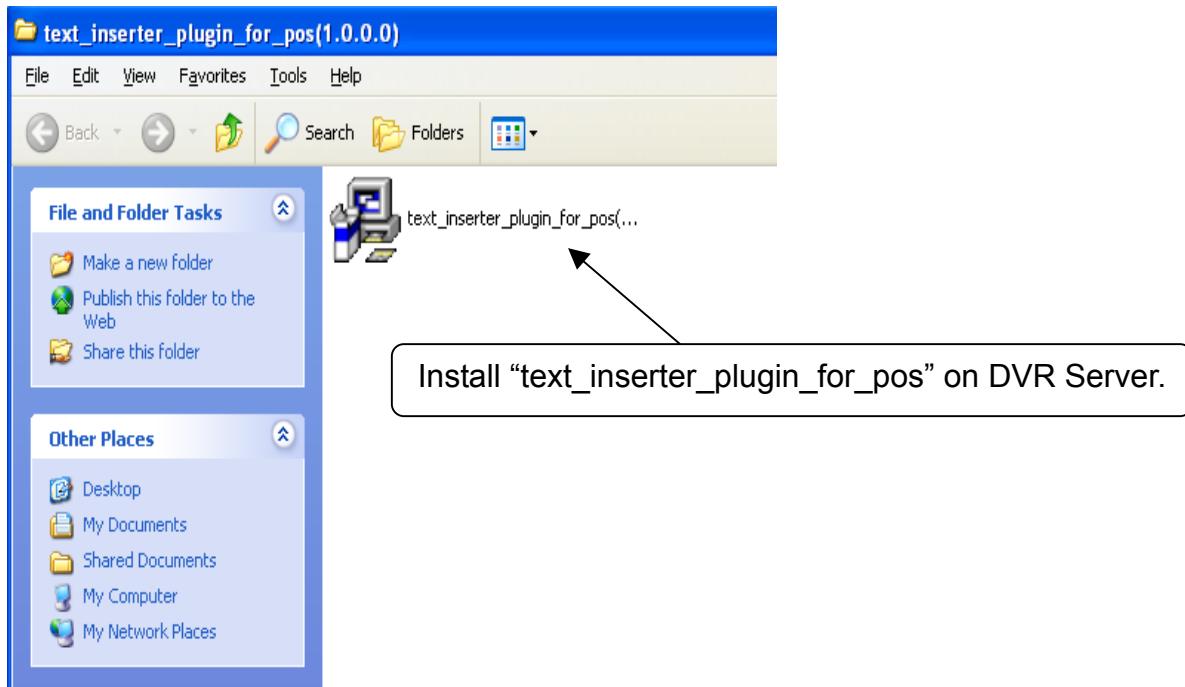


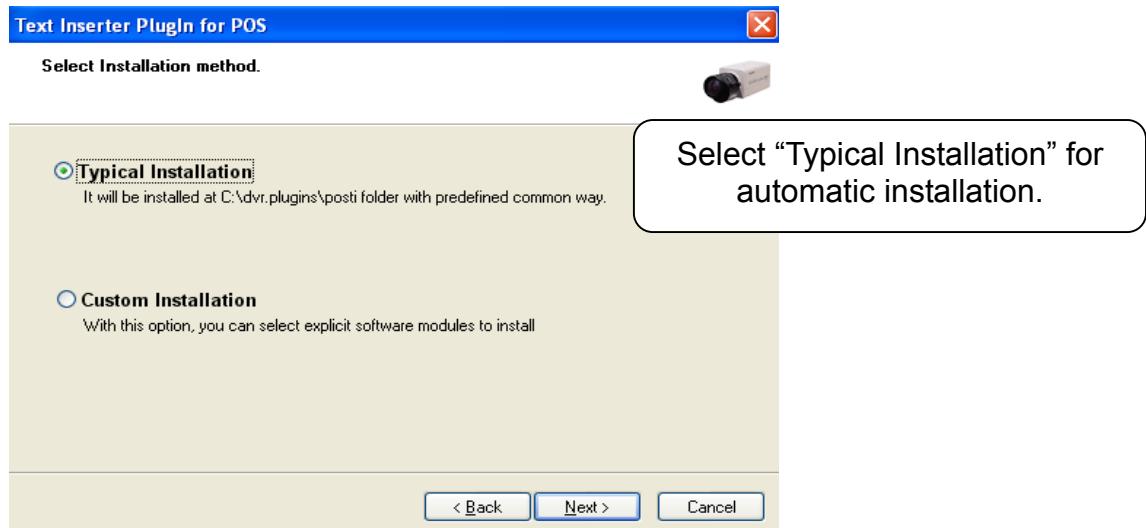

Select “Typical Installation” for automatic installation.

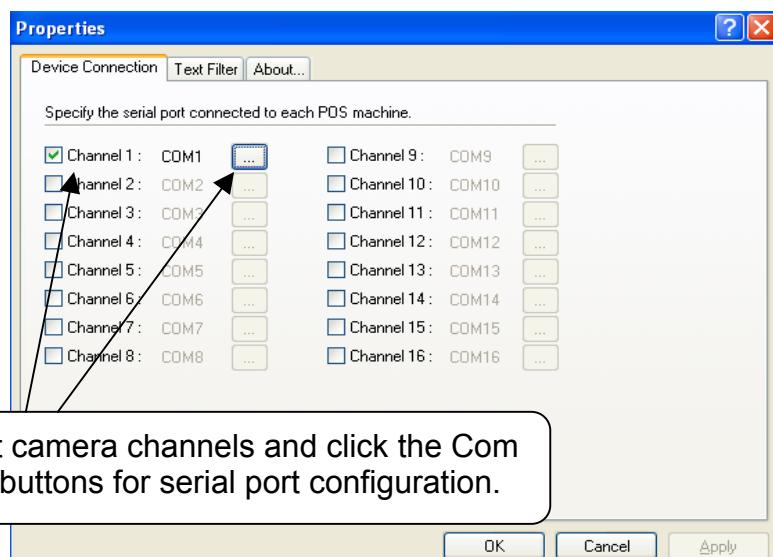


Select camera channels and click the Com Port buttons for serial port configuration.

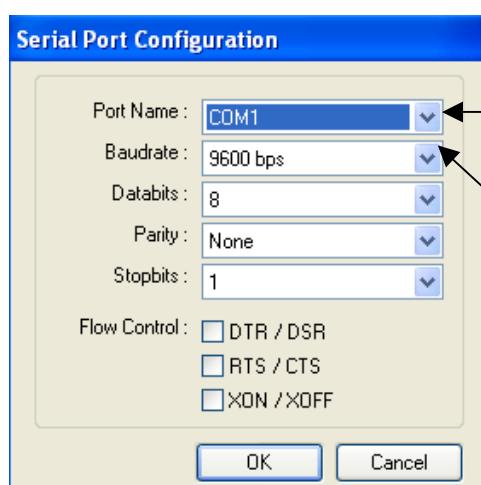

Make sure to select “COM1” if POS printer is connected to Com Port 1.

The Baud rate value is normally 9600.

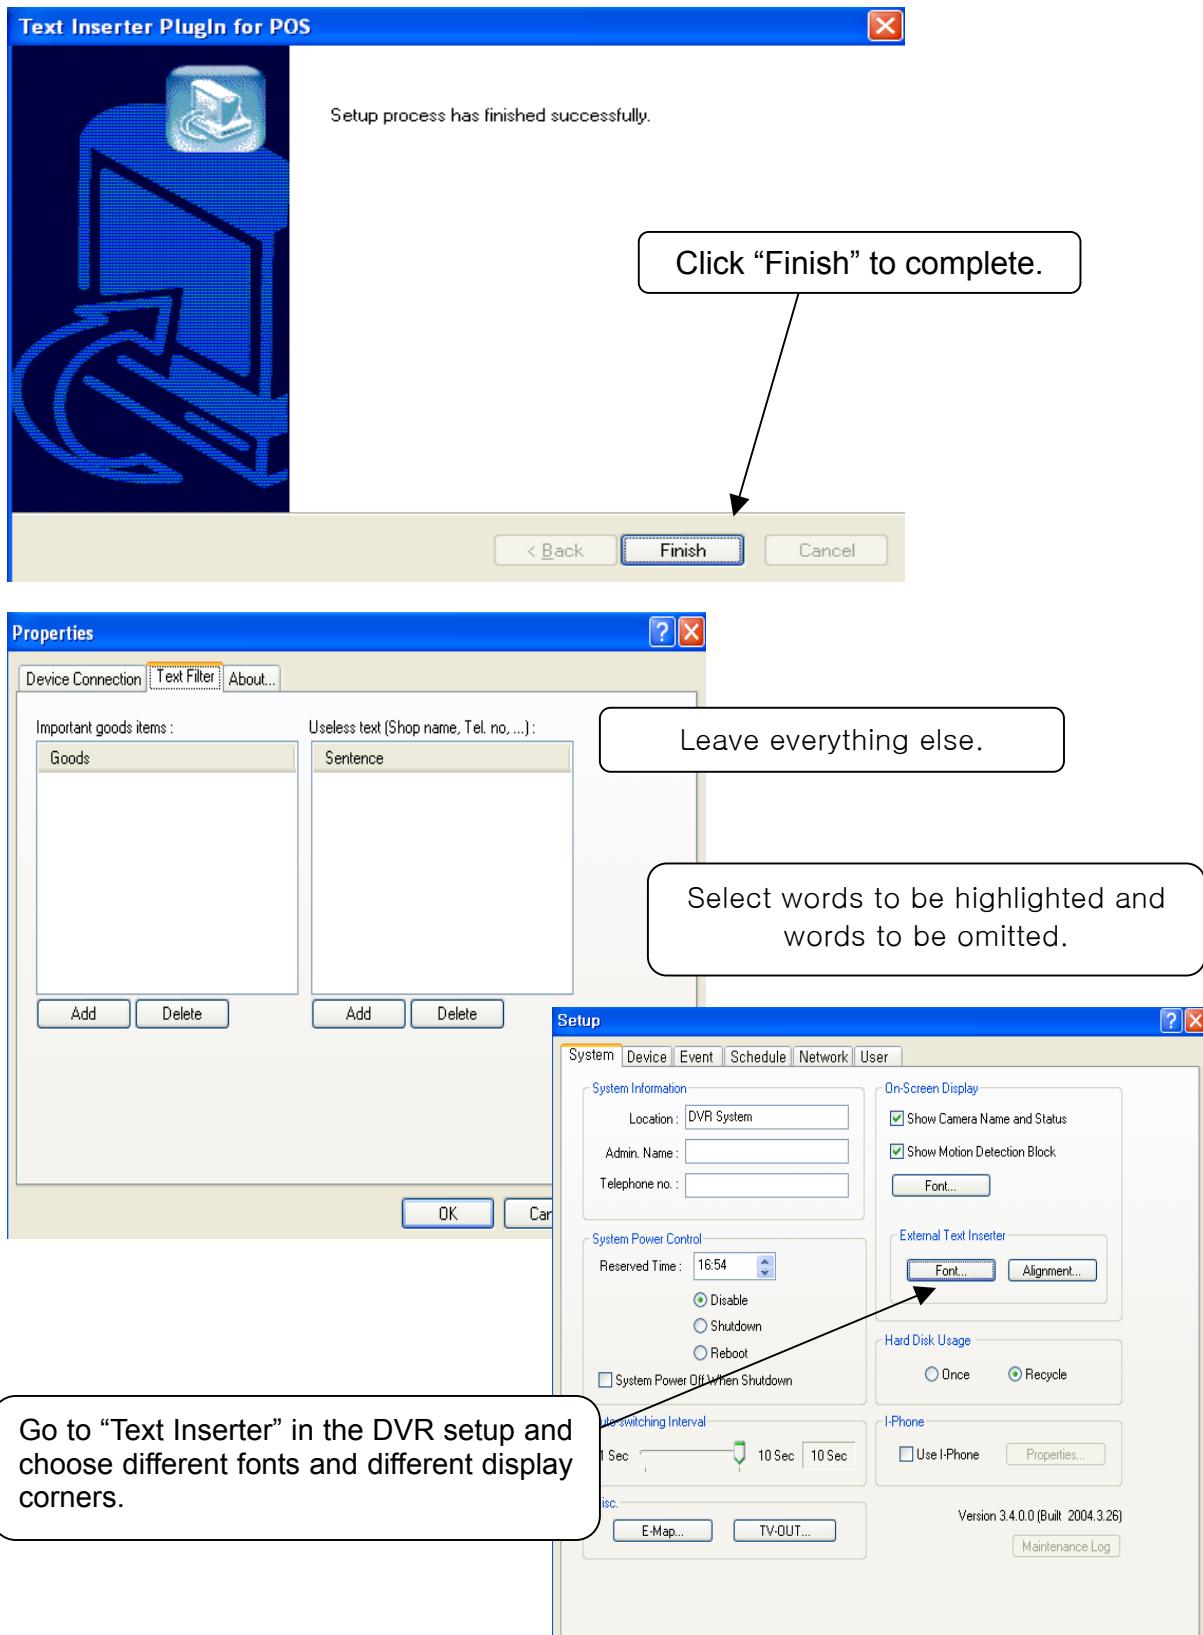

Appendix 2

I-Phone


TABLE OF CONTENTS

- 2.1 Installation**
- 2.2 Execution**
- 2.3 Audio Setup**


2.1 Installation

Any system used for “Two-way Communication” must have static IP and “I-Phone (1.0.1.0).exe” must be installed.

For I-phone installation, double-click on “I-Phone(1.0.1.0).exe”.

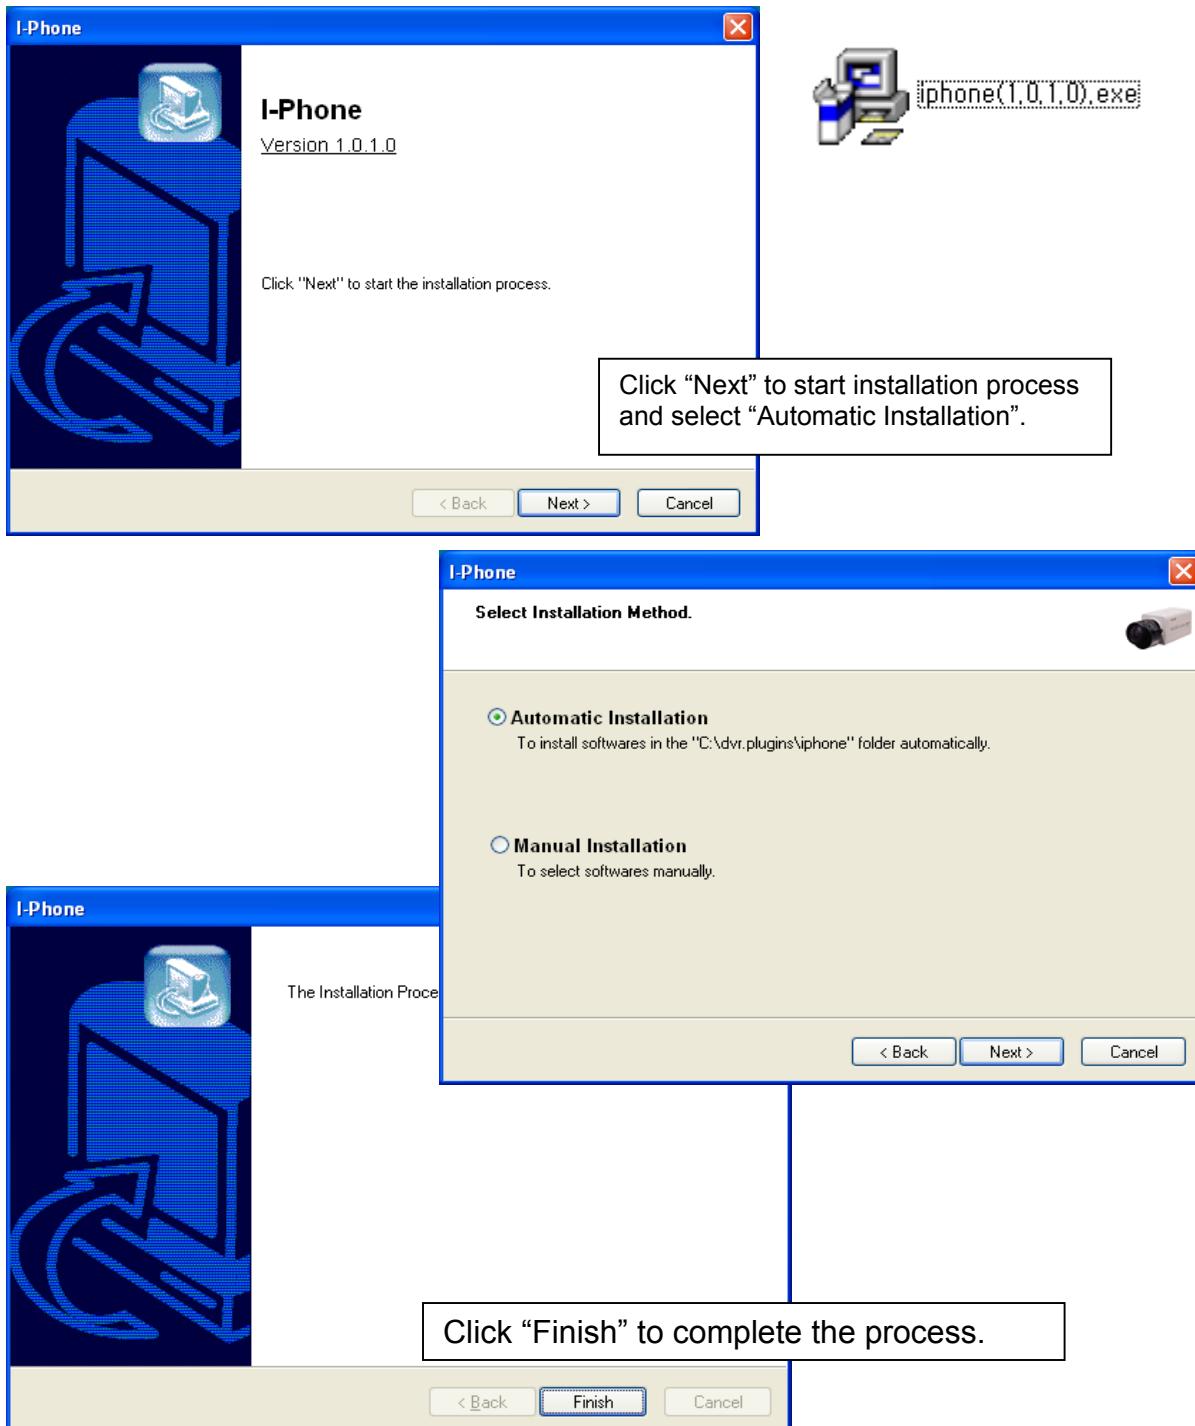


2.2 Execution

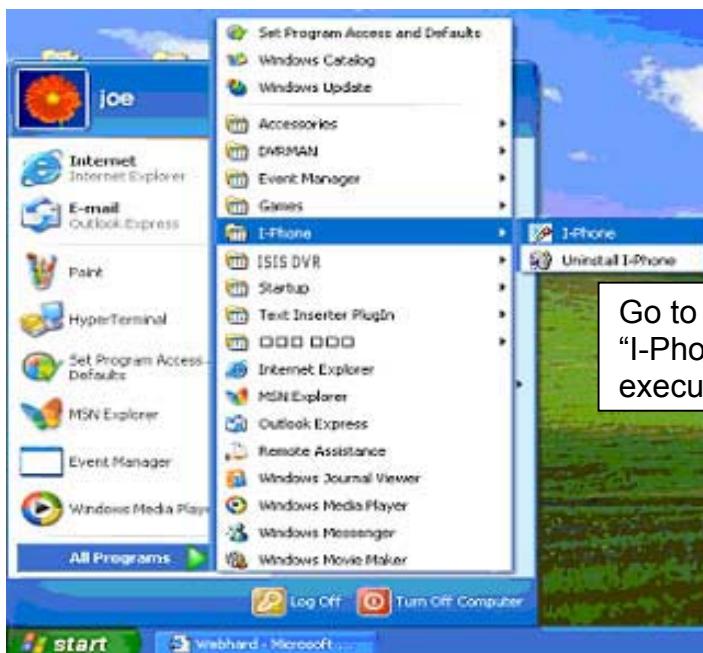


Go to "Start", "All Programs", find "I-Phone" and select it for execution.



Find the I-phone icon at the right bottom and click it for the next step.

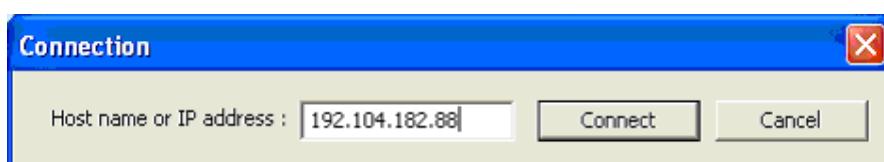


Select "Call for Two-Way Communication", type in IP address and click "Connect".

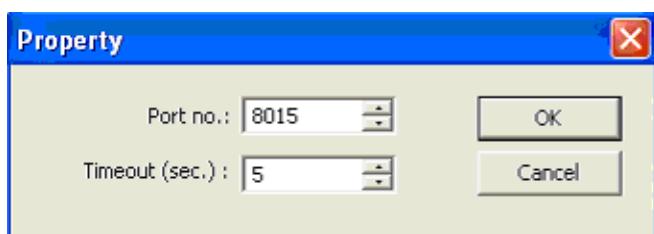

Property: The default port number is 8015 and the default timeout value is 5 seconds.
Leave them as they are unless other values must be used.

2.3 Audio Setup


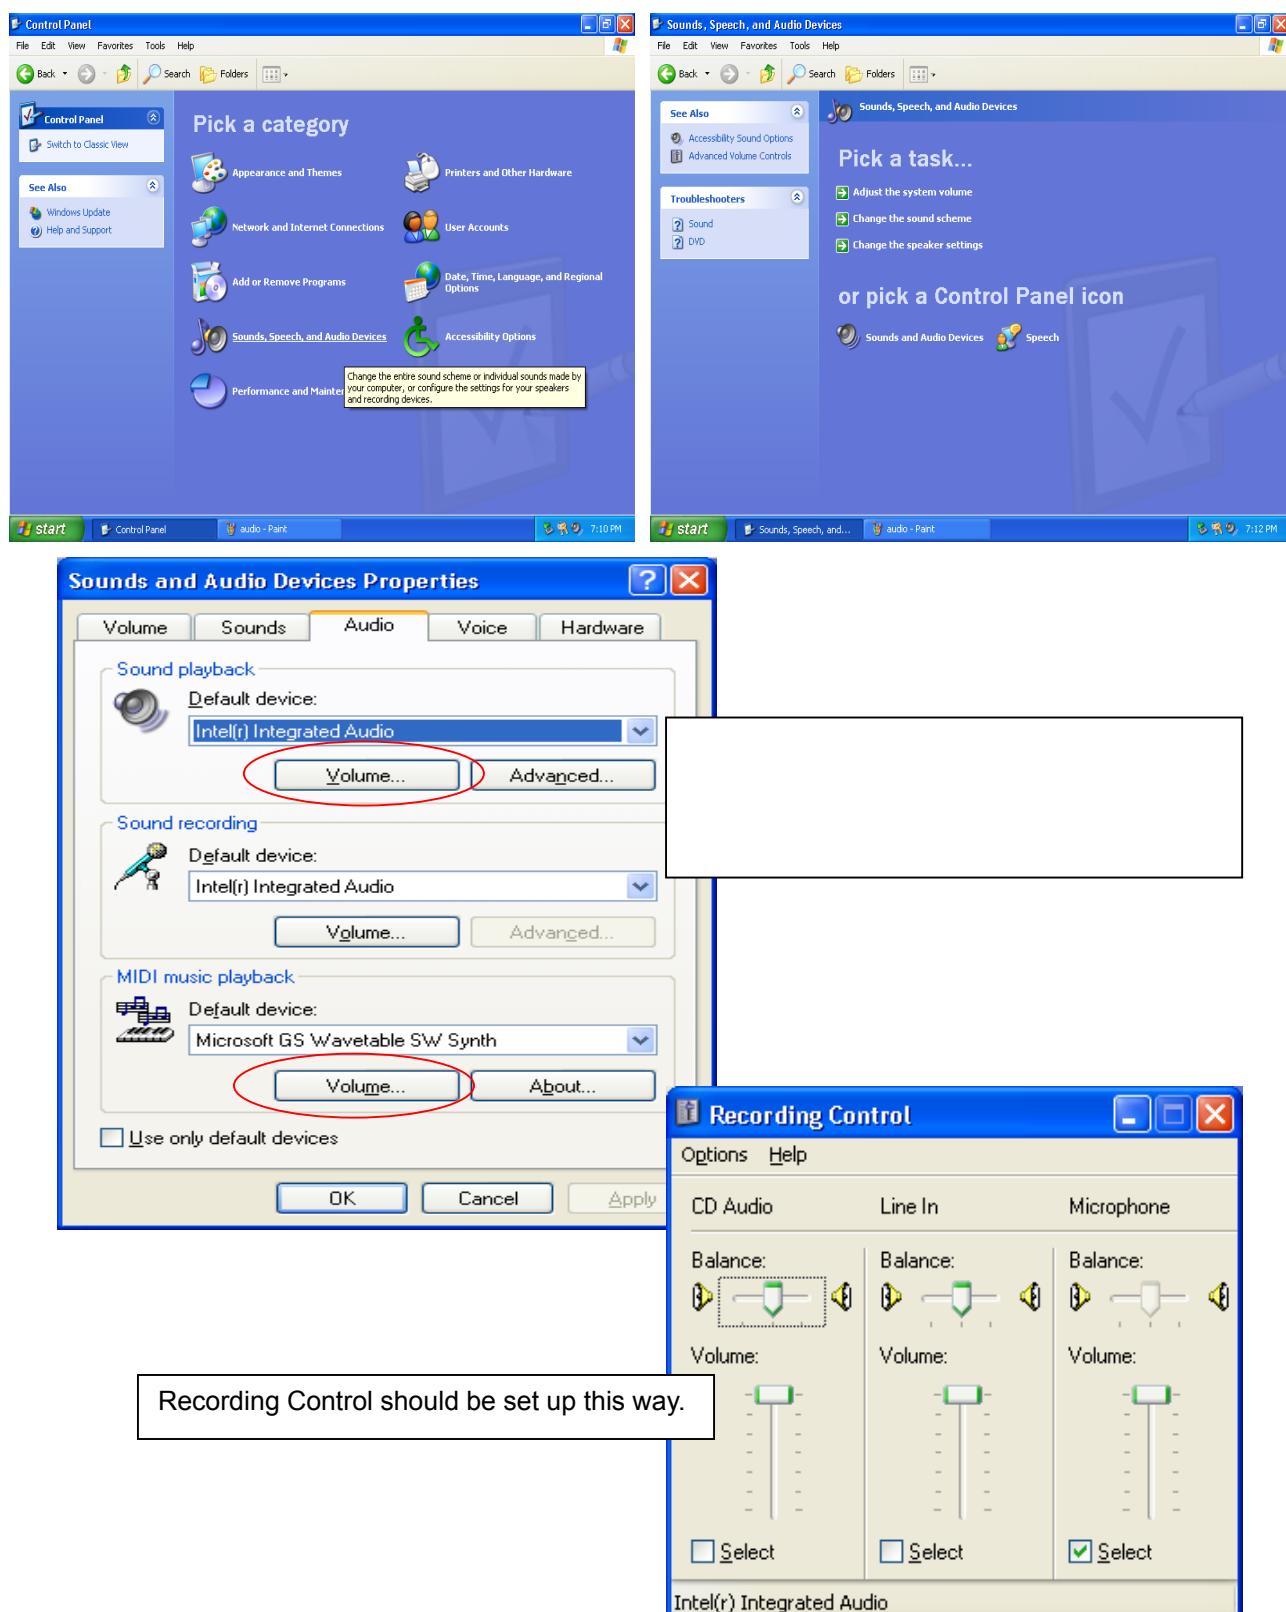


Appendix 3 DVR Manager



TABLE OF CONTENTS

- 3.1 Installation
 - 3.1.1 Start
 - 3.1.2 Selection of Installation Method
 - 3.1.3 On Installing
 - 3.1.4 Finish
- 3.2 Execution
 - 3.2.1 DVR
 - 3.2.1.1 Setup
 - 3.2.1.2 Control
 - 3.2.1.3 Search
 - 3.2.2 MultiDVR
 - 3.2.2.1 Setup
 - 3.2.2.2 Control
 - 3.2.3 C & S (Central Station)
 - 3.2.3.1 Setup
 - 3.2.3.2 Event
 - 3.2.3.3 E-Map

3.1 Installation

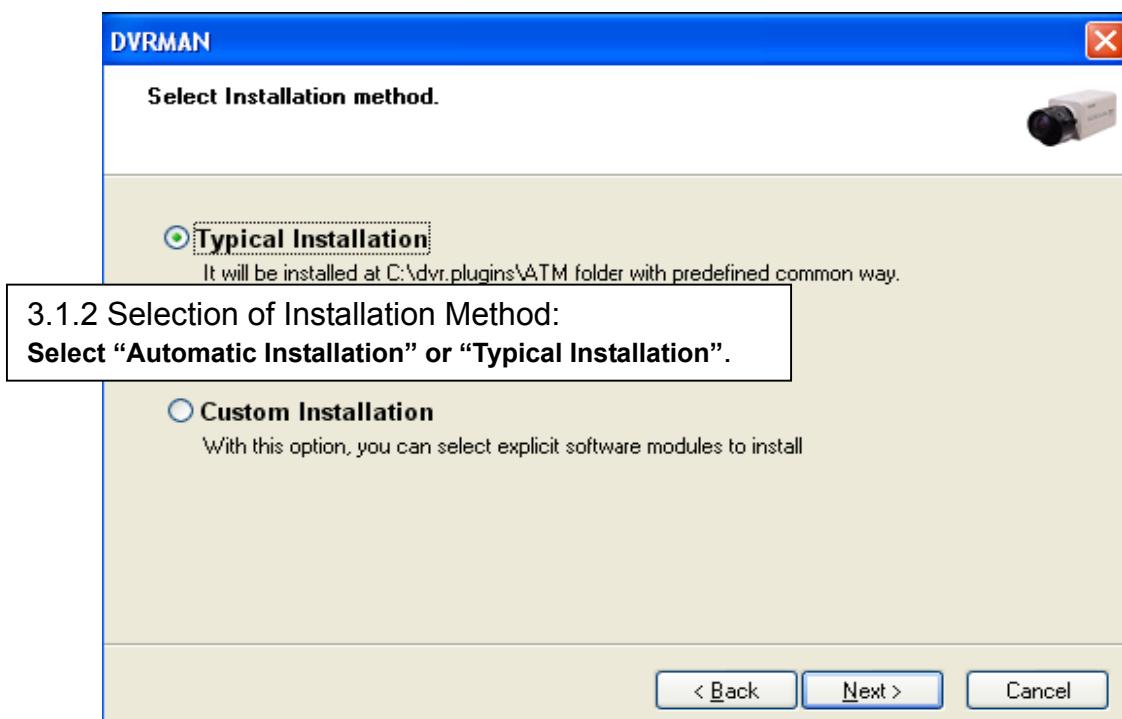
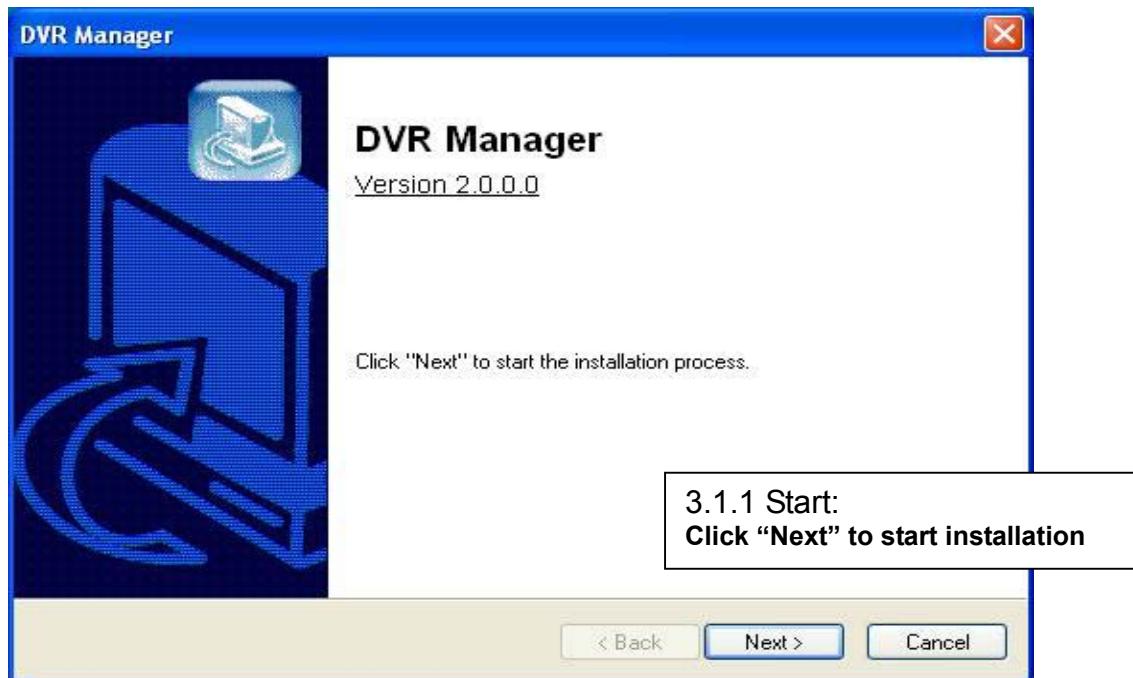



3.1.3 On Installing (copying drivers and files)

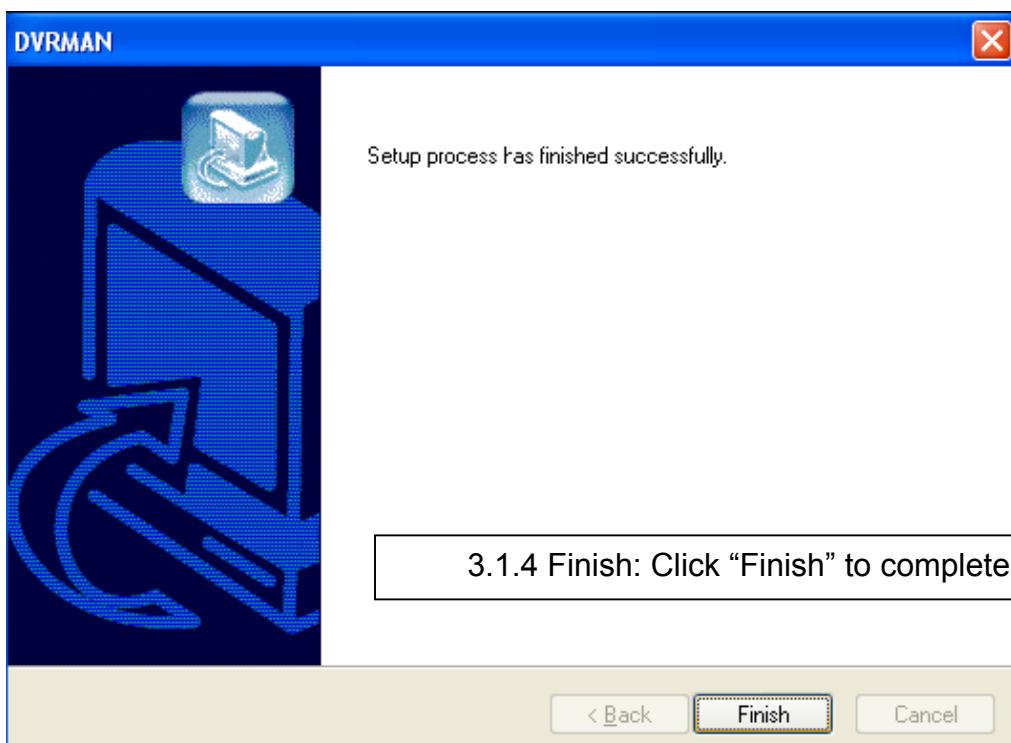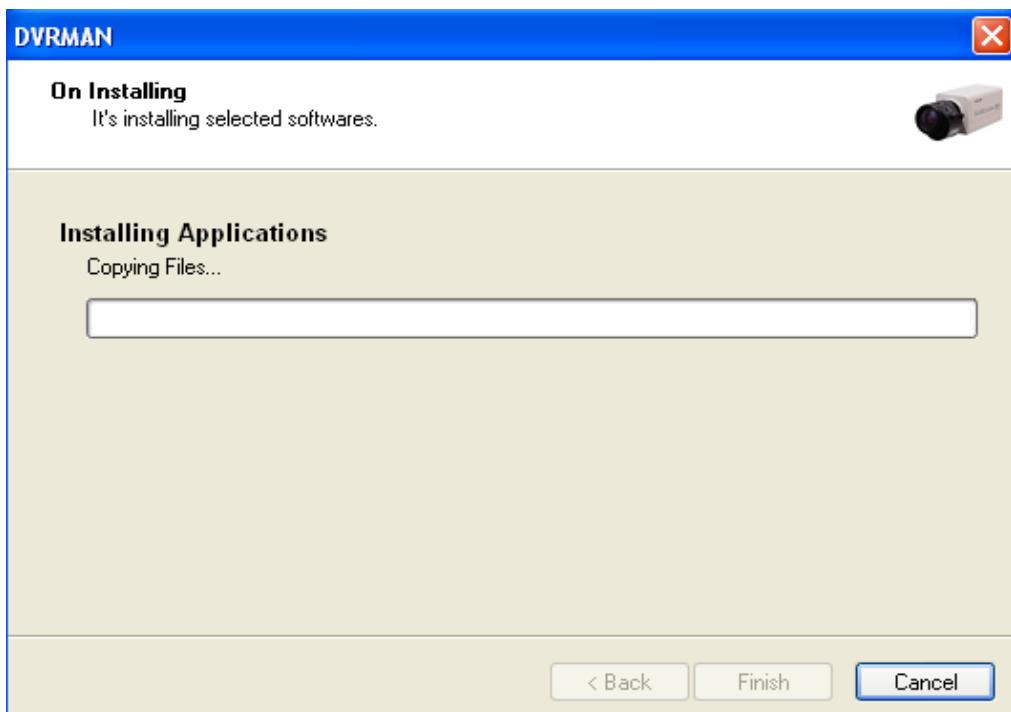

3.2 Execution


3.2.1 DVR: It monitors one specific site selected.

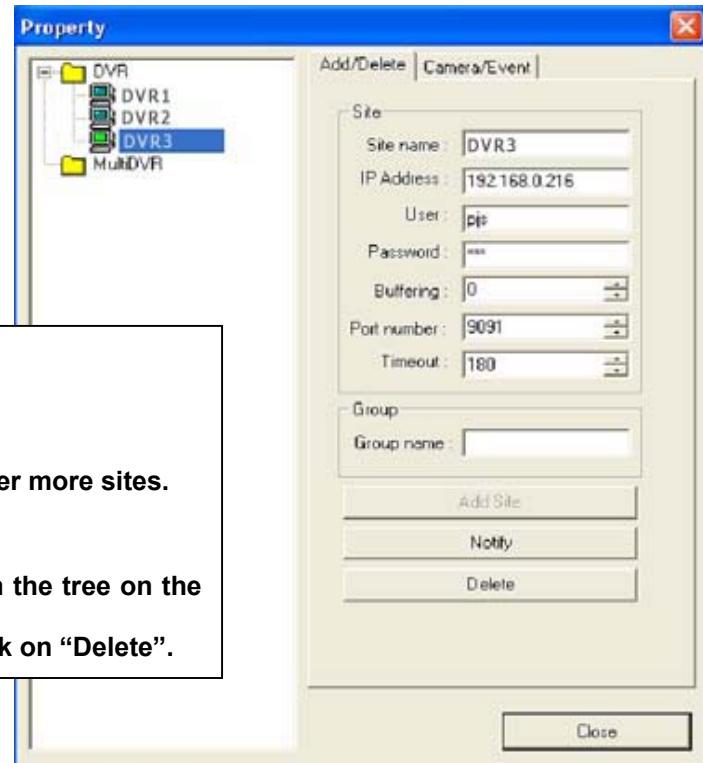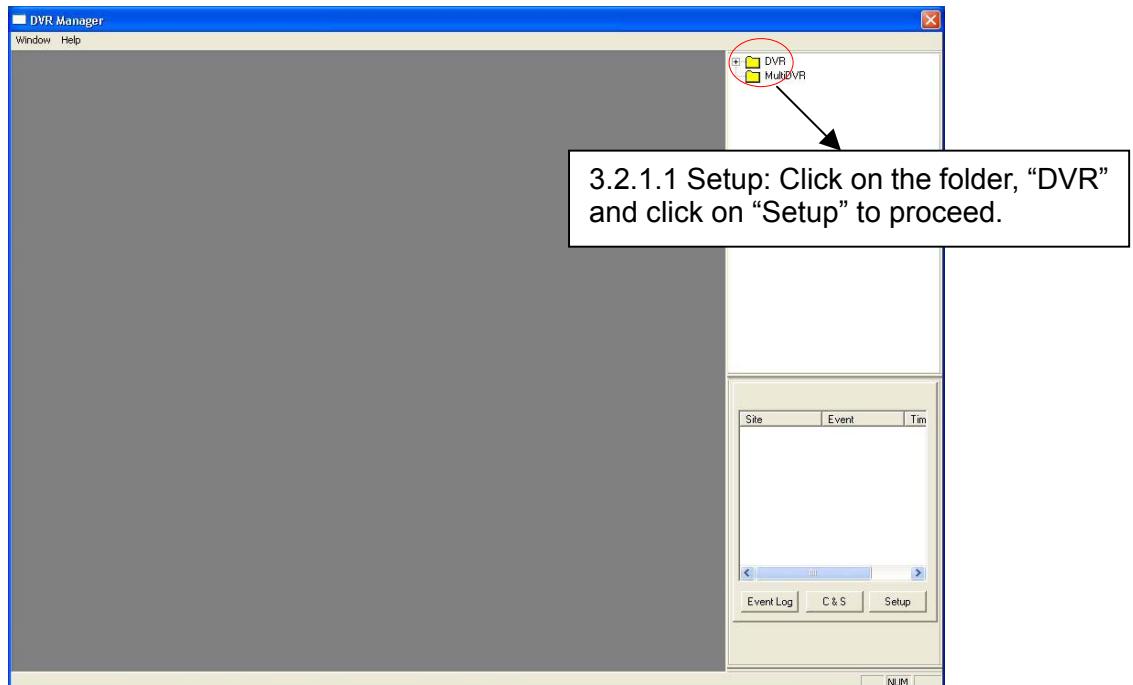

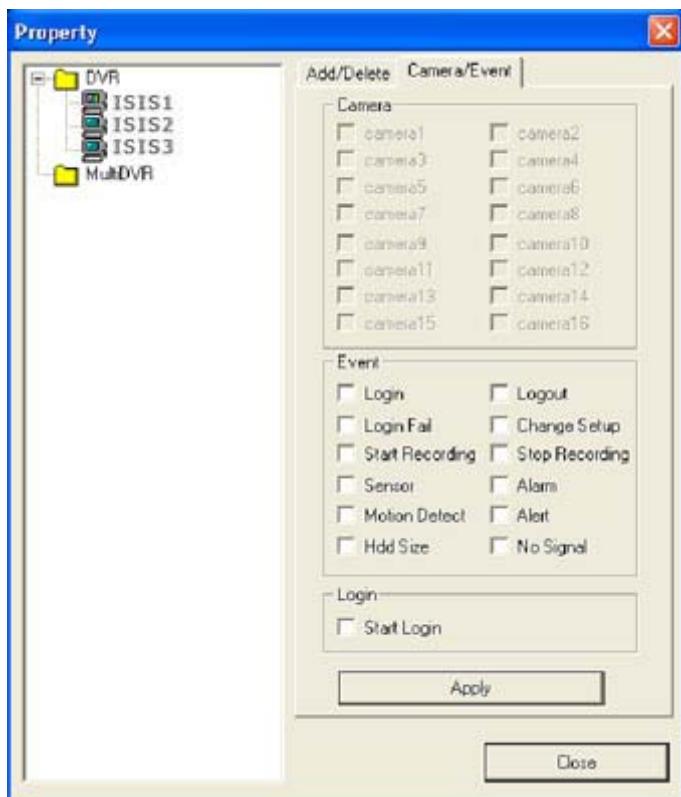

Checked events will be reported to DVR Manager and recorded in Event Log.

3.2.1.2 Control

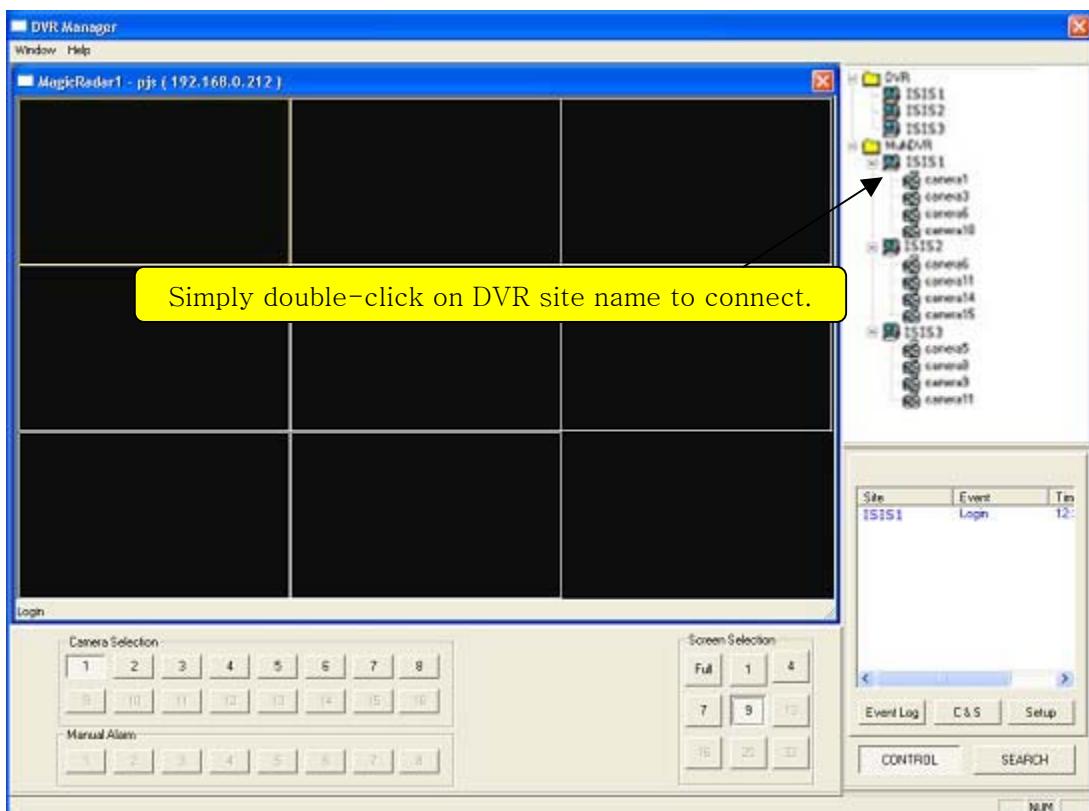


Event Log

Manual Alarm

- Steps
1. Set alarms on DVR Server.
 2. Monitor on DVR Manager.
 3. Detect event.
 4. Click alarm button.





3.2.1.3 Search

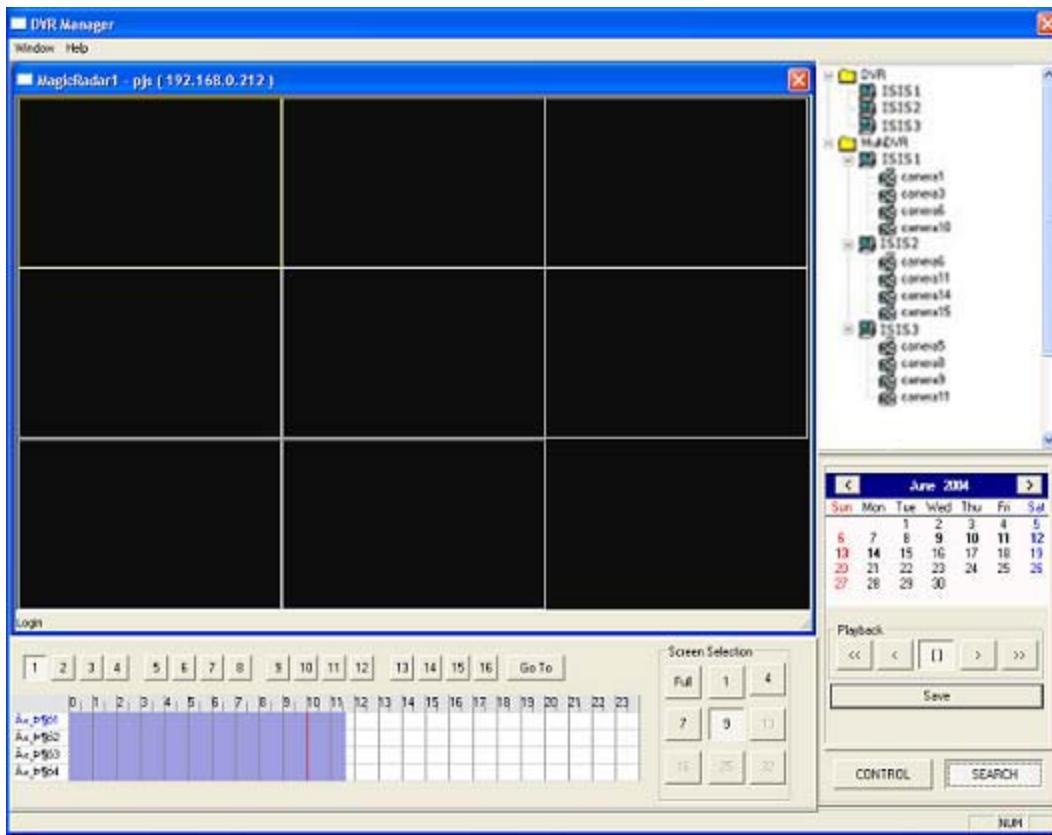


Search Steps:

1. Select a DVR site from the tree at the top right for playback.
2. Select a date from the calendar.
3. Select time to be searched either by clicking on the time bar or by using "Go To".

Saving in AVI File Format

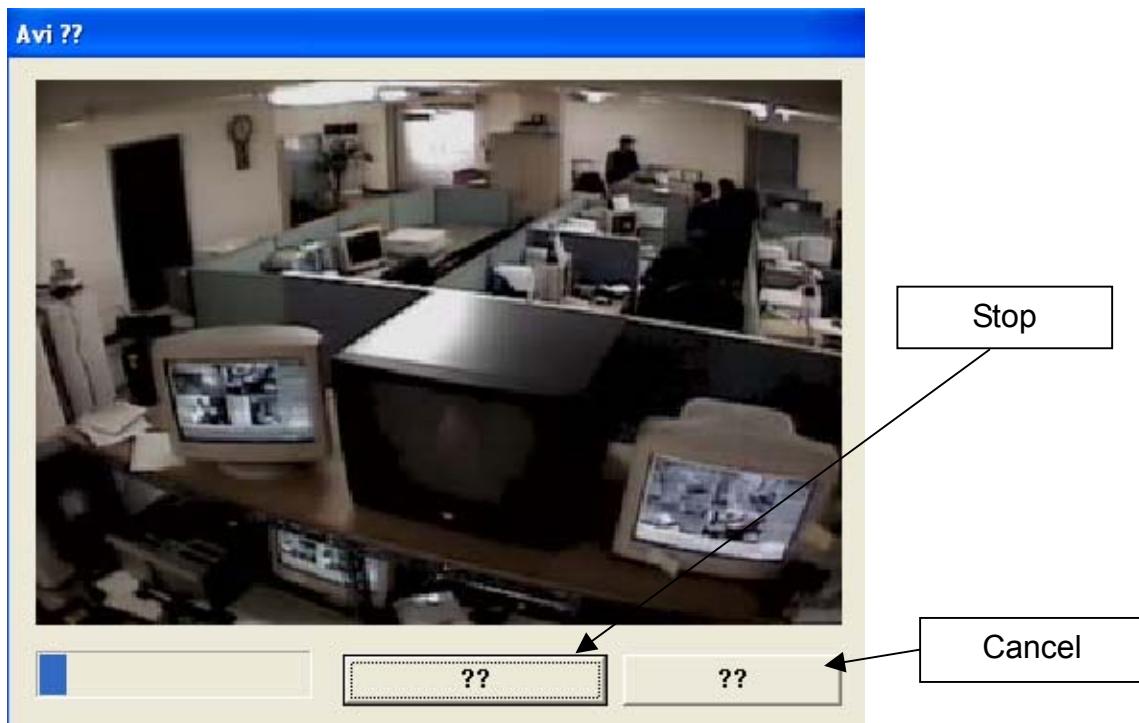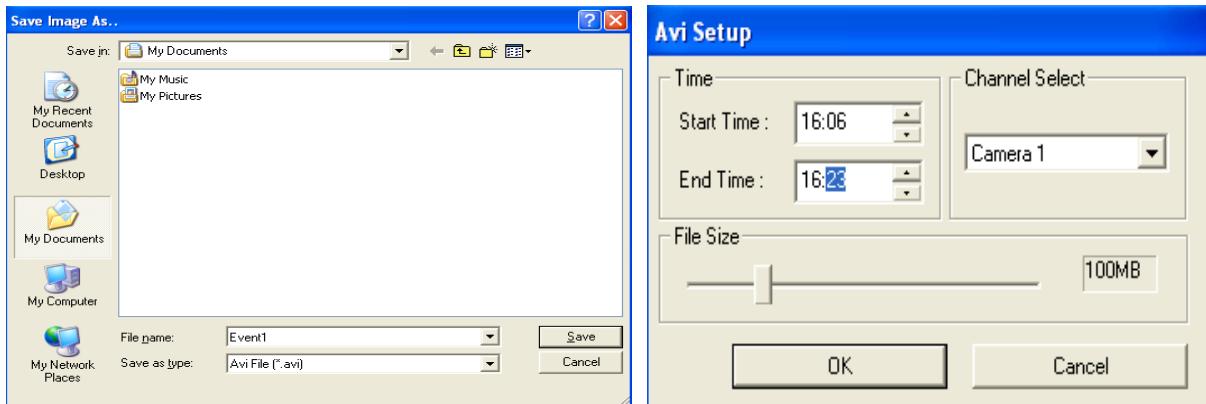


3.2.2 MultiDVR: It monitors as many as 32 cameras from different DVR sites.

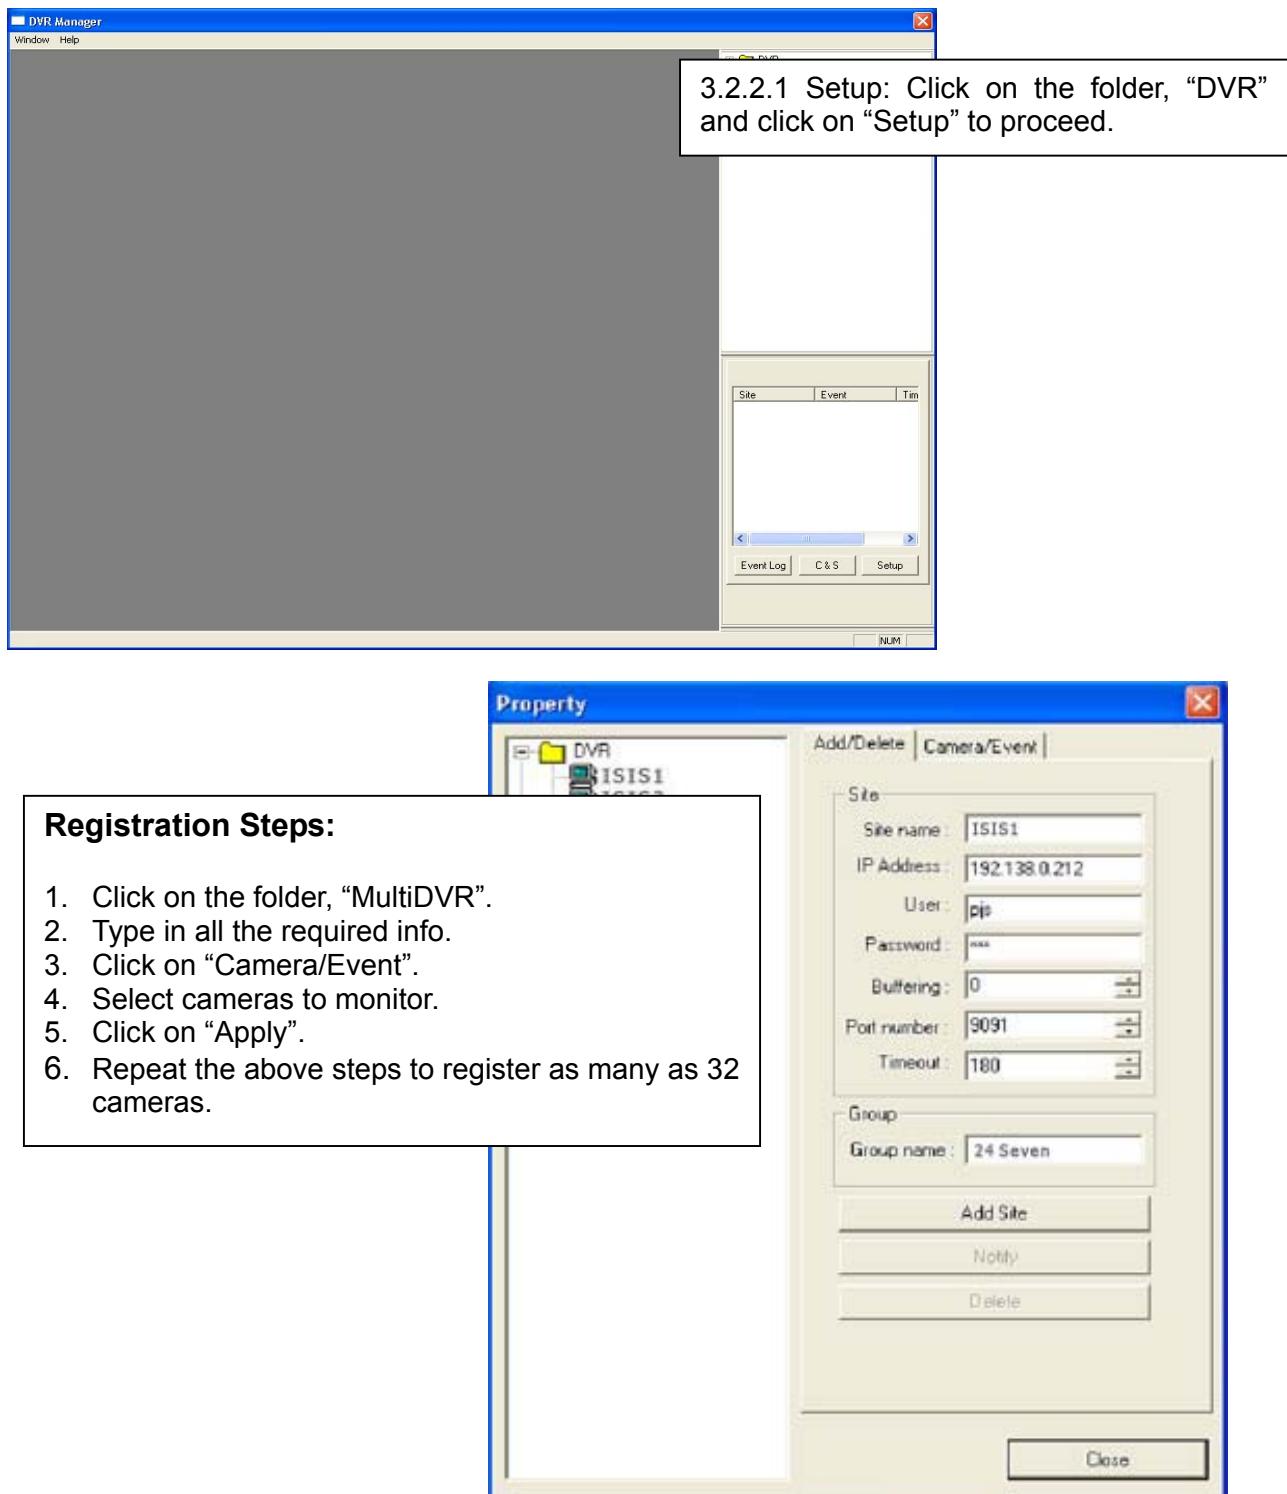


Registration Steps:

1. Click on the folder, “MultiDVR”.
2. Type in all the required info.
3. Click on “Camera/Event”.
4. Select cameras to monitor.
5. Click on “Apply”.
6. Repeat the above steps to register as many as 32 cameras.

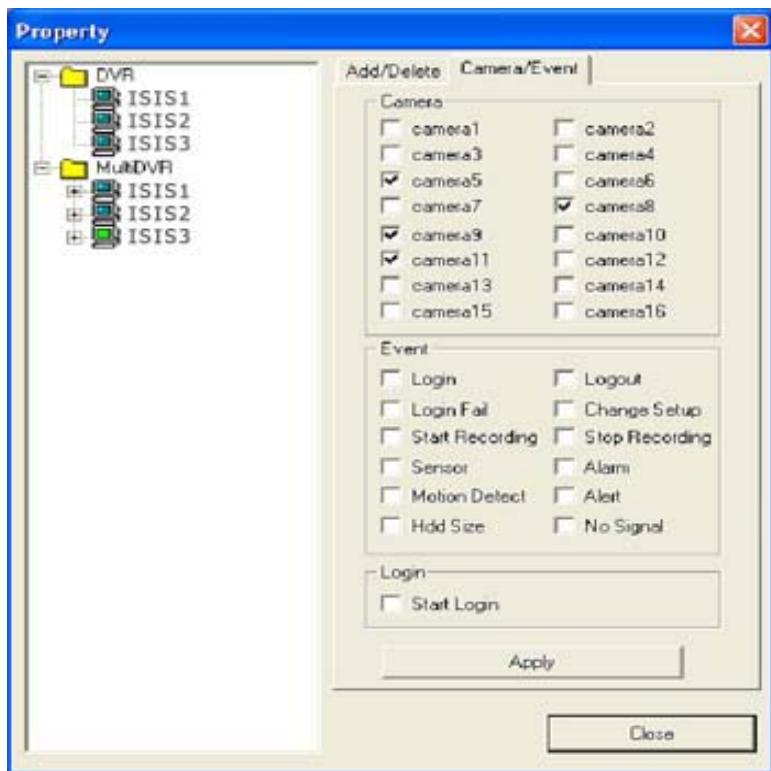

3.2.2.2 Control

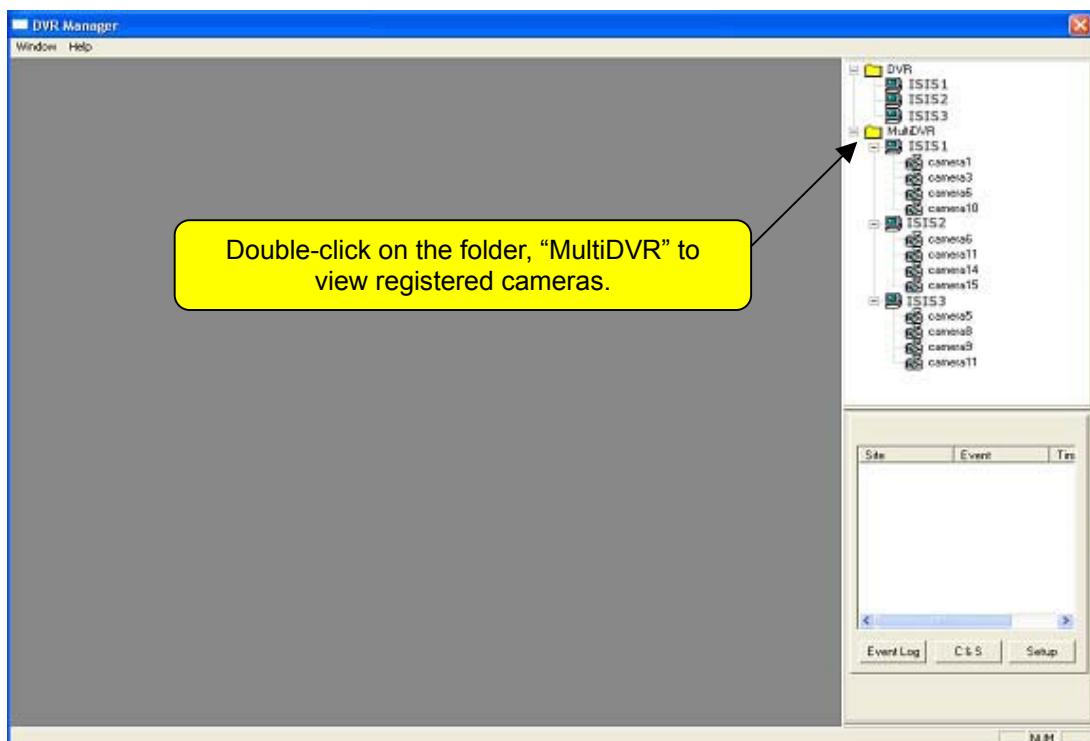



**3.2.3 C & S (Central Station):
It manages events received from numerous DVR sites.**

3.2.3.1 Setup




On each DVR server, go to "Setup/Network" and check the box next to "Central Station" Then, type in the IP address of DVR Manager and select events to report.

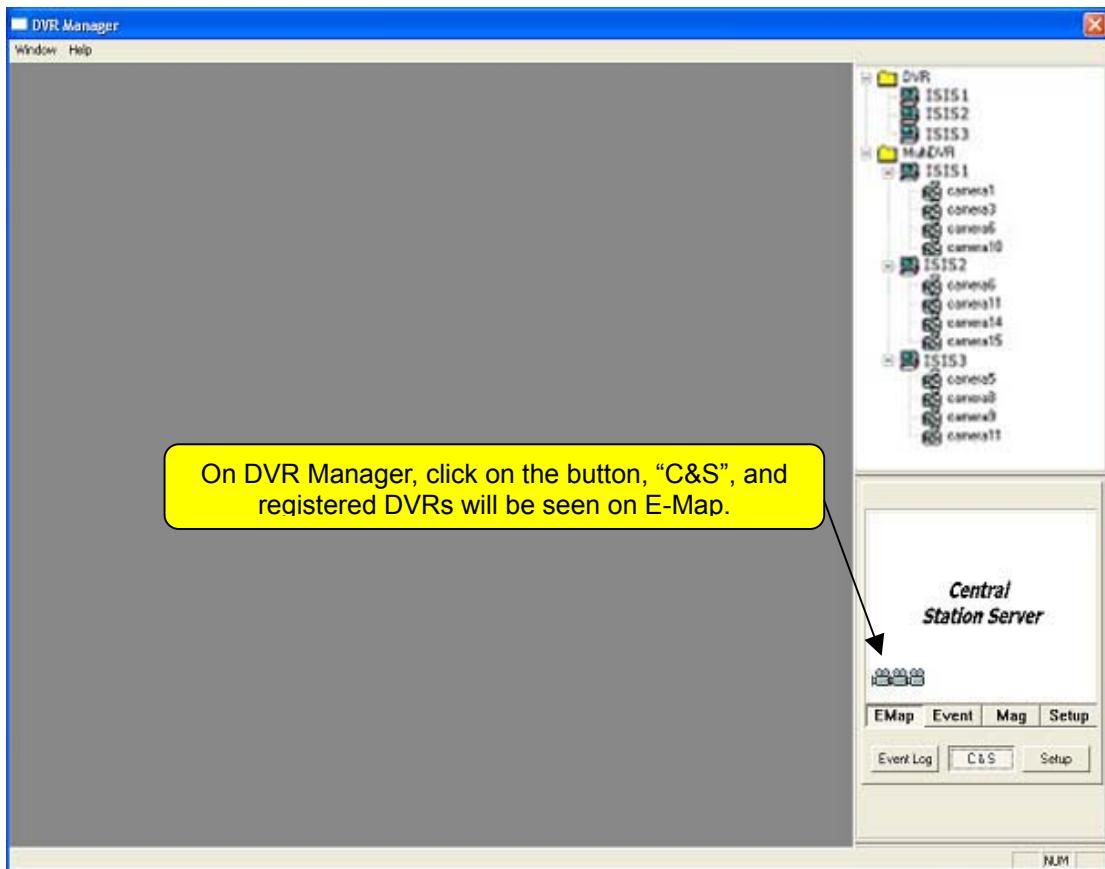

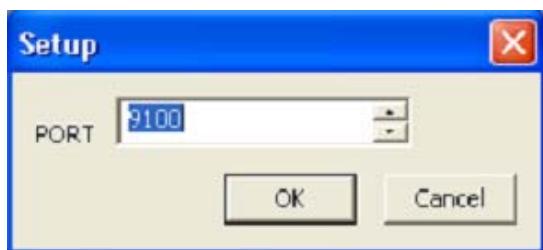


Click on “Setup” for port setup. The default value, 9100 is good to use in all cases.

3.2.3.2 Event

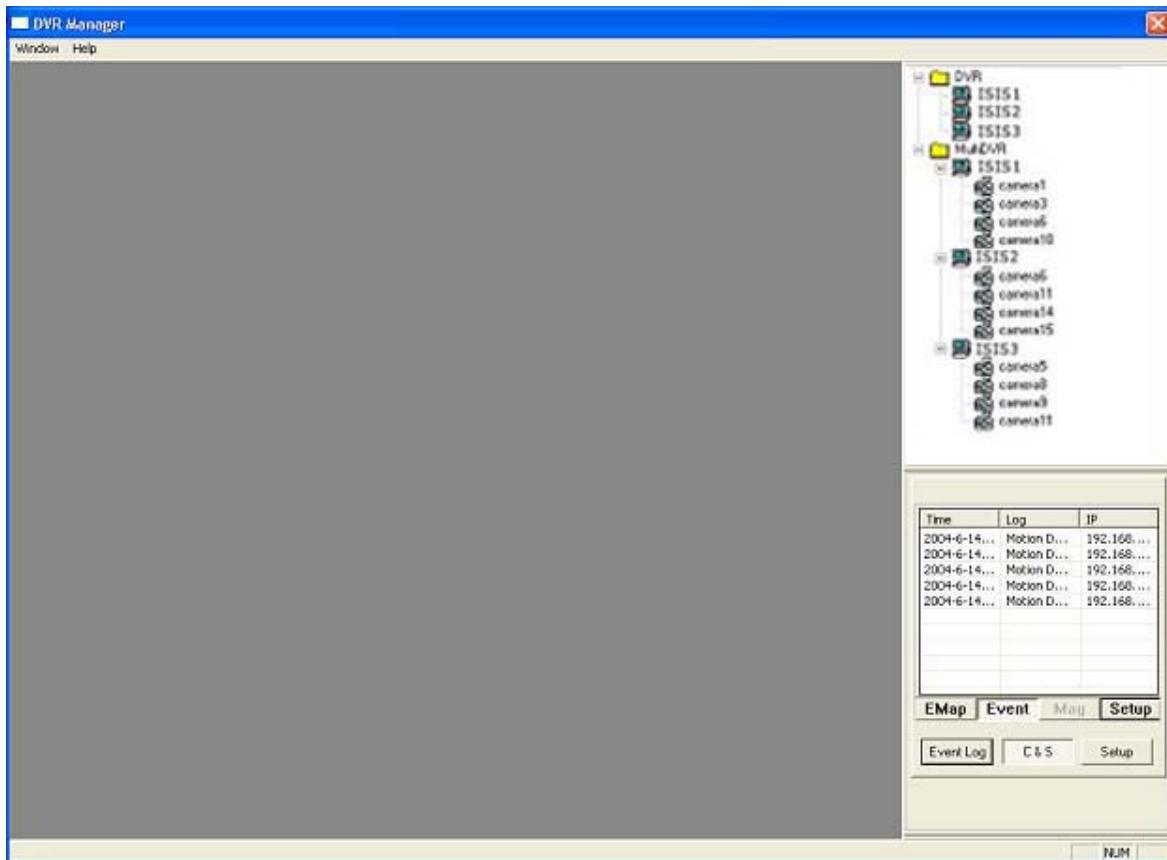




“Event” displays all the events coming in from registered DVRs.
Double-click on event to go to DVR server.

3.2.3.3 E-Map

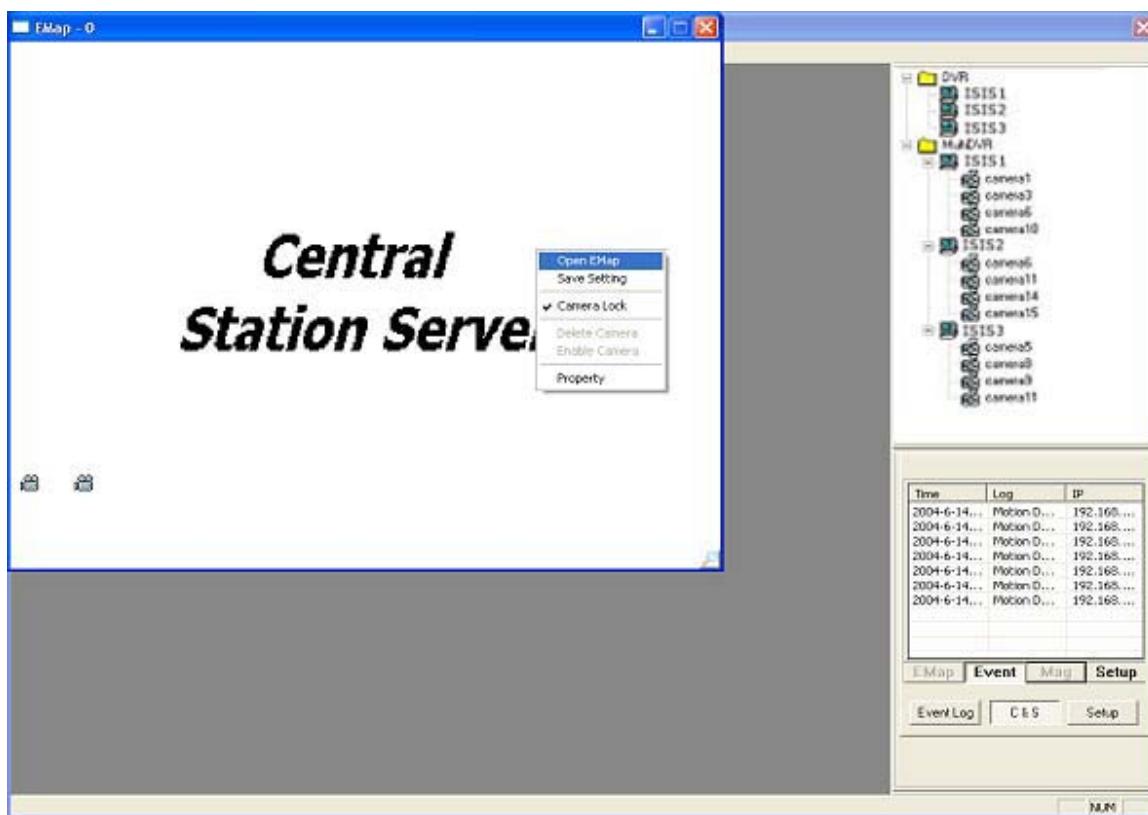

Click on “Mag” to configure E-Map. To create an E-Map image, click on the right mouse and select “Open E-Map”. Only BMP file can be in use.

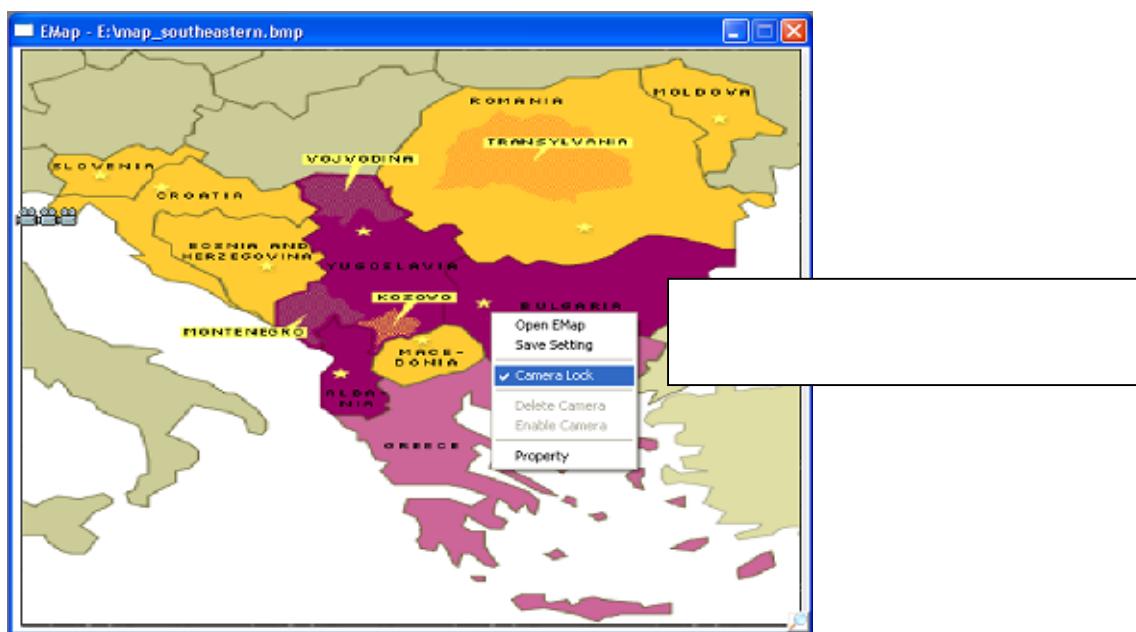

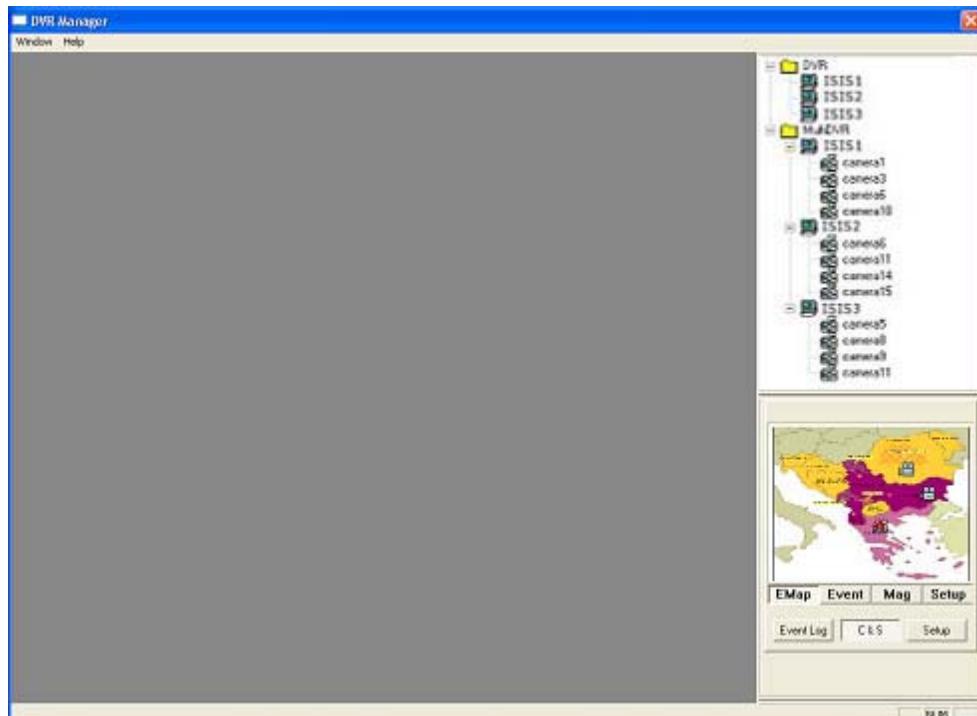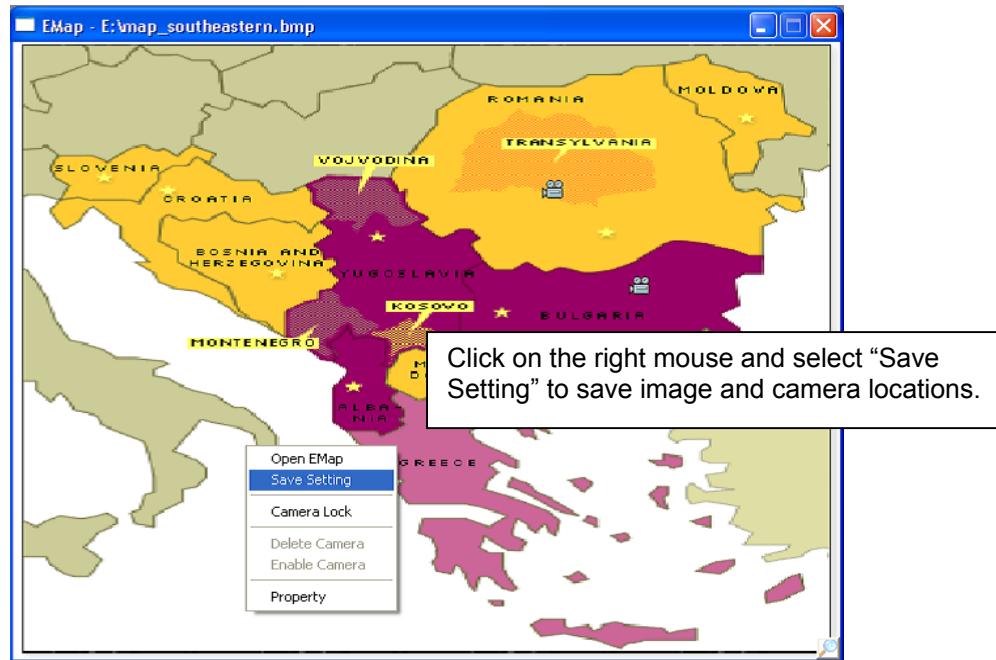

After configuration, selected E-Map image and all DVR sites at selected locations can be viewed. To visit a certain DVR site using E-Map, click on "Mag" and double-click on the site (camera-shaped symbol). Any DVRs (cameras) blinking in red and blue have events happening.

Restricting incoming events and receiving only desired events can be done regardless of DVR setup. On E-Map, click on the right mouse and select "Property". Only checked events will be reported to C&S. Click on "All Apply" to give the same conditions to all the rest of the DVR sites.

