



INSTRUCTION MANUAL
SY-TP6
FLAT TOASTER

Welcome

Thank you for purchasing the new Flat Toaster SY-TP6. In order to fully benefit from this product, please read these instructions carefully. Store the user manual in a safe place for future reference.

Location Description



Main Components

1. Control LED
2. On Button
3. Off Button
4. Time Knob
5. Crumb Tray

Safety Notes

Please note the following advice to Avoid Malfunctions, physical Damage and injuries:

- This appliance must not be used by persons (including children) with physical, sensory or mental impairments unless they have been instructed in its correct use by a responsible adult.
- Children should be supervised to ensure they do not play with the appliance.
- The appliance may be used only for its intended purpose.
- Before plugging in the appliance, check that the current and power match those given on the rating plates.
- Do not immerse the appliance in water or any other liquid.
- If the appliance or plug should accidentally become wet, disconnect the power immediately and contact Sytech Service Center before using it again. Never attempt to open the appliance yourself.
- Be careful, the top grill will become very hot during use.
- Do not use the appliance with wet hands, on a damp floor or when the appliance itself is wet.
- Do not touch the plug with wet or damp hands.
- If the power cord is damaged you must contact Sytech Service Center.
- Do not use the appliance if it has been dropped or otherwise damaged or if the cable or plug are damaged. In the case of damage, contact Sytech Service Centre immediately.
- Never attempt to repair the appliance yourself.
- Do not allow the cable to hang over sharp edges and keep it well away from hot objects

and naked flames (e.g. gas oven). Remove the plug from socket only by pulling on the plug, never on the cord.

- Set the appliance on a firm, level and heatproof surface away from naked flames.
- This appliance is not suitable for commercial use.
- Do not use the appliance outdoors.
- Never leave the appliance unattended while it is in use.
- Keep the appliance out of the reach of children.
- Always remove the plug from the socket when the appliance is not in use and each time before it is cleaned.
- Never use the cable to carry the appliance.
- Do not use bread slices which are wrapped in Aluminum or plastic foil.
- The unit should not be used with individual timer or remote control.

Operation

Caution: Bread can burn; never use the toaster near or underneath curtains or other flammable materials

Never touch the top grill during operation. It becomes very hot when the appliance is in use.

Before the first use

Before the first use operate the toaster once on maximum heat without using any bread to clean the heating elements. Thereafter your toaster is ready to be used

Toasting Bread

Connect the plug to the power mains; use the time knob (4) to set the desired degree of browning. Press the "ON" button (2). The control LED turns on and the toaster starts heating. Please note that frozen, dry and fresh bread require different toasting time. After the set time has finished, a signal sounds and the toaster turns off. You can also use the "OFF" button (3) to turn the toaster off manually.

Crumb Removal

Crumbs collect in the crumb tray (5). The crumbs should be removed regularly. The crumb tray can be pulled out from the side of the toaster for cleaning.

Cleaning and Maintenance

Clean the outside of the housing with a moist cloth. Do not use aggressive chemicals or abrasives. The unit does not contain parts serviceable by you, do not disassemble it and do not attempt to repair it yourself as this will invalidate the guarantee.

In the case of questions or problems, contact Sytech Service Center.

Technical Data

Type: SY-TP6

Description: Flat toaster

Rated Voltage: 230V~50Hz

Power: 600W



SYTECH