









# **ENERGYMIZER T32 THERMOSTAT**

## **USER SECTION – PROGRAMMING YOUR THERMOSTAT TIMES AND TEMPERATURES**

### **IMPORTANT -Set the correct thermostat model which is applicable to your system:**















1. To access these settings the display should show **OFF**
2. Push the  button once and hold for 5 seconds until small **Menu 01** is displayed in top left hand side of thermostat.
3. Push  to set your thermostat in the correct mode for your requirements
4. Setting **A** = **Air only** – measures and regulates air temperature in its location (for Thermostat only)
5. Setting **AF** = **Air and Floor** – measures and regulates air temperature and floor temperature (for Thermostat and Floor sensor)
6. Setting **F** = **Floor Only** – measures and regulates floor temperature only (for Floor Sensor only)
7. Setting **AR** = **Air only with Remote Air Sensor** – measures and regulates the air temperature where the remote air sensor unit is located (for Thermostat with Remote Air Sensor Unit)

### **IMPORTANT -Set the current day and time on thermostat:**







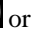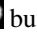





1. To access these settings the display should show **ON**
2. Push the  button once and the time will flash. Press the  or  to change to current time.
3. Push the  button again and the day will flash. Press the  or  to change to current day.

*With thermostat display ON:*















### **Program 1 Comfort on Wake Up in the Morning**

1. Press and hold button  for 5 seconds until “PROG” is shown; to find the correct day keep pressing the  or  button until correct day is flashing and appears on the display. If all days are to be set the same press and hold the  or  button for 5 seconds, this will set all days at the same time each day for Program 1 Comfort on Wake Up in the Morning.
2. Next press button  to display  press  or  button to set the start time for Program 1, factory default is 07:00. Press  or  button to change the time to your chosen requirement.
3. Press button  again and use  or  button to set required temperature for Program 1. Factory default is set at 22°C. Choose and set your desired heating temperature, then to set the next settings, Program 2 (Economy when property vacated in daytime), press M while temperature is still flashing or wait for flashing to stop and follow instructions below:













### **Program 2 Economy when Property Vacated in the Day Time**

1. Press and hold button  for 5 seconds until “PROG” is shown; to find the correct day keep pressing the  or  button until correct day is flashing and appears on the display. If all days are to be set the same press and hold the  or  button for 5 seconds, this will set all days at the same time each day for Program 2 Economy when Property Vacated in the Day Time.
2. Next press  button 3 times until  is displayed to set the start time for the Program 2. Factory default is 09:30. Press  or  button to change the time to meet your requirement.
3. Press button  again and use  or  button to set required temperature for Program 2. Factory default is set at 16°C. Choose and set your desired heating temperature, then to set the next settings, Program 3 (Comfort when you return to the property in the evening), press M while temperature is still flashing or wait for flashing to stop and follow instructions below:
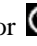
### **Program 3 Comfort when you Return to the Property in the Evening**






1. Press and hold button  for 5 seconds until “PROG” is shown; to find the correct day keep pressing the  or  button until correct day is flashing and appears on the display. If all days are to be set the same press and hold the  or  button for 5 seconds, this will set all days at the same time each day for Program 3 Comfort when you Return to the Property in the Evening .
2. Next press  5 times until  is displayed; press  or  button to set the start time for Program 3, factory default time is 16:30. Press  or  button to change the time to your requirement.
3. Press button  again and use  or  button to set the required temperature for Program 3. Factory default is set at 22°C. Choose and set your desired heating temperature, then to set the next settings, Program 4 (Economy when sleeping at Night time), press M while temperature is still flashing or wait for flashing to stop and follow instructions below:


### Program 4 Economy when Sleeping at Night Time

1. Press and hold button  for 5 seconds until “PROG” is shown; to find the correct day keep pressing the  or  button until correct day is flashing and appears on the display. If all days are to be set the same press and hold the  or  button for 5 seconds, this will set all days at the same time each day for Program 4 Economy when Sleeping at Night Time.
2. Next press  button 7 times until  is displayed to set the start time for Program 4. Factory default is 22:30. Press  or  button to change the time to meet your requirement.
3. Press button  again and use  or  button to set required temperature for Program 4. Factory default is set at 16°C. Choose and set your desired heating temperature then wait for the flashing to stop for the settings to save.

### Temporarily Override Temperature



If temperature needs to be increased or decreased:

1. Press  or  button once, the set temperature will flash on the display
2. Press  or  button again until temperature you want is displayed
3. Press  button to confirm the setting and override will be shown on LCD





The thermostat will override the current programme and maintain the new set temperature until the next programme scheduled start time. To cancel override setting press and hold  button for 5 seconds until override disappears.

### Auto and Manual Setting





In Auto mode the thermostat follows the pre-programmed times and temperatures set.

All temperatures can be over ridden in Manual Mode should you wish to increase the temperature at any time on any day. Simply Press and hold  button when thermostat displays off or press and hold  button when thermostat displays the on screen, this accesses the auto and manual settings.



### Holiday Mode
















To set holiday mode press and hold  button for 5 seconds until Suitcase symbol appears. To exit press and hold  button for 5 seconds. When thermostat is set in holiday mode it will default to 10°C as factory settings. Press  or  button to change the set point and wait for 5 seconds to save and exit.

### Button Lock

Press and hold  and  buttons together for 5 seconds until lock is displayed the thermostat is now locked and cannot be adjusted. To unlock press and hold  and  buttons together for 5 seconds lock symbol will disappear from the screen.

### Resetting Thermostat to Factory Defaults

To re-set all settings to factory defaults, whilst in standby mode and thermostat displays off press and hold button  and  button together for 5 seconds until “RESET” is shown for 5 seconds on LCD

<u>Buttons</u>	
 On/Off Button	 Multifunction Button
 Manual Mode	  Up and Down
<u>LCD Display</u>	
<b>AUTO</b> Automatic function	<b>RT</b> Room Temperature (dependant on thermostat configuration)
 Program 1 Comfort Setting Morning/Wake up	<b>FT</b> Floor Temperature (dependant on thermostat configuration)
 Program 2 Economy Setting Daytime Vacated	 Thermostat is calling for heat
 Program 3 Comfort Setting Evening Return	 Difference of Required & Actual Room Temp.
 Program 4 Economy Setting Nighttime/Sleep	 Frost Protection on
 Hand ---Manual Override	 Locked
 Holiday mode	<b>SET</b> Temperature Setting
	<b>OVERRIDE</b> Temporary Temperature Override