



# QuadroM

## The IP PBXs



# Manual I: Installation Guide

for QuadroM32x;  
SW Version 5.2.x

## Copyright and Trademarks

Copyright © 2003-2010 Epygi Technologies, Ltd. All Rights Reserved. Quadro is a registered trademark of Epygi Technologies, Ltd. Microsoft, Windows, and the Windows logo are registered trademarks of Microsoft Corporation. All other trademarks and brand names are the property of their respective proprietors.

## Limited Warranty

Epygi Technologies, Ltd. ("Epygi") warrants to the original end-user purchaser every Quadro to be free from physical defects in material and workmanship under normal use for a period of one (1) year from the date of purchase (proof of purchase required) or two (2) years from the date of purchase (proof of purchase required) for products purchased in the European Union (EU). If Epygi receives notice of such defects, Epygi will, at its discretion, either repair or replace products that prove to be defective.

This warranty shall not apply to defects caused by (i) failure to follow Epygi's installation, operation or maintenance instructions; (ii) external power sources such as a power line, telephone line, or connected equipment; (iii) products that have been serviced or modified by a party other than Epygi or an authorized Epygi service center; (iv) products that have had their original manufacturer's serial numbers altered, defaced, or deleted; (v) damage due to lightning, fire, flood, or other acts of God.

In no event shall Epygi's liability exceed the price paid for the product from direct, indirect, special, incidental, or consequential damages resulting from the use of the product, its accompanying software, or its documentation. Epygi offers no refunds for its products. Epygi makes no warranty or representation, expressed, implied, or statutory, with respect to its products or the contents or use of this documentation and all accompanying software, and specifically disclaims its quality, performance, merchantability, or fitness for any particular purpose.

## Return Policy

If the product proves to be defective during this warranty period, call Epygi Customer Support at (972) 692-1166 to obtain a Return Material Authorization (RMA) Number. Registered users also may access Epygi's Technical Support ([www.epygi.com](http://www.epygi.com); 'Support') to send their RMA request. For Brazil representatives, call (21) 2518-3161 or contact via Web ([www.saga.com.br](http://www.saga.com.br)). Please have your proof of purchase on hand when contacting us. When returning a product, mark the Return Authorization Number clearly on the outside of the package and include your original proof of purchase. Return requests cannot be processed without proof of purchase. Customers are responsible for shipping and handling charges when shipping to Epygi.

Epygi or its service center will use commercially reasonable efforts to ship a replacement product within ten (10) working days after receipt of the returned product. Actual delivery times may vary depending on customer location.

Epygi reserves the right to revise or update its products, pricing, software, or documentation without obligation to notify any individual or entity. Please direct all inquiries to:

Epygi Technologies, Ltd., Two Legacy Town Center, 6900 North Dallas Parkway, Suite 850, Plano, Texas 75024

Representative in Brazil - Saga Sistemas e Computadores SA, Av. Rio Branco, 18 - 8 andar, Rio de Janeiro 20090-001

## Notice to Users

This Installation Guide, in whole or in part, may not be reproduced, translated, or reduced to any machine-readable form without prior written approval.

Epygi provides no warranty with regard to this Installation Guide or other information contained herein and hereby expressly disclaims any implied warranties of merchantability or fitness for any particular purpose in regard to this manual or other such information. In no event shall Epygi be liable for any incidental, consequential, or special damages, whether based on tort, contract, or otherwise, arising out of or in connection with this manual or other information contained herein or the use thereof.

## Administrative Council for Terminal Attachments (ACTA) Customer Information

This equipment complies with Part 68 of the FCC rules and the requirements adopted by the ACTA. On the back of this equipment is a label that contains, among other information, a product identifier in the format US:AAAEQ###TXXXX, made out to HX7OT00BHX70100. If requested, this number must be provided to the telephone company.

Any plug or jack that is used to connect this equipment to the premises wiring and telephone network must comply with the applicable FCC Part 68 rules and requirements adopted by the ATCA.

The Ringer Equivalence Number is an indicator of the maximum number of devices allowed for connection to a telephone interface. The termination on an interface may consist of any combination of devices subject only to the requirements that the sum of the RENs of all the devices does not exceed five. Excessive RENs on a telephone line may result in the devices not ringing in response to an incoming line. The REN for this product is part of the product identifier that has the format US:AAAEQ###TXXXX, made out to HX7OT00BHX70100. The digits represented by ### are the REN without a decimal point (in this case 00B is a REN of 0.0B.)

If the Quadro causes harm to the telephone network, the telephone company will notify you in advance that a temporary discontinuance of service may be required. But if advance notice isn't practical, the telephone company will notify the customer as soon as possible. Also, you will be advised of your right to file a complaint with the FCC if you believe it is necessary.

The telephone company may make changes in its facilities, equipment, operations or procedures that could affect the operation of the equipment. If this happens, the telephone company will provide advance notice for you to make the necessary modifications to maintain uninterrupted service.

Connection to a party line service is subject to state tariffs. Contact the state public utility commission, public service commission or the corporation commission for information.

If your home has specially wired alarm equipment connected to the telephone line, ensure the installation of the Quadro does not disable your alarm equipment. If you have any questions about what will disable alarm equipment, consult your telephone company or a qualified installer.

### **Electrical Safety Advisory**

To reduce the risk of damaging power surges, we recommend you install an AC surge arrester in the AC outlet from which the Quadro is powered.

### **Industry Canada Statement**

This product meets the applicable Industry Canada technical specifications.

### **Safety Information**

Before using the Quadro, please review and ensure the following safety instructions are adhered to:

- To prevent fire or shock hazard, do not expose your Quadro to rain or moisture.
- To avoid electrical shock, do not open the Quadro. Refer servicing to qualified personnel only.
- Never install wiring during a lightning storm.
- Never install telephone jacks in wet locations unless the jack is specified for wet locations.
- Never touch uninsulated telephone wire or terminals unless the telephone line has been disconnected at the network interface.
- Use caution when installing or modifying cable or telephone lines.
- Avoid using your Quadro during an electrical storm.
- Do not use your Quadro or telephone to report a gas leak in the vicinity of the leak.
- An electrical outlet should be as close as possible to the unit and easily accessible.

### **Emergency Services**

The Quadro SIP Service is intended to function as a secondary telephone service. This service is made available through the Internet and therefore is dependent upon a constant source of electricity and network availability. If a power outage occurs, the Quadro SIP Service automatically will be disabled. User understands in the event of a power or network outage, the Quadro SIP Service will not support 911 emergency services, and further, such services only will be available via the user's regular telephone line that is not connected to the Quadro. User further acknowledges that any interruption in the supply or delivery of electricity or network availability is beyond Epygi's control and Epygi shall have no responsibility for losses arising from such interruption.

# Table of Contents

## Manual I: Installation Guide

About This Installation Guide .....	6
Requirements.....	7
Hardware Overview.....	8
The Connectors Panel of QuadroM32x .....	8
QuadroM32x's Front Panel LEDs .....	9
Step 1: Installing the Quadro .....	10
Networking Overview.....	10
LAN/WAN Connection Options .....	11
Connecting the Hardware .....	13
Step 2: Configuring the Quadro .....	15
Step 2.1: Logging in to Quadro .....	16
Step 2.2: System Configuration Wizard .....	17
System Configuration .....	17
DHCP Settings for the LAN Interface .....	18
Regional Settings.....	18
Emergency and PSTN Access Code Settings .....	19
Finishing the System Configuration Wizard .....	20
Step 2.3: Internet Configuration Wizard .....	21
Uplink Configuration.....	22
WAN IP Configuration.....	23
PPP/PPTP Configuration.....	24
WAN Interface Configuration .....	25
DNS Settings .....	25
Finishing the Internet Configuration Wizard.....	26
Step 2-A: Using IP Lines .....	27
Supported SIP Phones.....	29
Step 2-B: Using Receptionist .....	30
Step 2-C: Configuring the E1/T1 Settings.....	30
Editing the E1/T1 Trunk .....	31
Signaling Type CCS .....	32
Signaling Type CAS .....	36
Step 3: Registering on Epygi's Technical Support.....	43
Appendix: Changing the Admin Password .....	44
Appendix: Configuring NAT Traversal.....	45
Appendix: Registering on Epygi's SIP Server.....	47
Appendix: Checking the Connections .....	51
Appendix: Pin Assignment of E1/T1 .....	54

## Manual II: see Administrator's Guide

This guide describes in detail the menus available for administrators only. Furthermore, it includes all the system's default values at a glance.

## Manual III: see Extension User's Guide

This guide describes in detail the menus available for extension users. Furthermore, it includes all the call codes at a glance.

## About This Installation Guide

This Installation Guide explains the installation of the QuadroM32x IP PBX. It gives step-by-step instructions to provision the QuadroM32x and configure the phone extensions. After successfully configuring the Quadro, a user will be able to make SIP and local PBX calls, as well as calls to the PSTN and access the Internet from devices connected to the LAN.

This Installation Guide does not provide advanced configuration information. For these features, refer to the Administrator's and Extension User's Guides.

[Step 1: Installing the Quadro](#) explains the connection of cables and devices to the Quadro.

[Step 2: Configuring the Quadro](#) describes the configuration steps necessary to integrate the Quadro into your network environment.

[Step 2-A: Using IP Lines](#) explains how to configure IP lines on the Quadro IP PBX and to connect IP phones.

[Step 2-B: Using Receptionist](#) refers to the document describing Receptionist's configuration on the Quadro.

[Step 2-C: Configuring the E1/T1 Settings](#) describes the basic E1/T1 settings.

[Step 3: Registering on Epygi's Technical Support](#) shows you how to access the Epygi Technical Support Center and the Epygi SIP Server.

[Appendix: Changing the Admin Password](#) explains how to change the default administrator password.

[Appendix: Configuring NAT Traversal](#) explains configuration of the Quadro if it is placed behind a NAT enabled router.

[Appendix: Registering on Epygi's SIP Server](#) explains how to register on Epygi's powerful SIP server.

[Appendix: Checking the Connections](#) gives hints on solving common problems.

## Requirements

- One 120/240 VAC power outlet in close proximity to the Quadro.
- One RJ45 Ethernet 10/100 broadband Internet connection.
- One E1/T1 cable to connect the Quadro with the CO or PBX.
- At least one off-the-shelf analog phone with an RJ11 telephone cable.
- At least one IP phone with CAT5 cable with RJ45 connector.
- Two CAT 5 Ethernet cables with RJ45 connectors to connect to the Quadro's ETH and LAN ports.
- One PC with a 10/100 Mbps Ethernet card or adapter installed.
- TCP/IP network protocol installed on each PC.
- Internet Explorer, Netscape Navigator, Mozilla Firefox or Opera browser is recommended.

**Please Note:** The QuadroM32x IP PBX is shipped with one RJ11 cable and one straight RJ45 CAT 5 cable.

# Hardware Overview

## The Connectors Panel of QuadroM32x

The illustration below includes the connectors panel of QuadroM32x.

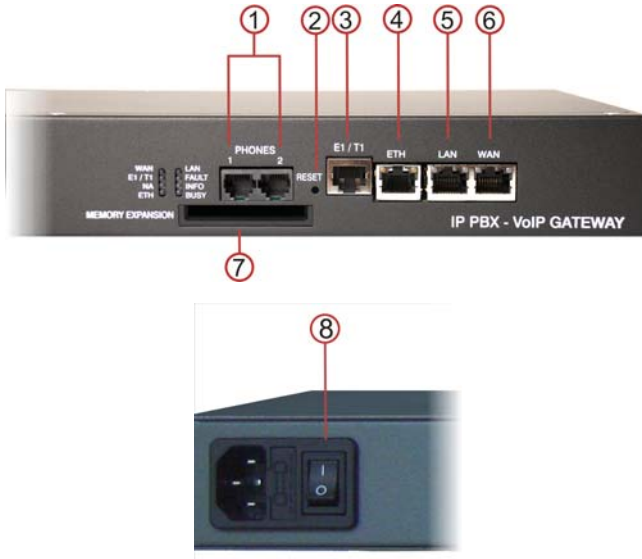


Fig. I-1: QuadroM32x's Connectors Panels

- 1 PHONE sockets with RJ11 connectors enable connectivity of regular analog telephones. These are FXS (Foreign Exchange Station) analog ports.
- 2 The Reset button may be used in two ways: (1) to initiate a normal reset or (2) to carry out a factory reset. A normal reset is executed by pressing the Reset button with a paper clip for an instant.

Pressing the reset button and holding it down for seven seconds or more will execute a factory reset. This will restore the factory defaults and clear all settings including the IP address and the administration password you entered.

**Please Note:** A Factory Reset forces the default LAN IP address of 172.30.0.1 and default admin password of 19.

- 3 RJ-45 socket to attach the E1/T1 trunk. See [Appendix: Pin Assignment of E1/T1](#).
- 4 ETH RJ45 socket to attach the PC in the Quadro's Local Area Network (LAN). If a PC is connected directly to this socket, a straight Ethernet CAT 5 cable is used.
- 5 LAN RJ45 socket to attach to the IP phones in the Quadro's Local Area Network (LAN) via an Ethernet CAT 5 cable. For connecting multiple IP phones, a switch is used.
- 6 WAN RJ45 socket to attach the Internet Uplink (WAN) via an Ethernet CAT 5 cable.
- 7 The CF socket enables connectivity of Compact Flash memory providing expansion for additional voice mails and record data.

**Attention:** Power down the Quadro before inserting/removing the Compact Flash memory card.

- 8 Power supply socket. **Use only the power adapter delivered with the Quadro.**



## QuadroM32x's Front Panel LEDs



Fig. I-2: QuadroM32x's Front Panel LEDs

<b>WAN</b> green Status of the WAN interface	<b>on:</b> link ok <b>off:</b> no link <b>flickering:</b> traffic on the link
<b>LAN</b> green Status of the LAN interface	<b>on:</b> link ok <b>off:</b> no link <b>flickering:</b> traffic on the link
<b>E1/T1</b> green Status of the E1/T1 trunk	<b>on:</b> frame synchronization is ok <b>off:</b> frame synchronization is not ok or link is down
<b>Fault</b> red System status	<b>on:</b> either an error or the device is booting <b>off:</b> no error <b>blinking:</b> system unusable
<b>NA</b>	This LED is not available.
<b>Info</b> yellow System information	<b>on:</b> device is booting <b>off:</b> no information <b>blinking:</b> an event occurred; details specified in the System Event section of the Management interface
<b>ETH</b> green Status of the ETH interface	<b>on:</b> link ok <b>off:</b> no link <b>flickering:</b> traffic on the link
<b>Busy</b> green Status of CPU	<b>off:</b> no power <b>on or blinking:</b> normal activity

### LED indication during a firmware update

A firmware update is indicated by the red (**Fault**) and yellow (**Info**) LEDs. Both will blink simultaneously for about two minutes while the firmware is being updated. The Quadro will then reboot automatically showing the boot LED sequence.

### LED indication during a boot sequence

A boot sequence is indicated as follows: The red **Fault** LED will glow for a few seconds, then the yellow **Info** LED will glow for another four or five minutes while the green **Busy** LED is blinking. Once the **Info** LED is off, the boot sequence has been completed successfully.

### LED indication during emergency firmware upload

The red **Fault** LED and the yellow **Busy** LEDs will stop blinking alternately and start blinking in parallel. This shows that Quadro has accepted the emergency firmware and is loading it. After a few seconds, Quadro will boot, indicated as follows: The red **Fault** LED will glow for a few seconds, then the yellow **Info** LED will glow for another few seconds while the green **Busy** LED is jittering. When the yellow **Info** LED extinguishes, the boot sequence has been completed successfully.

# Step 1: Installing the Quadro

## Networking Overview

To establish a connection between the Internet and your local area network (LAN), an access router is needed. The Quadro IP PBX can serve, among other functions, as an access router and will perform the task of connecting your LAN, or a group of one or more PCs, to the wide area network (WAN) or the Internet. The Quadro will process and regulate the data traffic between these two networks.

The Quadro is a device with two sides: one side connects to your LAN, and the other side connects to the Internet, or to the WAN. Quadro's firewall and Network Address Translation (NAT) functionality protects your LAN from being seen from the Internet side making the LAN private and secure.

The both Ethernet WAN and LAN ports transmit up to 100 Mbps traffic.

Every device within an IP network requires a unique IP address to identify itself. Since the Quadro connects to both the LAN and the WAN, it has to be part of both networks, and must have two IP addresses: one for the WAN side and one for the LAN side. The Quadro's integrated firewall/NAT functionality will hide the LAN IP address from the WAN (Internet) side.

There are two ways of assigning an IP address: statically or dynamically.

A Static IP address is a fixed, manually assigned IP address that remains valid until changed. If you plan to use the Quadro as your Internet access router, contact your Internet Service Provider (ISP) to find out if a static IP address is assigned to your account. If so, you will need this static IP address when configuring the Quadro device.

A dynamic IP address is a temporary address that is automatically assigned by your ISP and will change periodically. If your ISP offers a dynamic IP address, the Quadro will act as a DHCP client and will receive a new IP address from the ISP's DHCP server or PPPoE feature.

**Please Note:** A DHCP client is a piece of software that requests an IP address from a DHCP server. A DHCP server assigns on request a unique IP address to a device. The Quadro, like many routers, acts as a DHCP client on its WAN interface and as a DHCP server on its LAN interface.

The Quadro must be visible to the Internet to be able to receive and send VoIP calls. When the Quadro is placed in a private network, typically behind existing routers, it will by default attempt to pass through the NAT of this router with its STUN (Simple Traversal of UDP over NAT) feature. STUN will work without user configuration with the majority of basic routers. In some scenarios, port forwarding on the router is required to make the Quadro accessible to other Quadro devices and the Epygi SIP Server on the Internet. Another configuration option is to use the Quadro as the Internet access router, connected directly to the WAN, eliminating the traverse to the local NAT firewall.

## LAN/WAN Connection Options

- A QuadroM32x IP PBX with an Ethernet WAN port behind a router, which is connected to a cable or xDSL modem. IP phones are placed on the WAN side of the QuadroM32x.

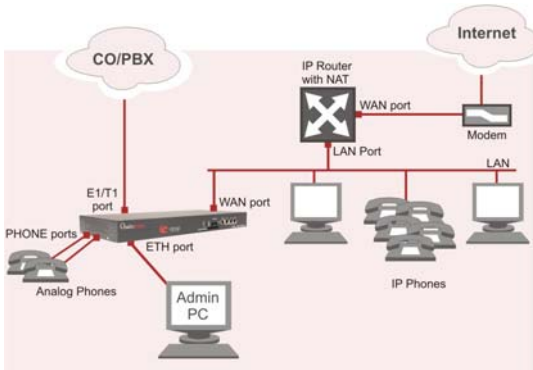


Fig. I-3: Configuration: QuadroM32x behind a router with IP phones on WAN

In this and the following configuration (Fig. I-3 and Fig. I-4), the IP router typically acts as a DHCP server for the LAN and assigns the IP addresses to the PCs and other devices. The Quadro can be connected through its WAN port directly to one of the router's LAN ports and will get an IP address from the router. By default, the Quadro acts as a DHCP client on the WAN port. The IP phones are placed on the WAN side of the QuadroM32x, connected to the company LAN.

The Admin PC can be connected to the Quadro ETH or WAN port to access the Web Management of the Quadro.

**Please note:** Since Quadro uses STUN by default, it will work with most basic routers without any further configuration.

- A QuadroM32x IP PBX with an Ethernet WAN port behind a router, which is connected to a cable or xDSL modem. IP phones are placed on the LAN side of the QuadroM32x.

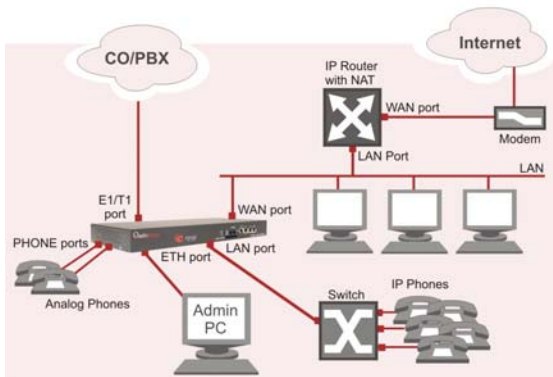


Fig. I-4: Configuration: QuadroM32x behind a router with IP phones on LAN

This configuration (Fig. I-4) is identical to the previous configuration, with the difference that IP phones are connected to the LAN port of the QuadroM32x. The QuadroM32x can be configured as a DHCP server to provide the network parameters to the devices on its LAN.

- **A QuadroM32x IP PBX used as an Internet Access Router, connected directly to the Internet.**

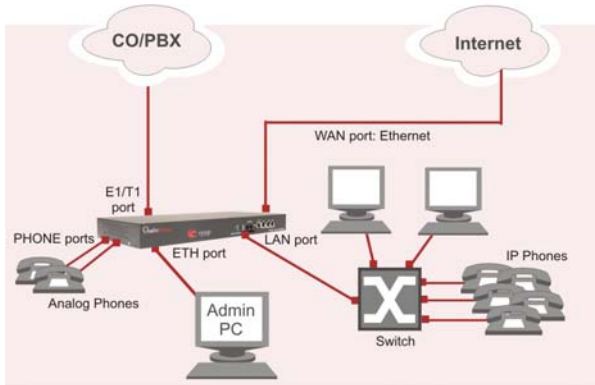


Fig. I-5: Configuration: QuadroM32x used as Internet Access Router

The Admin PC is connected to the Quadro ETH port or WAN port to access the Web Management of the Quadro.

## Connecting the Hardware

- **QuadroM32x behind a router with IP phones connected to WAN**

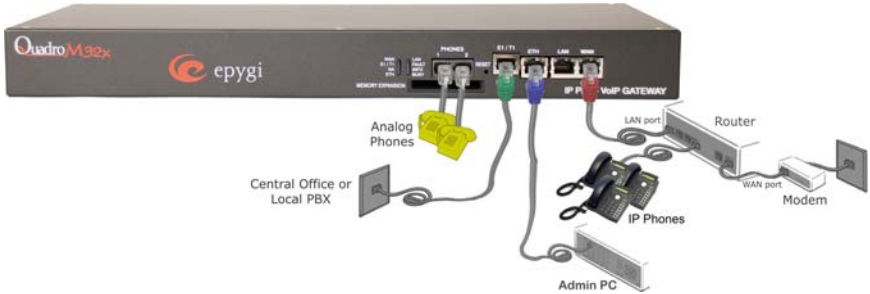


Fig. I-6: Installation: QuadroM32x behind a router with IP phones on WAN

- **QuadroM32x behind a router with IP phones connected to LAN**

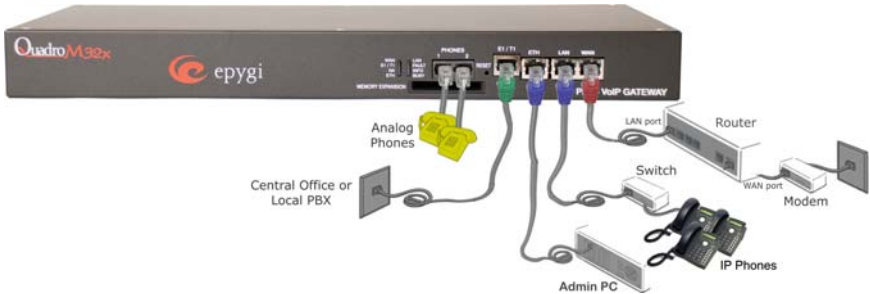


Fig. I-7: Installation: QuadroM32x behind a router with IP phones on LAN

- **QuadroM32x used as Internet access router**

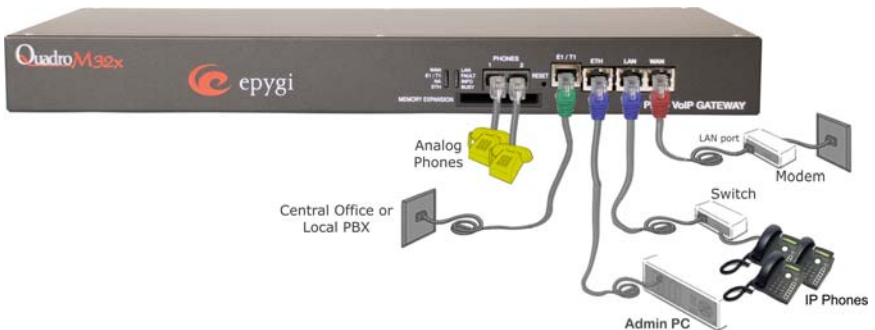


Fig. I-8: Installation: QuadroM32x used as an Internet Access Router

- Verify the product package contents are complete. Refer to the contents sheet included in the packaging to determine if all the items were shipped in the box.
- Before you connect the hardware, make sure that all devices are powered off.
- Connect analog phones to the PHONE ports on the Quadro's rear panel. You may connect up to two analog phones.
- Connect the E1/T1 port to your PBX or the trunk from the PSTN Central Office ONLY after configuring the E1/T1 settings according to the specifications of your PSTN provider (see [Appendix: Pin Assignment of E1/T1](#)).
- Connect the Ethernet port on your PC via a straight CAT 5 cable with an RJ45 connector to the ETH socket of the Quadro.
- Connect the IP phones to the switch and attach it to the LAN socket of the Quadro via a straight CAT 5 cable with an RJ45 connector.
- Connect the WAN port of the Quadro to the Internet service via a cable or DSL modem.
- Power up the DSL or Cable modem first.
- Connect the power cable to the POWER port on the back side of your QuadroM32x and plug the power plug into the power outlet.  
The red LED (Fault) will glow for several seconds followed by the yellow LED (Info), which will glow for several minutes. When Info LED is off, the Quadro is operational.
- Power up any hub or switch followed by any PC and other devices on the LAN side.
- Check the LEDs: The green Busy LED must glow continuously. The green ETH, LAN and WAN LEDs will blink when cables are connected to these ports and all devices are powered up. If the green LAN and WAN LEDs do not blink, verify cabling and ensure that all devices are powered up.  
**Please Note:** CAT 5 cables can be faulty without any visual indication. The ETH, LAN and WAN LEDs verify that the Ethernet connection is established between the end points. If these LEDs are not illuminated, there is a connection problem between the Quadro and the other device.

## Step 2: Configuring the Quadro

Verify functionality of both IP and PSTN calls:

- **PSTN telephony:** If the Quadro is connected to the PSTN network via the E1/T1 interface, verify the functionality of PSTN calls:
  - Make an outbound PSTN call by dialing **9 + PSTN number**.
  - Arrange to receive an incoming call. The incoming PSTN calls will be routed to the Auto Attendant by default, and the caller has to enter a valid extension number, e.g., 101, followed by the # sign to reach a phone connected to the first PHONE port of the Quadro.
- **IP telephony:** Dial **899#** and you will hear a voice message that confirms you have successfully established an IP call. If this call is not successful, go to [Appendix: Checking the Connections](#) for troubleshooting.

You may customize the following settings by logging in to the Quadro's Web Management (see Step 2.1):

- **Bandwidth** - to regulate the number of calls allowed by the Quadro to avoid degradation in low bandwidth conditions.
- **Time/Date** - to ensure the correct time and time zone are used for call records.
- **Regional Settings** - if your Quadro is located outside the United States, it is important to properly configure your line connections to the PSTN in your location.
- **Firewall** - if your Quadro is connected behind a router with its own firewall service running, disable the firewall to make Quadro accessible for management purposes.

## Step 2.1: Logging in to Quadro

- Start a browser (MS Internet Explorer, Netscape, Opera, Mozilla Firefox, etc.) on a PC connected to the QuadroM32x via the LAN or WAN interface.
- Since Firewall is disabled on the Quadro32x by default, you may connect the Web GUI either from WAN or LAN side of the Quadro. To connect the Quadro's Web GUI from the WAN side, enter **http://Quadro\_WAN\_IP** (IP address assigned by the company's DHCP server) in the address field of your browser. If the PC is connected to the Quadro's LAN side, enter **http://172.30.0.1** (Quadro's default LAN IP address) in the address field of your browser.
- The **Login** page of the Quadro will be displayed (see Fig. I-9).



Fig. I-9: Login page

Enter **admin** as the Username and **19** as the password to log in as the administrator. Once you log in, you will enter into the Quadro Management Menu.

**Please Note:** If you consecutively enter a wrong password and/or username for five times the device will be unavailable for login for five minutes.

After log in, the **Quadro Management** page will be displayed.

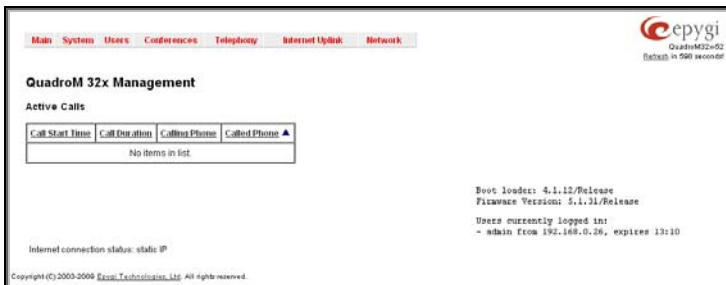


Fig. I-10: QuadroM32x Management page



## Step 2.2: System Configuration Wizard

Select the **System Configuration Wizard** from the **System** menu. The **System Configuration Wizard** is a tool for the administrator to define the Quadro's Local Area Network settings and to specify regional configuration settings to make Quadro operational in its LAN. **The System Configuration Wizard must be run upon Quadro first startup.**

For the basic configuration, some pages in this wizard may be skipped and left default for the basic configuration.

**Please Note:** It is strongly recommended that factory default settings are left unchanged if their meanings are not completely understandable to the party administering the Quadro.

### System Configuration

The first page of System Configuration Wizard shows all items to be configured. Click the **Next** button to start. Enter into the **Host Name** field the unique name (top right corner, under Epygi logo) for the Quadro device. The **Domain Name** text field requires the LAN side domain name which the Quadro belongs to.

For a basic configuration, the **LAN IP address** does not need to be changed, but if you must change it (for example, to integrate the device into an existing LAN), record the new LAN IP address and have it handy. You'll need it for subsequent access to Quadro's management.

Fig. I-11: System Configuration page

Clicking **Next** shows the page **DHCP Settings for the LAN Interface**.

## DHCP Settings for the LAN Interface

If the DHCP server is enabled, the Quadro will automatically assign dynamic IP addresses to the stations connected to its LAN port.

If you didn't change the default LAN IP address of the Quadro, you also may leave the default values for the **IP Address Range**. Make sure your connected LAN devices belong to the same network as the LAN port of your Quadro.

**Please Note:** Make sure there is only one DHCP server on the LAN, otherwise, unpredictable network behavior can occur.

The screenshot shows the 'System Configuration Wizard' window with the 'Network' tab selected. The 'DHCP Settings for the LAN Interface' section is active. It includes a checkbox for 'Enable DHCP Server', which is currently unchecked. Below this are two IP address range input fields: 'Dynamic IP Address Range from' (172.16.0.100) and 'to' (172.16.0.254). There is also a 'WINS Server' field with the value 0.0.0.0. A 'Static mappings: None' section is present below. At the bottom, there are 'Previous', 'Next', 'Cancel', and 'Help' buttons.

Fig. I-12: DHCP Settings for the LAN Interface page

Click on **Next** to display the **Regional Settings** page.

## Regional Settings

If your Quadro is located outside of the United States, it is important to properly configure your line connections to the PSTN in your location.

The screenshot shows the 'System Configuration Wizard' window with the 'Regional Settings and Preferences' section active. It includes a 'Your locale (location):' dropdown menu set to 'US'. Below it is a 'Timezone:' dropdown menu set to '(GMT-05:00) Central Time (US & Canada)'. There is a 'Choose Default OS Theme' section with two radio buttons: 'Plan' and 'Dynamo', where 'Dynamo' is selected. There is also an unchecked checkbox for 'Choose Theme on Login'. At the bottom, there are 'Previous', 'Next', 'Cancel', and 'Help' buttons.

Fig. I-13: Regional Settings page

Proper configuration of **Regional Settings** is important for the functionality of the voice subsystem. The **Regional Settings** determine the proper telephony parameters on the E1/T1 and PHONE ports of the Quadro for the specified country. Select the country where the Quadro is located. If you do not find your country in the list, pick the closest in your timezone.

The Quadro obtains the correct time automatically over the Internet from a time server. If you are not located in the US/Central standard time zone, you will need to change the **Timezone** to your region.

Click on **Next** to display the **Emergency and PSTN Access Code Settings** page.

## Emergency and PSTN Access Code Settings

The screenshot shows a web-based configuration wizard titled "System Configuration Wizard" with the "e pygi" logo in the top right. The current step is "Emergency Codes and PSTN Access Code Settings". Below the title, there is a text prompt: "Please enter all your Emergency Codes (separated by commas) and PSTN Access Code into following fields:". There are two input fields: "Emergency Codes" containing "911" and "PSTN Access Code" containing "9". At the bottom of the form, there are four buttons: "Previous", "Next", "Cancel", and "Help". A small copyright notice is visible at the bottom left of the form area.

Fig. I-14: Emergency and PSTN Access Code Settings page

You may enter your local specific emergency codes into the appropriate field. For example, in the United States the emergency number is 911, whereas in Germany it is 112, 110. In case of an emergency you can then pick up any FXS phone and dial your configured emergency code without any prefixes for PSTN calls.

The PSTN Access Code is the prefix number you choose to dial to tell the Quadro to “make this call over PSTN”. Users in the United States will usually choose 9 here. European users usually would want to enter zero (0). If you do not enter anything into this field, the PSTN Access Code configuration should be done manually from the Call Routing table.

Click on **Next** to display the **Summary Page**.

## Finishing the System Configuration Wizard



Fig. I-15: System Configuration Wizard finishing page

Click on **Finish** to complete the System Configuration Wizard. The Quadro will then stop internal functions and apply the changes made in the Wizard.



Fig. I-16: Wizard Execution Progress page

After this is complete, the Quadro will reply with the **Confirm Settings** page requesting confirmation of the changes. Press on **OK** to confirm the settings.

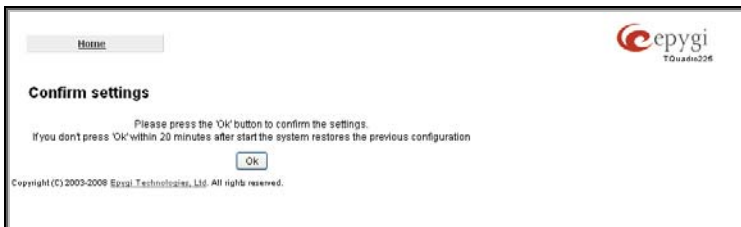


Fig. I-17: Confirm Settings page

**Please Note:** You must confirm the settings within 20 minutes. Otherwise the device will **revert back to the previous configuration and reboot.**

**Please Note:** If you do not use DHCP for your LAN and you have changed your LAN settings, make sure that the IP address of the PC connected to Quadro is still within the specified IP address range, otherwise your PC may not establish a connection to Quadro.

If you changed the network configuration of the LAN, restart your LAN connection to receive a new IP address from the new network. Then you can access the Web Management of the Quadro on the new IP address you've assigned to the Quadro.

## Step 2.3: Internet Configuration Wizard

Open the **Internet Configuration Wizard** by selecting the corresponding menu item on the **System** menu. The **Internet Configuration Wizard** is a tool for the administrator to configure the WAN settings and to adjust Quadro's connectivity in the global network. It must be run if Quadro is desired to be connected to the Internet.

The page **Getting Started** will be displayed:

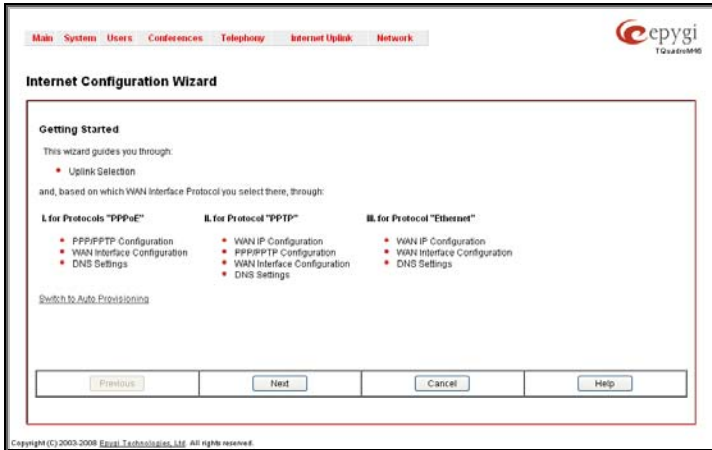


Fig. I-18: Internet Configuration Wizard

This first page of the **Internet Configuration Wizard** is for informational purposes only and lists the items to be configured, Click on the **Next** button for the **Uplink Configuration** page.

Before configuring the WAN port to the Internet, you need to get the following information from your internet service provider:

- **Bandwidth** - how much is available upstream and downstream?
- **WAN IP Configuration** - is DHCP supported? If yes, no more information is needed. If DHCP is not supported, the following data is needed: the WAN IP address, the subnet mask, the IP address of the standard gateway and the IP address of the Domain Name Server (DNS).
- **MAC address** - needed when the ISP requires a specific MAC address for the WAN.

Additionally, for Point-to-Point Protocol over Ethernet (PPPoE) WAN interface, you need to get the following information from your internet service provider:

- **PPP Configuration** - does your ISP use a dynamic or fixed WAN IP address? If the WAN IP address is dynamic, no more information is needed. If the WAN IP address is fixed, you will have to enter it.
- **Authentication** - does your ISP require authentication? If authentication is required, information about the corresponding method (PAP, CHAP or MSCHAP) is needed including the username and password of the PPPoE account.

This information will be needed to be inserted in the Internet Configuration Wizard.

## Uplink Configuration

Select the desired WAN Interface Protocol and enter the **WAN Interface Bandwidth** to assure the quality of IP calls.



Fig. I-19: Uplink Configuration

If the available bandwidth is used to the point where the quality of an additional IP call would suffer, then new IP calls are rejected.

The bandwidth provided by your ISP must be specified for both **Upstream** and **Downstream** fields. The default entry in both fields is **100000**, the maximum bandwidth of the 10 MB uplink module. For basic DSL and cable modem service in the United States, typical values are **300** for Upstream and **1500** for Downstream.

The **Min Data Rate** text field is used to specify the amount of bandwidth reserved for data applications. The value entered here needs to be smaller than the value specified for **Upstream Bandwidth**.

Specify the **WAN Interface Protocol** by choosing between available WAN interface protocols: **PPPoE** (Point to Point over Ethernet), **PPTP** (Point to Point Tunneling Protocol) and **Ethernet**. Use Ethernet for DHCP or static IP.

For **Ethernet**, clicking **Next** will display the **WAN IP Configuration** page. If **PPPoE** is the selected WAN Interface Protocol, the next page will be **PPP/PPTP Configuration**. For **PPTP** WAN Interface Protocol, **PPP/PPTP Configuration** page will follow the **WAN IP Configuration**.

## WAN IP Configuration

Your Internet Service Provider (ISP) should provide this information.

- **Assign automatically via DHCP** - The parameters are set automatically by the ISP. This is common with cable modem and DSL service.
- **Assign Manually** requires the administrator to enter the external **IP Address**, the corresponding **Subnet Mask**, and the IP address of the **Standard Gateway**. This is common when you have a static IP address with your ISP.

The screenshot shows the 'WAN IP Configuration' section of the 'Internet Configuration Wizard'. It features two radio buttons: 'Assign automatically via DHCP' (which is selected) and 'Assign manually'. Below the 'Assign manually' option, there are three rows of input fields for IP configuration. The first row is for the IP Address, with values 192, 168, 74, and 60. The second row is for the Subnet Mask, with values 255, 255, 255, and 0. The third row is for the Default Gateway, with values 192, 168, 74, and 0. Each input field has an 'IP-Clipboard' button next to it. At the bottom of the form, there are four buttons: 'Previous', 'Next', 'Cancel', and 'Help'.

Fig. I-20: WAN IP Configuration page

Click on **Next** to display the **WAN Interface Configuration** page.

## PPP/PPTP Configuration

Enter the IP address of the PPTP server into the **PPTP Server** text field.

Choose the encryption for the traffic over the PPTP interface from the **Encryption** drop down list.

**Authentication Settings** require the Username and the Password used for the authentication on the ISP server.

**Dial Behavior** radio buttons:

- **Dial Manually** - if this radio button is activated, a button will be displayed in the main management window that serves to switch the Internet connection on/off. When accessing the Internet, every station of the connected LAN has to connect to Quadro first.
- **Always connected** - Quadro stays in the always connected mode. This will allow Quadro always remain online in the network.

The **IP Address Assignment** field is used to specify the external IP address given to the Quadro. Usually it is a dynamic address but in some cases you may be given a static IP address.

The screenshot shows the 'Internet Configuration Wizard' window. The 'PPP / PPTP Settings' section contains the following elements:

- PPTP Server:** A text input field with an 'IP-Clipboard' button to its right.
- Encryption:** A dropdown menu currently set to '128 Bit'.
- Authentication Settings:** Two text input fields for 'User name' and 'User password'.
- Dial behavior:** Two radio buttons: 'Dial manually' and 'Always connected'. The 'Always connected' radio button is selected and highlighted with a red box.
- IP Address Assignment:** Two radio buttons: 'Dynamic IP Address' and 'Fixed IP Address'. The 'Fixed IP Address' radio button is selected and highlighted with a red box. Below it is a 'Fixed IP Address' field with an 'IP-Clipboard' button.
- Keep connection alive:** A checkbox that is currently unchecked.

At the bottom of the wizard are four buttons: 'Previous', 'Next', 'Cancel', and 'Help'.

Fig. I-21: PPP/PPTP Configuration page

If your ISP assigns a dynamic IP address, activate the **Dynamic IP Address** radio button, otherwise activate the **Fixed IP Address** radio button and enter the IP address you were assigned by your ISP.

**Keep Connection alive** checkbox enables keeping the connection alive by sending control packets dedicated for the link state verification.

Click the **Next** button to display the **WAN Interface Configuration** page.



## WAN Interface Configuration

If your ISP requires a specific MAC address, (for example, for authentication), it can be entered on this page. The required MAC address can be entered into the **User defined** field. If a specific MAC address is not required, leave the default selection **This device** selected.

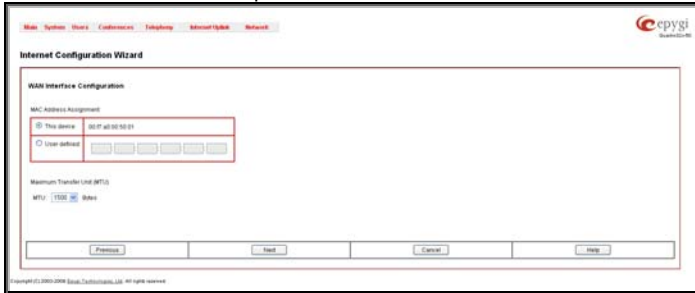


Fig. I-22: WAN Interface Configuration page

Use the **MTU** drop down list to select the maximum packet size on the Ethernet (in bytes). Click **Next** to display the **DNS Settings** page.

## DNS Settings

For DNS, the selection is set to **Dynamically by Provider**. When using a static IP address, fixed values must be entered.

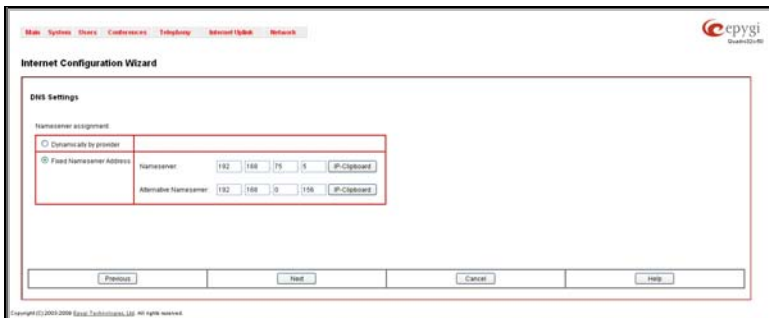


Fig. I-23: DNS Settings page

The Quadro will suggest the correct settings. If **Dynamically by Provider** is selected, the DNS server settings will be set automatically whenever a connection to the Internet is established.

If **Fixed Nameserver Address** is selected, manually enter the IP addresses provided by your ISP for the name server and the alternative name server.

Clicking **Next** shows the summary page of the Internet Configuration Wizard.

## Finishing the Internet Configuration Wizard



Fig. I-24: Internet Configuration Wizard Summary page

Click the **Finish** button to complete the Internet Configuration Wizard. The Quadro will then stop internal functions and apply the changes made in the Wizard. After this is complete, the Quadro will display the **Confirm Settings** page requesting confirmation of the changes. Press the **OK** button to confirm the settings.

**Please Note:** the settings should be confirmed within 20 minutes; otherwise, the device will **revert back to the previous configuration and reboot.**

## Step 2-A: Using IP Lines

Before starting the IP Lines specific configuration, the appropriate IP Phone (the list of SIP phones supported by Quadro is presented below) should be connected to the Quadro either through its LAN or WAN port. If the phones are placed on the Quadro WAN, please ensure that the **Connect IP phones from WAN side** checkbox is enabled on the **Line Settings** page (see Fig. I-25).

Each IP Line should be configured individually from the **Telephony** menu, **Line Settings** page, **IP Line Settings** tab.



Fig. I-25: Line Settings page

Click on the IP Line number to enter the **IP Lines Settings** page.



Fig. I-26: IP Line Settings page

Select the **SIP Phone** radio button. Select the SIP IP phone model from the **Phone Model** drop down list. Insert the SIP Phone's **MAC address** in the corresponding fields. The MAC address of an IP phone is usually printed on the back of the phone's base unit.

In the **Line Appearances** text box, enter the number for simultaneous calls supported by the SIP IP phone – which is the sum of the number of active and held calls. For example, if this field is set to **1**, only one active call is possible to have on the phone and making or accepting a second call while the other is on hold will not be allowed. Note, that this number depends on the phone brand and model, and cannot exceed the number of simultaneous calls supported by the phone.

To simplify the configuration procedure, Quadro generates unique identification parameters

(see **Username** and **Password**). You may use either these values or specify new ones. The **Password** field is checked against its strength and you may see how strong is your inserted password right below that field. To achieve the well protected strong password minimum 8 characters of letters in upper and lower case, symbols and numbers should be used. If you are unable to define a strong password, press **Choose Generated Password** to use one of system defined strong passwords.

The **Use Session Timer** enables the SIP session timer for the corresponding IP line. This checkbox enables advanced mechanisms for connection activity checking. This option allows both user agents and proxies to determine if the SIP session is still active.

The **Enable Hot Desking Capability** checkbox is used to enable the Hot Desking feature on the corresponding IP line (for details, see Manual II – Administrator's Guide).

The **Hot Desking Automatic Logout** section is used to configure Hot Desking functionality expiration on the corresponding IP line. This may be useful when someone who logged in to the public phone with the extension attached to this line forgot to log out after using it. With this option enabled, once the expiration time arrives, the extension will automatically log out from the public phone.

The following options are available:

- **Never** – the extension will never expire and will remain logged in to the public phone.
- **After the defined period of time** – requires the period after which the extension will automatically log out from the public phone.
- **At the certain moment** – requires the moment (hour and minute) when the extension will automatically log out from the public phone.

Press **Save** to apply the settings for the IP line.

Reset the SIP Phone. After restart, the appropriate configuration will be automatically downloaded from the Quadro to the SIP Phone.

**Please Note:** For automatic configuration, some SIP phones may require additional actions to follow the restart. For example, by default the IP Dialog SIP Tone II is in a non-auto-provisioning mode, so it should be manually enabled on the phone. Refer to the user's manual of the corresponding SIP phone for instructions on performing a factory reset or reboot on any of the supported phones, what additional configurations are required for a specific SIP phone, and how to manipulate with the GUI.

You may also find the detailed installation instructions of the Epygi's supported and tested IP Phones in the "**Configuring Epygi Supported IP Phones**" and "**Configuring Epygi Tested IP Phones**" documents published on the Epygi's Web portal.

To make sure the line configuration works properly, do the following:

- Go to **System – Status - IP Line Registration Status** to see if IP Line registration is successful.
- Dial \*74 to get the line information.
- Make outgoing and accept incoming calls.

## Supported SIP Phones

Below is the list of SIP phones that are officially supported by Epygi and can be configured to work with QuadroM32x using both Plug and Play and the automatically configuration options, as well as the full set of advanced features, like paging and intercom:

- SNOM 300 (SIP phone)
- SNOM 320 (SIP phone)
- SNOM 360 (SIP phone)
- SNOM 370 (SIP phone)
- SNOM 820 (SIP phone)
- Aastra 480i (SIP phone)
- Aastra 9133i (SIP phone)
- Aastra 9112i (SIP phone)
- Aastra 9143i (33i) (SIP phone)
- Aastra 9480i (35i) (SIP phone)
- Aastra 51i (SIP phone)
- Aastra 53i (SIP phone)
- Aastra 55i (SIP phone)
- Aastra 57i (SIP phone)
- Aastra 6731i(SIP phone)

Below is the list of SIP phones that are tested and can be configured to work with QuadroM32x using the automatically configuration option. Some Quadro supported features like Paging, Intercom, etc. may be missing in these SIP phones.

- CISCO 7960
- IpDialog ST201
- Polycom SoundPoint IP 300SIP
- Polycom SoundPoint IP 330SIP
- Polycom SoundPoint IP 331SIP
- Polycom SoundPoint IP 501SIP
- Polycom SoundPoint IP 550SIP
- Polycom SoundPoint IP 601SIP
- Polycom SoundPoint IP 650SIP
- Polycom SoundStation IP 6000
- POLYCOM VVX 1500
- SIPUra SPA 841
- Snom 190
- Snom 200
- Snom 220
- Snom M3
- Swissvoice IP 10S
- Thomson ST 2030 SIP
- Berkshire (ATL) 5000
- Grandstream BT10
- Grandstream BT200
- Grandstream GXP2000
- Linksys SPA921
- Linksys SPA922
- Linksys SPA941
- Linksys SPA942
- Yealink T28
- Aastra MBU400
- .Telematrix IP550 Spectrum Plus
- .Telematrix 3300IP

To use Plug and Play (PnP) option for supported IP phones, connect them to LAN/WAN for the Quadro and power up. If the phone is in default settings then it will automatically select a free IP line and attach to an extension. In not, reset the phone to factory defaults manually.

**Please Note:** To use PnP the appropriate option should be selected in the IP line settings.

## Step 2-B: Using Receptionist

If you wish to use the Receptionist's features, the Receptionist should be set up on the Quadro. The Quadro's basic configuration should be done in the same way as described in the Step 2.

The Receptionist related setup, with detailed instructions on how to configure the Quadro and the attached IP Phones, is described in the "**Receptionist Setup on Quadro**" document, which you can find at the Epygi's Web portal.

## Step 2-C: Configuring the E1/T1 Settings

The QuadroM32x has one E1/T1 trunk available.

The QuadroM32x can be connected to a PBX or to the PSTN via E1/T1 lines, using E1/T1 CAS/CCS signaling. The QuadroM32x may be connected to act as a **User** (default mode) if connected to directly to the PSTN or as a **Network** if connected to a PBX.

Further, you are required to enter the E1/T1 settings your PSTN provider requires regarding framing, clocking, signaling used and so on. All these settings must be entered on the management page **Trunk Settings** that is displayed when you select **E1/T1 Settings** from the **Telephony** menu:

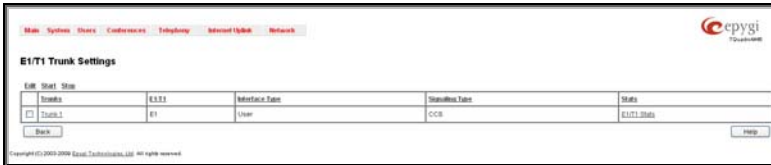


Fig. I-27: E1/T1 Trunk Settings page

The **Trunk Settings** page is used to configure the E1/T1 trunk and timeslots settings. The table lists the available E1/T1 trunks of Quadro and their settings (Trunk name, E1/T1 mode, interface and signaling type). Clicking on the trunk will open its **Signaling Settings** page (Trunk CAS Signaling Settings or the Trunk CCS Signaling Settings page depending on the selected signaling type). Selecting the corresponding trunk's checkbox and pressing **Edit** will open the **Trunk - Edit Entry** page. The **E1/T1 Stats** link is displayed for every active Quadro trunk and leads to the page where the E1/T1 trunk and the traffic statistics can be viewed.

## Editing the E1/T1 Trunk

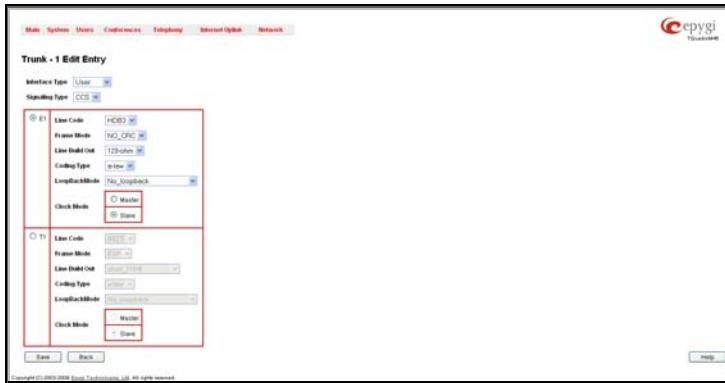


Fig. I-28: Trunk Edit page

Select **Network** as your **Interface Type** if your QuadroM32x is connected to a PBX, otherwise choose **User**.

Next, you are required to enter the **Signaling type (CAS or CCS)**, adjust the correct interface type (**E1** or **T1**), and specify the requested settings of the selected interface type. The appropriate parameters should be requested from the service provider or in case of connecting to a PBX - according to the settings in the PBX manual.

CAS signaling allows using the same timeslot both for voice and data transmission. CCS signaling uses a single timeslot for signaling data transmission for the whole trunk, all other timeslots are used for voice transmission.

E1, the European system, enables 30 active timeslots (both for CAS and CCS) to be used; T1, the US system, enables 24 timeslots (if CAS is used) and 23 (if CSS is used).

**Please Note:** Modifying the E1/T1 trunk settings may lead to some broken routes in the Local Call Routing Table.

## Signaling Type CCS

Fig. I-29: Trunk T1 Signaling Type CCS page

If you selected CCS as your Signaling Type, using the **Trunk** link will take you to the page shown above. Here you can specify the signaling settings in more detail. Further, this page allows selection of the timeslots for signaling data and voice.

The **Non Automat** checkbox switches to non-automatic Terminal Endpoint Identifier (TEI) searching and enables the **TEI Address** text field that requires a TEI number (digit values from 0 to 63) for connection establishment between CO and E1/T1 client. In automatic mode, an E1/T1 connection will be established on the first available TEI, while in non-automatic mode a specific TEI may be reserved for the connection. In this case both call partners need to specify the same TEI in their settings.

In the **Network Mode** (PBX connected) you need to specify the same TEI address on both sides (Quadro and PBX), if the **Non Automat** mode is selected. If the **Automat** mode is selected the user on the PBX side may set any mode related to TEI assignment in the PBX configuration.

In the **User Mode** (CO/PSTN connected) the TEI assignment depends on the CO/PSTN settings. So you have to enter the values you've got from your PSTN provider.

The **SAPI Value** text field requires an additional Service Access Point Identifier (SAPI) value (digit values from 1 to 62) that is used to support additional interface between ISDN Layer 2 and Layer 3. Leaving this field empty (default value), only Call Control and Layer 2 management procedures will be activated.

The **Alternative Disconnection Mode** checkbox should not be selected, if Quadro ought to disconnect the call as soon as disconnect message has been received from the peer, otherwise, when checkbox is selected, Quadro's user may hear a busy tone when peer has been disconnected.

In the **ISDN L2 Timers** area the **Excessive Ack. Delay T200** text field configures the period in milliseconds (digit values from 500 to 9999) between transmitted signaling packet and its acknowledgement received. The **Idle Timer T203** text field configures the period in milliseconds (digit values from 1000 to 99999) for E1/T1 client idle timeout. The Service Provider provides these settings.



In the **ISDN L3 Timers** area, the **T302 Timer** text field requires the value for the T302 timer in milliseconds (digit values from 0 to 15000) and indicates the time frame system is waiting for a digit to be dialed and when timer expires, it initiates the call. The timer is not applicable for DMS-100 switch types. The **T309 Timer** text field requires the value for the T309 timer in milliseconds (digit values from 0 to 90000) responsible for call steadiness during link disconnection within the period equal to this timer value. If the value in this field is 0, the T309 timer will be disabled. The **T310 Timer** text field requires the value for the T310 timer in milliseconds (digit values from 1000 to 120000) responsible for the outgoing call steadiness when CALL PROCEEDING is already received from the destination but call confirmation (ALERT, CONNECT, DISC or PROGRESS) is not yet arrived. The **No Answer Disconnect Timer** text field is only available in Network mode and requires the value for the No Answer Disconnect Timer (digit values from 0 to 200000). This timer is used in certain types of PBXs. The value 0 indicates that the timer is disabled. When time expires, Quadro will play a busy tone towards the PBX if the call has been disconnected by the peer.

The **D Channel Timeslot For Transmit/Receive** drop down list in offers all available timeslots to be selected for signaling data transmit/receive.

The link **B Channels** leads to the **Signaling Type CCS - B Channel Settings** page (see below) where available timeslots may be enabled or disabled for the voice transfer. The **Force Update** option can be optionally used to apply new settings immediately. This will force the timeslot(s) to be restarted and any active connection on the selected timeslot(s) will be interrupted. The **Restart** option can be used to bring timeslot(s) to the initial idle state on the both sides. Note, that when applying one of these options, any active traffic on the timeslot(s) will be terminated. **Edit** will display another page, where the signaling settings for the selected timeslots may be specified in detail.

**Bearer Establishment Procedure** allows you to select the session initiation method on the B channels. One of the following possibilities of the transmission path completion prior to receipt of a call acceptance indication can be selected:

- on channel negotiation at the destination interface;
- on progress indication with in-band information;
- on call acceptance.

**Called Party Type of Number** and **Calling Party Type of Number** fields indicate correspondingly the type of the called party's and of the calling party's number.

**Called Party Numbering Plan** and **Calling Party Numbering Plan** drop down lists indicates correspondingly the numbering plan of the called party's and calling party's number.

The **Route Incoming Call to** drop down list contains Attendant, routing agent with two kinds of call routing possibilities, and all extensions of Quadro and allows selecting the destination where incoming calls will be routed to. Choosing **Routing** will request the caller to pass the authentication (if enabled) and will invite him to dial the destination number to connect the user within the Quadro Network. Choosing **Routing with inbound destination number** will request the authentication (if enabled) and then will automatically use the initially dialed number to connect the destination without any additional dialing.

**Attention:** When Quadro acts in the Network mode with the Attendant as a destination to route the incoming calls to, digit forwarding should be disabled on the private PBX side otherwise incoming digits may be mistaken as a special calling codes on the Quadro's Attendant.

The value for **Switch Type** depends on the CO when acting in the User mode and the private PBX capabilities when acting in the Network mode.

**Attention:** A timeslot can be used either for voice or signaling data transfer. The configuration prevents the selection of a timeslot from the B channel list if it has already been selected from the **D Channel receive/transmit** drop down list.

The **Generate Progress Tone to PSTN/PBX** drop-down list contains the options for sending progress (ring-back) tone to callers from the PSTN/PBX. The following options are available in the list:

- **None** configures the system to send ALERT messages without the Progress Indicator information element (IE).
- **Unconditional** configures the system to send ALERT/PROGRESS messages with the Progress Indicator IE. With this option, the system will send its own progress tone.
- **Conditional** configures the system to send ALERT/PROGRESS messages with Progress Indicator IE. With this option, the system will send its own progress tone only if there is no early media (180/183 with SDP) from the called party.

**Incoming Called Digits Size** indicates the number of received digits (in a range from 0 to 255) required to establish a call. When field has 0 value, the system uses either the timeout defined in the T302 field or the **Sending Complete Information Element** messages to establish a call. Independent from the value in this field, **Sending Complete Information Element** and pound sign always cause call establishment.

The **Generate Progress tone on IP** checkbox selection will generate the progress tone to IP (H.323 or SIP).

If the **Send ALERT Message on Call Ringing** checkbox is selected, the system will send ALERT messages to callers from the PSTN/PBX on call ringing. If not, the system will send a PROGRESS message on receiving early media from the called party if the **Generate Progress Tone to PSTN/PBX** setting is not set to **None**.

Selecting the **Enable CLIR Service** checkbox enables the Calling Line Identification Restriction (CLIR) service which displays the incoming caller ID only if Presentation Indication is allowed on the remote side. Otherwise, if the CLIR service is disabled, the caller ID will be unconditionally displayed.

When the **Enable Connect Acknowledge Option** checkbox is selected, Quadro will stop the T303 and T310 timers upon receiving the CONNECT message, will send a CONNECT ACKNOWLEDGE message to the remote side and enter the active state. When this checkbox is not selected, Quadro will stop the T303 and T310 timers upon receiving the CONNECT message and will enter the active state without sending the CONNECT ACKNOWLEDGE message to the remote side.

The **Override CLID with P-Asserted-Identity** checkbox selection enables SIP P-Asserted-Identity support. For the calls from SIP to E1/T1 if Invite SIP message contains a P-Asserted-Identity or P-Preferred-Identity or Remote-Party-ID, then the CallerID on E1/T1 is sent with the value from the identity field. SIP user agent should check existence of P-Asserted-Identity then P-Preferred-Identity then Remote-Party-ID to fill the identity field.

**Trunk 1 - E1 - Signaling Type CCS - B Channels**

Channel Selection: **Preferred**

Channel Selection Ordering: **Ascending**

Timeslot	Enabled	Echo Cancellation
<input type="checkbox"/> Timeslot 1	Yes	Yes
<input type="checkbox"/> Timeslot 2	Yes	Yes
<input type="checkbox"/> Timeslot 3	Yes	Yes
<input type="checkbox"/> Timeslot 4	Yes	Yes
<input type="checkbox"/> Timeslot 5	Yes	Yes
<input type="checkbox"/> Timeslot 6	Yes	Yes
<input type="checkbox"/> Timeslot 7	Yes	Yes
<input type="checkbox"/> Timeslot 8	Yes	Yes
<input type="checkbox"/> Timeslot 9	Yes	Yes
<input type="checkbox"/> Timeslot 10	Yes	Yes
<input type="checkbox"/> Timeslot 11	Yes	Yes
<input type="checkbox"/> Timeslot 12	Yes	Yes
<input type="checkbox"/> Timeslot 13	Yes	Yes
<input type="checkbox"/> Timeslot 14	Yes	Yes
<input type="checkbox"/> Timeslot 15	Yes	Yes
<input type="checkbox"/> Timeslot 16	Yes	Yes
<input type="checkbox"/> Timeslot 17	Yes	Yes
<input type="checkbox"/> Timeslot 18	Yes	Yes
<input type="checkbox"/> Timeslot 19	Yes	Yes
<input type="checkbox"/> Timeslot 20	Yes	Yes
<input type="checkbox"/> Timeslot 21	Yes	Yes
<input type="checkbox"/> Timeslot 22	Yes	Yes
<input type="checkbox"/> Timeslot 23	Yes	Yes
<input type="checkbox"/> Timeslot 24	Yes	Yes
<input type="checkbox"/> Timeslot 25	Yes	Yes
<input type="checkbox"/> Timeslot 26	Yes	Yes
<input type="checkbox"/> Timeslot 27	Yes	Yes
<input type="checkbox"/> Timeslot 28	Yes	Yes
<input type="checkbox"/> Timeslot 29	Yes	Yes
<input type="checkbox"/> Timeslot 30	Yes	Yes
<input type="checkbox"/> Timeslot 31	Yes	Yes

Buttons: **Save** **Back** **Print**

Please check your settings carefully.  
Copyright © 2000-2006 Epygi Technologies, Ltd. All rights reserved.

Fig. I-30: Trunk T1 Signaling Type CCS - B-Channels page

**Channel Selection** drop down list is used to select between the **Preferred** and **Exclusive** B channel selection methods. For **Preferred** channel selection, the CO answers to the call request by the first available timeslot, while for **Exclusive** channel selection CO should feedback only by the timeslot used for the call request.

**Channel Selection Ordering** drop down list is used to choose the B channels selection (Ascending or Descending). When **Ascending** selection is configured, B channels will be defined starting from B1 to B23/B30. For **Descending** selection, B channels will be defined from B23/30 to B1. If your CO/PBX has **Ascending** B channels selection configured, it is recommended to use **Descending** B channels selection and vice versa.

**Please Note:** A timeslot can be used either for voice or data transfer. The system prevents selecting a timeslot from the B channel list if it has already been selected from the D Channel receive/transmit drop down list.

**Edit** will display the first page of the CAS signaling Wizard page (see below), which contains 3 checkboxes:

- **Enable Timeslot** – used to enable/disable the selected timeslot(s);
- **Force Update Timeslot** – used to apply new settings immediately by restarting the timeslot(s);
- **Enable Echo Cancellation** – used to enable/disable the echo cancellation feature on the selected timeslot(s).

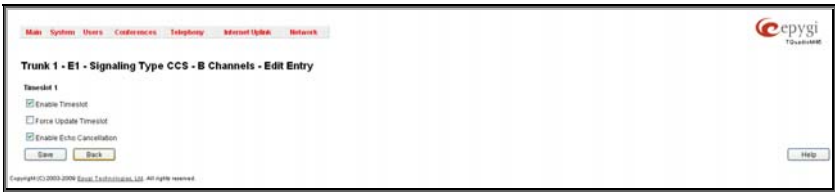


Fig. I-31: Trunk T1 Signaling Type CCS - B-Channels Edit page

## Signaling Type CAS



Fig. I-32: Trunk T1 Signaling Type CAS page

If you selected **CAS** as your **Signaling Type** on the **Trunk Settings - Edit Entry** page, you will get the page shown above using the **Trunk** link.

The **Incoming Interdigit Service** link leads to the page where the dial plan for incoming E1/T1 calls from CO/PBX to the Quadro can be configured. The **Incoming Interdigit Service** is used to configure E1/T1 dial plan for the incoming calls from CO/PBX to the Quadro. This service allows you to speed up the call establishment procedure by detecting the prefix. The calls will be speed up by the timeout defined in the **Incoming Digits Timeout** text field (see below). Consult with your CO before making changes in the E1/T1 dial plan.

In the **Incoming Digits Timeout** text field the time period may be specified, during which incoming digits from the destination party calling Quadro will be collected before being applied as an incoming called number. Values between 0 and 20000 (in milliseconds) are required.

The **Signaling Standard** drop down list is available only in E1 mode and allows selecting the connection signaling standard (ITU, ITU\_T\_2 or MELCAS).

In the table below, the page lists all timeslots. To configure the timeslots, select one or more records from the table and press **Edit** functional button. This will open **CAS Signaling Wizard** where timeslot settings might be configured.

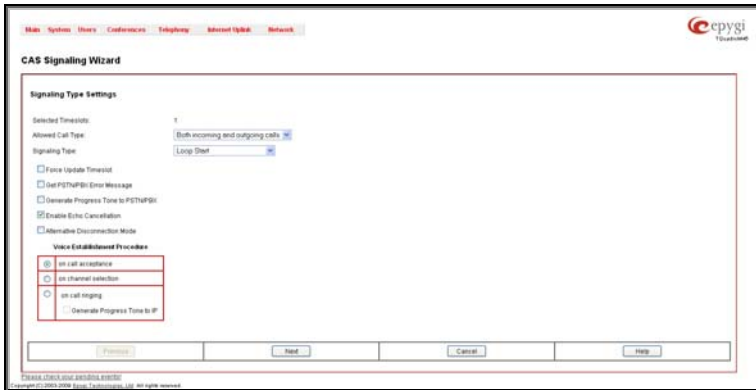


Fig. I-33: CAS Signaling Wizard - Page 1

From the first page, signaling type settings of the timeslot(s) might be configured:

**Allowed Call Type** is used to select the allowed call directions: incoming, outgoing or both.

**Signaling Type** allows selecting the CAS signaling type.

**Please Note:** R2 signaling (compelled and non-compelled) can only be used with an E1 interface in User mode. Independent of the selection in this drop down list, Quadro with the T1 interface in the CAS mode is unable to detect the busy tone on the destination side. For E1 interface in the CAS mode, busy tone will be detected only for R2 compelled and non-compelled (both with and without ANI) signaling types.

**Force Update Timeslots** checkbox can be optionally selected in order to apply new settings immediately. This will force the timeslot(s) to be restarted and any active connection on the selected timeslot(s) will be interrupted.

**Please Note:** Quadro does not support the **Forward Digit** selected on the CO when acting in the **User** mode with **CAS Loop Start** signaling type.

**Get PSTN/PBX Error Message** checkbox enables notification message in case of outgoing calls to unreachable, incorrect or non-existent destination.

When **Generate Progress Tone to PSTN/PBX** checkbox is selected, Quadro generates ring tones to incoming callers during E1/T1 call dialing. This feature is mainly applicable to 2-stage dialing mode.

**Enable Echo Cancellation** checkbox enables the echo cancellation mechanism on the selected timeslot(s).

When **Alternative Disconnection Mode** checkbox is selected, the Quadro will play a busy tone towards the PBX/CO if the call has been failed. After 60 second timeout, the Quadro will disconnect the call from PBX/CO and will stop playing the busy tone.

**Voice Establishment Procedure** manipulation radio buttons group is used to select a method of voice establishment on the trunk:

- **On call acceptance** – with this selection, voice will be established after call is being accepted.
- **On channel selection** - with this selection, call will be accepted during channel selection. This selection is not allowed for R2 signaling.
- **On call ringing** - with this selection, voice will be established after call is being ringing. Selection enables **Generate Progress Tone to IP** checkbox which is used to enable the progress tone generation upon voice establishment.

Press **Next** to move to the second page of the **CAS Signaling Wizard**:



Fig. I-34: CAS Signaling Wizard - Page 2

**CAS Signaling Wizard - Page 2** appears if the **Signaling Type** on the previous page is set to any of the **E&M** types or to **R2 DTMF**. From this page of the CAS Signaling Wizard, **DID (Direct Inward Dialing) Service** might be enabled on the timeslot(s).

In **User** mode, the Quadro cannot route incoming calls from the E1/T1 trunk to extensions if the timeslot in the trunk does not have DID service enabled. Incoming call routing takes place according to the received caller ID. If the DID service is enabled on some timeslot(s), an incoming call on these timeslots may be routed to the specified extension, the Attendant, or the routing client (depending on the configuration).

**Please Note:** The timeslot with DID service enabled cannot be used for outgoing calls.

In **Network** mode DID service does not limit the Quadro functionality but a timeslot with enabled DID service cannot be used for incoming calls.

**Please Note:** The CO/private PBX must support the DID service, if it is to be configured on the QuadroM32x.

Press **Next** to move to the third page of the **CAS Signaling Wizard**:



Fig. I-35: CAS Signaling Wizard - Page 3

From this page, the destination for incoming calls to be routed to can be selected and other routing settings might be configured.

**Route Incoming Call** to drop down appears when **Both incoming and outgoing calls** or **Incoming calls only** is selected from the **Allowed Call Type** list and allows selecting the destination where incoming calls should be routed. The list contains all extensions of the Quadro, Attendant and Routing agent. Choosing the **Routing with inbound destination number** selection will automatically use the initially dialed number to connect the destination without any additional dialing.

When **DID service** is enabled (in User mode only), incoming DID calls can be only routed to the Routing agent with simple **Routing** and **Routing with inbound destination number** call routing possibilities.

**Attention:** When Quadro acts in the Network mode with the Attendant as a destination to route the incoming calls, digit forwarding should be disabled on the PBX side. Otherwise, incoming digits may be mistaken as special calling codes on the Quadro's Attendant.

**Cut Through** checkbox is available when signaling selected from the **Signaling Type** drop down list on the **CAS Signaling Wizard – Page 2** is different from R2 (all types) and is used to reconnect the call (terminated by some reason, e.g. user error, network problems, etc.) by going on-hook and off-hook again even if the call partner is off-hook and not involved in the call.

**Automat Ringing Down** checkbox is available when signaling selected from the **Signaling Type** drop down list on the **CAS Signaling Wizard – Page 2** is different from R2 (all types) and allows an E1/T1 device connected to the Quadro to establish a hot-line call (automatic call without any digits dialed).

**Pass Through Pound Sign (#)** checkbox is only available when signaling selected from the **Signaling Type** drop down list on the **CAS Signaling Wizard – Page 2** is different from E&M FGD or R2 (except for R2-DTMF). When this checkbox is selected, the pound sign (#) detected in the dialed number will be passed through and will be considered as a part of the dialed number. When this checkbox is not selected, the detected pound sign (#) will be considered as a call acceleration digit.

Press **Next** to move to the forth page of the **CAS Signaling Wizard**:



Fig. I-36: CAS Signaling Wizard - page 4

This page only appears in E1 User mode when signaling selected from **Signaling Type** drop down list on the **CAS Signaling Wizard – Page 2** is R2 (all types) and is used to configure country settings.

**Country** drop down list is used to set the location where Quadro is located to support the correct functionality of R2 signaling. For countries absent in this list, use **ITU** selection.

**Use Default Country Settings** checkbox restores default advanced settings for the selected country. When this checkbox is not selected, next page will provide a possibility to manually configure advanced country settings.

Press **Next** to move to the fifth page of the **CAS Signaling Wizard**:

The screenshot shows the 'Advanced Country Settings' page of the CAS Signaling Wizard. The page is titled 'Advanced Country Settings' and features a navigation bar at the top with links for 'Main', 'System', 'Users', 'Conferences', 'Telephony', 'Internet Hybrid', and 'Network'. The epygi logo is in the top right corner. The main content area contains several configuration fields:

- Selected Timeouts:** 1
- Country:** ITU
- ANI Category:** A1
- ANI Request Transmit:** AS
- ANI Request Receive:** AS
- Seize Acknowledge Timeout:** 2 (2, 2000) msec
- Answer Guard Timeout:** 100 (0, 1000) msec
- Release Guard Timeout:** 0 (0, 12000) msec
- Incoming CNIS Size:** 0 (0, 255)
- Unused A B C D:** 0 0 0 0
- Insert A B C D:** 0 0 0 0
- End of CNIS (+15)
- Allow Timeout Blocking
- Override CLID with P-Assesed Identity
- Group B Support:**
  - Enable**
    - Transmit Answer Signal: AS
    - Receive Answer Signal: BS
    - Transmit Busy Signal: BS
    - Receive Busy Signal: BS
  - Partial Enable**
    - Transmit Answer Signal: AS
    - Receive Answer Signal: BS
  - Disable**
    - Answer Signal: AS

At the bottom of the page, there are four buttons: 'Previous', 'Next', 'Cancel', and 'Help'. A small note at the bottom left reads: 'Please check your settings before proceeding.' The footer contains the text: 'Copyright © 2000-2008 Epygi Technologies, Ltd. All rights reserved.'

Fig. I-37: CAS Signaling Wizard - page 5

This page only appears when **Use Default Country Settings** checkbox is not selected on the previous page and is used to configure advanced country settings.

**ANI Category** drop down list appears only when **R2** signaling selected from **Signaling Type** drop down list on the **CAS Signaling Wizard – Page 2** is different from **R2 DTMF** and is used to select the calling party priority depending on the call originator's location specifics.

**ANI Request Transmit** and **ANI Request Receive** drop down lists allow you to select the Caller ID request R2 tones for transmit and receive.

**Seize Acknowledge Timeout** text field is used to define a timeout (in a range from 2 to 2000 milliseconds) between incoming seize signal and the corresponding feedback.

**Answer Guard Timeout** text field is used to define a wait timeout (in a range from 0 to 1000 milliseconds) Group-B Answer Signal and Line Answer.

**Release Guard Timeout** text field is used to define an idle timeout (in a range from 0 to 10000 milliseconds) between the disconnect signal receipt and call disconnection.



**Dialing Delay Timeout** text field is used to define a timeout (in a range from 0 to 2000 milliseconds) before injecting dialed digits. Timeout specially refers to R2 DTMF signaling.

**Incoming DNIS Size** text field indicates the number of received digits (in a range from 0 to 255) required to establish a call. When this field has a "0" value, the system uses either timeout defined in the **Incoming digits timeout** field or the **End of Address** messages to establish a call. Independent on the value in this field, the message **End of Address** always causes the call establishment.

**Unused A:B:C:D** text fields require to configure unused C and D bits of E1/T1 CAS signaling (A and B bits are predefined). Fields may have either 0 or 1 values.

**Invert A:B:C:D** text fields are used to invert the ABCD status bits in time-slot 16 before TX and after RX. If bit is set to 1, the router inverts it before transmission and after the receipt.

**End of DNIS** (I-15) checkbox is used to enable End of DNIS service.

**Collect Call** checkbox is only available when **Brazil** is selected in the **Country** drop down list on the previous page of the wizard and when the PBX attached to the Quadro supports this feature. When this checkbox is selected and in case of incoming calls, always the called destination will pay for the call. Option is particularly applicable when calling from the mobile phone. Checkbox should be selected when the appropriate feature is enabled on the PBX.

**Group B Support** manipulation radio button group is present only when **R2** signaling selected from **Signaling Type** drop down list on the previous page is different from **R2 DTMF** and is used to enable/disable the **Group B Support**. The **Group B Support** manipulation radio button group offers following selections:

- **Enable** – this selection enables **Group B Support** both for answer and busy recognitions of transmit and receive signals. This selection requires you to define transmit and receive signals. The **Transmit Answer Signal** and **Transmit Busy Signal** parameters are defined from the drop down lists on this page. When transmit signals are selected, press **Next** on this page to access the **R2 Receive Signal Settings** page where **Receive Answer Signal** and **Receive Busy Signal** should be defined. Use the checkboxes to select the **Receive Answer Signal** and **Receive Busy Signal** values. Multiple values are allowed for each signal.

**Please Note:** Warning appears if you have selected the same signal type both for receive answer and receive busy recognitions.

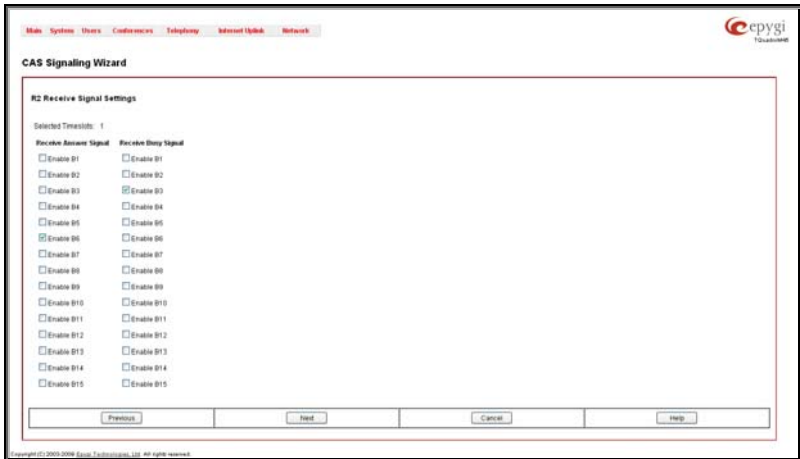


Fig. I-38: CAS Signaling Wizard - Receive Signal Settings page

- **Partial Enable** – selection partially enables **Group B Support** with for answer recognition only. This selection requires you to define transmit and receive signals. The **Transmit Answer Signal** parameter is defined from the drop down list on this page. When transmit signal is selected, press **Next** on this page to access the **R2 Receive Signal Settings** page where **Receive Answer Signal** should be defined. Use the checkboxes to select the **Receive Answer Signal** value. Multiple values are allowed for each signal.
- **Disable** – selection disables **Group B Support** and requires defining the **Answer Signal** parameter.

## Step 3: Registering on Epygi's Technical Support

It is recommended that you register your Quadro on the Epygi Technical Support web page. Registration will give you access to the Technical Support Database. There, you can submit requests concerning technical problems as well as refer to the Frequently Asked Questions (FAQ) section. In addition, the technical support page allows users to download new firmware, manuals and other information. You can access the support section only if you are registered. Additionally, registration at Epygi's Technical Support web page gives you the username and password to login to the Epygi SIP Server.

To register, you need to know the serial number of your Quadro, which is located on a label on the bottom of Quadro. You will also need the date of purchase. Next, open the Epygi home page ([www.epygi.com](http://www.epygi.com)), select **Support** and click on **Registration Form**. The online registration page will appear:

The screenshot shows the Epygi registration page. At the top left is the Epygi logo. The page title is "Support Center >> Register" and the date is "27 Nov 2008". The main heading is "Register". Below it, a message says: "Please fill in the fields below to register for a new account. Once registered you may have to validate your Email Address to enable your account." There are three main sections: "General Details", "Registration", and "Location".

**General Details:**

- Full Name: \* Samantha Donaldson
- Email: \* Samantha.Donaldson@omni
- Password: \* [masked]
- Password (Again): \* [masked]

**Registration:**

- Username: \* Samantha (Required for Forum and SIP)

**Location:**

- Country: \* United States
- City: \* Seattle
- ZIP: [empty]
- Address: [empty]
- Tel: \* 1815642100158

**User Type:**

- User Status: \* Customer
- Serial Number: 132342118804 (Note: If your serial number will be valid, your user status will be higher)

Buttons: Register, Reset, Back. A "Login" box is on the right with fields for Email, Password, and Remember Me, and a Login button.

Footer: Home | Register | News | Language: English (U.S.) | © Copyright 2008 Epygi Technologies LTD. All rights reserved powered by Kayako SupportSuite

Fig. I-39: Registration form

Complete all fields and record the **Login Name** and **Password** in a safe place. You will need it for the SIP server.

**Please Note:** In some cases, the Quadro units will be shipped preconfigured from the factory with the Support login and password already set up. In this case, an information sheet is included in the packaged contents indicating the username and password to access Epygi's Online Support and the Epygi SIP Server.

## Appendix: Changing the Admin Password

For security reasons, it is recommended that you change the default admin password. The username of the administrator (**admin**) cannot be changed.

To change the administrator password, go to the **System** menu, **User Rights Management**.

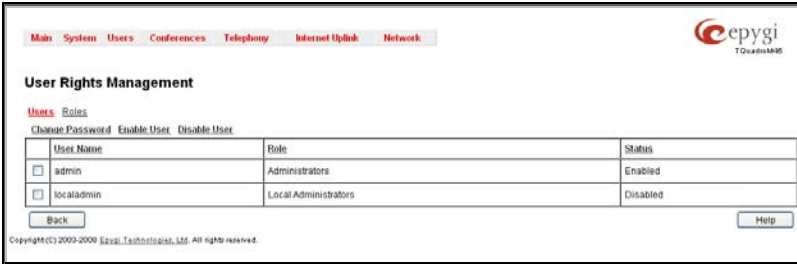


Fig. I-40: User Right Management page

Choose **admin** from the list and press the **Change Password** functional button from the **User Right Management** page toolbar.

The **Change Password** page will be displayed.

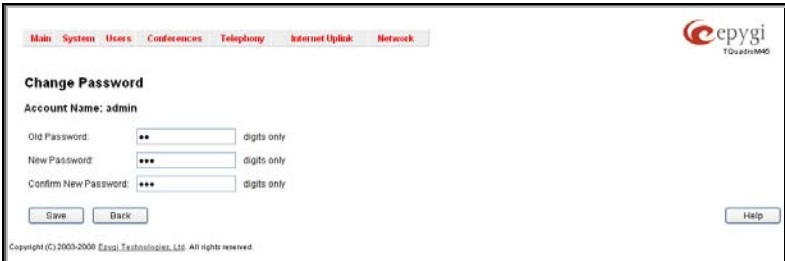


Fig. I-41: Change Password page

Enter the **Old Password** (19) and the **New Password** in both the **New Password** and **Confirm New Password** fields. Please note that only numeric digits may be entered here.

Write down the password somewhere and keep it in a secure place. If the password is lost, a factory reset will be required on the unit (see Administrator's Guide, Hardware Overview). All settings are lost after a factory reset. After a factory reset the default password (19) will be restored.

## Appendix: Configuring NAT Traversal

NAT or Network Address Translation is a common feature used to expand the use of connected PCs and other networked devices without having to use multiple global Internet public IP addresses. Most ISP's will assign one public IP address to each customer that is connected to the Internet. The customer can use a router to provide NAT capability and create a private network of PCs and other devices not visible from the Internet. This method offers security and also eliminates the need to assign global Internet public IP addresses to each device on the LAN.

The Quadro initiates and receives SIP calls from the Internet (or the network connected to the WAN port). To receive SIP calls, the Quadro must be able to receive packets from the SIP server or any other device that is trying to make an incoming call. If the Quadro is placed behind a router with NAT, like most basic routers on the market today, the Quadro will not be able to receive calls. To resolve this issue, either STUN must be enabled on the Quadro or SIP NAT traversal must be set up in the router and in the Quadro to route the incoming calls properly.

**Please Note:** NAT traversal only works with Internet connections that have static IP addresses. Verify from your provider that this is the case for your Internet connection. Some ISPs provide dynamic IP addresses that may change from time to time, and are not appropriate for SIP NAT traversal.

**Please Note:** If you have more than one router in series between the Quadro and the Internet, the same port forwarding setup must be configured on each router.

### NAT Traversal Setup

- Install the Quadro behind the router. If the Quadro is configured with its factory default settings, it is already configured for DHCP and will obtain an IP address automatically from the router.
- Connect a PC to the Quadro LAN port and power it up.
- Verify the Quadro can connect to the Internet by opening a browser window and browsing to a familiar WEB site. If the Quadro cannot reach the Internet, verify the LAN/WAN LEDs and the cabling. Verify the Quadro is set up for DHCP on the WAN and that the router has the DHCP server enabled for the devices behind it.
- Find the address of the router and log into the router. Refer to the router's user manual on how to open the router configuration.
- Set up port forwarding on the router to forward UDP ports 5060, 6000-6099 to the IP address assigned to the Quadro. You can see the IP address of the Quadro in the **System** menu under **Status**, submenu **Network Status**. The IP address will be listed as the WAN IP address. Your router also may indicate the IP address assigned to the Quadro.
- Find out the public Internet address (WAN IP address) of the router. To do so, open a browser and go to [www.whatismyip.com](http://www.whatismyip.com). The site will return your public Internet IP address. Record this IP address.
- From the **Telephony** menu of the Quadro Management go to the **NAT Traversal Settings** page, go to **General Settings** and set the enable **NAT Traversal for SIP** radio buttons selection to **Force**. **Save** the selection.



Fig. I-42: NAT Traversal Settings – General Settings

Go to **SIP Parameters** page.

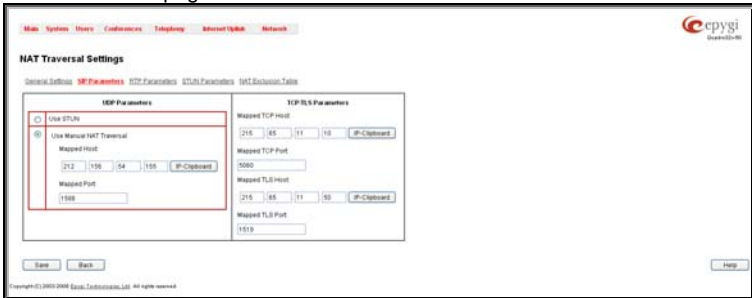


Fig. I-43: NAT Traversal Settings - SIP Parameters

Select **Use Manual NAT Traversal** and enter the WAN IP address of the router into the **Mapped Host** text field. For **Mapped Port**, enter the router's corresponding port number, in this case **5060**. **Save** the entries.

- Go to the **RTP Parameters** page and select **Use Manual NAT Traversal**.

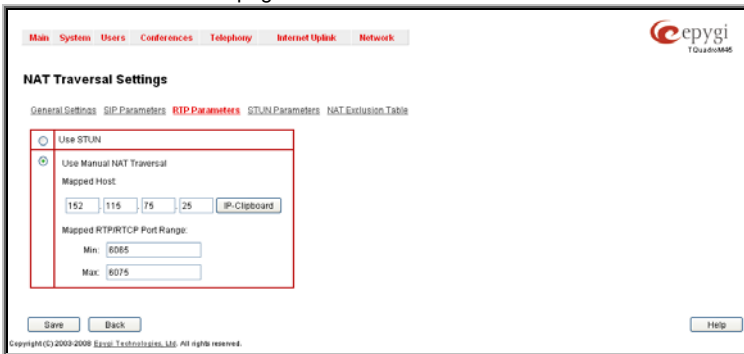


Fig. I-44: NAT Traversal Settings - RTP Parameters

- Enter the WAN IP address of the router into the **Mapped Host** text field. Set the **Mapped RTP/RTCP Port Range** according to the values specified on the router, in this case to **6000 (Min)** and **6199 (Max)**, respectively. Click the **Save** button to save the contents.

The Quadro will activate the settings and register the extensions on the Epygi SIP Server after a few minutes. You can verify the settings from the main **Quadro Management** menu under **Status** in the **SIP Registration Status** section.

## Appendix: Registering on Epygi's SIP Server

You may login directly to Epygi's SIP Server if you have registered your Quadro at [Epygi's Technical Support Center](#). If you have not registered with Epygi Technical Support, you cannot login to the Epygi SIP Server.

Login to the Epygi SIP Server at [www.epygi.com](http://www.epygi.com). Click on **SIP, Login here**. Use the same login name and password you used for Epygi Support for Customer Login.

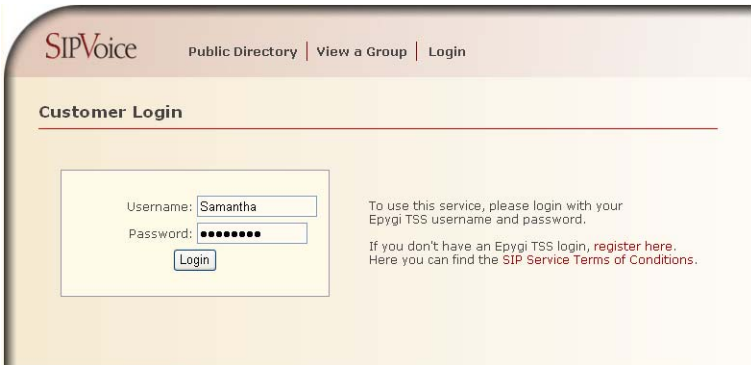


Fig. I-45: SIP Services Login page

Read the **SIP Service Terms and Conditions** and accept it to proceed. The displayed page now welcomes you and allows you to **Subscribe a New Extension**.

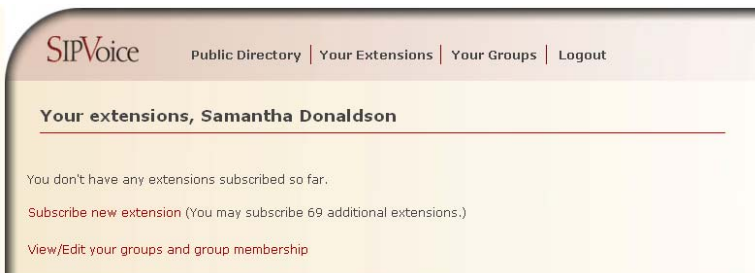


Fig. I-46: SIP Services Welcome page

Selecting **Subscribe a New Extension** leads you to a page where you can enter the user information as shown below. The **Extension Nr.** is the eight-digit SIP number assigned to your extension. The first five are fixed by the SIP Server and cannot be changed and the last three are user defined. Notice the check box to enable this extension to be shown in the Epygi **Public SIP Directory**.

**Please Note:** If you enable this extension to be shown in the Epygi **Public SIP Directory**, all information related to this extension will be published in the Public SIP Directory, which is accessible by anyone from the Internet. To maintain privacy, do not check this box.

**SIPVoice** Public Directory | Your Extensions | Your Groups | Logout

### Add new extension

Check here to make this entry available in the Epygi SIP phone directory:

Extension Nr. 30256-321

First Name Samantha

Last Name Donaldson

Location Seattle

Company OmniTec

Description Headquarters

email mantha.donaldson@omnitec.com

Authentication password

Retype Password

Assign to groups: none joined

[Back without save](#)

Fig. I-47: SIP Services Add New Extension page

The **Authentication password** validates the entry and must match the password entered on the Quadro later. Make sure to record the name, Authentication Password and SIP extension number for entry into the Quadro later.

**Save** will store the entered information and conclude the basic SIP registration. The following page then will be displayed:

**SIPVoice** Public Directory | Your Extensions | Your Groups | Logout

### Your extensions, Samantha Donaldson

EXT.#	STAT. ?	NAME	LOCATION	COMPANY	DESCRIPTION	EMAIL	PUB ?	GROUPS ?
<a href="#">edit</a> 30256321	unreg.	Samantha Donaldson	Seattle	OmniTec, Ltd.	Headquarters	yes	-	<a href="#">delete</a>

[Subscribe new extension](#) (You may subscribe 9 additional extensions.)

[View/Edit your groups and group membership](#)

Fig. I-48: SIP Services Your Extension page

This table shows **unreg.** in the **Stat.** column. This entry will change to **reg.** when the required settings in the Quadro are complete and the Quadro successfully registers on the SIP Server.

Repeat this for all four extensions on the Quadro and the Auto Attendant.



## Configuring Quadro Extensions

Once the SIP server has the created extensions with the user information, create these extensions in the Quadro devices. Once they are entered in the Quadro, they will be registered and can then be used.

Login into the Quadro and go to **Extensions Management**.

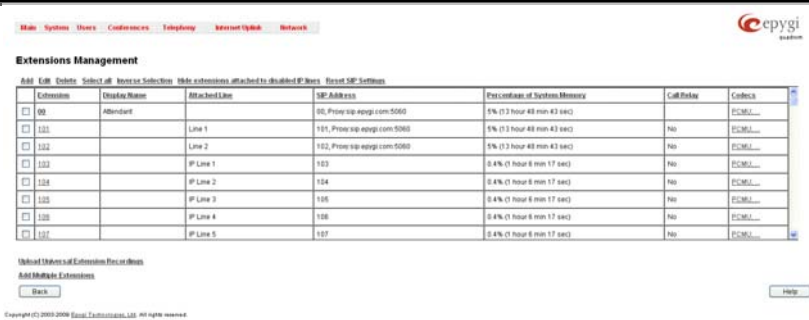


Fig. I-49: Extensions Management page

Select the first extension to change by clicking the appropriate checkbox and press **Edit** functional button. The **Extensions Management – Edit Entry** page will be displayed.

Go to the **General Settings** page and adjust the **Display Name** as needed.

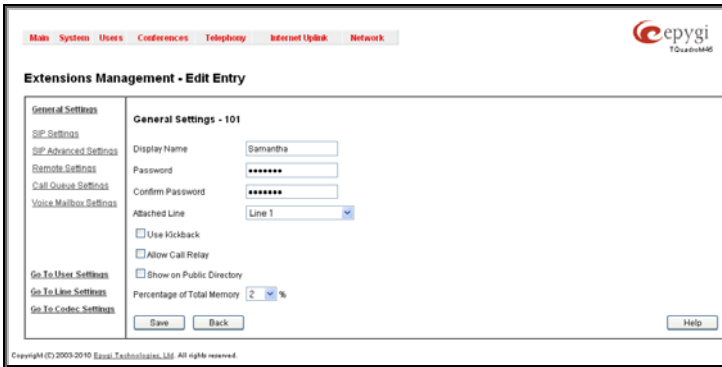


Fig. I-50: Extensions Management - Edit Entry – General Settings page

Go to the **SIP Settings** page to enter the **SIP Registration Settings** you received from the Epygi SIP server.

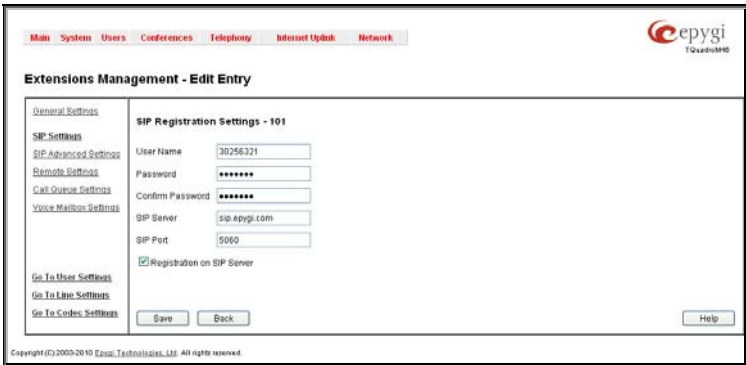


Fig. I-51: Extensions Management - Edit Entry – SIP Settings page

- Enter the SIP registration number displayed in the column **Ext#** into the text field **Registration User Name**.
- In the **Password** field, enter the password you specified when registering at the SIP server and confirm it in the field below.
- In **Registration SIP Server**, the selected SIP server address must be entered. If you use the Epygi SIP server, you may leave the default entry **sip.epygi.com**.
- Most SIP server providers, including Epygi, use port 5060 as the **Registration SIP Port**. You may leave the default entry as is.
- Select **Registration on SIP Server** if you want to establish and receive IP calls.
- Click the **Save** button to activate the settings.

Other settings of the extension might be also modified from **Extensions Management – Edit Entry** page (refer to the Manual II - Administrator’s Guide).

Your settings will be verified, then after a few seconds the **Extensions Management** page is updated with the changes as shown in the below example, Fig. I-52.

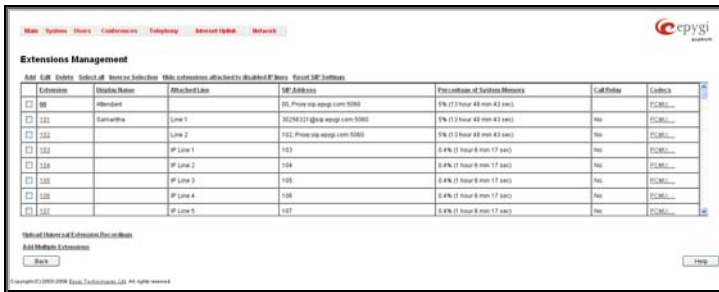


Fig. I-52: Extensions Management page

If you go back to Epygi’s SIP Server, you will find the value **reg.** for this number in the column **Stat. Reg.** This indicates that the Quadro has successfully registered the new number. If this does not happen after a few minutes, again verify the SIP Number and passwords.

## Appendix: Checking the Connections

If the system doesn't seem to be working properly, even when all the cables are connected properly, it may be helpful to **Start Network Diagnostics**: The WAN link, IP configuration, gateway, DNS server, and STUN-NAT will all be checked.

To start diagnostics, open the **System's** menu item **Diagnostics** and click **Start Network Diagnostics**.

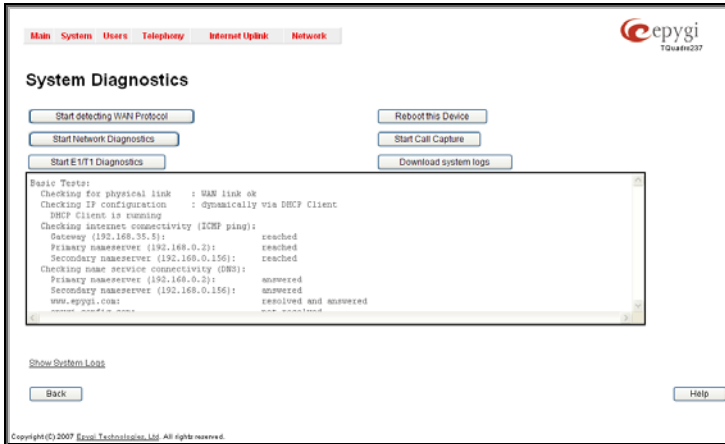


Fig. I-53: System Diagnostics - Network Diagnostics page

If the test passes, the output of the system may look as follows:

### Basic Tests:

```

Checking for physical link:           WAN link ok
Checking IP configuration:           dynamically via DHCP Client
DHCP Client is running

Checking internet connectivity (ICMP ping):
Gateway:           reached
Primary nameserver:   reached
Secondary nameserver: not configured
www.egypt.com:      reached

STUN Network Address Translation (NAT) Check:
External visible address: 212.126.210.179
Detected NAT type      : Restricted cone

Performing MTU Discovery:
preparing system
Sending UDP Datagram of size 1500      got answer
clean up

Largest usable MTU size is: 1500 Bytes
Test successful.
  
```

Depending on where the test is failing, the diagnostic can give some advice on how to solve the problem. See the example below of a failed test:

### Basic Tests:

```

Checking for physical link:           no WAN link
Please check the physical connection of the WAN interface. Cable not
plugged or broken?
Test failed.
  
```

If diagnostics are successful, but you are still unable to place a call to 899# then check the SIP registration status.

Open the SIP Registration Status page using the Quadro management **System** menu item **Status**. Besides the SIP registration information for the auto attendant and each connected extension, the **Detected Connection Type** is shown. If Quadro is placed behind a NAT router and the STUN is enabled, the detected connection type and the IP address of this router's WAN port are displayed.

**Quadro Status - SIP Registration Status**

Registration on SIP Servers

Extension	Ext. Name	Server	Registered	Registration Time
87	87506841	sip89.taltheusa.com	Yes	07-Sep-2007 16:01:16
10	223710	sip.epygi.loc	Yes	07-Sep-2007 15:10:23
00	223700	sip.epygi.loc	Yes	07-Sep-2007 15:10:23
20	223730	sip.epygi.loc	Yes	07-Sep-2007 15:10:23
27	223727	sip.epygi.loc	Yes	07-Sep-2007 15:10:23
28	223726	sip.epygi.loc	Yes	07-Sep-2007 15:10:23
25	223725	sip.epygi.loc	Yes	07-Sep-2007 15:10:23
24	223724	sip.epygi.loc	Yes	07-Sep-2007 15:10:23
23	223723	sip.epygi.loc	Yes	07-Sep-2007 15:10:23
22	223722	sip.epygi.loc	Yes	07-Sep-2007 15:10:23
21	223721	sip.epygi.loc	Yes	07-Sep-2007 15:10:23
20	223720	sip.epygi.loc	Yes	07-Sep-2007 15:10:23
17	223717	sip.epygi.loc	Yes	07-Sep-2007 15:10:23
14	223714	sip.epygi.loc	Yes	07-Sep-2007 15:10:23
13	223713	sip.epygi.loc	Yes	07-Sep-2007 15:10:23
12	223712	sip.epygi.loc	Yes	07-Sep-2007 15:10:23
11	223711	sip.epygi.loc	Yes	07-Sep-2007 15:10:23

Detected connection type: Full Cone NAT (external IP: 83.139.17.136:5132).

SIP Tunnels to Slave Devices

Tunnel Name	Slave Device ID	Slave Device Port	Registration State	Registration Date/Time
SIP_Tunnel_221215	192.168.25.221	5079	Registered	03/06/2007 - 12:50:12
SIP_Tunnel_156	192.168.75.166	5176	Registered	03/06/2007 - 12:38:05
SIP_Tunnel_05_70			Not Registered	N/A
SIP_Tunnel_mid15			Not Registered	N/A

SIP Tunnels to Master Devices

Tunnel Name	Master Device ID	Master Device Port	Registration State	Registration Date/Time
SIP_Tunnel_264	192.168.85.34	5081	Not Registered	N/A

Fig. I-54: SIP Registration Status page

Quadro cannot work behind your router if **Detected Connection Type** is one of the following:

- Unknown connection - unexpected error
- Symmetric NAT
- Symmetric Firewall
- Blocked UDP

If you get one of the above mentioned Detected Connection Types, either connect the Quadro in front of the router, or configure NAT traversal manually as explained in [Appendix: Configuring NAT Traversal](#).

If you are unable to resolve your problems, please send us a technical support request on the **Support** section of <http://www.epyqi.com/>. Please prepare a system log file and attach it to your request.

To download the system logs, open the **System Diagnostics** page **System** menu item **Diagnosics** and click **Download System Logs**.

## Appendix: Pin Assignment of E1/T1

Pin	Signal
1	RXRING
2	RXTIP
3	N.C.
4	TXRING
5	TXTIP
6	N.C.
7	N.C.
8	N.C.


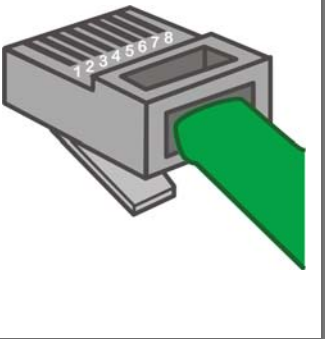


Fig. I-55: Pin Assignment of E1/T1

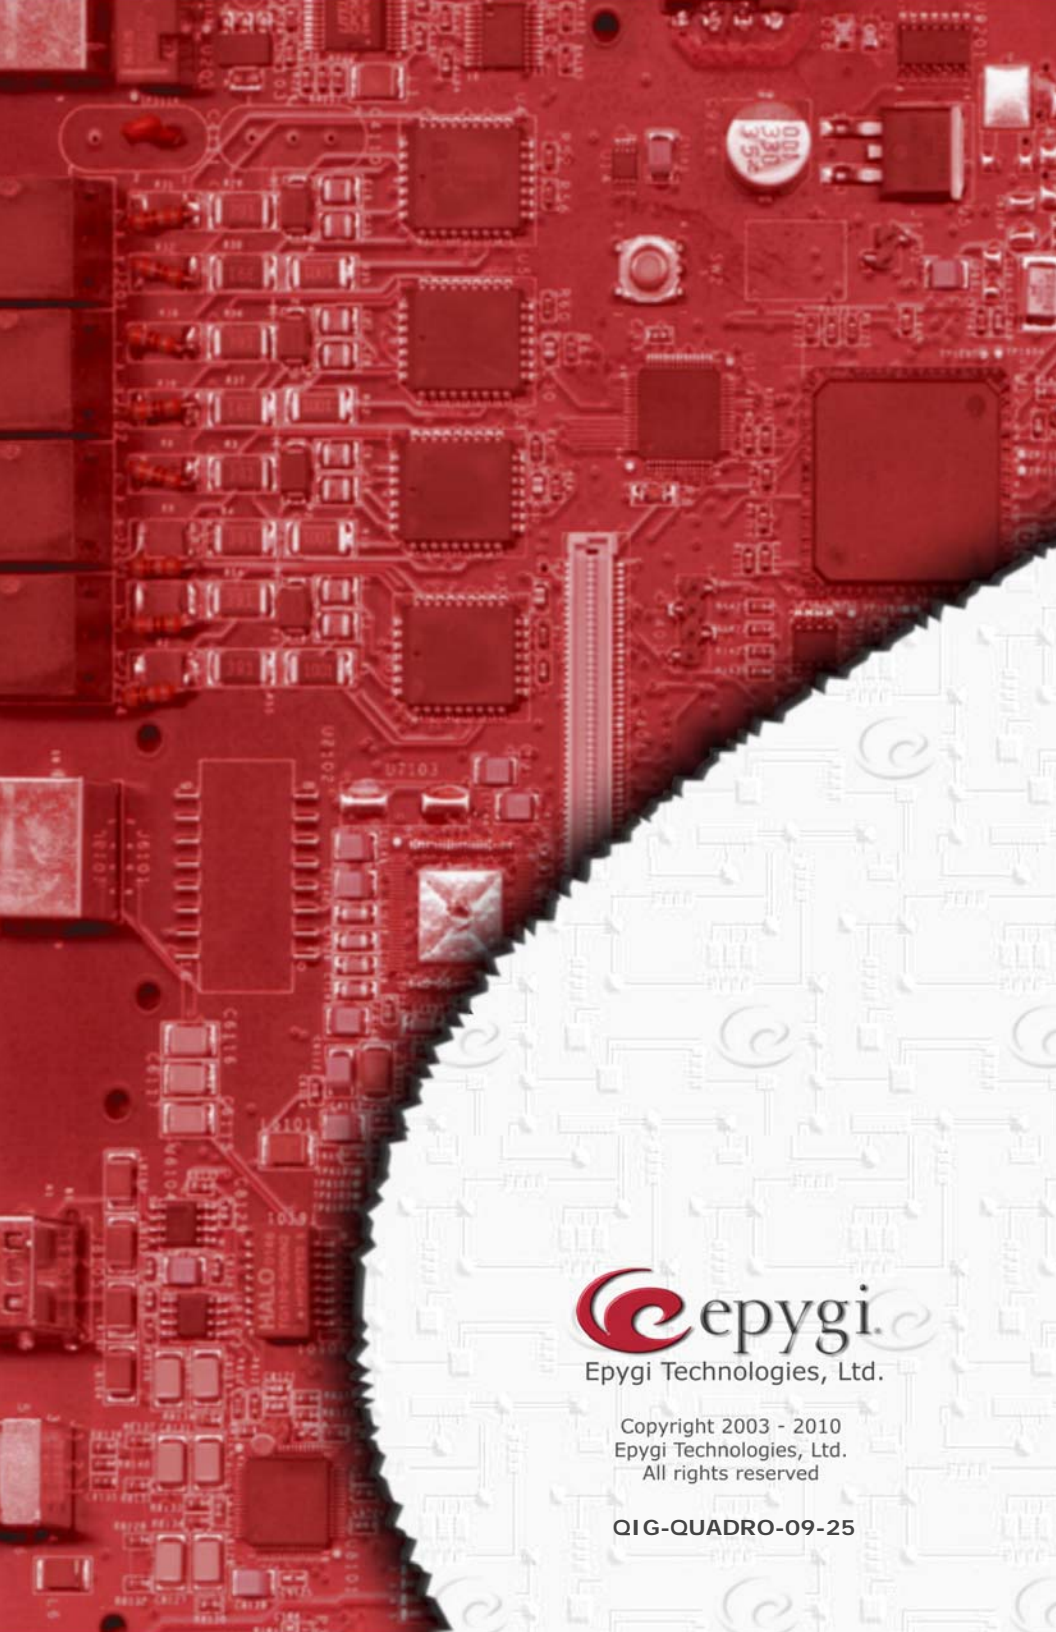

Epygi Technologies, Ltd.

Copyright 2003 - 2010  
Epygi Technologies, Ltd.  
All rights reserved

QIG-QUADRO-09-25