

V-G3100

USER MANUAL

Copyright @ 2010 Olive Telecommunication. All rights reserved.

Olive Telecommunication Private Ltd, Design and technology for the connected World. The Mobile Original Logos are registered trademarks of Olive Telecommunication.

The information contained in this User's Guide is written for Olive V-G3100. Olive Telecommunication reserves the right to make changes to any of the products described in this document and also reserves the right to revise this guide at any time without any prior notice.

This device may contain accessories, technology or software subjected to export laws.

Statement

The contents of this manual maybe different with the cell phone please refer to the menu according to the cell phone.

Olive Telecommunication reserves the right to revise this document or

withdraw it at any time without prior notice.

Olive Telecommunication
Private Limited


Contents

1	INSERTION AND REMOVAL OF SIM CARD	5
2	INSERTION AND REMOVAL OF THE MEMORY CARD .	6
3	INSTALLATION AND REMOVAL OF THE BATTERY	7
4	BATTERY CHARGING	9
5	INTRODUCTION TO THE MOBILE PHONE	11
6	KEYPAD INSTRUCTIONS	13
7	DIALING.....	15
8	INPUT METHODS.....	18
9	GUIDE TO MENU OPERATIONS	19

10	SAFETY PRECAUTIONS.....	28
11	CLEANING AND MAINTENANCE.....	30
12	TROUBLE SHOOTING	30

1 Insertion and Removal of SIM card


- n Turn off the phone; remove the battery and unplug other external power sources.
- n Insert the SIM card into the SIM slot as shown in the following picture.
- n When you need to remove the SIM card, please turn off the phone, remove the battery, then remove the SIM card

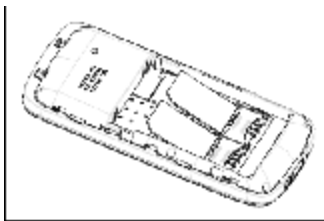

2 Insertion and Removal of the Memory Card

- n Turn off the phone; remove the battery and unplug other external power sources.
- n Put the Memory Card into the Memory Card slot.
- n When you need to remove the Memory card, please turn off the phone, remove


the battery and then remove the Memory card.

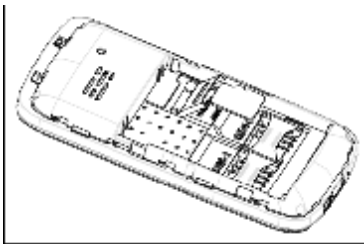

3 Installation and Removal of the Battery

n While removing the battery follow the following steps:

- Push the battery cover towards bottom and remove;
- Remove the battery from the mobile-phone;

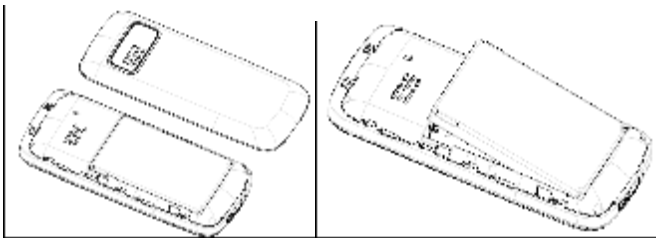

n When installing the battery follow the following steps:

- Push the battery to insert into the mobile-phone;
- Cover with the battery cover.
- Push the battery cover towards top.

Warning: You must turn off your mobile phone before removing the battery.

4 Battery Charging



- n Plug the charger into the electrical outlet.
- n Plug the charger connector into the charging interface of the phone.
- n When charging is complete, unplug the charger from the electrical outlet and the mobile phone.
- n Charging must be performed in a well-ventilated area with a temperature between -10°C and $+55^{\circ}\text{C}$.

- n If the mobile phone automatically shuts down, or indicates that the Battery is low you should immediately charge the battery.

5 Introduction to the Mobile Phone



1. Telephone receiver 2. Screen

3. Keypad

4. Earphone/charger jack

5. Speaker

6. Camera lens

7. Battery cover

8. Torch

9. DC jack

6 Keypad Instructions



1. Navigation keys (Left/Right/ Up/Down)
2. OK key
3. Left soft key
4. Dial key 2

5. Dial key 1

6. Number keys

/English/Hindi

Alphabets

7. * key

8. Right soft key

9. Music key

10. End key

11. # key

Key Pad Unlocking :

To unlock the keypad, press the Unlock key (Left soft key LSK) and then “#” key to unlock the keypad .

7 Dialing

7.1 Making Domestic Calls

Use the number keys to input number, then press the dial key^{1/2} to dial the call via SIM card ^{1/2}

You can input domestic calls in this order:

Area code phone number dial key

7.2 Calling Fixed Line Extensions (using Pause)

Some fixed phone extensions cannot be called directly. You must first go through the switchboard before you can dial the extension, then press * key to switch, as far as, the screen will display the letter "P"(Pause), then dial the extension number.

≧ You can input the switchboard number and the extension number in this order:

Area code > switchboard number > P > extension number > dial key

7.3 Calling Fixed Line Extensions (using wait)

Some fixed phone extensions cannot be called directly, you need to go through the switchboard, then dial extensions number. You must first go through the switchboard before you can dial the extension, then press * key to switch, as far as, the screen will display the letter "W" (Wait), then dial the extension number.

² You can input the switchboard number and the extension number in this order:

Area code > switchboard number > W > extension number > dial key

7.4 Making International calls

For making international calls you should press the * key to switch, until the international phone prefix "+" appears on the screen. This will allow you to make an international call in any country regardless of what the international call prefix is.

² You can input international calls in this order:

+ Country code > area code > telephone number > dial key

After entering the prefix, enter the country code and full number you wish to call.

7.5 Emergency Calls

Input the emergency number and then Dial keys 1/2 to make the emergency calls.

7.6 Receiving Calls

You can select the different mode to receive calls. If the earphones are already plugged in, you can use the button located on the earphones to pick up the phone. If it is inconvenient to press the button, then you can set the "Auto" as "On", in Head set profile customization, with the earphones plugged in, and the phone will automatically pick up the call. If you have set the "Any Key", you can pick up the call by pressing any key other than the End key and right soft key.

7.7 Ending a Call

You can press the End key or right soft key to refuse an incoming call. During a call you can press the End key to end a call. You can also cancel a call you have just dialed by pressing the End key or right soft key.

8 Input Methods

8.1 General outline

This mobile phone provides various input methods as Multitap ABC , Multitap abc, Numeric, Multitap Hindi.

8.2 Key board values

Generally the Left soft Key or OK key indicates confirmation; the right soft key is to return or eliminate.

Navigation keys (up/down and left/right keys): Generally used to move the cursor for inputting.

key: to switch between different input methods.

Number keys from 0 to 9: Can be used to input numeric numbers, English letters or Hindi letters in accordance with the input method selected

* key: to show the symbol interface.

Up navigation key: Press and hold this key at the idle screen to on/off torch.

9 Guide to Menu Operations

All function options about the mobile phone are listed below with brief descriptions

Phonebook	
Search contact	To search phonebook entry by name.

Add new contact	To add a new phonebook entry.
Copy all	To copy the phonebook entries in your SIM card and your mobile phone.
Delete	To delete the phonebook entries from your SIM card ^{1/2} and your mobile phone. Or to delete the contacts one by one.
Caller groups	You can select a group in the list of the caller group, view and edit the Caller Group Detail.
Settings	To perform the settings related to phonebook including the memory

	status, preferred storage, Fields, MY vcard, vCard version.
Phone Book Backup	To import and export the Phonebook entries from phone.
Messages	
Write Message	To create a new message
Inbox	To view the received message.
Outbox	to view the message saved in the SIM card and owner phone or saved & sent message
Templates	To use the predefined text as a part of your sms You can view, edit or remove

	template messages.
SMS settings	To perform the setting related to SMS
Voice mail server	To automatically direct incoming calls to the voice mail centre when you cannot accept a call so that the caller can leave a message on the voice mail system of service network.
Broadcast message	To receive public messages on all different subjects from your network operator
Call History	
SIM1/2 Call history	To view the sim1/2 missed, dialled,

	received call log list, call time and cost, SMS counter, and to delete SIM1/2 call logs
User Profiles	
To activate and customize the desired profile as General, Meeting, Outdoor, Indoor, Headset according to choice and environment	
<ul style="list-style-type: none">• To activate Silent profile long press # key.	
Multimedia	
Camera	To take pictures with the phone camera and then save them on your memory card,

Image viewer	To view the saved image.
Audio Player	To play the music with the specific format
Sound recorder	To record the sound.
FM Radio	
To receive FM broadcast program. Note: please plug in earphone before using it	
Settings	
Dual SIM settings	
To set the standby mode as the dual SIM open, Only SIM1 open, Only SIM2 open, Flight mode.	
Phone Setup	

To perform the setting related to mobile phone such as Time and date, Schedule Power On/Off, Language, Pref.input methods, Display Characteristics, Dedicated key.

General call settings

To perform the call settings including, call waiting, call divert, call barring, black list, Auto redial, Speed dial, Call time display, call time reminder

Network Setup

To perform the setting related to SIM1/2 network.

Security Setup






To perform the setting related to Security. Including SIM lock fixed dial, change password, phone lock, auto keypad lock

the password for phone lock is 0000	
Restore Factory Settings	
To restore the relevant settings to the manufacturer's settings the password is 0000	
Shortcuts	
To add, edit, delete, delete all, disable the shortcuts, or change the order of shortcuts.	
Organizer	
Calendar	To View the required date and day you wish to view.
Alarm	To use the alarm service available with your mobile phone







Calculator	To provide a calculator with 4 basic functions to facilitate simple calculations.
Unit converter	To convert units with available conversion options
Games	You can play the built-in games and change the game settings.
Services	To use the SIM Tool Kit services.
Torch	Use Torch ON/OFF function .
File manager	
	To manage the space of memory card to perform the corresponding operation on the selected file or folder.

10 Safety Precautions

Before using the phone, please read the safety precautions carefully and let your children know these, so that you can use your phone correctly and safely.

	Do not switch on your phone when phone use is prohibited or when phone use may cause interference or danger.
	Do not use your phone while driving.
	Follow the rules or regulations in hospitals and health care facilities. Switch off your phone near medical apparatus.
	Switch off your phone in an aircraft. The phone may cause interference to control signals of the aircraft.
	Switch off your phone near high-precision electronic devices. The phone may affect the performance of these devices.

User's Manual for Olive V-G3100

	Do not attempt to disassemble your phone or its accessories. Only qualified personnel are allowed to service or repair the phone.
	Do not place your phone or its accessories in containers with strong electromagnetic field.
	Do not place magnetic storage media near your phone. Radiation from the phone may delete the information stored on them.
	Do not put your phone in a high-temperature place or use it in a place with flammable gas such as a gas station.
	Keep your phone and its accessories away from children. Do not allow children to use your phone without guidance.
	Use approved batteries and chargers only, to avoid explosion.

11 Cleaning and Maintenance

- n The mobile phone, battery and charger are not water resistant. Please do not use them in the bathroom or other excessively moist areas and likewise avoid allowing them to get wet in the rain.
- n Use a soft, dry cloth to clean the mobile phone, battery and charger.
- n Please do not use alcohol, thinner, benzene or other solvents to wipe the mobile phone. A dirty outlet will cause poor electrical contact, loss of power and even inability to recharge. Please clean regularly.

12 Trouble shooting

If anything unusual occurs while using your mobile phone, please refer to the following table.

Frequently Occurring Problems	Cause	How to Fix
Poor reception	Using the mobile phone in an area with poor reception such as near tall buildings or in a basement where radio waves cannot be transmitted.	Try to avoid.

	Using the mobile phone when the network is busy, such as during rush hour, when the lines are full making it impossible to get through.	Try to avoid.
	Related to the distance from the base station built by the network.	Network provider dependant

Echo or noise	Caused by poor network relay, a regional problem.	End the call and redial, if the relay is changed then the line may be better.
	Some calling regions have poor lines.	
Shortening of the standby time	Standby time is also related to the network system.	Network provider dependant

	Batteries need to be replaced	Replace the batteries
--	----------------------------------	--------------------------

	<p>When you cannot get a signal, the phone will continue to transmit in order to find a base station, thereby expending large amount of battery power, will cause the standby time to decrease.</p>	<p>Please move to an area with a strong signal.</p>
<p>Unable to</p>	<p>The battery is</p>	<p>Look at</p>

turn on the phone	empty.	the remaining battery power or recharge.
SIM card malfunction	SIM card is damaged.	Contact your network service provider.
	SIM card is not properly inserted.	Confirm SIM card is properly inserted.

	There is a foreign substance on the metal surface of the SIM card.	Use a clean cloth to wipe off the metal contact point of the SIM card.
Unable to connect with the network	Expired SIM card	Contact your network provider.

	Outside the GSM service area	Consult your network provider on the service area.
	Poor signal.	Please move to a place with a better signal and try again.
Unable to make a call	Using the call bar function	Cancel the call bar function.

	Using the fixed dialling function.	Cancel the fixed call setting.
Unable to charge	Battery or charger is damaged	Replace the battery or charger.
	Recharging in the environment of less than -10° or higher than 55°.	Change the charging environment.

	Poor contact	Check if the plug is properly connected
Unable to add new phone book entries	The storage space of the phone book is full	Delete a portion of the phone number entries
Unable to set certain functions	Your network provider does not support this function or you	Contact your network provider.

	have not applied for it.	
--	-----------------------------	--