


ESP Switch

- ON** - Enables Electronic Shock Protection
120 sec. MP3/WMA CDs,
40 sec. Audio CDs
- OFF** - 10 sec. Audio CDs

40 sec - ESP - 10 sec

Battery Door
Slide to remove.

Release Latch
Slide to open RioVolt.

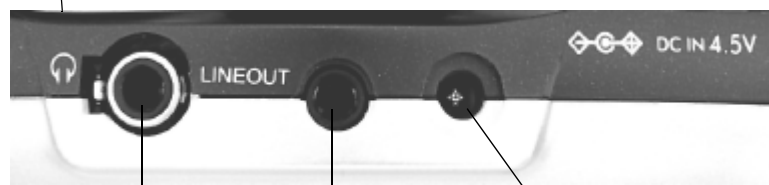

Headphones & Remote Port **Speakers or Car Adapter Port** **Power Port**




Remote Control

Volume Buttons

- Decrease
- + Increase

EQ

- Normal
- Rock
- Jazz
- Classical
- Ultra Bass

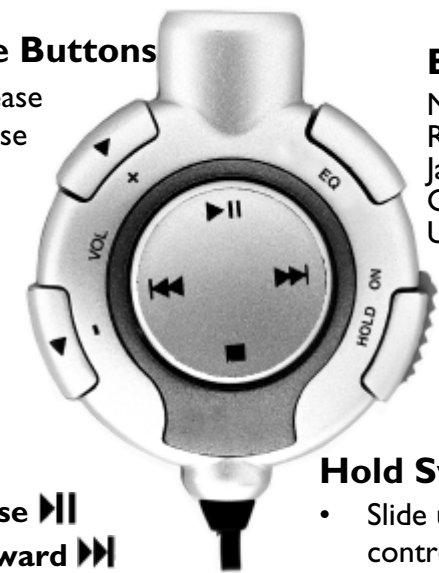

Joypad

- Play/Pause** ⏮ ⏭
- Fast Forward** ⏭
- Rewind** ⏮
- Stop** ■

Hold Switch

- Slide up to lock controls.
- Slide down to unlock controls.

To Install Software Provided on the CD

PC

1. Place the **RioVolt Installation CD** into your CD-ROM drive.
If the CD does not autorun, click **Start, Run**, type `D:\setup32.exe`, click **OK**.
2. When the RioVolt splash screen appears, click **Install**.
3. Click on the program you wish to install and follow the instructions that appear on the screen to finish.

Mac

1. Place the **RioVolt Installation CD** into your CD-ROM drive.
2. Double-click the **RioVolt CD icon** that appears on your desktop.
3. Double-click **Install**.
4. Click the **Install** button on the screen.
5. Then click on the program you wish to install and follow the instructions that appear on the screen to finish.

Copyright/Trademark

© 2001 SONICblue, Inc. All Rights Reserved.

SONICblue, Inc. does not assume any responsibility for errors or omissions in this document or make any commitment to update the information contained herein.

Rio® is a registered trademark of RioPort.com, Inc. in the United States and/or other countries and is used under license. Microsoft Windows Media and the Windows Logo are trademarks or registered trademarks of Microsoft Corporation in the United States and/or other countries. All other brand and product names are trademarks of their respective companies or organizations. RealNetworks, RealAudio, RealPlayer, WebActive, and the RN logo are registered trademarks of RealNetworks, Inc.

Adaptec, the Adaptec logo, the Adaptec tag line, and AHA are trademarks of Adaptec, Inc. which may be registered in some jurisdictions.

All other product names may be trademarks of the companies with which they are associated.

Package Contents

- RioVolt™
- 8 Function Remote Control
- RioVolt™ Carrying Case
- Headphones
- AC Adapter
- 2 AA Alkaline Batteries
- Getting Started Poster
- RioVolt™ Installation CD
 - RioVolt™ User Guide
 - Frequently Asked Question Document (FAQ)
 - Real Jukebox®
 - SoundJam®
 - Adobe Acrobat®
- Adaptec® Easy CD Creator®

System Requirements (For included software only)

- Intel® Pentium® 200 MHz MMX or higher CPU
- 32MB RAM (PC), 32MB RAM (Mac)
- 30MB or more free hard drive space
- Windows 95, 98, 98SE, ME, NT 4.0 w/Service Pack 4.0, 2000, or Mac OS 8.5.1 or higher
- Internet connection and web browser

System Recommendations

- CD-ROM Writer (RW)

WARNING

TO REDUCE THE CHANCE OF SHOCK OR INJURY, DO NOT USE or OPERATE THIS DEVICE IN OR NEAR WATER OR WET LOCATIONS

CAUTION

RISK OF EXPLOSION, DAMAGE OR BATTERY LEAKAGE IS POSSIBLE IF REPLACED INCORRECTLY OR BY AN INCORRECT TYPE. DISPOSE OF USED BATTERIES ACCORDING TO INSTRUCTIONS OR LOCAL LAWS. Use only certified and approved Batteries and AC Adapters as those specified in the product User Guide.

Use of headphones while operating a vehicle is not recommended and is unlawful in some states and areas. Be careful and attentive while driving. Stop operation of the player if you find it disruptive or distracting while operating any type of equipment. Listening to music at full power over extended periods of time can be damaging to the hearing of the user. Class I Laser Invisible laser radiation when open and interlocks defeated, avoid exposure to beam.