

BRIK^{II}

Dear User,
Thank you for purchasing BRIK **AP-24H**.
Please read this User Manual before operating the machine to ensure its best performance and your safety.

Instructions:

Connecting Source

- Digital format music, connect by PC, using USB2.0 (type B) on the rear panel.
And please select source to USB before playing music.
- Analog format music like CD Player , using RCA cables on the rear panel.
And please select source to RCA before playing music.

Connecting Headphone

- Using 3.5Ø jack on the front panel x 1.

Connecting Power

This unit is supplied with a power supply suitable for your country's mains supply. Check the label before connecting to ensure compliance with the mains rating in your house. Connect the low voltage plug from the power supply to the **12V In** socket before connecting the power supply to the mains, and then press power button on the front panel to turn on the machine.

** For more information, please check BRIK website
WWW.BRIK-AUDIO.COM

Specifications:

| | |
|---|--|
| INPUT OPTION | RCA Line Input x 1 USB 2.0 interface Input x 1 (type B) |
| POWER OUTPUT | 32ohm x 2 total 500mW |
| SAMPLE RATE SUPPORT (Headphone analoge output) | 44.1Khz, 48Khz, 88.2Khz, 96Khz, 176.4Khz, 192Khz |
| LOAD IMPEDANCE | 32~300 ohm |
| DISTORTION | 0.05 % |
| 2 points EQ control S/N | 125 ~ 10K Hz 80 dB |
| DIMENSION | W 140 x H 48 x D160 mm |
| WEIGHT | 1200 g |

NOTE

- BRIK **AP-24H** operates in accordance with its specifications within environment temperature 40 degrees Celsius.

WARNING

- Never open the case of this item as this will invalidate the guarantee. There are no user adjustments inside. Please refer all service work to an authorized BRIK agent.

- This item shall not be exposed to dripping or splashing liquid, and that no objects filled with liquids, such as vases, shall be placed on the apparatus.

