 


3 FULL HD CAMCORDER **with Touch Screen** **DVC-380**

USER MANUAL

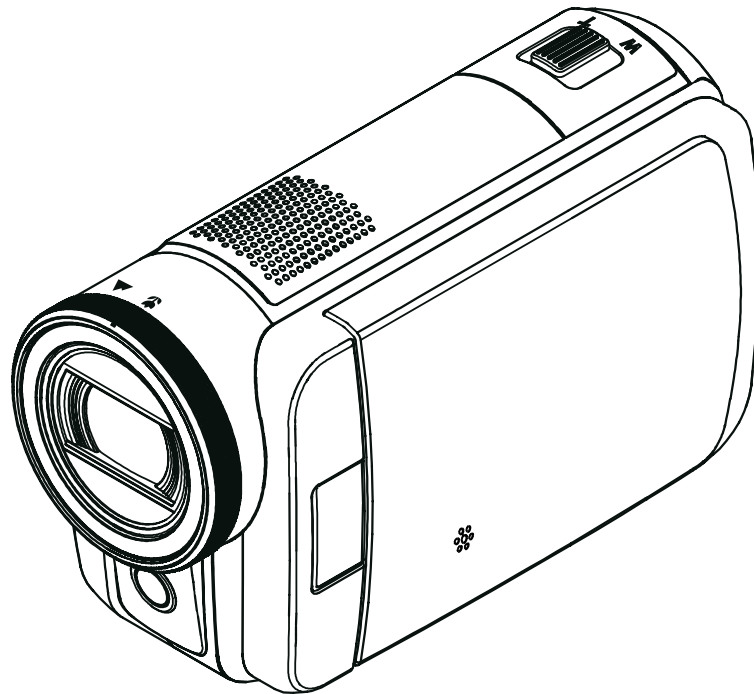

High Definition Digital Video Camera



User's Manual

Read This Before Using the Camera

SAFETY INSTRUCTIONS

- Do not drop, puncture or disassemble the camera.
- Use the camera with care. Rough handling may damage the internal components.
- Do not expose the camera to high temperature. Avoid contact with water.
- Please notice that the camera body may become warm when operating it for an extended period.
- Test for proper operation before using the camera.
- Only use accessories supplied by the manufacturer.
- Use only the type of battery that came with your camera.
- Remove the battery if the camera is not going to be used for long periods.

Product Information

- Designs and specifications of the camera are subject to change without notice. This includes primary product specifications, software, and this user's manual.
- This User's Manual is a general reference guide for the camera.
- The illustrations in this manual may not be the same as the actual design of your camera and those you see on the LCD screen.

Contents

Read This Before Using the Camera	2
Section 1 Getting to Know Your Camera.....	4
Section 2 Getting Started.....	7
Section 3 Enjoying the Record Mode	10
Section 4 Enjoying the Playback Mode	21
Section 5 Setting Your Camera	26
Section 6 Viewing Photos and Videos on TV.....	30
Section 7 Viewing Video & Photo on PC	31
Section 8 Uploading Files to Internet	32
Section 9 Specifications and System Requirements	35
Section 10 Troubleshooting	37
Section 11 Using Remote Control	38
Section 12 Warranty Statement	40
Section 13 Copyright	42

Section 1

Getting to Know Your Camera

Overview

The camera equipped a 5 Mega Pixel sensor that can take H.264 format videos. The H.264 technology allows for extended video recording with less memory. High quality images up to 16 mega-pixels can also be delivered smoothly. With a color LCD monitor, you can view and examine the videos and photos easily.

The 3" LCD touch panel is an ideal platform for you to operate your camera. The menu options are accessible with your finger. With the touch panel, you can select the options directly and quickly.

The camera also features video recording at an HD resolution of 1920x1080. You can also connect it to an HDTV via an HDMI cable, and easily playback the recorded high-definition videos on the wide screen HDTV.

Moreover, the camera has an advanced uploading feature. With the exclusive built-in **Internet Direct** application, you can upload the videos captured by the camera to the web site more effortlessly .

ISO sensitivity and color balance can either be adjusted automatically or changed manually. A 16x digital zoom helps you to control over the videos and photos you take.

The varied effect options, such as Time Lapse and Slow Motion, make recording more fun.

The built-in memory allows you to take photos and to record videos without a memory card. The memory card slot allows users to increase the storage capacity.



Note

 
Partial memory of the built-in memory is used for the camera's Firmware code and software.

Standard Accessories


Unpack the package and make sure all standard accessories listed are included:

- Camera
- USB Cable
- AV Cable
- HDMI Cable
- Adaptor
- Lithium-ion Rechargeable Battery
- CD-ROM (Software, User's Manual)
- Cloth Bag
- Remote Control


Front View

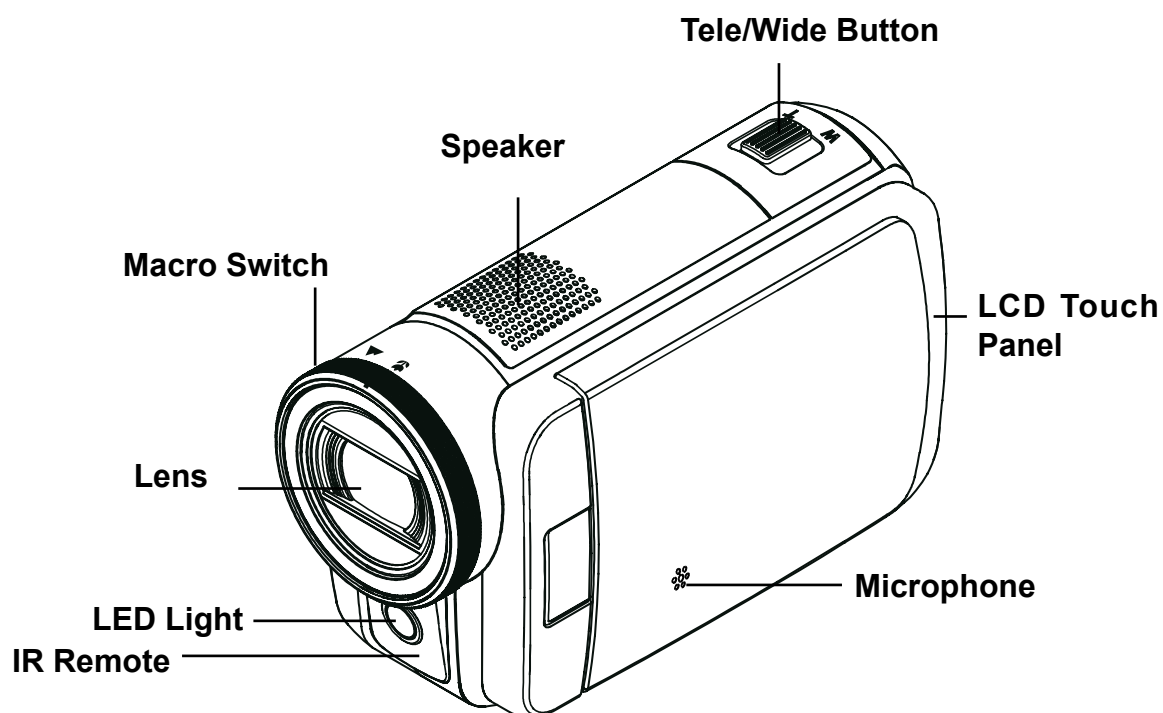


Rear View

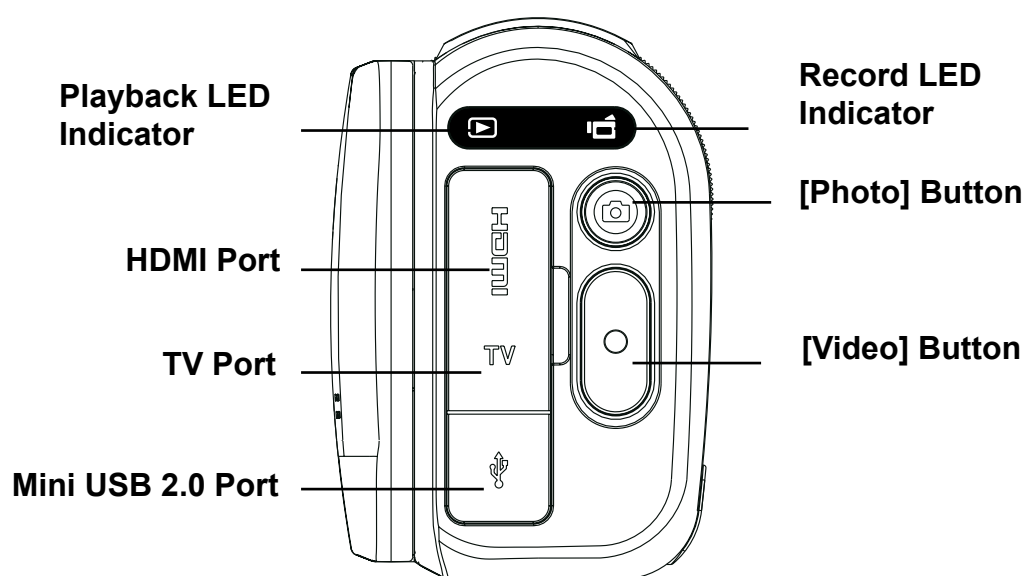 

Side View

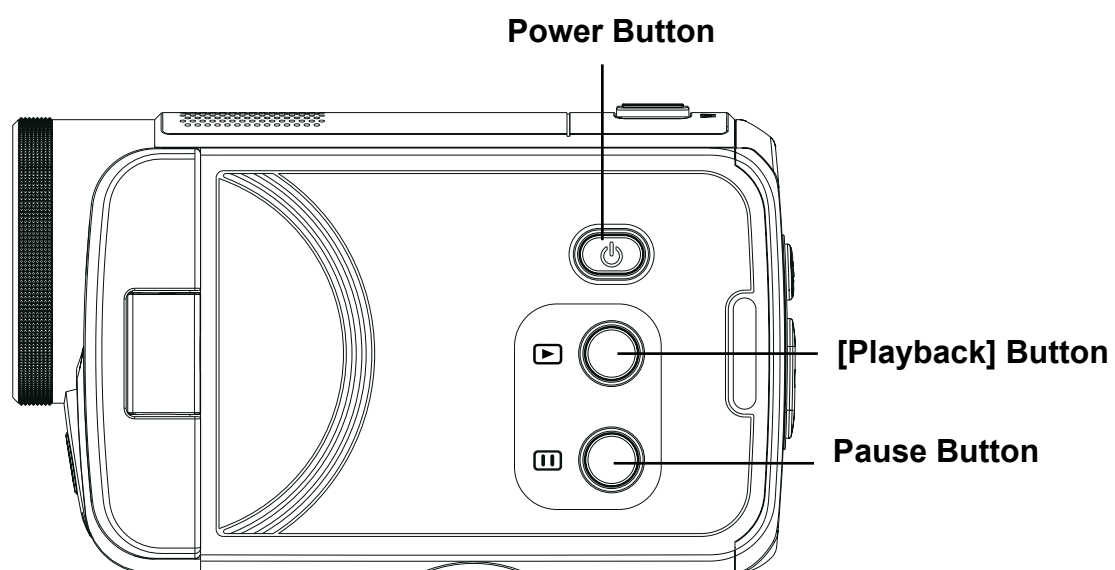 

Bottom View

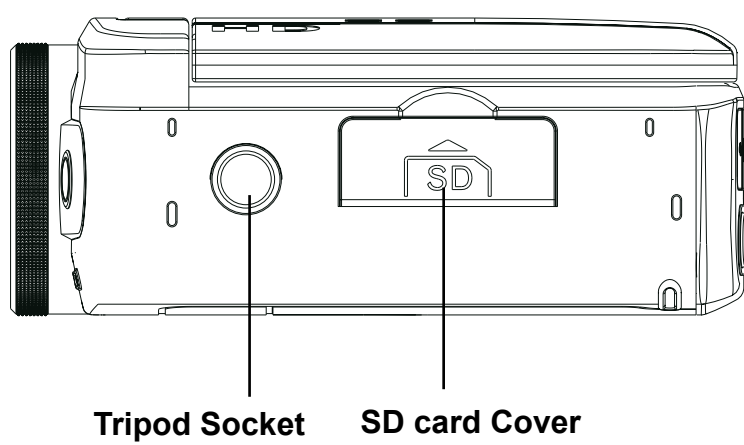 


Section 2

Getting Started

Open the battery cover

 
- Follow ❶ to push and eject the battery cover.
Follow ❷ to lift the cover.

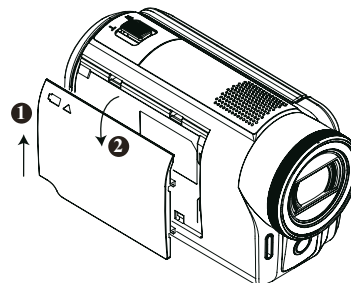

Loading the Battery

Before using the camera, you must load the supplied Lithium-ion rechargeable battery.

 1. Insert the battery according to the correct polarity marks (+ or -).
2. Close the battery cover firmly.

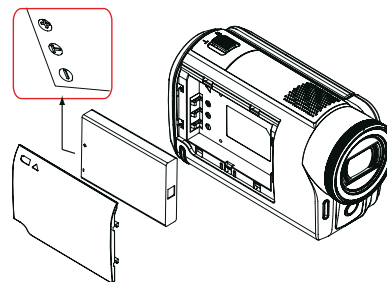


Charge your battery

You must use the supplied AC charger or the USB cable.

The camera must be turned OFF; blinking light confirms charging, and the light becomes constant when the charging has been completed.

 
In AC charging Mode, the light will turn itself off automatically after 3~5 minutes . The full charge time is about 3 to 4 hours. (Actual charging time may vary. It depends on the battery conditions.)

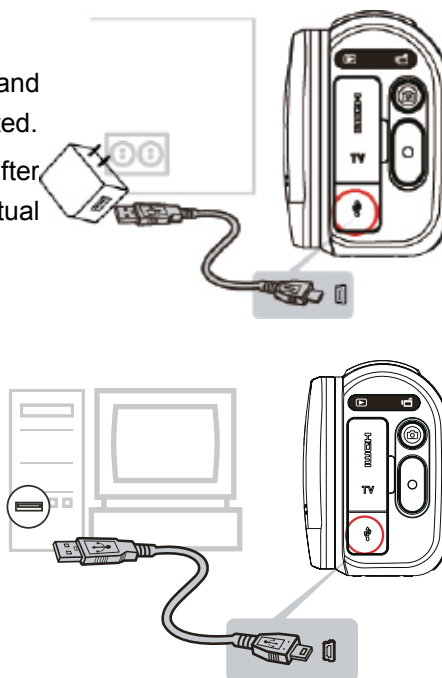

Inserting and Removing an SD Card (Optional)


The camera comes with an internal memory which allows you to store photos and videos. You can expand the memory capacity by using an optional SD memory card.

 1. Insert the memory card into the slot. Please refer to the figure on the right side.
2. To remove an installed SD card, press the card inwards to release it.
3. When the card pops out, gently remove it from its slot.
4. Recommended memory capacity: 1GB or above.

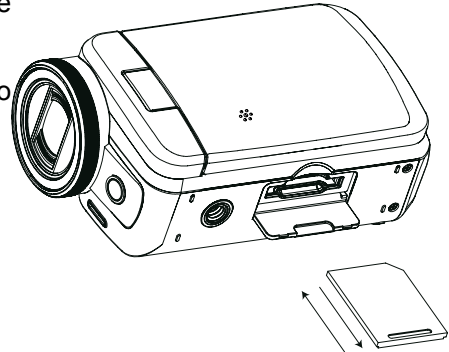

Note

 - When a memory card is fitted, videos/photos are saved on the card rather than on the built-in memory.
- *Protecting Data on an SD Card: SD Card is read-only when it is locked. No photos or videos can be recorded when the SD card is locked. Make sure the lock is on the writeable position before recording any media.*

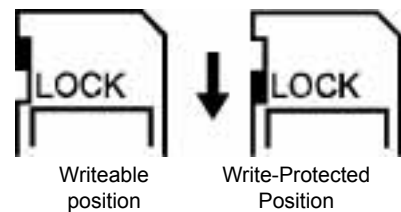

Turning the Camera On

- To turn on the camera:
 1. Flip out the LCD panel; the camera will turn on automatically.
 2. Or press [Power Button] for one second to turn it on.

Configuring the Initial Date and Time Setup

- The time setting screen appears to allow you to setup date and time:

Operation	Display Screen
1. Touch Year, Month, Day, Hour, Minute, and AM/PM to set. 2. Adjust the numeric value by touching  /  3. Touch the [OK] icon to validate the setting. 4. Touch the Exit icon () to exit.	

Getting Started

- To record video: Press [Video Button] to record video. To stop recording, press it again.
- To pause recording: Press [Pause Button] to pause recording. To continue the recording, press it again.
- To take a photo: Press [Photo Button] to take photo.
- To view stored videos and photos: Press [Playback Button] or touch  on the screen to switch to the Playback mode.

Turning the Camera Off

- To turn off the camera: You can either press [Power Button] for one second, or you can place the LCD panel back to its original position.

Section 3

Enjoying the Record Mode

Button Function

	Video Button: 1. Press to take video. 2. To stop recording, press it again.
	Photo Button: 1. Press to take photo.
	Tele Button: 1. Zoom in. Wide Button 1. Zoom out.
	Pause Button: 1. Press to pause the recording. 2. To continue the recording, press it again.
	Playback Button: 1. Switch to the Playback Mode. 2. For quick review, press it after recording.
	Power Button: 1. Press down for one second to turn on or turn off the camera.
	Macro Switch: 1. Switch between Macro Mode and Normal Mode.

LCD Monitor Information

The indicators shown below may display on LCD when video and photo are recorded:



(1)	Video Resolution	
		Full HD (1080p 30 fps)
		HD (720p 60 fps)
		HD (720p 30 fps)
		VGA (640X480)
		Slow Motion (Record video at QVGA resolution.)
	Photo Resolution	
		16MP
		5MP
		3MP
(2)	00:05:30	Recording time of the video that can still be taken at current resolution
	1000	Number of images that can still be taken at current resolution
(3)		Pre-Record Mode (Video Recording Only)
		Time Lapse (Video Recording Only)
(4)	White Balance	
		Daylight
		Fluorescent
		Tungsten

(5)	Scene	
		Skin
		Night
		Backlight
		Black/White
		Classic
		Negative
(6)		Self-timer enabled
(7)		Motion Detection (Video Recording Only)
(8)		Menu On
(9)		Playback Mode On
(10)		Digital Light On
		Light On
		Light Off
(11)		Stabilization (Video Recording Only)
(12)		Macro Focusing On
(13)		Date Printing On (Photo Only)
(14)		SD Card Inserted
(15)		Battery: full power
		Battery: medium power
		Battery: low power
		Battery: empty power
		DC power mode
(16)		Zoom meter: 1X~16X (16X Digital zoom)



Note

- Stabilization, Pre-record, and Slow Motion functions can not be used simultaneously.
- Pre-Record, Motion Detect, Slow Motion, and Time Lapse functions can not be used simultaneously.

Video Recording

- Press [Video Button] to start recording. When a video is being recorded, a time indicator will display on the LCD monitor ( 00:00:25). To stop recording, press it again.
- To pause recording: Press [Pause Button] to pause recording ( 00:00:36). To continue the recording, press it again.
- Press [Playback Button] or touch  on the screen to view the recorded video.
- Four resolution settings are available:

Video Quality	
	Full HD (1080p 30 fps)
	HD (720p 60 fps)
	HD (720p 30 fps)
	VGA (640X480)



Note

- Pause function can not be used when Time Lapse function is activated.

Photo Capturing

- Press [Photo Button] to take photo.
- Press [Playback Button] or touch  on the screen to view the photo.
- Three resolution settings are available:

Image Quality	
	16 Mega Pixels
	5 Mega Pixels
	3 Mega Pixels

Taking Close up Photo/Video

- Slide the macro switch to change the focus range for different distances of objects.
 1. Slide the macro switch to Macro ().
 2. Press [Video Button] to start recording or press [Photo Button] to take photo.
- In Macro Mode, the macro icon() will appear on the LCD monitor.



Note

Remember to turn the macro switch back to Normal () when you are not taking close-up photo.

Using Zoom Function

- The zoom magnifies images when recording video or taking photo.
 1. To zoom in/out, press the Tele/Wide Button.
 2. It can be set from 1X~16X (16X Digital zoom)

Using Light Function


- The setting allows you to extend the brightness of the objects that are dark or in the shadow. Using the on-screen button to change the settings.
 - Digital Light On** (): To extend the dynamic range for backlight and high contrast sense so that the objects will be brighter and clearer.
 - Light On** (): The light will be turned on and keep providing light.
 - Light Off** (): The light is turned off.
 - Press [Video Button] to start recording or press [Photo Button] to take photo.

Options for Record Menu

Video	Photo	Effect	Setting*
			
- Resolution - Stabilization - Motion Detect - Slow Motion - Time Lapse - Pre-record	- Resolution - ISO - Self-Timer	- Light - Scene - WB(White Balance) - Face Tracking	- Sound - TV - Language - Time Setting - Date Printing - Format - Default Setting

* Please refer to Section 5 for the detailed information about [Setting].

 Operations for Record Mode

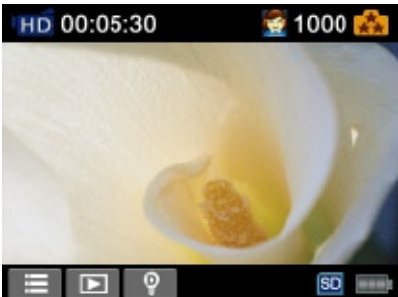Operation	Display Screen
1. Touch  on the screen in Record Mode. The menu will show on the screen.	
2. Touch the option icons on the screen lightly with your finger. The options are Video, Photo, Effect, and Setting. 3. The option menu will pop up on the screen. 4. Touch to select the specific option you want to adjust. (The selected option will be highlighted.) 5. Touch the Exit icon () to exit.	

Video

Operation	Display Screen
1. Touch  on the screen in Record Mode. The menu will show on the screen. 2. Touch the [Video] icon on the screen. Submenu of Video will pop out on the screen. 3. The Video submenu contains 6 options-- Resolution, Stabilization, Motion Detect, Slow Motion, Time Lapse, and Pre-record --for you to adjust the camera settings.	



Video Resolution

Four resolution settings are available.

- **FHD (1080p 30)** (Full HD (1080p30)):Record videos at 1920x1080p 30 fps resolution.
- **HD+ (720p 60)**:Record videos at 1280x720p 60 fps resolution.
- **HD (720p 30)**:Record videos at 1280x720p 30 fps resolution.
- **VGA (640X480)**: Record videos at 640x480p 30 fps resolution.

Operation	Display Screen
1. In the Video menu, touch the [Resolution] icon on the screen. 2. Touch to select the desired option. 3. Touch the Exit icon () to exit.	



Stabilization

Record with an effect of reducing camera shake to result in more stable video.

Operation	Display Screen
1. In the Video menu, touch the [Stabilization] icon on the screen. 2. Touch to select [On] or [Off] ( ). 3. Touch the Exit icon () to exit.	



Motion Detection

Record videos automatically when the camera detects a movement.

Operation	Display Screen
1. In the Video menu, touch the [Motion Detect] icon on the screen. 2. Touch to select [On] or [Off] ( ). 3. Touch the Exit icon () to exit. 4. Camera will start to record video automatically if it detects a movement. Stop recording if it does not detect a movement.	



Slow Motion

Record videos with slow motion effect. When the video is played, the playback time will be longer than the actual recording time.

Operation	Display Screen
1. In the Video menu, touch the [Slow Motion] icon on the screen. 2. Touch to select [On] or [Off] ( ). 3. Touch the Exit icon () to exit.	



Time Lapse

Record still images at specific intervals you can set and play them as one video file.

- **Off:** Disable Time Lapse.
- **1 Second.:** Record one frame per second.
- **3 Seconds:** Record one frame every 3 seconds.
- **5 Seconds:** Record one frame every 5 seconds.

Operation	Display Screen
1. In the Video menu, touch the [Time Lapse] icon on the screen. 2. Touch to select the desired option. 3. Touch the Exit icon () to exit.	



Note

- Pause function can not be used when Time Lapse function is activated.



Pre-record

The Pre-record function ensures that you will not miss any critical recording opportunities. The video is recorded 1 second more before the [Video Button] is pressed.

Operation	Display Screen
1. In the Video menu, touch the [Pre-record] icon on the screen. 2. Touch to select [On] or [Off] ( ). 3. Touch the Exit icon () to exit.	



Note

- Aim the camera at the subject and position it securely before the [Video Button] is pressed.

Photo

Operation	Display Screen
1. Touch  on the screen in Record Mode. The menu will show on the screen. 2. Touch the [Photo] icon on the screen. Submenu of Photo will pop out on the screen. 3. The Photo submenu contains 3 options-- Resolution, ISO, and Self-Timer --for you to adjust the camera settings.	



Photo Resolution

Three resolution settings are available.

- **16MP**: Shoot photo at 4608 x 3456, 16MP quality.
- **5MP**: Shoot photo at 2592 x 1944, 5MP quality.
- **3MP**: Shoot photo at 2048 x 1536, 3MP quality.

Operation	Display Screen
1. In the Photo menu, touch the [Resolution] icon on the screen. 2. Touch to select the desired option. 3. Touch the Exit icon () to exit.	

ISO

The camera adjusts the ISO sensitivity of its images automatically. Two manual ISO sensitivity settings are available. (800/1600). The larger the number is, the higher the ISO sensitivity is set to. Select a small number to shoot a smoother image. Select a large number to shoot an image in a dark location or to shoot a subject moving at high speed.

Operation	Display Screen
1. In the Photo menu, touch the [ISO] icon on the screen. 2. Touch to select the desired option. 3. Touch the Exit icon () to exit.	



Note

The image may become noisy when the ISO number is large.




Self-Timer

The self-timer allows you to take photos with a ten-second time delay. The LED light on the front of the camera will also blink. The speed of blinking will increase just before the photo is taken.

Operation	Display Screen
1. In the Photo menu, touch the [Self-timer] icon on the screen. 2. Touch to select [On] or [Off] ( ). 3. Touch the Exit icon () to exit.	

 Effect

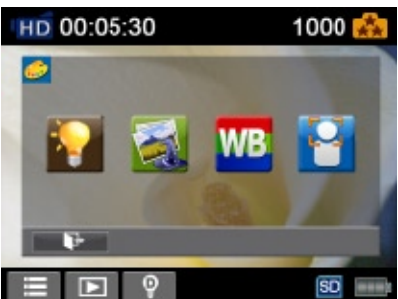Operation	Display Screen
1. Touch  on the screen in Record Mode. The menu will show on the screen. 2. Touch the [Effect] icon on the screen. Submenu of Effect will pop out on the screen. 3. The Effect submenu contains 4 options-- Light, Scene, White Balance, and Face Tracking --for you to adjust the camera settings.	



Light

Three light settings are available.

- **Light On:** The light will be turned on and keep providing light.
- **Digital Light:** To extend the dynamic range for backlight and high contrast sense so that the objects will be brighter and clearer.
- **Light Off:** The light is turned off.


Operation	Display Screen
1. In the Effect menu, touch the [Light] icon on the screen. 2. Touch to select the desired option. 3. Touch the Exit icon () to exit.	



Scene

You can select the mode according to the scene condition.

 - **Auto:** Shoot without any special effect on the image.
- **Skin:** Shoot with an effect that makes skin tones more natural.
- **Night:** Use Night Mode for night scenes or low light conditions.
- **Backlight:** You can take shots when the bright light is behind the subject.
- **Black/White:** The image is converted to black-and-white.
- **Classic:** The image is converted to a sepia look.
- **Negative:** The image is converted as the negative of the normal.

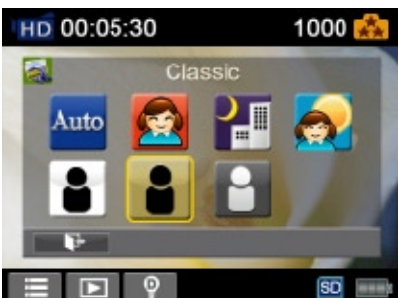Operation	Display Screen
1. In the Effect menu, touch the [Scene] icon on the screen. 2. Touch to select the desired option. 3. Touch the Exit icon () to exit.	



Note

To avoid blurry photos, place the camera on a flat, steady surface, or use a tripod when taking shots in the Night Mode.



White Balance

The camera adjusts the color balance of images automatically. Three manual white balance settings are available:

- **Auto:** The camera automatically adjusts white balance.
- **Daylight:** Under outdoor condition.
- **Fluorescent:** Under fluorescent light condition.
- **Tungsten:** Under tungsten light condition.

Operation	Display Screen
1. In the Effect menu, touch the [White Balance] icon on the screen. 2. Touch to select the desired option. 3. Touch the Exit icon () to exit.	



Face Tracking (Photo Only)

The camera can detect human face(s) and focus on the face(s) automatically. This function can work with photo capturing. It is wonderful for capturing beautiful portraits in backlight situation.

Operation	Display Screen
1. In the Effect menu, touch the [Face Tracking] icon on the screen. 2. Touch to select [On] or [Off] ( ). 3. Touch the Exit icon () to exit.	 



Note

When Face Tracking is activated, aim the camera at the human face(s). The focus frame(s) will show on the LCD before the [Photo Button] is pressed.

Section 4

Enjoying the Playback Mode



Button Function

The Buttons have the following functions in Playback Mode.

	Video Button: 1. Press to go the Record Mode
	Photo Button: 1. Press to go the Record Mode
	Tele Button: 1. Volume increase. /Zoom in the photo Wide Button 1. Volume decrease. /Zoom out the photo
	Pause Button: 1. In Video Playback Mode, press to pause the recorded video.
	Playback Button: 1. Switch to the Playback Mode. 2. For quick review, press it after recording.

LCD Monitor Information

  Indicators on the LCD screen while in Playback Mode:

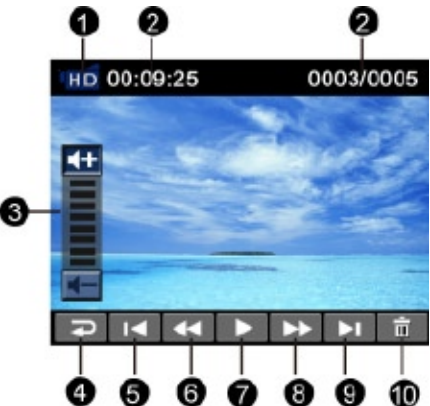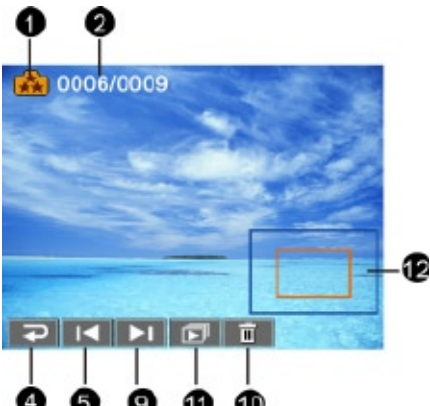Video Playback Mode	Photo Playback Mode
	

(1)	Video Resolution	
		Full HD (1080p 30 fps)
		HD (720p 60 fps)
		HD (720p 30 fps)
		VGA (640X480)
		Slow motion (QVGA)
	Photo Resolution	
		16MP
		5MP
		3MP
(2)	00:09:25	Video playback time counter.
	0003/0005	Current number/ Total number of photo/video.
(3)		Volume
(4)		Return
		Video stop
(5)		Previous video/photo
(6)		Video fast rewind
(7)		Video play
		Video pause

(8)		Video fast forward
(9)		Next video/photo
(10)		Delete
(11)		Slideshow
		Slideshow stop
(12)		Magnification Indicator

Operations for Playback Mode

The Playback Mode is for viewing and managing videos and photos on the built-in memory or on an SD Card.

Operation	Display Screen
1. Press [Playback Button] or touch  on the screen to switch to the Playback mode.	
2. Touch to select the specific option. 3. Touch () to back to Record Mode.	

Video Playback

Operation	Display Screen
1. In the Video Playback mode, touch  /  to play or pause the video. 2. Sweep to the right or touch  to go to the previous video; sweep to the left or touch  to go to the next video. 3. While playing video, touch  /  to fast rewind/forward. 4. Touch  to increase the volume; touch  to reduce the volume. 5. Touch () to exit.	



Note

- When the LCD is idle for a few seconds, the playback function icons will disappear automatically.

Delete Videos

Operation	Display Screen
1. Touch  to go to the Delete option screen.	
2. Touch [Yes] to delete the current video or [No] to cancel the operation and to exit; touch [All (Delete All)] to delete all videos. 3. Before all videos are about to be deleted, a confirmation screen will appear; touch [Yes] to execute the operation and [No] to cancel the operation.	
	



Note

- If a memory card has been inserted, you can only delete those videos stored on the card.
- Videos on a written-protected memory card cannot be deleted.

Photo Playback




Operation	Display Screen
1. In the Photo Playback mode, sweep to the right or touch  to go to the previous photo; sweep to the left or touch  to go to the next photo. 2. While the photo is selected, press [Tele Button] to magnify. (The magnification Indicator appears on the screen) 3. To navigate the magnified photo, press on the screen and move as well. (The inner Magnification Indicator turns red) 4. Press [Wide Button] to zoom out or exit the magnification mode. 5. Touch  /  to start or to stop the slide show. 6. Touch () to exit.	



Note

- When the LCD is idle for a few seconds, the playback function icons will disappear automatically.

   Delete Photo

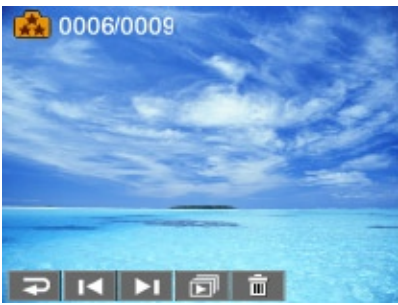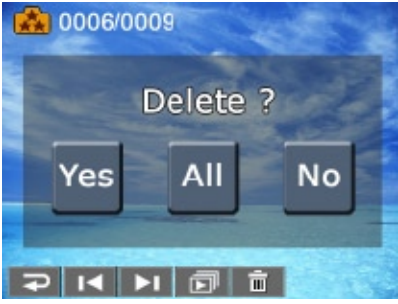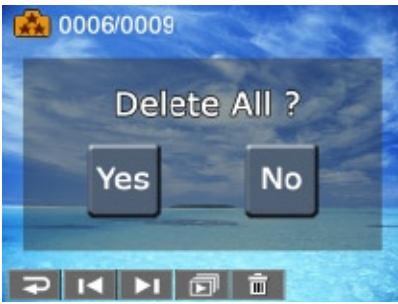Operation	Display Screen
1. Touch  to go to the Delete option screen.	
2. Touch [Yes] to delete the current photo or [No] to cancel the operation and to exit; touch [All (Delete All)] to delete all photos. 3. Before all photos are deleted, a confirmation screen will appear; touch [Yes] to execute the operation and [No] to cancel the operation.	 



Note

- If a memory card has been inserted, you can only delete those photos stored on the card.
- Photos on a written-protected memory card cannot be deleted.

Section 5

Setting Your Camera

Setting Menu

Operation	Display Screen
1. Touch  on the screen in Record Mode. The menu will show on the screen. 2. Touch the [Setting] icon on the screen. Submenu of Setting will pop out on the screen. 3. The Setting submenu contains 7 options for configuring your camera setup. They are Sound (operation sound), TV, Language, Time Setting, Date Printing, Format, and Default Setting.	



Sound

Enable or disable the keypad tone and the operation sound.

Operation	Display Screen
1. In the Setting menu, touch the [Sound] icon on the screen. 2. Touch to select [On] or [Off] ( ). 3. Touch the Exit icon () to exit.	



TV

Ensure that the appropriate TV standard of your area is selected – either NTSC or PAL. Wrong TV system setting may cause image flickers.

- **NTSC**(60Hz):USA, Canada, Japan, South Korea and Taiwan, etc.
- **PAL**(50Hz):UK, Europe, China, Australia, Singapore and Hong Kong, etc.

Operation	Display Screen
1. In the Setting menu, touch the [TV] icon on the screen. 2. Touch to select [PAL] or [NTSC]. 3. Touch the Exit icon () to exit.	



Language

Use this option to select the language of the user interface.

Operation	Display Screen
1. In the Setting menu, touch the [Language] icon on the screen. 2. Touch to select the desired option. 3. Touch the Exit icon () to exit.	



Time Setting

Operation	Display Screen
1. In the Setting menu, touch the [Time Setting] icon on the screen to enter the time setting screen. 2. Touch Year, Month, Day, Hour, Minute, and AM/PM to set. 3. Adjust the numeric value by touching  / . 4. Touch the [OK] icon to validate the setting. 5. Touch the Exit icon () to exit.	



Date Printing

Imprint the date and time on the photo.

Operation	Display Screen
1. In the Setting menu, touch the [Date Printing] icon on the screen. 2. Touch to select [On] or [Off] ( ). 3. Touch the Exit icon () to exit.	



Note

- Date Printing function can not be used in Video Record Mode..



Format

- **Yes:** Format the built-in memory (When there is no SD card in the camera) / SD Card (When there is an SD card in the camera).
- **No:** Do not format the built-in memory (When there is no SD card in the camera) / SD Card (When there is an SD card in the camera).

Operation	Display Screen
1. In the Setting menu, touch the [Format] icon on the screen. 2. Touch to select [Yes] or [No] (). (Touch [Yes] to enter the confirmation screen.)	
3. Touch the [Yes] icon to execute the operation and the [No] icon to cancel the operation.	



Note

All the data will be erased if the SD card is formatted. Make sure all the data are copied to your PC before formatting the SD card.



Default Setting

To restore the default factory setting, select this option.

Operation	Display Screen
1. In the Setting menu, touch the [Default Setting] icon on the screen. 2. Touch to select [Yes] or [No] (). (Touch [Yes] to enter the confirmation screen.)	
3. Touch the [Yes] icon to execute the operation and the [No] icon to cancel the operation.	

The following table indicates the camera's default settings


Setting	Default Factory Setting
Resolution	FHD (1080p 30) for Video 5MP for Photo
Stabilization	Off
Motion Detection	Off
Slow Motion	Off
Pre-Record	Off
Time Lapse	Off
Self-Timer	Off
ISO	Auto
Scene	Auto
White Balance	Auto
Light	Off
Sound	On
TV	Depends on shipping area
Language	Depends on shipping area
Date Printing	Off
Volume	Level 6

Section 6

Viewing Photos and Videos on TV

Connecting to a High-Definition 16:9(Wide) TV

 1. Connect the HDMI cable to your camera's HDMI Out port.
2. Connect the other end of the cable to a television.
3. Set the video input source of your TV to "HDMI."
4. The steps for viewing stored videos and photos on HDTV are exactly the same as for viewing them on the LCD screen.

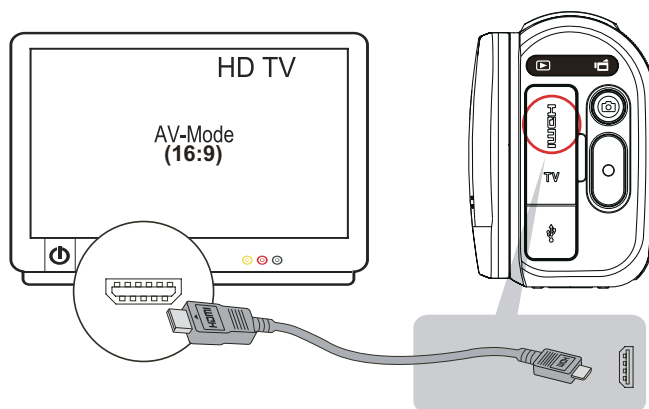


Note

- Some icons on the LCD screen do not display when the camera is connected to an HDTV.
- Some functions may not be accessible while the camera is connected to an HDTV.

Connecting to a non-high-definition 4:3 TV

 1. Connect one end of the AV cable to your camera's AV out port.
2. Connect the other end of the cable to a television.
3. The steps for viewing stored videos and photos on TV are exactly the same as for viewing them on the LCD screen.

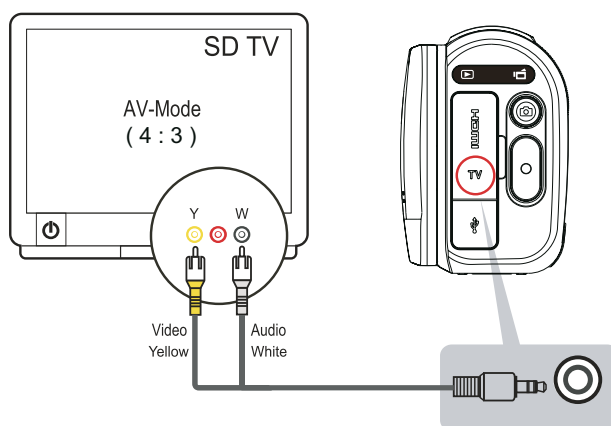

Note

- Some icons on the LCD screen do not display when the camera is connected to a TV.
- Some functions may not be accessible while the camera is connected to a TV.

Section 7

Viewing Video & Photo on PC

Installing Adobe Software

Adobe Reader is a popular program that you need to have installed to read the User's Manual. Many computer users will find they already have this software installed on their computer.

Transferring Photos or Videos to a Computer

You can transfer photos or videos stored on your camera to a computer and send them in e-mails to friends or post them on the web sites.

To do this you should:

1. Connect the computer and camera with the supplied mini USB 2.0 cable. .
2. The videos and photos can be found on your computer at "My Computer\Removable Disk\DCIM\100MEDIA". (On the SD card in the camera)
3. Under this folder, you can view, delete, move, or copy any video/photo you want.


Section 8

Uploading Files to Internet

The built-in **Internet Direct** application offers you an easy way to upload your files to Internet instantly. It helps you share them with your family and friends on the web site.

To upload files to Internet:

 1. Connect the camera to your computer by using the supplied USB cable.

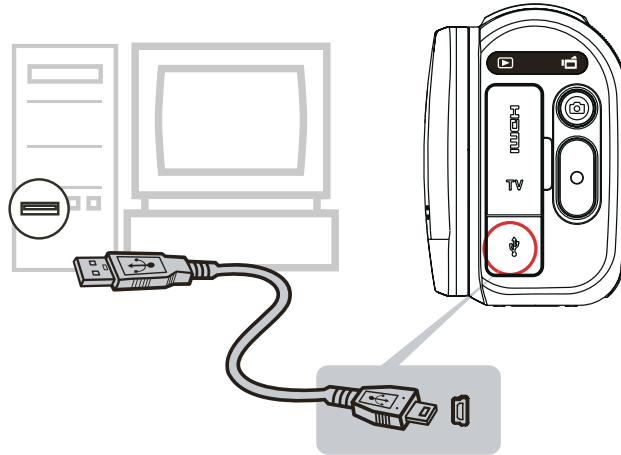

2. After making a USB connection, the AutoPlay window will appear. (It may be different based on OS recognition. If the AutoPlay window does not appear. Please click [My Computer]-->[DVAP]-->[DVAP.exe] to execute the application.)



(In Windows XP)

3. The main screen appears automatically on the desktop. (To view the recorded clips on Internet Direct, it is necessary to install ArcSoft MediaImpression first.)



Note

- The social media Web site may not be accessible in certain regions.
 - You must have internet access to upload videos to a Web site.
4. On the thumbnail screen, click on the up/down icon to change the pages. Click on the file(s) you want to upload.
5. Click on “ UPLOAD” to start uploading.



6. Click on “CANCEL” to stop uploading.



To playback the video file:

1. Double click on the video clip on the thumbnail screen.
2. Click on the Play/Pause icon  to play/pause. Click on the Return icon  to return to the thumbnail preview screen.



To setup your account information for the web site:

1. Click on  to go to the setup screen.
2. Fill in your account information in the blanks. Then click on “Save”.

The screenshot shows a small dialog box for account setup. It has a title bar with a red close button. Inside, there are two text input fields labeled 'User Name' and 'Password'. Below these is a 'Broadcast Option' section with two radio buttons: 'Public' (selected) and 'Private'. At the bottom is a 'Save' button.

(If you do not have an account, please sign up on the Web site first.)

Section 9

Specifications and System Requirements

Specification	
Image sensor	5 Mega pixel CMOS sensor
Operation modes	Video record, Photo record
Lens	Fixed Focus (F 2.5)
Focus range	Macro Mode:20cm Normal Mode: 110 cm ~ infinite (HD+(720p 60) & HD(720p 30)) 150cm ~ infinite (Photo & Full HD (1080p 30))
Zoom	1X~16X (16X Digital zoom)
Shutter	Electronic
LCD monitor	3" touch LCD
Storage media	Built-in 128MB memory (partial memory is used for firmware code and software); SD/SDHC/SDXC card slot support (up to 64GB)
Image resolution	16MP: 4608 x 3456 (16M pixels) (Interpolated) 5MP: 2592x1944 (5M pixels) 3MP: 2048x1536 (3M pixels)
Video resolution	Full HD (1080p 30): 1920X1080(30fps) HD+ (720p 60): 1280X720(60fps) HD (720p 30): 1280X720(30fps) VGA (640X480): 640X480(30fps)
White balance	Auto/Manual (Daylight, Fluorescent, Tungsten)
ISO	Auto/800/1600
Self-timer	10 seconds delay
Light	Light On/ Digital Light / Light Off
File format	Photo: JPG Video: H.264
Image play	Single image/Slideshow
PC interface	Mini USB 2.0 port
TV out	NTSC/PAL selectable, HDMI
Battery	Lithium-ion rechargeable battery
Dimension	110mm (W) × 65mm (H) × 45mm (T)
Weight	232 g (without battery)

System requirements

- Microsoft Windows XP/Vista/7
- Intel Pentium 4, 2.4 GHz or above
- 512 MB RAM
- 1 GB free HDD space
- Available USB port
- CD-ROM Drive
- 16-bit Color Display



Note

The LCD screen is manufactured using extremely high-precision technology, so over 99.99% of the pixels are operational for effective use. However, some tiny black and/or bright dots (white, red, blue or green) may appear on the LCD screen. These dots are a normal result of the manufacturing process, and do not affect the recording.

Section 10

Troubleshooting

Troubleshooting

1. If the LCD preview is not clear while shooting, how can the focus be adjusted?

Try to switch between Macro and Normal Mode.

2. The files on the memory card do not display smoothly when the LCD shows the “!” marking.

The “!” means the SD card is low speed or is having wrong content inside. The way to solve this condition is to format SD card by the camera instead of a PC (Please refer to the detailed Format instruction in User's Manual-Section 5).

Or please change the SD/SDHC/SDXC card to a high speed one.

3. Why do some of my indoor photos look blurry and dark?

The camera extends photo exposure time under low light/ indoor condition. Keep the camera (and the target subject) steady for several seconds when taking photos. The shutter will sound when photo is being taken.

4. How do I charge battery?

You must use the supplied AC charger or the USB cable.

The camera must be turned OFF. A blinking light confirms charging, and the light becomes constant when the charging has been completed. In AC charging Mode, the light will turn itself off automatically after 3~5 minutes. The full charge time is about 3 to 4 hours. (Actual charging time may vary. It depends on the battery conditions.)


5. After connecting the USB cable to the computer,

1. The disk [DV] indicates the internal memory of the camera. (The disk label may be different according to different model and PC OS.)
2. [Removable Disk] indicates the external memory. (Under the circumstances of within the SD/SDHC/SDXC card in the camera)
3. The disk [DVAP] indicates the built-in Internet Direct application is saved at this disk. Please DO NOT format this disk or delete the application inside; otherwise, the Internet Direct application can not function.


Section 11

Using Remote Control

 Remote Control

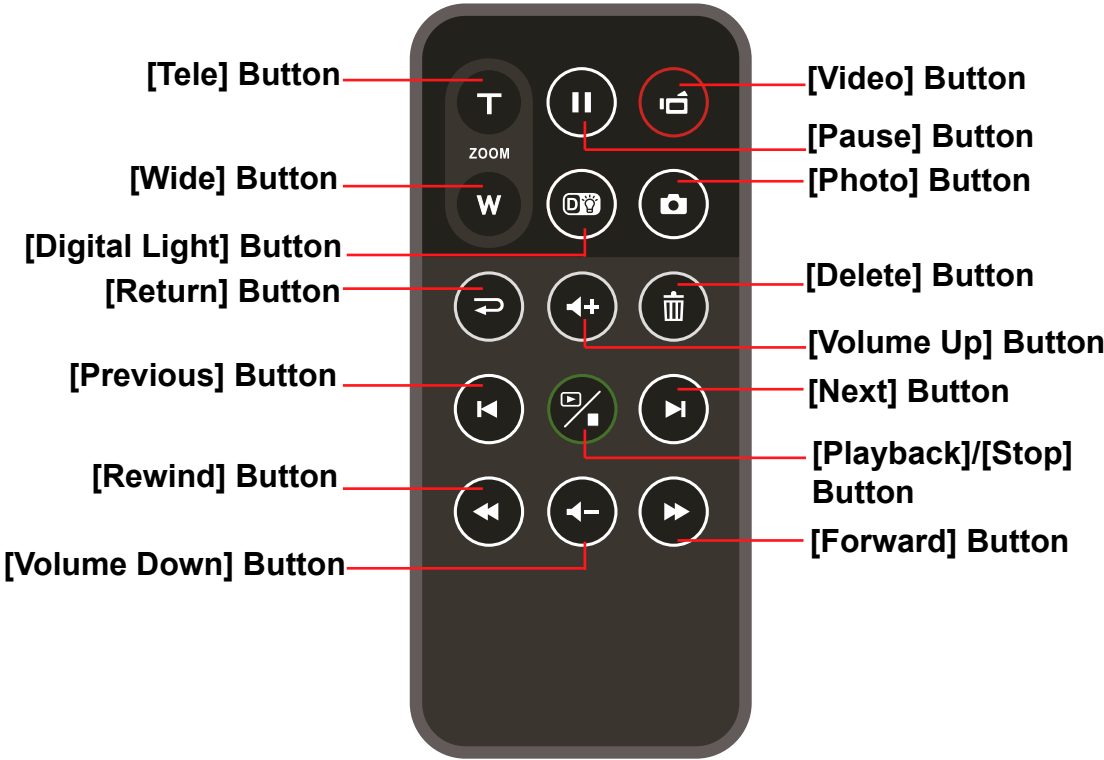

Button Functions

 	Video Button: 1. Press to take video. 2. To stop recording, press it again.
	Pause Button: 1. Press to pause the recording. 2. To continue the recording, press it again. 3. In Video Playback Mode, press to pause the recorded video.
	Tele Button: 1. Zoom in. Wide Button 1. Zoom out.
	Photo Button: 1. Press to take photo.

	Digital Light Button: 1. Digital Light on/off.
	Delete Button: 1. Delete the current or all videos/photos.
	Volume Up Button: 1. Volume increase.
	Return Button: 1. Return to the previous screen.
	Next Button: 1. Go to the next video/photo
	Playback/Stop Button: 1. Switch to the Playback Mode. 2. For quick review, press it after recording. 3. In Video Playback Mode, press to stop the recorded video.
	Previous Button: 1. Go to the previous video/photo
	Forward Button: 1. Video fast forward
	Volume Down Button: 1. Volume decrease.
	Rewind Button: 1. Video fast rewind



Note

- When using remote control, please aim at the IR Remote under Led Light at the front of camera.
- Record menu is not accessible via the remote control.
- When the battery power of the remote control becomes weak, the remote control may not function properly. In this case, please replace the battery.
- When replacing the battery, please follow the illustration at back side of remote control.

Section 12

Westwell Warranty Statement

1. Warranty against defects

Westwell Australia Pty Limited ACN106 648 202 (“**Westwell**”) warrants the product to be free of any defects in materials and workmanship for a period of 12 months from the date of purchase (“**Warranty**”). However, the Warranty does not apply with respect of products damaged by unreasonable use or by use for which the product is not intended. The Warranty will not cover defects resulting from alteration, accident, misuse, abuse or neglect and the Warranty is otherwise subject to the terms, conditions and stipulations recorded below.

2. Warranty is in addition to your rights under the law

The product Westwell supplies come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the products repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure. The benefits accorded to you under this guarantee **are in addition** to your other rights and remedies any other law in relation to goods or services to which the Warranty relates.

3. What you must do for Westwell to be entitled to claim under the warranty

To make a claim under the Warranty you must: recording, press it again.

- (a) Return the product which you claim is defective to the Seller who supplied our products to you (“**Seller**”). The product must be unmarked and complete with instruction books and accessories (such as remote controls, power cords, battery chargers and connectivity cables) supplied at the time of purchase;
- (b) Complete a claims form that we have supplied to the Seller for that purpose; and provide a copy of a proof of purchase to the Seller to whom you are returning the products. The best proof of purchase is a tax invoice or receipt. Please discuss any other acceptable proofs of purchase with the Seller.

4. How Westwell will honour the warranty

If you comply with paragraph 3 above, and Westwell or the Seller determine that the product does not comply with the Warranty then, the Seller may at its discretion, promptly:

- (a) Pay to you the cost of repairing or replacing the products or any part of the products; or replace or repair the product.
- (b) Except as to terms, conditions, warranties or guarantees prescribed by law and from which Westwell cannot limit its liability (“prescribed term”):
 - (1) The liability of Westwell and any Seller in respect of a breach of a

- prescribed term or the Warranty relating to the products or any part of the products is limited to the options set out in this paragraph 4 above;
- (2) In these conditions you do not have under any circumstances any cause of action against or right to claim or recover from the seller for, or in respect of, any loss or damage of any kind whatsoever, caused directly or indirectly by:
- (a) Any defect in material or workmanship of, or any other defect whatsoever in, or unsuitability for, any purpose of the products or any part of the products; or
 - (b) By default or negligence on the part of Westwell or of any employee, contractor or agent of the seller or of any person for whom the seller has legal responsibility relating to the supply of, or otherwise concerning products or any part of the products.

PLEASE note that Westwell will honour all consumer guarantees under the Australian Consumer Law to the extent it is required to do so by that legislation

5. Expense of making warranty claim

Subject to your rights under the Australian Consumer Law, if Westwell determines that the product you have returned does not breach the Warranty and Westwell does not have a legal obligation to provide you with a remedy in respect of the returned product (including for breach of a guarantee under the Australian Consumer Law), then:

- (a) Westwell reserves the right to claim all expenses and costs incurred by
- (b) Westwell in processing the claim and returning the products; and
Westwell will have the right to make a claim against you for any monies that have been paid to you on account of your claim of breach of the Warranty, and by returning making the claim for breach of Warranty you agree to this proviso.

Subject to your rights under the Australian Consumer Law, where Westwell determines that your claim under the Warranty is correct and there has been a breach of the Warranty, then Westwell will determine if it is reasonable to reimburse your reasonable expenses in making the claim under the Warranty. It will be for Westwell to determine what is a reasonable expense and you will be required to substantiate that expense by documentation acceptable to Westwell.

6. Customer Service - Who we are and how you may contact us

The company which gives the Warranty is Westwell Australia Pty Ltd ACN106 648 202. For any Warranty query you can contact Westwell at:

- (a) Customer Helpline: 1800 656 630
- (b) Website: www.olinlivenow.com.au
- (c) E-mail: support@westwell.com.au

Address: Westwell Australia, Suite 1802, Central Square, 323 Castlereagh Street, Sydney NSW 2000

Section 13

Copyright

This manual contains information protected by copyright law.

No part of this document may be used or reproduced in any form or by any means, or stored in a database/retrieval system without prior written permission from us.

The information of this manual is based on the current version of the product.

We reserve the right to alter the content without prior notice.

All brand names in this manual are the property of their respective owners.

Need some help?
Call our toll free
Customer Helpline today!



Or visit our website
www.olinlivenow.com.au



Westwell Australia Pty Ltd

Westwell and its stylised logo are registered with the Australian IP office.

OLIN is a registered trademark of Westwell Australia Pty Ltd.

All rights reserved.

All promotional materials offered for reference only.

Actual may vary.