

★ ★ ★ ●
TRISTAR

EN *Instruction manual*



KB-7224

Dear customer,

Congratulations and thank you for purchasing this high quality product. Please read the instruction manual carefully so that you will be able to make the best possible use of the appliance. This manual includes all the necessary instructions and advice for using, cleaning and maintaining the appliance. If you follow these instructions you will be guaranteed of an excellent result, it saves you time and will avoid problems. We hope you will have a great deal of pleasure from using this appliance.

SAFETY INSTRUCTIONS

- Please read the instruction manual carefully before using the device. Please keep these instructions, the guarantee certificate, the sales receipt and, if possible, the carton with the inner packaging.
- This appliance is not intended to be used by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instructions concerning the use of the appliance by a person that is responsible for their safety.
- By ignoring the safety instructions the manufacturer can not be hold responsible for the damage.
- To protect children against the dangers of an electrical appliance, please make sure that you never leave the appliance unattended. Therefore you have to select a storage place for the appliance where children are not able to grab it. Make sure that the cable is not hanging in a downward position.
- This appliance is only to be used for household purposes and only for the purpose it is made for.
- Never use the device unsupervised.
- All repairs should be made by a competent qualified electrician(*).
- Make sure that the appliance is stored in a dry environment.
- It is absolutely necessary to keep this appliance clean at all times, because it comes into direct contact with food.
- Check if the voltage of the appliance corresponds to the main voltage of your home. Rated voltage: AC220-240V 50Hz. The socket must be at least 16A or 10 A slow-protected.
- This appliance complies with all standards regarding electromagnetic fields (EMF). If handled properly and according to the instructions in this user manual, the appliance is safe to use based on scientific evidence available today.
- The use of accessory that are not recommended by the manufacturer can cause injuries and will invalidate any warranty that you may have.
- Never move the appliance by pulling the cord and make sure the cord can not become entangled.
- To protect yourself against an electric shock, do not immerse the cord, plug or appliance in the water or any other liquid.
- Unplug the appliance from the socket when changing the spare parts or for maintenance.
- Do not use this appliance with a damaged cord or plug or when the appliance has malfunctions, or has been damaged in any manner. To avoid a hazard make sure that a damaged cord or plug will be replaced by an authorized technician(*). Do not repair this appliance yourself.
- Do not use this appliance near direct heat sources.
- Unplug the appliance from the socket when you are not using it.
- **Note:** To avoid danger by accidental resetting the thermal protection, this appliance may not be powered through an external switching device, such as a timer, or connected to a circuit that regularly will be switched on or off.
- Using an extension cord or something similar is not allowed.

- Make sure that the cord is not hanging over the edge of the table or counter, does not touch any hot surfaces or is coming directly into contact with the hot parts of the appliance. Do not place the appliance underneath or close to curtains, window coverings etc.
 - Do not use this appliance in the bathroom or near a sink filled with water. If this appliance has fallen into the water do not under no circumstances directly grab this appliance, but first pull the plug from the socket.
- * *Competent qualified electrician: after sales department of the producer or importer or any person who is qualified, approved and competent to perform this kind of repairs in order to avoid all danger. In any case you should return the appliance to this electrician.*

USER TIPS

- Your coolbox is able to keep your pre-cooled food and drinks refreshingly cool with very little power requirement.
- When using the box for only a short time, place only pre-cooled items into the box. At an outside temperature of approx. 23°C the inside of the box will have the ideal cooling temperature of 7°C after approx. 2 hours operation.
- Thanks to the insulation, the food and drinks inside the box will remain fresh for a long time, even without electric power for cooling.
- Ensure that the box is placed in a position where the air from the external fan is free to circulate.
- Do not place the box in direct sunlight.

INSTALLATION OF THE APPLIANCE

- Install the appliance on a firm, horizontal surface. Avoid installing the appliance in direct sunlight or near any source of heat.
- The distance between the rear of the appliance and a wall shall not be less than 10 cm, and the minimum ventilating space from the sides of the appliance shall never be less than 5 cm.
- In all cases, the location shall be protected from rain and splashing.
- To guarantee a good level of air circulation, do not obstruct the ventilation grids of the upper of the appliance.
- Even little children should not sit or stand on the appliance: the appliance will be damaged as the balance of the fan will be disturbed.
- Complying with the above will ensure efficient and economical cooling.
- The appliance can be used for camping purposes.
- Before the first use of the appliance, clean the inside and the cover of the appliance with warm water, adding detergent if necessary. Never use an abrasive product.

Operation with a battery (12V DC)

- 60W – 5,5 amps.
- It is not necessary to check the polarity when starting up the appliance.
- Check that the battery voltage corresponds to the operating voltage of the refrigerator, as marked on the corresponding the label.
- When the battery used is a car battery, only switch the refrigerator on while the car is traveling/the engine is running.
- If the refrigerator is left running when the car is stopped, this could discharge the battery and it may be impossible to restart the engine.

Start-up

Plug the connector supplied with the refrigerator into the cigar lighter socket of the vehicle and ensure that the connecting cable is fully extended as failure to do so, can lead to cable burning!

Disconnection of the appliance

Unplug the connector from the cigar lighter socket.

Storing food

- Liquids to be stored in the refrigerator shall always be placed in a closed vessel.
- The air circulation inside the appliance must not be obstructed.
- **Never place hot food or drink in the appliance.**
- **Never keep flammable liquids and/or gases inside the refrigerator.**
Danger of explosion.

Defrosting – Measures to be taken if the appliance is to be left unused for a long period.

- The refrigerator must be defrosted regularly, in order to ensure that it operates correctly.
- If the appliance is to remain unused for an extensive period, disconnect it and remove all food outside. Clean and dry the inside of the appliance.
- In order to prevent unpleasant odor, leave the cover of the refrigerator slightly open.

MAINTENANCE

- Clean the appliance regularly with warm water, containing a detergent if necessary.
- Never use an abrasive product. Dry the cleaned surfaces with a soft cloth.
- All repairs, particularly of the cooling unit, must mandatorily be carried out by a qualified technician.

SERVICE

If a problem occurs, carry out the following checks:

1. Is the appliance installed in a horizontal position?
2. Is there sufficient ventilation?
3. For battery operation, check the battery and the connection.
4. Has too much food been placed inside the refrigerator all at once?
Arrange the food so that the air is free to circulate inside the refrigerator.

- Do not use pieces of cardboard or plastic as separations. Keep vessels containing liquids closed.
- If, despite the above checks, you still need to contact the service department, describe the failure and state the type of equipment and its serial number (these are marked on the label).

WARRANTY

- Tristar is not liable for damages occurred through:
 - o In case the appliance has fallen.
 - o In case the appliance has been technically changed by the owner or another third party.
 - o In case of improper use of the appliance.
 - o In case of normal wear of the appliance.
- By executing repairs the original warranty period of 2 years will not be extended, nor the right to a complied new warranty. This warranty is only legal on European soil. This warranty does not overrule the European directive 1944/44CE
- Always keep your receipt, without this receipt you can not claim any form of warranty whatsoever.
- Damage caused by not following the instruction manual will lead to a void of warranty, if this results in consequential damages Tristar will not be liable.

- Tristar will not be liable for material damage or personal injury caused by improper use or if the safety instructions are not properly executed.
- Cleaning, as mentioned in this manual, is the only necessary maintenance for this appliance.
- When the appliance should be repaired, make sure that this will be performed by an authorized company.
- This appliance may not be amended or changed.
- If problems arise during the 2 years from the date of purchase, which are covered by the factory warranty, you can go back to the point of purchase to replace it for a new one.
- For questions or compliances please contact your retailer "point of purchase."
- This appliance is covered with a 24 month guarantee starting on the date of purchase (receipt).
- Only material or manufacturing defects are included in this warranty.
- If you wish to make a claim please return the entire machine in the original packaging to your dealer together with the receipt.
- Damage to accessories does not mean automatic free replacement of the whole appliance. In such cases please contact our hotline. Broken glass or breakage of plastic parts are always subject to a charge.
- Defects to consumables or parts subject to wearing, as well as cleaning, maintenance or the replacement of these parts are not covered by the guarantee and hence are to be paid!
- The guarantee lapses in case of unauthorized tampering.
- After the expiry of the guarantee repairs can be carried by the competent dealer or repair service against the payment of the ensuing costs.



GUIDELINES FOR PROTECTION OF THE ENVIRONMENT

This appliance should not be put into the domestic garbage at the end of its useful life, but must be disposed of at a central point for recycling of electric and electronic domestic appliances. This symbol on appliance, instruction manual and packaging puts your attention to this important issue. The materials used in this appliance can be recycled. By recycling used domestic appliances you contribute an important push to the protection of our environment. Ask your local authorities for information regarding the point of recollection

Packaging

The packaging is 100% recyclable, return the packaging separated.

Product

This device is equipped with a mark according to European Directive 2002/96/EC on Waste Electrical and Electronic Equipment (WEEE). By ensuring that the product correctly as waste is processed, it helps you may have adverse consequences for the environment and human health.

EC declaration of conformity

This device is designed, manufactured and marketed in accordance with the safety objectives of the Low Voltage Directive "No 2006/95/EC, the protection requirements of the EMC Directive 2004/108/EC "Electromagnetic Compatibility" and the requirement of Directive 93/68/EEC.



Quality shouldn't be a luxury!



AC-5400



DV-1821



AC-5487

www.tristar.eu

Tristar Europe B.V. | Jules Verneweg 87 | 5015 BH Tilburg | The Netherlands