 
 
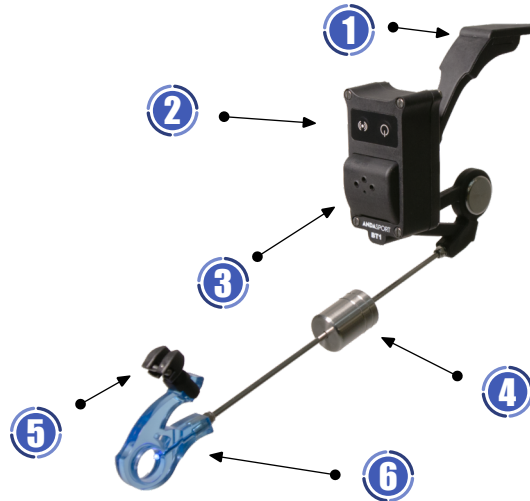 


## Components

1. Detachable Bracket
2. Keyboard
3. Beeper
4. Movable Weight
5. Fishing Line Clip
6. LED - Position Light

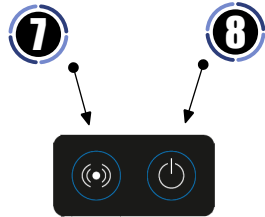

## Battery Changing and Specifications

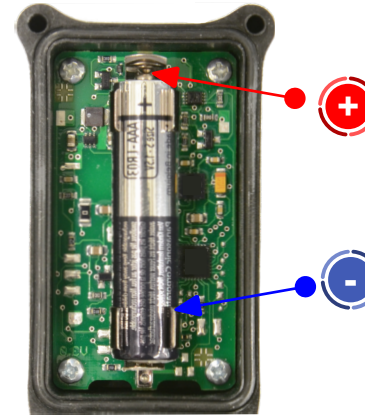

The control panel battery is located inside the Bite Alarm. You need a screwdriver to unscrew four little screws. After opening the panel box, take the new battery and set it inside the panel box. Connect the positive (+) and negative (-) wires of the battery to the appropriately terminals as it is shown on the picture. When changing the batteries, make sure to handle it gently. Rough and careless handling may cause cracks, fractures, tipping and leakage. PCB is a very high quality but under the long influence of water it can become rusty if battery box is not tightly closed, so please check it carefully. There is no guarantee due to corrosion or accidentally damages such as water damage, dropped or cracked Bite Alarm.

### BATTERY CHARACTERISTICS:

Type: 1 X Micro AAA

Duration: depending of the usage, ca. 200 – 250 hours

## Function Description

### 1. TURN ON BITE ALARM

Press the button No. 8 and hold it for 1 – 2 seconds. The ON MODE is indicated by LED and audio signal (BEEP).

### 2. TURN OFF BITE ALARM

Repeat the previously if you want to turn off your Bite Indicator - press the button No. 8 and hold it for 1 – 2 seconds. The OFF MODE is also indicated by LED and audio signal.

### 3. VOLUME ADJUSTABILITY

Press the button No. 8 and hold it very shortly to adjust volume – there are four levels of volume, the last one is the mute mode.

 
### 4. SENSITIVITY ADJUSTABILITY

Press the button No. 7 shortly to adjust sensitivity – there are four levels of sensitivity – the lowest to the highest level. Every volume increase is indicated by audio signal.

### 5. FACTORY DEFAULT SETTINGS

Hold the button No. 7 and at the same time press the button No. 8 to turn on Bite Alarm. After the audio signal, the following settings of Sensitivity, LED Light, Volume and Run and Drop Bite Calibration will be reset.

## Mounting of the ANDA BT1 Bite Alarm

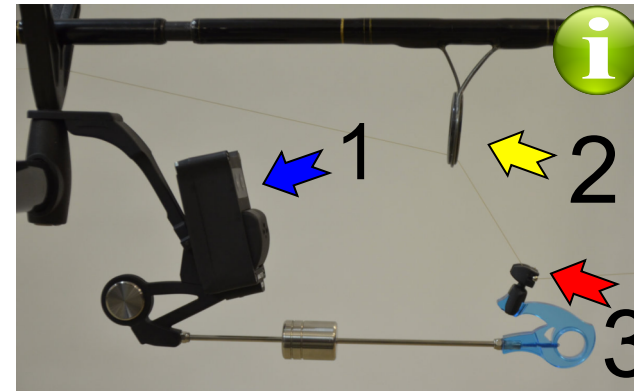

### Mounting of the ANDA BT1 Bite Alarm and position of the Butt Ring Guide Rods.

To ensure optimal functioning of the Bite Alarm and the Fishing Line Clip (3) you should set up the fishing rod in the following position as it is shown on the picture:

The Butt Ring Guide Rods (2) should be positioned between Bite Alarm (1) and Fishing Line Clip (3).

## App Specification

1. Available on the *App Store* and *Google play*

2. Wireless technology Bluetooth 4.0

3. Wireless Range - depend on the condition up to 50 Meters

More informations about this unique Application you can get on our webite in the Support corner

[www.anda-sport.de/](http://www.anda-sport.de/)

## Manufacturer Information

Manufacturer:

ANDA Technologies GmbH

Olschewskibogen 8

80935 München

Germany

[www.anda-sport.de](http://www.anda-sport.de)

[info@anda-sport.de](mailto:info@anda-sport.de)

ANDASPORT® Is a trademark of ANDA-Technologies GmbH