



PowerTel 58



Operating Instructions

GB

PowerTel 58



PowerTel 58

Operating Instructions	3
------------------------------	---

Contents

1	Safety Information	4
2	Starting Up	6
3	Your PowerTel 58	7
4	Operating the Telephone	8
5	Telephoning	11
6	Using the Menu	15
7	Phone Book	20
8	Calls List	22
9	Using the Answering Machine	24
10	Using Remote Access	27
11	Private Branch Exchanges . .	29
12	If Problems Occur	31
13	Technical Properties	32
14	Maintenance/Guarantee . . .	33
15	Index	35

Safety Information

1 Safety Information

Please read this operating instruction manual thoroughly.

Intended use

The telephone is suitable for telephoning within a public telephone network system. Any other use is considered unintended use. Unauthorised modification or reconstruction is not permitted. Under no circumstances open the device or complete any repair work yourself.

Installation location

Prevent excessive exposure to smoke, dust, vibration, chemicals, moisture, heat and direct sunlight.

Power supply



Caution: Only use the power adapter plug supplied because other power supplies could damage the telephone. Ensure access to the power adapter plug is not obstructed by furniture or such.

Power failure

If you have a mains power failure, you can still use your telephone to make and receive telephone calls but the display will only function when you lift the handset. See page 14.

Hearing aid compatibility

The telephone is compatible with most popular hearing aids on the market. However, due to the wide range of hearing aids available, there is no guarantee that the telephone will function 'problem free' with every model



Caution: This telephone is capable of producing very high volume levels when the 'Boost' is switched on and the volume control is set to maximum.

Extreme caution should be taken if the handset is to be shared between users with normal hearing and those with hearing impairment.

Medical equipment

DO NOT use your telephone near emergency/intensive care medical equipment; if you have a pacemaker fitted or during an electrical storm.

Disposal

You are obliged to dispose of consumable goods properly in accordance with the applicable legal regulations. The adjacent symbol on the telephone indicates that electrical and electronic apparatus and batteries no longer required must be disposed of separately from domestic waste.



Electrical and electronic devices must be disposed of at suitable collection points provided by the public waste authorities.



Packaging materials must be disposed of according to local regulations.

Starting Up

2 Starting Up

Safety note



Caution: It is essential to read the Safety Information in Chapter 1 before preparing the telephone for use.


Check the contents of the package

The package contains:

Content	PowerTel 58
Telephone Answering Machine	1
Power adapter plug	1
Telephone connection cable	1
Operating manual	1

Connecting the telephone

Connect the telephone as illustrated in the diagram. For reasons of safety, only use the power adaptor plug and telephone connection cable supplied.

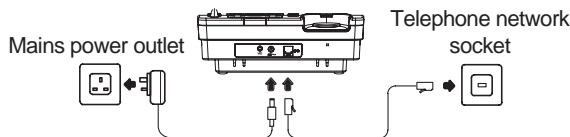

Shaker

You can plug a shaker accessory (not included) into the socket on the back of the base. The shaker will then vibrate when you receive an incoming call.

Private branch exchanges

The information on Page 29 explains how to install your telephone on a private branch exchange.








3 Your PowerTel 58











Operating the Telephone

4 Operating the Telephone

Display and explanation of operation sequences.


	Enter digits or letters
	Press the button shown, briefly
2 x 	Press the button shown, twice briefly
2 sec 	Press the button shown for 2 seconds
Press and hold 	Press and hold the button shown
Release 	Release button shown
VOLUME 1 or 	Text or icon in the display










Icons in the telephone display


Icon	Description
	Phone Book mode
	Ringer off
	Handsfree mode
	Call in progress
	Boost receiver volume is on
X	Handset microphone is muted
	You have new calls
	New calls in the calls list
	Old calls in the calls list

Navigating in the menu

All telephone functions can be accessed via the menu. Please refer to 'Using the menu' on page 15 for information on how to access each function.



 





 All descriptions in this operating manual assume that the handset is in Standby mode.

	Open the main menu
	Select the submenu required
	Open the submenu
	Select the function required
	Open the function
	Select the setting required
	Enter digits or letters using the relevant keys
	Confirm the entries
	Cancel and return to standby mode

 Every process is automatically cancelled if there is no input within 20 seconds. The handset will return to standby mode.







Creating phone book entries in the telephone - example

This example explains how to navigate and create entries in the phone book. Proceed as in this example for all the settings.

2 sec 	Opens add phone book entry mode
 	Enter the name (max. 16 letters) and confirm it
 	Enter the phone number (max. 24 digits) and confirm it
 or  	Select and confirm a ringing melody

Operating the Telephone





Storing a quick dial entry

M1, M2 or M3, 2 x 	Opens add quick dial entry mode
 	Enter the name (max. 16 letters) and confirm it
 	Enter the phone number (max. 24 digits) and confirm it
^ or v, 	Select and confirm a ringing melody

5 Telephoning



Making a call using the telephone base.

Each digit you enter before picking up the handset or pressing handsfree will be announced.

	Enter the phone number (max. 24 digits)
	Following incorrect input, press to delete the last digit
 or 	Dial the phone number

It is also possible to press the external call button first to obtain dialling tone. The digits entered will then be dialled immediately. It is not possible to correct wrong digits individually using this dialling procedure.

End a call






 or 	End the call
--	--------------

Take a call

 or 	Take the call
--	---------------






Redial

Your telephone stores the last 5 telephone numbers dialled (max. 24 digits each). As you scroll to each telephone number in the list, it will be announced.

	Open the redial list
 or  ,  or 	Select an entry and dial the number

Calling back missed calls

Your telephone stores the last 30 incoming calls in the calls list. As you scroll to each telephone number in the calls list in the telephone base, it will be announced.

	Open the calls list
 or  ,  or 	Select an entry and dial the number

Telephoning

 
Dialling phone numbers from the phone book

There must be phone numbers stored in the phone book. See page 20.

Your telephone can store up to 200 name and number entries in the phone book. As you scroll to each telephone number in the phone book in the telephone base, it will be announced.



Open the phone book



Select an entry and dial the number

Quick dial

Phone numbers must have been stored as quick dial numbers. See page 10. The stored quick dial number in the telephone base will be announced when you press the quick dial button.

M1, M2 or M3

Press the required quick dial button.



Dial the number

Chain dialling

This feature is used for more complex telephone services, eg for telephone banking or calling card procedures. Several numbers stored in the phone book can be dialled successively when a connection has already been made. It is also possible to combine numbers from the phone book with numbers entered manually. Numbers stored in the phone book can be chained and transmitted as required.



Open the phone book when a connection has been made



Select the phone book entry and transmit the number

Adjusting the receiver volume

The receiver volume of your PowerTel 58 telephone is louder than with a standard telephone.



When in a call, adjust the setting with the volume buttons

Boosting the receiver volume

When in a call, you can increase the loudness of each volume setting if you press the 35dB button.



Press the button, an icon flashes in the display

Handsfree

Use Handsfree to listen to your caller via the loudspeaker



Switch on handsfree mode



Deactivate handsfree mode

Adjusting the Handsfree volume

There are 5 handsfree volume levels available. The '35dB' feature is not available in handsfree mode.



Adjust the volume with the volume buttons

Talk time display

The duration of each call is displayed in minutes and seconds during the call.

Equaliser

Everyone's hearing is different and some people can hear higher frequencies more clearly than others. Press the button to adjust the tone and high frequencies within a call, until it's right for you.



, << or >> Adjust the tone with the left and right buttons



Please don't be surprised to find that the volume can reduce when you set the tone control to a frequency higher or lower than normal. This is a normal effect. Please use the volume control to correct the volume if necessary.

Muting the microphone

The microphone can be activated and deactivated during a telephone conversation when you are in handset or handsfree mode.



, Mute Switch the microphone off (Mute).



, Unmute Switch the microphone on

Telephoning

Using a Headset (not included)

Connect a headset to the headset socket and press the headset button. You will now be able to hear and speak to your caller via the headset.

Power fail

If you have a mains power failure, you can still use your telephone to make and receive telephone calls but the display will only function when you lift the handset.

You can also use the following functions when the handset is lifted:

- View or dial from the phone book or M1, M2 or M3 keys
- Dial out Recall (Flash) and pause
- Adjust the receiver volume
- Mute the microphone



The phone will ring for an incoming call in power fail mode but the incoming call light will not function and the callers' details will not be stored in the calls list.

6. Using the menu

Answering Machine (see page 24)

Phonebook (see page 20)

Priority/Default Setting

If you are the main user of this telephone you should change the settings in the menu so that they are just right for you. These settings will be memorised automatically whenever you wish to make or answer a call.














The user profile feature can be used by others in the household whose preferences for volume, boost and equaliser will also be memorised and applied as indicated below.

User Profiles

You can store 3 different user profiles, each with different settings for the 'Volume', 'Boost' and 'Equalizer' features. You can also personalise each Profile by naming it (Max 10 letters).







Changing the Profile name

You can personalise each profile by naming it.

  or  , 	Open the Menu, select 'Profile'
 or  , 	Select 'Profile 1, 2 or 3'
 or  , 	Select 'Name'
	Delete the current name
 , 	Enter the new name and confirm it (max. 10 letters).



Changing the Profile Handset Volume

There are 5 volume settings available



 or  , 	Select 'Volume'
4	The current setting is shown
 or  , 	Select and confirm the handset volume



Using the Menu

Changing the Profile 'Boost' setting

^ or v, 	Select 'Boost'
Off	The current setting is shown
^ or v, 	Select and confirm 'On' or 'Off'

Changing the Profile 'Equalizer' setting

^ or v, 	Select 'Equalizer'
^ or v, 	Select and confirm

 Press the  key to return to standby.


Selecting a Profile for use

 
Incoming calls

When you receive an incoming call and before you answer the telephone, press the M1, M2 or M3 key for the profile you wish to use. The display will confirm the profile that has been selected and you can answer the call as normal.

Outgoing calls

When you wish to make an outgoing call, press and hold the M1, M2 or M3 key for the profile you wish to use. The display will confirm the profile that has been selected and you can now make your outgoing call as normal.

 If you do not dial your outgoing call within 30 seconds of pressing the M1, M2 or M3 key, the selected profile will timeout and the default telephone settings will be used for the call.

 User profiles cannot be selected in Handsfree mode. You must lift the handset.

Ringer tone

There are 10 different ringing melodies available for External calls.

⊞, ^ or ∨, ⊞	Open the Menu, select 'Ringer Tone'
^ or ∨, ⊞	Select 'EXT Melody'
Melody 8	The current setting is shown
^ or ∨, ⊞	Select and confirm a ringing melody

Ringling volume

There are 5 ringing volume settings available and 'OFF'

⚠ or ▼	Adjust the volume with the volume buttons
--------	---

Key Tone

Choose to turn the key tone 'ON' or 'OFF'

⊞, ^ or ∨, ⊞	Open the Menu, select 'Key Tone'
ON	The current setting is shown
^ or ∨, ⊞	Select and confirm 'ON' or 'OFF'

Display

Contrast

There are 5 different contrast levels available so that you can set the display to how you find it most easy to read.

⊞, ^ or ∨, ⊞	Open the Menu, select 'Display'
^ or ∨, ⊞	Select 'Contrast'
4	The current setting is shown
^ or ∨, ⊞	Select and confirm the contrast setting

Language

There are 5 languages available, English, German, French, Spanish and Italian.











⊞, ^ or ∨, ⊞	Open the Menu, select 'Display'
^ or ∨, ⊞	Select 'Language'
Deutsch	The current setting is shown
^ or ∨, ⊞	Select and confirm a language

Using the Menu

Settings











Boost Mem

With this feature set to 'ON', if you use the 35dB button, your handset will remember and use your last Boost setting for each call.











  or  	Open the Menu, select 'Settings'
 or  	Select 'Boost Mem'
OFF	The current setting is shown
 or  	Select and confirm 'ON' or 'OFF'

Read Number

With this feature set to ON, each incoming caller display number will be announced. See page 95 for caller display.

  or  	Open the Menu, select 'Settings'
 or  	Select 'Read Number'
ON	The current setting is shown
 or  	Select and confirm 'ON' or 'OFF'












Change Case

  or  	Open the Menu, select 'Settings'
 or  	Select 'Change case'
ABC	The current setting is shown
 or  	Select and confirm

Dial Mode and Recall (see pages 29 30)

Time

Date/Time

  or  	Open the Menu, select 'Time'
 or  	Select 'Date & Time'
 	Enter the day, month and year and confirm
 	Enter the hours (24 hour clock) and confirm

When setting the time and date, it is also possible to use the left and right keys to move backward and forward to make corrections. This also applies when entering phonebook entries.

Time Format

You can set the time to be displayed in 24 or 12 hour clock

⏮, ^ or v, ⏭	Open the Menu, select 'Time'
^ or v, ⏭	Select 'Format'
24 hour	The current setting is shown
^ or v, ⏭	Select and confirm 24 or 12 hour

Reset (see page 30)

7. Phone Book

200 names and phone numbers can be stored in the phone book with a maximum of 16 letters and 24 digits for each entry.

- * Always enter the area dialling code with each phone book entry.
- * The phone book entries are managed alphabetically.
To go quickly to a phone book entry, enter the first letter of the corresponding entry.

Entering a name

The digit keys are also labelled with letters for the entry of the respective letters. Pressing the respective key the necessary number of times enables capital letters and digits to be entered.

①	Space
ⓧ of	Delete
⑦	Special characters



To enter the same letter twice, press the button to enter the letter. Wait until the cursor moves forward one place. Enter the letter again.







Creating phone book entries

2 sec	Opens add phone book entry mode
	Enter the name (max. 16 letters) and confirm it
	Enter the phone number (max. 24 digits) and confirm it
^ or v,	Select and confirm a ringing melody







Editing phone book entries

	Open the phone book
^ or v	Select a phone book entry
, ^ or v, 	Open phone book options, select 'Edit'
<< >> 	Edit the name (max. 16 letters) and confirm it
<< >> 	Edit the phone number (max. 24 digits) and confirm it
^ or v,	Select and confirm a ringing melody

Deleting single phone book entries

 , 	Open the phone book
^ or v	Select a phone book entry
 , ^ or v, 	Open phone book options, select 'Delete'
Delete?,  or 	Confirm the deletion or Cancel

Deleting all phone book entries

 , 	Open the phone book
^ or v	Select a phone book entry
 , ^ or v, 	Open phone book options, select 'Delete All'
Delete All?,  or 	Confirm the deletion or Cancel

Calls List



8. Calls List

The Calls List on your telephone works together with the Caller number display (CLIP¹) service supplied by your telephony network provider. Please contact your telephony network provider to arrange for subscription to this service.

The number of the caller (or name if stored in the Phone Book) appears in the display when the phone rings. If the caller has withheld their phone number, a corresponding message appears in the display. The phone number is not displayed and will not be stored in the calls list.

A total of 30 incoming calls, with a maximum of 16 letters for the name and 23 digits for the number can be stored in the calls list. The number of new calls received will be shown in the display along with the flashing 'CLIP' icon.

Displaying calls list entries

	Opens the calls list at most recent entry
	Select an entry









Other messages that you may see in the display, if your telephone network provider supports this service, are:

WITHHELD PRIVATE	The caller has withheld their number or the information is not available
INTERNATIONAL	The caller is dialling you whilst abroad or may be using an internet telephony service.
PAYPHONE	The caller has dialled you from a public payphone
OPERATOR	Call from a network operator

¹ **CLIP:** Calling Line Identification Presentation






Storing calls list entries in the phone book, or quickdial memories

A phone number stored in the calls list can be stored directly to the phone book or quickdial memories.






	Opens the calls list at most recent entry
^ or v	Select an entry
 , ^ or v, 	Open the Options Menu, select 'Save to PB' or 'M1, M2 or M3'
 , 	Enter the name and confirm it
<< >>  , 	Edit the number and confirm it
^ or v, 	Select and confirm a ringing melody

Deleting calls list entries

Deleting a single calls list entry

	Opens the calls list at most recent entry
^ or v	Select an entry
 , ^ or v, 	Open the Options Menu, select 'Delete'
Delete?  or 	Confirm the deletion or Cancel

Deleting all calls list entries

	Opens the calls list at most recent entry
^ or v	Select an entry
 , ^ or v, 	Open the Options Menu, select 'Delete All'
Delete All?,  or 	Confirm the deletion or Cancel

Using the Answering Machine

9. Answering Machine

Your answering machine can be ready for use within a few seconds of plugging in the telephone line cord and switching on the mains power. Just follow the steps in this section to set up and use your answering machine.

Switch on/off

- | | |
|---|---|
| ① | Switches the answering machine on or off. The current answer mode is announced. |
|---|---|

Set the voice prompt language

- | | |
|-----------|--|
| ⊞ x 2 | Open the answering machine menu |
| ^ or v, ⊞ | Select 'Language' |
| ^ or v, ⊞ | Select 'German', 'French' or 'English' and confirm |

Set the answer mode

- | | |
|---------|---|
| ① | Switch the answering machine on |
| 2 sec ⊞ | To change the mode between 'Answer & Rec.', and 'Answer Only' |

Record your outgoing message (OGM)

Your answering machine comes with a default outgoing message but you can record your own personal OGM of up to 2 minutes long.








- | | |
|---------|------------------------------------|
| 2 sec ⏮ | Record your message after the beep |
| ⏹ | Press to end your recording |

Check your OGM

- | | |
|---|------------------------------|
| ⏮ | The current OGM is announced |
|---|------------------------------|

To return to the factory pre-set OGM, just press and hold the ⊞ key whilst the current OGM is playing.

Set the answer delay

 

 x 2	Open the answering machine menu
 or  , 	Select 'Answer Delay'
5 rings	The current setting is shown
 or  , 	Select and confirm the number or rings (2-9) or 'Time Saver'.

Time saver: This feature can save you the cost of a call when you ring in to listen to your messages from another phone. If your answering machine answers after 2 rings you have new messages, if it answers after 5 rings then there are no new messages. Hang up after the 2nd ring and you will not be charged for the call.

Using the Answering Machine




 
Record a memo

You can use your answering machine to record memo messages for other users to listen to later.

2 sec 	Record your memo after the beep
	Press to end your recording


Listening to your messages/memos

Your messages/memos are played back in the order that they were received. New messages are played before old messages. The time and date of each recording is announced before each message is played back.

	Play/Pause
	Stop
	Rewind
	Fast forward


Using the Answering Machine


Delete a single message/memo

 Play the message to be deleted

2 sec  Delete the message

Delete all messages/memos

 x 2 Open the answering machine menu

^ or v, , Select 'Del All Msgs'
Delete
All?

 or  Confirm or cancel

Memory Full

Should your answering machine become full either during a recording or after the memory has become full, 'Answering Machine Full' will be announced and the Answer Mode will change automatically to 'Answer Only'. You will need to delete some messages before any new messages can be recorded.









10. Remote Access

You can call your answering machine from any Touchtone™ phone or mobile phone whilst you are away from home to listen to your messages.




PIN Code for remote access


A 3-digit PIN code is required for remote access to your answering machine. The default code is '000' but for security reasons you should change this to a code personal to you.

Changing the PIN code

 x 2	Open the answering machine menu
 or  , 	Select 'Remote PIN'
 	Enter the old PIN code and confirm it
 	Enter the new PIN code and confirm it

Call in to check your messages

	Dial your own phone number
3 x  , 	Switch to remote access and enter your 3 digit PIN code

 If you enter your PIN code incorrectly 3 times, the answering machine will hang up the call.

If you enter your PIN code correctly you can now remotely control your answering machine by using the digits on the keypad.

Using Remote Access

Remote commands

Digit	Function
1	Rewind
2	Play/Pause
3	Fast Forward
4	1st OGM Playback (Answer & Record)
5	1st OGM Recording
6	Stop
7	Delete current message
8	Answer Off
9	Answer On
0	Delete all old messages
#	Record a memo

11. Private Branch Exchanges

R button on private branch exchanges

If the telephone is connected to a private branch exchange, functions such as transferring calls and automatic call back can be used via the R button. Please refer to the operating manual supplied with your private branch exchange to determine which recall (Flash) time must be set in order to use these functions. The dealer where you purchased the exchange can provide information as to whether the telephone will work properly with the exchange.

Setting the Recall time

Two recall timings are available.
Short 100ms and Long 300ms.

 ,  or  ,  Open the Menu, select 'Settings'

 
 or  ,  Select 'Recall'

Short The current setting is shown

 or  ,  Select and confirm 'Short' or 'Long'

Dialling pause

In the case of private branch exchanges, it is necessary to enter an access code to get an outside line with its corresponding dialling tone. When using some older private branch exchanges, it takes a little time before the dialling tone becomes available. Particularly in the case of such private branch exchanges, it is possible to insert a dialling pause after the number for the outside line so that the number can be dialled in a continuous process without having to wait for the dialling tone.



Enter digit/s, Insert a dialling pause. 'P' is shown in the display.



The pause can also be entered with the phone number in the phone book.











Private Branch Exchanges

R button and Supplementary services

Your telephone supports the supplementary services offered by your telephone network provider, such as call brokering, call waiting and conference calls. The supplementary services can be used in conjunction with the R button. Please contact your telephone network provider with regard to enabling the supplementary services and which recall time must be used.


Dial mode








Two dialling modes are available, Tone and Pulse. Only change this setting if you are advised to do so by your private branch exchange dealer.

 ,  or  , 	Open the Menu, select 'Settings'
 or  , 	Select 'Dial Mode'
Tone	The current setting is shown
 or  , 	Select and confirm 'Tone' or 'Pulse'

Reset to default settings

You can reset the telephone base to its original default settings.

 **Caution:** The phone book, calls list, redial list and any answering machine messages and memos are deleted when you reset the telephone base.

 ,  or  , 	Open the Menu, select 'Reset'
	Enter PIN (Default 0000)
 or 	Confirm or Cancel

12. If Problems Occur

Service Hotline

Should problems arise with the telephone, please refer to the following information first. In the case of technical problems, you can also contact our hotline service, UK Tel. 0844 800 6503 (cost via UK landline at time of going to print: 6p connection charge and 5p/min, thereafter, different charges may apply if calling from a mobile phone). Hotline hours are Monday to Friday, 9am to 5pm, excluding public and national holidays. In the case of claims under the terms of the guarantee, contact your sales outlet. There is a 2 year period of guarantee.

Problem	Solution
No telephone calls possible	<p>The telephone line is not connected properly or is defective. Only use the telephone connection cable supplied.</p> <p>Test the telephone line/socket by using another telephone</p> <p>The power adaptor is not plugged in/switched on or there is a complete power failure.</p>

The system no longer responds or is in an undefined state	Reset all the functions to their default settings. See page 30.
The caller number display (CLIP) does not function	<p>Check that you have this service on your telephone line. Please call your network provider.</p> <p>The caller has withheld their telephone number</p>
The handset does not ring	Check that the ringer is not set to off. See page 17.
The answering machine does not record messages/memos	Check that the answering machine is connected correctly and switched on. Is the memory full? See page 26.
Remote access does not work	Check that the PIN is correct and that you are using a touchtone phone. See page 27.

Technical Properties

13. Technical data

Feature	Value
Power supply	Input: 230VAC 50Hz Output: 12VDC 670mA
Dialling mode	Tone (DTMF) Pulse
Permissible ambient temperature	0°C to 45°C
Permissible relative humidity	20% to 80%
Recall	100, 300 ms

Default settings

Language	Deutsch
Handset Ringing melody	8
Handset Ringing volume	5
Read Number	On
Keypad beep	On
Contrast	4
Boost memory	Off
Time Format	24 hr
Answer Mode	Answer & Record
PIN Code for Remote Access	000
Recall time	100 ms
Dialling mode	Tone
PIN-Code	0000

14. Maintenance/Guarantee

Maintenance

- Clean the product surfaces with a soft, fluff-free cloth
- Never use cleaning agents or solvents

Guarantee

AMPLICOM equipment is produced and tested according to the latest production methods. The implementation of carefully chosen materials and highly developed technologies ensure trouble-free functioning and a long service life. The terms of the guarantee do not apply where the cause of the equipment malfunction is the fault of the telephone network operator or any interposed private branch extension system. The terms of guarantee do not apply to the rechargeable batteries or power packs used in the products. The period of guarantee is 24 months from the date of purchase. All deficiencies resulting from material or production faults which occur during the period of guarantee will be eliminated free of charge.

Rights to claims under the terms of guarantee are annulled following intervention by the purchaser or third parties. Damage caused as a result of improper handling or operation, incorrect positioning or storing, improper connection or installation, Acts of God or other external influence are not covered by the terms of guarantee. In the case of complaints, we reserve the right to repair or replace defect parts or provide a replacement device. Replacement parts or devices become our property.

Rights to compensation in the case of damage are excluded where there is no evidence or intent or gross negligence by the manufacturer. If your equipment shows signs of defect during the period of guarantee, please return it to the sales outlet in which you purchased the AMPLICOM equipment together with the purchase receipt. All rights to claims under the terms of the guarantee in accordance with this agreement must be asserted exclusively with regard to your sales outlet.

Maintenance/Guarantee

Two years after the purchase and transfer of our products, claims under the terms of guarantee can no longer be asserted.

Declaration of Conformity

This device fulfils the requirements stipulated in the EU directive: 1999/5 EU directive on radio equipment and telecommunications terminal equipment and the mutual recognition of their conformity. Conformity with the above mentioned directive is confirmed by the CE symbol on the device. To view the complete Declaration of Conformity, please refer to the free download available on our website www.amplicom.eu.

GB



Distributed by: Audioline GmbH, D-41460 Neuss

15. Index

A		G	
Adjusting the handsfree volume	13	Guarantee	33
Adjusting the receiver volume	12	H	
B		Handsfree	13
Boost mem	18	I	
Boosting the receiver volume	13	Icons in the display	8
C		If problems occur	31
Calling back missed calls	11	K	
Call in to check messages	27	Key tone	17
Calls list	22	L	
Chain dialling	12	Language	17
Change Case	18	Listening to your messages	25
Check the contents of the package	6	M	
Contrast	17	Maintenance	33
Creating phone book entries	20	Making a call	11
D		Memory full	26
Date/time	19	Muting the microphone	13
Declaration of Conformity	34	N	
Default settings	30	Navigating in the menu	9
Dialling phone numbers from the phone book	12	O	
Dialling pause	29	Operating the telephone	8
Dial mode	30	P	
Displaying calls list entries	22	Phone book	20
E		PIN Code for remote access	27
Editing phone book entries	20	Power fail	14
End a call	11	Private branch exchanges	29
Entering a name	20	Q	
Equalizer	13	Quickdial	12

Index

R

R button and supplementary services	30
R button on private branch exchanges	29
Read Number	18
Record a memo	25
Record your OGM	24
Redial	11
Remote commands	28
Reset to default settings	30
Ringer tone	17
Ringing volume	17

S

Safety information	4
Set the answer delay	25
Set the answer mode	24
Setting the recall time	29
Set the voice prompt language	24
Shaker	6
Starting up	6
Storing a quickdial entry	10

T

Take a call	11
Talk time display	13
Technical properties	32
Telephoning	11
Time format	19

U

User Profiles	15
Using a headset	14
Using remote access	27
Using the answering machine	24
Using the menu	15

Y

Your PowerTel 58	7
----------------------------	---

GB

