

Troubleshooting

If the unit doesn't operate...	Check that the batteries are installed correctly or install new batteries.
If the volume is too low...	Install new batteries.
If the voice/music begins playing at a very high or low rate of speed...	Install new batteries.
If there is a continuous buzzing sound and the unit doesn't operate...	Install new batteries.
If the unit malfunctions...	Install new batteries.
If the light of the keys becomes dim...	Install new batteries.
If blow sensor doesn't function	Make sure switch on back of unit is in ON position or install new batteries.
When opening the left or right drawers, unit doesn't react	Make sure switch on back of unit is in ON position or install new batteries.

Important Information

Care instructions:

- Keep the unit clean by wiping it with a slightly damp cloth.
- Keep the unit out of direct sunlight and away from any direct heat source.
- Do not expose the unit to moisture or water.
- Do not shine the light of the torch directly into your eyes

This product complies with the essential requirements of European directives 88/378/EEC, directives 89/336/EEC, 92/31/EC, 93/68/EEC, 2004/108/EC, 2002/96/EC and 2003/108/EC, 2002/95/EC

InspirationWorks UK Ltd

Prudence Place
Proctor Way
LUTON
Bedfordshire
LU2 9PE
UK



www.inspirationworks.co.uk

© 2010 CIDE Toys

©Disney
Visit the Disney website at www.DisneyPrincess.com

Warranty:

Should you in the unlikely event experience any problems with this product all our products have a six month guarantee. In the first instance, return the product back to the place of purchase where a replacement will be issued.

V00
May 2010
Printed in China
Made in China



WASTE ELECTRICAL PRODUCTS AND BATTERIES
SHOULD NOT BE DISPOSED OF WITH HOUSEHOLD
WASTE. PLEASE RECYCLE WHERE FACILITIES
EXIST. CHECK WITH YOUR LOCAL AUTHORITY FOR
RECYCLING ADVICE

Hg Pb

 


Secret Treasure Box

Keep all your secrets safe

Instruction manual

4+

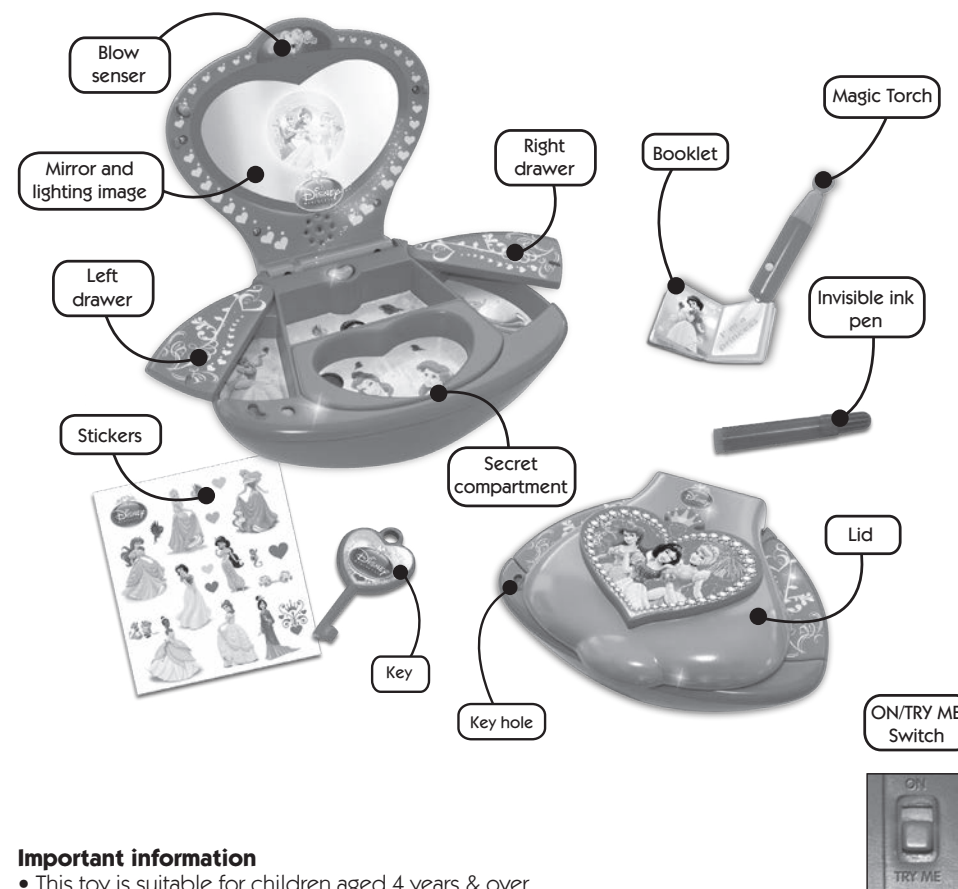

Important information

- This toy is suitable for children aged 4 years & over.
- Please retain this manual for further reference.
- WARNING: All packing materials such as internal bags, plastic collars, plastic films, carton inserts are not part of this product and should be discarded for your child's safety.
- IMPORTANT: for additional safety, check toys regularly for signs of damage during use.
- WARNING: Not suitable for children under 36 months. Presence of small parts which can be swallowed.

S1090

inspiration
works

Content

- 1 Secret Treasure Box
- 1 Magic torch
- 1 Invisible ink pen
- 1 Secret booklet
- 20 Small stickers
- 1 key

How to play

After having unpacked your *Secret Treasure Box*, move the switch on the back to the ON position.



Using your secret key open your *Secret Treasure Box*.
As soon as the lid is completely open, the unit will play you a melody and light up the image in the mirror. You are now in the enchanted world of Disney Princess.



Press the heart key and listen to enchanted phrases and see the mirror lighting up to reveal the Disney Princess.



Slide the left drawer and enter in the world of Cinderella.
You can store here all your very own secrets!



Slide the right drawer and enter in the world of Aurora.
You can store here all your very own secrets!



If you have secrets that you wanted to protect from prying eyes, then lift the heart drawer and store them in the very secret compartment.



Using the invisible ink pen, you can write secret messages on your booklet.
To read them, use the torch, it's magic! The torch reveals your messages!



Blow above the mirror and listen to what a beautiful princess you are!
Mirror magically lights up.

 


Note: If key is lost, you can open your *Secret Treasure Box* by inserting the tip of a belt clip into the small hole below the key hole.

How to change batteries


Changing batteries of the Secret Treasure Box:

1. This product requires 3 x 1.5 V-AA-LR6-AM3 batteries
2. When required, using a suitable screwdriver, undo and remove the battery cover located under the unit.
3. Insert 3 x 1.5 V-AA-LR6-AM3 batteries into the compartment ensuring they are installed the correct way around.
4. The polarities are marked inside the battery compartment.
5. Should the batteries have no polarity markings, the flat end of the battery should always be inserted against the spring.
6. Reassemble the battery cover and tighten the screw to secure.
7. Do not over tighten.

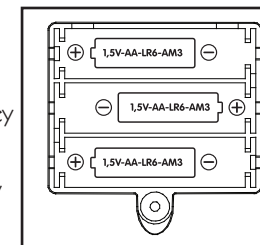

Changing batteries of the Torch:

 1. This product requires 3 x 1.5 V – AG3 – LR41 batteries
2. When required, using a suitable screwdriver, undo and remove the battery cover located under the unit.
3. Insert 3 x 1.5 V – AG3 – LR41 batteries into the compartment ensuring they are installed the correct way around.
4. The polarities are marked inside the battery compartment.
5. Should the batteries have no polarity markings, the flat side of the battery should always be visible when batteries are in place.
6. Reassemble the battery cover and tighten the screw to secure.
7. Do not over tighten.



Please note the important points below when using batteries to power this product:

- Batteries should be inserted and removed by an adult.
- Only use the type of batteries specified in this user manual, or equivalent type. We recommend the use of alkaline batteries.
- Keep small batteries out of the reach of young children
- Follow the polarity diagram inside the battery compartment and the polarity markings on the batteries.
- An incorrect location may either damage the toy, or cause battery leakage, or, to an extreme degree, lead to battery explosion.
- Do not try to charge non-rechargeable batteries, as they may leak or explode.
- Replace all batteries at the same time.
- Do not mix new with old batteries
- Do not mix different types of batteries (i. e. alkaline and zinc carbon).
- Remove the batteries during long periods of non-use. Always remove exhausted batteries from the product. Battery leakage and corrosion can damage the product.
- Do not short-circuit the supply terminals. Store batteries away from metal objects.
- Do not dispose of batteries in fire, as they may leak or explode. Never disassemble batteries.
- Rechargeable batteries should not be used.
- When rechargeable batteries are used anyway :
 - Rechargeable batteries shall be charged only under the supervision of an adult.
 - Rechargeable batteries shall be removed from the toy before being charged (if they can be removed).
- If a battery is swallowed, consult a Doctor or Medical Facility. Don't forget to take the product with you.
- If battery leakage occurs and comes in contact with the skin or eyes, wash immediately with lots of water.
- Batteries are included for demonstration purposes only and may need replacing after purchase.
- Strong Electro Magnetic Interference may disturb the normal function of the product. If so, simply reset the product to resume normal operation by following the instruction manual. In case the function does not resume, please use the product in another location.