



User manual

Fridge-Freezer

ERZ36700

We were thinking of you

when we made this product

Welcome to the world of Electrolux

Thank you for choosing a first class product from Electrolux, which hopefully will provide you with lots of pleasure in the future. The Electrolux ambition is to offer a wide variety of quality products that make your life more comfortable. You find some examples on the cover in this manual. Please take a few minutes to study this manual so that you can take advantage of the benefits of your new machine. We promise that it will provide a superior User Experience delivering Ease-of-Mind. Good luck!

The following symbols are used in this manual:



Important information concerning your personal safety and information on how to avoid damaging the appliance



General information and tips



Environmental information

Scrapping old appliances



The symbol on the product or on its packaging indicates that this product may not be treated as household waste. Instead it shall be handed over to the applicable collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. For more detailed information about recycling of this product, please contact your local city office, your household waste disposal service or the shop where you purchased the product.

Safety instructions

Your new fridge/freezer may have other functions compared to your previous one.

Carefully read these instructions to learn how the appliance works and how to care for it. Keep the instruction booklet. It will come in handy if you later sell the cabinet or give it to somebody else.

These warnings are provided in the interests of your safety. Ensure that you understand them all before installing or using the appliance. Your safety is of paramount importance. If you are unsure about any of the meanings or warnings contact the Customer Care Department.

For the User

- The refrigerator is intended for the storage of foodstuffs and for the production of ice for normal household consumption in accordance with these instructions.
- Do not keep explosive gases or liquids in the refrigerator or freezer compartment. They may explode and cause injury and material damage.
- Do not let sharp objects come into contact with the refrigerating system on the back of and inside the cabinet. If the refrigerating system is punctured, the cabinet will be damaged and foodstuff inside may spoil.
- Do not keep carbonised drinks or bottles in the freezer compartment. The glass bottles may break.
- The cabinet is heavy. The edges and projecting parts of the cabinet may be sharp. Be careful when moving the cabinet and always use gloves.

Child Safety

- Pay attention so that small children do not gain access to the operating controls or the inside of the cabinet.



WARNING

Keep ventilation openings, in the appliance enclosure or in the built-in structure, clear of obstruction.



WARNING

Do not use mechanical devices or other means to accelerate the defrosting process, other than those recommended by the manufacturer.



WARNING

Do not damage the refrigerant circuit.



WARNING

Do not use electrical appliance inside the food storage compartments of the appliance, unless they are of the type recommended by the manufacturer.

Contents


Scrapping old cabinets	4	HINT and TIPS	16
Safety instructions	5	Saving energy	16
Contents	6	Food Storage	16
		Protect the environment	17
USE	6	MAINTENANCE and CLEANING ..	17
DISPLAY	7	Removing the ventilation grille	17
First switch on	8	Cleaning	17
Switching off	8	Defrosting the freezer	18
Functions Menu	9	Defrosting the fridge	19
Setting the Clock	9	To change the lamp	19
Select /Switch off /Switch on each compartment	9	Change of carbon filter	19
Switch off of one compartment	9	When the appliance is not in use ..	19
Ambient Temperature Function	9	SOMETHING NOT WORKING	20
Child Lock Function	10	TECNICAL SPICIFICATION	22
Shopping Function	10	INSTALLATION	23
Eco mode Function	10	Mains Cable	23
Chill Mode Function	10	Unpacking	23
Use of the fridge compartment	11	Remove the transport supports ...	23
Temperature regulation	11	Cleaning	24
The "Natura-fresh" zone	11	Installation of carbon filter	24
Holiday Function	12	Installing the cabinet	24
Use of the freezer compartment ...	12	Door Reversal	25
Temperature regulation	12	Electrical connection	25
Freezing fresh food	13	Guarantee/Customer Service	27
Storage of frozen food	13	European Guarantee	28
Excessive temperature alarm	13	www.electrolux.com	29
Door open acoustic alarm	14		
Cabinet interior	14		

USE


Position and clean the cabinet as explained in the section "Installation". Check that the drain hose at the rear of the cabinet discharges into the drip tray.



Before inserting the power plug into the outlet and switching on the cabinet for the first time, leave it standing upright for about 4 hours. Otherwise the compressor may sustain damage. This time will allow the oil sufficient time to return to the compressor.

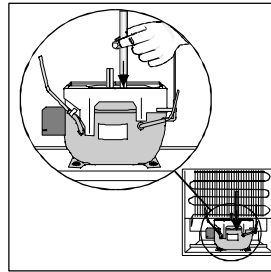

DISPLAY

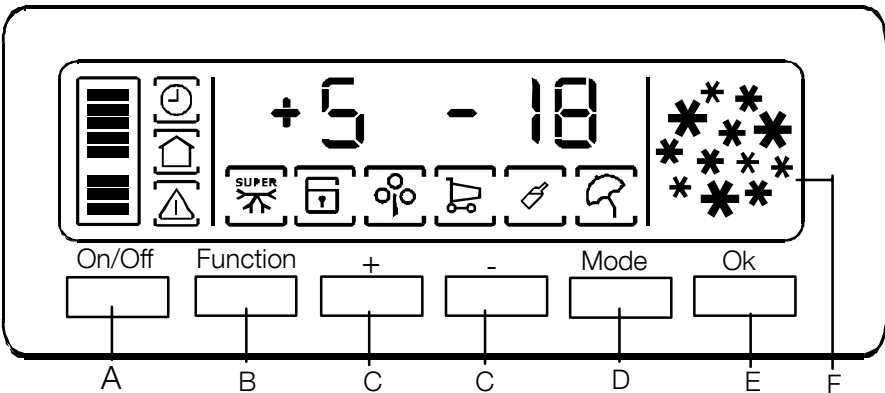

A - Appliance button ON/OFF


B - Function button


C - Temperature regulation button

D - MODE-button

E - Confirmation button


F - Temperature and function indicator

 
 If on the indicated compartment is on;

 If on the indicated temperature is that of the relative compartment

Flashes the operations corresponds to the relative compartment


 If on the Clock function is on


 If on the temperature indicated is the ambient temperature

 Excessive temperature alarm and Door open acoustic alarm Indicator (if foreseen)

 Positive Temperature indicator

 Negative Temperature indicator

 Temperature indicator

 If on the Action Freeze function is on

 If on the Child Lock funktion is on

 If on the Eco Mode function is on

 If on the Shopping function is on

 If on the Quick Chill mode function is on

 If on the Holiday function is on


First switch on


After plugging the plug into the power outlet, if the display is not illuminated, press key (A), appliance on.

As soon as the appliance is turned on, it is in alarm condition, the temperature flashes and you will hear a buzzer.

Press key (E) and the buzzer will go off (also see the section on "excessive

temperature alarm") the icons 

and  still flashes and on the indicator

 will appear the warmest temperature reached.

For a correct storage of the food select the Eco mode function that guarantee the following temperatures are set:

+5°C in the fridge

-18°C in the freezer

· Wait until the inside compartment temperature reach -18°C, before intro-

ducing the goods in the freezer compartment.

· To select a different temperature see "Temperature regulation".



Important

If the door remains ajar for some minutes, the internal lighting will turn off electronically; after this, the lighting function will be reset by closing and opening the door itself.

Switching off

The appliance is shut off by pressing key (A) for more than 1 second. After this, a countdown of the temperature from -3 -2 -1 will be shown.

Functions Menu

By activating the key D the functions menu is operating. Each function could be confirmed by pressing button E. If there is no confirmation after some seconds the display will go out from the menu and return in normal condition.

The following functions are indicated:

- Select/Switch off/Switch on fridge compartment
- Select/Switch off/Switch on freezer compartment

 Ambient Temperature


 Child Lock function

 Shopping function

 Eco Mode function

 ^{SUPER} Action Freeze function

 Quick Chill function

 Holiday function

Setting the Clock

The Clock function is activated by pressing key +/- (C/C). Set the hours' first, confirm by pressing key E, then the minutes, confirm by pressing key E. **Note!** You must make new time setting after power failure.

Select /Switch off /Switch on each compartment

The temperature may be regulated by pressing the key (B) to select the compartment and than the key (C/C) to set the desired temperature.

By pressing the key B the current temperature setting flashes on the indicator and by pressing the key B again it

is possible to change it.

You confirm the choice of the temperature either by pressing the key E, (you will hear the buzzer) or by waiting for some seconds (you will not hear the buzzer).

Then the indicator shows again the inside compartment temperature.

The newly selected-temperature must be reached after 24 hours.

After a long period out of use it is not necessary to set again the temperature because it remains stored.




Attention!

During the stability period by the first starting the temperature displayed can not correspond to the setting temperature. During this time it is possible that the temperature displayed is different than the setting temperature.

Switch off of one compartment

To switch off one compartment press the key (D) until the compartment is selected and then press the key (A), the count down will follow.

Ambient Temperature Function

The ambient temperature function is activated by pressing key D (several times if necessary) until the corresponding icon appears .

In this condition the selected temperature is the ambient temperature.

You must confirm the choice by pressing key E within few seconds.

You will hear the buzzer and the icon remains lighted.

It is possible to de-activate the function at any time by pressing key D until the corresponding icon will flash and then key E.

Child Lock Function

The Child Lock function is activated by pressing key D (several times if necessary) until the corresponding icon

appears .

You must confirm the choice by pressing key E within few seconds. You will hear the buzzer and the icon remains lighted.


In this condition any possible operation through the keys does not cause any change as long as this function is activated.

It is possible to de-activate the function at any time by pressing key D until the corresponding icon will flash and then key E.

Shopping Function

If you need to insert a large amount of warm food, for example after doing the grocery shopping, we suggest activating the Shopping function to chill the products more rapidly and to avoid warming the other food which is already in the refrigerator.

 
The Shopping function is activated by pressing key D (several times if necessary) until the corresponding icon

appears . You must confirm the choice by pressing key E within few seconds. You will hear the buzzer and the icon remains lighted.

The Shopping function shuts off automatically after approximately 6 hours. It is possible to de-activate the function

at any time by pressing key D until the corresponding icon will flash and then key E.

Eco mode Function

The Eco Mode function is activated by pressing key D (several times if necessary) until the corresponding icon appears  (or setting the temperature at +5°C and -18°C).

You must confirm the choice by pressing key E within few seconds. You will hear the buzzer and the icon remains lighted.

 
In this condition the chosen temperatures are automatically set (+5°C and -18°C), in the best conditions for storing food.

It is possible to de-activate the function at any time by changing the selected temperature in one of the compartment.

Chill Mode Function

The Quick Chill function permits the rapid cooling of cans and bottles taking forced cold air into them.

Put the drinks on the Quick Chill shelf and open the air lever till the maximum.

The Quick Chill function is activated by pressing key D (several times if necessary) until the corresponding icon appears .

When the cooling is finished de-activate the function by pressing key D until the corresponding icon will flash, then key E and dispose the air lever to the minimum.

When the cooling is finished deactivate the function by pressing key D until the corresponding icon will flash, then key E and dispose the air lever to the minimum.

Use of the fridge compartment

Temperature regulation

The temperature of this compartment may be regulated between +3°C and +8°C.

During normal functioning the indicator shows the temperature inside the fridge.



Attention!


Difference between the temperature displayed and temperature setting is normal. Especially when:

- a new setting has recently been selected
- the door has been left open for a long time
- warm food has been placed in the compartment.

The "Natura-fresh" zone

The temperature in the "Natura-fresh" zone is constantly just above 0°C.

Adjustment by the user is not necessary.

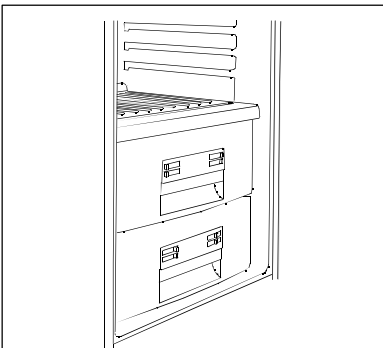

The "Natura-fresh" zone contains two drawers separated by a cover. The lower drawer has a higher humidity of the air is suited for keeping berries, fruits and vegetables. The upper drawer is suited for meat, fish and poultry.



Foodstuffs not suitable to keep in the "Natura-fresh" zone:

- Cold sensitive fruits like bananas, papaya, passion fruits, avocado and citrus fruits.

- Cold sensitive vegetables like pimienta, cucumber courgette, aubergine potatoes and tomatoes.

Fruit and vegetables not yet mellow, like pears.



Pack up all foodstuffs before

keeping in the "Natura-fresh" zone. In this way aroma, moisture and colour is kept for a longer time.

Suitable packing materials:

Polyethylene airtight bags and wraps;

Plastic containers with lids;


Aluminium foil.

Regulation of air humidity

The two drawers are fitted with adjustable air slots. The opening in the air slots can be adjusted with sliders, which allow the humidity inside the drawers to be varied.

With the air slots open, the stronger air circulation results in a lower air moisture in the drawer.


A closed air slots keeps the natural air moisture for longer.

 
 Do not connect the refrigerator in spaces where ambient temperature can decrease to below freezing. The refrigerator may only be connected to drinking water supplies. The refrigerator may only be connected to cold water supplies.

Holiday Function

The holiday function sets the temperature at + 15°C.

This function allows you to keep the refrigerator shut and empty during a long holiday period (e. g. the summer holidays) without the formation of a bad smell.

The Holiday Function may be regulated by pressing the key C. By pressing the key C the current temperature setting flashes on the indicator. Press the key C again. When on the display appears the icon  confirm the choice of the temperature or by pressing the key E, (you will hear the buzzer) or by waiting for some seconds (you will not hear the buzzer).

Now the refrigerator is in the Holiday function in the energy saving mode and the indicator shows the icon  . It is possible to de-activate the function at any time by changing the selected temperature in the compartment.

 


Attention!

The fridge compartment must be empty with Holiday function on.

Use of the freezer compartment

The freezer is provided with the symbol



which means that it is suitable for freezing fresh food and for

long term storage of frozen and deep-frozen food.

Temperature regulation

The temperature may be regulated between -15°C and -24°C.

We suggest setting the internal temperature of approximately -18°C, which guarantees proper freezing and conservation of the frozen foods.



Attention!

During the stability period by the first starting the temperature displayed can not correspond to the setting temperature. During this time it is possible that the temperature displayed is different than the setting temperature.



Attention!

Difference between the temperature displayed and temperature setting is normal. Especially when:

- a new setting has recently been selected
- the door has been left open for a long time
- warm food has been placed in the compartment.

Difference until 5°C inside the compartment are quite normal.

During normal functioning the indicator shows the warmest temperature inside the compartment.

Freezing fresh food

The freezer compartment is suitable for long term storage of commercially frozen and deep-frozen food, and for freezing fresh food.


The maximum quantity of foods to freeze in 24 hours is shown on the serial number plate.

To freeze the amount of food indicated on the serial number plate, place the food directly in touch with the cooling surface (remove the drawer or basket). In case the food is frozen inside the drawers or baskets, the maximum quantity is slightly reduced.

To freeze fresh foods, you will need to activate the Action Freeze function. Press key D (several times if necessary) until the corresponding icon appears



You must confirm the choice by pressing key E within few seconds. You will hear the buzzer and on the display will appear some animation with lines. After a pre-cooling period of 24 hours, place the foods in the freezer. Place

the food to be frozen in the  compartment, as this is the coldest point.

The freezing process takes 24 hours. During this period do not put other foods in the freezer.

This function stops automatically after 52 hours.

It is possible to de-activate the function at any time by pressing key D until the corresponding icon will flash and then key E.

Storage of frozen food

When first starting-up or after a period out of use, before putting the products in the compartment let the appliance run at least 12 hours. To obtain the best performance from this appliance, you should: if large quantities of food are to be stored, remove all drawers and baskets from appliance and place food on cooling shelves.

Pay careful attention not to exceed load limit stated on the side of the upper section ► (where applicable).





Important

In the event of accidental defrosting, for example due to a power failure, if the power has been off for longer than the value shown in the technical characteristics chart under "rising time", the defrosted food must be consumed quickly or cooked immediately and then refrozen (after cooling).

Excessive temperature alarm

An increase in the temperature in the freezer compartment (for example due to an power failure) is indicated by:

- flashing temperature;
- freezer compartment flashing  ;
- flashing of the icon  ;
- sounding of buzzer.

When normal conditions are restored:



- the acoustic signal shuts off;
- the temperature value continues to flash;

When you press key "E" to de-activate the alarm, the highest temperature reached in the compartment appears on indicator for some seconds. Then it returns on the normal operation showing the temperature of the selected compartment. During the alarm phase, the buzzer can be switched off by pressing key E.

Door open acoustic alarm

An acoustic alarm will sound when the door is left open for around 5 minutes refrigerator, 1,5 minutes freezer.

The door open alarm conditions are indicated by:

- flashing symbol  of the relative compartment
- flashing of the icon  ;
- sounding of buzzer.


Press the key (E) to stop the acoustic alarm.

When normal conditions are restored (door closed):

- the acoustic alarm will stop.


Carbon filter's function:

The built-in carbon filter means that strong smelling groceries can be placed near other groceries without affecting their taste or aroma.

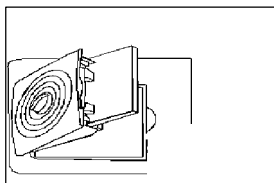


Cabinet interior

The shelves and door compartments are removable and can easily be re-arranged.

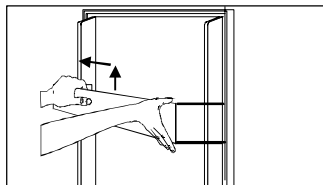


Certain shelves must be lifted up by the rear edge to enable them to be removed.

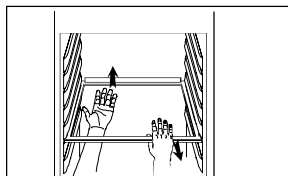


The bottom compartment in the door, the divider and the cover over drawer must not be moved as it has an impact on the air circulation.

Shelves with a raised edge should be placed with the raised edge facing the rear wall of the cabinet.

The lower "Natura-fresh" drawer is fitted with two moveable dividers inside with five different possibilities to separate different foodstuffs.


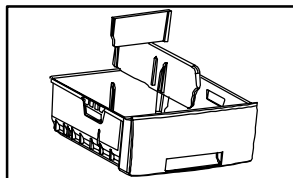


The vegetable drawer has a removable ventilation edging to increase the circulation of air and reduce the risk of condensation.

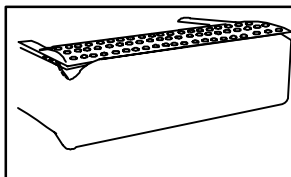

Quick chill shelf:

The lower Quick chill shelf can be placed in one of the upper grooves. To maintain the best performance the shelf should be placed in the second groove from the top.

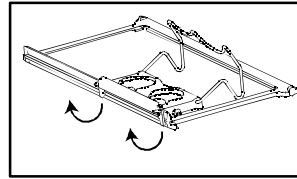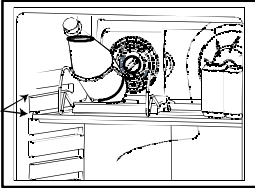


Bottle- and can holder

The side of the bottle and can holder is moveable to enable a more flexible placement of cans and bottles in front of the grid. To allow the holder to be moved easier, when moving sideways, press the shelf backwards.

During chilling of cans or bottles the article should be centrally placed in front of the grid to obtain the best chilling effect.

The bottle support can be pulled out when chilling larger bottles.

For a description of this functions start and stop, see under heading Quick Chill.

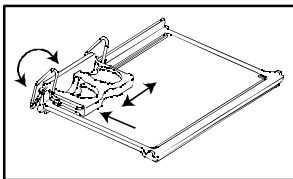

Dismantling of the bottle- and can holder.


Take out the Quick Chill shelf with holder from the cabinet.

To loosen the holder from the shelf, bend the hooks/brackets that surround the backside of the shelf.

Freezer drawers


The freezer drawers make it possible to quickly and easily find the food package you want. To gain space, the drawers can be removed and the products can be put directly on the shelves. On all shelves, except the top shelf, it is possible to place products that protrude 20 mm from the front edge. This allows maximum use of the available space.

Do not remove the bottom drawer. It is required to assure proper air circulation.

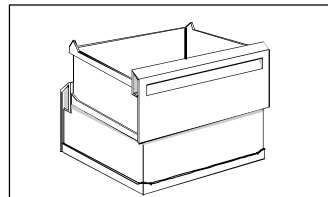

Freezer tray


Use the freezer tray to freeze berries and vegetables. After about 4 hours the food will be thoroughly frozen and can then be packaged normally. Food that is frozen in this way will not stick together, enabling you to use only the amount required.

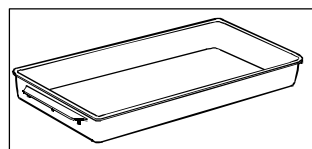

Ice cubes

Fill the ice tray to max. 3/4 since water expands as it freezes. Release the ice cubes by twisting the ice tray.

If ice cubes are kept for a long time, they will dry out and the taste is affected. Thus, throw away old ice cubes and prepare new ones when needed.

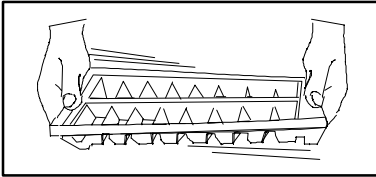

HINT and TIPS

Saving energy

- Pay careful attention to where the cabinet is placed. See the section "Installation". When installed correctly, the cabinet will consume less energy.
- Try to avoid keeping the door open for long periods, or opening the door too frequently as warm air will enter the cabinet, and cause the compressor to switch on unnecessarily often.
- Ensure there are no obstructions preventing the door from closing properly.
- Thaw frozen food in the fridge. This will ensure safer defrosting of foods and reduce the work of the refrigeration unit
- It is advisable to periodically clean the refrigeration system at the back of the appliance with a duster or vacuum cleaner.
- Always leave warm food to cool down to room temperature before placing in the fridge.
- Food which is to be frozen (when cool) should be placed in the fridge before being transferred to the freezer.

- Avoid unnecessary frosting in the cabinet by packing all foodstuffs into airtight packages before placing them in the freezer.
- Carefully follow the advice on freezing products in the section "Using the freezer". This will prevent wasting energy.
- Do not set the temperature too low in the freezer. A suitable temperature is in the range of -18°C to -20°C .
- Defrost the freezer when the frost layer reaches a thickness of 3-5 mm.
- Make sure the door gasket is complete and always clean.

Protect the environment

- Hand over the cabinet packaging and discarded fridges and freezers to a recycling station. Contact your local council or Environmental Health office for more information.
- Keep foodstuff in re-usable containers. Cut down on disposable material as much as possible.
- When cleaning the cabinet, use a mild washing-up detergent.
- Follow the advice in the section "Saving energy"
- The door gasket and coolant used in this cabinet will not harm the ozone layer.
- All parts in the packaging can be recycled.
- The cabinet has been designed for easy dismantling and subsequent recycling.

Food Storage


- To obtain the best results from your appliance, neither hot foods nor liquids which may evaporate, should be placed in the larder compartment.
- Avoid buying frozen food if you can not store it straight away. The use of an insulated container is advisable. When you arrive home place the frozen food in the freezer immediately.
- Ensure that food placed in the freezer is dated and labelled and used in date order to ensure that food is consumed at its best. Remove suspect food from you refrigerator and clean, refer to cleaning and maintenance.

MAINTENANCE and CLEANING

Removing the ventilation grille


The ventilation grille can be removed, e.g. to wash the grille.

Unsnap the ventilation grille by pulling it toward you.

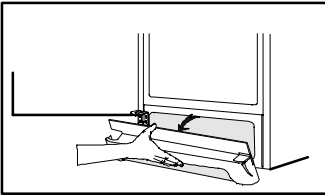

When reassembling the ventilation grid:

First hook at the hitches on the lower edge, then press the grid in position.

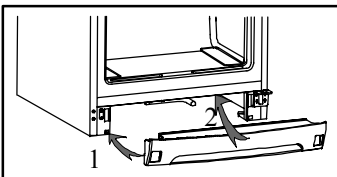

Cleaning


Clean the cabinet at regular intervals.

Disconnect the appliance from electricity supply.

Internal Cleaning

Clean the inside and accessories with warm water and bicarbonate of soda (5ml to 0,5 litre water) Rinse and dry thoroughly.

Regularly check the door seals and wipe clean to ensure they are clean and free from debris.

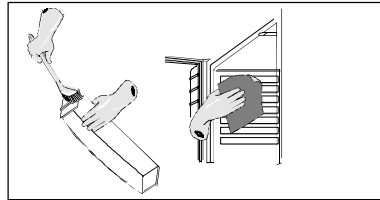

"Natura-fresh" drawer.


Pull out the drawer.

Lift it over the locks in back on the sliding guides. Tip drawer downwards and pull it out.

Pull out the dividing plater.

Clean whit soft detergent, and rinse whit lukewarm water.


Assemble in reverse order.

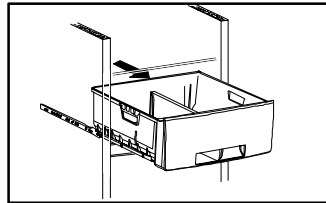

External Cleaning

Use water/neutral soap emulsion for cleaning the surface of stainless steel, anti-finger-print coated. Absolutely not to use abrasive paste.

Wash the outer cabinet with warm soapy water. Remove the ventilation grille (see the section "Removing the ventilation grille") and vacuum-clean under the cabinet. Once or twice a year dust the condenser (black grille) and the compressor at the back of the appliance, with a brush or vacuum cleaner, as an accumulation of dust will affect the performance of the appliance and cause excessive electricity consumption.

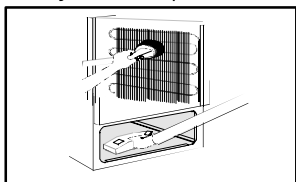


When moving the cabinet, lift it by the avoid scratching the floor.

Defrosting the freezer


A certain amount of frost will always form on the freezer shelves and around the top compartment. Defrost the freezer when the frost layer reaches a thickness of about 3-5 mm.

Remove the freezer drawers and place them on top of each other by turning every other drawer one half turn. Put insulating material around the drawers, e.g. blankets or newspapers.

The frozen products can also be packed closely together and be kept in a cold location, e.g. in the fridge.

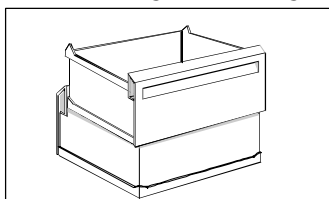


Defrosting can be accelerated by placing bowls with hot water (not boiling) inside the freezer.

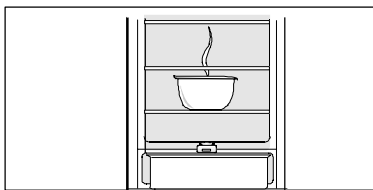

Loosen the drainage channel from its resting position and push in according to the illustration and place it in the bottom freezer drawer where water can collect.

Carefully scrape off the ice when it starts to thaw. Use a wood or plastic scraper. Do not use sharp objects as these may damage the interior.

When all the ice has melted, clean and wipe the cabinet dry, then put the drainage channel back in place. Switch on the cabinet and replace the frozen foodstuff.

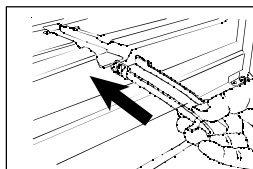

Never use a hair drier or other heating appliances to speed up defrosting. Excessive heat may damage the plastic interior, and humidity could enter the electric appliance making it live.

Defrosting the fridge

The fridge is defrosted automatically every time the compressor stops. Frost formation can be prevented by:

- not putting warm foodstuff inside the cabinet.
- avoiding frequently opening the door or keeping it open too long.


To change the lamp

The light is switched on automatically when the door is opened. Before replacing the light bulb, disconnect the power plug from the outlet.

Disassemble the lamp by using a screwdriver in the recess on the lamp insert.



Assemble a new lamp by guiding it into a centred position and press until it snaps.

Use a halogen bulb of the same type, maximum rating of 20 W.

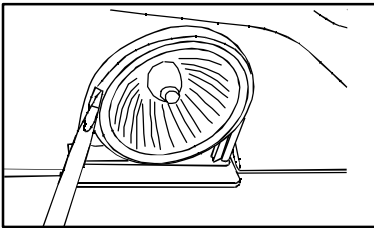

slot (3).

The new carbon filter is placed in the existing slot - The filter should be handled carefully so fragments don't loosen from the surface.

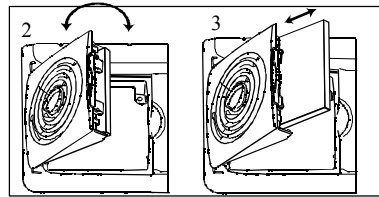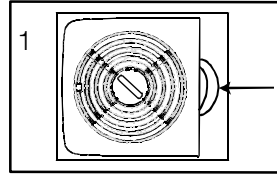

When the appliance is not in use
Disconnect the appliance from electricity supply.

Empty all foods and clean the appliance, leaving the doors ajar to prevent unpleasant smells.

If the cabinet will be kept on, ask somebody to check it once in a while to prevent the food inside from spoiling in case of a power failure.

Change of carbon filter

To maintain the best performance the carbon filter should be changed once a year with normal usage.

New carbon filters can be purchased from your local dealer. The filter is placed behind the grill and can be reached by opening the cover. The cover can be opened by simultaneously pressing the lever on the right of grill (1) and turning the cover outward (2). The carbon filter is then pulled out of its

SOMETHING NOT WORKING

Before contacting your local Service Force Centre check the following point:

Problem	Possible cause / Remedy
<p>"E" is displayed in the temperature display.</p>	<p>An error has occurred in measuring the temperature. Call your service representative. (The cooling system will continue to keep food products cold, but temperature adjustment will not be possible.)</p>
<p>Audible alarm + flashing red warning lamp. (It is too warm inside the freezer.)</p>	<p>Switch off the audible alarm by pressing the alarm off button. The audible alarm could have been triggered by: The cabinet having been recently switched on and the temperature still being too high. See the chapter "Switching on and setting the temperature". The door may have been open for so long that the 'door open' alarm was triggered.</p>
<p>It is too warm inside the refrigerator.</p>	<p>Set a lower temperature. Put food products in the right place inside the refrigerator. See the chapter "Temperature inside the refrigerator". Distribute the food products to allow cold air to circulate around them. Make sure that the door is completely closed and that the insulating strip is complete and clean.</p>
<p>It is too cold inside the refrigerator.</p>	<p>Set a warmer temperature.</p>
<p>It is too cold in the "Natura-fresh" zone.</p>	<p>Push the refrigerators "+" and the "Ok" buttons simultaneously about 5 sec.</p>
<p>Water comes out on the floor.</p>	<p>Place the drain hose at the back of the cabinet above the drain bowl. See the chapter "Before using the cabinet the first time".</p>

<p>It is too warm inside the freezer.</p>	<p>Set a lower temperature. Make sure that the door is completely closed and that the insulating strip is complete and clean. If warm food products have been put inside the freezer, wait for a couple of hours and then check the temperature again. Distribute the food products to allow cold air to circulate around them.</p>
<p>It is too cold inside the freezer.</p>	<p>Set a warmer temperature. Action Freeze could have been switched on. The temperature display shows the highest temperature inside the cabinet. Thus a difference between the temperature indicated on the display and the (average) temperature measured in another way is normal.</p>
<p>Too much frost and ice are produced.</p>	<p>Make sure that the door is completely closed and that the insulating strip is complete and clean.</p>
<p>The compressor operates continuously.</p>	<p>Set a warmer temperature. Make sure that the door is completely closed and that the insulating strip is complete and clean.</p>
<p>The cabinet does not operate at all. Cooling or interior light does not operate. No indicator lamps light.</p>	<p>The cabinet is not switched on. Power does not reach the cabinet. (Try connecting another electrical device to the power outlet.) The power plug is not properly connected. The fuse has blown.</p>
<p>Power failure</p>	<p>Do not unnecessarily open the cabinet, except when the power cut seems to be long, in which case the food products should be moved to another cabinet that works. If the frozen products are still hard following the power cut, they may be immediately refrozen. If the food products have thawed but are still fresh, they may be used, however they should be prepared before re-freezing or eating them.</p>

<p>Sound level in cabinet is too high.</p>	<p>The refrigerating system will always produce some sounds. A pulsing sound is heard when coolant is pumped inside the cooling pipes. A ticking sound from the thermostat can be heard when the compressor switches on and off. The sound level varies depending on the operation of the cabinet.</p> <p>If you feel the sound level is incorrect: Make sure the pipes at the back of the cabinet not touch each other. Carefully bend them if they do.</p> <p>If the cushion spacers (between the cabinet wall and pipes) come loose, put them back in place again.</p> <p>Carefully follow the instructions in the chapter "Installing the cabinet".</p>
--	---

TECNICAL SPICIFICATION

Model	ERZ36700X
Net capacity Refrigerator l	160
Net capacity "Natura-fresh" zone	82
Net capacity Freezer l	87
Energy consumption kWh/y	315
Freezing capacity 24 hours	14
Rising time h	20
Dimension mm	
Height	2000
Width	595
Depth	600

INSTALLATION

Mains Cable

Do not remove the power cord by pulling on its lead, particularly when the product is being pulled out of its niche.

- Damage to the cord may cause a short-circuit, fire and/or electric shock.
- In the event of damage to the appliance's main cable, only an authorised service company recommended by the manufacturer or a similarly qualified person may adjust it in order to avoid shock hazard for the user.

Unpacking

Unpack the cabinet and check that it is in good condition and free of any transport damage. Notify the dealer immediately of any damage. Hand the packaging over for recycling. For more information, contact your local city office or the dealer.



Do not allow children to play with the packaging. The plastic film can cause suffocation.



Remove the transport supports

Remove the tape and the transport supports from

- the door sides
- inside the door hinges
- the shelves


Remove the transport support on the glass shelf by pushing the support forward along the edge of the shelf until it stops. Take hold of the rear edge of the glass shelf and pull the shelf and transport support forward

until the shelf tilts and the transport support can be removed. Some models are fitted with a silencing pad under the cabinet. Do not remove this pad.

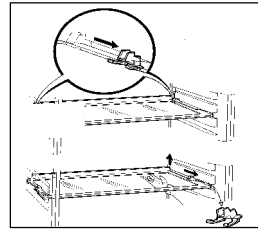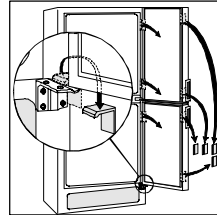

Installation of distance

Assemble the attached distance on the back side of the panel according to the illustration.

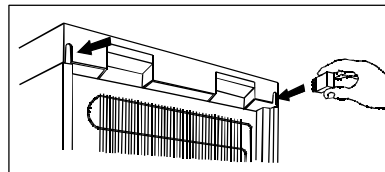

Cleaning



Wash the inside of the cabinet using lukewarm water, a mild washing-up detergent and a soft cloth.

Installation of carbon filter

On delivery the carbon filter is placed in a plastic bag to secure the length of life of the carbon filter. The filter should be placed behind the grill before the cabinet is turned on.

The cover can be opened by simultaneously pressing the lever on the right of grill (1) and turning the cover outward (2). The carbon filter is then mounted in the slot found in the back of the cover.

The filter should be handled carefully so fragments don't loosen from the surface.

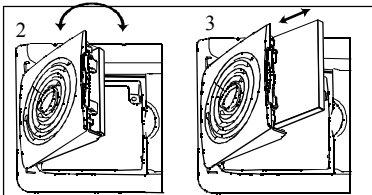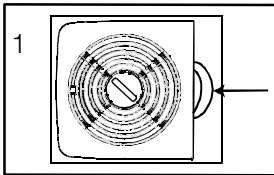

Installing the cabinet

Make sure that the power plug is not squashed or damaged by the back of the product.

- A damaged power plug may overheat and cause a fire.

Do not place heavy articles or the product itself on the power cord.


- there is a risk of a short circuit and fire.

If the power plug socket is loose, do not insert the power plug.

- there is a risk of electric shock or fire.

To obtain the best performance from the cabinet, ensure:

- the cabinet is placed in a dry, cool place and is not exposed to direct sunlight.
- the cabinet is not placed close to a source of heat, e.g. a cooker or dishwasher.
- the cabinet is level. The cabinet should not lean against any wall. If necessary adjust the feet using the adjustment spanner supplied.

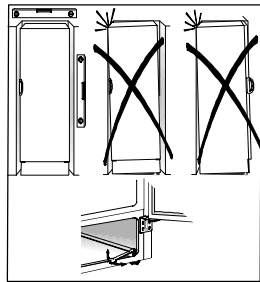


- there is good air circulation around the cabinet and that the air channels below and behind the cabinet are not blocked. The ventilation space above the cabinet must be at least 4 cm.

The ventilation space can either be

- a) directly above the cabinet, or
- b) behind and above the top cupboard.

In this case, the space behind the cupboard must be at least 50 mm deep.

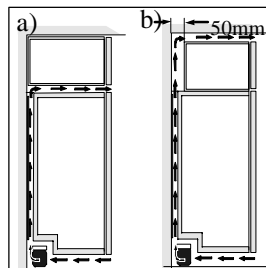

Cabinet is placed at a location whose ambient temperature corresponds to the climate classification*, for which the appliance is designed.

* See on the rating plate on the inside of the appliance.

The following table shows which ambient temperature is correct for each climate classification.

Climate classification	for an ambient temperature of
SN	+10°C to +32°C
N	+16°C to +32°C
ST	+18°C to +38°C
T	+18°C to +43°C

If the cabinet is placed in a corner and the side with the hinges facing the wall, the distance between the wall and the cabinet must be at least 360 mm to allow the door to open enough so that the shelves can be removed.

Check that the drain hose at the rear of the cabinet discharges into the drip tray.

The power plug must be accessible after installation of the cabinet.

Door Reversal

Important! Reversing the door

The door hinges can be changed from right (as supplied) to left if required to suit the location where the appliance is installed only by authorized engineers (repairmen) If door reversing is needed, call Your local Service Force Centre.

Electrical connection



This appliance must be earthed.

If the plug that is fitted to your appliance is not suitable for your socket outlet, it must be cut off and the appropriate plug fitted.

Remove the fuse from the cut off plug. The cut off plug should then be disposed of to prevent the hazard of socket in another part of your home. The wires in the mains lead are coloured in accordance with the following code:

Green and yellow -Earth
 Blue -Neutral
 Brown -Live

If you fit your own plug, the colours of the Wires in the mains lead of your appliance may not correspond with the markings identifying the terminals in your plug, proceed as follows:

Connect the Green and Yellow (earth) wire to the terminal in the plug which is marked with the letter "E" or the earth

symbol  or coloured green and yellow.

Connect the blue (neutral) wire to the terminal in the plug which is marked with the letter "N" or coloured black

Connect the brown (live) wire to the terminal in the plug which is marked with the letter "L" or coloured red.

The plug moulded onto the lead

incorporates a fuse. For replacement, use a 13amp BSI362 fuse. Only ASTA or BSI approved fuses should be used.

The plug must not be used if the fuse cover/carrier is lost. The cover/carrier is indicated by the coloured insert at the base of the plug.

A replacement cover/carrier must be obtained from your local Service Force Centre.

Guarantee/Customer Service

Standard guarantee conditions

We, Electrolux, undertake that if within 12 months of the date of the purchase this Electrolux appliance or any part thereof is proved to be defective by reason only of faulty workmanship or materials, we will, at our option repair or replace the same FREE OF CHARGE for labour, materials or carriage on condition that:

- The appliance has been correctly installed and used only on the electricity supply stated on the rating plate.
- The appliance has been used for normal domestic purposes only, and in accordance with the manufacturer's instructions.
- The appliance has not been serviced, maintained, repaired, taken apart or tampered with by any person not authorised by us.
- Electrolux Service Force Centre must undertake all service work under this guarantee
- Any appliance or defective part replaced shall become the Company's property.
- This guarantee is in addition to your statutory and other legal rights.

Exclusions

- Damage or calls resulting from transportation, improper use or neglect, the replacement of any light bulbs or removable parts of glass or plastic.
- Costs incurred for calls to put right an appliance which is improperly installed or calls to appliances outside the United Kingdom.
- Appliances found to be in use within a commercial environment, plus those which are subject to rental agreements.

- Products of Electrolux manufacturer that are not marketed by Electrolux

Service and Spare Parts

In the event of your appliance requiring service, or if you wish to purchase spare parts, please contact your local Service Force Centre by telephoning

0870 5 929 929

Your telephone call will be automatically routed to the Service Force Centre covering your postcode area.

For the address of your local Service Force Centre and further information about Service Force, please visit the website at

www.serviceforce.co.uk

Before calling out an engineer, please ensure you have read the details under the heading "Something not working" When you contact the Service Force Centre you will need to give the following details:

1. Your name, address and postcode.
2. Your telephone number.
3. Clear concise details of the fault.
4. The model and Serial number of the appliance (found on the rating plate).
5. The purchase date.

Please note a valid purchase receipt or guarantee documentation is required for in guarantee service calls.

Customer Care

For general enquiries concerning your Electrolux appliance, or for further information on Electrolux products please contact our Customer Care Department by letter or telephone at the address below or visit our website at www.electrolux.co.uk

Customer Care Department
Electrolux Major Appliances
Addington Way
Luton

Bedfordshire, LU4 9QQ

Tel: 08705 950 950 (*)

(*) Calls may be recorded for training purposes



European Guarantee

This appliance is guaranteed by Electrolux in each of the countries listed at the back of this user manual, for the period specified in the appliance guarantee or otherwise by law. If you move from one of these countries to another of the countries listed below the appliance guarantee will move with you subject to the following qualifications:-

- The appliance guarantee starts from the date you first purchased the appliance which will be evidenced by production of a valid purchase document issued by the seller of the appliance.
- The appliance guarantee is for the same period and to the same extent for labour and parts as exists in your new country of residence for this particular model or range of appliances.
- The appliance guarantee is personal to the original purchaser of the appliance and cannot be transferred to another user.
- The appliance is installed and used in accordance with instructions issued by Electrolux and is only used within the home, i.e. is not used for commercial purposes.
- The appliance is installed in accordance with all relevant regulations in force within your new country of residence.

The provisions of this European Guarantee do not affect any of the rights granted to you by law.

www.electrolux.com

		
Albania	+35 5 4 261 450	Rr. Pjeter Bogdani Nr. 7 Tirane
Belgique/België/ Belgien	+32 2 363 04 44	Bergensesteenweg 719, 1502 Lembeek
Česká republika	+420 2 61 12 61 12	Budějovická 3, Praha 4, 140 21
Danmark	+45 70 11 74 00	Sjællandsgade 2, 7000 Fredericia
Deutschland	+49 180 32 26 622	Muggenhofer Str. 135, 90429 Nürnberg
Eesti	+37 2 66 50 030	Mustamäe tee 24, 10621 Tallinn
España	+34 902 11 63 88	Carretera M-300, Km. 29,900 Alcalá de Henares Madrid
France	www.electrolux.fr	

		
Great Britain	+44 8705 929 929	Addington Way, Luton, Bedfordshire LU4 9QQ
Hellas	+30 23 10 56 19 70	4 Limnou Str., 54627 Thessaloniki
Hrvatska	+385 1 63 23 338	Slavonska avenija 3, 10000 Zagreb
Ireland	+353 1 40 90 753	Long Mile Road Dublin 12
Italia	+39 (0) 434 558500	C.so Lino Zanussi, 26 - 33080 Porcia (PN)
Latvija	+37 17 84 59 34	Kr. Barona iela 130/2, LV-1012, Riga
Lietuva	+370 5 2780609	Verkių 29, LT-09108 Vilnius
Luxembourg	+35 2 42 43 13 01	Rue de Bitbourg, 7, L-1273 Hamm
Magyarország	+36 1 252 1773	H-1142 Budapest XIV, Erzsébet királyné útja 87
Nederland	+31 17 24 68 300	Vennootsweg 1, 2404 CG - Alphen aan den Rijn
Norge	+47 81 5 30 222	Risløkkvn. 2 , 0508 Oslo
Österreich	+43 18 66 400	Herziggasse 9, 1230 Wien
Polska	+48 22 43 47 300	ul. Kolejowa 5/7, Warsaw
Portugal	+351 21 440 39 00	Quinta da Fonte - Edifício Gonçalves Zarco - Q 35 2774 - 518 Paço de Arcos
Romania	+40 21 451 20 30	Str. Garii Progresului 2, S4, 040671 RO
Schweiz/Suisse/ Svizzera	+41 62 88 99 111	Industriestrasse 10, CH-5506 Mägenwil
Slovenija	+38 61 24 25 731	Electrolux Ljubljana, d.o.o. Tržaška 132, 1000 Ljubljana
Slovensko	+421 2 43 33 43 22	Electrolux Slovakia s.r.o., Electrolux Domáce spotrebiče SK, Seberínho 1, 821 03 Bratislava
Suomi	+35 8 26 22 33 00	Konepajaranta 4, 28100 Pori
Sverige	+46 (0)771 76 76 76	Electrolux Service, S:t Göransgatan 143, S-105 45 Stockholm
Türkiye	+90 21 22 93 10 25	Tarlabaşı caddesi no : 35 Taksim Istanbul
Россия	+7 495 9377837	129090 Москва, Олимпийский проспект, 16, БЦ „Олимпик“

www.electrolux.com

www.electrolux.uk