

IC RSS-GEN, Sec 7.1.2 Warning Statement

ENGLISH: Under Industry Canada regulations, this radio transmitter may only operate using an antenna of a type and maximum (or lesser) gain approved for the transmitter by Industry Canada. To reduce potential radio interference to other users, the antenna type and its gain should be so chosen that the equivalent isotropically radiated power (e.i.r.p.) is not more than that necessary for successful communication.

FRENCH: Conformément à la réglementation d'Industrie Canada, le présent émetteur radio peut fonctionner avec une antenne d'un type et d'un gain maximal (ou inférieur) approuvé pour l'émetteur par Industrie Canada. Dans le but de réduire les risques de brouillage radioélectrique à l'intention des autres utilisateurs, il faut choisir le type d'antenne et son gain de sorte que la puissance isotrope rayonnée équivalente (p.i.r.e.) ne dépasse pas l'intensité nécessaire à l'établissement d'une communication satisfaisante.

IC RSS-102, Sec 2.6 Warning Statements

ENGLISH: The applicant is responsible for providing proper instructions to the user of the radio device, and any usage restrictions, including limits of exposure durations. The user manual shall provide installation and operation instructions, as well as any special usage conditions, to ensure compliance with SAR and/or RF field strength limits. For instance, compliance distance shall be clearly stated in the user manual.

FRENCH: Le mode d'emploi des appareils destinés à l'utilisation contrôlée doit aussi inclure des informations sur les caractéristiques de fonctionnement de l'appareil; les instructions de fonctionnement pour assurer la conformité avec SAR et / ou les limites d'intensité de champ RF; informations sur l'installation et l'exploitation d'accessoires pour assurer le respect des SAR et / ou les limites d'intensité de champ RF; et les coordonnées où l'utilisateur peut obtenir des informations sur l'exposition canadienne de radiofréquences et la conformité. Autres renseignements connexes peuvent également être inclus.



To activate your warranty or find a Power-Pole Certified Warranty Center, go to www.power-pole.com

JLMarine
SYSTEMS, INC.

9010 Palm River Road, Tampa, Florida 33619
phone 813.689.9932 • fax 813.689.8883
www.power-pole.com



Advanced Key Fob Remote Control

Congratulations on your purchase of the Power-Pole® Advanced Key Fob Remote Control featuring C-Monster Control System.

To add the Power-Pole Advanced Key Fob Remote follow these simple step-by-step instructions.

Compatible with all C-Monster Control Systems

Programming Instructions

Pairing Key Fob Remote:

1. Press and hold the PROGRAM button on the top of the unit for 3 seconds until the LED turns green (HPU will also beep). The unit is now ready to be paired with the key fob remote.

NOTE: If dual units are installed, repeat Steps 1-3 to pair multiple units to a single key fob remote. Up to ten (10) wireless controllers can be programmed to each unit.

IMPORTANT: Refer to your Installation Manual for programming dual units.

2. Press the button on the key fob remote control for one second and release. The green LED on the unit(s) will initially turn off, then flash steadily (HPU will also beep) indicating that the pairing is complete.
3. The key fob remote is now paired to the unit. Test its functionality by following the operating instructions to ensure that the pairing procedure was completed successfully.

Hydraulic Pump Unit (HPU)



MICRO Driver Unit



For Technical Support Call 813.689.9932 option 2

Tilt Orientation Control

The Advance Key Fob Remote Control features the C-Monster Control System, which gives this remote the unique ability to sense the key fob position.

With a push of the button and the movement of your wrist or arm you can control the deployment of your Power-Pole anchor. **Tilt up**, the anchor goes up. **Tilt down**, the anchor goes down. It even controls dual anchors, **rotate left** and control the port anchor, **rotate right** and control the starboard anchor, **hold level** and control both.

And depending on the amount of angle you also control the **speed** or double click for **Auto Up** or **Down**.

See the **Operating Instructions** for complete details and control your Power-Pole shallow water anchor like never before.



C-MONSTER
CONTROL SYSTEM

Operating Instructions

The new Advanced Key Fob Remote will react to match the angle or attitude that you hold the fob. While holding the fob in the desired speed position, press and hold for Manual Deploy or Retract and double click for Auto Up or Down.

Using SPEED control


Power-Pole DOWN – While holding the Key Fob at desired position, press and hold button for Manual Control or double click for **Auto Mode**.

Angle the fob slightly down = DOWN SLOWLY
Continue down angle = DOWN MEDIUM
Steep down angle = DOWN FAST


Power-Pole UP – While holding the Key Fob at desired position, press and hold button for Manual Control or double click for **Auto Mode**.

Angle the fob slightly up = UP SLOWLY
Continue up angle = UP MEDIUM
Steep up angle = UP FAST

Power-Pole DOWN

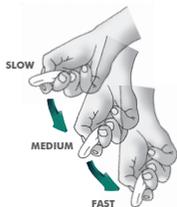

Power-Pole UP

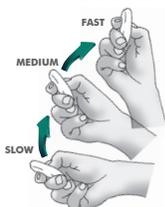

Operating Instructions

DUAL Power-Pole operation

The Advanced Key Fob Remote provides total flexibility and more control when operating DUAL Power-Pole shallow water anchors.

To operate **BOTH** Power-Pole anchors at the same time:

1. Hold the fob level, press the button and **BOTH** anchors will operate together.

To operate the **LEFT** Power-Pole individually:

1. Rotate the fob to the **LEFT**, the fob will operate the left Power-Pole independently.

To operate the **RIGHT** Power-Pole individually:

1. Rotate the fob to the **RIGHT**, the fob will operate the right Power-Pole independently.

BOTH ANCHORS

HOLD THE FOB LEVEL



LEFT OR RIGHT ANCHOR

ROTATE
LEFT
OR
RIGHT



FCC Part 15.19 Warning Statement

THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS: (1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE, AND (2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRABLE OPERATION.

FCC Part 15.21 Warning Statement

NOTE: THE **GRANTEE** IS NOT RESPONSIBLE FOR ANY CHANGES OR MODIFICATIONS NOT EXPRESSLY APPROVED BY THE PARTY RESPONSIBLE FOR COMPLIANCE. SUCH MODIFICATIONS COULD VOID THE USER'S AUTHORITY TO OPERATE THE EQUIPMENT.

IC RSS-GEN, Sec 7.1.3 Warning Statement

ENGLISH: This device complies with Industry Canada license-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

FRENCH: Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes : (1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

IC RSS-GEN, Sec 7.1.2 Warning Statement

ENGLISH: Under Industry Canada regulations, this radio transmitter may only operate using an antenna of a type and maximum (or lesser) gain approved for the transmitter by Industry Canada. To reduce potential radio interference to other users, the antenna type and its gain should be so chosen that the equivalent isotropically radiated power (e.i.r.p.) is not more than that necessary for successful communication.

FRENCH: Conformément à la réglementation d'Industrie Canada, le présent émetteur radio peut fonctionner avec une antenne d'un type et d'un gain maximal (ou inférieur) approuvé pour l'émetteur par Industrie Canada. Dans le but de réduire les risques de brouillage radioélectrique à l'intention des autres utilisateurs, il faut choisir le type d'antenne et son gain de sorte que la puissance isotrope rayonnée équivalente (p.i.r.e.) ne dépasse pas l'intensité nécessaire à l'établissement d'une communication satisfaisante.

IC RSS-102, Sec 2.6 Warning Statements

ENGLISH: The applicant is responsible for providing proper instructions to the user of the radio device, and any usage restrictions, including limits of exposure durations. The user manual shall provide installation and operation instructions, as well as any special usage conditions, to ensure compliance with SAR and/or RF field strength limits. For instance, compliance distance shall be clearly stated in the user manual.

FRENCH: Le mode d'emploi des appareils destinés à l'utilisation contrôlée doit aussi inclure des informations sur les caractéristiques de fonctionnement de l'appareil; les instructions de fonctionnement pour assurer la conformité avec SAR et / ou les limites d'intensité de champ RF; informations sur l'installation et l'exploitation d'accessoires pour assurer le respect des SAR et / ou les limites d'intensité de champ RF; et les coordonnées où l'utilisateur peut obtenir des informations sur l'exposition canadienne de radiofréquences et la conformité. Autres renseignements connexes peuvent également être inclus.



To activate your warranty or find a Power-Pole Certified Warranty Center, go to www.power-pole.com

JLMarine
SYSTEMS, INC.

9010 Palm River Road, Tampa, Florida 33619
phone 813.689.9932 • fax 813.689.8883
www.power-pole.com

Advanced Key Fob Remote Control

Featuring **C-MONSTER** Technology
CONTROL SYSTEM

Compatible with all C-Monster Control Systems

Programming Instructions

Pairing Key Fob Remote:


1. Press and hold the PROGRAM button on the top of the unit for 3 seconds until the LED turns green (HPU will also beep). The unit is now ready to be paired with the key fob remote.

NOTE: If dual units are installed, repeat Steps 1-3 to pair multiple units to a single key fob remote. Up to ten (10) wireless controllers can be programmed to each unit.

IMPORTANT: Refer to your Installation Manual for programming dual units.

2. Press the button on the key fob remote control for one second and release. The green LED on the unit(s) will initially turn off, then flash steadily (HPU will also beep) indicating that the pairing is complete.
3. The key fob remote is now paired to the unit. Test its functionality by following the operating instructions to ensure that the pairing procedure was completed successfully.

Hydraulic Pump Unit (HPU)

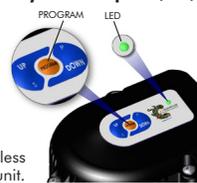

MICRO Driver Unit



Tilt Orientation Control

The Advance Key Fob Remote Control features the C-Monster Control System, which gives this remote the unique ability to sense the key fob position.

With a push of the button and the movement of your wrist or arm you can control the deployment of your Power-Pole anchor. **Tilt up**, the anchor goes up. **Tilt down**, the anchor goes down. It even controls dual anchors, **rotate left** and control the port anchor, **rotate right** and control the starboard anchor, **hold level** and control both.

And depending on the amount of angle you also control the **speed** or double click for **Auto Up** or **Down**.

See the **Operating Instructions** for complete details and control your Power-Pole shallow water anchor like never before.



C-MONSTER
CONTROL SYSTEM

For Technical Support Call 813.689.9932 option 2

Operating Instructions

The new Advanced Key Fob Remote will react to match the angle or attitude that you hold the fob. While holding the fob in the desired speed position, press and hold for Manual Deploy or Retract and double click for Auto Up or Down.

Using SPEED control


Power-Pole DOWN – While holding the Key Fob at desired position, press and hold button for Manual Control or double click for **Auto Mode**.

Angle the fob slightly down = DOWN SLOWLY
Continue down angle = DOWN MEDIUM
Steep down angle = DOWN FAST


Power-Pole UP – While holding the Key Fob at desired position, press and hold button for Manual Control or double click for **Auto Mode**.

Angle the fob slightly up = UP SLOWLY
Continue up angle = UP MEDIUM
Steep up angle = UP FAST

Power-Pole DOWN

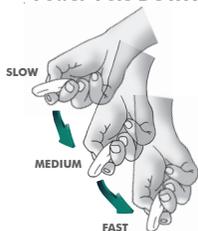

Power-Pole UP

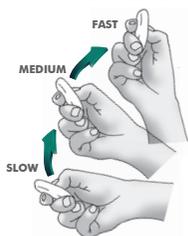

Operating Instructions

DUAL Power-Pole operation

The Advanced Key Fob Remote provides total flexibility and more control when operating DUAL Power-Pole shallow water anchors.

To operate **BOTH** Power-Pole anchors at the same time:

1. Hold the fob level, press the button and **BOTH** anchors will operate together.

To operate the **LEFT** Power-Pole individually:

1. Rotate the fob to the **LEFT**, the fob will operate the left Power-Pole independently.

To operate the **RIGHT** Power-Pole individually:

1. Rotate the fob to the **RIGHT**, the fob will operate the right Power-Pole independently.

BOTH ANCHORS

HOLD THE FOB LEVEL



LEFT OR RIGHT ANCHOR

ROTATE
LEFT
OR
RIGHT



Changing the Battery

1. Ensure the surrounding area is as dry as possible to avoid any moisture intrusion.
2. Use a small slotted screwdriver to remove the top cover for the remote control key fob. **Fig. 1**
3. Remove the rubber switch membrane and the board from the bottom cover.
4. Remove the battery from the holder on the front of the board and replace with any CR2032 3V Lithium Coin Battery.



Figure 1

5. Place the board and rubber switch membrane back into the bottom cover and ensure that the rubber switch membrane is seated properly prior to installing the top cover.

FCC Part 15.19 Warning Statement

THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS: (1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE, AND (2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRABLE OPERATION.

FCC Part 15.21 Warning Statement

NOTE: THE **GRANTEE** IS NOT RESPONSIBLE FOR ANY CHANGES OR MODIFICATIONS NOT EXPRESSLY APPROVED BY THE PARTY RESPONSIBLE FOR COMPLIANCE. SUCH MODIFICATIONS COULD VOID THE USER'S AUTHORITY TO OPERATE THE EQUIPMENT.

IC RSS-GEN, Sec 7.1.3 Warning Statement

ENGLISH: This device complies with Industry Canada license-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

FRENCH: Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes : (1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.