



HP Wireless Elite Keyboard User Manual

v1.0.EN

Part number: 510676-001


Contents

- Installation and Uninstallation 1
- Battery Level Indicators 1
- TouchSmart PC Functions 2
- Troubleshooting 2

Installation and Uninstallation


Installing the HP Wireless Elite Keyboard

- 1 Plug the receiver into an available USB port.
- 2 Insert the HP Wireless Elite Keyboard Companion CD into the CD/DVD drive. Installation starts automatically and creates the **HP Wireless Elite Keyboard** folder under **All Programs**. This folder contains the following:

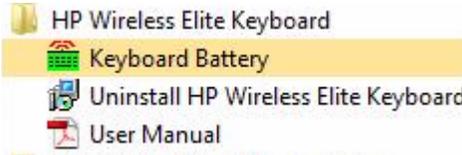

Uninstalling the HP Wireless Elite Keyboard

- 1 Click **Start > All Programs > HP Wireless Elite Keyboard > Uninstall HP Wireless Elite Keyboard**.
- 2 Follow the onscreen instructions.

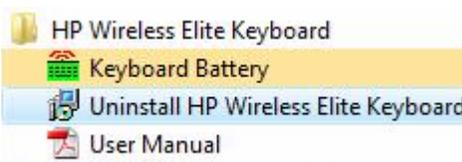

Battery Level Indicators

Displaying the Battery Level Indicators

- Click **Start > All Programs > HP Wireless Elite Keyboard > Keyboard Battery**.

The Keyboard Battery icon appears in the Windows System Tray (bottom right of the screen).



The following icons show you when to change the batteries in the keyboard:



NOTES:

- When you plug in the receiver, the Battery indicator icon reappears if previously enabled.
- To update the Battery Level Indicator:
Keyboard: Fn+Space Key
- The Battery indicator icon takes at least 10 minutes to change color.

Hiding the Battery Level Indicators

- Right-click the Keyboard Battery icon in the Windows System Tray, and select **Hide HP Wireless Elite Keyboard**.



NOTE: If you remove the receiver, the Battery Level Indicator in the Windows System Tray (if previously enabled) and Battery shortcut in All Programs are hidden.

TouchSmart PC Functions

The Fn+F9, Fn+F10, and Fn+F11 keys work only on the TouchSmart PC and the default functions are compatible only with HP TouchSmart IQ504t and IQ506t series PCs.

To access the OSD (On-screen display) for these keys, press Fn+F9, Fn+F10, or Fn+F11 depending on the key you want to display.

Troubleshooting

- I cannot find the Keyboard Battery icon in the Windows System Tray and the HP Wireless Elite Keyboard folder.
 - Reboot your PC.
- I know my battery is weak but the Keyboard Battery icon in the Windows System Tray and the HP Wireless Elite Keyboard folder do not show the correct color.
 - The Battery indicator icon takes at least 10 minutes to change color.
- Function keys Fn+F9, Fn+F10, and Fn+F11 do not work on my PC.
 - These keys work only on the TouchSmart PC.
- After Hot Swap/Hot Plug I cannot find the Keyboard Battery icon in the Windows System Tray.
 - Wait about 30 seconds.
 - Click **Start > All Programs > HP Wireless Elite Keyboard > Keyboard Battery**.