

The Alltel Snap™

A L L D I G I T A L

T r i - M o d e P H O N E

User Guide

Please read this manual before operating your
phone, and keep it for future reference.



Intellectual Property

All Intellectual Property, as defined below, owned by or which is otherwise the property of Samsung or its respective suppliers relating to the SAMSUNG Phone, including but not limited to, accessories, parts, or software relating there to (the "Phone System"), is proprietary to Samsung and protected under federal laws, state laws, and international treaty provisions. Intellectual Property includes, but is not limited to, inventions (patentable or unpatentable), patents, trade secrets, copyrights, software, computer programs, and related documentation and other works of authorship. You may not infringe or otherwise violate the rights secured by the Intellectual Property. Moreover, you agree that you will not (and will not attempt to) modify, prepare derivative works of, reverse engineer, decompile, disassemble, or otherwise attempt to create source code from the software. No title to or ownership in the Intellectual Property is transferred to you. All applicable rights of the Intellectual Property shall remain with SAMSUNG and its suppliers.

Samsung Telecommunications America (STA), LLC

Headquarters:	Customer Care Center:
1301 E. Lookout Drive	1000 Klein Street
Richardson, TX 75082	Plano, TX 75074
	Toll Free Tel: 1.888.987.HELP (4357)

Internet Address: <http://www.samsungusa.com>

© 2007 Samsung Telecommunications America, L.L.C. Samsung is a registered trademark of Samsung Electronics Co., Ltd. and its related entities.

Licensed by Qualcomm Incorporated under one or more of the following patents:
U.S. Patent No. 4, 901, 307; 5, 056, 109; 5, 099, 204; 5, 101, 501; 5, 103, 459; 5, 107, 225; 5, 109, 390.

GH68-13024A

Openwave® is a registered Trademark of Openwave, Inc.

RSA® is a registered Trademark of RSA Security, Inc.

The Alltel Snap™ is a Trademark of Alltel Communications, Inc.

Disclaimer of Warranties; Exclusion of Liability

EXCEPT AS SET FORTH IN THE EXPRESS WARRANTY CONTAINED ON THE WARRANTY PAGE ENCLOSED WITH THE PRODUCT, THE PURCHASER TAKES THE PRODUCT "AS IS", AND SAMSUNG MAKES NO EXPRESS OR IMPLIED WARRANTY OF ANY KIND WHATSOEVER WITH RESPECT TO THE PRODUCT, INCLUDING BUT NOT LIMITED TO THE MERCHANTABILITY OF THE PRODUCT OR ITS FITNESS FOR ANY PARTICULAR PURPOSE OR USE; THE DESIGN, CONDITION OR QUALITY OF THE PRODUCT; THE PERFORMANCE OF THE PRODUCT; THE WORKMANSHIP OF THE PRODUCT OR THE COMPONENTS CONTAINED THEREIN; OR COMPLIANCE OF THE PRODUCT WITH THE REQUIREMENTS OF ANY LAW, RULE, SPECIFICATION OR CONTRACT PERTAINING THERETO. NOTHING CONTAINED IN THE INSTRUCTION MANUAL SHALL BE CONSTRUED TO CREATE AN EXPRESS OR IMPLIED WARRANTY OF ANY KIND WHATSOEVER WITH RESPECT TO THE PRODUCT. IN ADDITION, SAMSUNG SHALL NOT BE LIABLE FOR ANY DAMAGES OF ANY KIND RESULTING FROM THE PURCHASE OR USE OF THE PRODUCT OR ARISING FROM THE BREACH OF THE EXPRESS WARRANTY, INCLUDING INCIDENTAL, SPECIAL OR CONSEQUENTIAL DAMAGES, OR LOSS OF ANTICIPATED PROFITS OR BENEFITS.

Table of Contents

Intellectual Property	2
Samsung Telecommunications America (STA), LLC	2
Disclaimer of Warranties; Exclusion of Liability	3
Getting Started	7
Understanding this User Manual	8
Activating Your Phone	8
Charging the Battery	10
Setting Up Your Voice Mail	11
Understanding Your Phone	12
Features of Your Phone	12
Closed View of Your Phone	13
Open View of Your Phone	14
Command Keys	15
Understanding the Display Screen	17
Your Phone's Modes	20
Call Functions	23
Making a Call — Number Entry Dialing	24
Making a Call — Speed Dialing	25
Making a Call — Voice Dialing	26
Answering a Call	28
Rejecting a Call	29
Adjusting the Call Volume	29
Calls Log	29
Phone Modes	33
Roaming	36
Menu Navigation	37
Menu Navigation	38
In Use Menu Outline	39
Menus and sub-menus	40
Entering Text	46
Text Entry Modes	47
Changing the Text Entry Mode	47
Entering Text in Alpha (ABC) Mode	48
Entering Text in T9 Word Mode	48
Entering Upper and Lower Case Letters	49
Entering Symbols	49
Entering Numbers	50
Understanding Your Contacts	51
Your Contacts List	52
Adding a New Contacts Entry	52

Finding a Contacts Entry	56
Editing an Existing Contact Entry	59
Renaming a Contacts Group	62
Deleting a Contact Entry	63
Memory	63
Messaging	64
Creating and Sending New Messages	65
Message Send Options	69
Retrieving New Messages	69
Voicemail	70
Message Folders	70
Message Settings	74
Deleting Messages	75
Access Shop	76
Access Shop Options	77
Access Shop Settings	77
Access Shop Help	78
Camera	81
Taking Pictures	82
The Photo Gallery	90
Access Web	92
Access Web Operations	93
Launch Access Web	93
Exit Access Web	93
Navigate the Web	93
Access Web Soft Keys	94
Using Links	94
How Access Web Keys Work	94
Gallery	96
Gallery	97
Using Image Gallery	97
Using Melody Gallery	99
Tools	101
Tools Menu	102
Voice Kit	102
Today	110
Calendar	111
To Do List	112
Alarm Clock	113
Memo Pad	114
World Time	115
Calculator	116
Count Down	117

Changing Your Settings	119
Display Settings	120
Sounds Settings	125
Call Options	129
Network Settings	132
Clock Set	132
Language	133
Security Settings	133
Location Setting	137
Airplane Mode	137
Phone Info	137
Health and Safety Information	139
Health and Safety Information	140
UL Certified Travel Adaptor	141
Consumer Information on Wireless Phones	141
Road Safety	147
Operating Environment	149
Using Your Phone Near Other Electronic Devices	149
Potentially Explosive Environments	151
Emergency Calls	151
FCC Notice and Cautions	152
Other Important Safety Information	152
Product Performance	153
Availability of Various Features/Ring Tones	154
Battery Standby and Talk Time	154
Battery Precautions	154
Samsung Mobile Products and Recycling	155
Care and Maintenance	155
Warranty Information	157
Standard Limited Warranty	158
Index	162

Section 1: Getting Started

Topics Covered

- Understanding this User Manual
 - Activating Your Phone
 - Charging the Battery
 - Setting Up Your Voice Mail
-

This section explains how to start using your phone by activating your service, setting up your voice mail, or getting an understanding of how this manual is put together.

Understanding this User Manual

The chapters of this guide generally follow the same order as the menus and sub-menus in your phone. A robust index for quick reference to most features begins on page 162.

Also included is important safety information that you should know before using your phone. Most of this information is near the back of the guide, beginning on page 139.

Notes and tips

Throughout this guide are icons and text that are set apart from the rest. These are intended to point out important information, quick methods for activating features, to define terms, and more. The definitions for these methods are as follows:

- **Notes:** Explain alternative options within the current feature, menu, or sub menu.
- **Tips:** Provide quick or innovative methods for performing functions related to the subject at hand.
- **Important:** Points out important information about the current feature that could affect performance, or even damage your phone.

Activating Your Phone

 
Contact your Wireless Carrier and follow their instructions for obtaining service, if necessary. We suggest that you read this guide to fully understand the services your phone supports.

Install the Battery

Note: Your phone comes packaged with a partially charged rechargeable standard Li-Ion battery and travel adapter.

Important!: You must fully charge the battery the first time you use your phone, otherwise you could damage the battery.

1. Insert the top end of the battery first, matching the gold contacts on the top end of the battery to those inside of the phone.
2. Press the bottom end of the battery down into the phone.

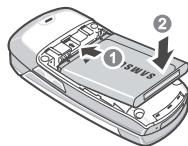


Activating Your Phone

3. Place the battery cover over the battery and slide the cover upward into place.



Turn Your Phone On


1. Open the folder on your phone, as shown.
2. Press the  key.
3. The phone begins searching for a network signal.
4. Once the phone finds a signal, the time, date and day appear in the bottom of the display.
5. You're now ready to place and receive calls.




Tip: Your phone has an internal antenna. Do not touch the phone case over the antenna while using your phone as this can affect call quality and can cause the phone to operate at a higher power level than is necessary.


Antenna →



Note: If you are outside of your carrier's coverage or roaming area, the No Service icon () appears at the top of the phone's display. If you cannot place or receive calls, try later when service is available, or at another location.


Turn Your Phone Off

 
- Press and hold the  key for two or more seconds. Your phone powers off.

Note: If your phone is on and you press  for less than one second, the phone will not power off. This prevents your phone from being turned off accidentally.

Remove the Battery

Important!: You must unplug the Travel Adapter (if it is connected) before removing the battery from the phone during charging to avoid damage.

1. Press and hold the  key to turn off the phone (if on).
2. Press the battery cover at point (1) and slide the cover (2) toward the bottom end of the phone.
3. Lift the battery cover up and away from the phone, bottom end first.
4. Lift the battery (3) up and away from the phone, bottom end first.

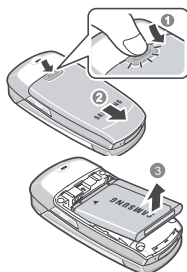 


Charging the Battery

Your phone is powered by a rechargeable standard Li-Ion battery. Only use Samsung-approved charging devices and batteries. Samsung accessories are designed to maximize battery life. **Using other accessories may invalidate your warranty and may cause damage.**

Use the Travel Adapter

The travel adapter included with your phone is a convenient, light-weight charger that rapidly charges your phone from any 120/220 VAC outlet.

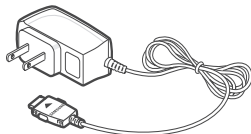 


1. Plug the large end of the Travel Adapter into a standard 120 VAC or 220 VAC wall outlet.

Note: For connection to an electrical supply not located in North America, you must use an adaptor of the proper configuration for the power outlet. Use of the wrong adapter could damage your phone and void your warranty.


Setting Up Your Voice Mail


 

2. Insert the smaller end of the Travel Adapter into the charger/accessory connector at the bottom end of your phone.

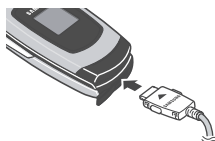

Note: With the phone turned **OFF**, a discharged battery recharges fully in approximately 4 hours.

Low battery indicator

The battery indicator () in the upper-right corner of the display indicates power level. Monitor the battery strength and ensure your battery is adequately charged.


- Three bars () indicate a full charge.
- An empty battery icon () indicates a near empty battery.
- A blinking empty battery icon () and a tone sounding indicate you have two to three minutes before the battery is too low to operate the phone.

If you continue to use your phone without charging its battery, the phone shuts down.


Setting Up Your Voice Mail

Voice mail allows callers to leave voice messages, which can be retrieved any time.

Note: Once your voice mail account has been set up, you can use the Voice Mail folder (under the Message menu) to view details of voice messages in your voice mail box.

1. In idle mode, press and hold the  key or dial your own mobile number to dial voice mail.
2. Follow the prompts in the new user tutorial to setup your mail box.

Listen to voice mail

1. In idle mode, press and hold the  key or dial your own mobile number to dial voice mail.
2. After connecting, you are prompted to enter your password.

Section 2: Understanding Your Phone

Topics Covered

- Features of Your Phone
 - Closed View of Your Phone
 - Open View of Your Phone
 - Command Keys
 - Understanding the Display Screen
 - Your Phone's Modes
-

This section outlines some key features of your phone. This section also explains the screen and the icons that are displayed when the phone is in use.

Features of Your Phone

- High speed data (CDMA 2000 1X Technology)
- Global Positioning Technology (GPS)
- Personal Information Management (PIM) functions (Scheduler, To Do List, and so on)
- Text Messaging
- Picture Messaging (including Handwritten and Postcard messaging)
- E-mail Messaging
- VGA (300K Pixel) Camera
- Advance Speech Recognition
- Speakerphone
- Phone Memory Storage

Closed View of Your Phone



Command Keys and Features

1. **Headset Connector** — Used for handsfree, Teletypewriter (TTY), and Telecommunication Device for the Deaf (TDD) equipment.
2. **Volume Key** — Lets you adjust the ringer volume in standby mode (with the folder open) or adjust the voice volume during a call. To mute the ringer during an incoming call, press the volume key up or down.
3. **External LCD** — Indicates when you have an incoming call or a message.
4. **Speaker** — The speaker, on the front of the folder, plays sounds such as ring tones and alerts.

5. **Speakerphone Key** — Lets you enable and disable speakerphone mode.
6. **Camera Key** — With the phone open and in standby mode, launches the camera.
In camera mode, takes a picture.
7. **Camera Lens** — The lens of your built-in camera.

Open View of Your Phone





Command Keys and Features

1. **Left Soft Key** — Performs the functions indicated by the screen text on the bottom of the internal display.
2. **SEND Key** — This key is used to initiate your calls.

Command Keys



3. **CLR (clear) Key** — Deletes characters from the display when you are in text entry mode. When in a menu, press to return to the previous menu.
4. **Voice Mail Hot Key** — Press and hold to automatically dial your voicemail.
5. **Special Function Keys** — Enter special characters. Perform various functions.
6. **Power/Accessory Connector** — Used to plug in the Travel Charger and to connect any available accessory cable.
7. **Voice Recognition Key** — Lets you access your phone's voice recognition features.
8. **Microphone** — The microphone used during phone calls and voice memo recordings.
9. **Alpha-numeric Keys** — Use these keys to enter numbers, letters, and characters.
10. **END/Power/MENU Exit Key** — Ends a call. Press and hold this key for a few seconds to turn your phone On or Off. When you receive an incoming call, press to mute the ringer and send the call to Voice Mail.
11. **OK Key** — Pressing when navigating through a menu accepts the highlighted choice in the menu.
12. **Right Soft Key** — Performs the functions indicated by the screen text on the bottom of the display.
13. **Navigation Key** — In menu mode, lets you browse and highlight menu options.
14. **Internal Display** — Displays the numbers, messages, and icons you need to operate your phone.
15. **Earpiece** — Plays sounds such as caller voices and call progress tones.


Command Keys

Functions for the soft keys are defined by what appears above each in the display. There are two soft keys, the left soft key  and the right soft key .

Left Soft Key



Some functions of the left soft key are as follows.

- In standby mode, press the **MENU** (left) soft key () to open the main menu.
- When the left soft key function is Option, press the **Option** (left) soft key () and a pop-up menu appears.



- When the left soft key function is Edit, press the **Edit** (left) soft key () to edit a Contact.

Right Soft Key



Some functions of the right soft key are as follows.





- In standby mode, press the **MESSAGE** (right) soft key () to open the Messages menu.
- When the right soft key function is Back, press the **Back** (right) soft key () to back up one menu level.

OK Key




- In a menu, press the **OK** key () to accept the highlighted selection.
- When the **OK** key function is Edit, press the **Edit** (OK) key () to edit a Draft message.

Clear Key


The **CLR** key () is used to erase or clear numbers, text, or symbols from the display. You can also use the  key to return to a previous menu or to return to standby mode from any menu.



1. If you enter an incorrect character, briefly press  to backspace (and delete) the character.
2. To erase the entire sentence, press and hold .
3. To back up one menu level, briefly press .
4. To return to standby mode, press and hold  until you return to standby mode.

End Key





1. Press and hold the **End** key () to turn your phone on or off.
2. Briefly press  once to disconnect a call.
3. Press  to return to standby mode from any menu, or to cancel the last input.

Send Key


The **Send** key () is used to answer calls, dial calls, and to recall the last number(s) dialed, received, or missed.

1. Press  once to answer calls.
2. Enter a number and briefly press  to make a call.



Understanding the Display Screen

3. Briefly press  in standby mode to display a list of recent calls to and from your phone.
4. Press  twice in standby mode to call the most recent number.
5. Press  to pick up a waiting call. Press  again to switch back to the other call.

Navigation Key

Use the directional keys on the navigation key  to browse menus, sub menus, and lists. Each key also acts as a shortcut to launch applications.

 
Speakerphone Key

Use the speakerphone key () — located on the right side of your phone — to switch from using the earpiece to the speakerphone before or during a call. Use the volume keys () — located on the left side of your phone — to adjust the volume. Press and hold the speakerphone key to enable and disable the speakerphone option.

Understanding the Display Screen



The top line of your phone's display contains icons that indicate network status, battery power, signal strength, connection type, and more. The following list contains icons that may appear in your display.

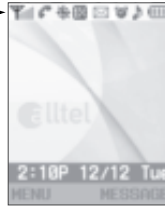

Display screen icons



Signal strength — Always appears when your phone is on and indicates the current signal strength. More lines indicate higher signal strength.



Service indicator — Indicates a call in progress. When dialing a number, this icon flashes until the call connects.



No service indicator — Indicates your phone cannot find a signal because you're outside a service area. You cannot make or receive calls. Wait for a signal or move into an open area to try and find a signal. The no service indicator always appears when you turn on your phone and disappears once service is located.



Analog mode indicator — Indicates your phone is operating in an analog service area or that digital service has been interrupted. Also indicates that some network features are not available. Also, you may need to recharge your phone's battery more often while in an analog service area.



Roam — Extended roaming indicator. Roaming occurs when you use your phone outside your home area. While roaming, a wireless provider other than yours handles your call, so the service rate for the call may be higher than for calls made within your home area. Please refer to information from your Wireless Provider on roaming rates.



New Message — Indicates that you've received a new text, page, or web alert message. You're also notified by a visual and audible alert.



Voicemail — Indicates that you've received a new voicemail.



1X Protocol — Indicates your phone is using the 1X protocol.



Battery strength — Indicates the battery charge level. The more black bars, the greater the charge. When the battery becomes very low, a flashing empty battery icon displays and the phone sounds an audible alert, which indicates your phone is about to shut down.



Alarm clock — The alarm clock is set.



GPS (911 only) — This icon represents Global Positioning Service (GPS) for 911.



GPS — Indicates GPS is on for location.



Vibrate plus Ring — Your phone is in vibrate plus ring mode. When you receive a call, the phone vibrates and rings.



Ring — Your phone is in ring mode. When you receive a call, the phone rings.



1 Beep — Your phone is in 1 Beep mode. When you receive a call, the phone rings a single beep.



Vibrate mode — Your phone is in vibrate mode. When you receive a call, the phone vibrates instead of ringing.



Ringer off — The ringer is in Ringer off mode. When you receive a call, it is only indicated in the displays.



Silent mode — Indicates your phone is in silent mode. Ringer is silenced for all alerts, incoming calls, and incoming messages. The phone alerts you of incoming calls, alerts, and messages by vibration and a message in the displays.



TTY mode — Indicates your phone is in TTY mode (For more information see “TTY Mode” on page 131).

Dialogue Boxes

Dialogue boxes prompt for action, inform you of status, or warn of situations such as low memory. Dialogue boxes and their definitions are outlined below.

- **Choice**

- Example: “Save to draft?”

- **Reconfirm**

- Example: “Erase all inbox msgs?”

- **Performing**

- Example: “Sending...” “Connecting...”

- **Completed**

- Example: “Message Saved”

- **Information**

- Example: “New Message”

- **Error**

- Example: “System Error!”

- **Warning**

- Example: "Battery Low," "Memory Full!"

Backlights

Backlights illuminate the internal and external displays and the keypad. When you press any key or open the phone, the backlights come on. They go off when no keys are pressed within a period of time set in the **Backlight** menu.

Note: During a phone call, the display backlights dim and turn off after one minute to conserve battery power, regardless of the Backlight setting.

See "Backlight" on page 122 for more information.

External Display

Your phone has an external display on the outside of the folder. When you close the phone, the external display shows a digital clock.










Icons that appear in the external display indicate the following:

- Signal strength
- Service protocol 1x
- Digital roaming service
- Incoming calls and messages
- Alarms and alerts
- Ringer/sound mode
- Battery charge level


Your Phone's Modes

Call Answer Mode

You can select how you wish to answer a call.

1. In standby mode, press the **MENU** (left) soft key (), then press  (for **Settings**),  (for **Call Options**), and  for **Call Answer**. The following call answer options appear in the display:
 - **Send Key** — Only pressing  answers a call.
 - **Folder Open** — Opening the phone's folder or pressing  answers a call.
 - **Any Key** — Pressing any key except the  key or  key answers a call.
2. Use the navigation keys to highlight an option.
3. Press the  key to select the method for answering calls.

Input mode

Input mode determines how you enter text, numbers and symbols. While at any text entry screen, press the **Option** (left) soft key (), then choose the input mode from the pop-up menu using the navigation keys. Optional input modes are **T9 Word, Alpha, Symbol, Number, and Quick Text**. (See “Entering Text” on page 46 for more information.)

Tip: You can also cycle between **T9 Word, Alpha, and Number** by repeatedly pressing and holding .


Lock Mode

When the phone is in Lock Mode, restrictions are placed on phone use. You can receive calls and messages, but cannot place outgoing calls (except for emergency numbers) until you unlock the phone.



Lock Mode also restricts access to menus and the volume key. Unlock your phone by entering the lock code when prompted. (See “Lock Phone” on page 133 for more information.)

Standby Mode

Standby mode is the state of the phone once it has found service and is idle. The phone goes into standby mode:



- After you power the phone on.
- When you press  after a call or from within a menu.

In standby mode, you will see the time, day, and date as well as all phone status icons.


1. While in standby mode, enter a phone number, and press  to place a call.
2. Press  to return to standby mode.

Receive Messages in Standby Mode

You can receive messages in standby mode. An alert tone sounds and a notification message appears in the display when a new message arrives.



- Press the **View** (right) soft key () to view now.
- Press the **Ignore** (left) soft key () to view later.

Talk Mode



You can place and receive calls only when your phone is on. While in a call your phone is in talk mode. Press the **MENU** (left) soft key () to display a list of menu options. See “In Use Menu Outline” on page 39 for more information.

Enter/Exit Silent Mode


 
Silence the tones your keypad makes when you press a key.





- In standby mode, press and hold . **Entering Silent Mode** briefly appears in the display and your phone does not play ring tones for incoming calls or sound alert tones.
- While in Silent mode and standby mode, press and hold . **Exit Silent Mode** briefly appears in the display and your phone returns to standby mode.



Vibrate Mode

- ▶ In standby mode, repeatedly press the volume key () down until **Vibrate** appears in the display. Your phone will now vibrate when you receive a call, but will play tones for alerts.
The volume key is on the left side of phone, near the Send key ().

Adjust the Ringer

1. In standby mode, press the volume key () on the left side of the phone up or down. Options are:
 - Ringer off
 - Vibrate
 - 1 Beep
 - Level 1
 - Level 2
 - Level 3
 - Level 4
 - Level 5
 - Vib+Ring
2. When you are satisfied with the setting, press the  key. Your phone returns to standby mode.

Tip: You can also enter the **Calls** option by pressing the **MENU** (left) soft key (), then pressing the , , and  keys. Use the Volume key on the left side of your phone to adjust the ringer setting.

Note: The Vibrate icon () appears in the display when the phone is in **Vibrate** mode. The Vibrate plus Ring icon () appears in the display when the phone is in or **Vib+Ring** mode.


Section 3: Call Functions

Topics Covered

- Making a Call — Number Entry Dialing
 - Making a Call — Speed Dialing
 - Making a Call — Voice Dialing
 - Answering a Call
 - Rejecting a Call
 - Adjusting the Call Volume
 - Calls Log
 - Phone Modes
 - Roaming
-


This section explains how to make or answer a call. This section also includes the features and functionality associated with making or answering a call.

Making a Call — Number Entry Dialing

1. With the phone on, enter the number you wish to call using the keypad.
2. Press the  key to place the call.

Dialing Emergency Numbers

You can dial any of the numbers 911, *911, or #911 to place an emergency call.

If you dial 911, *911, or #911 and press the  key, your phone dials the emergency number 911, automatically.

Important!: Emergency number 911 is hard-coded into your phone. You can dial this number almost any time, even when the phone is locked or restricted.


If you call 911 an audible tone is heard and an Emergency prompt appears in the display for the duration of the call.

Important!: Because of various transmission methods, network parameters, and user settings necessary to complete a call from your wireless phone, a connection cannot always be guaranteed. Therefore, emergency calling may not be available on all wireless networks at all times.

Important!: DO NOT depend on this phone as a primary method of calling 911 or for any other essential or emergency communications.

Dialing International Numbers


Call another country from the U.S.

1. In standby mode, enter the three-digit exit code (011) for the United States.
2. Enter the country code for the country that you are calling.
3. Enter the number that you wish to call, then press the  key.

Note: Puerto Rico and Canada are on the North American dialing plan. When making calls to Puerto Rico and Canada it is similar to making calls within the United States, no unique country codes are necessary.


Placing calls when outside the U.S. — Mexico

- **Calling locally within Mexico:** Dial the seven or eight-digit number.
- **Calling long distance within Mexico:** Dial 01, plus the ten-digit number (includes area code).
- **Calling to the U.S. or Canada from Mexico:** Dial 001, plus the ten-digit number (includes area code).




- **Calling Voicemail from Mexico:** Dial 001, plus your ten-digit wireless number. Once you hear the recorded prompt, press  and enter your passcode.

Manual Pause Calling

When you call automated systems (like banking services), you are often required to enter a password or account number. Instead of manually entering the numbers each time, you can store the numbers in your Contacts along with special characters called pauses.

- **P pause** — A hard pause stops the calling sequence until you press the  key.
- **T pause** — A two-second pause stops the calling sequence for two seconds and then automatically sends the remaining digits.

To manually call a number with pause(s) without storing it to your Contacts:


1. Enter the number you wish to call.
2. Press the **Option** (left) soft key (). A pop-up menu containing the following options appears in the display:
 - **P pause** — a hard pause (awaits input from you).
 - **T pause** — a two-second pause.
3. Use the navigation keys to highlight the desired pause option.
4. Press  to enter the highlighted pause into your number sequence.
5. Press  to call the number.

Making a Call — Speed Dialing

You can store phone numbers and contact names in your phone's Contacts list. Speed Dialing lets you quickly and easily dial any contact in your Contacts list by using that contact's location number in the list. You can assign and change location (speed dial) numbers for your contacts. (See "Assigning Speed Dial Numbers" on page 60 for more information.)

One-Touch Dialing

Memory locations 002 through 009 are special One-Touch dialing locations. You can call the phone numbers stored in your phone's Contacts list from 002 through 009 by pressing and holding a single key.

Example: For location number 003, press and hold the  key until the name and number appear in the display and the number is dialed.

Two-Touch Dialing

Memory locations 010 through 099 are special Two-Touch dialing locations.

Example: For location number 013, briefly press the  key, then press and hold the  key until the name and number appear in the display and the number is dialed.

Three-Touch Dialing

Memory locations 100 through 495 are special Three-Touch dialing locations.

Example: For location number 113, briefly press the  key, briefly press the  key again, then press and hold the  key until the name and number appear in the display and the number is dialed.

Pause Dialing From a Contacts Entry

- If you speed dial a contact that contains (two-second) T pause(s) simply wait for the pauses to pass and the dialing to complete.
- If you speed dial a contact that contains (hard) P pause(s), wait for the appropriate prompt(s) from the number you are calling (credit card number, bank account number, and so on) and enter the appropriate response(s).

Making a Call — Voice Dialing

The Alltel Snap mobile phone includes state-of-the-art voice recognition software that lets you dial numbers using your voice.

Using Voice Dial


Use the **Voice Dial** command to dial any number stored in your Contacts list by saying the name of the contact (Name Dialing). You can also use Voice Dial to dial any valid telephone number, even numbers not stored in your contact list, by speaking the individual digits in the number (Digit Dialing).

Voice Dialing Tips:

- Wait for the beep before speaking.
- Speak clearly at a normal volume, as if you were talking to someone on the phone.
- When saying a name, say the first name then the last name.

Dialing a Name

To dial a name, do the following:

1. In standby mode, press and hold the  key.
“**Say a Command**” appears in the display and is pronounced through the earpiece.

2. Say, **"Voice Dial"**.

You are prompted to **"Say the name or number"**.

3. Speak clearly and say the name of a person in your Contacts list, first name followed by last name.

If the name is recognized, Voice Dial repeats the name and dials the number.

If Voice Dial is not sure which name you said, it displays a choice list of up to three names and prompts you with **"Did you say?"** followed by the first name on the list.

4. Say **"Yes"** to confirm the name or **"No"** to hear the next name, or use the keypad to select the correct name from the list. (See see "Choice Lists Settings" on page 108, for more information.)

- Press the **Repeat** (right) soft key () to say the name again.
- Press the **Settings** (left) soft key () and press the **Cancel** right soft key () to exit Voice Dial without dialing.

If the recognized name has multiple numbers stored for it (that is, Mobile, Office, Home, and so on), Voice Dial displays the possible choices and prompts you with **"Which number?"**

5. Say one of the following number types:

- **Home**
- **Work**
- **Mobile**
- **My Circle**
- **Fax**

Voice Dial dials the specified number.

Dialing a Number

To dial a number using Voice Dial, do the following:

1. In standby mode, press and hold the **One** key.




"Say a Command" appears in the display and is pronounced through the speaker.

2. Say **"Voice Dial"**.

VoiceSignal prompts you to **"Say the name or number."**

3. Speak clearly and say the telephone number of the person you want to call.
For example, say "7 8 1 9 7 0 5 2 0 0."

If it recognizes the number, Voice Dial repeats it and dials the number. If Voice Dial is not sure it has recognized the number, it displays a choice list of up to three numbers and prompts you with **"Did you say?"** followed by the first number on the list.

4. Say **"Yes"** to confirm the number or **"No"** to hear the next one, or use the keypad to select the correct number from the list. (See "Choice Lists Settings" on page 108, for more information.)
 - Press the **Repeat** (right) soft key () to say the name again.
 - Press the **Settings** (left) soft key () and press the **Cancel** right soft key () to exit Voice Dial without dialing.

Pause Dialing From a Contacts Entry

- If you voice dial a contact that contains (two-second) T pause(s) simply wait for the pauses to pass and the dialing to complete.
- If you voice dial a contact that contains (hard) P pause(s), wait for the appropriate prompt(s) from the number you are calling (credit card number, bank account number, and so on) and enter the appropriate response(s).

Answering a Call


Your phone notifies you of a call in the following ways:


- A ring tone sounds and/or your phone vibrates (Your phone provides: nine ring volume settings including 1- beep, Vibrate, Ringer Off, or Vibrate+Ring, and/or different ring types to distinguish callers.)
- A phone number (unless blocked by the caller) and a name appear in the display (If the caller's number and name are stored in your Contacts list).
- If the caller can't be identified, **Call from unavailable#**, **Call from restricted number**, or no number appears in the display.

Your phone continues to notify you of the call until one of the following events occurs:

- You answer the call.
- You ignore the call.
- The calling party ends the call.
- The call is sent to voicemail.


Answering an Incoming Call

- ▶ Press the  key. The ring tone and/or vibration stop and the caller's voice can be heard in the earpiece.

Tip: You can set your phone to answer calls when you open the folder, when you press any key but the  key, or automatically. (See see "Call Options" on page 129 for more information.)


Rejecting a Call

When you reject an incoming call, the call is immediately forwarded to your voice mail.

- ▶ During an incoming call, press the **Reject** (right) soft key (). The caller is immediately forwarded to your voice mail.

Tip: You can mute the ringer to ignore an incoming call by closing the folder or by pressing the volume key.









Adjusting the Call Volume

In standby mode, repeatedly press the Volume key () down until the desired Call Volume Level appears in the display. The Volume key is on the left side of phone.

Calls Log

The Calls log retains information about Outgoing, Incoming, and Missed calls. You can also view times for your last call and the time totals for all calls.


Review the Calls Log




 

 
1. In standby mode, press the **MENU** (left) soft key (). The Main Menu appears in the display.
2. Press the  key (for **Calls**).
3. Press the number key associated with the Calls log that you wish to review or the function you wish to access:
 - Press  for **Outgoing** calls.
 - Press  for **Incoming** calls.
 - Press  for **Missed** calls.
 - Press  for **Erase Logs**.
 - Press  for **Call Timer**.
 - Press  for **Data Counter**.

Note: In cases where there is a Contacts match for a Calls log entry, the name associated with the number appears in the display instead of the number.

Outgoing Calls






Your phone retains information about the last 20 outgoing calls and stores them in the Outgoing calls log. You can review the Outgoing calls log for the time and date of a call, as well as other information.

Note: To quickly view your most recent calls, briefly press  in standby mode. Up to 20 of your most recent outgoing, incoming, and missed calls appear in the display.

1. In standby mode, press the **MENU** (left) soft key () then press  (for **Calls**) and  for **Outgoing**. A list of your outgoing calls appears in the display.
2. Use the navigation keys to highlight a call, then press  to view further information about the call.
3. Press the **Option** (left) soft key (). A pop-up menu containing the following options appears in the display:
 - **Talk** — Call the selected number.
 - **Save** — Save the number to your Contacts.
 - **Prepend** — Add a prefix to the number.
 - **Erase** — Erase the selected call from your Outgoing call log. (If this is a recent call, it will no longer appear in the Recent Calls list.)
4. Use the navigation keys to highlight an option.
5. Press the  key to perform the highlighted option's function.

Incoming Calls





Your phone retains information about the last 20 Incoming calls and stores them in the Incoming call log. You can review the Incoming call log for the time and date of the call, as well as other information.

1. In standby mode, press the **MENU** (left) soft key () then press  (for **Calls**) and  for **Incoming**. A list of your Incoming calls appears in the display.
2. Use the navigation keys to highlight a call, then press the  key to view further information about the call.
3. Press the **Option** (left) soft key (). A pop-up menu containing the following options appears in the display:
 - **Talk** — Call the selected number.
 - **Save** — Save the number to your Contacts.
 - **Prepend** — Add a prefix to the number.

- **Erase** — Erase the selected call from your Incoming call list. (If this is a recent call, it will no longer appear in the Recent Calls list.)
4. Use the navigation keys to highlight an option.
 5. Press the **OK** key to perform the highlighted option's function.

Missed Calls





Your phone retains information about the last 20 missed calls (calls that were never answered) and stores them in the **Missed** call log. You can review the Missed call log for the time and date of the call, as well as other information.

1. In standby mode, press the **MENU** (left) soft key () then press  (for **Calls**) and  for **Missed**. A list of your missed calls appears in the display.
2. Use the navigation keys to highlight a call, then press the **OK** key to view further information about the call.
3. Press the **Option** (left) soft key (). A pop-up menu containing the following options appears in the display:
 - **Talk** — Call the selected number.
 - **Save** — Save the number to your Contacts.
 - **Prepend** — Add a prefix to the number.
 - **Erase** — Erase the selected call from your Missed call list. (If this is a recent call, it will no longer appear in the Recent Calls list.)
4. Use the navigation keys to highlight an option.
5. Press the **OK** key to perform the highlighted option's function.

Erase Logs

You can erase all calls from the **Outgoing**, **Incoming**, and **Missed** calls logs individually or you can erase **All Calls** from these calls logs at the same time.




Erase All Calls

1. In standby mode, press the **MENU** (left) soft key () then press  (for **Calls**),  (for **Erase Logs**), and  for **All Calls**.
 "Erase All Calls?" appears in the display as well as the following options:
 - **Yes** — Erases all calls in the Calls log.
 - **No** — Cancels erasing calls.
2. Use the navigation keys to highlight the desired option, then press the **OK** key.


Call Timer


View the duration of your last call, total calls, and calls made during the life cycle of your phone using the Call Timer feature.

Note: Call Timer is not for billing purposes.

1. In standby mode, press the **MENU** (left) soft key () then press  (for **Calls**) and  for **Call Timer**. The following options appear in the display:

- **Last Call** — View the duration of your last call.
- **Total** — View the duration of the total call, incoming and outgoing, made on your phone since the last erasure.
- **LifeTime** — View the duration of all calls on your phone since activation (LifeTime timers cannot be erased).
- **Erase Total** — Erases the counters for the Total call timer.




Press the number of the option you wish enter, or use the navigation keys to highlight the option and press the  key.

2. Press the  key if you wish to exit the menu.

Note: Although Total call timers can be erased, LifeTime call timers can never be erased.

Data Counter

Use Data Counter to view the amount of data that has been sent or received (or a total of both) using the data services that your phone supports, such as **Axxcess Shop**. The Data Counter can be a helpful tool for monitoring data usage, especially if your service agreement has specified limits.


1. In standby mode, press the **MENU** (left) soft key () then press  (for **Calls**) and  for **Data Counter**. The following options appear in the display:

- **Transmit** — View the amount of data (in kilobytes) that your phone has transmitted since last being reset.
- **Received** — View the amount of data (in kilobytes) that your phone has received since last being reset.
- **Total** — View the amount of data (in kilobytes) that your phone has transmitted and received since last being reset.
- **Erase Total** — Erase (reset) the **Transmit**, **Received**, and **Total** data counters.

Phone Modes

Standby Mode

Standby mode is the state of your phone once it is powered on and has found a wireless service. Your phone goes into standby mode:

- After you power the phone on.
- When you press the  key after a call or from within a menu or phone function screen.

When in standby mode, you will see the time, day, and date in the display as well as all currently active icons.

When in standby mode, you can:


- Make calls.
- Receive calls and messages.
- Access your phone's menus.
- Change your phone's mode.
- Activate Voice Command.
- Adjust calls ringer volume.

Receive Messages in Standby Mode

You can receive messages while in standby mode. An alert tone sounds and a notification message appears in the display when a new message arrives.

- Press the **View** (right) soft key () to view the message now.
- Press the **Ignore** (left) soft key () to view the message later.

Talk Mode

While in a call your phone is in talk mode. Press the left soft key () to display a list of In-Use menu options. (See see "In Use Menu Outline" on page 39 for more information).

Lock Mode

When you lock your phone using the **Lock Mode** menu option (see see "Lock Phone" on page 133 for more information), the following restrictions are placed on use of your phone:

- You can receive messages and calls.
- You cannot make outgoing calls (except for emergency numbers).
- You cannot access your phone's menus.
- The volume key is disabled.



Unlock your phone by following the prompts and entering the lock code.

Silent Mode


With a single press of the key you can silence the call ringer and tones that your keypad makes whenever you press a key.

When you receive a call, the phone vibrates instead of ringing.

Enter Silent Mode




 



- In standby mode, press and hold the  key.
"Entering Silent Mode" briefly appears in the display and your phone returns to standby mode.
The Silent Mode icon () appears in the top line of the display.

Exit Silent Mode

- In standby mode, press and hold the  key.
"Exit Silent Mode" briefly appears in the display and your phone returns to standby mode.

Vibrate Mode

You can set your phone to vibrate whenever you receive an incoming call using either of the following methods:


- In standby mode, repeatedly press the **Down** volume key () on the left side of the phone until **Vibrate** appears in the display, or do the following:
 1. In standby mode, press the **MENU** (left) soft key () , then press  (for **Settings**),  (for **Sounds**),  (for **Volume/Vibrate**), and  for **Calls**.
 2. Press the Left navigation key until "**Vibrate**" appears in the display, then press the  key.


Text Input Modes

You use your phone's text input modes (Alpha, Symbol, Number, or T9 WORD) to enter text, numbers, or symbols into messages, events, and other functions. The current text input mode is indicated in the lower right part of the display.

Note: See "Entering Text" on page 46 for more information about text input modes.

Alpha Mode


Enter characters while in Alpha mode by pressing the key with the desired characters (such as  for "a").

- Press the key repeatedly until the desired character (letter, number, or symbol) appears in the display.
- Pause briefly and the displayed character is accepted and inserted into your message.
- Press  to enter a space.

Tip: To enter large numbers of symbols or numbers quickly, use Symbol mode or Number mode as described in the following sections.

Symbol Mode

Symbol mode lets you use keypad number keys to enter symbols such as @ or % into a text message, event, or e-mail address without going through repeated key presses as with Alpha mode.

You press the key that corresponds with the symbol that you wish to enter. For example, press  for an exclamation point (!).

Number Mode

Number mode lets you use keypad number keys to enter numbers into a text message, event, or e-mail address without going through repeated key presses as with Alpha mode.


T9 Word Text Entry Mode

T9 Word recognizes a commonly used word that is represented by a sequence of number key presses and inserts that word into your message. (For example, entering '8378' would insert 'test' into your message.) Using T9 Word is much faster than the more traditional text input method (Alpha mode) and requires only one press of a key per letter of the word that you're entering. [For example, in Alpha mode, you would have to enter '83377778' for 'test' instead of entering '8378' for 'test' as in T9 Word mode.]

Note: See "Entering Text in T9 Word Mode" on page 48 for more information about using the T9 Word text input mode.

Roaming

What is Roaming?

Roaming lets you use your Alltel Snap phone when you travel outside of your Wireless Provider's coverage area. The Roaming icon () appears in the top line of the display when Roaming is active, and extra charges may apply when making or receiving calls.

Note: Some features may be unavailable while roaming. Roaming also consumes additional power from the battery requiring more frequent recharging. Contact your Wireless Provider for more information about Roaming.

How Roaming Works

Roam Option lets you set roaming preferences if you move in and out of your home network. The following roaming options are available:

- **Home only** — Your phone is available for normal operation only in the designated coverage area.
- **Automatic-A** — Your Wireless Provider's Preferred Roaming List (PRL) of networks is used to acquire service. If no preferred networks are found, any digital "A" system is acquired.
- **Automatic-B** — Your Wireless Provider's PRL is used to acquire service. If no preferred networks are found, any digital "B" system is acquired.

 
 
 
Section 4: Menu Navigation

Topics Covered



- Menu Navigation
 - In Use Menu Outline
 - Menus and sub-menus
-

This section explains the menu navigation for your phone. It also includes an outline of all the available menus associated with your phone.

Menu Navigation



You access the menus and sub-menus in your phone by using the navigation keys () , soft keys ( ), or a shortcut.

Navigate Using Keys


1. In standby mode, press the **MENU** (left) soft key (). The Main menu (the first of several menus) appears in the display.
2. Use the navigation keys to browse through the menus in your phone.
3. Press the  key to select a menu or sub-menu that then appears in the display.

Return to the Previous Menu


There are two methods for exiting a menu or list.




- Press the **Back** (right) soft key ().
- Press the **BACK** key ().

Navigate Using a Shortcut

You can also access the menus and sub-menus in your phone using menu item numbers. Using the menu and sub-menu numbers in conjunction with the **OK** key () takes you directly to the menu or sub-menu of your choice. Before you can navigate using a shortcut, you'll need to know the menu or sub-menu number of the feature that you wish access.

 
Note: Use the list of menus and sub-menus, which begins on page 40, to navigate using shortcuts.

1. In standby mode, the **MENU** (left) soft key (). The Main menu appears in the display.
2. Press the number of the menu, sub-menu, and so on for the feature that you wish to access.

Example: Press the left soft key (), then press the  key, and then the  key. This takes you to the **Tools** (MENU 8), and then to the **To Do List** (sub-menu 4).


Navigation key shortcuts

 
Some applications can be launched by pressing one of the four navigation keys (see the illustration) while in standby mode.

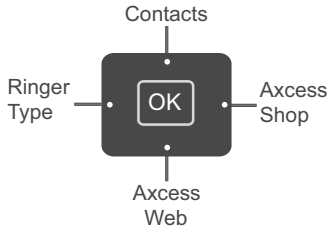


In Use Menu Outline

Your phone includes both a Main menu and an In-Use menu. The In-Use menu is accessible only when you are in a call.

1. Press the left soft key () **MENU**, while in a call to display the following options:
 - **Calls** — Checks your call log for outgoing, incoming, and missed calls. You can also erase your call logs from this menu.
 - **Contacts** — Accesses Contacts menu options.
 - **Voice Memo** — Records and saves voice memos.
 - **Silent/Quit** — Activates or deactivates Silent Mode. In Silent Mode, your phones keypad tones are muted. This feature should not be used when you access automated services that require you to select options, or enter numbers (such as your voice mail password).
 - **Send Tel#** — Send your phone number to the other party of the call.
 - **Send DTMF** — Send your phone number as Dual-Tone Multi-Frequency dialing tones.
 - **Voice Privacy** — Set Voice Privacy to Standard or Enhanced mode. Voice Privacy prevents the receiving party from seeing your number when you call.
 - **Location** — Enable the GPS feature for emergency calls only (911 Only), or fully enable GPS (Location On).
 - **Version** — View the software and hardware versions for your phone.

2. Use the navigation keys to highlight an option. Press the  key to select the **In-Use** menu option of your choice.

You can also press the **MUTE/Unmute** (left) soft key () to mute (caller cannot hear you) or unmute the current call.

3. Press the **MSG** (right) soft key () to access the **Messages** menu to receive, review, and send messages during the current call.

Menus and sub-menus

1 Messages

- 1.1 New Text Msg
- 1.2 New Pic Msg
- 1.3 New Handwr. Msg
- 1.4 Inbox
- 1.5 Outbox
- 1.6 Drafts
- 1.7 Voicemail
- 1.8 Wap Push
- 1.9 Msg Setting
 - 1.9.1 *Text Msg*
 - 1.9.1.1 **SavelnOutbox**
 - 1.9.1.2 **Insert Sign.**
 - 1.9.1.3 **Delivery Ack**
 - 1.9.1.4 **Direct View**
 - 1.9.1.5 **Signature**
 - 1.9.1.6 **Callback #**
 - 1.9.2 *Pic Msg*
 - 1.9.2.1 **SavelnOutbox**
 - 1.9.2.2 **Delivery Ack**
 - 1.9.2.3 **Retrieval Mode**
 - 1.9.3 *General*
 - 1.9.3.1 **Entry Mode**
 - 1.9.3.2 **Quick Text**
 - 1.9.3.3 **Msg Alert**
 - 1.9.3.4 **Auto Erase**
 - 1.9.3.5 **Voice Mail #**
 - 1.9.3.6 **Block Sender**

- 1.0 Erase Msg
 - 1.0.1 *Inbox*
 - 1.0.2 *Outbox*
 - 1.0.3 *Drafts*
 - 1.0.4 *All Messages*
- 2 Axxess Shop**
 - 2.1 Axxess Shop
- 3 Axxess Web**
 - 3.1 Axxess Web
- 4 Contacts**
 - 4.1 Find
 - 4.2 Add
 - 4.2.1 *Number*
 - 4.2.2 *Email*
 - 4.3 Rename Group
 - 4.3.1 *Friend*
 - 4.3.2 *Family*
 - 4.3.3 *Colleague*
 - 4.3.4 *Business*
 - 4.3.5 *General*
 - 4.4 Memory
- 5 Calls**
 - 5.1 Outgoing
 - 5.2 Incoming
 - 5.3 Missed
 - 5.4 Erase Logs
 - 5.5 Call Timer
 - 5.6 Data Counter
- 6 Gallery**
 - 6.1 Image Gallery
 - 6.1.1 *Preloaded*

- 6.1.2 *Downloaded*
- 6.1.3 *Shuffle*
- 6.2 Melody Gallery
 - 6.2.1 *Preloaded*
 - 6.2.2 *Downloaded*
 - 6.2.3 *Shuffle*

7 Camera

- 7.1 Take a Photo
- 7.2 Photo Gallery

8 Tools

- 8.1 Voice Kit
 - 8.1.1 *Voice Command*
 - 8.1.2 *Voice Memo*
 - 8.1.3 *TTS*
 - 8.1.4 *Voice Setting*
 - 8.1.4.1 **Digit Dialing**
 - 8.1.4.1.1 Adapt Digits
 - 8.1.4.1.2 Reset Digits
 - 8.1.4.2 **Sensitivity**
 - 8.1.4.3 **Choice Lists**
 - 8.1.4.4 **Sound**
 - 8.1.4.4.1 Prompts
 - 8.1.4.4.2 Digits
 - 8.1.4.4.3 Names
 - 8.1.4.4.4 Name Settings
 - 8.1.4.5 **Voice Launch**
 - 8.1.4.6 **About**
- 8.2 Today
- 8.3 Calendar
- 8.4 To Do List
- 8.5 Alarm Clock
 - 8.5.1 *Alarm Clock 1*
 - 8.5.2 *Alarm Clock 2*
 - 8.5.3 *Alarm Clock 3*
- 8.6 Memo Pad

- 8.7 World Time
- 8.8 Calculator
- 8.9 Count Down

9 Settings

- 9.1 Display
 - 9.1.1 *Menu Style*
 - 9.1.2 *Animation*
 - 9.1.2.1 **Wallpaper**
 - 9.1.2.1.1 Preloaded
 - 9.1.2.1.2 My Image
 - 9.1.2.1.3 Shuffle
 - 9.1.2.2 **Opening**
 - 9.1.2.2.1 Preloaded
 - 9.1.2.2.2 My Image
 - 9.1.2.3 **Closing**
 - 9.1.2.3.1 Preloaded
 - 9.1.2.3.2 My Image
 - 9.1.3 *Banner*
 - 9.1.4 *Backlight*
 - 9.1.4.1 **LCD**
 - 9.1.4.2 **Keypad**
 - 9.1.4.3 **Power save**
 - 9.1.4.4 **Brightness**
 - 9.1.5 *Front Contrast*
 - 9.1.6 *Auto-Hyphen*
 - 9.1.7 *Dial Digits*
 - 9.1.8 *Dial Screen*
 - 9.1.9 *Theme Color*
- 9.2 Sounds
 - 9.2.1 *Volume/Vibrate*
 - 9.2.1.1 **Calls**
 - 9.2.1.2 **Messages**
 - 9.2.1.3 **Alarm**
 - 9.2.2 *Vibrating Alert*
 - 9.2.3 *Ringer Type*
 - 9.2.3.1 **Calls**
 - 9.2.3.2 **Messages**

- 9.2.3.3 Alarm
 - 9.2.3.4 Data
 - 9.2.3.5 Calendar
 - 9.2.4 *Key Beep*
 - 9.2.4.1 Volume
 - 9.2.4.2 Tone Length
 - 9.2.5 *Alerts*
 - 9.2.5.1 Minute Beep
 - 9.2.5.2 Service
 - 9.2.5.3 Connect
 - 9.2.5.4 Disconnect
 - 9.2.5.5 Fade
 - 9.2.5.6 Roam
 - 9.2.5.7 Privacy
 - 9.2.6 *Flip Tone*
 - 9.2.7 *Power On/Off*
 - 9.2.8 *Roam Ringer*
 - 9.2.9 *Whisper Mode*
- 9.3 Call Options
 - 9.3.1 *Call Answer*
 - 9.3.2 *Auto Answer*
 - 9.3.3 *Auto Retry*
 - 9.3.4 *Data*
 - 9.3.5 *TTY Mode*
- 9.4 Network
 - 9.4.1 *Set NAM*
 - 9.4.2 *Roam Option*
- 9.5 Clock Set (Disabled in digital service mode.)
- 9.6 Language
- 9.7 Security
 - 9.7.1 *Lock Phone*
 - 9.7.2 *Change Lock*
 - 9.7.3 *Emergency #*
 - 9.7.3.1 **911**
 - 9.7.3.2 ***911**
 - 9.7.3.3 **#911**

- 9.7.4 *Voice Privacy*
- 9.7.5 *Restriction*
 - 9.7.5.1 **Outgoing**
 - 9.7.5.2 **Incoming**
- 9.7.6 *Erase Memory*
- 9.7.7 *Reset Phone*
- 9.8 *Location*
- 9.9 *Airplane Mode*
- 9.0 *Phone Info*
 - 9.0.1 *Version*
 - 9.0.2 *Phone Number*
 - 9.0.3 *Software Update*

Section 5: Entering Text

Topics Covered

- Text Entry Modes
 - Changing the Text Entry Mode
 - Entering Text in Alpha (ABC) Mode
 - Entering Text in T9 Word Mode
 - Entering Upper and Lower Case Letters
 - Entering Symbols
 - Entering Numbers
-

This section outlines how to select the desired text input mode when entering characters into your phone. This section also describes how to use the T9 predictive text entry system to reduce the number of key strokes associated with entering text.

Text Entry Modes


You can compose text messages using alphabetical characters, symbols, and numbers. Each method of character entry (symbol, number, and so on) is called a text entry mode. There are four text entry modes, as indicated:

 
- **Alpha** — Alphabetical text entry mode. Options are:
 - **ABC** — All upper case
 - **Abc** — Initial capital
 - **abc** — All lower case
- **Symbol** — Symbol entry mode. Enter symbols into your message by pressing the corresponding number that appears above it in the display.
- **Number** — Number entry. Enter numbers by pressing the corresponding key on the keypad.
- **T9 Word** — Predictive text mode. Press each key only once to enter the letter of the word that you're spelling.


Your current mode of text entry (**Abc**, **Symbol**, **123**, or **T9 Word**) is indicated in the lower left part of the display when composing a text message.

Note: Each of the text entry modes are explained in greater detail in "Messaging" on page 64.

Changing the Text Entry Mode




1. While composing a text message, press the **Option** (left) soft key (). A pop-up menu containing the following options appears in the display:
 - **Alpha / Symbol / Number / T9 Word**
 - **Text Format**
 - **Add Media**
 - **Quick Text**

Alpha is highlighted. Use the **Left** and **Right** navigation keys to show any of the other three text entry modes.
2. Press the  key to select the highlighted text mode.

Tip: You can also change the text entry mode to **abc**, **123**, or **T9 word** by repeatedly pressing and holding the  key until the desired mode appears in the lower left side of the screen.

Entering Text in Alpha (ABC) Mode





Note: See “Changing the Text Entry Mode” on page 47 for instructions on changing text entry modes.





1. Enter characters while in **ABC** (Alpha) mode by pressing the key with the desired characters (such as, pressing  once for “G”).
2. Press the key repeatedly until the desired character appears in the display (such as, pressing  two times for “H”).
3. Pause briefly and the displayed character is accepted and inserted into your message.
4. Press the  key to enter a space.

Entering Text in T9 Word Mode

T9 Word recognizes commonly used words for a sequence of keypresses and inserts the word into your message. Using T9 mode is much faster than the more traditional method Alpha mode, since T9 *requires only one key press per letter* of the word that you are spelling.

Note: See “Changing the Text Entry Mode” on page 47 for instructions on changing text entry modes.

1. While in **T9 Word** mode, press each key that corresponds to a desired letter, in sequence, one time.
For example, if you press the key sequence   , and the word “bad” appears on the screen.
2. When you have completed pressing all the keys for the desired word, review the word displayed in your text.
3. If the word is not the one you meant to enter, press the  key to show the next word that matches the sequence of keys that you pressed.

For example, when you press the key sequence   , the word “and” appears on the screen. Suppose the word you want is “cod”. Just press the  key until “cod” appears in the display.



Now, for practice, enter the work ‘Samsung’ into your message by pressing each of the following keys only once:




T9 Word recognizes that the most commonly used word for the numeric sequence you just entered is "Samsung."

Entering Upper and Lower Case Letters

In **Abc** and **T9 Word** modes, you can select to enter only upper case letters (**ABC/T9 WORD**), only lower case letters (**abc/T9 word**), or a mix of the two (**Abc/T9 Word**).

1. While in **T9 Word** or **Abc** mode, use the  key to change the capitalization setting. Simply press the  key repeatedly until the desired capitalization mode appears.


The text entry mode indicator in the lower left corner of the screen changes to indicate the current capitalization setting.

For example, if the left soft key label is **ABC**, and you want to enter the word "ball", press the  key until the left soft key label changes to **abc**, then enter the word "ball".


Tip: To enter a capital letter within a word, such as "SimTam", change the capitalization setting to **Abc** at the beginning of the word and before entering the "T". The capitalization setting will automatically change to **abc** after you enter each upper case letter.


Entering Symbols

Symbol mode enables you to enter symbols such as @ or % in a text message.

1. While composing a text message, press the **Option** (left) soft key (). A pop-up menu containing the following options appears in the display:

- **Alpha / Symbol / Number / T9 Word**
- **Text Format**
- **Add Media**
- **Quick Text**

Alpha is highlighted. Use the **Left** and **Right** navigation keys to display **Symbol**, then press the  key. The first of four screens of symbols appear in the display.

2. Use the **Left** and **Right** navigation keys to page through the other symbols, if necessary.
3. Enter the key that corresponds with the symbol that you wish to enter. For example, on the first page, press  for an exclamation point (!).
4. Repeat steps 2 and 3 to insert as many symbols into your message as desired.

Entering Numbers

Enter numbers into a text message while in number mode (123).

Note: See “Changing the Text Entry Mode” on page 47 for instructions on changing text entry modes.

- ▶ While in 123 mode, press the key containing the corresponding number that you wish to insert into your message.

Section 6: Understanding Your Contacts

Topics Covered

- Your Contacts List
 - Adding a New Contacts Entry
 - Finding a Contacts Entry
 - Editing an Existing Contact Entry
 - Renaming a Contacts Group
 - Deleting a Contact Entry
 - Memory
-

This section explains how to manage your daily contacts by storing their name and number in your Contacts. Contacts entries can be sorted by name, entry, or group.



 
Your Contacts List


Your Contacts list can store up to 500 numbers, with each contact having up to five associated phone numbers, an e-mail address, and a picture ID.

Each phone number can be up to 32 digits in length, including hard pauses. Contact names can be up to 22 characters in length. You can also specify a memory location for each entry, and you can restrict access to the Contacts list to prevent unauthorized use.

Tip: **One-Touch**, **Two-Touch**, and **Three-Touch Dialing** allow you to call numbers stored in your Contacts list faster. (See page 25.)

Open Your Contacts List





1. In standby mode, press the **MENU** (left) soft key (), then press  for **Contacts**. The following Contacts sub-menus and options appear in the display:
 - **Find** — Find a phone number By Name, By Entry, or By Group.
 - **Add** — Add a number or e-mail to your Contacts.
 - **Rename Group** — Rename one of your five groups.
 - **Memory** — View available memory for dial entries.
2. Use the navigation keys to highlight the Contacts sub-menu or option of your choice, and press the  key.

Tip: You can also access a sub-menu or menu option by pressing the number key corresponds to the menu item number. For example, press  for **Add**.



Adding a New Contacts Entry

You can add an entirely new entry to your Contacts list or add information to an existing entry.



Using the Contacts Add Option

1. In standby mode, press the **MENU** (left) soft key (), then press  (for **Contacts**) and  for **Add**. The following options appear in the display:
 - **Number** — Lets you enter a number to be dialed when calling the new contact.
 - **Email** — Lets you enter an e-mail address for the new contact.
2. Use the navigation keys to highlight the desired option and press the  key.

Adding a New Contacts Entry

3. Enter the phone number or e-mail address for the new Contacts entry, then press the  key. The following options appear in the display:
 - **New Entry** — Lets you create a new Contacts entry.
 - **Find** — Lets you add the number or e-mail address you just entered to an existing Contacts entry.
4. Use the navigation keys to highlight **New Entry**, then press the  key. The following (number type) icons appear in the display:



5. Use the navigation keys to highlight the number type that matches your new entry and press the  key. The **Contacts** information screen appears in the display with the **Name** field highlighted.
6. Enter a name or phrase to associate with the type using the keypad. (See “Entering Text” on page 46 for more information.)
7. Press the  key to save the entry.

Adding Pauses to Contacts Numbers

When you call automated systems (like banking services), you are often required to enter a password or account number. Instead of manually entering the numbers each time, you can store the numbers in your Contacts along with special characters called pauses.



 
- **P pause** — A hard pause stops the calling sequence until further input from you.
- **T pause** — A two-second pause stops the calling sequence for two seconds and then automatically sends the remaining digits.

Tip: You can enter multiple two-second pauses to extend the length of a pause. For example, two consecutive two-second pauses cause a total pause time of four seconds.

Note: Keep in mind that pauses count as digits towards the 32-digit maximum.

Store Pauses in a Contacts Entry



1. In standby mode, enter the number you wish to store (such as your bank's teleservice number).


2. Press the **Option** (left) soft key (). The following pause menu options appear in the display:
 - **P pause** — a hard pause (awaits input from you).
 - **T pause** — a two-second pause.
3. Use the navigation keys to highlight the pause option of your choice.
4. Press the  key to enter the highlighted pause into your number sequence.
5. When you're finished entering the number and pauses, press the **Save** (right) soft key () to store the number in your **Contacts**.


Saving a Number from a Call

 
Once you've finished a call, you can save the number of the caller to your Contacts list.


Note: If the call was incoming and Caller ID information was unavailable, then the Save option is also unavailable.

1. After you press the  key to end your call, the call time, length of call, phone number, and name of the other party (if available) appear in the display.
2. Press the **Save** (right) soft key (). The following options appear in the display:
 - **New Entry** — Lets you create a new Contacts entry.
 - **Find** — Lets you add the number or e-mail address you just entered to an existing Contacts entry.

 
Tip: You can also store a phone number by entering the number, and pressing the **Save** (right) soft key ().

3. Use the navigation keys to highlight **New Entry**, then press the  key. The following (number type) icons appear in the display:








4. Use the navigation keys to highlight the number type that matches your new entry and press the  key. The **Contacts** information screen appears in the display with the **Name** field highlighted.

Adding a New Contacts Entry

 

 

5. Enter a name or phrase to associate with the type using the keypad. (See “Entering Text” on page 46 for more information.)
6. Press the  key to save the entry.

 
Storing Number from a Calls Log

 
You can store numbers from the Calls logs to your Contacts.

 
1. In standby mode, press the **MENU** (left) soft key (), then press  for **Calls**.
2. Press the corresponding number on the keypad to view the following Calls logs:
 - Press  for **Outgoing**
 - Press  for **Incoming**
 - Press  for **Missed**

A list of your calls appears in the display.

3. Use the navigation keys to highlight the number you wish to store in **Contacts**, then press the  key.
4. Press the **Option** (left) soft key (). The following options appear in the display:
 - **Talk** — Calls the selected number.
 - **Save** — Saves the selected number to your Contacts list.
 - **Prepend** — Lets you add or change digits to the beginning of the selected number (such as adding a “1” to a long distance number).
 - **Erase** — Deletes the selected number from the selected Calls log.
5. Use the navigation keys to highlight **Save**, then press the  key. The following options appear in the display:
 - **New Entry** — Lets you create a new Contacts entry.
 - **Find** — Lets you add the number or e-mail address you just entered to an existing Contacts entry.
6. Use the navigation keys to highlight **New Entry**, then press the  key. The following (number type) icons appear in the display:



7. Use the navigation keys to highlight the number type that matches your new entry and press the  key. The **Contacts** information screen appears in the display with the **Name** field highlighted.

8. Enter a name or phrase to associate with the type using the keypad. (See “Entering Text” on page 46 for more information.)
9. Press the  key to save the entry.





Finding a Contacts Entry

Voice Method

Use the VoiceSignal **Contacts** command to view contact information for any named contact stored in your Contacts list by saying the name.

Note: The **Contacts** command shows the requested contact information in the display but does not dial any phone numbers for the contact.

To look up information for a specific contact:

1. In standby mode, press and hold the  key to launch **VoiceSignal**.
“Say a Command” appears in the display and is pronounced through the speaker.
2. Say “**Contacts**”.
VoiceSignal prompts you to “**Say the name.**”
3. Speak clearly and say the full name of the person you want to call, exactly as it is entered in your contact list.
 - If VoiceSignal recognizes the name you said, the contact information for that name appears in the display.
 - If VoiceSignal does not recognize the name you said, a choice list of up to three names appears in the display, and VoiceSignal prompts you with “**Did you say?**” followed by the first name on the list.
4. Say “**Yes**” to confirm the name or “**No**” to hear the next name, or use the keypad to select the correct name from the list. (See see “Choice Lists Settings” on page 108, for more information.)
 - To say the name again, press the **Repeat** (right) soft () key.
 - To exit VoiceSignal without dialing, press the **Settings** (left) soft () key and press the **Cancel** (right) soft () key.
5. The contact information for the name you selected appears in the display.

Keypad Methods

If you’ve stored a named contact in your Contacts list, Find lets you locate the entry quickly.

1. In standby mode, do one of the following:
 - Press the **Up** navigation key (Contacts Find shortcut).

Finding a Contacts Entry

- Press the **MENU** (left) soft key (), then press  (for **Find**) and  for **Find**.

The **Find** screen appears in the display with **By Name** showing.

2. Use the navigation keys to select the method you wish to use to find the entry. The available Find methods are:
 - **By Name** — Search the Contacts alphabetically by name.
 - **By Entry** — Search the Contacts by entry number.
 - **By Group** — Search the Contacts by selecting from one of the five available groups.
 - **By Number** — Search the Contacts by phone number.


Find by Name

This option lets you find a Contacts list entry by its contact name.

 
1. In the **Find** screen, use the navigation keys to show **By Name** in the display.
2. Enter the name of the contact as it appears in your Contacts list.

Example: If you saved a contact name as "Amy Smith", begin your search for that contact by pressing  for "A".

Note: As you enter letter, the entry number and names of the closest matches (thus far) appear in the display.

3. When the desired Contacts entry is listed in the display, highlight the contact using the navigation keys (if necessary). Then:
Press the  key to dial the number associated with the named contact.

 
— Or —

Press the  key to view information about the contact.

— Or —


 


Press the **Option** (left) soft key (). The following options appear in the display:

- **Edit** — Lets you edit details of the highlighted contact.
- **Erase** — Erases the selected contact.
- **Add New** — Lets you add a new number to your Contacts list or to the selected contact.
- **Send Text Msg** — Lets you send a text message to the selected contact.
- **Send Pic Msg** — Lets you send a picture message to the selected contact.

4. Use the navigation keys to highlight an option, then press the  key to enter that option's sub-menu.


 

Find by Entry

This option lets you find a Contacts list entry by its Location number.

1. In the **Find** screen, use the navigation keys to show **By Entry** in the display.
2. When the desired Contacts entry is listed in the display, highlight the contact using the navigation keys (if necessary). Then do one of the following:
 - Press the  key to dial the number associated with the named contact.
 - Press the  key to view information about the contact.
 - Press the **Option** (left) soft key (). The following options appear in the display:
 - **Edit** — Lets you edit details of the highlighted contact.
 - **Erase** — Erases the selected contact.
 - **Add New** — Lets you add a new number to your Contacts list or to the selected contact.
 - **Send Text Msg** — Lets you send a text message to the selected contact.
 - **Send Pic Msg** — Lets you send a picture message to the selected contact.
3. Use the navigation keys to highlight an option, then press the  key to enter that option's sub-menu.

Find by Group

This option lets you find a Contacts list entry with a specific Group name.


1. In the **Find** screen, use the navigation keys to show **By Group** in the display.
2. Use the navigation keys to highlight the **Group** field.
3. Use the navigation keys to show the name of the group you wish to search. As each group name appears in the display, entries that are assigned that group name are listed in the display beneath it.
4. When the desired Contacts entry is listed in the display, highlight the contact using the navigation keys (if necessary). Then, do one of the following:
 - Press the  key to dial the number associated with the named contact.
 - Press the  key to view information about the contact.
 - Press the **Option** (left) soft key (). The following options appear in the display:

Editing an Existing Contact Entry

- **Edit** — Lets you edit details of the highlighted contact.
 - **Erase** — Erases the selected contact.
 - **Add New** — Lets you add a new number to your Contacts list or to the selected contact.
 - **Send Text Msg** — Lets you send a text message to the selected contact.
 - **Send Pic Msg** — Lets you send a picture message to the selected contact.
5. Use the navigation keys to highlight an option, then press the **OK** key to enter that option's sub-menu.

 

 
Editing an Existing Contact Entry

Once stored in the Contacts, an entry can be changed quite easily.

1. In standby mode, press the **Up** navigation key (**Contacts Find** shortcut). The **Find** screen appears in the display with **By Name** showing.
2. Use the navigation keys to display the search method that you wish to use (**By Name**, **By Group**, **By Entry**, or **By Number**).
3. Enter information to find the Contacts list entry, or use the navigation keys to highlight the entry containing the number that you wish to edit.
4. Press the **Option** (left) soft key (). The following options appear in the display:
 - **Edit** — Lets you edit details of the highlighted contact.
 - **Erase** — Erases the selected contact.
 - **Add New** — Lets you add a new number to your Contacts list or to the selected contact.
 - **Send Text Msg** — Lets you send a text message to the selected contact.
 - **Send Pic Msg** — Lets you send a picture message to the selected contact.
5. The **Edit** option is highlighted.
6. Press the **OK** key. The Contacts information screen appears in the display with the contact name highlighted.
7. Use the navigation keys to highlight a number stored in this contact entry.
8. Press **BACK** to backspace and delete numbers.
9. Press and hold **BACK** to clear all numbers in the highlighted field.
10. When you're finished editing the number, press the **OK** key. Your changes are saved and a confirmation message appears in the display.

 

 
Assigning Speed Dial Numbers

When you add an entry to the Contacts list, you have the option of letting the phone assign a Location (Speed Dial) number or of selecting or entering a Location number. You can also change a contact's Location number.








1. In standby mode, press the **Up** navigation key (**Contacts Find** shortcut). The **Find** screen appears in the display with **By Name** showing.
2. Use the navigation keys to display the search method that you wish to use (**By Name**, **By Group**, **By Entry**, or **By Number**).
3. Enter information to find the Contacts list entry, or use the navigation keys to highlight the entry containing the Location number that you wish to change.
4. Once the entry is highlighted, press the  key.
5. Use the navigation keys to highlight **Location**.
6. Press the **Edit** (left) soft key ().
7. Enter, or use the navigation keys to select, the new SpeedDial Location number.
8. Press the  key to save your changes.

Selecting the Number to be Speed Dialed

 
If a contact has more than one stored number (such as Home and Office), you can select which of these numbers your phone will dial when you speed dial that contact.

1. In standby mode, press the **Up** navigation key (**Contacts Find** shortcut). The **Find** screen appears in the display with **By Name** showing.
2. Use the navigation keys to display the search method that you wish to use (**By Name**, **By Group**, **By Entry**, or **By Number**).
3. Enter information to find the Contacts list entry, or use the navigation keys to highlight the entry containing the Location number that you wish to change.
4. Once the entry is highlighted, press the  key.
5. Use the navigation keys to highlight **SpeedDial**.
6. Press the **Edit** (left) soft key ().
7. Use the **Left** and **Right** navigation keys to select the Number Type icon for the number you want the phone to dial when you speed dial this contact.
8. Press the  key to save your changes.

Add a Number or E-mail Address to an Existing Entry

1. In standby mode, press the **MENU** (left) soft key (), then press  (for **Contacts**) and  for **Add**. The following options appear in the display:
 - **Number** — Lets you enter a number to be dialed when calling the new contact.
 - **Email** — Lets you enter an e-mail address for the new contact.
2. Use the navigation keys to highlight the desired option and press the  key.
3. Enter the phone number or e-mail address for the new Contacts entry, then press the  key. The following options appear in the display:
 - **New Entry** — Lets you create a new Contacts entry.
 - **Find** — Lets you add the number or e-mail address you just entered to an existing Contacts entry.
4. Use the navigation keys to highlight **Find**, then press the  key.
5. Use the navigation keys to show the search method that you wish to use (**By Name**, **By Group**, **By Entry**, or **By Number**).
6. Enter information to find the entry and/or use the navigation keys to highlight the desired entry and press the  key. The Select Type screen appears in the display.


 
The following number types appear in the display:





— Or —






 
The following address types appear in the display:



7. Use the navigation keys to highlight the number type or address type that matches the number or e-mail address you are adding, then press the  key.
8. Press the  key again at the **Contacts** menu. The number is added to the existing entry.




Edit an Existing E-mail Address

1. In standby mode, press the **Up** navigation key (**Contacts Find** shortcut). The **Find** screen appears in the display with **By Name** showing.
2. Use the navigation keys to select the search method that you wish to use (**By Name**, **By Group**, **By Entry**, or **By Number**).
3. Enter information to find the entry, or use the navigation keys to highlight the entry that you wish to edit.
4. Once the entry is highlighted, press the **Option** (left) soft key (). A pop-up menu appears in the display with **Edit** highlighted.
5. Press the  key.
6. Use the navigation keys to highlight the **E-mail** field (labeled with the @ symbol).
7. Use the keypad to edit the **E-mail** address. (See "Entering Text" on page 46 for more information.)



To insert the @ symbol, press the **Option** (left) soft key (). A pop-up menu appears in the display with **Alpha** highlighted.
8. Use the navigation keys to select **Symbol**, then press the  key.
9. Press  (**@ symbol**), and enter the remainder of the e-mail address using the keypad. (See "Entering Text" on page 46 for more information.)
10. Press the **Option** (left) soft key ().
11. Use the navigation keys to highlight **.com**, then use the navigation keys to show the desired domain type (**.com**, **.edu**, **.net**), then press the  key.
12. Press the  key to save your changes.

Renaming a Contacts Group



 
Use this option to rename a group in your Contacts list.

1. In standby mode, press the **MENU** (left) soft key (), then press  (for **Contacts**) and  for **Rename Group**. The following default group names (or any changed group names) appear in the display:
 - **Friend**
 - **Family**
 - **Colleague**
 - **Business**
 - **General**

Deleting a Contact Entry




2. Use the navigation keys to highlight the group that you wish to rename, then press the  key. The current name of the group appears in the display with a flashing cursor at the end of the name.
3. Enter a new group name using the keypad, then press the  key. (See “Entering Text” on page 46 for more information.)

Deleting a Contact Entry

1. In standby mode, press the **Up** navigation key (**Contacts Find** shortcut). The **Find** screen appears in the display with **By Name** showing.
2. Use the navigation keys to display the search method that you wish to use (**By Name**, **By Group**, **By Entry**, or **By Number**).
3. Enter information to find the entry, or use the navigation keys to highlight the entry that you wish to erase.
4. Press the **Option** (left) soft key (). A pop-up menu containing the following options appears in the display:
 - **Edit** — Lets you edit details of the highlighted contact.
 - **Erase** — Erases the selected contact.
 - **Add New** — Lets you add a new number to your Contacts list or to the selected contact.
 - **Send Text Msg** — Lets you send a text message to the selected contact.
 - **Send Pic Msg** — Lets you send a picture message to the selected contact.
5. Use the navigation keys to highlight **Erase**.
6. Press the  key. The phone prompts you to confirm the erasure.
7. Use the navigation keys to highlight **Yes** or **No**, then press the  key.

Memory

Use the Memory sub-menu to view the amount of Contacts entries you have stored, as well as the remaining memory.

- In standby mode, press the **MENU** (left) soft key (), then press  (for **Contacts**) and  for **Memory**. The amounts of memory used and remaining for Contacts entries appear in the display.

Section 7: Messaging

Topics Covered







 

- Creating and Sending New Messages
 - Message Send Options
 - Retrieving New Messages
 - Voicemail
 - Message Folders
 - Message Settings
 - Deleting Messages
-

This section explains how to create, send, receive, and view different types of messages. This section also includes the features and functionality associated with messaging.



Creating and Sending New Messages

 


 

This section guides you through the procedure to create and send various types of messages.

Creating and Sending a Text (TXT) Message

1. In standby mode, do one of the following:
 - Press the **MESSAGE** (right) soft key (.
 - Press the **MENU** (left) soft key () , then press  (for **Messages**).
2. Press  for **New Text Msg**.
3. Enter the phone number of the recipient, then press the  key.
4. Enter the text for your message using the keypad. (See “Entering Text” on page 46 for more information.)
5. At any point while composing a message, press the **Option** (left) soft key (). The following options appear in the display:
 - **Alpha** — The entry mode for your message. Other modes, which are hidden, are **Symbol**, **Number**, and **T9 Word**. Use the navigation keys to show each of the text entry modes.
 - **Text Format** — Choose the size, alignment, bold, italic, and other options for formatting your text.
 - **Add Media** — Add a picture, animation, or melody to your message.
 - **Quick Text** — Insert a pre-composed message into the body of your current message.
6. Once you're finished entering your message, press the  key. The following **New Message** options appear in the display:
 - **Edit Send To** — Edit the recipient's Send To number.
 - **Edit Text** — Edit the content of your message.
 - **Send Options** — Choose the Priority, Validity, whether you wish to have a Delivery Acknowledgement, Insert a Signature, and whether you wish to Defer Delivery of the message. (See “Message Send Options” on page 69 for more information.)
 - **Save in Draft** — Save the message to your Draft folder.
 - **Save Text** — Save the text in your message as a Quick Text message. Quick Text messages are pre-composed messages that can be inserted into any message you choose.
7. To send your message, press the **SEND** (left) soft key (.

Creating and Sending a Media Message

1. In standby mode, press the **MESSAGE** (right) soft key () , then press  for **New Text Msg**.

2. Enter the phone number of the recipient, then press the  key.
3. Enter the text for your message using the keypad. See "Entering Text" on page 46 for more information.)
4. At any point while composing a message, press the **Option** (left) soft key (). The following options appear in the display:
 - **Alpha** — The entry mode for your message. Other modes, which are hidden, are **Symbol**, **Number**, and **T9 Word**. Use the navigation keys to display each of the text entry modes.
 - **Text Format** — Choose the size, alignment, bold, italic, and other options for formatting your text.
 - **Add Media** — Add a picture, animation, or melody to your message.
 - **Quick Text** — Insert a pre-composed message into the body of your current message.
5. Press  (for **Add Media**). The following options appear in the display:
 - **Add Picture** — Lets you add a preloaded or downloaded photo.
 - **Add Animation** — Lets you add a preloaded or downloaded animation.
 - **Add Melody** — Lets you add a preloaded or downloaded melody.
6. Once you're finished entering your message text and/or adding media, press the  key. The following **New Message** options appear in the display:
 - **Edit Send To** — Edit the recipient's Send To number.
 - **Edit Text** — Edit the content of your message.
 - **Send Options** — Choose the Priority, Validity, whether you wish to have Delivery Acknowledged, and whether you wish to Defer Delivery of the message. See "Message Send Options" on page 69 for more information on these settings.
 - **Save in Draft** — Save the message to your Draft folder.
 - **Save Text** — Save the text in your message as a Quick Text message. Quick Text messages are pre-composed messages that can be inserted into any message you choose.
7. To send your message, press the **Send** (left) soft key ().

Creating and Sending a Picture Message

1. In standby mode, press the **MESSAGE** (right) soft key (), then press  for **New Pic Msg**. The **New Pic Message** screen appears in the display with the **Send To** field highlighted.
2. Enter the phone number or e-mail address of the recipient, then press the Down navigation key.

Press the **Option** (left) soft key () . The following options appear in the display:

- **Contacts** — Find and select a recipient from your Contacts list.
 - **Number** — The entry mode for your message. Other modes, which are hidden, are **T9 Word**, **Alpha**, **Symbol**, and **Number**. Use the navigation keys to display each of the text entry modes.
 - **.com** — The domain name for the recipient e-mail address. Other domains, which are hidden, are **.edu** and **.net**. Use the navigation keys to display each of the domain names.
 - **OnlineAlbum** — Sets your Online Album as the recipient of your picture. (Contact your Wireless Carrier for more information.)
 - **Save Address** — Add the recipient's number or e-mail address to your Contacts list.
 - **Recent Calls** — Find and select a recipient from your Recent Calls log.
3. Enter the text for the Subject of your message using the keypad, then press the Down navigation key. (See "Entering Text" on page 46 for more information.)

Press the **Option** (left) soft key () . The following options appear in the display:

- **T9 Word**
 - **Alpha**
 - **Symbol**
 - **Number**
4. Select a picture to include with your message, then press the Down navigation key.

Press the **Option** (left) soft key () . The following options appear in the display:

- **Photo Gallery** — Lets you add a photo from the gallery or take a new photo.
 - **Image Gallery** — Lets you add a downloaded image.
 - **Erase** — Lets you remove a photo from your message.
5. Enter the text for your message using the keypad, then press the Down navigation key. (See "Entering Text" on page 46 for more information.)



Press the **Option** (left) soft key () . The following options appear in the display:

- **Alpha** — The entry mode for your message. Other modes, which are hidden, are **Symbol**, **Number**, and **T9 Word**. Use the navigation keys to display each of the text entry modes.



- **Quick Text** — Insert a pre-composed message into the body of your current message.
6. Select a sound file to include with your message, then press the Down navigation key.
Press the **Option** (left) soft key (). The following options appear in the display:
 - **Sounds** — Lets you add a preloaded melody or a recorded sound file to your message.
 - **Erase** — Lets you remove a melody or sound file from your message.
 7. Once you're finished composing your message, press the **Next** (right) soft key (). The following **SEND NEW** options appear in the display:
 - **Preview** — View and play the message as the recipient will see and hear it.
 - **Send Options** — Choose the Priority, Validity, whether you wish to have Delivery Acknowledged, and whether you wish to Defer Delivery of the message. See "Message Send Options" on page 69 for more information on these settings.
 - **Save in Draft** — Save the message to your Drafts folder.
 8. To send your message, press the **SEND** (left) soft key ().

Creating and Sending a Handwritten Message

New Handwr. Msg lets you quickly send handwritten messages as pictures, rather than using the keypad to enter your message.

1. In standby mode, press the **MESSAGE** (right) soft key (), then press  for **New Handwr. Msg**. The camera viewfinder screen appears in the display in Sketch mode (that is, high contrast).
2. Position your handset so that the complete text of the message appears within the image corners. See "Simple Snap Shot" on page 82 for more information.

Tip: For best results, write your message on white or light-colored, unruled paper (that is, no lines).

3. Use the Left and Right navigation keys to increase magnification of ("zoom in on") the message, as needed.
4. Press the  key. "Digitizing..." appears in the display, followed by a high-contrast picture of your message.
5. If you are satisfied with the picture of your message, press the  key to save the picture and begin delivery process. The **New Pic Message** screen then appears in the display with the **Send To** field highlighted.


6. Complete and send your new Handwritten Pic message. See "Creating and Sending a Picture Message" on page 66 for more information.



Message Send Options

You can set priority, validity, and other options before you send a message.


1. After you've composed a message and pressed the **OK** key (for text messages) or the **Next** (right) soft key () (for picture and handwritten messages), you're returned to the **New Message/SEND NEW** menu.
2. Use the navigation keys to highlight **Send Options**, then press the **OK** key. The following Send Options appear in the display:
 - **Priority** — Assign a priority to your message.
 - **Validity** — Select the period of time that you wish the message to be available to the recipient. After the set period of time, your message is recalled.
 - **Delivery Ack** — Lets you activate or deactivate the report function. When this function is activated, the network informs you whether or not this message has been delivered.
 - **CB#** — Text messages only — Insert a number into your message for the recipient to call you back.
 - **Def. Delivery** — Choose when you wish your message to be sent.
3. Use the navigation keys to display the various Send Options for each menu item.
4. When the desired Send Option appears in the display, press the **OK** key to confirm the selection or to enter the send option's sub-menu.


Retrieving New Messages


When you receive a message in standby mode, the ringer sounds (unless turned off) and **New Message** appears in the display along with the closed envelope icon (). The date and time of the message also appear in the display.

- Press the **Ignore** (left) soft key () to return your phone to standby mode. The message is saved to your Inbox where you can view it later.
- Press the **View** (right) soft key () to open the message, where you have the option to Reply, Lock/Unlock, Erase, Forward, Save Contact, or Save Media.

Retrieve Messages While in a Call

When you receive a message while in a call, New Message appears in the display along with the closed envelope icon (). To view the message without disconnecting the call:

- Press the **Ignore** (left) soft key () to ignore the message and save it to your inbox where you can view it later.

- Press the **View** (right) soft key () to open the message, your call remains connected.


VoiceMail

VoiceMail allows callers to leave voice messages in your voice mailbox, and lets you review, play, and delete your voice messages any time you are in a network coverage area.

VoiceMail Setup

Before callers can leave voice mail messages, you must first set up your account. See “Setting Up Your Voice Mail” on page 11 for more information.

Check your VoiceMail



1. In standby mode, press and hold the  key until you're connected to the VoiceMail system. A recorded message prompts you for a password.
2. Enter your password. Follow the recorded prompts, to listen to your voice message, change administrative options, and so on.


Tip: You can also check your VoiceMail by using entries in the VoiceMail folder. See “VoiceMail” on page 73 for more information.



Message Folders


Inbox

Received messages of all types (except Voice Mail) are stored in the Inbox.

1. In standby mode, press the **MESSAGE** (right) soft key (), then press  (for **Inbox**) to open the **Inbox** folder.

Tip: While in a call, press the **MSG** (right) soft key () to open the **Messages** menu.






2. Use the navigation keys to highlight an incoming message that you wish to view.
3. Press the  key to view the highlighted message.
4. While viewing your message, press the **Options** (left) soft key (), The following options appear in the display:
 - **Reply** — Lets you reply to a message.
 - **Lock/Unlock** — Block or permit erasure of the message.
 - **Erase** — Erases the selected message.
 - **Forward** — Lets you forward the message to other Email addresses or phone numbers.

- **Save Contact** — Save the sender's number to your Contacts.
 - **Save Media** — Save any audio and/or image files.
5. Use the navigation keys to highlight an option. Press the  key to perform the function for the highlighted option.

Outbox

Your phone stores outgoing messages in the Outbox, regardless of whether the message was successfully transmitted to, or received by, the addressee.




Tip: Verify whether and when a message or e-mail was successfully received by enabling the **Delivery Ack** feature.

1. In standby mode, press the **MESSAGE** (right) soft key (), then press  (for **Outbox**). A list of your outgoing messages appears in the display.
2. Use the navigation keys to highlight a message that you wish to review, then press the  key.
3. Press the **Option** (left) soft key (). The following options appear in the display:
 - **Forward** — Send a copy of the message to other Email addresses or phone numbers.
 - **Lock/Unlock** — Block or permit erasure of the message.
 - **Erase** — Erase the message.
 - **Message Info** — Displays information related to the selected message.
4. Use the navigation keys to highlight the desired option.
5. Press the  key to perform the function for the highlighted option.

Drafts




Messages in the Drafts folder are those that have been composed but never sent. You can return to the Drafts folder at any time to view, edit, or send a draft message.

Text Message

1. In standby mode, press the **MESSAGE** (right) soft key (), then press  (for **Drafts**). A list of your draft messages appears in the display.
2. Use the navigation keys to highlight the draft text message that you wish to review, then press the  key. The message text composition screen appears in the display.
3. Add/change text using the keypad. (For more information, see "Entering Text" on page 46.)

4. Press the left soft key () **Options**, to display the options listed.
 - **T9 Word / Alpha / Symbol / Number** — Set the text entry mode.
 - **Text Format** — Change the size, alignment, and appearance of the message text.
 - **Add Media** — Add a picture, an image, and/or a sound file to the message.
 - **Quick Text** — Add precomposed text to the message.
5. Use the navigation keys to highlight the desired option.
6. Press the  key to perform the function for the highlighted option.
7. When the message text is complete, press the  key. The **New Message** menu appears in the display.
8. To change or add recipient(s) to the message, press  for **Edit Send To**.
9. Press the **Option** (left) soft key. The following options appear in the display:
 - **Contacts** — Find and select a recipient from your Contacts list.
 - **Number** — The entry mode for your message. Other modes, which are hidden, are **T9 Word**, **Alpha**, **Symbol**, and **Number**. Use the navigation keys to display each of the text entry modes.
 - **.com** — The domain name for the recipient e-mail address. Other domains, which are hidden, are **.edu** and **.net**. Use the navigation keys to display each of the domain names.
 - **Save Address** — Add the recipient's number or e-mail address to your Contacts list.
 - **Recent Calls** — Find and select a recipient from your Recent Calls log.
10. When you have finished adding/changing message recipient(s), press the  key to return to the **New Message** menu.
11. Set any needed Message Send Options. (For more information, see "Message Send Options" on page 69.)
12. Press  for **Save in Draft** to save this message as a new draft text message.
13. Press the **SEND** key () to send the message.




Picture Message

1. In standby mode, press the **MESSAGE** (right) soft key (), then press  (for **Drafts**). A list of your draft messages appears in the display.
2. Use the navigation keys to highlight the draft text message that you wish to review, then press the  key. The **New Pic Message** screen appears in the display.

3. Change, compose, and send the picture message. (For more information, see "Creating and Sending a Picture Message" on page 66.)

Voicemail

New voice messages in your voice mailbox are logged in the Voicemail folder of the Messages menu. Open the Voice Mail folder to view the Callback # (if available), Urgency, and other details of new voice mail messages.



 
1. In standby mode, press the **MESSAGE** (right) soft key () , then press  (for **Voicemail**). A Voicemail status screen indicating the number of new messages in your voice mailbox, their urgency, and any callback numbers appears in the display.
2. Press the  key to call your voice mailbox and listen to the message.

Note: You can also press and hold the  key to dial your voice mailbox.

WAP Push

Occasionally, your Wireless Provider may send notifications to your phone in the form of WAP Push alerts. These alerts may contain information on new services or updates. When you receive an alert, you'll also receive a text notification and hear a tone.

Note: Contact your Wireless Provider for availability.




1. In standby mode, press the **MESSAGE** (right) soft key () , then press  (for **Wap Push**).
An Alert Inbox status screen indicating the number of new alert messages in your WAP mailbox appears in the display.
2. Use the navigation keys to highlight the desired WAP alert.
3. Press the  key to view the selected WAP alert.

Messages and Lock Mode

Your phone can still receive messages while in Lock Mode. The time and date of the message appear in the display, but you cannot access the message until you enter the lock code. (For more information, refer to "Lock Phone" on page 133.)

Message Settings

The Msg Settings folder lets you define numerous message settings such as ringer types and save options.

1. In standby mode, press the **MESSAGE** (right) soft key (), then press  (for **Msg Setting**). The following **Msg Setting** sub-menus appear in the display:
 - **Text Msg** — Settings that apply to text messages.
 - **Pic Msg** — Settings that apply to picture messages.
 - **General** — Settings that apply to all messages.
2. Use the navigation keys to highlight the desired sub-menu. Press the  key to enter the sub-menu. The following options appear in the display:
 - **Text Msg**
 - **SaveInOutbox** — Elect to not save, prompt to save, or automatically save copies of sent text messages in your Outbox folder.
 - **Insert Sign.** — Elect to not insert or insert a pre-composed text signature at the end of sent text messages.
 - **Delivery Ack** — Enable or disable delivery acknowledgement of your sent text messages from your Wireless Carrier's server.
 - **Direct View** — Enable or disable automatic presentation of newly received text messages.
 - **Signature** — Compose or change the text signature to be inserted at the end of sent text messages, depending on the **Insert Sign.** setting.
 - **Callback #** — Enter or change the number text message recipients can call in response to your sent text messages.
 - **Pic Msg**
 - **SaveInOutbox** — Elect to not save, prompt to save, or automatically save copies of sent picture messages in your Outbox folder.
 - **Delivery Ack** — Enable or disable delivery acknowledgement of your sent picture messages from your Wireless Carrier's server.
 - **Retrieval Mode** — Elect to automatically retrieve newly received picture messages or to be prompted for retrieval.
 - **General**
 - **Entry Mode** — Lets you specify T9 Word, Alphabet, or Number as the default message text entry mode.
 - **Quick Text** — Add or change pre-composed message text for insertion into messages.
 - **Msg Alert** — Set Reminder and Alert On Call.
 - **Auto Erase** — Automatically erase first message received after memory is full.
 - **Voice Mail #** — Lets you enter the access phone number to your Voicemail account.


Deleting Messages

- **Block Sender** — Block or Unblock messages from a specified web address or phone number, and View the List of Blocked senders.
3. Use the navigation keys to highlight the desired option. Press the **OK** key to adjust the selected message setting.

Deleting Messages

You can erase all of the messages in each/all of your message folders from one convenient location.

Note: This function erases all messages in a selected message folder or in all message folders. To delete a single message, from the **Messages** menu, open the message folder where the message to be deleted is stored, then select and delete the message from the **Option** menu while viewing the message content.

1. In standby mode, press the **MESSAGE** (right) soft key (), then press **One** for **Erase Msg.** The following options appear in the display:
 - **Inbox** — Lets you delete all unlocked messages from your Inbox.
 - **Outbox** — Lets you delete all unlocked messages from your Outbox.
 - **Draft** — Lets you delete all unlocked draft messages from the Draft folder.
 - **All Messages** — Lets you delete all unlocked messages from all message folders.
2. Use the navigation keys to highlight the folder containing the messages that you wish to delete.
3. Press the **OK** key to open the highlighted folder. You are prompted to confirm the erasure of all messages in the folder.
4. Use the navigation keys to highlight **Yes** or **No**, then press the **OK** key.

Section 8: Axxess Shop






Topics Covered

- Axxess Shop Options
 - Axxess Shop Settings
 - Axxess Shop Help
-

This section explains the Axxess Shop features where users can download multimedia, applications, games, and check news and sports.


Access Shop Options

With Access Shop, you can download full featured applications over the air including games, personalized ring tones, pictures, and more. Send and receive instant messages and email, or browse the web to catch up on all the latest news.

1. In standby mode, press the **Right** navigation key to launch Access Shop. The Access Shop menu appears in the display with the **Access Shop** icon () highlighted.
2. Press . "Browsing online and downloading apps uses airtime." appears in the display.
3. Press . "Select "Remove" if you don't want to see the airtime warning again." appears in the display along with the following options:
 - **Yes** — Closes the warning message pop-up for this session.
 - **Remove** — Blocks the airtime warning message from appearing in future sessions.
4. Use the **Left** and **Right** navigation keys to highlight the option you want, then press . The following options listed appear in the display:
 - **Tone Shop** — Select from a broad category of ringtones that you can play on your phone.
 - **Best Sellers** — Select from the most popular games, information services, and so on.
 - **New Arrivals** — Provides updates on the latest games, information services, and so on.
 - **Games** — Select from a broad category of games that you can play on your phone. Also select from several fun and interesting applications.
 - **Wallpapers & Photos** — View, share your own pictures and even save them as your phone's wallpaper or screensaver.
 - **Search** — Enter a keyword and search the Access Shop catalogue.
5. Use the navigation keys to highlight the category of your choice, then press .
6. Select the application you wish to download and follow the online directions.

Access Shop Settings

Use the Settings sub-menu within Access Shop to manage, move, order applications and much more.

1. In standby mode, press the **Right** navigation key to launch Access Shop. The Access Shop menu appears in the display with the **Access** icon () highlighted.

2. At the Access Shop menu, press the **Right** navigation key once to highlight the **Settings** icon (✓), then press **OK**. The following options appear in the display:
 - **Order Apps** — Download applications over the network.
 - **Move Apps** — Move previously downloaded applications between available folders.
 - **Manage Apps** — Allow you to manage previously downloaded applications.
 - **Main Menu View** — Select whether you wish to view the main Access Shop menu in a list or icon format.
 - **Screen Savers** — View downloaded screensavers.
 - **Airtime Warnings** — Enable or disable airtime warning messages.
 - **View Log** — View the Access Shop log, which displays information about recent activity using Access Shop.
3. Use the navigation keys to highlight an option.
4. Press **OK** to enter the option's sub-menu and view or change settings.

Access Shop Help

The Help sub-menu within Access Shop is a short tutorial on several Access Shop features. View information about charges, cancelling subscriptions, buying apps, disabling apps, and more.

1. In standby mode, press the **Right** navigation key to launch Access Shop. The Access Shop menu appears in the display with the **Access** icon (⌂), highlighted.
2. Use the navigation keys to highlight the **Help** icon (?), then press **OK**. The Help subjects listed in the following subsections appear in the display.

Buying New Apps

To buy new and exciting apps, visit the Access Shop. It provides you with a variety of apps you can choose from.

What do I pay?





When you buy an app you will be charged for the purchase cost of the app and the network connections to download it. Charges will also apply when you use apps that require network connections, such as downloading information and sending text messages.

Charges

Charges will apply for network connections. A network connection is used when you are browsing the Access Shop, downloading and restoring apps, or cancelling subscription apps. Charges will also apply when you use apps that require network connections, such as downloading information and sending text messages.

Cancelling Subscription

To cancel a subscription to an app:

1. In standby mode, press the **Right** navigation key to launch Access Shop. The Access Shop menu appears in the display with the **Access** icon () highlighted.
2. Use the navigation keys to highlight the **Settings** icon () , then press .
3. Highlight **Manage apps**, then press .
4. Select the app subscription you want to cancel.





Demo Apps

A Demo app is free and is designed to demonstrate the app's main features. It usually expires after a certain period of time or a number of uses and often has limited functions. When you run a demo app, you will be presented with a purchase option so you won't have to look for the app in the Access Shop.

Removing Apps

You may remove apps that are no longer needed. When you remove an app, you cannot use the application unless you purchase it again.

To remove an app:

1. In standby mode, press the **Right** navigation key to launch Access Shop. The Access Shop menu appears in the display with the **Access** icon () highlighted.
2. Use the navigation keys to highlight the **Settings** icon () , then press .
3. Highlight **Manage apps**, then press .
4. Select the app you want to remove.

Disabled Apps

You can install new apps even if the memory of your phone is full by partially removing (disabling) apps you haven't used recently. When you need to use a disabled app, you can restore it at no additional purchase cost.

Restoring Apps

Disabled apps can be quickly restored at no additional purchase cost. To restore an app, run the application you want to restore from the Main Menu. You will be guided through the restoration process.

Expired Apps

Apps that were purchased based on the number of uses or time expire. You can purchase additional uses from the Axxess Shop.

Section 9: Camera

Topics Covered

- Taking Pictures
 - The Photo Gallery
-

Use your Alltel Snap phone to take full color digital pictures, display them on your phone's vivid color display, and instantly share them with family and friends. It's fun, and as easy to use as a traditional point-and-click camera. Depending on the resolution you choose, you can save dozens of pictures in your phone's memory.

This section explains how you can do the following:


- Take pictures with your phone's built-in digital camera.
- Send and receive pictures taken with your phone's camera.
- Set the several options associated with the camera that help you take crisp, clear pictures.

Taking Pictures





Taking pictures with the built-in camera is as simple as choosing a subject, pointing the lens [located on the outside of the folder (above the external display)], and pressing a button.

Simple Snap Shot

To take a single picture using the current camera settings, do the following:

1. In standby mode, press and hold the Camera key () on the right side of the phone.

The message “**Camera Starting...**” followed by a camera viewfinder screen appears in the display. (See “Camera Screen” on page 83 for more information.) Your phone is now in camera mode.





2. Point the camera at your subject.
3. Using the display as a viewfinder, press the  key when the image that you wish to capture appears in the display.
4. Press the **Save** (left) soft key () to save the picture to memory.
5. Press the **SEND** key () to include the picture in a new picture message.
6. Press the **Erase** (right) soft key () to erase the photo.

Tip: You can change a number of the camera's options to suit particular uses for your pictures. See “Camera Options” on page 85 for more information.

Point, Click, and Send a Picture

Take a picture and send it to anyone with a compatible device in a few easy steps.



Tip: You can send a Picture message to up to ten recipients. Separate each recipient's address or phone number with a comma in the **Send to** field of the Picture message composer.

 
1. In standby mode, press and hold the Camera key () to activate the camera.
2. Using the display as a viewfinder, take the desired picture by pressing the Camera key () or the  key.
3. Press the  key to display the **New Pic Message** composer.
4. Select (from your Contacts list) or enter the recipient's phone number or e-mail address using the keypad.
5. Enter Subject and Message text and/or add a Sound file. (For additional information, see “Creating and Sending a Picture Message” on page 66.)

6. Press the **OK** key to send the Picture message to the intended recipient(s).

Camera Screen

When you activate your phone's camera, the first and second lines of the display are reserved for the current camera setting and option icons. The center of the display shows a viewfinder image of the subject at which the camera is pointed. The soft key labels on the bottom line of the display change to the following:

- **Option** — Pressing the left soft key () opens a pop-up menu of camera options.
- **OK** — Pressing the **OK** key takes a picture of the image currently appearing on the display.
- **Gallery** — Pressing the right soft key () opens the Photo Gallery so you can view or manage your stored pictures.

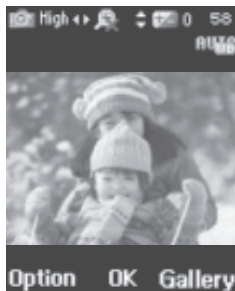

Camera Screen Icons



Camera — Indicates that pressing the **OK** key takes a picture of the image currently appearing on the display.



Resolution — Indicates the camera's resolution setting (**High**, **Med**, or **Low**). (You can change the default camera resolution setting. See "Camera Options" on page 85 for more information.)



Zoom — Indicates that you can use the Left and Right navigation keys to zoom in or out on the current picture and indicates the current zoom setting [blank (no zoom available), 01, 02, 03]. The range of available zoom settings is determined by the Resolution setting (**High** = no zoom, **Med** = 01 – 03, **Low** = 01 – 05).




Brightness — Indicates that you can use the Up and Down navigation keys to increase or decrease brightness of the current picture and indicates the current brightness setting (4 – -4).




Counter — Indicates the remaining number of pictures you can take (up to 200).





Multi Shot — Indicates the Multi Shot option is active and that you will take and save multiple pictures of the current subject in quick succession when you press the Camera key () or the **OK** key. The number of pictures taken depends upon the Resolution setting (**High** = 3 shots, **Med** = 5 shots, **Low** = 7 shots).



Self Timer in use — Indicates that you have set the camera shutter to delay for 5 seconds or 10 seconds after you press the Camera key () or the **OK** key.

Zoom in on a Subject


Your camera has digital zoom capabilities of up to x5 in Low resolution mode (x3 in Medium resolution mode). Pictures may appear somewhat grainy as you zoom in; this is a normal result of digital enhancement.

 

1. Press and hold the Camera key () on the right hand side of your camera. The camera viewfinder screen appears in the display indicating your phone is in camera mode.
2. Press the Left and Right navigation keys to zoom in and out on your subject.
3. Press the **OK** key or the Camera key () to take the picture.

Note: The Zoom setting is affected by the Resolution setting (camera mode). When Resolution is set to **High** no zoom is available. When Resolution is set to **Medium**, **X1**, **X2**, and **X3** are available. When Resolution is set to **Low**, **X1**, **X2**, **X3**, **X4**, and **X5** zoom settings are available.

Brighten/Darken Your Picture

The Brightness option lets you temporarily change the brightness of your pictures. The available brightness value range from 4 through -4.




1. Press and hold the Camera key () on the right hand side of your camera. The camera viewfinder screen appears in the display indicating your phone is in camera mode.

2. Use the Up and Down navigation keys to change the Brightness setting and to brighten or darken the image.
3. When the image is at the desired brightness, press the  key or the Camera key () to take the picture.

Camera Options

The Camera Options let you temporarily override your default camera settings. Any settings you change using the Camera Options only apply to the current picture, to the current camera session, or until you make another change using the Camera Options. When you exit camera mode, all Camera Options settings return to default values.




To access the Camera Options, do the following:

1. Press and hold the Camera key () on the right hand side of your camera. The camera viewfinder screen appears in the display indicating your phone is in camera mode.
2. Press the **Option** (left) soft key (). The following options appear in the display:
 - **Resolution**
 - **Self Timer**
 - **Multi Shot**
 - **Fun Frame**
 - **Color Tones**
 - **White Balance**
 - **Quality**
 - **Shutter Sound**
3. Press the number key corresponding to the desired option, or use the navigation keys or the volume keys (on the left hand side of your phone) to highlight the desired option and press the  key to select it.

Resolution

The Resolution setting lets you change the default size (in pixels) of your pictures. The following resolutions are available:





- **High** (VGA 640 X 480 pixels)
- **Medium** (QVGA 320 X 240 pixels)
- **Low** (QQVGA 128 X 112 pixels)



1. In camera mode, press the **Option** (left) soft key () , then press  for **Resolution**. The following options appear in the display:
 - **High**
 - **Medium**
 - **Low**
2. Use the Up and Down navigation keys to highlight the desired resolution.
3. Press the  key to save the selected setting. You're returned to the **Settings** menu.

Note: The Zoom setting is affected by the Resolution setting (camera mode). When Resolution is set to **High** no zoom is available. When Resolution is set to **Medium**, **X1**, **X2**, and **X3** are available. When Resolution is set to **Low**, **X1**, **X2**, **X3**, **X4**, and **X5** zoom settings are available.

Delay Pictures with the Self Timer

The Self Timer option lets you temporarily delay the camera shutter taking picture long enough so you or the person taking the picture can join others in the picture.

1. In camera mode, press the **Option** (left) soft key () , then press  for **Self Timer** (or use the navigation keys to highlight **Self Timer** and press the  key). The following options appear in the display:
 - **Off**
 - **5 sec**
 - **10 sec**
2. Use the navigation keys to highlight the desired delay, then press the  key. The camera viewfinder screen appears in the display.



The next time you press the Camera key () or the  key, a countdown timer appears on the last line of the display that indicates the seconds remaining before the camera takes the picture.

 
Multi Shot

 
The Multi Shot option lets you temporarily take multiple pictures in succession at the touch of a button. The number of pictures you can take depends on the Resolution setting, as indicated in the following list:

- **High resolution** — 3 pictures
- **Medium resolution** — 5 pictures
- **Low resolution** — 7 pictures



See "Resolution" on page 85 for more information.

1. In camera mode, press the **Option** (left) soft key () , then press  for **Multi Shot** (or use the navigation keys to highlight **Multi Shot** and

press the  key). **Off** and **On** options appear in the display.




2. Use the navigation keys to highlight **On**, then press the  key. The camera viewfinder screen appears in the display.

Note: When Multi Shot is set to **On**, the multi shot progress bar appears in the display in camera mode.


 
The next time you press the Camera key () or the  key, the camera takes several pictures in rapid succession.



Fun Frame

The Fun Frame option lets you temporarily apply one of the preloaded picture frames in your phone to characterize or enhance one or more pictures.

1. In camera mode, press the **Option** (left) soft key () , then press  for **Fun Frame** (or use the navigation keys to highlight **Fun Frame**, then press the  key). The name of the current frame appears in the top line of the display.

Note: The **Normal** frame is a blank frame.

2. Use the **Left** and **Right** navigation keys to show the various Fun Frames.
3. When you decide on the frame you wish to use, press the **Select** (left) soft key () or the  key. The camera screen appears in the display with your selected Fun Frame in place.








The next time you press the Camera key () or the  key, the camera includes the selected Fun Frame in your picture.

Color Tones

The Color Tones option lets you temporarily apply one of the following color-based special affects to one or more pictures:








- **Normal** — No special affect.
- **Sepia** — Replaces all colors with shades of sepia.
- **Monochrome** — Replaces all colors with shades of grey.
- **Negative** — Reverses light and dark shades of grey.
- **Emboss** — Creates a three-dimensional affect in the Monochrome picture.
- **Sketch** — Reduces the picture to outlines.

Note: The **Normal** Color Tone leaves the picture unchanged.

1. In camera mode, press the **Option** (left) soft key (), then press  for **Color Tones** (or use the navigation keys to highlight **Color Tones**, then press the  key). The name of the current Color Tone appears in the top line of the display.
2. Use the Left and Right navigation keys to show the various Color Tones and the effects they have on a picture.
3. When you decide on the Color Tone you wish to use, press the **Select** (left) soft key () or the  key. The camera screen appears in the display with your selected Color Tone applied.
The next time you press the Camera key () or the  key, the camera applies the selected Color Tone to your picture.



White Balance

 
The White Balance option allows you to temporarily adjust picture quality according to the following available light values:

- **Auto** — The camera automatically adjusts picture quality to available light.
 - **Sunny** — Use this setting when taking pictures in full sun.
 - **Cloudy** — Use this setting when taking pictures in cloudy conditions.
 - **Tungsten** — Use this setting when taking pictures under incandescent lights.
 - **Fluorescent** — Use this setting when taking pictures under fluorescent lights.
1. In camera mode, press the **Option** (left) soft key (), then press  for **White Balance** (or use the navigation keys to highlight **White Balance**, then press the  key). The name of the current White Balance option appears in the top line of the display.
 2. Use the navigation keys to show the various white balances and the effects they have on a picture.
 3. When you decide on the White Balance you wish to use, press the **Select** (left) soft key () or the  key. The camera screen appears in the display with your selected White Balance applied.
The next time you press the Camera key () or the  key, the camera applies the selected White Balance to your picture.

Quality



 
The Quality setting lets you select how much your pictures are compressed, thereby reducing their overall size (not to be confused with Resolution).

1. In camera mode, press the **Option** (left) soft key (), then press  for **Quality**. The following options appear in the display:


- **Fine**
 - **Normal**
 - **Economy**
2. Use the navigation keys to highlight the desired quality setting.
 3. Press the  key. You're returned to the **Settings** menu.

Shutter Sound

 
The Shutter Sound setting lets you choose the sound our phone plays whenever you take a picture. Aside from being a cool sound effect, Shutter Sound acts as an audible reminder that your camera has taken a picture.

1. In camera mode, press the **Option** (left) soft key (), then press  for **Shutter Sound**. The following options appear in the display:
 - **Sound 1**
 - **Sound 2**
 - **Sound 3**
 - **Sound 4**
 - **Sound 5**
 - **No Sound**
2. Use the navigation keys to highlight shutter sounds. Each sound plays as it is highlighted.
3. Once your choice is highlighted, press the  key. You're returned to the **Settings** menu.


After you've taken a picture, you can do any of the following:

- **Save the picture** by pressing the **Save** (left) soft key ().

The picture is stored in the **Photo Gallery**, a part of the phone's memory devoted to storing, browsing, and viewing saved pictures.

- **Send the picture** to someone else by pressing the  key.

For a detailed procedure, see "Creating and Sending a Picture Message" on page 66.



- **Discard the picture** by pressing the **Erase** (right) soft key ().

The Photo Gallery

Saved pictures are stored in the Photo Gallery. You can browse the Photo Gallery one picture at a time (expanded mode), or view several pictures at once in thumbnail format.

1. In standby mode, briefly press the Camera key () . The following options appear in the display:
 - **Take a Photo** — Activates your phone's camera and lets you take individual photos and multiple photos (multi shots).
 - **Photo Gallery** — Lets you view and manage your saved photos.
2. Use the navigation keys to highlight **Photo Gallery**, then press the  key. Any pictures that you've saved appear in the display.
3. Use the navigation keys to browse pictures in the gallery.
4. Press the **Option** (left) soft key () while viewing pictures in the Picture Gallery. The following options appear in the display:
 - **Pic Msg** — Send the currently displayed or highlighted picture as a Picture message.
 - **W-Postcard** — Take a picture of handwritten text and digitize the writing and add it to an image. Once placed in the image, you can modify the text colors, placement, and various other features.
 - **Assign** — Assign the currently displayed or highlighted picture to Wallpaper, as an opening and closing (power on and power off) graphic, or as a photo ID for someone in your Contacts list.
 - **Online Album** — Sends a copy of the currently displayed or highlighted picture to your Online Album on your Wireless Carrier's server.
 - **Rename** — Rename the currently displayed or highlighted picture.
 - **Lock/Unlock** — Lock the currently displayed or highlighted picture so that it cannot be deleted, or unlock the picture so that it can be deleted.
 - **Erase** — Erase the currently displayed or highlighted picture, provided it is unlocked.
 - **Erase All** — Erase all of the unlocked pictures in the Picture Gallery. Locked pictures must be unlocked before you can erase them.
 - **Photo Info** — View the Title, time and date created, size, and quality of the currently highlighted or displayed picture.
5. Use the navigation keys to highlight the desired option. Press the  key to perform the function for the option or enter its sub menu.

Switch From Expanded to Thumbnail Mode

1. Once you've found a picture that you wish to view full size, press the **Expand** (right) soft key ().
2. While viewing pictures in the picture gallery, press the **Thumb.** (right) soft key () to view several smaller pictures at a time.


Section 10: Axxess Web

Topics Covered

- Axxess Web Operations
 - Launch Axxess Web
 - Exit Axxess Web
 - Navigate the Web
 - Axxess Web Soft Keys
 - Using Links
 - How Axxess Web Keys Work
-



Your phone is equipped with a WAP (Wireless Application Protocol) browser which allows you to access Internet specified for mobile phones. This section explains how to access the Axxess Web services of your Wireless Provider and navigate the WAP browser.

Access Web Operations

- Each time you launch **Access Web**, your phone connects to the Internet and the service indicator icon () appears in the display.
- **Access Web** ends your Internet connection after a certain period of inactivity; however, some information from your session remains stored in the phone (while your phone turned on). You can access this information without reconnecting to the Internet, but when you view stored information and select a link that was not accessed in the last session, the phone automatically re-connects to the Internet.

Launch Access Web

Note: The first time you use **Access Web**, you are prompted to go through a setup process that takes approximately three to five minutes.

1. In idle mode, press the Down navigation key ().
If this is the initial launch of **Access Web**, you're prompted to enable security before proceeding.
A list of categories appears in the display.
2. Use the navigation keys to browse the categories.
3. Once the desired category is highlighted, press the ✓ (left) soft key () to enter the category list.

Exit Access Web

- To exit **Access Web**, press the  key.



Navigate the Web

When you use **Access Web**, some of the keys operate differently than during a normal phone call. **Access Web** presents on-screen items in any of the following ways:


- Text or numeric input
- Links (embedded in content)
- Numbered options (some may not be numbered)
- Simple text

You can act upon options or links by using the soft keys.

Access Web Soft Keys







At the bottom of the **Access Web** display is a bar that contains browser commands. The left () and right () soft keys on the keypad are used to execute the commands that appear above them in the display. These are called “soft keys” because their function changes depending on the application.





Using Links

Links have several purposes, such as jumping to a different page, to a different site, or even initiating a phone call. Links are shown inside of brackets ([...]). You can normally use the left soft key () to select a link when it is highlighted.

How Access Web Keys Work

The following table lists **Access Web** keys and their functions.

Key	Name	Function
	Navigation Keys	Use to browse lists and options.
	CLR Key	A browser back-up key. Press once to back up one page. Press and hold to display your home page. Press to clear the last number, letter, or symbol entered. Press and hold to completely clear the display.
	Asterisk/Shift Key	Press before entering text to enable upper case characters (in Abc mode).
	0/Next Key	Press to enter a zero (0), or to display another word in the dictionary when in T9 Word entry mode.
	Pound/Space Key	Press to insert a space when entering text.
	Numbers 1 through 9	Use the number keys to select items in a menu if they are numbered.

Key	Name	Function
	End Key	Press to exit the Access Web and return the phone to idle mode.
	Left Soft Key	Press to activate the command that appears above it in the display.
	Right Soft Key	Press to activate the command that appears above it in the display.
	Send Key	Press to dial a highlighted number.



 
Section 11: Gallery

Topics Covered

- Gallery
 - Using Image Gallery
 - Using Melody Gallery
-






This section outlines Gallery and key features associated with Gallery.

Gallery

1. In standby mode, press the **MENU** (left) soft key (), then press  for **Gallery**. The following **Gallery** sub-menus appear in the display:
 - **Image Gallery** — Lets you choose the multi-media or pictures that appear in your phone's display.
 - **Melody Gallery** — Lets you assign melody tones for calls, alarms, and other alerts.
2. Use the navigation keys to highlight a sub-menu.
3. Press  to enter the highlighted sub-menu. The following sections describe the above listed display sub-menus in greater detail.

Using Image Gallery

Image Gallery allow you to choose the multi-media or pictures that appear in your phone's display when you turn it on, turn it off, while in standby mode (wallpaper) and images to contacts.

1. In standby mode, press the **MENU** (left) soft key (), then press  (for **Gallery**) and  for **Image Gallery**.
2. Use the navigation keys to select **Preloaded**, **Downloaded** (if you have downloaded images), or **Shuffle**, then press the  key.
3. Use the navigation keys to browse available images and animations.
4. Press the **Option** (left) soft key (). A popup menu appears in the display.

When using a preloaded image, the following options appear (see "Preloaded Image Options" on page 98 for more information):

- **Assign**
- **Shuffle Image**
- **Image Info**

When using a downloaded image the following additional options appear in the display (see "Downloaded Image Options" on page 98 for more information):

- **Assign**
- **Shuffle Image**
- **Rename**
- **Lock / Unlock**
- **Erase**
- **Erase All**
- **Image Info**

 



5. Use the navigation keys to highlight **Assign** and press the  key.
The following options appear in the display:
 - **Wallpaper** — Choose the graphic or animation that appears in your display when the phone is in standby mode.
 - **Opening** — Choose the animation that appears in your display when you turn on your phone.
 - **Closing** — Choose the animation that appears in your display when you turn off your phone.
 - **Contacts** — Choose the graphic or animation that appears in the display when selected contacts calls.
6. Use the navigation keys to highlight option and press the  key.
7. Press the **Back** (right) soft key (), to return to previous menu or press  to return to standby mode.

Image Gallery Options

Preloaded Image Options

- **Assign** — use to assign selected images to **Wallpaper**, **Opening**, **Closing**, or **Contacts** (as Photo IDs).
- **Shuffle Image** — use to copy images to Shuffle folder and melodies to be shown and played in random order.
- **Image Info** — displays information about the image, such as the title (name), and the data size.

Downloaded Image Options

- **Assign** — use to assign selected images to **Wallpaper**, **Opening**, **Closing**, or **Contacts** (as Photo IDs).
- **Shuffle Image** — use to copy images and melodies to Shuffle folder to be shown and played in random order.
- **Rename** — change the name of the selected downloaded image file.
- **Lock / Unlock** — block/allow erasure of this downloaded image.
- **Erase** — delete the selected downloaded image.
- **Erase all** — delete all downloaded images.
- **Image Info** — displays information about the image, such as the title (name), and the data size.







Shuffle Folder Options

- **Assign** — use to assign selected shuffled images to **Wallpaper**, **Opening**, **Closing**, or **Contacts** (as Photo IDs) to be shown or played in random order.
- **Remove** — use to delete the selected image.

Using Melody Gallery

Melody Gallery lets you assign ringer types and melody tones for calls, alarms, and other alerts.

Note: In analog mode, the phone plays the Bell 2 ringtone in place of any assigned MP3 or OCP type ringtones, including the Preloaded ringtone, Bell 1.




1. In standby mode, press the **MENU** (left) soft key (), then press  (for **Gallery**) and  for **Melody Gallery**.
2. Use the navigation keys to select **Preloaded**, **Downloaded** (if you have downloaded melodies), or **Shuffle** (melody files that play in random order); then press the  key.
3. A list of bells and melodies appears in the display.
4. Press the **Option** (left) soft key (). A popup menu containing the following option appears in the display:
 - When using a preloaded bell or melody, the following options appear:
 - **Assign**
 - **Shuffle Melody**
 - When using a downloaded melody the following options appear in the display:
 - **Assign**
 - **Shuffle Melody**
 - **Rename**
 - **Lock / Unlock**
 - **Erase**
 - **Erase All**
 - **Melody Info**
 - **Shuffle**
5. Use the navigation keys to highlight **Assign** and press the  key.

The following options appear in the display.

- **Calls** — Lets you assign a melody tone for incoming calls.
- **Messages** — Lets you assign a melody tone for Voice Mail, Text, Pictures or Wap Push messages.
- **Alarm** — Lets you assign a melody tone for alarms.
- **Data** — Lets you assign a melody tone for incoming data calls.
- **Calendar** — Lets you assign a melody tone as a calendar reminder.

If **Alarm** is selected additional options appear in the display. Proceed to Step 6.

- **Alarm 1**
- **Alarm 2**
- **Alarm 3**

6. Use the navigation keys to highlight an option and press the  key.
7. Press the **Back** (right) soft key () to return to previous menu or press the  key to return to standby mode.

Melody Gallery Options

Note: In analog mode, the phone plays the Bell 2 ringtone in place of any assigned MP3 or QCP type ringtones; including the Preloaded ringtone, Bell 1.

Preloaded Bell Option

- **Assign** — use to assign a selected bell melody.
- **Shuffle Melody** — use to assign multiple melodies as call ringers. These melodies are played in random order for succeeding calls.

Preloaded Melody Option

- **Assign** — use to assign a selected melody, and animelody.
- **Shuffle Melody** — use to assign multiple melodies as call ringers. These melodies are played in random order for succeeding calls.

Downloaded Melody Options

- **Assign** — use to assign selected bell, or melody.
- **Shuffle Melody** — use to assign multiple melodies as call ringers. These melodies are played in random order for succeeding calls.
- **Rename** — use to change the name of the image.
- **Lock / Unlock** — block/allow erasure of this downloaded melody.
- **Erase** — erases a selected file.
- **Erase All** — erases all files.
- **Melody Info** — displays information about the melody, such as the file name, creation time and date, and the data size.
- **Shuffle Folder** — use to assign

Section 12: Tools

Topics Covered




- Tools Menu
 - Voice Kit
 - Today
 - Calendar
 - To Do List
 - Alarm Clock
 - Memo Pad
 - World Time
 - Calculator
 - Count Down
-

This section explains how to use your phone's digital assistant functionality to schedule events, set reminders, create a "to do" list, perform calculations, and more.

Tools Menu

Tools is a suite of Personal Digital Assistant (PDA) applications such as a Calendar, To Do List, and Memo Pad that run on your phone. You can use your phone to schedule events, set reminders, create a to do list, perform calculations, and more with the functions provided by this useful feature.




Opening Tools Menu

1. In standby mode, press the **MENU** (left) soft key (), then press  for **Tools**. The following sub-menus appear in the display:
 - **Voice Kit** — Lets you access voice recognition functions, record voice memos, and enable/disable spoken menus.
 - **Today** — Lets you review and schedule events that will occur today.
 - **Calendar** — Lets you view the current, past, or future month in a monthly calendar layout.
 - **To Do List** — Lets you create and maintain a task list.
 - **Alarm Clock** — Lets you set an alarm to go off once, or daily, at a specified time.
 - **Memo Pad** — Lets you store and review useful information.
 - **World Time** — Lets you view the current time of day or night in another part of the world.
 - **Calculator** — Lets you perform calculations, including addition, subtraction, multiplication, and division.
 - **Count Down** — Lets you view the amount of time between the current date and any event that you want to schedule.
2. Use the navigation keys to highlight an application, then press the  key.
The following sections provide detailed descriptions of the applications and how to use their functions.

Voice Kit

VoiceSignal is state-of-the-art voice recognition software for your mobile phone that lets you dial numbers, lookup contact information, and open applications using your voice.

To access your phone's voice settings, do the following:

1. In standby mode, press the **MENU** (left) soft key (), then press  (for **Tools**), and  for **Voice Kit**. The following options appear in the display:
 - **Voice Command** — Lets you place calls, access your Contacts List, review your appointments, and more by speaking commands into your phone.

Also see “Making a Call — Voice Dialing” on page 26 and “Voice Method” on page 56 for more information.

- **Voice Memo** — Lets you record, review, and erase voice memos.
- **TTS** — Text To Speech — Lets you enable or disable spoken main menu options.
- **Voice Setting** — Lets you tailor VoiceSignal to better respond to your voice and your phone use preferences.

2. Use the navigation keys to highlight the desired sub-menu, then press



VoiceSignal Commands

To start VoiceSignal, do one of the following:

- In standby mode, press the **Once** key.
“**Say a Command**” appears in the display and is pronounced through the earpiece, followed by a list of available commands.
- In standby mode, press the **MENU** (left) soft key (), then press **Show** (for **Tools**), (for **Voice Kit**), and for **Voice Command**.

Note: You can also set your phone to start VoiceSignal when you open the phone. See “Voice Launch” on page 109 for more information.

VoiceSignal includes the following commands:

- **Voice Dial** — Lets you dial the phone by saying any name stored in your contact list, without ever having to record, or “train” that name. VoiceSignal automatically voice-activates all your contacts, even if you have hundreds of them stored on your phone. You can also dial any telephone number, even if it is not stored in your contact list, by saying the digits in the number. (See “Making a Call — Voice Dialing” on page 26 for more information.)
- **Voice Memo** — Lets you access the voice memo feature of your phone. (See “Voice Memo” on page 104 for more information.)
- **Today** — Lets you access the Today feature of your phone. (See “Today” on page 110 for more information.)
- **Calendar** — Lets you access the Calendar feature of your phone. (See “Calendar” on page 111 for more information.)
- **Contacts** — Lets you look up and display contact information for any name stored in your Contacts list by saying the name. (See “Finding a Contacts Entry” on page 56 for more information.)
- **Status** — Lets you say a single command (“**Status**”) to check your phone’s network coverage, signal strength, and battery.

Note: Speaking clearly, say the command that you want to use. If, after a few seconds, the device has not recognized a command, it prompts you to repeat the command. If, after a few more seconds, it still has not recognized a command, it tells you “**Sorry, no match found.**” and cancels voice recognition.

Voice Command Tips:

- Make sure you wait for the beep before speaking.
- Speak clearly at a normal volume, as if you were talking on the phone.

Voice-Activating Your Contacts List

When you first start VoiceSignal, it reads your Contacts list and voice-activates all the names stored there. When you have add or change contacts, VoiceSignal automatically reloads and voice-activates the entire list.

Ending Calls Before Restarting the VoiceSignal Software

When you use VoiceSignal to make a call, you must end that call before you can use VoiceSignal again.

Voice Memo

You can use your phone to record voice memos for later playback. You can also record the caller on the other end of the line during a phone conversation.



Note: There is limited space for the number and length of recordings.




- The maximum number of voice memos is 10.
- The maximum length for a single voice memo is 60 seconds.

Record a Voice Memo

1. In standby mode, press the **MENU** (left) soft key (), then press  (for **Tools**),  (for **Voice Kit**),  (for **Voice Memo**), and  for **Record**. The phone prompts, “**Please record after the beep.**”








Tip: To launch Voice Memo using a voice command — In standby mode, press the  key. When the phone prompts, “**Say a command.**” Say “**Voice Memo**” into the microphone.

2. Wait for the beep, then start speaking. As it is recording the phone displays a countdown timer that shows the seconds remaining for the recording.
 - To pause the memo, press the **Pause** (left) soft key (). When a memo is paused, select **Resume** to resume recording.
3. Press the **Stop** (right) soft key () once you're finished recording. The **Memo Review** list appears in the display with the newest memo highlighted.







4. Press the **Play** (right) soft key () to review the newest memo.
5. For other options, press the **Option** (left) soft key (). The following options appear in the display:
 - **Erase** — Erase a selected voice memo.
 - **Erase All** — Erase all voice memos.
 - **Edit Caption** — Change the name assigned to a selected voice memo.
 - **Info** — Shows the Memo Title, Length and Size, and date and time Recorded for a selected voice memo.
6. Use the navigation keys to highlight an option. Press the  key to perform the function for that option.

Review and Erase Voice Memos

If you've saved any voice memos, you can review them anytime.





1. In standby mode, press the **MENU** (left) soft key (), then press  (for **Tools**),  (for **Voice Kit**),  (for **Voice Memo**), and  for **Review**. A list of saved voice memos appears in the display.
2. Use the navigation keys to highlight the voice memo you wish to review then press the **Play** (right) soft key () to play the voice memo.
3. Press the **Option** (left) soft key () to **Erase**, **Erase All**, **Edit Caption**, or show **Info** about voice memos.

Erase All Voice Memos at One Time

1. In standby mode, press the **MENU** (left) soft key (), then press  (for **Tools**),  (for **Voice Kit**),  (for **Voice Memo**), and  for **Erase All**. "Erase all Voice Memos?" appears in the display.
2. Use the navigation keys to highlight **Yes** (to erase all memos) or **No** (to return to the previous menu).
3. Press the  key to confirm your selection.

Text To Speech (TTS)

With TTS on, your phone "reads" main menu items through the earpiece when you highlight each one. To enable TTS, do the following:

1. In standby mode, press the **MENU** (left) soft key (), then press  (for **Tools**),  (for **Voice Kit**), and  for **TTS**. The following options appear in the display:
 - **TTS On** — Enables Text-To-Speech.
 - **TTS Off** — Disables Text-To-Speech.




The current setting is highlighted. The default setting is **TTS Off**.

2. Use the navigation keys to highlight **TTS On**, then press the **OK** key to save and exit.

Voice Setting

Voice Setting lets you tailor VoiceSignal to better respond to your voice and your phone use preferences.

To access your phone's voice settings, do the following:

1. In standby mode, press the **MENU** (left) soft key (), then press **Enter** (for **Tools**),  (for **Voice Kit**), and  for **Voice Setting**. The following options appear in the display:
 - **Digit Dialing** — Lets you tailor VoiceSignal to better respond to your voice.
 - **Sensitivity** — Lets you adjust how sensitive VoiceSignal is to spoken commands and names.
 - **Choice Lists** — Lets you enable or disable lists of choices Voice Signal displays when unable to identify spoken names, numbers, or contacts.
 - **Sound** — Lets you enable or disable playback of Prompts, Digits, or Names and lets you set the speed and volume of Names playback.
 - **Voice Launch** — Lets you set what action(s) launch Voice Signal.
 - **About** — Shows Version and Build information about the VoiceSignal application in your phone. Useful information when contacting Customer Support.
2. Use the navigation keys to highlight the desired sub-menu, then press **OK**.

Adapting Digits

If you regularly have trouble with VoiceSignal not recognize the numbers you say, try adapting digit dialing to your voice. Adapting can improve the accuracy of digit recognition, especially for people with strong regional accents.

Note: After you adapt Digit Dial, your phone is customized to your voice, and your voice only. Others will not be able to use it unless they reset the phone to factory defaults.




 




Adaptation involves recording several sequences of four digits each. The recording process takes about a minute.

Tips for Adapting Digit Dialing

- Use Adapt Digits in a quiet place.
- Make sure you wait for the beep before starting to speak.
- Speak clearly, and say each digit distinctly.
- If you make a mistake while recording a sequence of digits, or if there is an unexpected noise that spoils the recording, re-record that sequence.
- Only adapt digits if you are regularly having problems with digit dialing. Once you adapt, digit dialing will not work as well for other people using your phone. (You can always reset digit adaptation to its original state, as described below.)

Adapt Digits

To adapt digit dialing, do the following:








 

1. In standby mode, press the **MENU** (left) soft key (), then press  (for **Tools**),  (for **Voice Kit**),  (for **Voice Setting**), and  for **Digit Dialing**. The following options appear in the display:
 - **Adapt Digits**
 - **Reset Digits**
2. Use the navigation keys to highlight **Adapt Digits**, then press the  key. Adapt Digits process description appears in the display.
3. Press **OK** (left) soft key () or press the  key. Your phone displays the first digit sequence and "**Please say**" plays through the speaker followed by the four digits appearing in the display.
4. Wait for the beep and say the digits using your normal tone of voice. After a moment, the phone plays back the recording and prompts "Did the recording sound ok?"
 - If the recording was good, say "**Yes.**"
 - If you need to re-record, say "**No.**"

If you say "**No**," the phone prompts you to pronounce the digits again. Wait for the beep and then say the digits.









Repeat this step until you're satisfied with the recording.
5. After confirming that the recording sounds "ok", continue the recording process with the next set of digits.
6. After six sets of digits, "**Adaptation complete**" plays through the speaker and you are returned to the **Digit Dialing** menu.

Reset Digits

To reset digit dialing to factory default settings, do the following:

1. In standby mode, press the **MENU** (left) soft key (), then press  (for **Tools**),  (for **Voice Kit**),  (for **Voice Setting**), and  for **Digit Dialing**. The following options appear in the display:
 - **Adapt Digits**
 - **Reset Digits**
2. Use the navigation keys to highlight **Reset Digits**, then press the  key. The phone prompts you to confirm digit reset.
3. Press the **OK** (left) soft key () or the  key to reset your digit adaptation, or press the **Back** (right) soft key () to cancel.









Sensitivity

1. In standby mode, press the **MENU** (left) soft key (), then press  (for **Tools**),  (for **Voice Kit**),  (for **Voice Setting**), and  for **Sensitivity**. The following options appear in the display:
 - **Commands** — Lets you control your phone's sensitivity to spoken voice commands.
 - **Names** — Lets you control your phone's sensitivity to spoken names from your Contact list.
2. Use the navigation keys to highlight an option, then press the  key to select the highlighted option. The selected Sensitivity screen appears in the display.
3. Use the navigation keys to adjust the selected Sensitivity setting to **Reject More** spoken commands or names or to **Reject Less** spoken commands or names. **Recommended** is the setting that works best for most voices and is the factory default setting.
4. Press the  key or the **OK** (left) soft key () to accept the new setting.

Choice Lists Settings

VoiceSignal displays choice lists based on your preferences: never if you do not want them, automatically when it needs help recognizing a spoken name or number, or always when you specify that it must. When displayed, a choice list contains up to three possible choices and prompt for you to confirm the correct one.

To change the way VoiceSignal uses choice lists:

1. In standby mode, press the **MENU** (left) soft key (), then press  (for **Tools**),  (for **Voice Kit**),  (for **Voice Setting**), and  for **Choice Lists**.
2. Use the navigation keys to highlight **Name Dialing**, **Digit Dialing**, or **Contacts**, then press the  key.
3. Use the navigation keys to highlight the Choice List behavior you prefer:
 - **Automatic** — VoiceSignal displays a choice list only when it is not sure if it has correctly recognized the name or number.
 - **Always On** — VoiceSignal always displays a choice list, even when there is only one choice.
 - **Always Off** — VoiceSignal never displays a choice list.
4. Press the  key or the **OK** (left) soft key () to accept the new setting.







Sound

Sound lets you specify what (if any) text prompts you want your phone to read to you through the earpiece.

1. In standby mode, press the **MENU** (left) soft key (), then press  (for **Tools**),  (for **Voice Kit**),  (for **Voice Setting**), and  for **Sound**. The following options appear in the display:
 - **Prompts** — Enables or disables audio prompts.
 - **Digits** — Enables or disables audio digit playback.
 - **Names** — Enables or disables audio name playback.
 - **Name Settings** — Lets you adjust the speed and volume of your phone's audio name playback.
2. Use the navigation keys to highlight the desired setting.
3. Press the  key or the **OK** (left) soft key () to accept the new setting.

Voice Launch

To set the key or action that launches VoiceSignal, do the following:

1. In standby mode, press the **MENU** (left) soft key (), then press  (for **Tools**),  (for **Voice Kit**),  (for **Voice Setting**), and  for **Voice Launch**. The following options appear in the display:
 - **Voice Key** — Press the  key to activate VoiceSignal for one call.

- **Voice Key or Flip Open** — Press the  key to activate VoiceSignal for repeated calls. Open and close folder to make and end calls using Voice Kit. Press  to release VoiceSignal.
 - **Voice Key or EarMic** — Attach a headset to your phone. Press the  key to activate VoiceSignal. Now, you can make and end calls using VoiceSignal by pushing the button on the headset.
2. Use the navigation keys to highlight the option you want, then press the  key to save and exit.

About VoiceSignal

This option causes the **About VoiceSignal** screen to appear in the display, showing version and build information about the VoiceSignal software included on your phone.

1. In standby mode, press the **MENU** (left) soft key (), then press  (for **Tools**),  (for **Voice Kit**),  (for **Voice Setting**), and  for **About**.




The **About VoiceSignal** screen appears in the display showing the version level of the VoiceSignal software currently installed on your phone.


Today

Today lets you schedule up to nine events for the current day by indicating each event's start time and advance notification time. You can set alarms for these events so that you can be alerted before each event takes place.

Events, previously created for the present day using your phone's Calendar, automatically appear in your Today events list. (See "Calendar" on page 111 for more information.)


Add a New Event

1. In standby mode, press the **MENU** (left) soft key (), then press  (for **Tools**) and  for **Today**.



 

Tip: To launch Today using a voice command — In standby mode, press the  key. When the phone prompts, "Say a command." Say "Today" into the microphone.

You're prompted to enter a New Event.

2. Enter details of the event using the keypad. (See "Entering Text" on page 46 for more information.)

3. Press the **Option** (left) soft key (). A pop-up menu containing the following text entry mode options appears in the display:
 - **T9 Word**
 - **Alpha**
 - **Symbol**
 - **Number**




Note: The current mode of text entry is indicated in the lower right of the display. See “Text Entry Modes” on page 47 for more information on text entry modes.


4. Use the navigation keys to highlight the entry mode that you wish to use and press the  key, or press the  key to exit the pop-up menu.
5. When you're finished entering details for the event, press the  key. You're prompted to enter the time and date for the event.
6. Use the **Left** and **Right** navigation keys to change between **am** or **pm**.
7. Enter the time and date for the event using the keypad.
8. When you're finished entering the time and date, use the navigation keys to highlight **Alarm Option** field.
9. Use the navigation keys to highlight the amount of time before the event occurs that you wish to be notified by an alert.
10. Press the  key to store the event in your calendar. An alert will notify you prior to the event, if you set a notification alert.

Calendar


 

Calendar lets you view the current, past, or future month in a monthly calendar layout. While viewing the calendar, the current date is highlighted and days with scheduled events are surrounded by a box.

View an event

1. In standby mode, press the **MENU** (left) soft key (), then press  (for **Tools**) and  for **Calendar**.



Tip: To launch Calendar using a voice command — In standby mode, press the  key. When the phone prompts, “Say a command.” Say “Calendar” into the microphone.

A calendar appears in the display with the current date highlighted. The month and year also appear.


2. Use the navigation keys to move around within the calendar.
 - Press the **OK** key to open the highlighted date.
 - Press the volume up key () to view previous months.
 - Press the volume down key () to view future months.
 - Press the **Option** (left) soft key () while viewing the calendar to display the following options.
 - **View** — View events for any date surrounded by a box.
 - **Add new** — Add a new event for the date.
 - **Jump To Date** — Lets you jump to any date you specify.


To Do List

The To Do List lets you create a task list. You can store, prioritize and manage up to twenty To Do List tasks.

1. In standby mode, press the **MENU** (left) soft key () , then press **Show** (for **Tools**) and **Done** for **To Do List**. The **Add To Do** screen appears in the display.
2. Enter details of the task using the keypad. (See “Entering Text” on page 46 for more information.)
3. Press the **Option** (left) soft key () . A pop-up menu containing the following text entry mode options appears in the display:
 - **T9 Word**
 - **Alpha**
 - **Symbol**
 - **Number**
4. Use the navigation keys to highlight the entry mode that you wish to use and press the **OK** key, or press the **BACK** key to exit the pop-up menu.
5. When you're finished entering details for the task, press the **OK** key. You're prompted to enter the priority for the task.
6. Use the navigation keys to select **High** or **Low**.
7. Use the navigation keys to highlight the **Time** field.
Use the navigation keys to select **pm** or **am**.
8. Enter a time and date for the task using the keypad.
9. Press the **OK** key to store the task.

Add, Edit, and Erase To Do List Tasks


1. In standby mode, press the **MENU** (left) soft key () , then press **Show** (for **Tools**) and **Done** for **To Do List**.

2. Use the navigation keys to browse tasks in your **To Do List**. Events are presented in order of priority.
3. Press the **Option** (left) soft key () while viewing your **To Do List**. A pop-up menu containing the following options appears in the display:
 - **Add new** — Add new task to the To Do List.
 - **Edit** — Edit the task currently appearing in the display.
 - **Erase** — Erase the task currently appearing in the display.
 - **Erase All** — Erase all tasks from your To Do List.
4. Use the navigation keys to highlight an option.
5. Press the **OK** key to perform the function for the highlighted option.


Alarm Clock

Your phone has an alarm clock that can be set to go off once, or daily at a specified time. Once set, the alarm clock is easy to change or turn off completely.

Note: The alarm doesn't function when the phone is turned off. If the time for an alarm that was set for Once has elapsed and the phone is off, the alarm occurs at the same time on the following day.

1. In standby mode, press the **MENU** (left) soft key (), then press **Show** (for **Tools**) and **5:00** for **Alarm Clock**. The following options appear in the display:
 - **Alarm Clock 1**
 - **Alarm Clock 2**
 - **Alarm Clock 3**
2. Use the navigation keys to highlight an Alarm selection, then press the **OK** key. A Set Alarm screen appears in the display containing the following options:
 - **Alarm** — Turns the alarm **Off** or **On**.
 - **Time** — Select **am** or **pm** and enter the time for the alarm.
 - **Alarm Interval** — Select whether the alarm sounds **Once**, **Daily**, **Mon–Fri**, **Mon–Sat**, **Every Sun**, **Every Sat**, or **Every Weekend**.

Use the navigation keys to highlight options and to select values for the options.




 

Use the keypad to enter the time for the alarm.
3. Press the **OK** key when you're finished entering the time for the alarm. The alarm is set and the alarm icon () appears in the top of the display.

When an Alarm Sounds

An animated alarm clock appears in the display and an alert sounds when the specified time for the alarm arrives.




- ▶ Press any key to silence the alarm.
 - If the alarm was set as **Once**, the alarm icon disappears from the top of the display.
 - If the alarm was set as **Daily**, the alarm icon remains in the top of the display.
 - If the alarm was set as **Mon-Fri**, the alarm icon remains in the top of the display.
 - If the alarm was set as **Mon-Sat**, the alarm icon remains in the top of the display.
 - If the alarm was set as **Every Sun**, the alarm icon remains in the top of the display.
 - If the alarm was set as **Every Sat**, the alarm icon remains in the top of the display.
 - If the alarm was set as **Every Weekend**, the alarm icon remains in the top of the display.





Turn Off the Alarm

1. In standby mode, press the **MENU** (left) soft key (), then press  (for **Tools**) and  for **Alarm Clock**. The following options appear in the display:
 - **Alarm Clock 1**
 - **Alarm Clock 2**
 - **Alarm Clock 3**
2. Use the navigation keys to highlight Alarm selection, then press the  key.
3. Alarm is highlighted, use the navigation keys to select **Off**, then press the  key. Select alarm is turned off.




 


Memo Pad

You can create a notes and store them in Memo Pad. You can't prioritize or set an alert for stored notes. Return to Memo Pad anytime you wish to review and edit your notes.

1. In standby mode, press the **MENU** (left) soft key (), then press  (for **Tools**) and  for **Memo Pad**.
2. If you have any stored memos, they appear as a list in the display. If this is your first time in **Memo Pad**, you're prompted to add a new memo.




3. Enter a memo using the keypad. (See “Entering Text” on page 46 for more information.)
4. Press the **Option** (left) soft key (). A pop-up menu containing the following text entry mode options appears in the display:
 - **T9 Word**
 - **Alpha**
 - **Symbol**
 - **Number**
5. Use the navigation keys to highlight the entry mode that you wish to use and press the  key, or press the  key to exit the pop-up menu.
6. When you're finished entering details for the memo, press the  key. The memo is stored.

Review, Add, Edit, and Erase Memos

1. In standby mode, press the **MENU** (left) soft key (), then press  (for **Tools**) and  for **Memo Pad**. Your list of stored memos appears in the display.
2. Use the navigation keys to browse memos. Press the  key to open a highlighted memo.
3. Press the **Option** (left) soft key () while viewing your memos. A pop-up menu with the options listed in the following table appears in the display:
 - **Add new** — Add a new memo to Memo Pad.
 - **Edit** — Edit the memo currently highlighted or appearing in the display.
 - **Erase** — Erase the memo currently highlighted or appearing in the display.
 - **Erase All** — Erase all memos from Memo Pad.
4. Use the navigation keys to highlight an option.
5. Press the  key to perform the function for the highlighted option.

World Time

World Time lets you view the time of day or night in another part of the world. World Time displays time in the 24 different time zones around the world.





1. In standby mode, press the **MENU** (left) soft key (), then press  (for **Tools**) and  for **World Time**. A world map appears in the display.

- Use the navigation keys to display the city and time that you wish to view. The following cities/time zones are supported:

• New York	• Caracas	• Brasilia
• Mid Atlantic	• Cape Verde	• London
• Paris/Berlin	• Athens/Helsinki	• Moscow
• Abu Dhabi	• Tashkent	• Alma-ata
• Bangkok/ Jakarta	• Hongkong/Beijing	• Seoul/Tokyo
• Guam/Sydney	• Okhotsk	• Wellington
• Samoa/Midway	• Honolulu, Hawaii	• Alaska
• San Francisco	• Denver/Arizona	• Chicago/Mexico
- To change the (Daylight Savings Time) **DST Setting**, press the **Option** (left) soft key (). Use the navigation keys to highlight **Off** or **On**, then press the  key.

Calculator


You can perform calculations, including addition, subtraction, multiplication, and division using your phone.

- In standby mode, press the **MENU** (left) soft key (), then press  (for **Tools**) and  for **Calculator**. The **Calculator** appears in the display.
- Enter the first number in your equation using the keypad (numbers can be up to nine digits long).
Press  to enter a decimal point.

Note: The Calculator tool lets you enter only two decimal places. For example, 1.23.




Press  to change the sign for a number to a negative.

- Use the navigation keys to set the type of calculation that you wish to perform. Your choices are as follows:
 - **[+]** Addition
 - **[-]** Subtraction
 - **[x]** Multiplication
 - **[÷]** Division
- Use the keypad to enter the second number into your equation.


 

 
 
5. Press the  key to perform the calculation and view the result.

Count Down

Count Down lets you view the amount of time between the current date and any event that you wish to schedule. You can create up to twenty Count Down events.




1. In standby mode press the **MENU** (left) soft key (), then press  (for **Tools**) and  for **Count Down**.

Note: If you have multiple Count Down timers, the event that is scheduled closest to the current date appears in the display. Use the navigation keys to browse the other Count Down timers.


 
2. Enter details for the **Count Down** event using the keypad. (See "Entering Text" on page 46 for more information.)
3. Press the left soft key () **Option** to display a pop-up menu containing the following text entry mode options.
 - **T9 Word**
 - **Alpha**
 - **Symbol**
 - **Number**
4. Use the navigation key to highlight the entry mode that you wish to use and press the  key, or press the  key to exit the pop-up menu.
5. Once you've finished entering details for the Count Down event, press . You're prompted to enter a time and date for the scheduled event.
6. Use the **Left** or **Right** navigation keys for **am** or **pm**, respectively.
Enter the time and date using the keypad.
7. Press  to store the event.

Review, Add, Edit, and Erase Count Down Events

Review scheduled Count Down event to determine how much time remains between the current time/date and any event that you've scheduled. You can also add another event, or edit and erase previously scheduled events.

1. In standby mode press the **MENU** (left) soft key (), then press  (for **Tools**) and  for **Count Down**.
2. Any stored Count Down events appear in the display. The event scheduled closest to the current date appears first in the display.

Event details, including the days, hours and minutes left until the occurrence of the scheduled event appear in the display. The day, date, and time of the scheduled event appear in the bottom of the display.

3. Press the **Option** (left) soft key (), while viewing your memos. A pop-up menu displays with the options listed.
 - **Add new** — Add anew event to Count Down.
 - **Edit** — Edit the event currently appearing in the display.
 - **Erase** — Erase the event currently appearing in the display.
 - **Erase All** — Erase all scheduled event from Count Down.
4. Use the navigation keys to highlight an option.
5. Press  to perform the function for the highlighted option.

Section 13: Changing Your Settings


Topics Covered

- Display Settings
 - Sounds Settings
 - Call Options
 - Network Settings
 - Clock Set
 - Language
 - Security Settings
 - Location Setting
 - Airplane Mode
 - Phone Info
-

This section explains how to customize your phone to suit your needs and preferences.





 
Display Settings

Using the **Display** menu, you can set the menu style, set the standby mode animation, customize the backlight settings, and more.

1. In standby mode, press the **MENU** (left) soft key (), then press  (for **Settings**) and  for **Display**. The following options appear in the display:
 - **Menu Style** — Lets you choose the main menu style.
 - **Animation** — Lets you choose the media that displays on your phone when you turn it on, turn it off, and while in standby mode.
 - **Banner** — Lets you create your own personalized greeting that appears in the display when your phone is in standby mode.
 - **Backlight** — Lets you set backlight options for the LCD, Keypad, Power save, and Brightness.
 - **Front Contrast** — Lets you set display contrast.
 - **Auto-Hyphen** — With Auto-Hyphen enabled, your phone automatically hyphenates phone numbers as they are entered.
 - **Dial Digits** — Lets you choose how the number will display on the display screen.
 - **Dial Screen** — Adjust the color used to display dialed digits.
 - **Theme Color** — Lets you choose menu color scheme.
2. Use the navigation keys to highlight a sub-menu.
3. Press the  key to enter the highlighted sub-menu. The following sections describe the above listed display sub-menus in greater detail.








Menu Style

Menu Style allows you to choose how main menus appear in your display.

1. In idle mode, press the **MENU** (left) soft key (), then press  (for **Settings**) and  (for **Display**), and  for **Menu Style**. The following options appear in the display:
 - **Icon** — Display main menus as icons.
 - **Text** — Display main menus in a list format.
2. Use the navigation keys to highlight the option you want.
3. Press the  key to select the highlighted option.





Animation

Animation lets you choose the multi-media or pictures that appear in your phone's display when you turn it on, turn it off, and while in standby mode (wallpaper).


1. In standby mode, press the **MENU** (left) soft key (), then press  (for **Settings**) and  (for **Display**), and  for **Animation**. The following options appear in the display.
 - **Wallpaper** — Choose the graphic or animation that appears in your display when the phone is in standby mode.
 - **Opening** — Choose the animation that appears in your display when you turn on your phone.
 - **Closing** — Choose the animation that appears in your display when you turn off your phone.
2. Use the navigation keys to highlight the sub-menu that you wish to enter, then press the  key. The following options appear in the display:
 - **Wallpaper**
 - **Preloaded** — Lets you select an image that is included with your phone.
 - **My Image** — Lets you select an image that you have downloaded to your phone.
 - **Shuffle** — Lets you select multiple images. These images are shown in random order.
 - **Opening**
 - **Preloaded** — Lets you select an image that is included with your phone.
 - **My Image** — Lets you select an image that you have downloaded to your phone.
 - **Closing**
 - **Preloaded** — Lets you select an image that is included with your phone.
 - **My Image** — Lets you select an image that you have downloaded to your phone.
3. Use the navigation keys to select **Preloaded**, **My Image**, or **Shuffle** images, then press the  key.
4. Use the navigation keys to browse available images and animations for the selected sub-menu.
5. Press the  key to select the image or animation appearing in the display.

Banner

Create your own personalized greeting that appears in the display while your phone is in standby mode.

1. In standby mode, press the **MENU** (left) soft key (), then press  (for **Settings**) and  (for **Display**), and  for **Banner**.






Note: Press and hold  to erase an existing banner, if necessary.

2. Enter a word or short phrase to appear in your phone's display while in standby mode (Up to 12 characters).
3. Press the  key to save the new banner.

Backlight





You can set the backlight for your display or keypad to remain on for a specified period of time or remain on as long as the folder is open.

Note: Prolonged backlight use drains your battery faster.


1. In standby mode, press the **MENU** (left) soft key (), then press  (for **Settings**) and  (for **Display**), and  for **Backlight**. The following sub-menus appear in the display:
 - **LCD** — Sets the amount of time the backlight for the LCD remains on after a period of inactivity. Optional settings are 5, 10, and 15 seconds as well as Folder Open.
 - **Keypad** — Sets the amount of time the backlight for the keypad remains on after a period of inactivity. Optional settings are 5, 10, and 15 seconds as well as Folder Open.
 - **Power save** — Unless the backlight setting for the LCD has been changed, the backlight dims after 5 seconds of inactivity, and then turns off after another 5 seconds. With Power save enabled, the backlight for the LCD is always dim and then turns off after 5 seconds of inactivity.
 - **Brightness** — Sets the brightness of the backlight for the Main LCD and the Front LCD.
2. Use the navigation keys to highlight a sub-menu.
3. Press the  key to enter the highlighted option's sub-menu and change settings as desired.

Front Contrast

Set the contrast for the front display to your preference.

1. In standby mode, press the **MENU** (left) soft key (), then press  (for **Settings**) and  (for **Display**), and  for **Front Contrast**. The current Front Contrast setting appears in the display.






Display Settings

2. Use the Left and Right navigation keys to adjust the contrast for the front display (0 – 50), then press the  key to save your setting.

Auto Hyphen






Auto Hyphen automatically hyphenates phone numbers as they are entered.

Example: If you enter "5804370000", "580-437-0000" appears in the display.

1. In standby mode, press the **MENU** (left) soft key (), then press  (for **Settings**) and  (for **Display**), and  for **Auto-Hyphen**. The following options appear in the display:
 - **Off**
 - **On**
2. Use the navigation keys to highlight the desired setting.
3. Press the  key to save the setting.






Dial Digits

Dial Digits adjust the color of numbers as they are entered into the display when making a call.

1. In standby mode, press the **MENU** (left) soft key (), then press  (for **Settings**) and  (for **Display**), and  for **Dial Digits**. The following options appear in the display:
 - **Basic** — All Dial Digits are black.
 - **Rainbow** — Each number color is different.
 - **Monochrome** — All Dial Digits are the same selected color.
 - **Hyphenate** — Number colors divided by hyphens are the same.
2. Use the navigation keys to highlight the desired setting, then press the  key to save the setting.






Dial Screen

Dial Screen adjust the color of display.

1. In standby mode, press the **MENU** (left) soft key (), then press  (for **Settings**) and  (for **Display**), and  for **Dial Screen**. The following options appear in the display:
 - **Color Setting** — Sets color of display.
 - **Off** — Deactivates Dial Screen.
2. Use the navigation keys to highlight the desired setting.
3. Press the  key to confirm the setting.

Theme Color

Theme Color lets you select the color your phone uses to highlight menu items and scroll bar positions.






 
1. In standby mode, press the **MENU** (left) soft key (), then press  (for **Settings**) and  (for **Display**), and  for **Theme Color**. The following options appear in the display:
 - **Pattern 1**
 - **Pattern 2**
 - **Pattern 3**
2. Use the navigation keys to highlight the desired setting, then press the  key to save the setting.

Sounds Settings

The Sounds menu provides a variety of options to customize audio properties for such things as ringers, keypad tones alerts, and more.





 
Volume/Vibrate

Use the Volume/Vibrate sub-menu to set the default volume for incoming calls and alarms, or set the phone to vibrate.

1. In standby mode, press the **MENU** (left) soft key (), then press  (for **Settings**),  (for **Sounds**), and  for **Volume/Vibrate**. The following options appear in the display:
 - **Calls** — Lets you set the volume and/or vibration for the incoming calls ringer.
 - **Messages** — Lets you set the volume and/or vibration for the new messages ringer.
 - **Alarm** — Lets you set the volume and/or vibration for the alarm ringer.
2. Use the navigation keys to highlight an option, then press the  key.
3. Use the Up and Down volume keys or the left/right navigation keys to select the volume level (or vibrate mode) for the selected setting.
4. Press the  key to save the setting.

Vibrating Alert

You can set your phone to vibrate to indicate alerts.





1. In standby mode, press the **MENU** (left) soft key (), then press  (for **Settings**),  (for **Sounds**), and  for **Vibrating Alert**.
2. Use the navigation key to highlight **Off** or **On**.
3. Press  to confirm your selection.

Ringer Type

 
You can assign ringer types and melody tones for calls, alarms, and other alerts, in the Ringer Type sub-menu.

Note: In analog mode, the phone plays the Bell 2 ringtone in place of any assigned MP3 or OCP type ringtones; including the Preloaded ringtone, Bell 1.


Assigning Calls and Alarm Ringer Types

1. In standby mode, press the **MENU** (left) soft key (), then press  (for **Settings**),  (for **Sounds**), and  for **Ringer Type**. The following ringer types appear in the display:

 
 
 
- **Calls**
- **Messages**
- **Alarm**
- **Data**
- **Calendar**

If assigning ringer types for Calls, use the navigation keys to highlight **Calls**, then press the  key. The following options appear in the display:

- **Preloaded** — Lets you select a melody that is included with your phone.
- **My Melody** — Lets you select a melody that was downloaded.
- **Shuffle** — Lets you select multiple melodies. These melodies are played in random order.





If assigning the Alarm ringer type, use the navigation keys to highlight **Alarm**, then press the  key. The following Alarm options appear in the display:

- **Alarm 1**
- **Alarm 2**
- **Alarm 3**

2. Use the navigation keys to highlight **Calls**, **Alarm 1**, **Alarm 2**, or **Alarm 3**, then press the  key.
3. Use the navigation keys to select **Preloaded** or **My Melody** (if you have downloaded melodies), then press the  key.
4. Use the navigation keys to browse through available ring tones. Each tone plays through the speaker as it is highlighted.
5. When the desired ringer type plays, press the  key to save the setting.

Assigning Messages, Data, and Calendar Ringer Types

 


Note: In analog mode, the phone plays the Bell 2 ringtone in place of any assigned MP3 or QCP type ringtones, including the Preloaded ringtone, Bell 1.

1. In standby mode, press the **MENU** (left) soft key (), then press  (for **Settings**),  (for **Sounds**), and  for **Ringer Type**. The following ringer types appear in the display:

- **Calls**
- **Messages**
- **Alarm**
- **Data**
- **Calendar**

If customizing the Messages ringer types the following options appear in the display:





 
- **Voice Mail**
- **Text**
- **Pic**
- **Wap Push**

2. Use the navigation keys to highlight a ringer type, then press the  key. The following Melody Gallery options appear in the display:
 - **Preloaded**
 - **My Melody**
3. Use the navigation keys to highlight **Preloaded** or **My Melody**, then press the  key. A list of bells and ringers (melodies) appears in the display.
4. Use the navigation keys to browse through available ring tones. Each tone plays through the speaker as it is highlighted.
5. When the desired ringer type plays, press the  key to save the setting.

Key Beep

Use the Key Beep menu to adjust the volume level and length of tone that the keypad generates each time you press a key.

Key Beep Volume

1. In standby mode, press the **MENU** (left) soft key (), then press  (for **Settings**),  (for **Sounds**), and  for **Key Beep. Volume** is highlighted.
2. Press the  key.





3. Use the volume keys or the navigation keys to set the volume level for keypad tones. A tone sounds as you increase or decrease the volume setting.
4. Press the **OK** key when the desired key beep volume setting is reached. You're returned to the **Key Beep** sub-menu.

Key Beep Tone Length

1. While in the Key Beep menu, use the navigation keys to highlight **Tone Length**, then press the **OK** key.
2. Use the navigation keys to highlight **Long** or **Normal**.
3. Press the **OK** key to save your settings.





Alerts

You can set your phone to sound an alert whenever you enter or leave your service area, connect or disconnect a call, as well as other options.

1. In standby mode, press the **MENU** (left) soft key (), then press  (for **Settings**),  (for **Sounds**), and  for **Alerts**. The following Alerts sub-menus appear in the display:
 - **Minute Beep** — Sound an alert ten seconds before each elapsed minute of a call.
 - **Service** — Sound an alert when you go into and out of coverage areas.
 - **Connect** — Sound an alert when you connect a call.
 - **Disconnect** — Sound an alert when you disconnect a call.
 - **Fade** — Sound an alert when a dropped call occurs during a conversation.
 - **Roam** — Sound an alert when you leave your home service area while on a call.
 - **Privacy** — Emit a tone whenever you are in enhanced privacy mode.
2. Use the navigation keys to highlight a sub-menu, then press **OK**.
3. Use the navigation keys to highlight **Off** or **On**.
4. Press **OK** to confirm your selection.

Flip Tone






Set your phone to play a sound whenever you open or close the flip.

1. In standby mode, press the **MENU** (left) soft key (), then press  (for **Settings**),  (for **Sounds**), and  for **Flip Tone**.
2. Use the navigation keys to highlight **Off** or **On**, then press **OK**.

Power On/Off






Set your phone to play a sound whenever you turn it on or off.

Call Options

1. In standby mode, press the **MENU** (left) soft key (), then press  (for **Settings**),  (for **Sounds**), and  for **Power On/Off**.
2. Use the navigation keys to highlight **Off** or **On**, then press .






Roam Ringer

Set your phone to sound a unique tone when a call is received outside your home service area. This feature is set to Off by default.

1. In standby mode, press the **MENU** (left) soft key (), then press  (for **Settings**),  (for **Sounds**), and  for **Roam Ringer**.
2. Use the navigation keys to highlight **Off** or **On**, then press .

Whisper Mode

This feature lets you talk in a low volume during a phone conversation and still be heard by the other party.










1. In standby mode, press the **MENU** (left) soft key (), then press  (for **Settings**),  (for **Sounds**), and  for **Whisper Mode**.
2. Use the navigation keys to highlight **Off** or **On**, then press .

Call Options

Call Answer





 
You can select a specific answer mode when you receive an incoming call. Your phone can be preset to answer when you do any of the following:

- **Send key**
- **Folder open**
- **Any key**

1. In standby mode, press the **MENU** (left) soft key (), then press  (for **Settings**),  (for **Call Options**), and  for **Call Answer**. The **Call Answer** sub-menu with the following options appears in the display:
 - **Send Key** — Press  to answer an incoming call.
 - **Folder Open** — Open the folder to answer an incoming call.
 - **Any Key** — Press any key except , , or  key to answer an incoming call.
2. Use the navigation keys to highlight the method you wish to use for answering calls, then press .





 
Auto Answer

Auto Answer enables your phone to automatically answer calls after a period of time that you specify.

1. In standby mode, press the **MENU** (left) soft key (), then press  (for **Settings**),  (for **Call Options**), and  for **Auto Answer**. The **Auto Answer** sub-menu with the following options appears in the display:
 - **Off**
 - **After 5 sec**
 - **After 3 sec**
 - **After 1 sec**
2. Use the navigation keys to highlight the desired setting, then press .

Auto Retry

Auto Retry automatically re-dials a number if the connection fails. Depending upon your location, the number of times your phone automatically dials the number may vary.





1. In standby mode, press the **MENU** (left) soft key (), then press  (for **Settings**),  (for **Call Options**), and  for **Auto Retry**. The **Auto Retry** sub-menu with the following options appears in the display:
 - **Off**
 - **Every 10 sec**
 - **Every 30 sec**
 - **Every 60 sec**
2. Use the navigation keys to highlight the desired setting, then press .

Data

Use the **Data** menu to configure data connection speed and automatic detection settings.

Auto Detect

 
 
Select phone options for receiving data or voice, or set data reception to off.

1. In standby mode, press the **MENU** (left) soft key (), then press  (for **Settings**),  (for **Call Options**), and  for **Data**.

The following **Data** menu items appear in the display:

- **Auto Detect**
- **Baud Rate**





Call Options

2. Use the navigation keys to highlight **Auto Detect**, then press the  key. The following options appear in the display:
 - **Data off** — No incoming data calls accepted.
 - **Data for next call** — Wait for data call for the next 10 minutes.
 - **Data until powered off** — Data calls only, no voice calls accepted, until you power the phone off and on again.
3. Use the navigation keys to highlight the Auto Detect option you want, then press the  key.

 

The **Data** menu appears in the display.

Baud Rate

Set the data connection rate.

1. In standby mode, press the **MENU** (left) key (), then press  (for **Settings**),  (for **Call Options**), and  for **Data**.





The following **Data** menu items appear in the display:

- **Auto Detect**
 - **Baud Rate**
2. Use the navigation keys to highlight **Baud Rate**, then press the  key. The following **Baud Rate** options appear in the display:
 - **Auto**
 - **19200**
 - **38400**
 - **57600**
 - **115200**
 - **230400**
 3. Use the navigation keys to highlight the desired Data Baud Rate option, then press the  key.

The **Data** menu appears in the display.

 
TTY Mode

Your phone is fully TTY/TDD compatible. TTY/TDD equipment is connected to your phone through the headset connector on the left side of the phone. TTY/TDD must be enabled before you can use your phone with a TTY/TDD device.

1. In standby mode, press the **MENU** (left) soft key (), then press  (for **Settings**),  (for **Call Options**), and  for **TTY Mode**. A pop-up containing the message “**Enabling TTY will disable headset audio. Continue?**” and the following options appears in the display:
 - **Yes** — Sends you to the TTY Mode menu.


- **No** — Returns you to the Call Options menu.


The **No** option is highlighted.

2. To change the TTY mode setting, use the navigation keys to highlight the **Yes** option, then press the  key. The following options appear in the display:

- **TTY Full** — Enables TTY mode and disables microphone and earpiece.
- **TTY + TALK** — Enables TTY mode and microphone.
- **TTY + HEAR** — Enables TTY mode and earpiece.
- **TTY OFF** — Disables TTY mode.




 
 
The current TTY Mode setting is highlighted.

3. Use the navigation keys to highlight your selection and press the  key. You're returned to the **Call Options** menu.

Note: The TTY icon () appears in the top of the display when the phone is in standby mode.




Network Settings


The Network settings let you select Number Assignment Module (**NAM**) settings, and **Roam Options**.

1. In standby mode, press the **MENU** (left) soft key () , then press  (for **Settings**) and  for **Network**. The following sub-menus appear in the display:
 - **Set NAM** — If your service contract includes two phone numbers, set the NAM option to NAM 2 to use both numbers. Otherwise, set the NAM option to NAM 1.
 - **Roam Option** — Set your phone's roaming options to Home Only, Automatic-A, or Automatic-B.
2. Use the navigation keys to highlight the desired sub-menu, then press .
3. Use the navigation keys and press  to highlight and select from available options.

Clock Set

Use the Clock Set sub-menu to set the time and date, which can be selected as Wallpaper in the Display menu.



 

1. In standby mode, press the **MENU** (left) soft key () , then press  (for **Settings**),  for **Clock Set**. The Clock Set screen appears in the display.
2. Use the left/right navigation keys to select **am** or **pm**.

3. Use the up/down navigation keys to highlight the Time setting.
4. Enter the time using the keypad and navigation keys.
5. Use the up/down navigation keys to highlight the **Date** setting.
6. Enter the date using the keypad and navigation keys.
7. Press  to save your settings.

Note: In digital service mode, the Clock Set feature is disabled. The network adjusts time and date automatically.

Language

The language option on your phone can change the language of voice prompts, menus, and key-input.




1. In standby mode, press the **MENU** (left) soft key (), then press  (for **Settings**),  for **Language**. The **Language** sub-menu with the following options appears in the display:
 - **English**
 - **Español**
2. Use the navigation keys to highlight your language preference, then press .

Security Settings

Use the Security menu to lock your phone, set up emergency numbers, enable or disable voice privacy, set restrictions, as well as other security options.

 
Lock Phone

Locking the phone limits all outgoing calls except calls to 911 emergency and the three user-programmable emergency numbers. You can lock the phone manually during use, or set the phone to lock automatically when it is turned on. With the phone in lock mode, you can answer incoming calls, but you must unlock the phone to place outgoing calls (except to emergency and secret numbers).

1. In standby mode, press the **MENU** (left) soft key (), then press  (for **Settings**) and  for **Security**. You're prompted to enter the lock code.




Note: The default lock code is the last four digits of your telephone number.

2. Press  for **Lock Phone**. The following options appear in the display:
 - **Never** — The phone remains unlocked.


- **On power up** — The phone locks automatically the next time your phone is powered ON and stays locked until you enter the lock code.
 - **Now** — The phone locks immediately and stays locked until you enter the locked code.
3. Use the navigation keys to highlight the **Lock Phone** option of your choice.
 4. Press the  key to perform the function for the highlighted option.

Change Lock

The default lock code for your phone is generally the last four digits of your phone number. It is advisable to change the default lock code to a secret code for security purposes.

1. In standby mode, press the **MENU** (left) soft key (), then press  (for **Settings**) and  for **Security**. You're prompted to enter the lock code.

Note: The default lock code is the last four digits of your telephone number.

2. Press  for **Change Lock**. You're prompted to enter the new lock code.
3. Enter the new lock code. You're prompted to re-enter the new lock code for verification.
4. Enter the new lock code again. Your changes are stored.

Note: Your phone does not allow you to view the lock code for obvious security reasons. If you change the lock code, be sure to write down or memorize the new code.

Emergency #

Your phone provides the option of storing three emergency numbers. Each number can be up to 32 digits in length. All emergency numbers can be manually called at any time, even when your phone is locked or restricted. This can be a useful feature for controlling outgoing calls from your phone.




Note: Emergency number 911 is hard-coded into your phone. You can dial this number any time, even when the phone is locked or restricted. If you call 911 an audible tone is heard and an Emergency prompt appears in the display for the duration of the call.

Important!: Because of various transmission methods, network parameters, and user settings necessary to complete a call from your wireless phone, a connection cannot always be guaranteed. Therefore, emergency calling may not be available on all wireless networks at all times.





 
Important!: DO NOT depend on this phone as a primary method of calling 911 or for any other essential or emergency communications.

Remember to always turn your phone on and check for adequate signal strength before placing a call.


Store Emergency Numbers

1. In standby mode, press the **MENU** (left) soft key (), then press  (for **Settings**) and  for **Security**. You're prompted to enter the lock code.

Tip: The default lock code is the last four digits of your telephone number.




2. Enter the lock code, then press  for **Emergency #**.
3. Press , , or  to select from the three entry openings.
4. Enter the emergency number (up to 32 digits in length).
5. Press  to save the number that you entered.

Call Emergency Numbers in Lock Mode



1. In standby mode, enter the emergency number via the keypad.
2. Press  to place the call.

Voice Privacy

Voice privacy lets you prevent those you call from seeing your number in their display when receiving your call. Voice privacy options are Standard and Enhanced.




1. In standby mode, press the **MENU** (left) soft key (), then press  (for **Settings**) and  for **Security**. You're prompted to enter the lock code.

Note: The default lock code is the last four digits of your telephone number.




2. Enter the lock code, then press  for **Voice Privacy**. The following options listed appear in the display:
 - **Standard** — Voice privacy is disabled.
 - **Enhanced** — Voice privacy is enabled.
3. Use the navigation keys to highlight the **Voice Privacy** option of your choice, then press .

Restriction

Restriction lets you restrict the use of your phone for outgoing and incoming calls. You can allow all calls, allow no calls, or allow only calls to or from your Contacts.




1. In standby mode, press the **MENU** (left) soft key (), then press  (for **Settings**) and  for **Security**. You're prompted to enter the lock code.

Note: The default lock code is the last four digits of your telephone number.



2. Enter the lock code, then press  for **Restriction**.
3. Use the navigation keys to select **Outgoing** or **Incoming**.
4. Press .
5. Use the navigation keys to highlight **Allow All**, **Allow None** or, **Allow Contacts**, then press .

Erase Memory

Erase memory erases your Contacts, Photo Gallery, and Voice Dial recordings. This feature is useful if you want to give your phone to a friend or family member.




1. In standby mode, press the **MENU** (left) soft key (), then press  (for **Settings**) and  for **Security**. You're prompted to enter the lock code.

Note: The default lock code is the last four digits of your telephone number.

2. Enter the lock code, then press  for **Erase Memory**. A confirmation prompt appears in the display.
3. Use the navigation keys to highlight **Yes** or **No**, then press . A confirmation message appears in the display while your messages are being erased. Your phone then returns to the Security menu.



Resetting Your Phone

Reset Phone returns all setup options to their factory default.

1. In standby mode, press the **MENU** (left) soft key (), then press  (for **Settings**) and  for **Security**. You're prompted to enter the lock code.

Note: The default lock code is the last four digits of your telephone number.




 
Location Setting

2. Enter the lock code, then press  for **Reset Phone**. A prompt appears in the display asking if you wish to restore default settings (except for the Contacts and Voice Dial).
3. Use the navigation keys to highlight **Yes** or **No**, then press .

Location Setting





This function identifies your location to the network via the Global Positioning System (GPS). You can set this function for continuous operation or to operate only in the event that you dial 911.

Note: Contact your Wireless Provider to determine whether, when, or where location-based services are available.

1. In standby mode, press the **MENU** (left) soft key (), then press  (for **Settings**) and  for **Location**.
The following options appear in the display:
 - **Location On** — GPS location setting is on wherever the feature is available.
 - **911 Only** — GPS location setting is on only when you dial 911.
2. Use the navigation keys to highlight the option you want.
3. Press the  key to select the desired Location setting. You're returned to the **Settings** menu.

Airplane Mode

When set to **On**, Airplane Mode disables all radio functions of your phone. This prevents you from making or receiving calls, but allows you to use other features (such as the Tools) safely in sensitive environments, such as on board an aircraft.





1. In standby mode, press the **MENU** (left) soft key (), then press  (for **Settings**) and  for **Airplane Mode**. The following options appear in the display:
 - **Off** — Enables the radio transmitter and receiver in your phone.
 - **On** — Disables the radio transmitter and receiver in your phone.
2. Use the navigation keys to highlight the desired option, then press the  key to save your setting.

Phone Info

 
Phone Info lets you identify the hardware and software versions of your phone and to identify the phone number assigned to your phone.

Version

You can view both the software and hardware version of your phone using this feature. This feature is helpful if you need to contact Customer Service.


 
1. In standby mode, press the **MENU** (left) soft key (), then press  (for **Settings**),  (for **Phone Info**), and  for **Version**.

Your phone's hardware and software information appears in the display.

2. Press  to return to the **Phone Info** menu.








Phone Number

My Phone# displays the ten-digit number assigned to your phone by your Wireless Provider.

1. In idle mode, press the **MENU** (left) soft key (), then press  (for **Settings**),  (for **Phone Info**), and  for **Phone Number**. The phone number assigned by Alltel appears in the display.
2. Press  to return to the **Phone Info** menu.

Software Update

Software Update lets you update your phone's software by downloading and installing improved software elements from your wireless provider's network.

1. In standby mode, press the **Menu** (left) soft key (), then press  (for **Settings**),  (for **Phone Info**), and  for **Software Update**. The following option appears in the display:
 - **Check For Update** — Checks your Wireless Provider's server for software updates for your phone.
2. Press the  key. You are prompted to confirm the software update check.
3. Press the **Yes** (right) soft key () to proceed with the software update check. "**Session in Progress..**" appears in the display.
4. Press the **No** (left) soft key () to cancel the software update check.
When the software update check is complete and there are no updates found, your phone returns to standby mode.

Section 14: Health and Safety Information

Topics Covered

- Health and Safety Information
-

Health and Safety Information

Exposure to Radio Frequency (RF) Signals

Certification Information (SAR)

Your wireless phone is a radio transmitter and receiver. It is designed and manufactured not to exceed the exposure limits for radio frequency (RF) energy set by the Federal Communications Commission (FCC) of the U.S. government. These FCC exposure limits are derived from the recommendations of two expert organizations, the National Council on Radiation Protection and Measurement (NCRP) and the Institute of Electrical and Electronics Engineers (IEEE). In both cases, the recommendations were developed by scientific and engineering experts drawn from industry, government, and academia after extensive reviews of the scientific literature related to the biological effects of RF energy.

The exposure limit set by the FCC for wireless mobile phones employs a unit of measurement known as the Specific Absorption Rate (SAR). The SAR is a measure of the rate of absorption of RF energy by the human body expressed in units of watts per kilogram (W/kg). The FCC requires wireless phones to comply with a safety limit of 1.6 watts per kilogram (1.6 W/kg). The FCC exposure limit incorporates a substantial margin of safety to give additional protection to the public and to account for any variations in measurements.

SAR tests are conducted using standard operating positions accepted by the FCC with the phone transmitting at its highest certified power level in all tested frequency bands. Although the SAR is determined at the highest certified power level, the actual SAR level of the phone while operating can be well below the maximum value. This is because the phone is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a wireless base station antenna, the lower the power output.

Before a new model phone is available for sale to the public, it must be tested and certified to the FCC that it does not exceed the exposure limit established by the FCC. Tests for each model phone are performed in positions and locations (e.g. at the ear and worn on the body) as required by the FCC. Body-worn operations are restricted to Samsung-supplied, approved, or non-Samsung designated accessories that have no metal and must provide at least 1.5 cm separation between the device, including its antenna (whether extended or retracted) and the user's body. Non-compliance with the above restrictions may result in violation of FCC RF exposure guidelines.

UL Certified Travel Adaptor

The FCC has granted an Equipment Authorization for this mobile phone with all reported SAR levels evaluated as in compliance with the FCC RF exposure guidelines. The maximum SAR values for this model phone as reported to the FCC are:

- Head: 1.39 W/kg
- Body-worn: 0.522 W/kg

SAR information on this and other model phones can be viewed on-line at www.fcc.gov/oet/ea/. To find information that pertains to a particular model phone, this site uses the phone FCC ID number which is usually printed somewhere on the case of the phone. Sometimes it may be necessary to remove the battery pack to find the number. Once you have the FCC ID number for a particular phone, follow the instructions on the website and it should provide values for typical or maximum SAR for a particular phone. Additional product specific SAR information can also be obtained at www.fcc.gov/cgb/sar.

UL Certified Travel Adaptor

The Travel Adaptor for this phone has met UL 1310 safety requirements. Please adhere to the following safety instructions per UL guidelines.

FAILURE TO FOLLOW THE INSTRUCTIONS OUTLINED MAY LEAD TO SERIOUS PERSONAL INJURY AND POSSIBLE PROPERTY DAMAGE

IMPORTANT SAFETY INSTRUCTIONS - SAVE THESE INSTRUCTIONS.

DANGER - TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, CAREFULLY FOLLOW THESE INSTRUCTIONS.

FOR CONNECTION TO A SUPPLY NOT IN NORTH AMERICA, USE AN ATTACHMENT PLUG ADAPTOR OF THE PROPER CONFIGURATION FOR THE POWER OUTLET.

THIS POWER UNIT IS INTENDED TO BE CORRECTLY ORIENTATED IN A VERTICAL OR HORIZONTAL OR FLOOR MOUNT POSITION.

Consumer Information on Wireless Phones

The U.S. Food and Drug Administration (FDA) has published a series of Questions and Answers for consumers relating to radio frequency (RF) exposure from wireless phones. The FDA publication includes the following information:

What kinds of phones are the subject of this update?

The term wireless phone refers here to hand-held wireless phones with built-in antennas, often called "cell," "mobile," or "PCS" phones. These types of wireless phones can expose the user to measurable radio frequency energy (RF) because of

the short distance between the phone and the user's head. These RF exposures are limited by Federal Communications Commission safety guidelines that were developed with the advice of FDA and other federal health and safety agencies. When the phone is located at greater distances from the user, the exposure to RF is drastically lower because a person's RF exposure decreases rapidly with increasing distance from the source. The so-called "cordless phones," which have a base unit connected to the telephone wiring in a house, typically operate at far lower power levels, and thus produce RF exposures well within the FCC's compliance limits.

Do wireless phones pose a health hazard?

The available scientific evidence does not show that any health problems are associated with using wireless phones. There is no proof, however, that wireless phones are absolutely safe. Wireless phones emit low levels of radio frequency energy (RF) in the microwave range while being used. They also emit very low levels of RF when in the stand-by mode. Whereas high levels of RF can produce health effects (by heating tissue), exposure to low level RF that does not produce heating effects causes no known adverse health effects. Many studies of low level RF exposures have not found any biological effects. Some studies have suggested that some biological effects may occur, but such findings have not been confirmed by additional research. In some cases, other researchers have had difficulty in reproducing those studies, or in determining the reasons for inconsistent results.

What is FDA's role concerning the safety of wireless phones?

Under the law, FDA does not review the safety of radiation-emitting consumer products such as wireless phones before they can be sold, as it does with new drugs or medical devices. However, the agency has authority to take action if wireless phones are shown to emit radio frequency energy (RF) at a level that is hazardous to the user. In such a case, FDA could require the manufacturers of wireless phones to notify users of the health hazard and to repair, replace or recall the phones so that the hazard no longer exists.

Although the existing scientific data do not justify FDA regulatory actions, FDA has urged the wireless phone industry to take a number of steps, including the following:

- "Support needed research into possible biological effects of RF of the type emitted by wireless phones;
- "Design wireless phones in a way that minimizes any RF exposure to the user that is not necessary for device function; and

Consumer Information on Wireless Phones

- "Cooperate in providing users of wireless phones with the best possible information on possible effects of wireless phone use on human health.

FDA belongs to an interagency working group of the federal agencies that have responsibility for different aspects of RF safety to ensure coordinated efforts at the federal level. The following agencies belong to this working group:

- "National Institute for Occupational Safety and Health
- "Environmental Protection Agency
- "Federal Communications Commission
- "Occupational Safety and Health Administration
- "National Telecommunications and Information Administration

The National Institutes of Health participates in some interagency working group activities, as well.

FDA shares regulatory responsibilities for wireless phones with the Federal Communications Commission (FCC). All phones that are sold in the United States must comply with FCC safety guidelines that limit RF exposure. FCC relies on FDA and other health agencies for safety questions about wireless phones.

FCC also regulates the base stations that the wireless phone networks rely upon. While these base stations operate at higher power than do the wireless phones themselves, the RF exposures that people get from these base stations are typically thousands of times lower than those they can get from wireless phones. Base stations are thus not the primary subject of the safety questions discussed in this document.

What are the results of the research done already?

The research done thus far has produced conflicting results, and many studies have suffered from flaws in their research methods. Animal experiments investigating the effects of radio frequency energy (RF) exposures characteristic of wireless phones have yielded conflicting results that often cannot be repeated in other laboratories. A few animal studies, however, have suggested that low levels of RF could accelerate the development of cancer in laboratory animals. However, many of the studies that showed increased tumor development used animals that had been genetically engineered or treated with cancer-causing chemicals so as to be pre-disposed to develop cancer in absence of RF exposure. Other studies exposed the animals to RF for up to 22 hours per day. These conditions are not similar to the conditions under which people use wireless phones, so we don't know with certainty what the results of such studies mean for human health.

Three large epidemiology studies have been published since December 2000. Between them, the studies investigated any possible association between the use of wireless phones and primary brain cancer, glioma, meningioma, or acoustic neuroma, tumors of the brain or salivary gland, leukemia, or other cancers. None of the studies demonstrated the existence of any harmful health effects from wireless phones RF exposures. However, none of the studies can answer questions about long-term exposures, since the average period of phone use in these studies was around three years.

What research is needed to decide whether RF exposure from wireless phones poses a health risk?

A combination of laboratory studies and epidemiological studies of people actually using wireless phones would provide some of the data that are needed. Lifetime animal exposure studies could be completed in a few years. However, very large numbers of animals would be needed to provide reliable proof of a cancer promoting effect if one exists. Epidemiological studies can provide data that is directly applicable to human populations, but ten or more years' follow-up may be needed to provide answers about some health effects, such as cancer. This is because the interval between the time of exposure to a cancer-causing agent and the time tumors develop - if they do - may be many, many years. The interpretation of epidemiological studies is hampered by difficulties in measuring actual RF exposure during day-to-day use of wireless phones. Many factors affect this measurement, such as the angle at which the phone is held, or which model of phone is used.

What is FDA doing to find out more about the possible health effects of wireless phone RF?

FDA is working with the U.S. National Toxicology Program and with groups of investigators around the world to ensure that high priority animal studies are conducted to address important questions about the effects of exposure to radio frequency energy (RF).

FDA has been a leading participant in the World Health Organization international Electromagnetic Fields (EMF) Project since its inception in 1996. An influential result of this work has been the development of a detailed agenda of research needs that has driven the establishment of new research programs around the world. The Project has also helped develop a series of public information documents on EMF issues.

FDA and Cellular Telecommunications & Internet Association (CTIA) have a formal Cooperative Research and Development Agreement (CRADA) to do research on

wireless phone safety. FDA provides the scientific oversight, obtaining input from experts in government, industry, and academic organizations. CTIA-funded research is conducted through contracts to independent investigators. The initial research will include both laboratory studies and studies of wireless phone users. The CRADA will also include a broad assessment of additional research needs in the context of the latest research developments around the world.

What steps can I take to reduce my exposure to radio frequency energy from my wireless phone?

If there is a risk from these products - and at this point we do not know that there is - it is probably very small. But if you are concerned about avoiding even potential risks, you can take a few simple steps to minimize your exposure to radio frequency energy (RF). Since time is a key factor in how much exposure a person receives, reducing the amount of time spent using a wireless phone will reduce RF exposure.

- "If you must conduct extended conversations by wireless phone every day, you could place more distance between your body and the source of the RF, since the exposure level drops off dramatically with distance. For example, you could use a headset and carry the wireless phone away from your body or use a wireless phone connected to a remote antenna.

Again, the scientific data do not demonstrate that wireless phones are harmful. But if you are concerned about the RF exposure from these products, you can use measures like those described above to reduce your RF exposure from wireless phone use.

What about children using wireless phones?

The scientific evidence does not show a danger to users of wireless phones, including children and teenagers. If you want to take steps to lower exposure to radio frequency energy (RF), the measures described above would apply to children and teenagers using wireless phones. Reducing the time of wireless phone use and increasing the distance between the user and the RF source will reduce RF exposure.

Some groups sponsored by other national governments have advised that children be discouraged from using wireless phones at all. For example, the government in the United Kingdom distributed leaflets containing such a recommendation in December 2000. They noted that no evidence exists that using a wireless phone causes brain tumors or other ill effects. Their recommendation to limit wireless phone use by children was strictly precautionary; it was not based on scientific evidence that any health hazard exists.

Do hands-free kits for wireless phones reduce risks from exposure to RF emissions?

Since there are no known risks from exposure to RF emissions from wireless phones, there is no reason to believe that hands-free kits reduce risks. Hands-free kits can be used with wireless phones for convenience and comfort. These systems reduce the absorption of RF energy in the head because the phone, which is the source of the RF emissions, will not be placed against the head. On the other hand, if the phone is mounted against the waist or other part of the body during use, then that part of the body will absorb more RF energy. Wireless phones marketed in the U.S. are required to meet safety requirements regardless of whether they are used against the head or against the body. Either configuration should result in compliance with the safety limit.

Do wireless phone accessories that claim to shield the head from RF radiation work?

Since there are no known risks from exposure to RF emissions from wireless phones, there is no reason to believe that accessories that claim to shield the head from those emissions reduce risks. Some products that claim to shield the user from RF absorption use special phone cases, while others involve nothing more than a metallic accessory attached to the phone. Studies have shown that these products generally do not work as advertised. Unlike "hands-free" kits, these so-called "shields" may interfere with proper operation of the phone. The phone may be forced to boost its power to compensate, leading to an increase in RF absorption. In February 2002, the Federal Trade Commission (FTC) charged two companies that sold devices that claimed to protect wireless phone users from radiation with making false and unsubstantiated claims. According to FTC, these defendants lacked a reasonable basis to substantiate their claim.

What about wireless phone interference with medical equipment?

Radio frequency energy (RF) from wireless phones can interact with some electronic devices. For this reason, FDA helped develop a detailed test method to measure electromagnetic interference (EMI) of implanted cardiac pacemakers and defibrillators from wireless telephones. This test method is now part of a standard sponsored by the Association for the Advancement of Medical Instrumentation (AAMI). The final draft, a joint effort by FDA, medical device manufacturers, and many other groups, was completed in late 2000. This standard will allow manufacturers to ensure that cardiac pacemakers and defibrillators are safe from

wireless phone EMI. FDA has tested wireless phones and helped develop a voluntary standard sponsored by the Institute of Electrical and Electronic Engineers (IEEE). This standard specifies test methods and performance requirements for hearing aids and wireless phones so that no interference occurs when a person uses a compatible phone and a compatible hearing aid at the same time. This standard was approved by the IEEE in 2000.

FDA continues to monitor the use of wireless phones for possible interactions with other medical devices. Should harmful interference be found to occur, FDA will conduct testing to assess the interference and work to resolve the problem.

Additional information on the safety of RF exposures from various sources can be obtained from the following organizations:

- FCC RF Safety Program:
<http://www.fcc.gov/oet/rfsafety/>
- Environmental Protection Agency (EPA):
<http://www.epa.gov/radiation/>
- Occupational Safety and Health Administration's (OSHA):
<http://www.osha-slc.gov/SLTC/radiofrequencyradiation/>
- National Institute for Occupational Safety and Health (NIOSH):
<http://www.cdc.gov/niosh/topics/emf/>
- World Health Organization (WHO):
<http://www.who.int/peh-emf/>
- International Commission on Non-Ionizing Radiation Protection:
<http://www.icnirp.de>
- Radiation Protection Division of Health Protection Agency (UK):
<http://www.hpa.org.uk/radiation/>
- Updated 4/3/2002: US Food and Drug Administration
<http://www.fda.gov/cellphones>

Road Safety

Your wireless phone gives you the powerful ability to communicate by voice, almost anywhere, anytime. But an important responsibility accompanies the benefits of wireless phones, one that every user must uphold.

When driving a car, driving is your first responsibility. When using your wireless phone behind the wheel of a car, practice good common sense and remember the following tips:

1. Get to know your wireless phone and its features, such as speed dial and

redial. If available, these features help you to place your call without taking your attention off the road.

2. When available, use a hands-free device. If possible, add an additional layer of convenience and safety to your wireless phone with one of the many hands free accessories available today.
3. Position your wireless phone within easy reach. Be able to access your wireless phone without removing your eyes from the road. If you get an incoming call at an inconvenient time, let your voice mail answer it for you.
4. Let the person you are speaking with know you are driving; if necessary, suspend the call in heavy traffic or hazardous weather conditions. Rain, sleet, snow, ice and even heavy traffic can be hazardous.
5. Do not take notes or look up phone numbers while driving. Jotting down a "to do" list or flipping through your address book takes attention away from your primary responsibility, driving safely.
6. Dial sensibly and assess the traffic; if possible, place calls when you are not moving or before pulling into traffic. Try to plan calls when your car will be stationary. If you need to make a call while moving, dial only a few numbers, check the road and your mirrors, then continue.
7. Do not engage in stressful or emotional conversations that may be distracting. Make people you are talking with aware you are driving and suspend conversations that have the potential to divert your attention from the road.
8. Use your wireless phone to call for help. Dial 9-1-1 or other local emergency number in the case of fire, traffic accident or medical emergencies. Remember, it is a free call on your wireless phone!
9. Use your wireless phone to help others in emergencies. If you see an auto accident, crime in progress or other serious emergency where lives are in danger, call 9-1-1 or other local emergency number, as you would want others to do for you.
10. Call roadside assistance or a special non-emergency wireless assistance number when necessary. If you see a broken-down vehicle posing no serious hazard, a broken traffic signal, a minor traffic accident where no one appears injured, or a vehicle you know to be stolen, call roadside assistance or other special non-emergency number.

"The wireless industry reminds you to use your phone safely when driving."

For more information, please call 1-888-901-SAFE, or visit our web-site <http://www.ctia.org/>

Provided by the Cellular Telecommunications & Internet Association

Operating Environment

Remember to follow any special regulations in force in any area

and always switch your phone off whenever it is forbidden to use it, or when it may cause interference or danger. When connecting the phone or any accessory to another device, read its user's guide for detailed safety instructions. Do not connect incompatible products.

As with other mobile radio transmitting equipment, users are advised that for the satisfactory operation of the equipment and

for the safety of personnel, it is recommended that the equipment should only be used in the normal operating position (held to your ear with the antenna pointing over your shoulder).

Using Your Phone Near Other Electronic Devices

Most modern electronic equipment is shielded from radio frequency (RF) signals. However, certain electronic equipment may not be shielded against the RF signals from your wireless phone. Consult the manufacturer to discuss alternatives.

Pacemakers

Pacemaker manufacturers recommend that a minimum distance of 15 cm (6 inches) be maintained between a wireless phone and a pacemaker to avoid potential interference with the pacemaker.

These recommendations are consistent with the independent research and recommendations of Wireless Technology Research.

Persons with pacemakers:

- should always keep the phone more than 15 cm (6 inches) from their pacemaker when the phone is switched on.
- should not carry the phone in a breast pocket.
- should use the ear opposite the pacemaker to minimize potential interference.

If you have any reason to suspect that interference is taking place, switch your phone off immediately.

Hearing Aid Compatibility with Mobile Phones

When some mobile phones are used near some hearing devices (hearing aids and cochlear implants), users may detect a buzzing, humming, or whining noise. Some hearing devices are more immune than others to this interference noise, and phones also vary in the amount of interference they generate.

The wireless telephone industry has developed ratings for some of their mobile phones, to assist hearing device users in finding phones that may be compatible with their hearing devices. Not all phones have been rated. Phones that are rated have the rating on their box or a label on the box.

The ratings are not guarantees. Results will vary depending on the user's hearing device and hearing loss. If your hearing device happens to be vulnerable to interference, you may not be able to use a rated phone successfully. Trying out the phone with your hearing device is the best way to evaluate it for your personal needs.

M-Ratings: Phones rated M3 or M4 meet FCC requirements and are likely to generate less interference to hearing devices than phones that are not labeled. M4 is the better/higher of the two ratings.

T-Ratings: Phones rated T3 or T4 meet FCC requirements and are likely to be more usable with a hearing device's telecoil ("T Switch" or "Telephone Switch") than unrated phones. T4 is the better/higher of the two ratings. (Note that not all hearing devices have telecoils in them.)

Hearing devices may also be measured for immunity to this type of interference. Your hearing device manufacturer or hearing health professional may help you find results for your hearing device. The more immune your hearing aid is, the less likely you are to experience interference noise from mobile phones.

Other Medical Devices

If you use any other personal medical devices, consult the manufacturer of your device to determine if it is adequately shielded from external RF energy. Your physician may be able to assist you in obtaining this information. Switch your phone off in health care facilities when any regulations posted in these areas instruct you to do so. Hospitals or health care facilities may be using equipment that could be sensitive to external RF energy.

Vehicles

RF signals may affect improperly installed or inadequately shielded electronic systems in motor vehicles. Check with the manufacturer or its representative

Potentially Explosive Environments

regarding your vehicle. You should also consult the manufacturer of any equipment that has been added to your vehicle.

Posted Facilities

Switch your phone off in any facility where posted notices require you to do so.

Potentially Explosive Environments

Switch your phone off when in any area with a potentially explosive atmosphere and obey all signs and instructions. Sparks in such areas could cause an explosion or fire resulting in bodily injury or even death.

Users are advised to switch the phone off while at a refueling point (service station). Users are reminded of the need to observe restrictions on the use of radio equipment in fuel depots

(fuel storage and distribution areas), chemical plants or where blasting operations are in progress.


Areas with a potentially explosive atmosphere are often but not always clearly marked. They include below deck on boats, chemical transfer or storage facilities, vehicles using liquefied petroleum gas (such as propane or butane), areas where the air contains chemicals or particles, such as grain, dust or metal powders, and any other area where you would normally be advised to turn off your vehicle engine.

Emergency Calls

This phone, like any wireless phone, operates using radio signals, wireless and land line networks as well as user-programmed functions, which cannot guarantee connection in all conditions. Therefore, you should never rely solely on any wireless phone for essential communications (medical emergencies, for example).

Remember, to make or receive any calls the phone must be switched on and in a service area with adequate signal strength. Emergency calls may not be possible on all wireless phone networks or when certain network services and/or phone features are in use. Check with local Wireless Providers.

To make an emergency call:

1. If the phone is not on, switch it on.
2. Key in the emergency number for your present location (for example, 911 or other official emergency number). Emergency numbers vary by location.
3. Press the  key.

If certain features are in use (call barring, for example), you may

first need to deactivate those features before you can make an emergency call. Consult this document and your local Wireless Provider.

When making an emergency call, remember to give all the necessary information as accurately as possible. Remember that your phone may be the only means of communication at the scene of an accident; do not cut off the call until given permission to do so.

Restricting Children's access to your Phone

Your phone is not a toy. Children should not be allowed to play with it because they could hurt themselves and others, damage the phone or make calls that increase your phone bill.

FCC Notice and Cautions

FCC Notice

The phone may cause TV or radio interference if used in close proximity to receiving equipment. The FCC can require you to stop using the phone if such interference cannot be eliminated.

Vehicles using liquefied petroleum gas (such as propane or butane) must comply with the National Fire Protection Standard (NFPA-58). For a copy of this standard, contact the National Fire Protection Association, One Batterymarch Park, Quincy, MA 02269, Attn: Publication Sales Division.

Cautions

Any changes or modifications to your phone not expressly approved in this document could void your warranty for this equipment, and void your authority to operate this equipment. Only use approved batteries, antennas and chargers. The use of any unauthorized accessories may be dangerous and void the phone warranty if said accessories cause damage or a defect to the phone.

Although your phone is quite sturdy, it is a complex piece of equipment and can be broken. Avoid dropping, hitting, bending or sitting on it.

Other Important Safety Information

- Only qualified personnel should service the phone or install the phone in a vehicle. Faulty installation or service may be dangerous and may invalidate any warranty applicable to the device.
- Check regularly that all wireless phone equipment in your vehicle is mounted and operating properly.

Product Performance

- Do not store or carry flammable liquids, gases or explosive materials in the same compartment as the phone, its parts or accessories.
- For vehicles equipped with an air bag, remember that an air bag inflates with great force. Do not place objects, including both installed or portable wireless equipment in the area over the air bag or in the air bag deployment area. If wireless equipment is improperly installed and the air bag inflates, serious injury could result.
- Switch your phone off before boarding an aircraft. The use of wireless phone in aircraft is illegal and may be dangerous to the aircraft's operation.
- Failure to observe these instructions may lead to the suspension or denial of telephone services to the offender, or legal action, or both.

Product Performance

Getting the Most Out of Your Signal Reception

The quality of each call you make or receive depends on the signal strength in your area. Your phone informs you of the current signal strength by displaying a number of bars next to the signal strength icon. The more bars displayed, the stronger the signal.

If you're inside a building, being near a window may give you better reception.

Understanding the Power Save Feature

If your phone is unable to find a signal after 15 minutes of searching, a Power Save feature is automatically activated. If your phone is active, it periodically rechecks service availability or you can check it yourself by pressing any key.

Anytime the Power Save feature is activated, a message displays on the screen. When a signal is found, your phone returns to standby mode.

Understanding How Your Phone Operates

Your phone is basically a radio transmitter and receiver. When it's turned on, it receives and transmits radio frequency (RF) signals. When you use your phone, the system handling your call controls the power level. This power can range from 0.006 watts to 0.2 watts in digital mode.

Maintaining Your Phone's Peak Performance

For the best care of your phone, only authorized personnel should service your phone and accessories. Faulty service may void the warranty.

There are several simple guidelines to operating your phone properly and maintaining safe, satisfactory service.

- Hold the phone with the antenna raised, fully-extended and over your shoulder.
- Try not to hold, bend or twist the phone's antenna.
- Don't use the phone if the antenna is damaged.
- Speak directly into the phone's receiver.
- Avoid exposing your phone and accessories to rain or liquid spills. If your phone does get wet, immediately turn the power off and remove the battery. If it is inoperable, call Customer Care for service.

Availability of Various Features/Ring Tones

Many services and features are network dependent and may require additional subscription and/or usage charges. Not all features are available for purchase or use in all areas. Downloadable Ring Tones may be available at an additional cost. Other conditions and restrictions may apply. See your Wireless Provider for additional information.

Battery Standby and Talk Time

Standby and talk times will vary depending on phone usage patterns and conditions. Battery power consumption depends on factors such as network configuration, signal strength, operating temperature, features selected, frequency of calls, and voice, data, and other application usage patterns.

Battery Precautions

- Never use any charger or battery that is damaged in any way.
- Use the battery only for its intended purpose.
- If you use the phone near the network's base station, it uses less power; talk and standby time are greatly affected by the signal strength on the cellular network and the parameters set by the network operator.
- Battery charging time depends on the remaining battery charge and the type of battery and charger used. The battery can be charged and discharged hundreds of times, but it will gradually wear out. When the operation time (talk time and standby time) is noticeably shorter than normal, it is time to buy a new battery.
- If left unused, a fully charged battery will discharge itself over time.
- Use only Samsung-approved batteries and recharge your battery only with Samsung-approved chargers. When a charger is not in use, disconnect it from the power source. Do not leave the battery connected to a charger for more than a week, since overcharging may shorten its life.
- Extreme temperatures will affect the charging capacity of your battery: it may require cooling or warming first.

Samsung Mobile Products and Recycling

- Do not leave the battery in hot or cold places, such as in a car in summer or winter conditions, as you will reduce the capacity and lifetime of the battery. Always try to keep the battery at room temperature. A phone with a hot or cold battery may temporarily not work, even when the battery is fully charged. Li-ion batteries are particularly affected by temperatures below 0 °C (32 °F).
- Do not short-circuit the battery. Accidental short-circuiting can occur when a metallic object (coin, clip or pen) causes a direct connection between the + and - terminals of the battery (metal strips on the battery), for example when you carry a spare battery in a pocket or bag. Short-circuiting the terminals may damage the battery or the object causing the short-circuiting.
- Dispose of used batteries in accordance with local regulations. In some areas, the disposal of batteries in household or business trash may be prohibited. For safe disposal options for Li-Ion batteries, contact your nearest Samsung authorized service center. Always recycle. Do not dispose of batteries in a fire.

Samsung Mobile Products and Recycling

Samsung cares for the environment and encourages its customers to recycle Samsung mobile phones and genuine Samsung accessories.

Go to:

<http://www.samsungwireless.com/recycling.htm>
for more information.

Care and Maintenance

Your phone is a product of superior design and craftsmanship and should be treated with care. The suggestions below will help you fulfill any warranty obligations and allow you to enjoy this product for many years

- Keep the phone and all its parts and accessories out of the reach of small children's.
- Keep the phone dry. Precipitation, humidity and liquids contain minerals that will corrode electronic circuits.
- Do not use the phone with a wet hand. Doing so may cause an electric shock to you or damage to the phone.
- Do not use or store the phone in dusty, dirty areas, as its moving parts may be damaged.
- Do not store the phone in hot areas. High temperatures can shorten the life of electronic devices, damage batteries, and warp or melt certain plastics.

- Do not store the phone in cold areas. When the phone warms up to its normal operating temperature, moisture can form inside the phone, which may damage the phone's electronic circuit boards.
- Do not drop, knock or shake the phone. Rough handling can break internal circuit boards.
- Do not use harsh chemicals, cleaning solvents or strong detergents to clean the phone. Wipe it with a soft cloth slightly dampened in a mild soap-and-water solution.
- Do not paint the phone. Paint can clog the device's moving parts and prevent proper operation.
- Do not put the phone in or on heating devices, such as a microwave oven, a stove or a radiator. The phone may explode when overheated.
- Use only the supplied or an approved replacement antenna. Unauthorized antennas or modified accessories may damage the phone and violate regulations governing radio devices.
- If the phone, battery, charger or any accessory is not working properly, take it to your nearest qualified service facility. The personnel there will assist you, and if necessary, arrange for service.

Section 15: Warranty Information

Topics Covered

- Standard Limited Warranty
-

Standard Limited Warranty

What is Covered and For How Long? SAMSUNG

TELECOMMUNICATIONS AMERICA, LLC ("SAMSUNG") warrants to the original purchaser ("Purchaser") that SAMSUNG's Phones and accessories ("Products") are free from defects in material and workmanship under normal use and service for the period commencing upon the date of purchase and continuing for the following specified period of time after that date:

Phone	1 Year
Batteries	1 Year
Leather Case/ Pouch	90 Days
Holster	90 Days
Other Phone Accessories	1 Year

What is Not Covered? This Limited Warranty is conditioned upon proper use of Product by Purchaser. This Limited Warranty does not cover: (a) defects or damage resulting from accident, misuse, abuse, neglect, unusual physical, electrical or electromechanical stress, or modification of any part of Product, including antenna, or cosmetic damage; (b) equipment that has the serial number removed or made illegible; (c) any plastic surfaces or other externally exposed parts that are scratched or damaged due to normal use; (d) malfunctions resulting from the use of Product in conjunction with accessories, products, or ancillary/peripheral equipment not furnished or approved by SAMSUNG; (e) defects or damage from improper testing, operation, maintenance, installation, or adjustment; (f) installation, maintenance, and service of Product, or (g) Product used or purchased outside the United States or Canada. This Limited Warranty covers batteries only if battery capacity falls below 80% of rated capacity or the battery leaks, and this Limited Warranty does not cover any battery if (i) the battery has been charged by a battery charger not specified or approved by SAMSUNG for charging the battery, (ii) any of the seals on the battery are broken or show evidence of tampering, or (iii) the battery has been used in equipment other than the SAMSUNG phone for which it is specified.

What are SAMSUNG's Obligations? During the applicable warranty period, SAMSUNG will repair or replace, at SAMSUNG's sole option, without charge to Purchaser, any defective component part of Product. To obtain service under this Limited Warranty, Purchaser must return Product to an authorized phone service facility in an adequate container for shipping, accompanied by Purchaser's sales

Standard Limited Warranty

receipt or comparable substitute proof of sale showing the date of purchase, the serial number of Product and the sellers' name and address. To obtain assistance on where to deliver the Product, call Samsung Customer Care at 1-888-987-4357. Upon receipt, SAMSUNG will promptly repair or replace the defective Product. SAMSUNG may, at SAMSUNG's sole option, use rebuilt, reconditioned, or new parts or components when repairing any Product or replace Product with a rebuilt, reconditioned or new Product. Repaired/replaced leather cases, pouches and holsters will be warranted for a period of ninety (90) days. All other repaired/replaced Product will be warranted for a period equal to the remainder of the original Limited Warranty on the original Product or for 90 days, whichever is longer. All replaced parts, components, boards and equipment shall become the property of SAMSUNG. If SAMSUNG determines that any Product is not covered by this Limited Warranty, Purchaser must pay all parts, shipping, and labor charges for the repair or return of such Product.

WHAT ARE THE LIMITS ON SAMSUNG'S WARRANTY/LIABILITY? EXCEPT AS SET FORTH IN THE EXPRESS WARRANTY CONTAINED HEREIN, PURCHASER TAKES THE PRODUCT "AS IS," AND SAMSUNG MAKES NO WARRANTY OR REPRESENTATION AND THERE ARE NO CONDITIONS, EXPRESS OR IMPLIED, STATUTORY OR OTHERWISE, OF ANY KIND WHATSOEVER WITH RESPECT TO THE PRODUCT, INCLUDING BUT NOT LIMITED TO:

- "THE MERCHANTABILITY OF THE PRODUCT OR ITS FITNESS FOR ANY PARTICULAR PURPOSE OR USE;
- "WARRANTIES OF TITLE OR NON-INFRINGEMENT;
- "DESIGN, CONDITION, QUALITY, OR PERFORMANCE OF THE PRODUCT;
- "THE WORKMANSHIP OF THE PRODUCT OR THE COMPONENTS CONTAINED THEREIN; OR
- "COMPLIANCE OF THE PRODUCT WITH THE REQUIREMENTS OF ANY LAW, RULE, SPECIFICATION OR CONTRACT PERTAINING THERETO.

NOTHING CONTAINED IN THE INSTRUCTION MANUAL SHALL BE CONSTRUED TO CREATE AN EXPRESS WARRANTY OF ANY KIND WHATSOEVER WITH RESPECT TO THE PRODUCT. ALL IMPLIED WARRANTIES AND CONDITIONS THAT MAY ARISE BY OPERATION OF LAW, INCLUDING IF APPLICABLE THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE HEREBY LIMITED TO THE SAME DURATION OF TIME AS THE EXPRESS WRITTEN WARRANTY STATED HEREIN. SOME STATES/PROVINCES DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS, SO THE ABOVE LIMITATION MAY NOT APPLY TO YOU. IN ADDITION, SAMSUNG SHALL NOT BE LIABLE FOR ANY DAMAGES OF ANY

KIND RESULTING FROM THE PURCHASE, USE, OR MISUSE OF, OR INABILITY TO USE THE PRODUCT OR ARISING DIRECTLY OR INDIRECTLY FROM THE USE OR LOSS OF USE OF THE PRODUCT OR FROM THE BREACH OF THE EXPRESS WARRANTY, INCLUDING INCIDENTAL, SPECIAL, CONSEQUENTIAL OR SIMILAR DAMAGES, OR LOSS OF ANTICIPATED PROFITS OR BENEFITS, OR FOR DAMAGES ARISING FROM ANY TORT (INCLUDING NEGLIGENCE OR GROSS NEGLIGENCE) OR FAULT COMMITTED BY SAMSUNG, ITS AGENTS OR EMPLOYEES, OR FOR ANY BREACH OF CONTRACT OR FOR ANY CLAIM BROUGHT AGAINST PURCHASER BY ANY OTHER PARTY. SOME STATES/PROVINCES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATION OR EXCLUSION MAY NOT APPLY TO YOU. THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, AND YOU MAY ALSO HAVE OTHER RIGHTS, WHICH VARY FROM STATE TO STATE/PROVINCE TO PROVINCE. THIS LIMITED WARRANTY SHALL NOT EXTEND TO ANYONE OTHER THAN THE ORIGINAL PURCHASER OF THIS PRODUCT AND STATES PURCHASER'S EXCLUSIVE REMEDY. IF ANY PORTION OF THIS LIMITED WARRANTY IS HELD ILLEGAL OR UNENFORCEABLE BY REASON OF ANY LAW, SUCH PARTIAL ILLEGALITY OR UNENFORCEABILITY SHALL NOT AFFECT THE ENFORCEABILITY FOR THE REMAINDER OF THIS LIMITED WARRANTY WHICH PURCHASER ACKNOWLEDGES IS AND WILL ALWAYS BE CONSTRUED TO BE LIMITED BY ITS TERMS OR AS LIMITED AS THE LAW PERMITS. THE PARTIES UNDERSTAND THAT THE PURCHASER MAY USE THIRD-PARTY SOFTWARE OR EQUIPMENT IN CONJUNCTION WITH THE PRODUCT. SAMSUNG MAKES NO WARRANTIES OR REPRESENTATIONS AND THERE ARE NO CONDITIONS, EXPRESS OR IMPLIED, STATUTORY OR OTHERWISE, AS TO THE QUALITY, CAPABILITIES, OPERATIONS, PERFORMANCE OR SUITABILITY OF ANY THIRDPARTY SOFTWARE OR EQUIPMENT, WHETHER SUCH THIRD-PARTY SOFTWARE OR EQUIPMENT IS INCLUDED WITH THE PRODUCT DISTRIBUTED BY SAMSUNG OR OTHERWISE, INCLUDING THE ABILITY TO INTEGRATE ANY SUCH SOFTWARE OR EQUIPMENT WITH THE PRODUCT. THE QUALITY, CAPABILITIES, OPERATIONS, PERFORMANCE AND SUITABILITY OF ANY SUCH THIRD-PARTY SOFTWARE OR EQUIPMENT LIE SOLELY WITH THE PURCHASER AND THE DIRECT VENDOR, OWNER OR SUPPLIER OF SUCH THIRD-PARTY SOFTWARE OR EQUIPMENT, AS THE CASE MAY BE.

This Limited Warranty allocates risk of Product failure between Purchaser and SAMSUNG, and SAMSUNG's Product pricing reflects this allocation of risk and the limitations of liability contained in this Limited Warranty. The agents, employees, distributors, and dealers of SAMSUNG are not authorized to make modifications to this Limited Warranty, or make additional warranties binding on SAMSUNG. Accordingly, additional statements such as dealer advertising or presentation,

Standard Limited Warranty

whether oral or written, do not constitute warranties by SAMSUNG and should not be relied upon.

Samsung Telecommunications America, LLC
1000 Klein Street
Plano, Texas 75074

Phone: 1-800-SAMSUNG

Phone: 1-888-987-HELP (4357)

©2007 Samsung Telecommunications America, L.L.C. Samsung is a registered trademark of Samsung Electronics Co., Ltd. and its related entities.

No reproduction in whole or in part allowed without prior written approval.

Specifications and availability subject to change without notice.

Printed in China

Index

A

Adjust

ringer setting 22

Apps

Buying New 78
Demo Apps 79
Disabled Apps 80
Expired Apps 80
Removing Apps 79
Restoring Apps 80

Axcess Shop 76

Help 78
Options 77
Settings 77

Axcess Web

Exit 93
Launch Axcess Web 93
Navigate 93
Operations 93
Soft Keys 94
Using Links 94

B

Battery 8

charging 10
Low battery indicator 11
removal 10
Travel adapter 10

C

Call Answer mode 20

Call Functions 23

Adjusting the Call Volume 29
Answering a Call 28
Call Log 29

Making a Call — Number

Entry Dialing 24

Making a Call — Speed

Dialing 25, 26

Call Options 129

Auto Answer 130
Auto Retry 130
Call Answer 129
Data 130
TTY/TDD 131

Camera 81

Color Tones 87
Fun Frame 87
Multi Shot 86
Options 85
Photo Gallery 90
Screen 83
Screen Icons 83
Self Timer 86
Taking Pictures 82

Camera Screen 83

Camera Settings

Quality 88
Resolution 85
Shutter Sound 89

Clear key 16

Clock Set 132

Contacts List 52

open 52

Creating and Sending New

Messages 65

D

Delay pictures 86

Display screen icons 17

Display Settings 120

Animation 121
Auto Hyphen 124
Backlight 122

- Banner 121
- Contrast 122
- Dial Digits 124
- Dial Screen 124
- Menu Style 120

E

- Emergency Calls** 24
- End key** 16
- Entering Text** 46
 - Alpha (Abc) Mode 48
 - Entering Numbers 50
 - Entering Symbols 49
 - Entering Upper and Lower Case Letters 49
 - Text Entry Modes 47
- Erase memos** 105

G

- Gallery** 96
 - Image 97
 - Melody 99
- Gallery, Photo** 90
- Getting Started** 7
 - Activating Your Phone 8
 - Understanding this User Manual 8
 - Voicemail 11

H

- Health and Safety Information** 139

I

- In Use Menu Outline** 39
- Input mode** 21
- International Calls** 24

L

- Language** 133
- Left soft key** 15

- Lock mode** 21

M

- Memo Pad**
 - Review, add, edit, and erase memos 115
- Menu Navigation** 37
- Message Folders** 70
 - Drafts 71
 - Inbox 70
 - Messages and Lock Mode 73
 - Outbox 71
 - Voicemail 73
- Message Send Options** 69
- Message Settings** 74
- Messaging** 64
 - Creating and Sending New Messages 65
 - Deleting Messages 75
 - Message Folders 70
 - Message Send Options 69
 - Message Settings 74
 - Retrieving New Messages 69
 - Voicemail 70

Mode

- call answer 20
- input 21
- lock 21
- silent 22
- standby 21
- talk 22
- vibrate 22

- Multi shot** 86

N

- Navigation key** 17
- Network Services**
 - Network Selection 132
- Notes and tips** 8

Notes, description 8
Number Entry Dialing 24

O

OK key 16
Open View of Your Phone 14

P

Personal Organizer

Alarm Clock 113
Calculator 116
Calendar 111
Count Down 117
Memo Pad 114
Today 110
To-Do List 112
Voice Memo 104
World Time 115

Phone Info 137

Phone Number 138
Version 138

Phone Modes 33

Phone Number 138

Photo Gallery 90

Pictures

sending 82
zooming in 84

R

Record memos 104
Resolution, notes about 84, 86
Retrieving New Messages 69
Right soft key 16
Roaming 36

S

Safe Use of your phone 141
Security Settings 133
Change Lock 134

Emergency # 134
Erase Memory 136
Lock Phone 133
Resetting Your Phone 136
Restriction 136
Voice Privacy 135

Self timer 86

Send key 16

Send pix messages 82

Settings 119

Call 129
Display 120
Security 133
Sound 125

Setup

Airplane Mode 137
Location 137

Silent mode

entering 22
exiting 22

Sound Settings 125

Alerts 128
Key Beep 127
Power On/Off 128
Ringer Type 126
Roam Ringer 129
Volume/Vibrate 125
Whisper Mode 129

Speakerphone Key 17

Speed Dialing 25

One-Touch Dialing 25
Three Touch Dialing 26
Two-Touch Dialing 26

Standard Limited Warranty

Standard Limited
Warranty 158

Standby mode 21

T

- Take pictures**
 - with flip open 82
- Taking pictures** 82
- Talk mode** 22
- Timer, camera** 86
- Tip, description** 8
- Tools** 101
 - Tools Menu 102

U

- Understanding Your Contacts** 51
 - Adding a New Contact Entry 52
 - Deleting a Contact Entry 63
 - Editing an Existing Contact Entry 59
 - Finding a Contact Entry 56
 - Memory 63
 - Pauses 53
- Understanding Your Phone** 12
 - Closed View of Your Phone 13
 - Command Keys 14, 15
 - Display Screen 17
 - Features of Your Phone 12

V

- Version** 138
- Vibrate mode** 22
- Voice Dialing** 26
- Voice Kit**
 - erase all memos 105
 - record memos 104
 - review and erase memos 105
- Voice Launch** 109
- Voice mail**
 - listening to 11
- Voice Memo** 104
- Voice Settings** 106

Voicemail 70

VoiceSignal

- About VoiceSignal 110
- Voice Memos 104

W

- Warranty Information** 157
- Web** 92

Z

- Zooming, pictures** 84

