

## EMERGENCY ALERT SYSTEM

### EAS Device Appendix – TFT

The following instructions provide minimum required setup and configuration to receive an Emergency Action Notification using the TFT EAS911, firmware V.87.2.EN or V.87.1.SP (Spanish). Please consult the manufacturer's user manual for detailed configuration instructions.



Go to: <http://www.tftinc.com/techsupport.html> for the product manual and EAS block diagrams.

#### Confirm Software Version:

- Press the <EXIT> key for 3-5 seconds and release.
- Note software version displayed in the LCD.
- If your TFT is running a software version different than the above-referenced software, these instructions may not apply.

#### Set Monitoring Sources:

- Set assigned monitoring stations per your State EAS Plan
- Use the J102 and J201 connections starting with Channel 1, then Channel 2, etc.

#### Set Call Letters:

- Select the Password Button located at the top left of the front panel
- Enter Primary Password (vendor default is 911) using the keypad adjacent and to the right of the Password Button
- Select Password Button again
- Enter Setup Password (vendor default is 912)
- Use ^ key to scroll up to Menu Item 6, "SET STATION IDENTIFICATION CODE"
- Select Enter in the upper right key group on the front panel
- Use ^ & v keys located to the immediate left of the Enter key on the front panel to enter station call sign
- Use Enter key to move to each call station character
- Select Exit immediately below the Enter key in the upper right key group on the front panel

#### Set Date & Time:

- Select Password Button
- Enter Primary Password (vendor default is 911)
- Select Password Button again
- Enter Setup Password (vendor default is 912)
- Use ^ key to scroll up to Menu Item 3, "DAYLIGHT SAVING?"
- Select Enter



**EMERGENCY  
ALERT  
SYSTEM**

## EAS Device Appendix – TFT (Continued)

- Select Enable or Disable
- Select Enter
- Use v key to scroll up to Menu Item 2, “SET STATION TIME ZONE”
- Select Enter in the upper right key group on the front panel
- Use ^ & v keys to adjust the UTC (Universal Time, Coordinated) offset the appropriate number of hours to reflect the proper Time Zone (+ values in the US)
- Select Enter
- Use v key to scroll up to Menu Item 1, “SET CURRENT DATE/TIME”
- Select Enter for Menu Item 1, “SET CURRENT DATE/TIME”
- Select Enter
- Use ^ & v keys to adjust month, day, year
- Select Enter to move to day and time fields
- Select Exit when complete
- Select Exit twice when complete (to back out entirely)

\*\* Performing the steps above in the prescribed order ensures the UTC Offset is set correctly, prior to setting the Time.

### Set Originator Code:

- Select Password Button
- Enter Primary Password (vendor default is 911)
- Select Password Button again
- Enter Setup Password (vendor default is 912)
- Use ^ key to scroll up to Menu Item 4, “SET STATION ORG CODE”
- Select Enter
- Use ^ & v keys to move up and down
- Use the Enter key to select the appropriate Org Code
- Select Exit when complete

### Set FIPS Code:

- Select Password Button
- Enter Primary Password (vendor default is 911)
- Select Password Button again
- Enter Setup Password (vendor default is 912)
- Use ^ key to scroll up to Menu Item 5, “SET STATION FIPS CODE”
- Select Enter
- Input FIPS code for the county/parish/area of the city of license using the numeric keypad (select Enter after each digit)
- Select Exit when complete