
INDOOR/OUTDOOR PRODUCTS KEROSENE PORTABLE FORCED AIR HEATERS "USER'S MANUAL AND OPERATING INSTRUCTIONS"

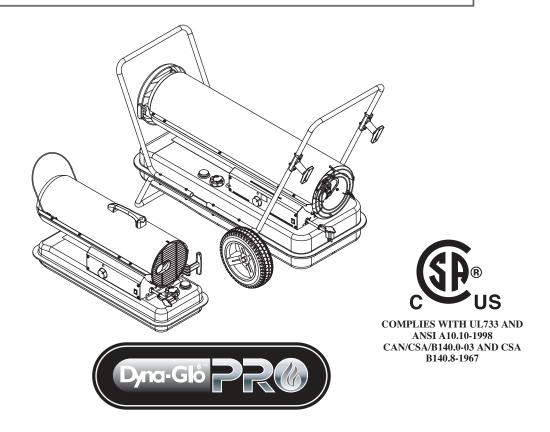

MODEL: KFA50H, KFA75H, KFA125H, KFA210H

Before the first use of this heater, please read this USER'S MANUAL very carefully. This USER'S MANUAL has been designed to instruct you as to the proper manner in which to assemble, maintain, store, and most importantly, how to operate the heater in a safe and efficient manner. Please keep this manual for future reference.

CONSUMER: Retain this manual for future reference.

Questions, problems, missing parts? Before returning to your retailer, call our customer service department at 877-447-4768 8:30 a.m. - 4:30 pm CST, Monday - Friday. or email us at customerservice@ghpgroupinc.com

DANGER: IMPROPER USE OF THIS HEATER CAN RESULT IN SERIOUS INJURY OR DEATH FROM BURNS, FIRE, EXPLOSION, ELECTRICAL SHOCK AND/OR CARBON MONOXIDE POISONING.

WARNINGS:

1. RISK OF INDOOR AIR POLLUTION!

- Use this heater only in well ventilated areas. Provide at least a three-square foot (2,800 sq. cm.) opening of fresh outside air for each 100,000 BTU/hr, of heater rating.
- People with breathing problems should consult a physician before using the heater.
- Carbon monoxide poisoning: Early signs of carbon monoxide poisoning resemble the flu, with headaches, dizziness and/or nausea. If you have these signs, the heater may not be working properly.

Get fresh air at once! Have the heater serviced. Some people are more affected by carbon monoxide than others. These include pregnant women, persons with heart or lung disease or anemia, those under the influence of alcohol, or those at high altitudes.

• Never use this heater in living or sleeping areas.

2. RISK OF BURNS/FIRE/EXPLOSION!

- NEVER use any fuel other than 1-K kerosene, #1 disel/fuel oil in this heater.
- **NEVER** use fuel such as gasoline, benzene, paint thinners or other oil compounds in this heater. (RISK OF FIRE OR EXPLOSION)
- **NEVER** use this heater where flammable vapors may be present.
- **NEVER** refill the heaters fuel tank while heater is operating or is still hot.

A CAUTION: Hot while in operation. Do not touch. Keep children, clothing and combustibles away from heater.

Minimum Clearances: Outlet: 8 feet (250cm) / Sides, top and rear: 4 feet (125cm)

- **NEVER** block air inlet (rear) or air outlet (front) of heater.
- NEVER use duct work in front or behind of heater.
- NEVER move, handle, service a hot, operating or plugged in heater.
- **NEVER** transport heater with fuel in it's tank.
- When used with an optional thermostat or if equipped with a thermostat heater may start at any time.
- ALWAYS locate heater on a stable and level surface.
- ALWAYS keep children and animals away from heater.
- Bulk fuel storage should be a minimum of 25 ft. from heaters, torches, portable generators or other sources of ignition. All fuel storage should be in accordance with federal, state or local authorities having jurisdiction.

3. RISK OF ELECTRIC SHOCK!

- Use only the electrical power (voltage and frequency) specified on the model plate of the heater.
- Use only a three-prong, grounded outlet and extension cord.
- ALWAYS install the heater so that it is not directly exposed to water spray, rain, dripping water or wind.
- ALWAYS unplug the heater when not in use.

PROPOSITION 65 WARNING: Fuels used in gas, wood-burning or oil fired appliances, and the products of combustion of such fuels, contain chemicals known to the State of California to cause cancer, birth defects and other reproductive harm.

MASSACHUSETTS RESIDENTS: Massachusetts state law prohibits the use of this heater in any building which is used in whole or in part for human habitation. Use of this heating device in Massachusetts requires local fire dept. permit (M.E.L.C. 148, Section 10A.)

CANADIAN RESIDENTS: Use of this heater shall be in accordance with authorities having jurisdiction and CSA Standard B139.

NEW YORK CITY RESIDENTS: For use only at construction sites in accordance with applicable NYC codes under NYCFD certificate of approval # 5034 and 5037.

CONTENTS OF USER'S MANUAL

ITE	E <u>M</u>	PAGE #
PR	ECAUTIONS - SAFETY GUIDE	1
1.	INTRODUCTION	2
2.	FEATURES	2
3.	UNPACKING AND ASSEMBLY	4
4.	KEROSENE (1-K OR NO. 1 FUEL OIL)	6
5.	OVERVIEW OF HEATER DESIGN	7
6.	FUELING YOUR HEATER	8
7.	OPERATION	8
	LONG TERM STORAGE OF YOUR HEATER	9
	MAINTENANCE	10
10.	REPLACING FUSE	14
	TROUBLE SHOOTING GUIDE	15
12.	WIRING DIAGRAM	16
13.	SPECIFICATIONS	17
14.	EXPLODED PARTS DRAWING	18&21
15	PARTS LIST	19 20&22 23

1. INTRODUCTION

Please read this USER'S MANUAL carefully. It will show you how to assemble, maintain, and operate the heater safely and efficiently to obtain full benefits from its many built-in features.

2. FEATURES

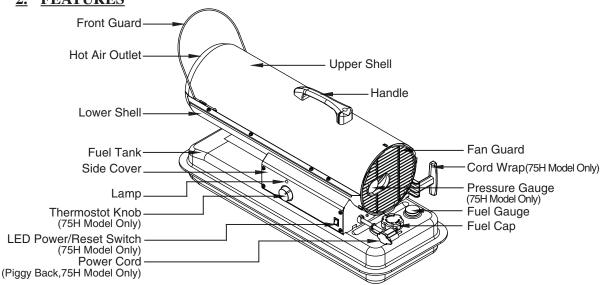


Figure 1. KFA50H / KFA75H MODELS

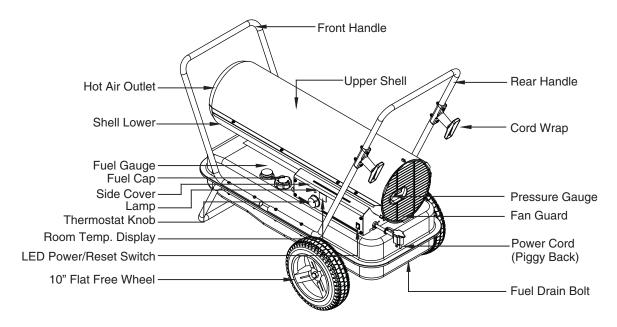


Figure 2. KFA125H MODEL

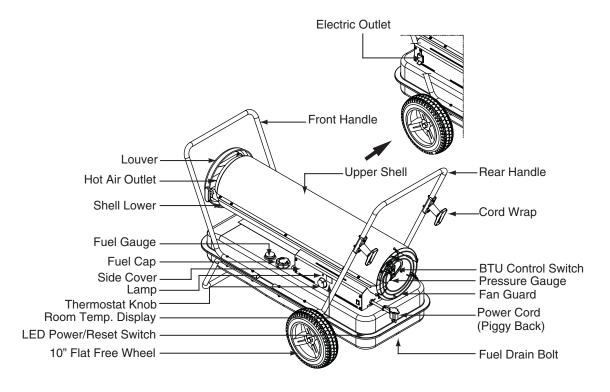


Figure 3. KFA210H MODEL

3. UNPACKING AND ASSEMBLY

1. REMOVE THE HEATER AND ALL PACKING MATERIALS FROM THE BOX. (Fig. 4 and 5)


NOTE: Save the shipping carton and packing materials for future storage.

	KFA50H	KFA75H	KFA125H	KFA210H
Wheel Support Frame	No	No	Yes	Yes
Wheel	No	No	Yes	Yes
Threaded Axle	No	No	Yes	Yes
Front Handle	No	No	Yes	Yes
Rear Handle	No	No	Yes	Yes
Handle	Yes	Yes	No	No
Cord Wrap	No	Yes	Yes	Yes
Hardware kit: HW-KFA1001	Yes	Yes	No	No
Hardware kit: HW-KFA1016	No	No	Yes	Yes

Figure 4. KFA50H / KFA75H MODELS



Figure 5. KFA125H/KFA210H MODELS

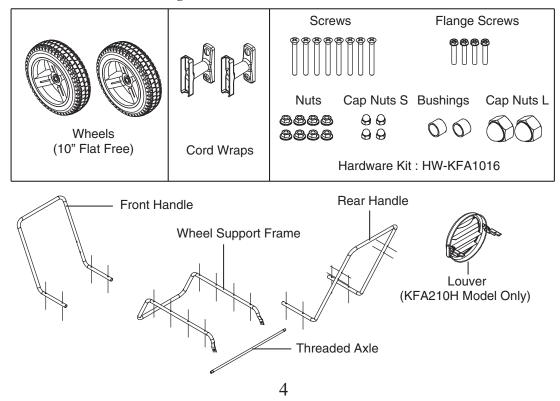

2. ASSEMBLY

For KFA50H/75H Models only

Tools Required

- Medium Phillips Screwdriver.
- 1. Assembling Handle & Cord Wrap
 - 1) Lift front guard for arrow direction and make sure that guard's wedged portion fits into the slit hole on the upper housing.
 - 2) Align the holes in the upper housing with ttwo mounting holes on the handle as shown in Figure 6.
 - 3) Secure handel with Screws with provided.
 - 4) Insert card wrap into the rectangle holes on the supportor and align the hole on the cord wrap with the mounting hole on the side cover as shown in Figure 6. (KFA75H Model only)
- 5) Secure cord wrap with Screws with provided. For KFA125H/210H Models only

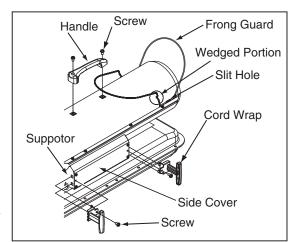


Figure 6. Assembling Handle & Cord Wrap

Tools Required

- Medium Phillips Screwdriver.
- 3/4 inch socket or adjustable wrench
- 1. Assembling Handle & Wheel and Cord Wrap
 - 1) Slide threaded axle through the rear section of the wheel support frane.
 - 2) Slide one axle bushing on to each side of the axle. Slide one wheel on to each side of the axle. Attach one cap nut on to each side of the threaded axle and tighten well.
 - 3) Place heater on wheel support frame. Align the holes on fuel tank flange with holes on wheel support frame.
 - 4) Position the Handles on top of fuel tank flange. Insert screws through handles, fuel tank flange and wheel support frames as shown in Figure 8 and attach nut finger tight after each screw is inserted.
 - 5) Align the hole on the handles with the mounting hole on the Cord Wrap.

 Insert Screws through Cord Wrap, handles and attach nut finger tight after each screw is inserted.
- 6) After all screws are inserted, tighten nuts firmly.

2. Assembling Louver (KFA210H Model only).

- 1) Remove two screw in each side fore-end of upper shell.
- 2) Fit Bracket-Right & Left to each side flange of upper shell and align the each hole on the brackets with the hole on the flanges(See Figure 7, Page 6).
- 3) Secure each hole with a screw that removed.

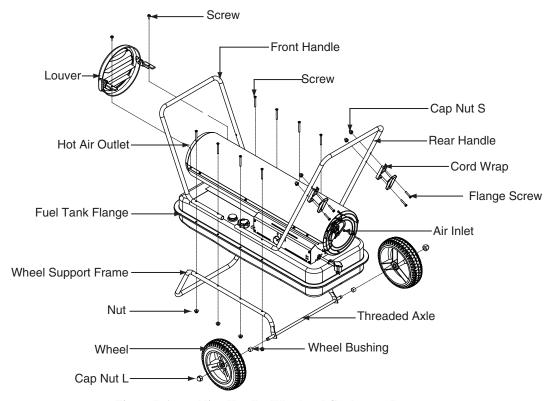


Figure 7. Assembling Handle, Wheel and Cord wrap, Louver

A CAUTION: DO NOT OPERATE heater without support frame assembled to tank.

NOTE: Heater should be inspected before each use, and at least annually by a qualitied service person.

4. KEROSENE (1-K)

For optimal performance of this heater, it is strongly suggested that 1-K kerosene be used. 1-K kerosene has been refined to virtually eliminate contaminants, such as sulpher. Which can cause a rotten egg odor during the operation of the heater. However, #1 diesel/fuel oil may also be used if 1-K kerosene is not available. Be advised that these fuels do not burn as clean as 1-K kerosene, and care should be taken to provide more fresh air ventilation to accommodate any added contaminants that may be added to the heated space.

KEROSENE SHOULD ONLY BE STORED IN A BLUE CONTAINER THAT IS CLEARLY MARKED "KEROSENE". NEVER STORE KEROSENE IN A RED CONTAINER.

Red containers are associated with gasoline.


- **NEVER** store kerosene in the living space. Kerosene should be stored in a well ventilated place outside the living area.
- **NEVER** use any fuel other than 1-K kerosene (#1 diesel and #1 oil are acceptable substitutes)
- **NEVER** use fuel such as gasoline, benzene, alcohol, white gas, camp stove fuel, paint thinners, or other oil compounds in this heater. These are volatile fuels that can cause an explosion or uncontrolled flames.
- **NEVER** store kerosene in direct sunlight or near a source of heat.
- **NEVER** use kerosene that has been stored from one season to the next. Kerosene deteriorates over time.

"OLD KEROSENE" WILL NOT BURN PROPERLY IN THIS HEATER.

5. OVERVIEW OF HEATERS DESIGN

Fuel System: This heater is equipped with an electric air pump that forces air through the air line connected to the fuel intake and then through a nozzle in the burner head.

When the air passes in front of the fuel intake it causes fuel to rise from the tank and into the burner nozzle. This fuel and air mixture is then sprayed into the combustion chamber in a fine mist.

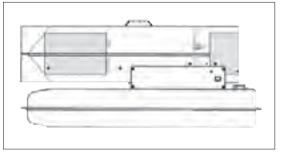

"Sure Fire Ignition": The electronic ignitor sends voltage to a specially designed spark plug.

The spark plug ignites the fuel and air mixture described above.

The Air System: The heavy duty motor turns a fan that forces air into and around the combustion chamber. Here the air is heated and then forced out the front of the heater.

The Safety System:

A. Temperature Limit Control: This heater is equipped with a Temperature Limit Control designed to turn off the heater should the internal temperature rise to an unsafe level. If this device activates and turns your heater off it may require service.

) toppy a	Internal Shut-Off Temp.	Reset Temperature
MODELS	Plus/Minus 10 Degrees	Plus/Minus 10 Degrees
KFA50H/75H	176°F/80°C	122°F/50°C
KFA125H	230°F/110°C	194°F/90°C
KFA210H	194°F/90°C	140°F/60°C

Once the temperature falls below the reset temperature you will be able to start your heater.

B. Electrical System Protection: This heaters electrical system is protected by a fuse mounted to the PCB assembly that protects it and other electrical components from damage.

If your heater fails to operate check this fuse first and replace as needed.

FUSE TYPE: All Models 125 volt / 8 amps	
--	--

<u>C. Flame-Out Sensor</u>: Utilizes a photocell to monitor the flame in burn chamber during normal operation. It will cause the heater to shut-off should the burner flame extinguish.

6. FUELING YOUR HEATER

NEVER FILL THE HEATER FUEL TANK IN THE LIVING SPACE : FILL THE TANK OUTDOORS. DO NOT OVERFILL YOUR HEATER AND BE SURE HEATER IS LEVELED.

IMPORTANT NOTICE REGARDING FIRST IGNITION OF HEATER:

The first time you light the heater, it should be done <u>outdoors</u>. This allows the oils, etc. used in manufacturing the heater to burn off outside.

A

WARNING!!: NEVER REFILL HEATER FUEL TANK WHEN HEATER IS OPERATING OR STILL HOT.

7. OPERATION

A.) VENTILATION

RISK OF INDOOR AIR POLLUTION/USE HEATER ONLY IN WELL VENTILATED AREAS.

Provide a fresh air opening of at least three square feet (2,800 sq. cm) for each 100,000 BTU/Hr. rating. Provide extra fresh air if more heaters are being used.

Example: A KFA210H heater requires one of the following:

- a two-car garage door raised six inches (15.24 cm)
- a single-car garage door raised nine inches (22.86 cm)
- two, thirty-inch (76.20 cm) windows raised fifteen inches (38.1 cm)

B.) OPERATION

TO START HEATER

- 1. Fill fuel tank with kerosene or No. 1 fuel oil.
- 2. Attach fuel cap.
- 3. Plug power cord of heater into three-prong, grounded extension cord. Extension cord must be at least six feet long. Extension Cord Wire Size Requirements
 - 6 to 100 feet (1.8 to 30.5 meters) long, use 16 AWG conductor.
 - 101 to 200 feet (30.8 to 61 meters) long, use 14 AWG conductor.
- 4. Turn "THERMOSTAT CONTROL Knob" to desired setting (Setting range : $40^{\circ}F \sim 110^{\circ}F$) (KFA75H/125H/210H Models Only)
- 5. Push "BTU control Switch" to desired level "High or LOW" (KFA210H Model only, See Figure 8).
- 6. Push Power Switch to "ON" position, Power Indicator Lamp will light and heater will start.

NOTE: Room Temperature display explanations are as follows: (KFA125H/210H Models only)

When the room temperature is less 0°F, the LED display will show "Lo"

When room temp is between 0°F and 99°F, the number shown on the display is the current room temperature.

When room temperature is greater than 99°F, the LED display will show "Hi"

If heater does not start, the thermostat setting may be too low, turn "thermostat Control Knob" to higher position to start heater. If heater still does not start, turn power switch to "OFF" and then to "ON" position. If heater still does not start, see Troubleshootiong Guide on page 15.

NOTE: User can Select to operate the heater on two different BTU levels(High or Low). The BTU level can be selected before turning the unit on, or while it is in operation by pushing the BTU control switch.

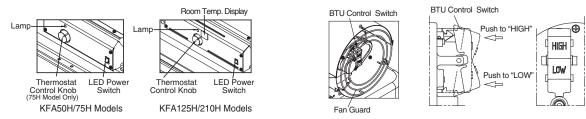


Figure 8. Controls for All Models

NOTICE: The major electrical components of this heater are protected by a safety fuse mounted to the PCB board. If your heater fails to start, check this fuse first and replace as necessary. You should also check your power source to insure that proper voltage and frequency are being supplied to the heater.

TO STOP HEATER

1. Turn switch to "OFF" and unplug power cord.

TO RESTART HEATER

- 1. Wait 10 seconds after stopping heater.
- 2. Repeat steps under to start heater.

EXTRA ELECTRIC OUTLET & PIGGYBACK POWER CORD

▲ WARNING : SHOCK HAZARD!

- Always cover electric outlet when not in use.
- Don't plug and use a appliance more than 120V/60Hz 5A current in this outlet

LOUVER(KFA210H Model Only)



CAUTION: RISK OF BURN

Louver is Extremely Hot in operation and after shut-off.

Never touch or control angle while operating or still Hot.

-Louver's angle can be controlled by turning handle in direction of arrow as shown in Figure 10. (Control range: Up 28'/Down 20')



Figure 9. Electric Outlet

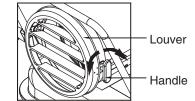


Figure 10. Louver Angle Control

8. LONG TERM STORAGE OF YOUR HEATER

FUEL TANK DRAIN

- 1. Drain fuel tank through fuel cap opening. (For KFA50H/75H Models Only)
- 2. Remove fuel drain bolt from rear bottom side of fuel tank using 3/4" socket or adjustable wrench and drain. (For KFA125H/210H Models Only. See Figure 11)
- 3. Using a small amount of kerosene, swirl and rinse the inside of the tank.

NEVER mix water with the kerosene as it will cause rust inside the tank.

Pour the kerosene out making sure that you remove it all.

IMPORTANT: Do not store kerosene over summer months for use during next heating season. Using old fuel could damage heater.

- 4. Reinstall fuel cap. Properly dispose of old and dirty fuel. (For KFA50H/75H Models Only)
- 5. Reinstall Fuel Drain Bolt to Fuel tank and tighten firmly using 3/4" socket or adjustable wrench. (For KFA125H/210H Models Only. See Figure 11)

IMPORTANT: Before reinstalling the fuel drain bolt, make sure the seal is on the bolt. If the seal is not used the bolt cannot be installed correctly and the fuel tank will leak.

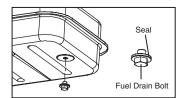


Figure 11. Drain Bolt

- 6. Store heater in dry well ventilated area. Make sure storage place is free of dust and corrosive fumes.
- 7. Store the heater in the original box with the original packing material and keep the <u>USER'S MANUAL</u> with the heater.

9. MAINTENANCE

<u>WARNING!! : NEVER SERVICE HEATER WHILE IT IS PLUGGED IN OR</u> WHILE HOT!

USE ORIGINAL EQUIPMENT REPLACEMENT PARTS. Use of third party or other alternate components will void warranty and may cause unsafe operating conditions.

A.) FUEL TANK

FLUSH EVERY 200 HOURS OF OPERATION OR AS NEEDED (SEE STORAGE, PAGE 9)

B.) AIR INTAKE FILTER

WASH AND DRY WITH SOAP AND WATER EVERY 500 HOURS OF OPERATION OR AS NEEDED.

- Remove screws along each side of heater using medium Phillips screwdriver.
- Lift upper shell off.
- Remove fan guard.
- Wash or replace air intake filter.
- Reinstall fan guard and upper shell.



REPLACE EVERY 500 HOURS OF OPERATION OR ONCE A YEAR.

- Remove upper shell and fan guard (See Air Intake Filter).
- Turn Air pressure gauge counter-clock wise and remove.
- Remove end filter cover screws using medium Phillips screwdriver.
- Remove end filter cover.
- Replace air output and lint filter.
- Reinstall end filter cover and air pressure gauge.
- Reinstall fan guard and upper shell.

D.) FAN BLADES

CLEAN EVERY SEASON OR AS NEEDED.

- Remove upper shell (See Air Intake Filter).
- Use M6 Allen wrench to loosen set screw which holds fan blade to motor shaft.
- Slip fan blade off motor shaft.
- Clean fan blade using a soft cloth moistened with kerosene or solvent.
- Dry fan blade thoroughly.
- Reinstall fan blade on motor shaft. Place fan blade hub flush with end of motor shaft.
- Place set screw on flat of shaft. Tighten set screw firmly (40-50 inch-pounds/4.5-5.6 N-m).
- Reinstall upper shell.

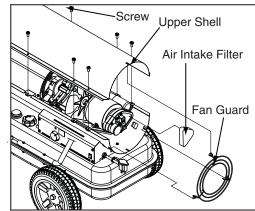


Figure 12. Air Intake Filter Access

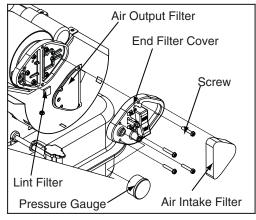


Figure 13. Air Output Filter Access

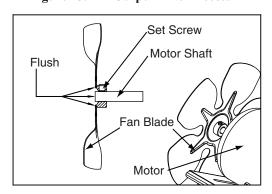


Figure 14. Fan Assembly

10

E.) NOZZLE

REMOVE DIRT IN NOZZLE AS NEEDED (SEE PAGE 16). (For KFA50H/75H/125H Models Only)

- Remove upper shell (See page 10).
- Remove fan blade (See page 10).
- Remove fuel and air line hoses from nozzle adaptor.
- Remove ignitor wire from spark plug.
- Remove spark plug from nozzle adaptor using medium phillips screwdriver.
- Turn nozzle adaptor 1/9 turn(40°) to counter clock wise and pull toward motor to remove. (See Figure 15)
- Place plastic hex-body into vise and lightlry tighten.
- Carefully remove nozzle from nozzle adaptor using 5/8" socket wrench.
- Blow compressed air through face of nozzle. (this will remove any dirt in nozzle)
- Reinstall nozzle into nozzle adaptor until nozzle seats. Tighten 1/3 turn more using 5/8" socket wrench. (40~45 inch-pounds)
- Reinstall nozzle adaptor to burner head.
- Reinstall spark plug to nozzle adaptor.
- Attach ignitor wire to spark plug.
- Attach fuel and air line hoses to nozzle adaptor.
- Reinstall fan blade and upper shell.

(For KFA210H Model Only)

- Remove upper shell (See page 10).
- Remove fan (See page 10).
- Remove fuel and air line hoses from nozzle adaptor.
- Remove ignitor wire from spark plug.
- Remove spark plug from nozzle adaptor using medium phillips screwdriver.
- Turn nozzle adaptor 1/8 turn (45°) to counter clock wise and pull toward motor to remove. (See Figure 16)
- Place plastic hex-body into vise and lightly tighten.
- Carefully remove nozzle from nozzle adaptor using 5/8" socket wrench.
- Blow compressed air through face of nozzle. (this will remove any dirt in nozzle)
- Reinstall nozzle into nozzle adaptor until nozzle seats Tighten 1/3 turn more using 5/8" socket wrench (40~45 inch-pounds)
- Reinstall nozzle adaptor to burner bracket
- Reinstall spark plug to nozzle adaptor.
- Attach ignitor wire to spark plug.
- Attach fuel and air line hoses to nozzle adaptor.
- Reinstall fan blade and upper shell.

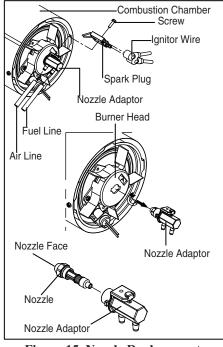


Figure 15. Nozzle Replacement

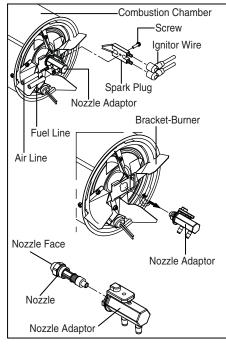


Figure 16. Nozzle Replacement

F.) SPARK PLUG

CLEAN AND REGAP EVERY 600 HOURS OPERATION OR REPLACE AS NEEDED. (For KFA50H/75H/125H Models Only)

- Remove upper shell (See page 10).
- Remove fan (See page 10).
- Remove ignitor wire from spark plug.
- Remove spark plug from nozzle adaptor using medium phillips screwdriver.
- Clean and regap spark plug electrodes to 3.5mm gap. (0.138")
- Reinstall spark plug to nozzle adaptor.
- Attach ignitor wire to spark plug.
- Reinstall fan and upper shell. (For KFA210H Model Only)
- Remove upper shell (See page 10).
- Remove fan (See page 10).
- Remove ignitor wire from nozzle adaptor.
- Remove spark plug from nozzle adaptor using medium phillips screwdriver.
- Clean and regap spark plug electrodes to 3.5mm gap. (0.138")
- ReInstall spark plug to nozzle adaptor.
- Attach ignitor wire to spark plug.
- Reinstall fan and upper shell.

CLEAN PHOTOCELL ANNUALLY OR AS NEEDED.

- Remove upper shell (See page 10).
- Remove fan (See page 10).
- Remove photocell from it's mounting. Clean photocell lens with cotton swab.

TO REPLACE:

- Remove side cover screws using medium phillips screwdriver.
- Disconnect switch wires from power switch and remove side cover.
- Disconnect wires from circuit board and remove photocell.
- Install new photocell and connect wires to circuit board.
- Replace switch wires to power switch and side cover.
- Replace fan and upper shell.

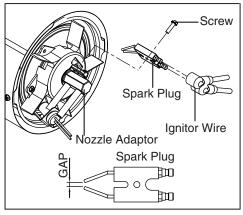


Figure 17. Spark Plug Regap

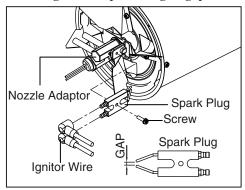


Figure 18. Spark Plug Regap

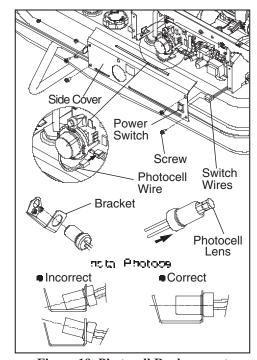


Figure 19. Photocell Replacement

H.) FUEL FILTER

CLEAN OR REPLACE TWICE A HEATING SEASON OR AS NEED.

- Remove side cover screws using medium phillips screwdriver.
- Disconnect switch wires from power switch and remove side cover.
- Pull fuel line off fuel filter neck.
- Turn fuel filter 90° to counter clockwise and pull to remove. (KFA50H/75H Models only)
- Turn fuel filter 90° to clockwise and pull to remove (KFA125H/210H Models only)
- Wash fuel filter with clean fuel and replace in tank.
- Attach fuel line to fuel filter neck.
- Replace switch wires to power switch.
- Reinstall side cover.

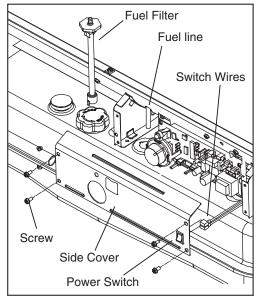


Figure 20. Fuel Filter Replacement

I.) PUMP PRESSURE ADJUSTMENT

NOTE: If the pump pressure needs to be adjusted, make sure the heater is running on the HIGH BTU setting.

- Push the BTU CONTROL Switch to HIGH. (See Operation, page 8, KFA210H Model only)
- Remove Pressure Gauge Plug from End Filter Cover. Install accessory Pressure Gauge. (KFA50H Model only)
- Start heater (See Operation, page 8) Allow motor to reach full speed
- Adjust pressure (Using a flat blade screwdriver) Turn relief valve to clockwise to increase pressure. Turn relief valve to counter clockwise to decreasepressure.
- Stop heater (See Operation, page 8)

MODEL	Pump Pressure		
WIODEL	High BTU level	Low BTU level	
KFA50H	3.8 psi	N/A	
KFA75H	3.8 psi	N/A	
KFA125H	5.5 psi	N/A	
KFA210H	8.5 psi	6.5 psi	

NOTE: USE ONLY ORIGINAL EQUIPMENT REPLACEMENT PARTS.

Use of alternate or third party components will void any warranty and may cause unsafe operating condition.

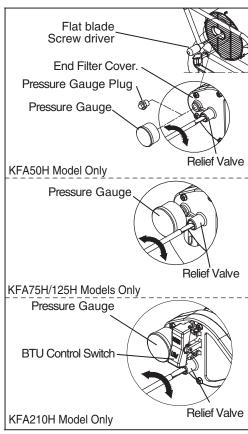


Figure 21. Adjusting Pump Pressure

10. REPLACING FUSE

NOTICE: This heater is fuse protected.

If your heater fails to ignite, **DO NOT RETURN YOUR HEATER TO THE** STORE.

Please follow the simple instruction below to inspect and change the fuse.

PROCEDURE FOR REPLACING FUSE

A WARNING: SHOCK HAZARD

To prevent personal injury, unplug the power cord before replacing fuse.

- 1. Unplug heater.
- 2. Remove side cover screws using medium phillips screw driver.
- 3. Disconnect switch wires from power switch.
- 4. Remove fuse from fuse holder.(See Figure 22.)
- 5. Replace fuse with enclosed fuse.

A WARNING: FIRE HAZARD

To avoid fire, Do not substitute with a higher or lower current rating.

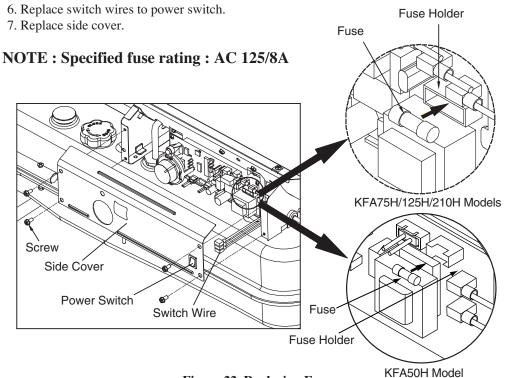



Figure 22. Replacing Fuse

11. TROUBLE SHOOTING GUIDE


TROUBLE	POSSIBLE CAUSE	CORRECTIVE ACTION
Heater ignites but MAIN PCB assembly shuts heater off after a short period of time. (Indicator Lamp is flickering and room temp. display indicates " E1 ")	1. Wrong pump pressure 2. Dirty Air Output,Air Intake or Lint Filter. 3. Dirty Fuel Filter. 4. Dirt in Nozzle. 5. Dirty Photocell Lens. 6. Photocell Assembly not Properly installed.(Not seeing the flame) 7. Bad electrical connection between photocell and MAIN PCB assembly. 8. Defective Photocell.	 See Pump Pressure Adjustment, Page 13. See Air Output, Air intake and Lint Filters, page 10. See Fuel Filter, Page 13. See Nozzle, Page 11. Clean Photocell Lens, Page 12. Make sure photocell boot is properly seated in bracket, Page 12. Check electrical components See wiring diagram, Page 16. Replace Photocell, Page 12.
Heater will not ignite but motor runs for a short period of time.(Indicator Lamp is flickering and room temp.display indicates " E1 ")	 No fuel in tank. Wrong pump pressure. Carbon deposits on spark plug and/or improper gap. Dirty fuel filter. Dirt in Nozzle. Water in fuel tank. Bad electrical connection between ignitor and MAIN PCB assembly. Ignition wire is not attached to spark plug. 	 Fill tank with kerosene. See Pump Pressure Adjustment, Page 13. See Spark Plug, Page 12. See Fuel Filter, Page 13. See Nozzle, Page 11. Flush fuel tank with clean kerosene, Page 9. Check electrical components See wiring diagram, Page 16. Attach ignition wire to spark plug. See Spark Plug, Page 12.
Fan does not turn when heater is plugged in and power switch was in the "ON" Position. (Indicator Lamp is on or flickering)	Thermostat setting is too low. Bad electrical connection between motor and MAIN PCB assembly.	Turn thermostat control knob to a higher setting. Check electrical connections, See Wiring Diagram, Page 16.
(Indicator Lamp is flickering and room temp. display indicates "E2") (Indicator Lamp is flickering and room temp. display indicates "E3")	Room Temp. sensor disconnected. Sensor Failure. Thermostat switch failure.	Reconnect sensor. See Wiring diagram, Page 16. Replace sensor. See Wiring diagram, Page 16. Replace switch. See Wiring diagram, Page 16.
Heater will not turn-on (Indicator Lamp is off)	Temperature limit safety device is overheated. No electrical power Blown fuse. Bad electrical connection between temperature limit safety device and PCB board.	Turn power switch to "OFF" and allow to cool (about 10 min.) Check to insure heater cord and extension cord are plugged in. Check power supply. Replace safety fuse in PCB board. Check electrical connections See Wiring Diagram, Page 16.

12. WIRING DIAGRAM


A) WIRING DIAGRAM (KFA50H Model)

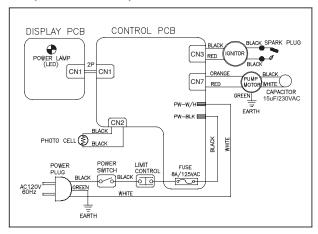


B) WIRING DIAGRAM (KFA75H/125H Models)

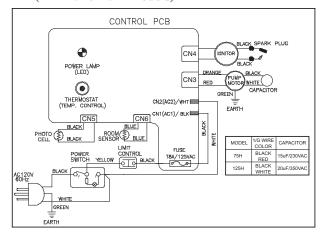


C) WIRING DIAGRAM (KFA210H Model)

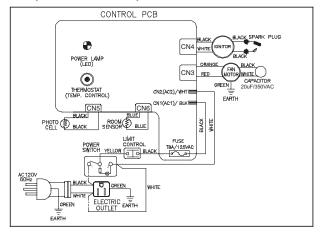



13. SPECIFICATIONS

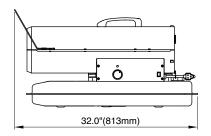

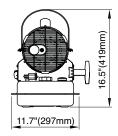

KFA50H / KFA75H Models

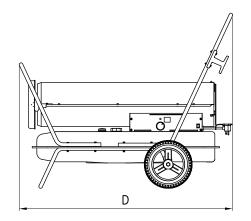

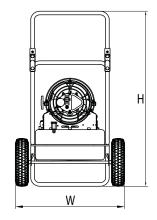


	KFA125H	KFA210H
D	38.4"(976 📆)	44.6"(1,132=1)
W	21.5"(547 👊)	23.1"(587 🖦)
Н	35.5"(902 📆)	36.6"(929 🖦)

KFA125H / KFA210H Models

MODEL		KFA50H	KFA75H	KFA125H	KFA210H
DTII/II.	HIGH	50,000	75,000	125,000	210,000
BTU/Hr.	LOW	N/A	N/A	N/A	170,000
Fuel Consumption	HIGH	0.38(1.44)	0.57(2.16)	0.95(3.60)	1.60(6.06)
- Gal./Hr(¿./Hr)	LOW	N/A	N/A	N/A	1.30(4.92)
Fuel Tank Capacity - Gal.(1)		5.0(18.9)	5.0(18.9)	10.0(37.9)	13.0(49.2)
Pump Pressure PSI(kgf/cm²)	HIGH	3.8(0.27)	3.8(0.27)	5.5(0.39)	8.5(0.60)
Tump Tressure Tor(Kg)/cm/	LOW	N/A	N/A	N/A	6.5(0.46)
Volt/Hz		120Vac/60Hz	120Vac/60Hz	120Vac/60Hz	120Vac/60Hz
Amps.		1.6	1.6	2.5	3.7
Phase		1	1	1	1
Size(D×W×H), Inch(mm)		32.0×11.7×16.7 (813×297×424)	32.0×11.7×16.7 (813×297×424)	38.4×21.5×35.5 (976×547×902)	44.6×23.1×36.6 (1,132×587×929)
Weight Lbs.(kg)		26.9(12.2)	26.9(12.2)	54.5(24.7)	63.3(28.7)

14. EXPLODED PARTS DRAWING (KFA50H/75H/125H Models Only)

NOTE: SPECIFY MODEL NUMBER AND PART NUMBER WHEN ORDERING PARTS.

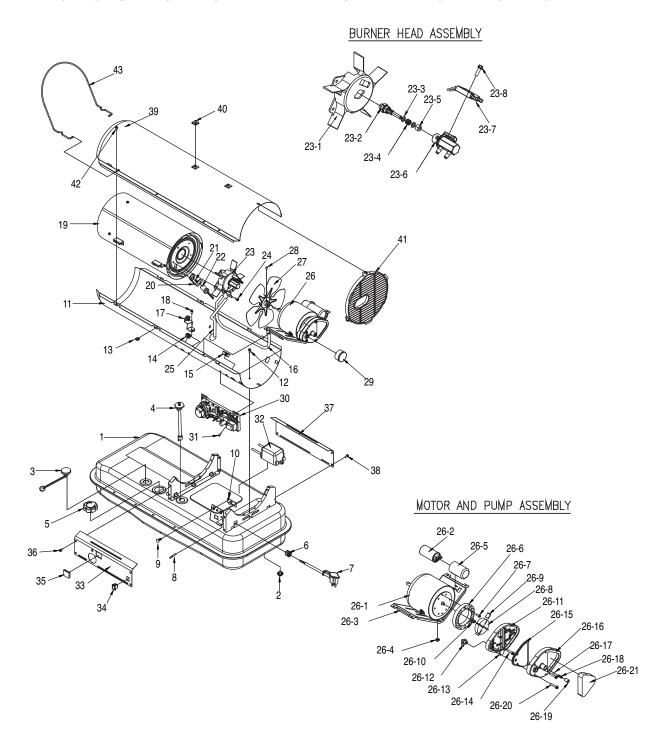

15. PARTS LIST (KFA50H/75H/125H Models Only)

		PART NO.			0
KEY NO.	DESCRIPTION	KFA50H	KFA75H	KFA125H	Quantity
1	Fuel Tank Assmebly	2151-0026-00	2151-0027-00	2151-0028-00	1
2	Fuel Drain-Bolt	-	-	4329-0072-00	1
3	Fuel Gauge	2156-0047-00	2156-0049-00	2156-0050-00	1
4	Fuel Filter Assmbly	2155-0005-00	2155-0005-00	2155-0001-00	1
5	Fuel Cap	2151-0003-00	2151-0003-00	2151-0003-00	1
6	Cord Bushing	3712-0013-00	3712-0013-00	3712-0013-00	1
7	Power Cord	3980-0031-00	3980-0177-00	3980-0177-00	1
8	Thermistor	38C0-0054-00	38C0-0054-00	38C0-0054-00	1
9	Button Support	3713-0048-00	-	-	2
10	Display P.C.B Assembly	215A-0013-00	-	-	1
11	Shell Lower	3111-0343-03	3111-0343-03	3111-0344-03	1
12	Flange Screw	4319-0015-00	4319-0015-00	4319-0015-00	4
13	Clip Nut	3131-0182-00	3131-0182-00	3131-0182-00	8
14	Bushing-Grommet(S)	3231-0120-00	3231-0120-00	3231-0120-00	1
15	Bushing-Grommet(L)	3231-0121-00	3231-0121-00	3231-0121-00	1
16	Air-Line	3341-0021-00	3341-0021-00	3341-0002-00	1
17	Temperature Limit Assembly	2153-0022-00	2153-0022-00	2153-0023-00	1
18	Flange-Screw	4319-0015-00	4319-0015-00	4319-0015-00	1
19	Chamber Assembly	2152-0115-00	2152-0116-00	2152-0117-00	1
20	Bracket Photocell	3131-0159-00	3131-0159-00	3131-0159-00	1
21	Screw-BH1	4311-0068-00	4311-0068-00	4311-0068-00	1
22	Photocell Assembly	*SP-KFA1007	*SP-KFA1007	*SP-KFA1007	1
23	Burner Head Assembly	2152-0120-00	2152-0121-00	2152-0122-00	1
23-1	Burner Head	3531-0026-00	3531-0026-00	3531-0025-00	1
23-2	Nozzle	*SP-KFA1026	*SP-KFA1027	*SP-KFA1003	1
23-3	Washer-Nozzle Seal	4349-0016-00	4349-0016-00	4349-0016-00	2
23-4	Spring-Nozzle Seal	3431-0010-00	3431-0010-00	3431-0010-00	1
23-5	O-Ring	3311-0002-00	3311-0002-00	3311-0002-00	1
23-6	Nozzle Adaptor	3231-0178-00	3231-0178-00	3231-0179-00	1
23-7	Spark Plug	*SP-KFA1008	*SP-KFA1008	*SP-KFA1009	1
23-8	Bolt-Flange	4329-0079-00	4329-0079-00	4329-0079-00	1
24	Flange Screw	4319-0015-00	4319-0015-00	4319-0015-00	3
25	Fuel Line	3341-0024-00	3341-0024-00	3341-0025-00	1
26	Motor and Pump Assembly	2154-0078-00	2154-0078-00	2154-0079-00	1
26-1	Motor	3970-0210-00	3970-0210-00	3970-0211-00	1
26-2	Capacitor	3820-0257-00	3820-0257-00	3820-0258-00	1
26-3	Motor Support	3121-0481-00	3121-0481-00	3121-0482-00	1
26-4	Nut-Hex	4331-0022-00	4331-0022-00	4331-0022-00	2
26-5	Holder Capacitor	-	-	3231-0182-00	1
26-6	Pump Body	3541-0022-00	3541-0022-00	3541-0022-00	1
26-7	Bolt-BH Special	4321-0198-00	4321-0198-00	4321-0198-00	2

15. PARTS LIST (KFA50H/75H/125H Models Only)

WEWNIC	PART NO.				
KEY NO.	DESCRIPTION	KFA50H	KFA75H	KFA125H	Quantity
26-8	Rotor	See SP-KFA1000 ¹	See SP-KFA1000 ¹	See SP-KFA1000 ¹	1
26-9	Blade	See SP-KFA1000 ¹	See SP-KFA1000 ¹	See SP-KFA1000 ¹	4
26-10	Insert	See SP-KFA1000 ¹	See SP-KFA1000 ¹	See SP-KFA1000 ¹	1
26-11	End Pump Cover	3531-0027-00	3531-0027-00	3531-0027-00	1
26-12	Elbow	3231-0181-00	3231-0181-00	3231-0181-00	1
26-13	Lint Filter	See SP-KFA1005 ²	See SP-KFA1005 ²	See SP-KFA1005 ²	1
26-14	Bolt Flange	4329-0016-00	4329-0016-00	4329-0016-00	6
26-15	Output Filter	See SP-KFA1005 ²	See SP-KFA1005 ²	See SP-KFA1005 ²	1
26-16	End Filter Cover	3221-0029-00	3221-0029-00	3221-0029-00	1
26-17	Ball	See SP-KFA1006 ³	See SP-KFA1006 ³	See SP-KFA1006 ³	1
26-18	Spring	See SP-KFA1006 ³	See SP-KFA1006 ³	See SP-KFA1006 ³	1
26-19	Adjusting Screw	See SP-KFA1006 ³	See SP-KFA1006 ³	See SP-KFA1006 ³	1
26-20	Bolt Flange	4329-0016-00	4329-0016-00	4329-0016-00	4
26-21	Intake Filter	See SP-KFA1005 ²	See SP-KFA1005 ²	See SP-KFA1005 ²	1
27	Fan Assembly	2154-0009-00	2154-0009-00	2154-0004-00	1
28	Bolt Headless Hex Socket	4323-0004-00	4323-0004-00	4323-0004-00	1
29	Pressure Gauge	-	3740-0049-00	3740-0049-00	1
30	Main P.C.B Assembly	215A-0048-00	215A-0046-00	215A-0047-00	1
31	Screw-TH2S	4312-0046-00	4312-0046-00	4312-0046-00	2
32	Ignitor	39E0-0008-00	39E0-0008-00	39E0-0005-00	1
33	Side Cover-Right	3121-0496-00	3121-0497-01	3121-0498-01	1
34	Power Switch	39A0-0191-00	39A0-0191-00	39A0-0191-00	1
35	Window Display	-	-	3231-0113-00	1
36	Flange Screw	4319-0015-00	4319-0015-00	4319-0015-00	4
37	Side Cover-Left	3121-0190-00	3121-0350-00	3121-0352-00	1
38	Flange Screw	4319-0015-00	4319-0015-00	4319-0015-00	4
39	Shell Upper	3111-0347-03	3111-0347-03	3111-0348-03	1
40	Clip Nut	3131-0182-00	3131-0182-00	-	2
41	Fan Guard	3221-0050-00	3221-0050-00	3221-0051-00	1
42	Flange Screw	4319-0015-00	4319-0015-00	4319-0015-00	8
43	Front Guard	3561-0066-00	3561-0066-00	-	1

KEY NO.	DESCRIPTION	KFA50H	KFA75H	KFA125H	Quantity
1	Rotor kit	SP-KFA1000	SP-KFA1000	SP-KFA1000	1
2	Filter kit	SP-KFA1005	SP-KFA1005	SP-KFA1005	1
3	Plug/Pump adjuster kit	SP-KFA1006	SP-KFA1006	SP-KFA1006	1

FOR TECHNICAL ASSISTANCE SEE YOUR LOCAL RETAILER OR CONTACT US AT:

Phone: 1-877-447-4768

14. EXPLODED PARTS DRAWING (KFA 210H Model Only)

NOTE: SPECIFY MODEL NUMBER AND PART NUMBER WHEN ORDERING PARTS.

BURNER HEAD ASSEMBLY 21-6 17 MOTOR AND PUMP ASSEMBLY 24-8 24-11 24-15 24-3 24-4 24-10 24-12 / 24-13 24-14 24-20 24-19

15. PARTS LIST (KFA210H Model Only)

VEVNO	DESCRIPTION	PART NO.	Quantity
KEY NO.	DESCRIPTION	KFA210H	Quantity
1	Fuel Tank Assmebly	2151-0029-00	1
2	Fuel Drain-Bolt	4329-0072-00	1
3	Fuel Gauge	2156-0052-00	1
4	Fuel Filter Assmbly	2155-0001-00	1
5	Fuel Cap	2151-0003-00	1
6	Cord Bushing	3712-0013-00	1
7	Power Cord	3980-0179-00	1
8	Thermistor	38C0-0054-00	1
9	Shell Lower	3111-0351-01	1
10	Flange Screw	4319-0015-00	4
11	Clip Nut	3131-0182-00	8
12	Bushing-Grommet(S)	3231-0120-00	1
13	Bushing-Grommet(L)	3231-0121-00	1
14	Air-Line	3341-0002-00	1
15	Temperature Limit Assembly	2153-0024-00	1
16	Flange-Screw	4319-0015-00	1
17	Chamber Assembly	2152-0119-00	1
18	Bracket Photocell	3131-0159-00	1
19	Screw-BH1	4311-0068-00	2
20	Photocell Assembly	*SP-KFA1007	1
21	Burner Head Assembly	2152-0124-00	1
21-1	Bracket Burner	3121-0477-00	1
21-2	Nozzle	*SP-KFA1011	1
21-3	Washer-Nozzle Seal	4349-0016-00	1
21-4	Spring-Nozzle Seal	3431-0010-00	1
21-5	O-Ring	3311-0002-00	1
21-6	Nozzle Adaptor	3231-0180-00	1
21-7	Spark Plug	*SP-KFA1021	1
21-8	Bolt-Flange	4329-0079-00	1
22	Flange Screw	4319-0015-00	4
23	Fuel Line	3341-0019-00	1
24	Motor and Pump Assembly	2154-0077-00	1
24-1	Motor	3970-0213-00	1
24-2	Capacitor	3820-0258-00	1
24-3	Supportor Motor	3121-0482-00	1
24-4	Nut-Hex	4331-0022-00	2
24-5	Holder Capacitor	3231-0180-00	1
24-6	Pump Body	3541-0050-00	1
24-7	Bolt-BH Special	4321-0198-00	2
24-8	Rotor	See SP-KFA1022 ¹	1
24-9	Blade	See SP-KFA1022 ¹	4
24-10	Insert	See SP-KFA1022 ¹	1
24-11	End Pump Cover	3531-0027-00	1

15. PARTS LIST (KFA210H Model Only)

Company Comp	TABLE 10	DEGCO POTANA	PART NO.	0
24-13 Lint Filter See SP-KFA1005² 1 24-14 Bolt Flange 4329-0016-00 6 24-15 Output Filter See SP-KFA1005² 1 24-16 End Filter Cover 3221-0076-00 1 24-17 Ball See SP-KFA1010³ 2 24-18 Spring See SP-KFA1010³ 2 24-19 Adjusting Screw See SP-KFA1010³ 2 24-20 Bolt Flange 4329-0016-00 4 24-21 Intake Filter See SP-KFA1005² 1 25 Fan Assembly 2154-0007-00 1 26 Bolt Headless Hex Socket 4323-0004-00 1 27 Pressure Gauge 3740-0049-00 1 28 BTU Control Switch 2154-0070-00 1 29 Main P.C.B Assembly 215A-0047-00 1 30 Screw-TH2S 4312-0046-00 2 31 Ignitor 39E0-0014-00 1 32 Side Cover-Right 3121-0499-01	KEY NO.	DESCRIPTION	KFA210H	Quantity
24-14 Bolt Flange 4329-0016-00 6 24-15 Output Filter See SP-KFA1005² 1 24-16 End Filter Cover 3221-0076-00 1 24-17 Ball See SP-KFA1010³ 2 24-18 Spring See SP-KFA1010³ 2 24-19 Adjusting Screw See SP-KFA1010³ 2 24-20 Bolt Flange 4329-0016-00 4 24-21 Intake Filter See SP-KFA1005² 1 25 Fan Assembly 2154-0007-00 1 26 Bolt Headless Hex Socket 4323-0004-00 1 27 Pressure Gauge 3740-0049-00 1 28 BTU Control Switch 2154-0007-00 1 29 Main P.C.B Assembly 2154-0070-00 1 30 Screw-TH2S 4312-0046-00 2 31 Ignitor 39E0-0014-00 1 32 Side Cover-Right 3121-0499-01 1 33 Power Switch 39A0-019-00	24-12	Elbow	3231-0181-00	1
24-15 Output Filter See SP-KFA1005² 1 24-16 End Filter Cover 3221-0076-00 1 24-17 Ball See SP-KFA1010³ 2 24-18 Spring See SP-KFA1010³ 2 24-19 Adjusting Screw See SP-KFA1010³ 2 24-20 Bolt Flange 4329-0016-00 4 24-21 Intake Filter See SP-KFA1005² 1 25 Fan Assembly 2154-0007-00 1 26 Bolt Headless Hex Socket 4323-0004-00 1 27 Pressure Gauge 3740-0049-00 1 28 BTU Control Switch 2154-0070-00 1 29 Main P.C.B Assembly 215A-0047-00 1 30 Screw-TH2S 4312-0046-00 2 31 Ignitor 39E0-0014-00 1 32 Side Cover-Right 3121-0499-01 1 33 Power Switch 39A0-0191-00 1 34 Window Display 3231-0113-00 <td< td=""><td>24-13</td><td>Lint Filter</td><td colspan="2">See SP-KFA1005² 1</td></td<>	24-13	Lint Filter	See SP-KFA1005 ² 1	
24-16 End Filter Cover 3221-0076-00 1 24-17 Ball See SP-KFA1010³ 2 24-18 Spring See SP-KFA1010³ 2 24-19 Adjusting Screw See SP-KFA1010³ 2 24-20 Bolt Flange 4329-0016-00 4 24-21 Intake Filter See SP-KFA1005² 1 25 Fan Assembly 2154-0007-00 1 26 Bolt Headless Hex Socket 4323-0004-00 1 27 Pressure Gauge 3740-0049-00 1 28 BTU Control Switch 2154-0070-00 1 29 Main P.C.B Assembly 215A-0047-00 1 30 Screw-TH2S 4312-0046-00 2 31 Ignitor 39E0-0014-00 1 32 Side Cover-Right 3121-0499-01 1 33 Power Switch 39A0-0191-00 1 34 Window Display 3231-0113-00 1 35 Flange Screw 4319-0015-00 4	24-14	Bolt Flange	4329-0016-00	6
24-17 Ball See SP-KFA1010³ 2 24-18 Spring See SP-KFA1010³ 2 24-19 Adjusting Screw See SP-KFA1010³ 2 24-20 Bolt Flange 4329-0016-00 4 24-21 Intake Filter See SP-KFA1005² 1 25 Fan Assembly 2154-0007-00 1 26 Bolt Headless Hex Socket 4323-0004-00 1 27 Pressure Gauge 3740-0049-00 1 28 BTU Control Switch 2154-0070-00 1 29 Main P.C.B Assembly 215A-0047-00 1 30 Screw-TH2S 4312-0046-00 2 31 Ignitor 39E0-0014-00 1 32 Side Cover-Right 3121-0499-01 1 33 Power Switch 39A0-0191-00 1 34 Window Display 3231-0113-00 1 35 Flange Screw 4319-0015-00 4 36 Side Cover-Left 3121-0329-00 1	24-15	Output Filter	See SP-KFA1005 ²	1
24-18 Spring See SP-KFA1010³ 2 24-19 Adjusting Screw See SP-KFA1010³ 2 24-20 Bolt Flange 4329-0016-00 4 24-21 Intake Filter See SP-KFA1005² 1 25 Fan Assembly 2154-0007-00 1 26 Bolt Headless Hex Socket 4323-0004-00 1 27 Pressure Gauge 3740-0049-00 1 28 BTU Control Switch 2154-0070-00 1 29 Main P.C.B Assembly 215A-0047-00 1 30 Screw-TH2S 4312-0046-00 2 31 Ignitor 39E0-0014-00 1 32 Side Cover-Right 3121-0499-01 1 33 Power Switch 39A0-0191-00 1 34 Window Display 3231-0113-00 1 35 Flange Screw 4319-0015-00 4 36 Side Cover-Left 3121-0329-00 1 37 Electirc Outlet Assembly 39D0-0263-00	24-16	End Filter Cover	3221-0076-00	1
24-19 Adjusting Screw See SP-KFA1010³ 2 24-20 Bolt Flange 4329-0016-00 4 24-21 Intake Filter See SP-KFA1005² 1 25 Fan Assembly 2154-0007-00 1 26 Bolt Headless Hex Socket 4323-0004-00 1 27 Pressure Gauge 3740-0049-00 1 28 BTU Control Switch 2154-0070-00 1 29 Main P.C.B Assembly 215A-0047-00 1 30 Screw-TH2S 4312-0046-00 2 31 Ignitor 39E0-0014-00 1 32 Side Cover-Right 3121-0499-01 1 33 Power Switch 39A0-0191-00 1 34 Window Display 3231-0113-00 1 35 Flange Screw 4319-0015-00 4 36 Side Cover-Left 3121-0329-00 1 37 Electire Outlet Assembly 39D0-0263-00 1 38 Cover Outlet 3231-0114-00	24-17	Ball	See SP-KFA1010 ³	2
24-20 Bolt Flange 4329-0016-00 4 24-21 Intake Filter See SP-KFA1005² 1 25 Fan Assembly 2154-0007-00 1 26 Bolt Headless Hex Socket 4323-0004-00 1 27 Pressure Gauge 3740-0049-00 1 28 BTU Control Switch 2154-0070-00 1 29 Main P.C.B Assembly 215A-0047-00 1 30 Screw-TH2S 4312-0046-00 2 31 Ignitor 39E0-0014-00 1 32 Side Cover-Right 3121-0499-01 1 33 Power Switch 39A0-0191-00 1 34 Window Display 3231-0113-00 1 35 Flange Screw 4319-0015-00 4 36 Side Cover-Left 3121-0329-00 1 37 Electirc Outlet Assembly 39D0-0263-00 1 38 Cover Outlet 3231-0114-00 1 39 Screw-Top Table 4319-0042-00 1 40 Flange Screw 4319-0015-00 4 41 Shell Upper 3111-0352-01 1 42 Fan Guard 3561-0078-00 1 43 Bush	24-18	Spring	See SP-KFA1010 ³	2
24-21 Intake Filter See SP-KFA1005² 1 25 Fan Assembly 2154-0007-00 1 26 Bolt Headless Hex Socket 4323-0004-00 1 27 Pressure Gauge 3740-0049-00 1 28 BTU Control Switch 2154-0070-00 1 29 Main P.C.B Assembly 215A-0047-00 1 30 Screw-TH2S 4312-0046-00 2 31 Ignitor 39E0-0014-00 1 32 Side Cover-Right 3121-0499-01 1 33 Power Switch 39A0-0191-00 1 34 Window Display 3231-0113-00 1 35 Flange Screw 4319-0015-00 4 36 Side Cover-Left 3121-0329-00 1 37 Electirc Outlet Assembly 39D0-0263-00 1 38 Cover Outlet 3231-0114-00 1 39 Screw-Top Table 4319-0042-00 1 40 Flange Screw 4319-0015-00 4 <td>24-19</td> <td>Adjusting Screw</td> <td>See SP-KFA1010³</td> <td>2</td>	24-19	Adjusting Screw	See SP-KFA1010 ³	2
25 Fan Assembly 2154-0007-00 1 26 Bolt Headless Hex Socket 4323-0004-00 1 27 Pressure Gauge 3740-0049-00 1 28 BTU Control Switch 2154-0070-00 1 29 Main P.C.B Assembly 215A-0047-00 1 30 Screw-TH2S 4312-0046-00 2 31 Ignitor 39E0-0014-00 1 32 Side Cover-Right 3121-0499-01 1 33 Power Switch 39A0-0191-00 1 34 Window Display 3231-0113-00 1 35 Flange Screw 4319-0015-00 4 36 Side Cover-Left 3121-0329-00 1 37 Electirc Outlet Assembly 39D0-0263-00 1 38 Cover Outlet 3231-0114-00 1 39 Screw-Top Table 4319-0042-00 1 40 Flange Screw 4319-0015-00 4 41 Shell Upper 3111-0352-01 1 <	24-20	Bolt Flange	4329-0016-00	4
26 Bolt Headless Hex Socket 4323-0004-00 1 27 Pressure Gauge 3740-0049-00 1 28 BTU Control Switch 2154-0070-00 1 29 Main P.C.B Assembly 215A-0047-00 1 30 Screw-TH2S 4312-0046-00 2 31 Ignitor 39E0-0014-00 1 32 Side Cover-Right 3121-0499-01 1 33 Power Switch 39A0-0191-00 1 34 Window Display 3231-0113-00 1 35 Flange Screw 4319-0015-00 4 36 Side Cover-Left 3121-0329-00 1 37 Electirc Outlet Assembly 39D0-0263-00 1 38 Cover Outlet 3231-0114-00 1 39 Screw-Top Table 4319-0042-00 1 40 Flange Screw 4319-0015-00 4 41 Shell Upper 3111-0352-01 1 42 Fan Guard 3561-0078-00 1 <td>24-21</td> <td>Intake Filter</td> <td>See SP-KFA1005²</td> <td>1</td>	24-21	Intake Filter	See SP-KFA1005 ²	1
27 Pressure Gauge 3740-0049-00 1 28 BTU Control Switch 2154-0070-00 1 29 Main P.C.B Assembly 215A-0047-00 1 30 Screw-TH2S 4312-0046-00 2 31 Ignitor 39E0-0014-00 1 32 Side Cover-Right 3121-0499-01 1 33 Power Switch 39A0-0191-00 1 34 Window Display 3231-0113-00 1 35 Flange Screw 4319-0015-00 4 36 Side Cover-Left 3121-0329-00 1 37 Electire Outlet Assembly 39D0-0263-00 1 38 Cover Outlet 3231-0114-00 1 39 Screw-Top Table 4319-0042-00 1 40 Flange Screw 4319-0015-00 4 41 Shell Upper 3111-0352-01 1 42 Fan Guard 3561-0078-00 1 43 Bushing Fan Guard 3351-0010-00 3 <td>25</td> <td>Fan Assembly</td> <td>2154-0007-00</td> <td>1</td>	25	Fan Assembly	2154-0007-00	1
28 BTU Control Switch 2154-0070-00 1 29 Main P.C.B Assembly 215A-0047-00 1 30 Screw-TH2S 4312-0046-00 2 31 Ignitor 39E0-0014-00 1 32 Side Cover-Right 3121-0499-01 1 33 Power Switch 39A0-0191-00 1 34 Window Display 3231-0113-00 1 35 Flange Screw 4319-0015-00 4 36 Side Cover-Left 3121-0329-00 1 37 Electirc Outlet Assembly 39D0-0263-00 1 38 Cover Outlet 3231-0114-00 1 39 Screw-Top Table 4319-0042-00 1 40 Flange Screw 4319-0015-00 4 41 Shell Upper 3111-0352-01 1 42 Fan Guard 3561-0078-00 1 43 Bushing Fan Guard 3351-0010-00 3	26	Bolt Headless Hex Socket	4323-0004-00	1
29 Main P.C.B Assembly 215A-0047-00 1 30 Screw-TH2S 4312-0046-00 2 31 Ignitor 39E0-0014-00 1 32 Side Cover-Right 3121-0499-01 1 33 Power Switch 39A0-0191-00 1 34 Window Display 3231-0113-00 1 35 Flange Screw 4319-0015-00 4 36 Side Cover-Left 3121-0329-00 1 37 Electirc Outlet Assembly 39D0-0263-00 1 38 Cover Outlet 3231-0114-00 1 39 Screw-Top Table 4319-0042-00 1 40 Flange Screw 4319-0015-00 4 41 Shell Upper 3111-0352-01 1 42 Fan Guard 3561-0078-00 1 43 Bushing Fan Guard 3351-0010-00 3	27	Pressure Gauge	3740-0049-00	1
30 Screw-TH2S 4312-0046-00 2 31 Ignitor 39E0-0014-00 1 32 Side Cover-Right 3121-0499-01 1 33 Power Switch 39A0-0191-00 1 34 Window Display 3231-0113-00 1 35 Flange Screw 4319-0015-00 4 36 Side Cover-Left 3121-0329-00 1 37 Electire Outlet Assembly 39D0-0263-00 1 38 Cover Outlet 3231-0114-00 1 39 Screw-Top Table 4319-0042-00 1 40 Flange Screw 4319-0015-00 4 41 Shell Upper 3111-0352-01 1 42 Fan Guard 3561-0078-00 1 43 Bushing Fan Guard 3351-0010-00 3	28	BTU Control Switch	2154-0070-00	1
31 Ignitor 39E0-0014-00 1 32 Side Cover-Right 3121-0499-01 1 33 Power Switch 39A0-0191-00 1 34 Window Display 3231-0113-00 1 35 Flange Screw 4319-0015-00 4 36 Side Cover-Left 3121-0329-00 1 37 Electirc Outlet Assembly 39D0-0263-00 1 38 Cover Outlet 3231-0114-00 1 39 Screw-Top Table 4319-0042-00 1 40 Flange Screw 4319-0015-00 4 41 Shell Upper 3111-0352-01 1 42 Fan Guard 3561-0078-00 1 43 Bushing Fan Guard 3351-0010-00 3	29	Main P.C.B Assembly	215A-0047-00	1
32 Side Cover-Right 3121-0499-01 1 33 Power Switch 39A0-0191-00 1 34 Window Display 3231-0113-00 1 35 Flange Screw 4319-0015-00 4 36 Side Cover-Left 3121-0329-00 1 37 Electirc Outlet Assembly 39D0-0263-00 1 38 Cover Outlet 3231-0114-00 1 39 Screw-Top Table 4319-0042-00 1 40 Flange Screw 4319-0015-00 4 41 Shell Upper 3111-0352-01 1 42 Fan Guard 3561-0078-00 1 43 Bushing Fan Guard 3351-0010-00 3	30	Screw-TH2S	4312-0046-00	2
33 Power Switch 39A0-0191-00 1 34 Window Display 3231-0113-00 1 35 Flange Screw 4319-0015-00 4 36 Side Cover-Left 3121-0329-00 1 37 Electirc Outlet Assembly 39D0-0263-00 1 38 Cover Outlet 3231-0114-00 1 39 Screw-Top Table 4319-0042-00 1 40 Flange Screw 4319-0015-00 4 41 Shell Upper 3111-0352-01 1 42 Fan Guard 3561-0078-00 1 43 Bushing Fan Guard 3351-0010-00 3	31	Ignitor	39E0-0014-00	1
34 Window Display 3231-0113-00 1 35 Flange Screw 4319-0015-00 4 36 Side Cover-Left 3121-0329-00 1 37 Electirc Outlet Assembly 39D0-0263-00 1 38 Cover Outlet 3231-0114-00 1 39 Screw-Top Table 4319-0042-00 1 40 Flange Screw 4319-0015-00 4 41 Shell Upper 3111-0352-01 1 42 Fan Guard 3561-0078-00 1 43 Bushing Fan Guard 3351-0010-00 3	32	Side Cover-Right	3121-0499-01	1
35 Flange Screw 4319-0015-00 4 36 Side Cover-Left 3121-0329-00 1 37 Electirc Outlet Assembly 39D0-0263-00 1 38 Cover Outlet 3231-0114-00 1 39 Screw-Top Table 4319-0042-00 1 40 Flange Screw 4319-0015-00 4 41 Shell Upper 3111-0352-01 1 42 Fan Guard 3561-0078-00 1 43 Bushing Fan Guard 3351-0010-00 3	33	Power Switch	39A0-0191-00	1
36 Side Cover-Left 3121-0329-00 1 37 Electirc Outlet Assembly 39D0-0263-00 1 38 Cover Outlet 3231-0114-00 1 39 Screw-Top Table 4319-0042-00 1 40 Flange Screw 4319-0015-00 4 41 Shell Upper 3111-0352-01 1 42 Fan Guard 3561-0078-00 1 43 Bushing Fan Guard 3351-0010-00 3	34	Window Display	3231-0113-00	1
37 Electirc Outlet Assembly 39D0-0263-00 1 38 Cover Outlet 3231-0114-00 1 39 Screw-Top Table 4319-0042-00 1 40 Flange Screw 4319-0015-00 4 41 Shell Upper 3111-0352-01 1 42 Fan Guard 3561-0078-00 1 43 Bushing Fan Guard 3351-0010-00 3	35	Flange Screw	4319-0015-00	4
38 Cover Outlet 3231-0114-00 1 39 Screw-Top Table 4319-0042-00 1 40 Flange Screw 4319-0015-00 4 41 Shell Upper 3111-0352-01 1 42 Fan Guard 3561-0078-00 1 43 Bushing Fan Guard 3351-0010-00 3	36	Side Cover-Left	3121-0329-00	1
39 Screw-Top Table 4319-0042-00 1 40 Flange Screw 4319-0015-00 4 41 Shell Upper 3111-0352-01 1 42 Fan Guard 3561-0078-00 1 43 Bushing Fan Guard 3351-0010-00 3	37	Electirc Outlet Assembly	39D0-0263-00	1
40 Flange Screw 4319-0015-00 4 41 Shell Upper 3111-0352-01 1 42 Fan Guard 3561-0078-00 1 43 Bushing Fan Guard 3351-0010-00 3	38	Cover Outlet	3231-0114-00	1
40 Flange Screw 4319-0015-00 4 41 Shell Upper 3111-0352-01 1 42 Fan Guard 3561-0078-00 1 43 Bushing Fan Guard 3351-0010-00 3	39	Screw-Top Table	4319-0042-00	1
42 Fan Guard 3561-0078-00 1 43 Bushing Fan Guard 3351-0010-00 3	40		4319-0015-00	4
43 Bushing Fan Guard 3351-0010-00 3	41	Shell Upper	3111-0352-01	1
	42	Fan Guard	3561-0078-00	1
44 Flange Screw 4319-0015-00 8	43	Bushing Fan Guard	3351-0010-00	3
	44	Flange Screw	4319-0015-00	8

KEY NO.	DESCRIPTION	KFA210H	Quantity
1	Rotor kit	SP-KFA1022	1
2	Filter kit	SP-KFA1005	1
3	Plug/Pump adjuster kit	SP-KFA1010	2


FOR TECHNICAL ASSISTANCE SEE YOUR LOCAL RETAILER OR CONTACT US AT:

Phone: 1-877-447-4768

15. PARTS LIST (WHEELS AND HANDLE)

1) KFA50H /KFA75H MODELS

KENANO	PEGGDIMEION	PART NO.		Ouantitu
KEY NO.	DESCRIPTION	KFA50H	KFA75H	Quantity
1	Handle	3231-0073-00	3231-0073-00	1
2	Cord Wrap	-	3221-0041-00	2
3	Hardware Kit	HW-KFA1001	HW-KFA1001	1

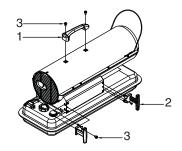

2) KFA125H / KFA210H MODELS

KEY NO.	DESCRIPTION	PART NO.		Overtity
		KFA125H	KFA210H	Quantity
1	Front Handle	3551-0023-00	3551-0022-00	1
2	Rear Handle	3551-0080-00	3551-0081-00	1
3	Wheel Support Frame	3551-0082-00	3551-0084-00	1
4	Wheel	3720-0018-00	3720-0018-00	2
5	Threaded Axle	3551-0088-00	3551-0089-00	1
6	Cord Wrap	3221-0042-00	3221-0042-00	2
7	Hardware Kit	HW-KFA1016	HW-KFA1016	1
7-1	Screw	INCLUDED IN HARDWARE KIT	INCLUDED IN HARDWARE KIT	8
7-2	Flange Screw	INCLUDED IN HARDWARE KIT	INCLUDED IN HARDWARE KIT	4
7-3	Cap Nut S	INCLUDED IN HARDWARE KIT	INCLUDED IN HARDWARE KIT	4
7-4	Nut	INCLUDED IN HARDWARE KIT	INCLUDED IN HARDWARE KIT	8
7-5	Bushing	INCLUDED IN HARDWARE KIT	INCLUDED IN HARDWARE KIT	2
7-6	Cap Nut L	INCLUDED IN HARDWARE KIT	INCLUDED IN HARDWARE KIT	2
8	Louver	-	2156-0043-00	1

