

JUWEL

USER MANUAL "DOUBLELOCK" electronic lock Avantgarde (65 SERIES)

A) HOW TO OPEN THE SAFE:

1. Press **(C)**.
2. Enter your personal code (factory code 0000).
3. Press **(E)**.
If **ERROR** lights up after having pressed **(C)** you can proceed as normal. (please see manipulation-warning).

B) HOW TO CLOSE THE SAFE


1. Turn the knob to the left.
2. Push the knob in and keep it pushed in while you do the following:
3. Press **(E)**.
4. The safe is now being locked and the knob can be let go of after **OK** lights up.

If the bolts are blocked during the locking of the safe, the lock will not close. Please remove the obstacle and press **(E)** again.

C) HOW TO CHANGE YOUR CODE

ATTENTION: ONLY CHANGE YOUR CODE WITH OPEN DOOR AND WITH THE BOLTS DRAWN OUTSIDE THE DOOR (= CLOSED LOCK)

1. Open the lock (as per point A). **OK** lights up for 6 seconds.
2. Before **OK** switches off, press **(C)** and keep it pressed until **CHANGE** lights up.
3. Enter your new personal code (3 to 8 digits) and press **(E)**.
4. Enter your new personal code once again for confirmation and press **(E)**.
5. Before closing the door, please try your new code a few times (with open door).

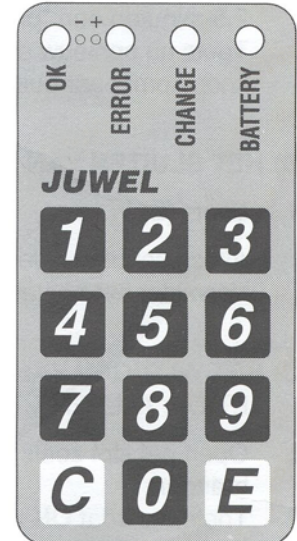

BATTERIES

Replace the batteries (**ALKALINE** Ir6 1,5 volt) when **BATTERY** lights up.

ANTI-MANIPULATION SHUTDOWN

After 3 false codes have been entered, the keyboard will switch itself off for 8 minutes during which **ERROR** blinks every 6 seconds.

MANIPULATION-WARNING

If after opening the lock **ERROR** lights up and a long acoustic signal sounds, it means that at least one manipulation attempt has occurred since the last opening.

IMPORTANT

Never 'tinker' with the lock yourself, your guarantee will be void. Always check the user manual first or contact your dealer.