

User Manual

PR 700	Small	/ normal
PR 710 F	Medium	/ foldable
PR 720 F	Large	/ foldable
PR 720 E	Large	/ inclinable
PR 725	Extra Long	/ inclinable
PR 730	Extra Large	/ inclinable



Notice

- ◆Please read this User Manual before use PetRun for safety, and keep properly ∘
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
 Children should be supervised to ensure that they do not play with the appliance.
- The copyright of this User Manual belongs to **Iwate International Developing Co., Ltd.**
- •Iwate International Developing Co., Ltd. has the rights to change the design or parts without notification in advance ·

Index

Symbol meaning	1
Warning	1
Daily storage & maintenance	2
Prohibition	2
Narranty	2
Doggy size / Model	2
Beginner's user guide	3
Medical knowledge	3
Component Names	3、4、5
Accessory parts	5、6
Manual control button & Power switch illustration	7
R remote control instruction manual	7
R receiver zone	8
Process of remote control operation	8
Control console instruction manual	9
Process of control console operation	9、10
Assembly procedure	11、12
Start to use PetRun	13
Running belt adjustment guide	13
Rear rubber feet adjustment	13
Folding storage	14
Unfolding	14
Noving	14
ncline	15
Specification	16

- Avoid to the dangerous in advance, please be sure read the User Manual before use PetRun.
- \blacklozenge Please must follow the instruction of related safety matters \circ

Symbol meaning

- 🛕 Warning
- Prohibition

Daily storage and Maintenance

🔥 Warning

[Warning before use]

Make sure the correct voltage •

- ♦ If the power cord > plug and outlet had damage or loose > please stop use it >
- ♦When doggy are sick or any problems please don't use it ∘
- ◆Please don't let doggy wear any clothes on exercise to avoid any limitation or accident ∘
- Make sure the suitable model for doggy weight, please refer to the specification list on the Page 2 and Page 16 °

[Warning on using]

- ◆Before turn on the power switch → let your lovely doggy stand on the running belt first, ∘ then turn on the power switch and make adjustment of speed slowly ∘
- ◆Don't let doggy jump up to the PetRun when it is on , it may cause injury or accident ∘
- When the doggy use PetRun we suggest owner stand beside and adjust a suitable speed according to doggy's condition -
- ◆Twice a day and each time about 10 to 15 minutes exercise were suggested ∘
- Please stop use PetRun if any unusual condition such as unstable step or breathless occurred on running
- ◆If the position of running belt were not in the middle or moved to one side , or a noise occurred, please stop use it immediately (Refer Page.13) , make adjustment till the running belt move back to the middle position then continue use it ∘
- ♦If there were any unusual noise , burning smell , motor cover damage , inside parts come out , weld section loose and spare parts loose , please unplug and stop use it , and contact your dealer for further assistance ∘

[Warning after use PetRun]

- ◆Always unplug when not use PetRun ∘
- Remove hair and dart from the running belt first, use cotton fabric soak with 3%-5% diluted warm neutral detergent, dry and towel the surface of running belt.
- ◆Don' t use the cleaner detergent contain toluene for cleaning ∘

[Other warnings]

- When unplug the power > Please pull out by the plug not cable -----Avoid to the electric shock; circuit short or wire burning
- Please don't cut
 twist or pull the cable
 also make sure not at the bottom of heavy stuff
 ----- Avoid to the damage of accident
 electric shock
 electric leakage or fire

 $\blacklozenge \mbox{Don't}$ touch the plug when the hands are wet \circ

- -----Avoid to the damage of accident ${\scriptstyle \backsim}$ electric shock ${\scriptstyle \backsim}$ electric leakage or fire ${\scriptstyle \circ}$
- $\clubsuit Please put mat under the PetRun <math display="inline">\circ$ -----Avoid to damage the floor \circ
- \blacklozenge Please put the PetRun on the flat floor and have enough space to use it \circ
- -----Avoid to a unusual working of PetRun and accident or damage occurred.

Daily storage and Maintenance

- ◆Always keep the PetRun unplug when not use it ∘
- ----- Avoid to the damage of accident ... electric shock . electric leakage or fire .
- Don't put the PetRun on outdoors
 bathroom or under the sun where with high temperature
 humidity environment, also not nearby the stove and others electric equipment.
- -----Avoid to the damage of accident $\,\,\cdot\,\,$ electric shock $\,\cdot\,\,$ electric leakage or fire $\,\circ\,\,$
- ◆Be sure locked the safety buckle when the PetRun is on foldable condition (Refer Page.14) -----Avoid to the possible of the PetRun to collapse ∘
- Keep off the kids playing around the PetRun •
- -----Avoid to any accident of falling or hurt ,
- If the running belt not on a normal position please adjust the belt tension and rear roller. (Refer Page.13)

Prohibition

- Please don't take apart
 recreate or try to fix the PetRun
 It may caused an abnormal working or damage
- Please don't watering the running belt It may caused an abnormal working or accident of fire electric leakage or electric shock -

Warranty

- ◆The warrant period in accordance with the warranty ∘
- An unexpected natural or artificial disaster are excepted from the warranty .
- ◆The damage due to take apart from the buyer itself are excepted from the warranty ∘
- An injury to owner and doggy or machine damage what caused by improper using are excepted from the warranty °

Doggy size / Model



Beginner's user guide

* Note : Drink water before and after the exercise •

- ◆To caress soothe sencourage and laud your doggy before use it •
- The owner squatted or seat in the front of PetRun and hold the chain in a suitable position then let doggy step on the PetRun and turn on the power switch while doggy is ready -
- ◆Using a slow speed at the beginning and increase the speed after your doggy adapt to running on PetRun ∘

Suggestion for beginner : 1 Km (5 minutes) · 3 Km (5 minutes) · 6 Km (5 minutes)

◆Don't stop the PetRun suddenly while the exercise finished , speed down slowly will let your doggy have enough time to calm down ∘ Ex : 6 Km − 3 Km − Stop ∘



The chain can be removed when the doggy comfortable to the PetRun •

Medical knowledge

- According to Veterinary Science study record of PetRun for one month The highest weight decrease about 14%, average weight decrease about 8% The highest pulse decrease about 16%, average pulse decrease about 13% (Average speed 5.5 km/h, Running time 10 minutes/time, twice a day)
- ◆Temperature record: young doggy 38.5 to 39.0 °C → adult doggy 37.5 to 38.5 °C
- ◆Breath record : 10 to 30 times per minute
- ◆Pulse rate record: young doggy about 80 to 120 times adult doggy 70 to 80 times -

Component Names

PR700 / PR710F / PR720F



No.	Parts Name		Parts Name
Α	Body	3	Infrared Rays Receiver (Left , Right)
В	Folding Base	4	Slide Locker
С	Protector Pipe	(5)	Chain Ring
1	Power Switch/Electric Current Protector/Outlet	6	Lock Pin
2	Manual Control Button set		

PR720E / PR725



No.	Parts Name		Parts Name
Α	A Body B Incline Base		Infrared Rays Receiver (Left , Right)
В			Rope Hanger
С	Fence	(5)	Automatic Door Locker
1	Power Switch/Electric Current Protector/Outlet	6	Incline Adjust Lever
2	Manual Control Button set		



No.	Parts Name	No.	Parts Name
Α	Body	3	Chain Ring
В	Incline Base	4	Automatic Door Locker
С	Fence	5	Anti-Slippery Pad
1	Power Switch/Electric Current Protector/Outlet	6	Incline Adjust Lever
2	Control Console		

Accessory parts

PR700 / PR710F / PR720F



1		
	7	

	[4]
•	ſ

No.	Accessory Parts Name	Q'ty
【1】	Front Protector Pipe	1
【2】	Left & Right Protector Pipes	1 EA.
【3】	Power Cable	1
【4】	Screw M6x18L (short)	4
【5】	Screw M6x35L (long)	2
[6]	L-Wrench_4mm	1
【7】	T-Wrench_5mm	1
[8]	Remote Controller	1



K 40 3	No.	Accessory Parts Name	Q'ty	No.	Accessory Parts Name	Q'ty
【12】	【1】	Left Fence	1	【7】	Screw M8x40L (long)	12/14
and the second	【2】	Right Fence	1	[8]	Screw M8x15L (short)	4
-	【3】	Front Door	1	[9]	Washer M8x1.6T	16/18
	[4]	Rear Door	1	【10】	L-Wrench_5mm	1
	[5]	Rope Hanger	1	【11】	T-Wrench_5mm	1
	[6]	Power Cable	1	【12】	Remote Controller	1

<u>PR730</u>



※ Please make sure the quantity of accessory parts is correct before assembly

Manual control button & Power switch illustration

Manual Control Button



		-
1	a	-
	$((\bigcirc))$	

Input AC Power

current

Cut off the AC Power while over

O]=Power OFF, []]=Power ON

Outlet

Electric

Current

Protector Power

Switch

Outlet / Electric Current Protector / Power Switch

	Stop motor emergency, Power can be restarted by OFF and ON the power switch again
START	Start the belt running from 1.0 Km/Hr
510P	Stop, can restart without reset power switch
SPEED UP	Speed up set up(0-6Km or 0-12Km) ∘
SPEED DOWN	Speed down set up(6-0Km or 12-0Km) ∘

IR remote control instruction manual

Remote control button key illustration

1

10

(11

8

ontrol button key illustration		Name	Definition
		Red LED Light	Infrared signal light.
	2	[RESET]	Will stop PetRun in any situation, and go back to set up mode
3 4		LCD Window	Time: count up/down 00 ~ 99 Min. Speed: up/down 00.0 ~ 99.9 Km/H (Imperial system unit will not show)
TE) /PB(RU/D_freese	4	IR transmitter	For Infrared rays transmittance
<i>**</i> 000	5	[TM]	To set up time
	6	[CLR]	Clear wrong time setting, and back to set up mode
-• RESET • (2)	7	[START]	PetRun start working
	8	[STOP]	Push the [STOP] key, the PetRun will stop working and go back to set up model(Need to wait 3-6 seconds for long beep sound, then push the [START] to re-start)
MODE CLR + 6	9	[MODE]	Speed / Distance display exchange
	10	[SPD]	Speed setting
	11	[S.KEY]	Push [S.KEY] + [MODE] for channel set up.
9	Elec		The LCD display will switch to Electric Saving Mode under any mode if not operate over 1 minute, push any key to go back the normal display but [RESET] key
	1	Battery box	1.5V Alkaline Battery x 2 pcs

Pantoscopic IR receiving angle, achieved 180 $^\circ$ both left and right side \circ



Process of remote control operation



Control console instruction manual —for PR730 only



NO.	Name	Demition			
1	LED Window	Speed: up/down 01.0 ~ 16.0Km/H (Imperial system unit will not show)			
2	LED Window	Time: count up/down 00:00 ~ 99:59 Min. (Imperial system unit will not show)			
3	Green LED Light	PetRun working light			
4	Red LED Light	PetRun stop light			
5	Speed Up/Down	Speed setting			
6	Time Up/Down	Time setting			
7	[START]	The key to start PetRun			
8	[STOP]	The key to stop PetRun			
9	Emergency Stop	To stop PetRun for emergency			

Process of control console operation —for PR730 only





Assembly Procedure

PR700/PR710F/PR720F

[step 1] Insert front protector pipe



[step 3] Insert left & right protector pipe





[step 4]

[step 2] Lift up the PetRun · then fasten screw (M6x18L) by L-wrench 4mm °



[step 5] Fasten screw (M6x35L) by L-wrench_4mm



PR720E/PR725

[step 1]

Use L-wrench_5mm, screw(M8x40L)and washer(M8x1.6T)to fasten the Left Fence and Right Fence on both side.



[step 2] Use L-wrench_5mm, screw(M8x40L)and washer(M8x1.6T)to fasten the Front Fence in the front of side railing.



[step 3]

Use L-wrench_5mm, screw(M8x15L)and washer(M8x1.6T)to fasten the Rope Hanger on the top of both side Fence.





[step 3]

Use L-wrench_5mm and screw (M8x40L) to fasten the Side Fence Pipe between Front & Rear door set.



[step 5]

Use Phillips screw (M4x8L) to fasten the Control Console on the end board (insert the 6Pin connector first).



%Please make sure all the pipes are fixed completely after assembly .

[step 4]

To insert the hinge(female) of the Rear door into the hinge(male) of Right Fence.





[step 4] Use L-wrench_4mm and screw (M6x40L) to fasten the end board of Control Console on the left side of front door.



[step 6] Plug the control cable connector.



11

Start to use PetRun

- 1. Plug the power cord into a correct voltage outlet •
- 2. Turn on the PetRun power switch (the power switch and Infrared rays light which on both side of motor cover will be light on)
- 3. Let your lovely doggy stand on the running belt ${\scriptstyle \circ}$
- 4. Push the **[START]** key which on the remote control or manual key start to exercise and adjust a suitable speed for your doggy -
- 5. Push the **[STOP]** key which on the remote control or manual key to stop PetRun while you want stop exercise •

Suggestion: Speed down slowly will let your doggy have enough time to calm down \circ

- Ex:6 Km-3 Km-Stop。
- 6. Please refer to the Page 1 [Warning on using]

Running belt adjustment guide

◆The running belt need to be adjusted once the running belt were loosen or can not kept in a right position (move to the right or left side) ∘

- 1. Turn the power switch on ${\scriptstyle \circ}$
- 2. Increase the speed to 4 Km/Hr , and keep it working for 2~3 minutes $^{,-}$ then start to adjust $^{\circ}$





If running belt move to left side , please use attached 5mm wrench fasten the left side screw in clockwise , turn1/4 circle each time until the running belt move and stay at middle .

If running belt move to the right side, please use attached 5mm wrench fasten the left side crew in anticlockwise, turn1/4 circle each time until the running belt

move and stay at middle •

Rear robber feet adjustment

If the floor not flat , adjust the rubber feet anticlockwise turn until whole machine stable .





If the running belt were loosen · n please use attached 5mm wernch fasten the left and right side screw in clockwise · turn 1/4 circle each time until the running belt not loose and stay at middle ·

Folding storage —for PR710F/PR720F only

[Step 1]

Lift up the body from end side with both hands

[Step 2] Pull out the lock pin from B and put into position A



Unfolding —for PR710F/PR720F only

[Step 1] Pull out the lock pin from A and put into position B



Moving —for PR710F/PR720F only

[Step1]

Put the PetRun in flat level $\,^{,}$ and switch the fixing locker to position [Lock] $^{\circ}$





[Step 2] Pull down from the back side of PetRun \cdot it will drop to the flat level slowly \circ



[Step 2] Lift up the back portion, then it will be easy to move ∘



Incline -----for PR720E/PR725/PR730 only

[Step 1] Pull out the incline adjust lever.



PR720E/PR725

PR730

[Step 2] Adjust the height by keep pull out the adjust lever, and release the lever at required position. (Stepless)



Specification

Specification	Unit	PR700	PR710F	PR720F	PR720E	PR725	PR730	
Horse Power	HP	1 HP					1.25 HP	
Input Voltage	V	100 / 110 / 200 / 220 VAc (Choose one)						
Max Input Current	А	10 A (max)						
Doggy Length limit	Cm	60	80	100	100	130	150	
Doggy Weight limit	Kgs	20(max)	40(max)	60(max)	60(max)	80(max)	120(max)	
Running Zone	Cm	41x73.5	41x107	41x132.5	41x132.5	41x182.5	65x232	
Running Speed	Km/Hr	1~12					1~16	
Foldable Function		No	Yes	Yes	No	No	No	
Incline Function		No	No	No	Yes	Yes	Yes	
Remote Control		Yes (Infrared Rays)					No	
Doggy Chain Holder		Yes						
Safety Device	Emergency Switch/Safety Locker (Foldable model only)						only)	
Control Display		LCD						
Operation Switch		E.SW / START / STOP / SPEED (Up/Down)						
Model Size	Cm	53x110x38 (W) (L) (H)	53x156x41 (W) (L) (H)	53x183x41 (W) (L) (H)	53x170x103 (W) (L) (H)	53x220x121 (W) (L) (H)	84x251x136 (W) (L) (H)	
Deckered Size	Cm	63x119x27 (W) (L) (H)	63x164x30 (W) (L) (H)	63x191x30 (W) (L) (H)	63x178x39 (W) (L) (H)	63x228x39 (W) (L) (H)	92x260x40 (W) (L) (H)	
Packaged Size	Cu.Ft.	7.15	10.95	12.75	15.44	19.78	33.79	
Net Weight	Kgs	28.5	37.5	45	54	62	124	
Gross Weight	Kgs	37	50	60	67	79	155	
Safety Standard		CE Certification						
Warranty	year	1 year						

Manufacturer :

IWATE INTERNATIONAL DEVELOPING CO., LTD.

6-29, Sec.2, Dah Fuh Road, Tan-Tzu Hsiang, Taichung Hsien, Taiwan, R.O.C. E-mail: iwate.head@msa.hinet.net Website: www.petrun.com.tw TEL: 886-4-2534-2823 FAX: 886-4-2534-2824

