
**User's
Manual**

**AXFA14G/C
Magnetic Flowmeter Remote Converter
[Hardware Edition/Software Edition]**



**AXF
Magnetic Flowmeter
Integral Flowmeter
[Software Edition]**

Manual Change No. 06-015-2E

Please use the attached sheets for the pages listed below in IM 01E20C02-01E (7 th).

Page and Item	Contents of Correction
Page 5-2 5.2 Display Unit Setting Methods	Corrected the flow chart. Changed the note of entry mode.


5.2 Display Unit Setting Methods

 **NOTE**

Before changing any settings, be sure to check the corresponding setting details in Chapter 6: Parameter Description.


5.2.1 Display Mode → Setting Mode

Display Mode will be adopted when the power is turned on, and the Setting Mode can be activated using the following procedure.

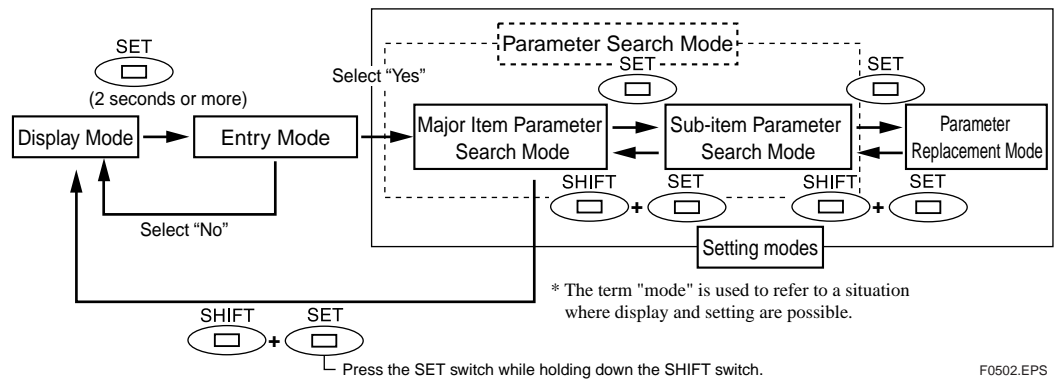


F0502.EPS

Sample Display: Procedure for moving from Display Mode to Setting Mode

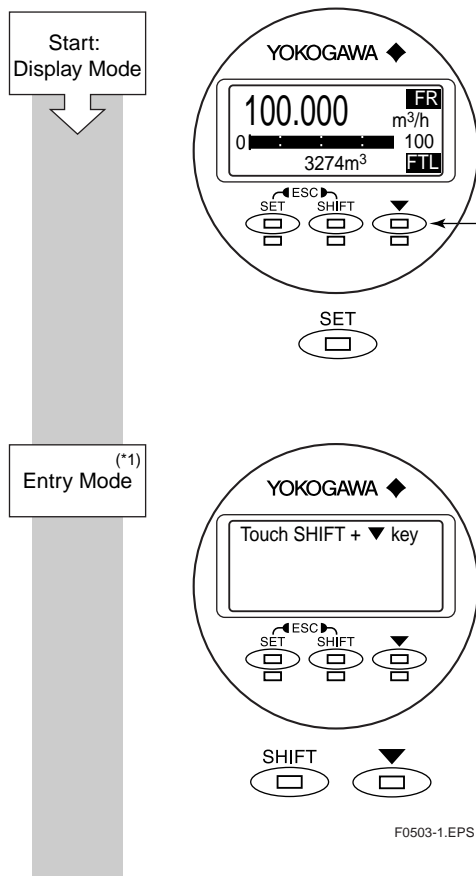

F0503-1.EPS

- 1st line: Actual instantaneous flow rate [FR]
- 2nd line: Bar graph indicating instantaneous flow rate
- 3rd line: Totalized forward flow rate [FTL]

Hold the  switch for 2 seconds.

Touch  and  switches simultaneously.

 **NOTE (*1)**

The Major Item Parameter which is set just before will be shown when entering the Setting Mode again within 1 minute after returning from Setting Mode to Display Mode.