



GeneratorJoe

4016 Quartz Drive
Santa Rosa, CA 95405
Phone: 707 539-9003
Fax: 707 539-5212
Email: sales@generatorjoe.NET
Web www.generatorjoe.NET



Analog 200 Control Panel User Manual

TO START:

1. PRESS AND HOLD THE TOP OF *PREHEAT* BUTTON FOR 6 SECONDS, THEN RELEASE
2. PRESS AND HOLD TOP OF *START/RUN* BUTTON UNTIL ENGINE CATCHES, THEN RELEASE TO PREVENT STARTER DAMAGE. YOU WILL NOTICE A RED LIGHT ILLUMINATED ABOVE BUTTON INDICATING EQUIPMENT IS RUNNING.
3. THE VOLTAGE GAUGE SHOULD BE READING BETWEEN 13 AND 14.5 VOLTS, INDICATING YOUR BATTERY IS BEING CHARGED.
4. OIL PRESSURE GAUGE SHOULD BE READING BETWEEN 40 AND 80 PSI.
5. TEMPERATURE GAUGE SHOULD BE READING 100°F AT FIRST AND THEN CLIMB TO 180°-195°F.
6. HOUR METER WILL ADVANCE ON A 1/10 SECOND SCALE WHILE RUNNING.

TO STOP:

PRESS AND HOLD BOTTOM OF *START/RUN* SWITCH UNTIL IT CLICKS. RED INDICATOR LIGHT WILL NOW GO OFF AND ALL GAUGES WILL ZERO OUT WITH NO MOVEMENT.

TO CHECK BATTERY VOLTAGE:

PUSH *START/RUN* SWITCH UNTIL YOU HEAR A CLICK. RED LIGHT WILL TURN ON INDICATING POWER TO THE PANEL. VOLTAGE GAUGE WILL INDICATE YOUR BATTERY VOLTAGE AND SHOULD BE BETWEEN 12 AND 13.5 VOLTS. TO TURN PANEL OFF, PRESS AND HOLD BOTTOM OF *START/RUN* SWITCH UNTIL ALL GAUGES GO DOWN TO THE BOTTOM WITH NO MOVEMENT. IF PANEL IS NOT SHUT OFF, IT WILL DRAIN THE BATTERY.



GeneratorJoe

4016 Quartz Drive
Santa Rosa, CA 95405
Phone: 707 539-9003
Fax: 707 539-5212
Email: sales@generatorjoe.NET
Web www.generatorjoe.NET