



V-G200 Dual Card GSM Mobile Phone

Thank you for using our V-G200 Mobile Phone.

To guarantee the best performance, please read this manual carefully and keep it for further use.

Olive Telecommunication Pvt. Ltd. reserves the right to make modifications on print errors and update specifications without prior notice.

**Copyright © 2009 Olive Telecommunication.
All rights reserved.**

Olive Telecommunication Private Ltd, Design and technology for the connected World. The Mobile Original Logos are registered trademarks of olive Telecommunication.

The information contained in this user's guide is written for Olive V-G200. Olive Telecommunication reserves the right to make changes to any of the products described in this document and also reserves the right to revise this guide at any time without any prior notice.

This device may contain accessories, technology or software subjected to export laws.

Safety Precautions

Please read these simple guidelines. Not following them may be dangerous or illegal. For further information, see the section of "Warnings and Precautions".










 
	Do not switch the phone on when Mobile Phone use is prohibited or when it may cause interference or danger.
	Do not place your phone and its accessories in containers with strong electromagnetic field.
	Obey all local laws. Always keep your hands free to operate the vehicle while driving. Your first consideration while driving should be road safety.
	Hospitals or health care facilities may be using equipment that could be Sensitive to external radio frequency energy. Follow any regulations or rules in force.
	Do not use the phone at a refueling point. Do not use near fuel or chemicals.
	Follow any restrictions. Wireless devices can cause interference in aircraft.
	Keep the phone and all its parts, including accessories, out of the reach of small children.
	Use only approved batteries and chargers. Disconnect the charger from the power source when it is not in use. Do not leave the battery connected to a charger for more than a week, since overcharging may shorten its life.
	Only qualified personnel should service the phone or install the phone in a vehicle. Faulty installation or service may be dangerous and may invalidate any warranty applicable to the device.

Table of Contents

About the Phone.....	1
Quick Operating Guide.....	6
Message.....	8
Contacts.....	13
Logs.....	16
Settings.....	17
Media.....	23
Apps.....	29
Services.....	30
Tools.....	32
Bluetooth.....	33
Trouble shooting.....	35



About the Phone

Appearance



Note: the pictures are only for reference, the actual product may vary from the pictures.

Description of the Functions of Keys

Name	Description
Left soft key/SIM2 Send Key	In standby mode, press this key as the send key for SIM2. When inside any menu item, use the key to perform the function described on the corresponding place on the screen.
Right soft key	In standby mode, press right soft key to Phonebook list.
Centre Select Key	This is the central key in the navigation keypad. Use this key to enter the Main menu view.
Up key	In standby mode, press up key to enter the Shotcuts.
Down key	In standby mode, press down key to show the Audio player.
Left key	In standby mode, press left key to enter Write message.
Right key	In standby mode, press right key to enter FM radio.
SIM1 Send key	Making or answering a call. In standby mode, press this key to enter Call Logs.
End (Power) key	End calls or reject calls. Long press: Power on, power off.
Number keys	In standby mode, Use the number keys 0~9 to enter the numbers.
* key	In standby mode, long press this key to input the symbols *, +, P, W; short press this key to Input the symbol "*".Use this key to enter the symbol interface in the SMS edit screen.
# key	In standby mode, long press this key to enable or disable the Silent mode; short press this key to Input the symbol "#".

Battery

■ Remove and install the battery

Dismantle by following procedures:

● Remove cover of battery of the mobile phone.

● Lift the bottom of battery upward and remove it from battery box.

Warning: power off before removing the battery. When the phone is power on or connected to external power supply, it is forbidden to remove the battery.

■ Install by following procedures:

Align the metal contact point of battery with that of battery box, and snap the battery in the box and press the battery downward until it is installed well.

Charge

■ Insert the charger on the supply.

■ Connect the right end of charger to the side port of mobile phone.

■ After connection, the screen of mobile phone displays “Charger Connected”, and it is charging, the battery icon shows the process of charge; if the phone is power off, the screen will show the process of charge dynamically.

■ In low battery state, overusing the mobile phone will cause low voltage, and the phone enter low voltage lock mode and can't power on normally. Charge the battery, and the battery enters pre-charge mode process (about ten minutes);

after the voltage rises, the phone can be powered on normally.

■ In the power on state, when the power indicator in the icon area is full and doesn't flash, the battery is fully charged. In the power off state, the “complete charge” will be displayed on the screen if the battery is fully charged.

Insert and Remove the SIM Card

The function of dual card and one in using is provided, two SIM card slots are available.

■ Power off, and then move away the external power supply and battery.

■ Insert SIM card into the box correctly.

■ Power off before removing the SIM card. Firstly remove the external power supply and battery, and then remove to take out the SIM card.

Insert and Remove the Memory Card

■ Power off, and move away the external power supply.

■ Insert the memory card correctly.

■ Power off before removing the memory card, and move away the external power supply, and then remove the card.

Note: Please carry your phone along with you during purchase of T-Flash card to buy a compatible card. As a wide range of T-Flash cards are available in the market, In order to ensure your data safety, we advice usage of T-Flash card

which is offered by Branded manufacturers, like Kingston, SanDisk and so on.

Power On/Off

Press and hold the ON/OFF key to power on/off.

If the SIM card hasn't been inserted, the screen will display "Insert SIM card please" when the user powers on the phone. Insert the SIM card and check if it is available.

Input the phone lock password: if it is set up.

Input the PIN code: if it is set up.

Greetings: if it is set up and the phone provides this function.

Emergency call (112): means it is registered in other network, only emergency call (112) is available.

Search: the phone will search automatically until the proper network is linked.

This phone may be inserted with two cards and they may be used by switching, after registering successfully, the network names are displayed in two rows, the network name of card 1 is displayed in the first row while that of card 2 is displayed in the second row. If only one card is inserted into, "Insert SIM card" will be displayed in one row.

1.Unlock the Phone/SIM Card

To keep the user's information safe, the setup of lock code and PIN code for

phone and SIM card is provided. The default lock code is 0000.

Note: if the user inputs the PIN code of SIM card wrongly for three times, the SIM card will be locked by network, and the PUK code is required after that.

2. Camping to Network

After the SIM is unlocked, the phone will search available networks automatically (the process is displayed on the screen). Once the available network is found, the name of the network provider will be displayed on the middle of the text and picture area, and the phone is camped to the service network successfully.

Note: “Emergency” displayed on the screen means the user is out of the service area, but the user can dial emergency number according to the strength of signal.

Connect Phone with USB Data Line

Three modes are provided when the phone is connected to computer with USB data line: “Mass Storage” , “Web Cam” and “COM prot” .

Quick Operating Guide

Make a Call

Click the numbers to input the designated phone number, and then select a card

to make the call. The dialing picture is displayed on the screen during the call duration. And the information of receiving will be displayed on the screen when the call is received.

Emergency Call

If the phone is out of the service area (view the signal indicating bar on the top left corner), the user can make an emergency call. If the roaming service isn't provided in this place, the screen will display "Emergency", thus the user can only make emergency call. If the phone is in the service area, the user can make emergency call even though SIM card isn't inserted.

Answer a Call

Press the SEND KEY to receive a call, if pressing any key answer feature is activated, the user can answer a call by pressing any key except the right soft key and hang-up key.

End a Call

Use the END key to Reject an incoming call or End a call.

Call Options

1.Hold/Retrieve Single Call

Hold a conversation.

2.End Single Call

Press this to end single call.

3.New Call

Enters the digital dialing contact surface.

4.Phonebook

Click on the "phonebook", to view the contents of the telephone and you may carry out the instructions in the phonebook menu.

5.Message

Click "message center" to enter the messages view.

6.Sound recorder

Click "sound recorder" to record the call sound.

7.Mute

Click "Mute", the present telephone sound which will cause opposite party not to hear the handset telephone conversation.

8.DTMF

Setting to call extension.

Message

SMS

Write message

Set up information center number before writing message.

Enter Write message menu to edit short message, and press OK key to enter Option menu.

SIM1/SIM2 done: Select this function after message is written to send only, Save and send, Save, Send to many, Send to group.

Use templates: the user can insert the preset words in the position of cursor.

Insert object: the phone supports EMS, the user can insert Picture, My picture, Predefined animation, My animation, Melody, My melody, Predefined sound into the message.

Insert number: insert number from phonebook to short message.

Insert contact: insert name from phonebook to short message.

Insert bookmark: insert bookmark to short message.

Input method: select different input methods to write message according to requirements.

Note: Only the phone supporting EMS can send and receive static picture, animation picture and music.

Inbox

Enter the Inbox menu, view received messages and multimedia message on SIM card 1 and SIM card 2.

Press OK key to enter Option menu:

Reply: write back to the sender.

Delete: delete current message.

Delete Many Select: delete messages selected.

Delete same number: delete the messages sent by same number.

Edit: edit the current message.

Forward: select send the current message from SIM card 1/2 to one, multiple or all.

Copy to SIM/Phone: copy the short message to the memory of SIM/phone.

Move to SIM/Phone: move the short message to the memory of SIM/phone.

Chat: the user can chat with the sender after relevant settings are completed.

Copy all: copy all short messages from SIM card to the phone.

Move all: move all short messages from SIM card or the phone.

Use number: save the numbers with three or more figures stated in the message and select one to can make a call, to store in phonebook or send a message.

Use URL: Use the URL defined in the message body.

Outbox

Sent messages are stored in Outbox.

Select a message, press OK to operate:

Send from SIM1: To Resend the message using SIM1.

Send from SIM2: To Resend the message from SIM2.

Edit: go back to the composing interface; edit the content of the message.

Delete: delete the selected message.

Delete Many Select: delete messages selected.

Delete same number: delete the messages sent to same number.

Copy to phone: copy the short message to the memory of phone

Move to phone: move the short message to the memory of phone.

Copy all

Move all

Use number: save the numbers with three or more figures stated in the message and select one to can make a call, to store in phonebook or send a message

Use URL

Delete:Delete all messages from Inbox, Outbox, or Delete all.

Templates

1.text message

Press Ok key to enter common phrases list, and select one mode to edit, delete and write new.

SMS settings

View the SIM1 or SIM2 Message Settings: Profile settings, Common settings,

Memory status, Preferred storage.

MMS

Write Message

Choose the Write Message option in messages menu. Editing MMS and select a destination number , edit subject, insert picture or audio, video, attachment, slide before、slide after bookmark, then Press Done on the Right soft key to enter the send options, Send only, Save and send, Save to Drafts, Save as template, Send options, Exit.

Inbox

Store the MMS you received.

Outbox

Store the MMS you sent but failed.

Drafts

You can read the messages saved in draft.

Templates

It contains User defined and Default. You can view and send the templates.

MMS Settings

It provides six options, for example: Compose, Send, Retrieve, Filter, Server profile, Memory status.

Voice Mail Server

Network operator's support is needed; the voice mail number of SIM card 1&2 must be set up to receive voice mail.

Edit: input or change voice mail number.

Connect to voice: use to listen to the messages in voice mail.

Contacts

This phone provides three memory devices: SIM card , the phone and memory card. The phone can store 500 records while the capacity of SIM card is divided by its type.

Use the phonebook, the user can store information of name card in the phone, and the following information can be stored in the phone: name, phone number, family phone number, and name of company, Email, phone number of company, fax number, birthday, picture photo, ring and incoming group. The SIM can store information of name and phone number.

Quick search

Input the first letter of the name of the name to search.

Search contact

Input the name to search the designated record.

Add new contact

Add a new phone to SIM 1, SIM 2 , the phone or Card memory.

Copy all

Copy all the information from SIM card to phone, or copy all information from phone to SIM card, or copy all information from SIM card to another SIM card.

Delete

Input code before deleting information stored in SIM card or the phone, the default number is 0000. It is unnecessary to input code to delete the information one by one. Edit the information of each group.

Caller groups

My number

● Own number of SIM card 1/2: the user can set up own number and name (the user can define two own numbers).

Settings

● Memory status: view the storage capacity of phonebook of SIM card and phone.

● Preferred storage: can set up the phone as the default saving position or the user can select saving path during storing.

● Fields: selected the designated items to set up (this function is only available to

the records stored on the phone).

● My vCard: edit or send my name card.

● vCard version: select version of name card.

Caller picture

Select displayed picture for stored numbers and incoming group.

Caller ring tone

Select played ring for stored numbers and incoming group when there is an incoming call.

View phone number list, press Up/down directional key or click scroll bar to select a record. And press Ok key to select ringtone.

Phonebook Export

Export the Phonebook Entries to the Memory Card.

Phonebook Import

Import the memory card Phonebook to the phone memory.

T card Phonebook

View the phonebook entries in the memory card.

Logs

Use this function to view the call history of SIM 1/SIM 2.

Missed calls

Use this function to view the latest missed calls

Select a group of phone numbers, and press Ok key, and then select following options:

- **Delete:** delete this number.
- **Save to phonebook:** store the number to the phonebook.
- **Put Into Call Black List**
- **Put Into SMS Black List**
- **Call:** use SIM card to call this phone number.
- **Edit:** edit the receiving phone number and store.
- **Send SMS:** send short message to this phone number.
- **Send MMS:** send multimedia message to this phone number.

Dialed calls

Use this function to view the latest dialed calls. See “Missed call” for more details.

Received calls

Use this function to view the latest answered calls. See “Missed call” for more details.

Delete Call log

Use this function to delete Missed calls, Dialed calls and Received calls, or Delete all.

Call time

Use this function to view the time of call up to now.

- **Last call time:** view the time of last call.
- **Total dialed:** view the total time of dialed calls.
- **Total received:** view the total time of answered calls.
- **Reset all time:** clear all records to zero.

Settings

Dual SIM Settings

The menu is used to set SIM card application, including Dual SIM open, Only SIM 1 Open, Only SIM 2 Open and Flight mode.

User profiles

The phone provides various profiles for you to customize ringtone according to different occasions. The earphone mode is activated only when the earphone is connected; when earphone mode is on, other modes are deactivated

General

It's suitable for normal circumstances.

Meeting

Suitable for conference occasions, needs to be preset (e.g. set up “Vibration”).

Outdoor

Suitable for outdoor occasions, needs to be preset (you may set up a high volume ringtone).

Indoor

Suitable for indoor occasions, needs to be preset.

Headset

Usable when earphone is connected, needs to be preset (e.g. decrease ringtone volume).

Bluetooth

Applicable to Bluetooth function, needs to be preset.

Phone Setup

Enter the submenu Phone Settings to operate:

Time and date

Set Date and Time in this menu. Three submenus are:

- **Set home city:** various international cities of your choice.
- **Set time/date:** set date and time of the phone.
- **Set format:** select 12 hour clock or 24 hour clock, or set date format.

Schedule power on/off

Four timing points are available. You may set status and time of each one; however you may not set same time in different items, to avoid conflict.

Language

Select display language. The phone provides one language: English.

Preferred input methods

Select one of the three input methods provided by the phone as the default initial input method.

Display characteristic

Wallpaper

Screen saver

Power on display

Power off display

Greeting text

Setup greeting text.

Dedicated key

Setup direction key shortcut

Handwriting

Setup handwriting speed and color.

Misc. Settings

Setup LCD Backlight

Pen calibration

Calibration of the touch panel

Setting Firewall

Firewall incoming call

SMS Firewall

Privacy Protection

General call settings

SIM1 call settings

SIM2 call settings

Auto redial

Speed dial

More

Network setup

Set network of SIM 1 & 2 with this function.

Network Selection

Enter submenu “Network Selection” , you may choose New search, Select network or Selection mode to acquire current network service operator. In Selection mode, you may press OK key to “Switch” Automatic and Manual mode.

Security setup

SIM1 security setup

● **SIM1 lock:** the SIM card is protected by PIN code to prevent illegal use.

Note: if PIN code is wrongly input for three times, the SIM card will be locked. Then you need the PUK code to unlock the SIM card. PIN code and PUK code might be provided to you with the SIM card, if not, please contact your network provider.

Fixed dial: turn on/off fixed dial mode and set fixed dial number.

Note: to turn on/off the fixed dial mode, you need to input PIN2 code. Please contact the network provider to acquire PIN2 code. When fixed dial is on, the phone book shows the number stored or blank (when no number is stored in the phone).

Barred dial: if your SIM card supports the function, you may set restricted dialing number. When the function is on, it forbids the phone to call the restricted number.

Note: to turn on/off the restricted number function, you need to input PIN2 code. Please contact the network provider to get PIN2 code. When the function is on, the phone book will not show the restricted number.

Change password: you may change PIN code and PIN2 code of SIM card 1.
SIM2 security Settings

● **SIM2 lock:** the SIM card is protected by PIN code to prevent illegal use.

Note: if PIN code is wrongly input for three times, the SIM card will be locked.

Then you need the PUK code to unlock the SIM card. PIN code and PUK code might be provided to you with the SIM card, if not, please contact your network provider.

Fixed dial: turn on/off fixed dial mode and set fixed dial number.

Note: to turn on/off the fixed dial mode, you need to input PIN2 code. Please contact the network provider to acquire PIN2 code. When fixed dial is on, the phone book shows the number stored or blank (when no number is stored in the phone).

● **Change password:** you may change PIN code and PIN2 code of SIM card 2.

● **Phone lock**

The phone lock protects your phone from unauthorized use.

When the phone lock is activated, you need to input the phone password when switching on or resetting the phone.

Note: the default phone password normally is 0000; please change it to your own password as soon as possible.

● **Auto keypad lock**

Set auto-locking function of the Keypad. Press OK key to enter Keypad lock interface, select None (Keypad lock deactivated), 5 seconds, 30 seconds, 1 minute, 5 minute. During the selected period if no operation is done on the phone, the

Keypad will be locked.

● **Change Password**

To prevent unauthorized operation and usage. Enter submenu “Change Password” to change phone password.

Note: the new password must be longer than four digits but shorter than eight digits. The default password is 0000.

Shortcuts

Setup shortcuts list

Restore factory settings

Input the phone password in this menu, when the password is confirmed the phone restarts and all settings are reset to the default. The default password is 0000.

Media

Camera

Photos

The phone supports photo shooting, and viewing etc. Adjust the focal length. Photos are to be saved into the memory card (ensure inserted); the photo format is JPG. You may send the photos with the provided MMS option, transmit the

photos through USB wire and view them on a computer screen or set a photo as standby image.

Camera Settings

Settings for light balance, shutter sound, exposure compensation, and shooting time lag.

Image Settings

Set up photo size (support 80*60/160*120/176*220/320*240/640*480pixel) and photo quality (high/normal/low).

White Balance

Select automatic, Daylight, Tungsten, Fluorescent, cloud, incandescent light.

Effect settings

The following options are available including normal, grayscale, sepia, sepia green, sepia blue or color invert etc.

Add frame

The following options are available including OFF, frame1, frame2.

Storage

Select saving path for the photos.

Restore default

Restore default setup

Image viewer

Press OK key to select Option and operate:

View: view the photo

Browse style: select list mode or matrix mode.

Forward: send to wallpaper, power-on/off display, screen saver, phonebook, MMS, or Bluetooth.

Rename: rename the photo.

Delete: delete the selected photo.

Delete all files: delete all photos

Sort by: sort by name, type, time, size or unsorted.

Storage: select saving path of the photo.

Video Recorder

In video recording interface, enter Option to set up the camera and save the setting. Press “OK” key to start recording, press it again to pause, press “Stop” to end and save.

Camcorder settings: set relevant parameters of the video recorder.

Video settings: set relevant parameters of the video.

Effect settings: set special effects.

Storage: select saving path of video.

Restore default: return the settings to default setting.

Video Player

View or process the video files saved in the player, including clips, 3GP, MP4 etc.

Note: the file must be saved in file management/T-Flash card/videos to be viewed and played in the player.

Press trackball key to pause/continue play. Click * key to play in full screen; press right soft key to quit full screen. Press # key to capture a frame in the video. The captured image is saved into Photos in the memory card.

Audio Player

In music player interface, press “List” key to enter the current play list.

Select a music file to play, view detailed information, Add to rings (as alternative ringtone), Refresh list or set music player. Slide trackball to select menu.

In setting option of music file:

Setting

● **Pre. play list:** select to play music in the memory card or phone.

● **List Auto gen.:** select “on” and it will show “update play list” ; select “off” and it will show menus such as “add” (when “add” appears, you may add any song in “file management/memory card” to the play list).

● **Repeat:** select off, single song repeat or all songs repeat.

- **Shuffle:** select “on” to play the songs randomly; select “off” to play the songs in order.
- **Background play:** select “on” to activate background playing function in standby mode; select “off” to deactivate background playing function in standby mode.
- **BT Stereo Output:** Turn the feature on or off.
- **BT Stereo headset:** Select the Bluetooth Handsfree device.
- **Spectrum Display:** Select the skin for the player.
- **Lyrics Display:** select “on” to display lyrics in playing interface; select “off” to not display lyrics.

Sound Recorder

A simple sound recording tool provides functions for the user to manage sound files. Press OK key to enter Option, items in the menu are:

- **Record:** record new sound file.
- **Play:** play the selected sound file.
- **Append:** for AMR and AWB files, you may add recording and merge it into the current file.

Note: the function is not available for WAV files.

- **Rename:** rename the selected file.

Note: if the sound file is set up as ringtone, once renamed, the ringtone will return

to the default one.

- **Delete:** delete the selected sound file.
- **Delete all files:** delete all sound files.
- **Settings:** set the sound file format as AMR, WAV or AWB.
- **Forward:** send the selected sound file to User profiles as an alternative ringtone, to MMS or to Bluetooth.

FM Radio

This phone supports radio function.

- **Channel list:** view all stored channels.
- **Manual input:** manually input the frequency number and search.
- **Preset Auto search:** automatically search channels and update the list.
- **Settings:** Background playing (on/off)
Loud speaker (on/off).

Melody compose

Use this function, you can edit the melody which you like (such as you can edit vibration and light twinkle effect).

- **Play** play the melody compose you select.
- **Edit** carries on the action of editing melody again.
- **Add** edits a new melody.

● **Rename** Rename the melody you select

Note: If you have set the melody compose as electric bell sound and so on, once you rename the self ringtone, will make the electric bell sound to restore for the default setting .

● **Delete** delete the melody compose you select.

● **Deletes all files** delete all melody document.

● **Forward** the melody compose that has been edited ,you can select and forward to profile; Or can be transmitted by MMS, e-mail, SMS, Bluetooth way.

File Manager

You can manage the memory space of your Phone and Memory card memory. Three options are provided for each memory location viz. Open, New Folder and Format.

Apps

Games

The phone provides puzzle game. See Game Help in the game interface for operation details.

Services

SIM Tool Kit(SIM1/SIM2)

The function is provided by the network provider. It might have different menu items with different SIM card service. If the SIM card or network provider does not support the service, the function is unavailable. Please contact the network provider for more information.

WAP

The phone supports WAP. You may obtain multiple services such as news, weather forecast, sports and other internet services. The services are designed and maintained by WAP service operator. WAP service uses wireless markup language (WML), so you will not be able to view internet pages on the phone.

Note: to start WAP service, please set up the relevant network configuration.

Home Page

Select a home page, connect and start the browser. When connected, it shows the home page of the WAP site. The content of the page depends on the service operator.

Bookmark

You may save the WAP address in the bookmark to quickly re-visit the page. Click “Option” to operate Move to, Edit, Send, Delete, Delete all or Add new bookmark.

Recent pages

Records the page visited, for the next visit.

Offline pages

You may store some offline pages, to use conveniently.

Input address

Input the site address to visit the page.

Service Inbox

You may receive service messages.

Settings

- **Select SIM:** select SIM 1 or SIM2 or Always ask to connect to WAP.
- **Edit Profile:** select the network provider or customize.
- **Browser options:** set the wait time (30-300) and image display on/off.
- **Service message settings:** select on/off.
- **Clear cache:** erase cache.
- **Clear cookies:** erase cookies

Data Account

Set up WAP configuration.

Tools

Alarm

The phone supports five alarm clocks (usable while power-off); the default status of them is off. Select an alarm clock, press OK key to edit and set up.

Calendar

Enter the submenu Calendar to view task, Add tasks, Jump to date, Go to weekly view or Print.

World clock

Enter submenu World Time, the world time zone image appears; move the coordinate by the direction key, the interface will show the time of located city.

To do

It shows the whole agenda; in Option menu, you may View, Add, Edit, Delete, Delete all or Send vCalendar etc.

Calculator

The phone provides a calculator which can perform simple calculation. Use the Keypad to input and calculate.

Currency converter

Convert different currencies.

Stopwatch

Typical Stopwatch: time separately, time by circle or view records.

nWay stopwatch: press direction keys to time.

Bluetooth

You may connect the phone to other devices through Bluetooth. The phone is able to build a wireless connection within the range of ten meters. Since the signal is transmitted by radio wave, you phone does not need to face the other devices. However, wireless Bluetooth connections could be interfered by walls or other electronic devices.

In certain areas, Bluetooth might be restricted. Please contact the supervising department or service provider for more information.

Note: using the Bluetooth (or running it in back stage) will consume more battery power and shorten battery life.

In the Bluetooth submenu including the following submenus, you may set up relevant Bluetooth service.

● **Power:** press OK key to start/close the Bluetooth function;

● **Inquiry audio device:** press OK key to search the handsfree device such as Bluetooth earphone etc.; if an activated Bluetooth device is nearby, the phone will find the device, press OK key to connect, input Bluetooth code to match and connect.

● **Remote Control:** Use your phone as remote control by connecting with the remote Human Interface Device Host.

- **My device:** press OK key to enter My device, view the linked devices history list; Select a record, press OK key to operate:
- Connect:** connect the device, you may choose a service in service record to connect.
- Disconnect:** disconnect the device.
- Set as handsfree earphone: set the earphone as current default earphone.
- Device name:** rename the device.
- Delete:** delete the selected record.
- Delete all:** delete all records.
- Service list:** view the service record of the device.
- Search new device:** search for new Bluetooth devices.
- **Active device:** view connected devices and their services, press OK key to disconnect the device.
- **Settings**
- Visibility:** press OK key to turn on/off the function.
- Change device name:** select an input method to rename the devices.
- Authentication:** press OK key to turn on/off the function; turn on to allow the phone to be connected with other devices.
- Audio path:** select to save in the phone or transmit to handsfree devices.
- FTP settings:** select shared folder of file transmission and set the access right (free or read only)

Trouble shooting

Please refer to the following solutions for phone troubles.

Troubles	Possible Causes	Solutions
Bad receiving	The phone is being used at an area where it has receiving problem , such as near the high building or basement, unreachable by the radio wave.	To avoid
	The phone is being used at a busy time.	To avoid
	Too far from the network base station.	Ask the network provider for the regional layout.
Echo or noise	Caused by trunk line malfunction; it is a regional problem.	Hang up and redial, the trunk line might change to a better one.
	Regional bad connection.	
Standby time shortens	Standby time is related to network system configuration.	In bad reception area, temporarily turn off the phone.
	Need to change battery.	Change battery.

Troubles	Possible Causes	Solutions
	When there is no signal received, the phone will keep searching for the base station can shorten standby time.	Move to areas with strong signal or temporarily turn off the phone.
Unable to switch on	Battery out.	Check battery status or charge.
SIM card problem	SIM card damaged.	Contact the network service provider.
	SIM card unfixed.	Make sure SIM card has been inserted and fixed properly.
	Stain on SIM card surface.	Wipe the metal contact of SIM card with clean cloth.
Unable to connect to network	SIM card invalid.	Contact the network provider.

Troubles	Possible Causes	Solutions
	Out of GSM service range.	Contact the network provider to check service range.
	Weak signal.	Move to areas with strong signal.
Unable to call	Call restriction function is on.	Cancel call restriction function.
	Fixed dial is on.	Cancel Fixed dial.
PIN error	Wrongly input PIN code for three times.	Contact the network provider.
Unable to charge	Battery or charger broken.	Change battery or charger.
	Charge in environment with temperature lower than -10°C or higher than 45°C.	Change environment.
	Bad contact.	Check if connected properly.

Troubles	Possible Causes	Solutions
Unable to add entries in phone book	Phone book space full.	Delete part of the entries.
Unable to set certain functions.	Network provider does not support the function or you did not apply for it.	Contact the network provider.

Note: if the functions in this manual have any non-conformity with the functions of actual product, please refer to the product.

The company reserves the right to change any contents in this manual without any further notice.

Packing List V-G200

NO	Content	Quantity/unit
1	Handset	1pc
2	Battery	1pc
3	Travel Charger	1pc
4	User manual	1pc
5	Headset	1pc
6	Data Cable	1pc
7	Warranty Terms	1pc