



ALL TRADES MANUFACTURING PTY LTD
UNIT 18/5 HUDSON AVENUE, CASTLE HILL NSW 2154
PH – 02 8850 2700 FAX 02 8850 2701
www.all-trades.com.au email: sales@all-trades.com.au

ABN: 27363290799

"A-Z Product Solutions for Trade and Industry"

TANAKA 270LS/RS

(Please refer to your user manual for detailed operating instructions and maintenance procedures before use.)

Listed here are some quick reference information and user tips.

1/ Engine size – 1.65cu in 2/ Spark Plug – Champion RCJ-8Y 3/ Fuel Tank Capacity – 0.67L

4/ Dry Weight – 4.9kg (when full of fuel weighs 5.4kg) 5/ Chuck Capacity 12.7mm Keyless. (1/2")

6/ Drive Shaft – 1/2" 7/ Max drill bit diameter – 25.4mm 8/ Sound level – 91.2dB

- Maintain the machine in accordance to recommended procedures.
- Always start by filling half the amount of fuel which is to be used, then add the whole amount of oil and mix, before adding the other half of the fuel.
- When drilling, operate at a high engine speed and let the machine do the work, do not force the bit into the hole.
- When stopping, decrease the engine speed and push the ignition switch to the off position.
- If the drill bit becomes stuck, stop the engine and turn on lock lever. Rotate the whole unit anti-clockwise so that the drill bit can be pulled out easily.

Always stop the engine before re-fuelling, and keep the fuel tank free of dirt and debris.

There is a 12 month commercial warranty on this product so ensure that you retain your proof of purchase.

