



IP Wireless / Wired Camera
Quick Installation Guide
(For Windows OS)



Model:FI8918W

Colour:Black



Model:FI8918W


Colour:White

Quick Installation Guide

Packing List

- | | |
|---------------------------------|--|
| 1) IP CAMERA X 1 | 2) Wi-Fi Antenna (only available for wireless model) |
| 3) DC Power Supply X 1 | 4) Network Cable X 1 |
| 5) Mounting bracket x1 | 6) CD X 1 (Include user manual, IP camera tool) |
| 7) Quick Installation Guide X 1 | |

Quick Installation Guide Flow Chart

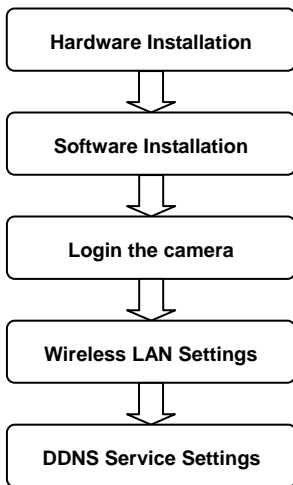

1 Hardware Installation

- (1) Open the package



Figure 1.0

- (2) Connect the Antenna.

Screw the antenna to the back of the camera, make sure it attached well.



Figure 1.1

- (3) Plug the network cable and power.

Use network cable connects with the camera and your router. Plug in the power. The green network light at the rear of the camera will blink and the camera will pan/tilt. The red power light will turn on too.



Figure 1.2

2 Software Installation

Put the small CD in your CD driver of your computer and find the folder "For Windows", open it and choose IP Camera Tool. Double click **IPCamSetup.exe** and install the software as instruction.



Figure 1.3

Only click **Next**, you will complete the software installation.

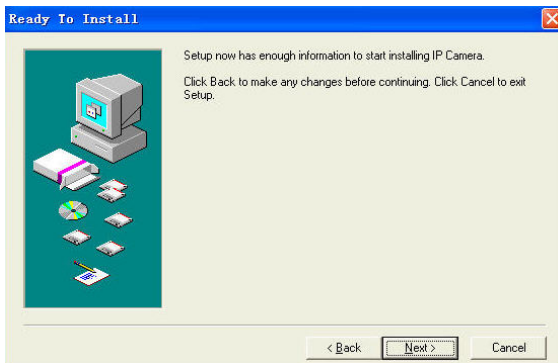


Figure 1.4


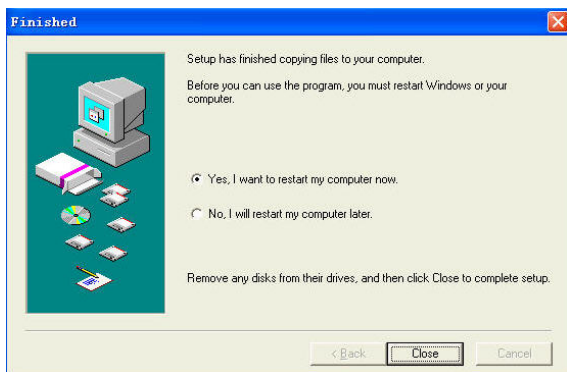


Figure 1.5

You can find the icon on the desktop after you install the IP camera tool.

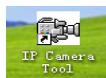

3 Login the camera

Dbclick the IP Camera Tool and you could see the following picture.

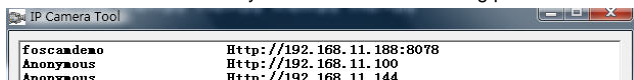


Figure 1.6

The IP camera tool could find the cam's IP automatically after you plug the network cable. If not, Please make sure that DHCP is enabled in your router. Don't enable MAC address filter. Or disable firewall or antivirus on your computer to try.

Dbclick the IP address on the IP camera tool and you will enter the login UI.



Figure 1.7

Note: If you use IE browser, please choose the first login mode (**ActiveX Mode**) to login. If you use other browsers, such as Firefox, safari or Google chrome, Please choose the second login mode (**Server Push Mode**) to login. You can see living video after click login.

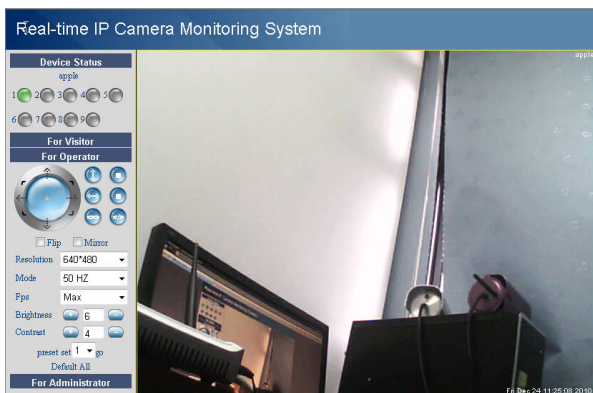


Figure 1.8

If you could not see living video, Please make sure allow the activeX running when it prompts you. (details: see user manual)

If you only see a black screen with a red cross in the center, Please change a port number to try, do not use port 80. Use port 85, 8005.etc.

Or shut down firewall or anti-virus software on your computer to try again.

4 Wireless LAN Settings

(1) Please choose **"For Administrator"** and click **"Wireless LAN Settings"**.

Then choose **"Using Wireless LAN"**.

Click scan button and the camera will detect WIFI device around it.

It could also find your router and show it in the list. (Figure 1.9)

If the camera could not find some WIFI device, please click the scan button again.

Make sure that the time between the first scan and the second is more than 1~2 minute.

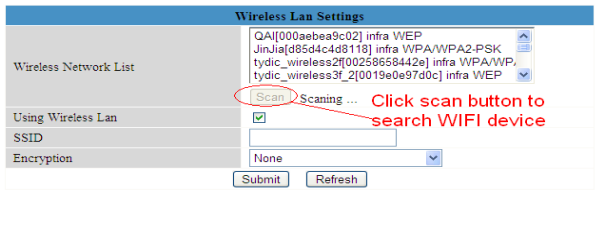


Figure 1.9

(2) Click the SSID of your router in the list, the corresponding information (SSID & Encryption) will be filled in the following boxes automatically.

You only need fill in share key. Make sure that SSID, Encryption and share key you filled in for the camera are exactly the same with your router.

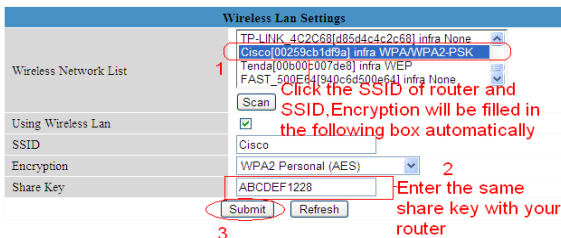


Figure 2.0



Figure 2.1

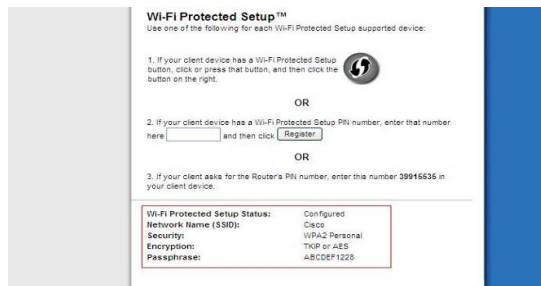


Figure 2.2

Please click **Submit** after finish these settings, the camera will reboot.

Plug out the network cable after you click submit about 10 seconds.

The camera will work on WIFI after reboot.

Note: If your camera could not connect WIFI, please see FAQ in user manual.

5 DDNS Service Settings

5.1 Static IP user

Static IP users need not set DDNS service settings for remote access. When finished the connection of Camera in LAN and port forwarding. (Figure 3.5/3.6) You can access the camera directly from Internet by the WAN IP and port number. There are two ways to obtain your WAN IP.

- **Obtain the WAN IP from Website**

Please enter these strings in your browser: <http://www.whatismyip.com>. The webpage at this address will show you the current WAN IP.



Figure 2.3

- **Obtain the WAN IP address from the router**

You can find the WAN IP in your router. Normally, it is in system status.

Take the WRT54G router of LINKSYS for example,

- 1) Obtain the IP address of the router(LAN gateway address),user name and password for login the router from the network administrator.
- 2) Enter the LAN IP address of the router (LINKSYS WRT54G, such as: default LAN IP is 192.168.1.1) in the address bar of the IE to login the router; Open the **Status** page to find out the WAN address of the router. In this

www.foscam.com

example, the address is 183.37.28.254.

Access the IP Camera from the Internet

You can access the IP Camera from the Internet. (remote access) Enter WAN IP address and port number in IE browser or other browsers you use. For example, [Http:// 183.37.28.254:85](http://183.37.28.254:85)

Note: Make sure the Port mapping is success. You can do port mapping by two ways.

- 1) Enter setting page of the router which camera connect with to enable UPNP function. Then login the camera as administrator, choose **UPnP Settings** to enable UPNP and make sure the state is "UPnP success".
- 2) Do port forwarding manually. (details: Figure 3.5/3.6)

If your router has Virtual server, it is used to do port mapping. Please add the camera's LAN IP and port which you set in basic network settings to the Virtual map list.

Note: If you plug the camera in a router, it will have dynamic IP address and you need set DDNS service settings to view it remotely.

5.2 How to do DDNS Service Settings (For dynamic IP user)

- (1) Please first visit www.dyndns.com to get an account.

Choose **Sign up FREE** to get a free account.



Figure 2.4

Please set as the following picture.

Add New Hostname [1 Host Service](#)

You don't currently have a [Dynamic DNS Pro service](#) in your account.

To get the full benefits of Dynamic DNS, including premium subscriber domains and other features, [add Dynamic DNS Pro to your shopping cart](#) (or try it with \$1.99 [monthly subscription](#)).

Here fill in a name and choose dyndns.org

Hostname: .

Wildcard: Create [Howdyndns-yourdomain.com-alias](#) (for example to use same settings for [www.host.dyndns-yourdomain.com](#))

Service Type: Host with IP address
 Web/ftp Redirect (URL forwarding service)
 Offline Hostname

IP Address: **Your current internet IP**
([your current location's IP address is 183.37.10.51](#))
TTL value is 60 seconds. [Edit TTL...](#)

Mail Routing: I have mail server with another name and would like to add MX hostname...

Figure 2.5

Then choose **Add To Cart**.

What do you want to use this host for?
 Select services and devices you would like to use with this hostname.

Work From Home Office or VPN:

vpn remote file access remote desktop mail server web server
 chat server ftp backup ssh database voip

Hosting and Design For Web Sites and Blogs:

blog gallery wiki portfolio ecommerce web page

Remote Access For Devices:

dvr webcam data storage cctv printer alarm and security
 thermostat weather station game server home automation

Click here after you finish the settings above

Figure 2.6

Set the following information as the picture below.

The screenshot shows the DynDNS registration page. A red box highlights the registration form fields: Username (cjun321), Password (masked), Confirm password (masked), Email (gxnn2003@tom.com), and Confirm email (gxnn2003@tom.com). There are also checkboxes for newsletter and HTML formatting. To the right is a 'Log in' section for already registered users. Below the form is a security image with the numbers 5, 0, 5, 1, 5. A red circle highlights the 'Create Account' button. Red text annotations include: 'Fill in user name,password and email address' pointing to the form fields, and 'Click here to create account' pointing to the 'Create Account' button.

Figure 2.7

The website will send you an email to your mailbox just set.

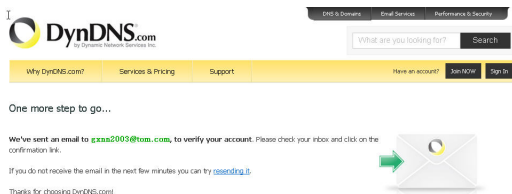


Figure 2.8

Please click the link in your email to activate your account.
 Or copy the link and paste it to IE or other browser you use to **activate the account**. Make sure that your account was activated or DDNS settings will be failed.

Your DynDNS.com Account 'cyjun321' has been created. You need to visit the confirmation address below within 48 hours to complete the account creation process:

<https://www.dyndns.com/confirm/create/Mim96uomXl-kqN4LNp8AP1Q>

Our basic service offerings are free, but they are supported by our paid services. See <http://www.dyndns.com/services/> for a full listing of all of our available services.

Figure 2.9

You will see the following picture. Click **Activate services>>**

Free Services Checkout

Once you have confirmed the contents of your cart your services will be instantly activated.

Service	Period	Price
Dynamic DNS Hosts		
cyjun321.dyndns.org	-	\$0.00
Sub-Total:		\$0.00

Click here to activate services [Activate Services >>](#)

Figure 3.0

All the settings are finished until you see the following picture. (Figure 3.1)

You can see your host name in the list.

Please remember the host name, user name and password; they are needed when you set DDNS service settings of your camera.

DynDNS.com

What are you looking for? Search

Why DynDNS.com? Services & Pricing Support 11 foscamlpcamera (1/10) My Account My Cart Log Out

My Account **Host Services** [1 My Services](#)

Hostname	Service	Details	Last Updated
cyjun321.dyndns.org	Host	119.123.201.46	Jun 25, 2010 5:57 AM

[> Host Update Log](#) [Add New Host](#)

Figure 3.1

(2) Basic Network Settings

We need set a static IP for the camera when do DDNS service settings. Login your camera and set basic network settings as the picture below.

Basic Network Settings	
Obtain IP from DHCP Server	<input type="checkbox"/>
IP Addr	<input type="text" value="192.168.11.163"/>
Subnet Mask	<input type="text" value="255.255.255.0"/>
Gateway	<input type="text" value="192.168.11.1"/>
DNS Server	<input type="text" value="192.168.11.1"/>
Http Port	<input type="text" value="8090"/>
Network Lamp	<input checked="" type="checkbox"/>
<input type="button" value="Submit"/> <input type="button" value="Refresh"/>	

Figure 3.2

Here make sure that your camera is in the same subnet as your router. In other words, keep the first three sections the same with your router or your computer. Gateway is your router's LAN IP. You can find DNS server in your router, if you don't know the DNS server; you can also find it in local area connection of your computer. (details: see user manual—Basic network settings)

Normally, it contains your computer's LAN IP, gateway, DNS server. Please click submit after finish these settings, the camera will reboot.

(3) DDNS service settings

Please set DDNS service settings as follows. Use the DDNS domain name you get from the dyndns website.

DDNS Service Settings	
DDNS Service	<input type="text" value="DynDns.org(dyndns)"/> ▾
DDNS User	<input type="text" value="cyjun321"/>
DDNS Password	<input type="password" value="••••••••"/>
DDNS Host	<input type="text" value="cyjun321.dyndns.org"/>
Re-Update Ignoring All Errors	<input type="checkbox"/> Never do this unless your hostname has been unblocked
<input type="button" value="Submit"/> <input type="button" value="Refresh"/>	

Figure 3.3

Please click submit after fill in all the information. The camera will reboot. Please login in the camera again to check if DDNS settings is succeed.

The screenshot shows the 'Real-time IP Camera Monitoring System' interface. On the left is a navigation menu with options like 'Device Info', 'Alias Settings', 'Date & Time Settings', etc. The main area displays 'Device Status' for a device with ID 000000000001. The status for 'DDNS Status' is 'Dyndns Succeed: http://cyjun321.dyndns.org:8090'. A red box highlights this status, and a red text annotation 'Make sure DDNS succeed' is placed next to it.

Device Status	
Device ID	000000000001
Device Firmware Version	11.22.2.36
Device Embedded Web UI Version	2.4.18.16
Alias	apple
Alarm Status	None
DDNS Status	Dyndns Succeed: http://cyjun321.dyndns.org:8090
UPnP Status	No Action
MSN Status	No Action

Figure 3.4

(4) How to do port forwarding.

Login your router; find the right place to do port forwarding.

Here use a Linksys router for example.

You can do single port forwarding. Set as the following picture.

The screenshot shows the 'Applications & Gaming' configuration page on a Linksys router. The 'Single Port Forwarding' tab is selected. A table lists port forwarding rules. One rule is highlighted with a red box: Application Name 'apple', External Port '8090', Internal Port '8090', Protocol 'Both', To IP Address '192.168.1.163', and Enabled checkbox checked.

Application Name	External Port	Internal Port	Protocol	To IP Address	Enabled
None	---	---	---	192.168.1.1	<input type="checkbox"/>
None	---	---	---	192.168.1.1	<input type="checkbox"/>
None	---	---	---	192.168.1.1	<input type="checkbox"/>
None	---	---	---	192.168.1.1	<input type="checkbox"/>
None	---	---	---	192.168.1.1	<input type="checkbox"/>
apple	8090	8090	Both	192.168.1.163	<input checked="" type="checkbox"/>
			Both	192.168.1.1	<input type="checkbox"/>
			Both	192.168.1.1	<input type="checkbox"/>
			Both	192.168.1.1	<input type="checkbox"/>

Figure 3.5

You can also choose port range forwarding.

In order to forward the port successfully, we recommend you can set both of the start port and end port as the same port number. Add the camera's LAN IP and port (Figure 3.6) in the list of port forwarding page.



Figure 3.6

Please do not forget to **save** these settings when you finish them.

(5) After finish all these settings above, you can use DDNS domain name and port number to login your camera at any place.

For example, use strings <http://cyjun321.dyndns.org:8090> to login the camera. Here cyjun321.dyndns.org is the DDNS Host, 8090 is camera's port.



Figure 3.7

Conclusion

Other detail settings, please consult user manual.

www.foscam.com

ShenZhen Foscam Intelligent Technology Co., Ltd

