

Table of Contents

1. General Description	3
1.1 Feature	3
1.2 Accessories	3
2. Operation Instructions	4
2.1 Start-up	4
2.2 Basic Operation	4
2.2.1 Incoming Call from PSTN	4
2.2.2 Outgoing Call to PSTN	4
2.2.3 Paging from Base to Handset (up to 5 Handset)	4
2.2.4 Intercom Call to Other Handset	5
2.2.5 Intercom Call from Other Handset	5
2.2.6 Intercom Call to Another Handset during PSTN Call	5
2.2.7 Manual Dialing, On-Line	6
2.2.7.1 Normal Dialing	6
2.2.7.2 Pre-Dialing	6
2.2.7.3 Phone Book-Dialing, by Scrolling	7
2.2.7.4 Phone Book-Dialing, by Alphabetic Retrieval	7
2.2.7.5 From Last Number Redial	8
2.2.8 Memory and Menus	8
2.2.8.1 Store Phone Book Number	8
2.2.8.2 Key-Tone	9
2.2.8.3 Ringer Volume	9
2.2.8.3.1 Handset Ringer Volume	9
2.2.8.3.2 Base Ringer Volume	10
2.2.8.4 Handset Ringer Type	10
2.2.8.5 Background Light	10
2.2.8.6 Language	11
2.2.8.7 Prefix	11
2.2.8.8 Pause Time	12
2.2.8.9 Select Base	12
2.2.8.10 Registration	13
2.2.8.11 Deregistration	13
2.2.8.12 Handset and Base number	14
2.2.8.13 R-key Function	14
2.2.8.13.1 Flash	15
2.2.8.13.2 Earth	15
2.2.8.14 PIN-code Change	15
2.2.8.14.1 Handset Pin-code	15
2.2.8.14.1.1 Handset Pin-code Change	15
2.2.8.14.1.2 Handset Pin-code, Default	16
2.2.8.14.2 Base Pin-code Change	16
2.2.8.15 Default	16
2.2.10 Phone Book Number	17

2.2.10.1 Edit	17
2.2.10.2 Erase One Number	18
2.2.10.3 Erase All Numbers	19
2.2.11 Others	19
2.2.11.1 Occupied Line	19
2.2.11.2 Volume control	19
2.2.11.3 Battery Low	20
2.2.11.4 Battery Charging	20
2.2.11.5 Out of Range	20
2.2.11.6 Number Longer than 14 Positions	20
2.2.11.6.1 In Phone Book Mode	20
2.2.11.6.2 In On-Line Mode and Pre-Dialling Mode	20
2.2.11.7 Phone Book Memory Full	20
2.2.11.8 Key Lock	21

1. General Description

This telephone, which is compliant to Digital Enhanced Cordless Telecommunication (DECT) specification, is one of the most advanced European digital cordless telephone equipment.

This phone uses carrier frequencies from 1.88GHz to 1.9GHz. It also uses Time Division Multiple Access method, so it can protect you from eavesdropping and provide the most communication. One of the main privileges is the duplex communication between each handset via base.

1.1 Feature

- GAP compatible system
- 1 Base-station can register up to 5 Handsets
- 1 Handset can be registered to 4 Base-stations
- Paging from Baseset to Handsets
- Intercom call during External call
- Call waiting from PSTN
- Broker's call (change connection to PSTN or INT which is On-Hold)
- Transfer External call to other handset
- On hook dialing with editing function
- LCD (2 lines, 14 alpha. Numeric)
- 12 numeric keys & 8 function keys
- Adjustable Ringer Volume
 - up to 4 levels at Handset and Baseset (include Ringer Off)
- Adjustable Ringer Melody
 - up to 4 melodies at Handset.
- Adjustable earpiece volume of handset (7 levels)
- Low Battery warning display ("Battery Low") and out of range warning display("Out of range").
- Caller ID memories (10 locations)
- Phone book memories (50 locations, 24 digits and 14 characters)
- Last number redial memories (4 locations, 24 digits)
- Programmable PABX access code HKZ/AKZ (5 digits)
- Programmable dialing pause time (0 sec. / 1 sec. / 3 sec. / 5 sec.)
- DTMF dialing mode only
- Caller ID information display (DTMF and FSK)
- Programmable Handset PIN number (8 digits)
- Programmable System PIN number (8 digits)

1.2 Accessories

- Battery
- Tel-line
- Adapter
- User's Manual

2. Operation Instructions

2.1 Start-up

- Connect the power to the Base unit and Battery to the Handset correctly.
- When the Handset is placed on the charger unit, the Handset battery is charged.
- If the above procedure is completed, the Handset searches the Base.

- During searching Base
- After approx. 5 sec. go to the on-line mode

O U T O F R A N G E

- After searching Base

P H O N E B O O K
P R O G R A M M I N G

2.2 Basic Operation

2.2.1 Incoming Call from PSTN

When an incoming call from PSTN is detected in the Base unit, Base is ringing and talk LED on the Base is blinking, and all Handsets that are not busy are ringing and displaying the message. If the Caller ID is detected, Calling Party Number will be displayed.

I N C O M I N G C A L L

- Press the **TEL**-key
Or
- Cradle off if the handset is on the charger unit.
All other Handset will stop the ringing.

2.2.2 Outgoing Call to PSTN

- Press the **TEL**-key
You can see the message and after then hear the dial tone.

T E L - N U M B E R

- Enter the dialing number < **0~9, R, *, #** >

T E L - N U M B E R
1 2 3 4 5 6 7

And then you can have conversation.

- If the charge pulse is supplied by user network provider, the current charge will be displayed.

T E L - N U M B E R
1 . 2 0

If another Handset are doing PSTN call already, the busy tone will be heard.

L I N E B U S Y

2.2.3 Paging from Base to Handset (up to 5 Handsets)

The Handset can be ringed by pressing **Paging**-key at the Base.

- Press **Paging**-key at the Base

All Handsets are ringing during 30 sec. If no answer From Handset within 30 sec, paging will be stopped.

P H O N E B O O K
P R O G R A M M I N G

•To cancel this mode, press **Paging**-key at the Base or **TEL**-key at the Handset
All Handsets stop ringing

∅ **REMARKS**

Paging is only possible when the Base is idle.

2.2.4 Intercom Call to Other Handset

•Stand-by

P H O N E B O O K
P R O G R A M M I N G

•Press **INT**-key

I N T E R C O M N O :

•Key-in Intercom number.

I N T E R C O M N O : 3

•Press **TEL**-key to disconnect.
•Call time display during 3 sec.

P H O N E B O O K
0 1 : 3 5

•Stand-by

P H O N E B O O K
P R O G R A M M I N G

2.2.5 Intercom Call from Other Handset

When the handset receives the intercom call from other Handset, then ringing and display the calling handset Number (1, 2, 3, 4, 5)

I N T E R C O M
1

•Press **TEL**-key to connect the intercom call
•Press **TEL**-key to disconnect the intercom call

2.2.6 Intercom Call to Another Handset during PSTN Call

•On line mode

T E L - N U M B E R
0 9 0 1 2 3 4 5 6 7

•Press **INT**-key

I N T E R C O M N O :

•Key-in Intercom number
•Press **INT**-key to retrieve PSTN call

I N T E R C O M N O : 3

- Or press **TEL**-key to transfer the call to other Handset

T E L - N U M B E R
0 9 0 1 2 3 4 5 6 7

- Call time display during 3 sec.

P H O N E B O O K
0 1 : 3 5

- Stand-by

P H O N E B O O K
P R O G R A M M I N G

∅ **REMARK** During one Handset is doing the PSTN call, Intercom call is possible between two of other handsets registered.

2.2.7 Manual Dialling, On-Line

2.2.7.1 Normal Dialling

- Stand-by

P H O N E B O O K
P R O G R A M M I N G

- Press **TEL**-key
Shown when dial tone is heard

T E L - N U M B E R

- Enter the dialing number < **0~9, R, *, #** >

T E L - N U M B E R
1 2 3 4 5 6 7

2.2.7.2 Pre-Dialling

- Stand-by

P H O N E B O O K
P R O G R A M M I N G

- Enter the dialing number < **0~9, -, #, *** >
- Press **Pause(R/-)**-key after dialing number if you want to enter dialing pause. The dialing pause '-' is displayed.

T E L - N U M B E R
0 2 0 - 8 7 6 5 4 3 2 1

- Press **TEL**-key

T E L - N U M B E R
0 2 0 - 8 7 6 5 4 3 2 1

- The call will be processed.

T E L - N U M B E R
0 2 0 - 8 7 6 5 4 3 2 1

- On-line

T E L - N U M B E R
0 2 0 - 8 7 6 5 4 3 2 1

- Call time display during 3 sec.

P H O N E B O O K
0 1 : 3 5

- Disconnect Press **TEL**-key
- Stand-by

P	H	O	N	E	B	O	O	K		
P	R	O	G	R	A	M	M	I	N	G

2.2.7.3 Phone Book-Dialing, by Scrolling

You can dial stored dial number.

- Stand-by

P	H	O	N	E	B	O	O	K		
P	R	O	G	R	A	M	M	I	N	G

- Press **Down**-key one time

P	H	O	N	E	B	O	O	K		
P	R	O	G	R	A	M	M	I	N	G

- Press **OK**-key

C	U	R	T				
1	2	3	4	5	6	7	8

- Press **TEL**-key when desired number is shown

C	U	R	T				
1	2	3	4	5	6	7	8

- This message is displayed, when the end of phone book is reached by pressing the **Up/Down** key.

E	N	D	O	F	L	I	S	T
---	---	---	---	---	---	---	---	---

- Press **TEL**-key to disconnect.
- Call time display during 3 sec.

P	H	O	N	E	B	O	O	K
0	1	:	3	5				

- Stand-by

P	H	O	N	E	B	O	O	K		
P	R	O	G	R	A	M	M	I	N	G

2.2.7.4 Phone Book-Dialing, by Alphabetic Retrieval

- Stand-by

P	H	O	N	E	B	O	O	K		
P	R	O	G	R	A	M	M	I	N	G

- Press **Down**-key one time

P	H	O	N	E	B	O	O	K		
P	R	O	G	R	A	M	M	I	N	G

- Press Key corresponding to the first character in The Name

C	U	R	T				
1	2	3	4	5	6	7	8

- Press **TEL**-key when desired number is shown

C	U	R	T				
1	2	3	4	5	6	7	8

- Press **TEL**-key to disconnect.
- Call time display during 3 sec.

P	H	O	N	E	B	O	O	K
0	1	:	3	5				

- Stand-by

P H O N E B O O K
P R O G R A M M I N G

2.2.7.5 From Last Number Redial

- Stand-by

P H O N E B O O K
P R O G R A M M I N G

- Press **LNR**-key
- Last dialed number is shown

T E L - N U M B E R
0 0 9 8 2 2 8 5 7 9 0 5 0

- Press **TEL**-key when desired number is shown

T E L - N U M B E R
0 0 9 8 2 2 8 5 7 9 0 5 0

- Press **TEL**-key to disconnect.
- Call time display during 3 sec.

P H O N E B O O K
0 1 : 3 5

- Press **TEL**-key to disconnect.
- Stand-by

P H O N E B O O K
P R O G R A M M I N G

2.2.8 Memory and Menus

2.2.8.1 Store Phone Book Number

- Stand-by

P H O N E B O O K
P R O G R A M M I N G

- Press **Down**-key twice

P H O N E B O O K
P R O G R A M M I N G

- Press **OK**-key

P H O N E B O O K N O
K E Y - T O N E

- press **OK**-key

N A M E
-

- Program name with Key-pad

N A M E
C U R T

- Press **OK**-key

C U R T
-

- Key in number with Key-pad
- Press **OK**-key

C U R T
0 8 9 4 3 5 6 7 2 1

- Saving message display

C	U	R	T		
S	T	O	R	E	D

- Stand-by

P	H	O	N	E	B	O	O	K		
P	R	O	G	R	A	M	M	I	N	G

2.2.8.2 Key-Tone

- Stand-by

P	H	O	N	E	B	O	O	K		
P	R	O	G	R	A	M	M	I	N	G

- Press **Down**-key twice

P	H	O	N	E	B	O	O	K		
P	R	O	G	R	A	M	M	I	N	G

- Press **OK**-key and **Down**-key one time

P	H	O	N	E	B	O	O	K	N	O
K	E	Y	-	T	O	N	E			

- Press **OK**-key and Select key-tone on or off by pressing # or *

K	E	Y	-	T	O	N	E		
?	O	N				O	F	F	?

- Press **OK**-key

- Stand-by

P	H	O	N	E	B	O	O	K		
P	R	O	G	R	A	M	M	I	N	G

2.2.8.3 Ringer Volume

- Stand-by

P	H	O	N	E	B	O	O	K		
P	R	O	G	R	A	M	M	I	N	G

- Press **Down**-key twice

P	H	O	N	E	B	O	O	K		
P	R	O	G	R	A	M	M	I	N	G

- Press **OK**-key and **Down**-key twice

K	E	Y	-	T	O	N	E				
R	I	N	G	E	R	V	O	L	U	M	E

- Press **OK**-key

K	E	Y	-	T	O	N	E				
R	I	N	G	E	R	V	O	L	U	M	E

2.2.8.3.1 Handset Ringer Volume

- Select Handset by pressing # or *

R	I	N	G	E	R	V	O	L	U	M	E	
?	H	A	N	D	S	E	T	B	A	S	E	?

- Press **OK**-key and select the volume level by pressing # or *

```
R I N G E R   V O L U M E
? H  M  L           O F F ?
```

- press **OK**-key
- Stand-by

```
P H O N E   B O O K
P R O G R A M M I N G
```

2.2.8.3.2 Base Ringer Volume

- Select Base by pressing # or *

```
R I N G E R   V O L U M E
? H A N D S E T   B A S E ?
```

- Press **OK**-key and key in System PIN Code

```
E N T E R   S Y S - C O D E
* * * *
```

- Press **OK**-key and select the volume level by pressing # or *

```
R I N G E R   V O L U M E
? H  M  L           O F F ?
```

- Press **OK**-key
- Stand-by

```
P H O N E   B O O K
P R O G R A M M I N G
```

2.2.8.4 HandSet Ringer Type

- Stand-by

```
P H O N E   B O O K
P R O G R A M M I N G
```

- Press **Down**-key twice

```
P H O N E   B O O K
P R O G R A M M I N G
```

- Press **OK**-key and **Down**-key three times

```
R I N G E R   V O L U M E
R I N G E R   T Y P E
```

- Press **OK**-key and select the type number by pressing # or *

```
R I N G E R   T Y P E
?  1  2  3  4           ?
```

- Press **OK**-key
- Stand-by

```
P H O N E   B O O K
P R O G R A M M I N G
```

2.2.8.5 Background Light

- Stand-by

```
P H O N E   B O O K
P R O G R A M M I N G
```

- Press **Down**-key twice

```
P H O N E   B O O K
P R O G R A M M I N G
```

•Press **OK**-key and **Down**-key four times

```
R I N G E R   T Y P E
B A C K G R   L I G H T
```

•Press **OK**-key and select **YES** or **NO**
by pressing # or *

```
B A C K G R   L I G H T
? Y E S                               N O ?
```

•Press **OK**-key
•Stand-by

```
P H O N E   B O O K
P R O G R A M M I N G
```

2.2.8.6 Language

•Stand-by

```
P H O N E   B O O K
P R O G R A M M I N G
```

•Press **Down**-key twice

```
P H O N E   B O O K
P R O G R A M M I N G
```

•Press **OK**-key and **Down**-key five times

```
B A C K G R   L I G H T
L A N G U A G E
```

•Press **OK**-key and select the language
by pressing # or *

```
L A N G U A G E
? D E U           F R A           I T A
```

•Press **OK**-key
•Stand-by

```
P H O N E   B O O K
P R O G R A M M I N G
```

2.2.8.7 Prefix

•Stand-by

```
P H O N E   B O O K
P R O G R A M M I N G
```

•Press **Down**-key twice

```
P H O N E   B O O K
P R O G R A M M I N G
```

•Press **OK**-key and **Down**-key six times

```
L A N G U A G E
P R E F I X
```

•Press **OK**-key and key in System PIN Code

```
E N T E R   S Y S - C O D E
                                     * * * *
```

•Press **OK**-key and select **YES** or **NO**
by pressing # or *

```
P R E F I X
? Y E S                               N O ?
```

- Press **OK**-key and key in digits with Key-pad

P R E F I X
0 0 7

- Press **OK**-key
- Stand-by

P H O N E B O O K
P R O G R A M M I N G

2.2.8.8 Pause Time

- Stand-by

P H O N E B O O K
P R O G R A M M I N G

- Press **Down**-key twice

P H O N E B O O K
P R O G R A M M I N G

- Press **OK**-key and **Down**-key seven times

P R E F I X
P A U S E T I M E

- Press **OK**-key and key in System PIN Code

E N T E R S Y S - C O D E
* * * *

- Press **OK**-key and select **YES** or **NO** by pressing # or *

P A U S E T I M E
? 1 S 3 S 5 S O F F ?

- Press **OK**-key and select the time by pressing # or *

P A U S E T I M E
? 1 S 3 S 5 S O F F ?

- Press **OK**-key
- Stand-by

P H O N E B O O K
P R O G R A M M I N G

2.2.8.9 Select Base

- Stand-by

P H O N E B O O K
P R O G R A M M I N G

- Press **Down**-key twice

P H O N E B O O K
P R O G R A M M I N G

- Press **OK**-key and **Down**-key eight times

P A U S E T I M E
H A N D S E T & B A S E

- Press **OK**-key

S E L E C T B A S E
R E G I S T R A T I O N

- Press **OK**-key and key in PIN-code

S E L E C T B A S E
P I N - C O D E * * * *

- Press **OK**-key

```
S E L E C T   B A S E
P I N - C O D E   0 0 0 0
```

- Select one Base Number with Key-pad

```
E N T E R   B A S E
N U M B E R       1 2 3 4
```

- Press **OK**-key

```
B A S E   N U M B E R : 3
```

- Stand-by after approx. 3 sec.

```
P H O N E   B O O K
P R O G R A M M I N G
```

2.2.8.10 Registration

- Stand-by

```
P H O N E   B O O K
P R O G R A M M I N G
```

- Press **Down**-key twice

```
P H O N E   B O O K
P R O G R A M M I N G
```

- Press **OK**-key and **Down**-key eight times

```
P A U S E   T I M E
H A N D S E T   &   B A S E
```

- Press **OK**-key and **Down**-key one time

```
S E L E C T   B A S E
R E G I S T R A T I O N
```

- Press **OK**-key and select Base number.

```
E N T E R   B A S E
N U M B E R       1 2 3 4
```

- Press **OK**-key and **PAGE**-key in Base for approx. 5 sec.

```
P R E S S   P A G E -
K E Y   I N   B A S E
```

- Wait until receiving the BaseSet RFPI

```
R E G I S T R A T I O N
0 0 A 9 - 0 0 0 0 h
```

- Press **OK**-key and key in System PIN Code

```
E N T E R   S Y S - C O D E
* * * *
```

- Stand-by after approx. 3 sec.

```
P H O N E   B O O K
P R O G R A M M I N G
```

2.2.8.11 Deregistration

- Stand-by

```
P H O N E   B O O K
P R O G R A M M I N G
```

•Press **Down**-key twice

P H O N E B O O K
P R O G R A M M I N G

•Press **OK**-key and **Down**-key eight times

P A U S E T I M E
H A N D S E T & B A S E

•Press **OK**-key and **Down**-key two time

R E G I S T R A T I O N
D E R E G I S T R A T I O N

•Press **OK**-key and key in System PIN Code

E N T E R S Y S - C O D E
* * * *

•Press **OK**-key and select one Handset with Key-pad

E N T E R H A N D S E T
N U M B E R 1 2 3 4 5

•Press **OK**-key

D E R E G I S T E R H : 3
P R E S S O K

•Press **OK**-key

D E R E G I S T E R E D
H A N D S E T : 3

•Stand-by after approx. 1 sec.

P H O N E B O O K
P R O G R A M M I N G

2.2.8.12 Handset and Base Number

•Stand-by

P H O N E B O O K
P R O G R A M M I N G

•Press **Down**-key twice

P H O N E B O O K
P R O G R A M M I N G

•Press **OK**-key and **Down**-key nine times

H A N D S E T & B A S E
H / S & B / U N O

•Press **OK**-key

H / S & B / U N O
B : 1 H : 3

•Handset and Base number display

•Stand-by after approx. 3 sec.

P H O N E B O O K
P R O G R A M M I N G

•2.2.8.13 R-key Function

P H O N E B O O K
P R O G R A M M I N G

•Press **OK**-key and **Down**-key ten times

H / S & B / U N O
R - K E Y

•Press **OK**-key and key in System PIN Code

E N T E R S Y S - C O D E
* * * *

2.2.8.13.1 Flash

•Press **OK**-key and select “FLASH” by pressing # or *

R - K E Y
? F L A S H E A R T H ?

•Press **OK**-key and select “NORMAL” or “OPT” by pressing # or *

F L A S H
? N O R M A L O P T ?

•Press **OK**-key

•Stand-by after approx. 3 sec.

P H O N E B O O K
P R O G R A M M I N G

2.2.8.13.2 Earth

•Press **OK**-key and select “EARTH” by pressing # or *

R - K E Y
? F L A S H E A R T H ?

•Press **OK**-key

•Stand-by after approx. 3 sec.

P H O N E B O O K
P R O G R A M M I N G

2.2.8.14 Pin-code Change

•Stand-by

P H O N E B O O K
P R O G R A M M I N G

•Press **Down**-key twice

P H O N E B O O K
P R O G R A M M I N G

•Press **OK**-key and **Down**-key eleven times

R - K E Y
P I N - C O D E

2.2.8.14.1 Handset Pin-code

•Press **OK**-key and select “HANDSET” by pressing # or *

P I N - C O D E
? H A N D S E T B A S E ?

2.2.8.14.1.1 Handset Pin-code, Change

- Press **OK**-key and select “CHANGE” by pressing # or *

```
P I N - C O D E
? C H A N G E           D E F ?
```

- Press **OK**-key and key in old PIN-code with Key-pad after 3 sec.

```
P I N - C O D E
O L D                   * * * *
```

- Press **OK**-key and key in new PIN-code with Key-pad after 3 sec.

```
P I N - C O D E
N E W                   * * * *
```

- Press **OK**-key and key in new PIN-code with Key-pad again after 3 sec.

```
P I N - C O D E
V E R I F Y           * * * *
```

- Press **OK**-key
- Stand-by after 1 sec.

```
P H O N E   B O O K
P R O G R A M M I N G
```

2.2.8.14.1.2 Handset Pin-code, Default

- Press **OK**-key and select “DEF” by pressing # or *

```
P I N - C O D E
? C H A N G E           D E F ?
```

- Press **OK**-key and Key in Master Code
 ☞ Master Code (Pin code or 2411)

```
P I N - C O D E
M A S T E R           * * * *
```

- Press **OK**-key
- Stand-by after 1 sec.

```
P H O N E   B O O K
P R O G R A M M I N G
```

2.2.8.14.2 Base Pin-code Change

- Press **OK**-key and select “BASE” by pressing # or *

```
P I N - C O D E
? H A N D S E T       B A S E ?
```

- Press **OK**-key and key in old System PIN-code with Key-pad after 3 sec.

```
E N T E R   S Y S - C O D E
O L D                   * * * *
```

- Press **OK**-key and key in new System PIN-code with Key-pad after 3 sec.

```
E N T E R   S Y S - C O D E
N E W                   * * * *
```

- Press **OK**-key and key in new System PIN-code with Key-pad again after 3 sec.

```
E N T E R   S Y S - C O D E
V E R I F Y           * * * *
```

- Press **OK**-key
- Stand-by after 1 sec.

```
P H O N E   B O O K
P R O G R A M M I N G
```

2.2.8.15 Default

•Stand-by

P H O N E	B O O K
P R O G R A M M I N G	

•Press **Down**-key twice

P H O N E	B O O K
P R O G R A M M I N G	

•Press **OK**-key and **Down**-key twelve times

P I N - C O D E
D E F A U L T

•Press **OK**-key and key in PIN-code with Key-pad

E N T E R	P I N - C O D E
	* * * *

•Press **OK**-key

•Wrong PIN-code, back to Stand-by

E N T E R	P I N - C O D E
	0 0 0 0

•Press **OK**-key

D E F A U L T
A R E Y O U S U R E ?

•Press **OK**-key or **C**-key

D E F A U L T
V E R I F Y

•Press **OK**-key and wait until completing the default Setting.

P L E A S E
R E G I S T E R

2.2.10 Phone Book Number

2.2. 10.1 Edit

•Stand-by

P H O N E	B O O K
P R O G R A M M I N G	

•Press **Down**-key twice

P H O N E	B O O K
P R O G R A M M I N G	

•Press **OK**-key

P H O N E	B O O K	N O
K E Y - T O N E		

•Press **OK**-key

N A M E
-

•Use **UP**-key and **Down**-key to select the content must be edited.

A D M
0 0 9 8 1 2 3 2 3 2 3 2 3 2

- Press **C**-key to edit

N A M E
-
- Program name with Key-pad

N A M E
A D A M
- Press **OK**-key and key in number with Key-pad

A D A M

- Key in number with Key-pad

A D A M
0 1 7 8 1 2 3 2 3 2 3 2 3 2
- Press **OK**-key

A D A M
S T O R E D
- Stand-by

P H O N E B O O K
P R O G R A M M I N G

2.2.10.2 Erase One Number

- Stand-by

P H O N E B O O K
P R O G R A M M I N G
- Press **Down**-key twice

P H O N E B O O K
P R O G R A M M I N G
- Press **OK**-key

P H O N E B O O K N O
K E Y - T O N E
- Press **OK**-key

N A M E
-
- Select the content with **UP**-key and **Down**-key

A D A M
0 0 9 8 1 2 3 2 3 2 3 2 3 2
- Press **C**-key

N A M E
-
- Press **OK**-key

T E L - N U M B E R

- Press **OK**-key

T E L - N U M B E R
D E L E T E D
- Stand-by

P H O N E B O O K

P R O G R A M M I N G

2.2.10.3 Erase All Numbers

•Stand-by

P H O N E B O O K
P R O G R A M M I N G

•Press **Down**-key twice

P H O N E B O O K
P R O G R A M M I N G

•Press **OK**-key

P H O N E B O O K N O
K E Y - T O N E

N A M E
-

•Select the content with **UP**-key and **Down**-key

A D A M
0 0 9 8 1 2 3 2 3 2 3 2 3 2

•Press **C**-key for 3 sec.

N A M E
-

E R A S E A L L ?
-

•Press **OK**-key

•Stand-by

P H O N E B O O K
P R O G R A M M I N G

2.2.11 Others

2.2.11.1 Occupied Line

•Shown together with Busy tone when line is busy

L I N E B U S Y

2.2.11.2 Volume control

•On line mode

•Press **UP**-key or **DOWN**-key to change volume

T E L - N U M B E R
0 9 0 1 2 3 4 5 6 7

•After 2 sec. return to On line mode

T E L - N U M B E R
V O L U M E 4

T E L - N U M B E R
0 9 0 1 2 3 4 5 6 7

2.2.11.3 Battery Low

LCD alternately displays D.A and D.B

D.A

P H O N E	B O O K
P R O G R A M M I N G	

P H O N E	B O O K
B A T T E R Y	L O W

2.2.11.4 Battery Charging

When a HandSet Battery is charged, LCD alternately displays D.A and D.C

D.A

P H O N E	B O O K
P R O G R A M M I N G	

D.C

P H O N E	B O O K
P R O G R A M M I N G	

2.2.11.5 Out of Range

•On-line mode and Stand-by mode

O U T	O F	R A N G E
-------	-----	-----------

2.2.11.6 Number Longer than 14 Positions

2.2.11.6.1 In Phone Book Mode

•Showing the first 13 figures

K I R Y U N G
0 9 0 1 2 3 4 5 6 7 8 9 0 ?

•Showing the last 13 figures

K I R Y U N G
? 6 7 8 9 0 1 2 3 4 5 6 7 5

2.2.11.6.2 In On-line mode and Pre-dialling mode

•Number longer than 14 positions moves to upper Row and then continues.

1 2 3 4 5 6 7 8 9 0 1 2 3 4

1 2 3 4 5 6 7 8 9 0 1 2 3 4
5 6 7 8 9

2.2.11.7 Phone Book Memory full

- In storing Phone Book number and moving CID's to Phone Book Memory

M C S
M E M O R Y F U L L

2.2.11.8 Key Lock

- Stand-by

P H O N E B O O K
P R O G R A M M I N G

- Press **R**-key and *-key

K E Y L O C K E D !

- In the Key Lock mode, shown this message when any key pressed except 112.

K E Y L O C K E D !
P R E S S R *

- In the Key Lock mode, press **R**-key and *-key if you want to unlock the key-pad.

K E Y L O C K E D !
P R E S S R *

- Stand-by

P H O N E B O O K
P R O G R A M M I N G

