 


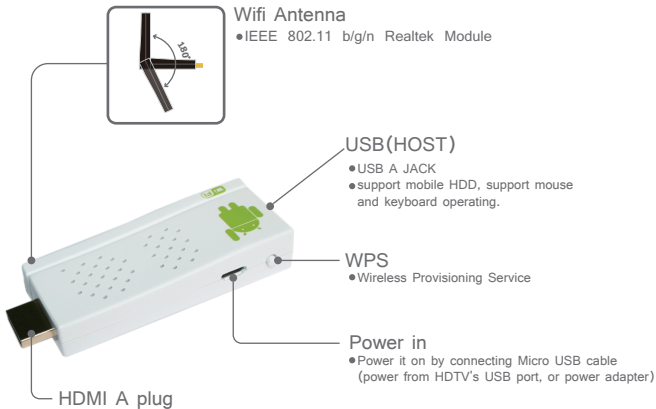

HDMI Dongle • Mini Android 4.0 PC

## Features

- Android 4.0 ICS, powerful 800MHz CPU.
- Turn any HDTV or LCD monitor to SMART TV or Google TV.
- With 3D Graphical processor.
- Rich Android software App resource .
- Support FLASH PLAYER11, online video playing.
- Support 2.4G wireless mouse/keyboard operation.
- Support multi languages .
- Support WIFI 802.11b/g/n.




- Packing Contents

(1). HDMI Dongle	1PC
(2). USB cable	1PC
(3). Quick Start Guide	1PC

- Connecting and Operating

Connect television :

- (1). Put the HDMI plug into the TV's HDMI jack.
- (2). Turn on TV, find the TV programme menu with the monitor and select the corresponding HDMI of the "signal origin".  
(refer to the TV instruction for the detailed information)
- (3). Rotate it back 90 degrees clockwise or counterclockwise.

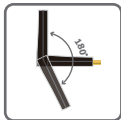

Connect mouse :

- (1). The mouse is used to control HDMI Dongle. It is the same usage as it is used with a computer. An ordinary wired mouse is enough.
- (2). Or a standard 2.4G wireless mouse is OK.

Note: After normally power on, click the mouse once on the left (not twice) to run the programme or select on the menu.

Connect power :

- (1). Connecting Micro USB cable from HDTV's USB port, or power adapter.
- (2). It can begin to work normally and the LED light will flash after finishing the above actions.
- (3). Wait until the HDMI dongle totally powered on, the TV screen will show the primary desktop ( see below picture)




Connect internet:

- (1). The produce is equipped with Wi-Fi. It can be connected to the Internet through Wi-Fi. For the first use, set the Wi-Fi wireless net .
- (2). Click "Setting" once.
- (3). In the menu "Setting->Wi-Fi", select Wi-Fi, choose Wi-Fi router name,




After keying in the code(if there is),select "Connection" to finish connection.  
The Wi-Fi icon will appear after finishing all the actions.

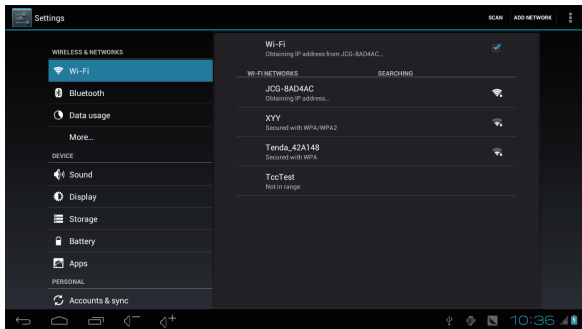

Fix resolution of the screen

 
- (1). If the HDMI output of TV screen is not complete, entering "Display-output settings" and fix the resolution of the screen by mouse. or set it as automatic selection.

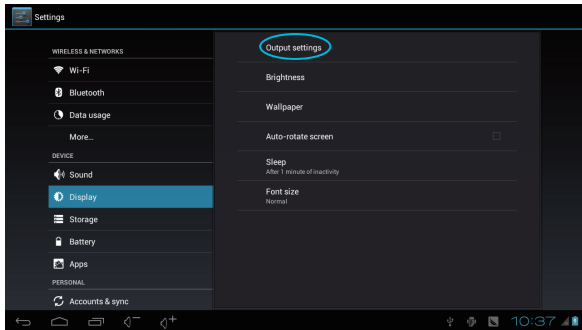



Fix voice

- (1). Click the mouse once on the voice icon to increase or decrease the volum.

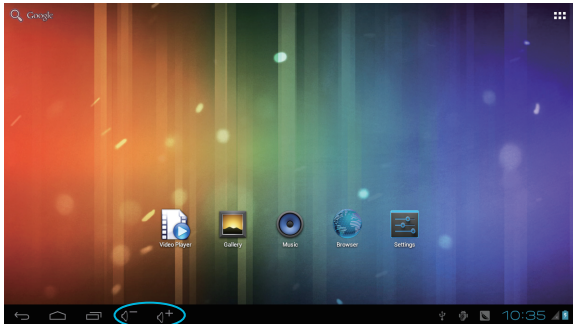


Copy files(connect with the computer)

- (1). Connect HDMI dongle into computer USB,wait it to power on.
- (2). Click the mouse on the bottom right corner of the screen, then the menu appears, click the items in the blue circle.



- (2). After the below desktop appears, click the button in the blue circle.
- (3). In the computer, wait for the driver (like U flash) appears. The usage is the same as U flash.

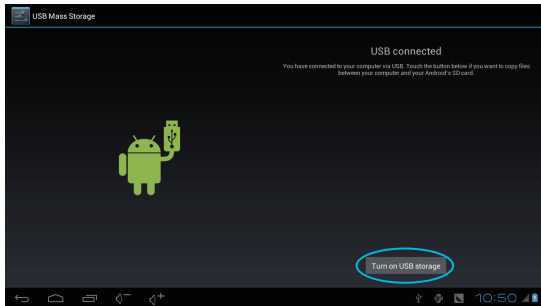

Install and delete the apps

Install the apps:

- (1). Click the top right corner, the installed apps will appear.



- (2). Choose "Androidmarket" (or choose other "software market" to install apps.)
- (3). If it is the first time to run the "Android market", then it needs to key in the Google email account .



Delete apps:

- (1). Running "Setting", the downloaded and installed apps will appear.  
Click the unloading apps, the apps and its information desktop will appear.  
Then click "Unloading"

