



Melaudio 18 S2



Manual

Version 1.0

Table of Contents

<i>Table of Contents</i>	<i>1</i>
<i>1. Safety Precautions</i>	<i>2</i>
<i>2. Package Contents</i>	<i>2</i>
<i>3. Introduction</i>	<i>2</i>
<i>4. Main Menu</i>	<i>3</i>
4.1 Music.....	3
4.2 Movie.....	5
4.3 Record.....	6
4.4 Voice.....	7
4.5 FM Radio.....	8
4.6 Photo.....	9
4.7 Setup.....	9
4.8 E-Book.....	10
4.9 Game.....	10
<i>5. Connecting your device to your PC</i>	<i>11</i>
Windows System Requirement.....	11
Connect to PC.....	11
<i>6. Technical support</i>	<i>12</i>
<i>7. Technical Specifications</i>	<i>13</i>

1. Safety Precautions

1. Do not use this device in extremely thermal, cold, dusty or watery circumstances
2. To prevent surface abrade, batteries peeling off, or any other damage, do not collide this device with any hard objects.
3. To prevent damage caused by static electricity, do not use this device in extremely dry circumstances
4. To prevent system errors or malfunction, do not disconnect the device abruptly, when formatting this device, or uploading and downloading data/music.
5. Do not switch from On to Off without first shutting down the device from the PLAY button. There is possibility that data may be lost.
6. The manufacturer is not responsible for any loss or damage caused by missing documents etc
7. To charge the device, the ON-OFF switch needs to be ON. When it is OFF the device will not charge.

2. Package Contents

1. Melaudio 18 S2 MP4 Player
2. Stereo earphones
3. USB extension cable
4. User's Manual / warranty card

3. Introduction

Function Keys:

1. **Previous:** "◀◀" Short press: Move to previous song.
Long press: fast reverse.
.
2. **Play:** "▶" Performs **Power ON/OFF /Play/Pause/Stop.**
Keep pressing "▶" to power on or power off the MP4 Player. 7
You can then press "▶" for play or pause.
3. **Next:** "▶▶" Short press: Move to next song,
Long press: fast forward.
4. **Mode:** "M" key performs different operations by continuous pressing or by pressing once.
By continuous pressing you return to the main menu from any submenu
By pressing once you confirm your choice and/or you are transferred to the next submenu
5. **Vol:** press this button and use the "◀◀" and "▶▶" to increase volume or decrease volume.
6. **Power ON/OFF:** Use this to switch on/off your device
7. **Headphone:** Headphone interface
8. **USB:** Interface with computer



IMPORTANT: How to power on/off your device

It is preferable to use the **Play: "▶"** button for powering ON/OFF your device. The ON/OFF switch on the side of Melaudio 18 S2 works more like a reset button. If you switch your device using this switch you may lose your settings (e.g. radio stations e.t.c).

4. Main Menu

Press the Play button "▶" continuously to switch on the MP4 player. If you are already inside a certain menu (e.g. Music or FM) press "M" continuously in order to view the main menu .

4.1 Music



Use "◀◀" and "▶▶" to navigate through the main menu. Select Music and press "M" to enter.

For choosing music:

"◀◀" Short press: choose the previous item of music. Long press: fast reverse

"▶▶" Short press: choose the next item of music. Long press: fast forward

Volume control: shortly press "VOL", press this button and use the "◀◀" and "▶▶" to increase volume or decrease volume.

Music-playback menu

Press "▶" to play a song. When the MP4 player is playing click "M" to enter the following Music Sub-menu.

Repeat	Normal	Normal play mode (If you want to choose and play the songs of a folder normal repeat must be selected)
	Repeat One	Plays a single song repeatedly.
	Folder	Plays the music in the folder that you have selected.
	Repeat Folder	Plays the entire folder repeatedly.
	Repeat All	Plays all songs repeatedly
	Random	Plays the songs inside a folder in random order
	Intro	Plays the first 10 seconds of each song.
EQ Select	Natural	Enter the Equalizer mode and choose one of the different modes shown on the left.
	Rock	
	Pop	
	Classic	
	Soft	
	Jazz	
	Bass	
	DBB	
SRS WOW		<p>SRS WOW</p> <p>①. User Mode: SRS 3D (0 ~ 10) , TruBass (0 ~ 10) , FOCUS (0 ~ 10)</p> <p>②. Disable SRS WOW</p>
Tempo Rate		Enter the Tempo Rate Mode and select the speed you want to play a song (Slower or faster than normal).
Replay		<p>Enter "Replay" to keep playing a segment of music.</p> <p>To repeat playing a segment of a song.</p> <p>While 'A' is blinking, click "▶▶" to choose the start of the segment. 'B' will start blinking.</p> <p>While 'B' is blinking, click "▶▶" again to choose the end of the segment. Now the MP4 player will keep playing the segment you have specified.</p> <p>To re-segment, click"◀◀" and 'A' will blink. Then choose the start and end of segment as above.</p> <p>"A-B Replay" will continue until you click "M" to exit.</p>
Replay Times		Enter Replay Times and choose how many times you want the song to be repeated.
Replay Gap		Enter Replay Gap and choose how many seconds must pass until the song is repeated.
Exit		Exit the Music-Playback submenu



Note:

In case you cannot choose and play the songs of a specific folder select normal repeat mode and restart your device using the “▶” button.

Music Submenu

If a song is playing Press “▶” to pause/stop playing the song. On stop/pause mode click “M” to enter the music submenu:

Local Folder	Choose the folder (if you have previously created folders) from which you want the device to play songs
Delete file	Choose “Delete file” in order to delete a song.
Delete All	Choose “Delete all” in order to delete all songs
Exit	Exit the Music submenu

Lyrics

You can read the lyrics of the song that you hear. To do that you must store the song and the “.lrc” file (file containing the lyrics of the song) both in the same folder.

If lyrics are available for the song currently playing, an icon will appear to the right bottom corner of your screen .

While playing, you must keep “M” pressed for the lyrics to appear. The characters in the lyrics file must not exceed 500.

4.2 Movie



Use “◀◀” and “▶▶” to navigate through the main menu. Select Movie and press “M” to enter .

Local Folder	Choose the folder (if you have previously created folders) from which you want the device to play songs
Delete	Choose “Delete” in order to delete a movie.
Delete All	Choose “Delete all” in order to delete all movies
Repeat	Same as in the previous menu
Exit	Exit the Movie submenu



Note:

This device can playback AMV files format. You have to convert your video files to “.amv” file type. You can use the software in www.crypto.gr for this purpose..

4.3 Record



Use “◀◀” and “▶▶” to navigate through the main menu. Select Record and press “M” to enter.

Local Folder		The recorded file will be saved in the Root folder. If you want to choose a different folder, go to Local Folder and select the folder that you want your recording to be saved in.
Rec Type	Fine REC	High – quality voice record, WAV format, good audio quality.
	Long REC	Long – time voice record, ACT format, normal audio quality
	Fine VOR	At Long VOR or Fine VOR mode, The device will stop recording when no sound exists and it will continue when the sound returns
	Long VOR	
Exit		Exit Record menu

Inside the Record menu click “M” and then “Rec Type” to choose between various recording options. Use “◀◀” and “▶▶” to select the type you want and press “M”. Click “▶” to start recording. Click “▶” again to stop recording. Now you have the following options:

- 1) Press “▶” again so that the recording will continue from where it stopped, and
- 2) Press “▶” continuously in order to save the recording and create a record file.

	<p><u>Note:</u></p> <ol style="list-style-type: none"> 1. When the recording time exceeds 60 minutes, time will be displayed in hh:mm format. 2. During recording, if battery is low, the player will stop recording, and will save the record file. If the Screen indicates low battery, user should charge the battery in order to continue recording. 3. The recorded file will not be saved if power supply, is cut, while recording. 4. If the memory is full, the MP4 player will indicate “No space”.
--	---

4.4 Voice



Use “◀◀” and “▶▶” to navigate through the main menu. Select Voice and press “M” to enter. The Voice menu allows you to replay the recorded files.

Voice submenu

Press “▶” to play a recorded file. When the MP4 player is playing click “M” to enter the following Voice Sub-menu.

Repeat	Normal	Normal play mode
	Repeat One	Plays a single recording repeatedly.
	Folder	Plays the music in the folder that you have selected.
	Repeat Folder	Plays the entire recording repeatedly.
	Repeat all	Plays all recorded files repeatedly
	Random	Plays the recorder files inside a folder in a random order.
	Intro	Plays the first 10 seconds of each file.
Tempo Rate		Enter Tempo Rate and select the tempo you want to play a recording (Slower or faster than normal).
Replay		<p>Enter ‘Replay’ to keep playing a segment of music.</p> <p>To repeat playing a segment of a recording.</p> <p>While ‘A’ is blinking, click “▶▶” to choose the start of the segment. ‘B’ will start blinking.</p> <p>While ‘B’ is blinking, click “▶▶” again to choose the end of the segment. Now the MP4 player will keep playing the segment you have specified.</p> <p>To re-segment, click“◀◀” and ‘A’ will blink. Then choose the start and end of segment as above.</p> <p>“A-B Replay” will continue until you click “M” to exit.</p>
Exit		Exit Voice submenu

Voice submenu

Press "▶" again to pause/stop playing the recorded file. On stop mode click "M" to enter the Voice submenu:

Local Folder	Choose the folder (if you have previously created folders) from which you want the Melaudio 18 S2 to play recordings.
Delete file	Choose "Delete file" in order to delete a recording
Delete All	Choose "Delete all" in order to delete all recorded sessions
Exit	Exit Voice submenu

4.5 FM Radio



Use "◀◀" and "▶▶" to navigate through the main menu. Select FM Radio and press "M" to enter.

- 1) Automatic search

Press "◀◀" or "▶▶" for two seconds, the player searches forward or backward and stops at the station found.

- 2) Micro adjustment

Press "◀◀" for a single step (100KHz) backward

Press "▶▶" for a single step (100KHz) forward

If you store more than 1 station, you can press "▶" to listen them in sequence

Sound control: shortly press "VOL" and then "◀◀" or "▶▶" to decrease or increase volume

FM submenu

Save	Choose "Save" to save a radio station
Record	To record your favorite radio station.
Delete	Delete a stored station from the memory.
Delete All	Delete all stored stations from the memory.
Auto search	To start automatic search
Exit	Exit the FM menu

4.6 Photo



Use “◀◀” and “▶▶” to navigate through the main menu. Select Photo and press “M” to enter

Local Folder	Choose the folder (if you have previously created folders) from which you want the device to show photos.
Play set	Choose between the two options. Manual play or Auto play according to your preference
Delete	Choose “Delete” in order to delete a photo.
Delete All	Choose “Delete all” in order to delete all photos
Exit	Exit the Photo submenu

4.7 Setup




Use “◀◀” and “▶▶” to navigate through the main menu. Select System and press “M” to enter.

System Time		Set the date and time when the recorded files are saved. Press “Vol +” and Use “▶▶” and “◀◀” to change indication.
LCD Set		You can adjust your LCD settings here according your preference. Make your choice and use “▶▶” and “◀◀” to configure.
Language		Set the language display. Use “▶▶” and “◀◀”.

Power Off	Off time	Set the time of shut down when you don't use the device.
	Sleep time	Set the time of shut down when you use the device.
Replay Mode	Manual	Set the mode of Replay: manually or automatically.
	Auto	
Memory Info		Displays the usage of the device memory.
Firmware version		Displays the Firmware version of device.
Firmware upgrade		Upgrade the Firmware of device.
Exit		Exit the Setup menu

4.8 E-Book

Use “◀◀” and “▶▶” to navigate through the main menu. Select E-book and press “M” to enter .

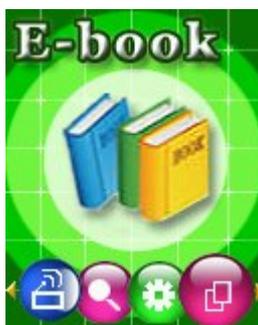


Local Folder	Choose the folder (if you have previously created folders) from which you want the device to read text files.
Play set	Choose between the two options. Manual play or Auto play according to your preference
Delete file	Choose “Delete” in order to delete a file.
Delete All	Choose “Delete all” in order to delete all e-book files.
Exit	Exit the E-Book submenu

4.9 Game



Use “◀◀” and “▶▶” to navigate through the main menu. Select Game and press “M” to enter.

1. press **M** into a number only game, the choice " beginning the " item, enter game to play.

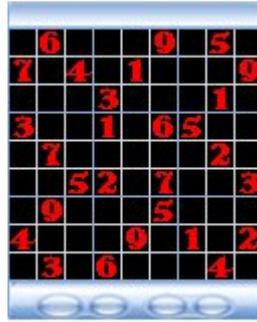

2. the choice"Option" here are 3 grades can be provided as choice.

5. Connecting your device to your PC

Windows System Requirement

OS: Windows XP/2K/ME/98 (driver installation needed) /Linux9 and above /Mac OS 10/Vista

CPU: Pentium-133MHz at least

Memory: 32MB at least

Hard disk free space, 100MB at least

USB port

Disk driver

Connect to PC

Connect the player to PC with the supplied USB cable in power-off/on status; after the system starts, it will enter the set mode.

U-disk

connect the player with PC. The removable selection window will show on the PC. Select the folder to copy.

Press **M** to exist from U-disk and enter the application interface.

6. Technical support

For technical information and support please contact us:

Web Site: www.crypto.gr

E-mail: support@crypto.gr



7. Technical Specifications

Audio File Types

- MP3, ACT
- WAV,WMA

Video File Types

- AMV

Picture File Types

- JPEG
- BMP
- GIF

FM Radio

- Frequency: 87MHz-108MHz
- Radio Stations: 20 Preset Stations

Equalizer

- Natural, Rock, Pop, Classic, Soft, Jazz, DBB

Computer Connection

- USB2.0

Screen

- Type: TFT
- Size: 1.8 inches

Power Supply

- Built-in rechargeable Li-Ion battery
- Charge: 2-3 hours
- Battery life: Approximately 7 hours of music, 2.5 hours of video
- 180mAh

Recording

- WAV

OS Compatibility

- Windows XP/Vista/7

Physical Specifications

- Dimensions:86×46×8 mm
- Weight: 35gr

Technical Specifications are subject to change without prior notice.

Disposal of old electrical and electronic equipment



If you see this symbol on the product or on its packaging, you should hand the product over to the applicable collection point for the recycling of electrical and electronic equipment. Do not throw it away with household wastes.

The improper disposal of these products may have negative consequences for the environment and human health.

For more information about the recycling of this product, please contact your local city office, your household waste disposal service or the shop where you purchased it.