



Redefining the Sound of Symphony™



Visit us on the World Wide Web
www.augenus.com

Information provided in this manual may vary depending on the model. Therefore, your model may not have some of the features described in this user guide. We reserves the right to change any information in this user guide without any prior notice.

Printed in China

7" eReader



EBA 701
USER MANUAL

Redefining the Sound of Symphony™

Congratulations

Thank you for your purchase of an Augen product. Your business is very appreciated.

Our goal is that you will be completely satisfied with this product's quality and performance. We offer warranties on all our products

Since 2004, Augen Electronics has shared the fun of discovering innovative products that make life better and more enjoyable. We strive to deliver outstanding customer service that exceeds your expectations.

Enjoy your purchase!

◆ Table of Contents

Introduction and Specifications	2
Safety Information & What is inside the box	3
eReader Control Panel	4-5
Charging the eReader	6
Main Menu	7-11
Settings	12-17
Wi-Fi	18
Browser	19
Buy Books	20
DRM Register	20-21
Music	22
Video, Notepad	23
USB Connection	24
Power Off	24
How to Transfer Files	25
Help Reference	26
Augen Customer Service and Support	27
FCC Statement of Compliance	28

◆ Product introduction:

Copyright

The information contained in this document is provided "as is" and is subject to alteration without notice.

Augen Electronics makes no warranty of any kind with regard to this manual, including, but not limited to, the implied warranties of merchantability and fitness for a particular purpose.

Augen Electronics shall not be liable for any errors contained herein or for incidental or consequential damages in connection with the furnishing, performance, or use of this manual or the examples herein.

All rights reserved to:
© 2008 Augen Electronics Corporation

◆ Specifications

- **Display:** 7 inch, TFT
- **Resolution:** 800 x 480
- **Processor :** ARM9 , 400 Mhz
- **RAM memory:** SDRAM 64MB
- **Operating system:** Linux2.6.24
- **Reader formats supported:** TXT , PDF , HTML , CHM , RTF , FB2 EPUB, WORD ,TCR ,PAML DOC., OPEN E-BOOK ,OPEN READER, MOBI, etc.
- **Music format supported:** MP3,WMA
- **Image formats supported:** JPG, PNG, GIF, BMP
- **Video formats supported:** AVI, MPEG-4
- **Office file format support:** Notepad
- **Support E-bookmark**
- **Support TEXT to Speech function**
- **G-Sensor for Book and picture file**
- **Support recent reading record**
- **Compatible to SD card up to 32G**
- **Language:** English
- **Dimensions:** 226 x 130 x 13mm

◆ Safety Information

Read all safety information carefully before using the eReader

WARNING: Failure to comply with this safety information could result in fire, electric-shock, or other injuries and damages

Never attempt to repair the eReader yourself.
The eReader should be repaired only by an Augen Technical Service Provider

NOTICE: Failure to follow these handling instruction could result in damage to your eReader:

- Avoid using the eReader in extreme weather conditions, as it may be damaged by extreme temperature
- Avoid wet locations. In case the eReader gets wet, unplug all cables, turn the device off and allow it to dry thoroughly before turning it back on
- Keep the eReader clean; avoid dusty and damp conditions
- Do not bend, puncture, incinerate, or open the eReader
- Avoid dropping the eReader
Use clean cloth for cleaning the eReader, do not use liquid or aerosol type of cleaners

◆ What's in the box

1. eReader	1 Pc	5. Leather Case	1 Pc
2. Usb Cable	1 Pc	6. CD	1 Pc
3. User Manual	1 Pc		
4. AC Adapter	1 Pc		



eReader



USB Cable



User Manual



AC adapter



Leather Case



CD

◆ eReader Control Panel

Front View



1. Previous page/ + Volume increase
2. Next Page / - Volume decrease
3. Home
4. Next Page
5. Menu
6. Joystick Button
7. Back
8. Enter Button
9. Sleeping Screen / Renew
10. Lower Case
11. ALT: Press ALT key with any key together.
Example: ALT + key "1" = "!" ALT + key "Q" = "+"
 ALT + key "2" = "@"
12. Zoom In/Out

◆ eReader Control Panel

Bottom View



13. DC jack
14. USB slot
15. Headphone Jack: uses 3.5mm jack
16. SD Card Slot
17. Power Button

Back View



18. Speaker
19. Reset

◆ Charging the eReader

- ◆ Use the AC adapter and plug the adapter to the DC jack of the eReader



- ◆ Battery Indicator will show:



eReader is charging

 


Battery is full

Note: Please charge the eReader at least 4 hours.

◆ Main Menu

Note: eReader's Main Menu contains:
Continue Reading , Favorite, Library, Settings, WIFI, Browser,
Buy books, DRM Register, Music, Video, Notepad, Power off
eReader-work

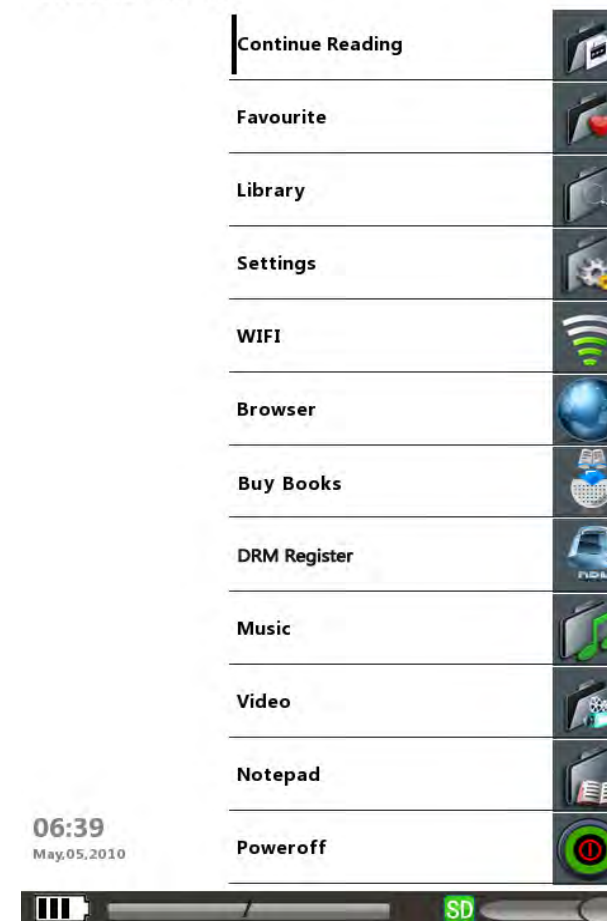

Use the “Joystick” to scroll/highlight the menu and press the “Enter” button to enter to the desired menu

 
◆ Main Menu

Continue Reading

- ◆ Select this option to go back to the last state or page where you left your ebook file.
- ◆ Use the “Joystick” to highlight “Continue Reading” option
- ◆ Press the “Enter” button to open the option. Press “Home” button to go back to the Main Menu

Favorite

- ◆ Use the “Joystick” to highlight “Favorite” Menu and press the “Enter” button to open the menu

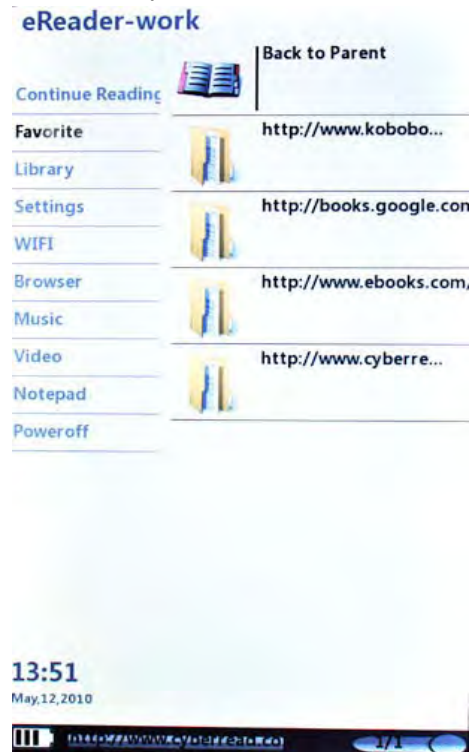


- ◆ The Favorite menu list the websites that is saved to your eReader
- ◆ Press “Back” button to go back to the HOME menu

◆ Main Menu

Library

 - ◆ Use the “Joystick” to Highlight “Library” menu and press the “Enter” button, the submenu will be listed on the right. Library Submenu contains: **Back to Parent, Audio, Digital Editions, Download, Free eBook, Picture, Video**

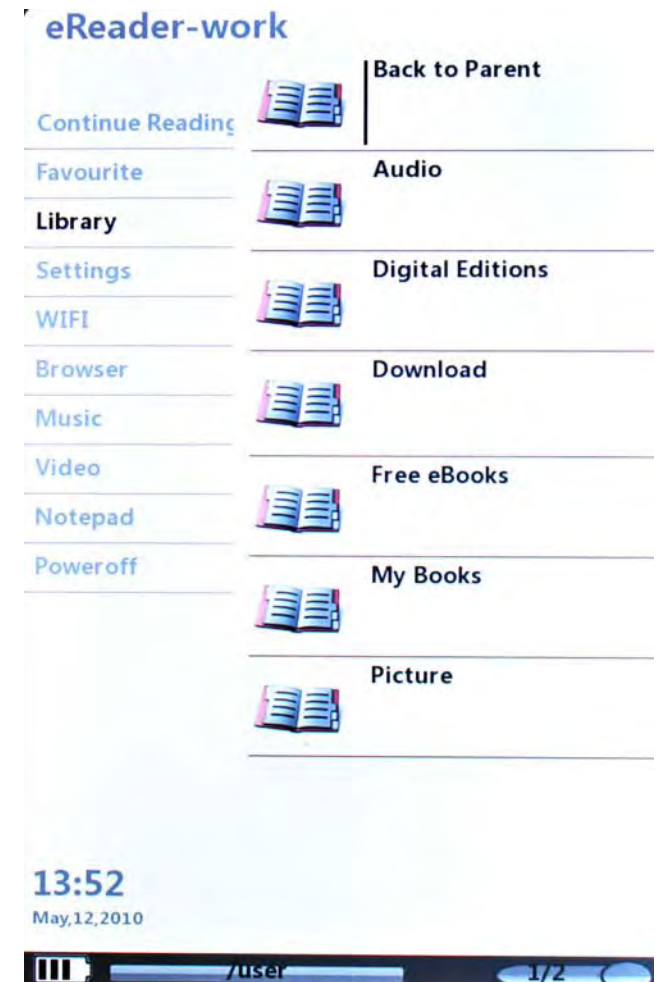

◆ Main Menu

Back to Parent

- ◆ Select “Back to Parent” to go back to the HOME menu
- ◆ Use the “Joystick” to highlight on the following options:
- ◆ Press the “Enter” button to open the selected option.
- ◆ Once done, Press the “Back” button to go back to the submenu or press “Home” button to go to the Main Menu

Digital Editions

- ◆ contains DRM eBooks file. You can save your DRM eBook in this folder.

Download

- ◆ Can save any ebook files to this folder

Free eBooks - contains free E-book files (may vary)

My Books - All files downloaded from the internet will be save to this folder

Picture - contains picture files

Audio - contains Mp3 files, Audio files saved into the eReader

Video- contains video files saved into the eReader

Read Files/Books

- ◆ After opening an eBook file, press “ Menu” button.Menu options contains :

 
Font, GotoPage, Zoom(for PDF format),RefreshMode,Pronounce(Text to speech), Bookmark,Rotate,Favorite,Style,Outline(for PDF format),Time, Exit.

Press “Exit” or “ Back” button to exit to this option.


Note: To change screen orientation while reading from Portrait view, to Landscape bview use G-sensor function

◆ Main Menu

Read PDF format file UI:

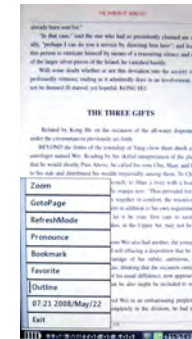

Read other formats file UI:


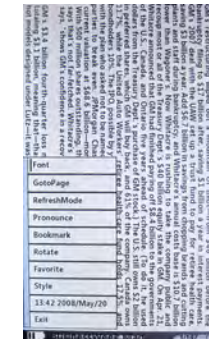 


View Pictures:

After opening a picture, press “ Menu” button. Menu option contains **Zoom, Rotate** functions

Press “Exit” or “ Back” button to exit this option.

  To change display orientation from Portrait view to Landscape view, Move reader’s direction, use G-sensor function.

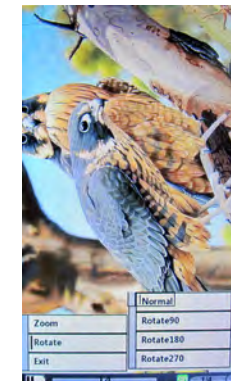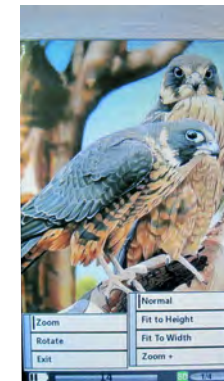


◆ Settings

- ◆ Use the “Joystick” button to highlight the “Settings” menu
- ◆ Press the “Enter” button to open “Settings” menu,

Settings Submenu contains:

 Back to Parent, U Disk, Upgrade, Default, Format, Time, Help, System Info, Backlight, Language.

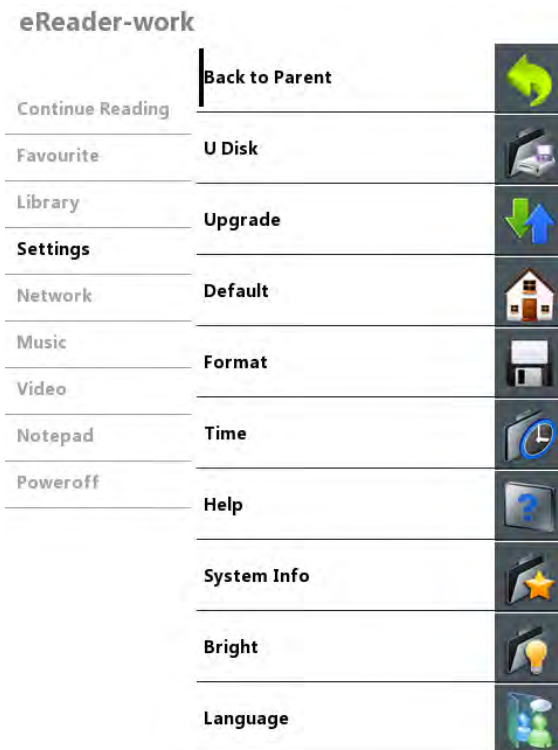

20:01
五月, 25, 2010



◆ Settings

Back to Parent

- ◆ Select “Back to Parent” to go back to the HOME menu

Use the “Joystick” button to highlight on the following options:

U Disk

 
- ◆ Use the U Disk Option if your computer did not recognize your eReader automatically
- ◆ While the eReader is connected to USB. On the Settings Menu, use the “Joystick” button to highlight the U Disk option and press “Enter” button. The display will appear as shown in page 22.

Upgrade

- ◆ For Upgrade options: NOT available on this model

Default

- ◆ Use to restore the settings of the eReader to factory Default Settings

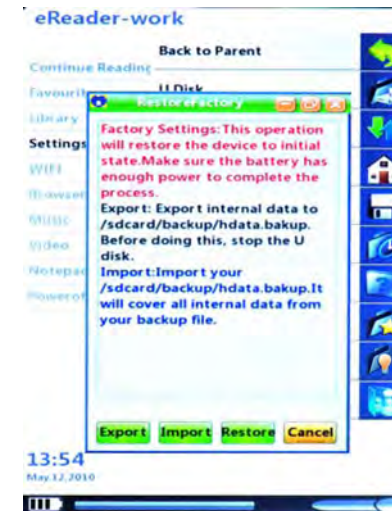

- ◆ Use the “Joystick” button to highlight the buttons. Highlight restore button and press “enter” button to restore back to default or highlight Cancel button to abort the operation

 
◆ Settings

Format

- ◆ Use to format the entire device.

Caution: Formatting the device will erase all data on the device

eReader-work

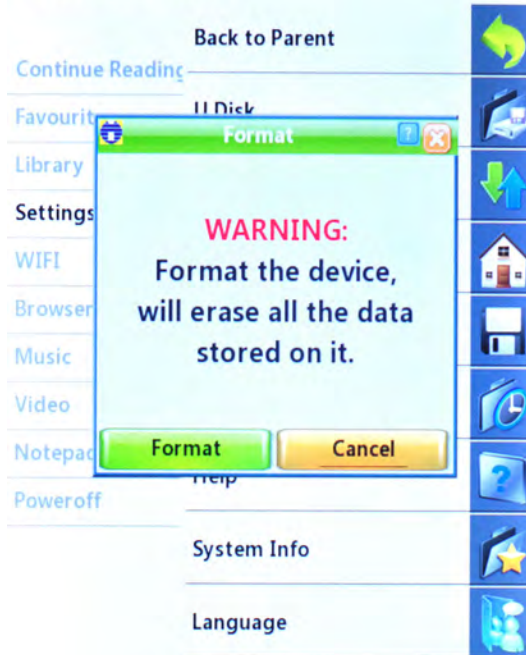

13:54
May,12,2010

 


- ◆ Use the “Joystick” button to (left/right) to highlight the buttons “Format and Cancel”. Press “Enter” button to complete the operation

◆ Settings

Time

- ◆ Use the “Joystick” button to highlight “Time” option and press the “Enter” button to open the menu

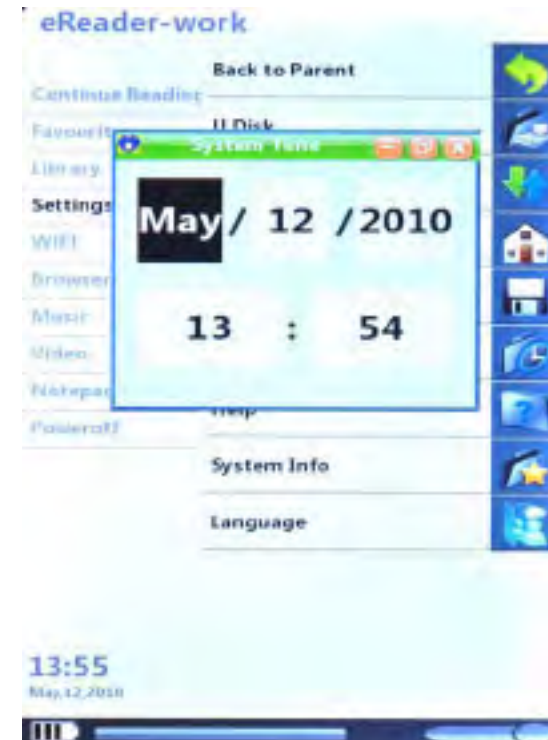

- ◆ Press “Joystick” button(left/right) for adjust the month, Date ,year and time, press “Joystick” button(up/down) for line option
- ◆ Press the “Enter” button to complete the settings.

◆ Settings

Help

- ◆ Press “Joystick” to highlight “Help ” menu,UM soft copy will be available

System Info

- ◆ Press “Joystick” to highlight “System Info ” and press “Enter” button to open the menu. Detailed information of the device will be provided;

Bright



Use “Joystick” to adjust backlight to “ Low “ or “ High”
Press “ Enter” button to complete the settings

◆ Settings

Language



- ◆ Use “Joystick” to scroll Up/Down for “Language” selection, English and Simplified Chinese are available
- ◆ Press “Enter” button to select the desired Language

◆ Wi-Fi



- ◆ Use the “Joystick” to highlight the “Wi-Fi” option and press “Enter” button.

Note: Please make sure to have the wireless password/key to be able to connect to Internet. Call your ISP/network provider for the wireless settings

- ◆ If Wi-Fi is “OFF”, put a check on “Enable Network” box by pressing “Enter” button. Once enabled, the Wi-Fi will scan for available networks.
- ◆ Use the “Joystick” to highlight the wireless network and press “Enter” button. If your wireless network is secured, the password prompt will appear. Enter the wireless password and press “Enter” button



- ◆ Once connected, it will automatically go back to the Main Menu

◆ Browser

- ◆ Use the “Joystick” button to highlight “Browser” option and press “Enter” button to open the browser



Note: It needs to be connected to Wifi first, then this option will work.

- ◆ Press “Menu” button, 3 lines options will be shown in the lower left:
 1. Favorite- saving links to Favorite,
 2. Open Url- opens a new link
 3. Exit

◆ Buy Books

- ◆ Select this option to go to buy books website directly (ebooksmedia.com)
- ◆ Use " Joystick" to highlight " Buy books" option
- ◆ Press" Enter" button to open this option
- ◆ Press " Home" button to go back to the Main Menu.

Note:It needs to connect to Wi-Fi first,then this option will work.

DRM Register

- ◆ There are two ways for you to read the DRM file:

1. Using Adobe Digital Edition:

For details on how to install and use the Digital Edition Software, please visit the link below:

<http://www.adobe.com/products/digitaleditions/help>

Note: Please create an Adobe ID before downloading the Adobe Digital Edition Software.

2. Using your eReader:

Prior to downloading ebooks, you need to create an Adobe ID and register the device.

Step 1: Please Create an Adobe ID.

Visit the link: www.adobe.com

Click the "Your account" link on the upper right hand corner of the website and click "Create an Adobe Account" button in the next page. A registration form will show.

Please provide all necessary information and submit.

 
Step 2: On the eReader, Connect to Wi-Fi

Step 3: On the eReader's Main Menu, Use the Joystick to highlight "DRM Register" option and press "Enter".

Input your Adobe ID and password and select "Activate".
press Enter.

Note:If you are experiencing issues with creating a new Adobe ID go to support and search for "Adobe account, password, and login FAQ"

◆ DRM Register - Continued

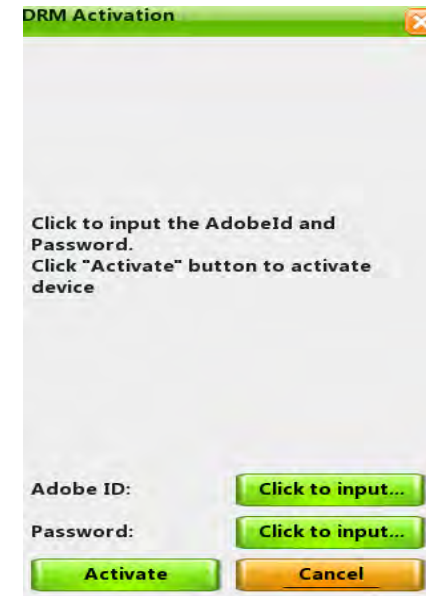

Once you activated the DRM, it will display "**Device has been activated**". If you want to deactivate it, you must do hard reset.

Step 4: eReader is now ready to download DRM ebooks. You can visit ebooks sites to purchase and download DRM ebooks.

Step 5: Downloaded files will be saved into Digital Editions folder under Library

Note: Once you downloaded the DRM ebooks to the eReader. You will not be able to copy it from another device.

 
DRM Hard Reset

Step 1: Please press z, y, j, Number "3" key consecutively. The Testing window will appear, please select "DRM Hard Reset", then press "Enter" button

Step 2: On screen Keyboard will pop up, please input the code "8299", press OK. Press the "Back" button and you can now input or activate a different Adobe ID

◆ Music

- ◆ Use “Joystick” button to highlight “Music” option and press “Enter” button.

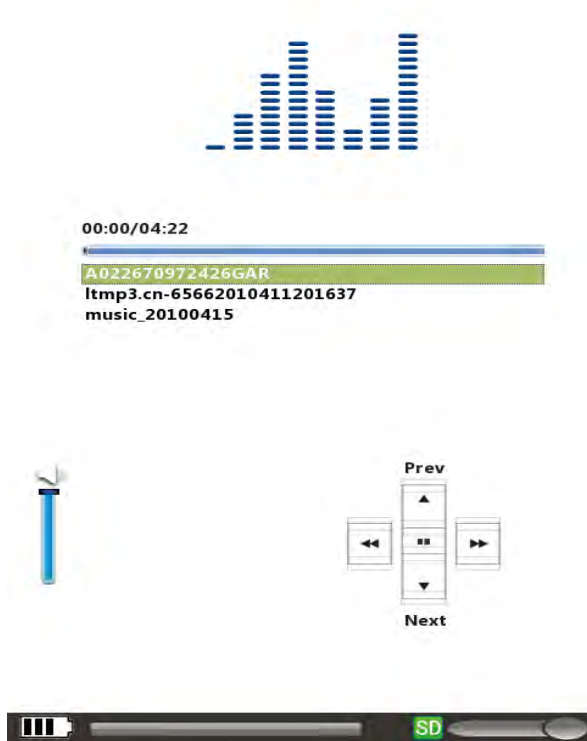

- ◆ Use the “Joystick” button (up/down) to select the desired audio file on the list
- ◆ Press “Enter” button for PLAY/PAUSE, Press “Back” button to go back to the Main Menu
- ◆ Press “+ Volume/ - Volume” button to adjust the volume

◆ Video

- ◆ Use the “Joystick” to highlight “Video” option and press the “Enter” button open the video menu, Use the “Joystick” button (up/down direction) to choose your desired video file
- ◆ Press “enter” button to PLAY/PAUSE, Press “Back” button to go back to the Main Menu
- ◆ Press “+ Volume/- Volume” button to adjust the volume

Notepad

- ◆ Use the “Joystick” to highlight “Notepad” menu. Press “Enter” button to open the Notepad.

 


- ◆ Press “Back” button to go back to the Main Menu

Note: File is automatically saved once any text typed on the notepad or you can press” Menu” choice “Export” save files to SD card

◆ USB Connection

- ◆ Connect the USB cable to your computer
- ◆ Pop up window will appear on the device "The usb is connected. Are you sure to start Udisk?"
- ◆ Press OK

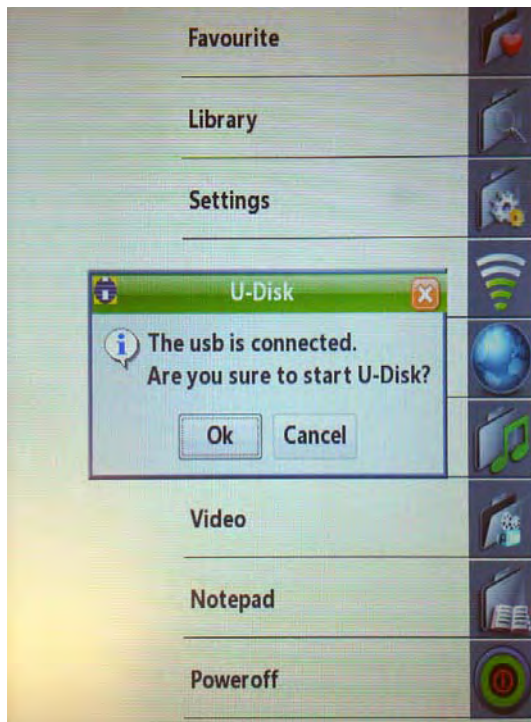

- ◆ Computer will recognize the eReader as a "Removable disk"
Note: If the computer using Windows 98 operating system,
Please install windows 98 2.0 USB driver from the CD in first.

Power-Off

- ◆ Use the "Joystick" to highlight the "Power Off" option and Press "Enter" button to shutdown the eReader
- ◆ Another way to shutdown the eReader is to press and hold the Power button till it shutdown.

 
◆ How to Transfer Files (Music, Video, Photo, etc)

- ◆ Windows Operating system recognizes the eReader as "removable disk". Choose "open folder to view files"
- Note:** Some operating systems are not set for AutoPlay window. In this case, go to "My Computer" and look for "Removable Disk" and double click to enter
- ◆ Simply locate your files (songs, photos etc...) on your "Local Disk" using "my computer" function. Once found, drag and drop your desired files into the disk drive (removable disk) assigned to the eReader
- ◆ Press "Complete" button on the bottom part of the eReader after transferring files. The eReader will be automatically disconnected from the computer



◆ Help Reference

1. CD comes with Windows 98 USB 2.0 driver
2. "Calibre" is a software that can manage files downloaded to library database, convert eBooks file to different file formats.
3. Install Calibre to your computer
4. Use Calibre .msi for installation using windows operating system
5. Use Calibre .dmg for installation using to Mac operating system

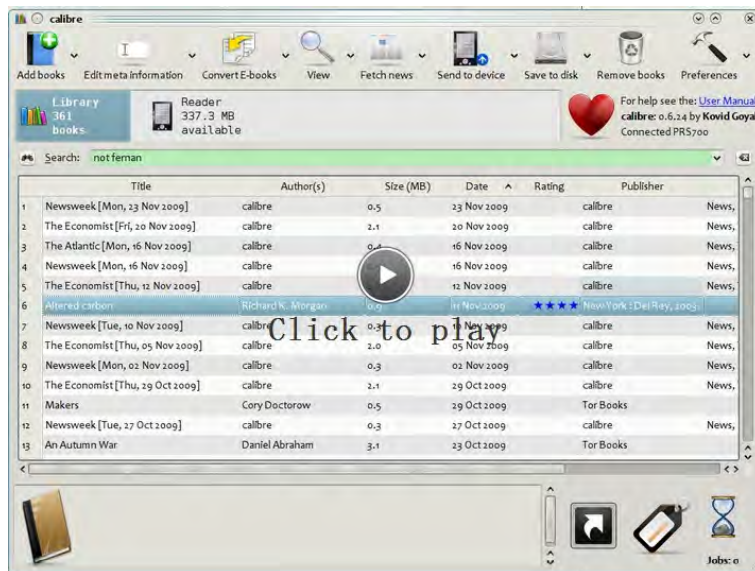

Augen Service & Support

Augen Customer Service Team hours of operations:
MON-FRI 10:00AM – 5:00 PM (EST)

Augen Technical Support Team
250 N.Dixie Hwy. #13
Hollywood, FL 33020

If you have questions, please feel free to contact our customer service representatives at 1-877-AUGENOK or by email at support@augenus.com

All rights reserved to:
© 2008 Augen Electronics Corporation

Augen Electronics Corporation
250 N.Dixe Hwy. #13
Hollywood, FL 33020
Shop online: www.augenus.com

FCC Statement of Compliance

FCC regulations

FCC Declaration of Conformity Statement

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference; and (2) this device must accept any interference received, including interference that may cause undesired operation.

• Radio and Television Interference: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

• If this equipment does cause interference to radio or television reception, which can be determined by turning the equipment off and then on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Increase the separation between the equipment and receiver.
- Connect the equipment to a different outlet so that the equipment and receiver are on different branch circuits.
- Consult the dealer or an experienced radio/TV technician for changes or modifications not expressly approved by Augen could void the user's authority to operate the equipment.



Redefining the Sound of Symphony™