



HDSL640

ADSL USB Modem

User's Manual

Contents

CHAPTER 1	1
INTRODUCTION	1
1.1 HDSL640 ADSL USB Modem Features	1
1.2 Package Contents	2
1.3 The Front LEDs	2
1.4 Information from ISP	2
CHAPTER 2	4
INSTALLATION	4
2.1 Installing the HDSL640 ADSL USB Modem	4
2.2 Installing the HDSL640 ADSL USB Modem Drivers	5
2.2.1 For Windows 98	5
2.2.2 For Windows Me	9
2.2.3 For Windows 2000	13
2.2.4 For Windows XP	18
CHAPTER 3	26
CONFIGURATION	26
3.1 USB ADSL LAN Adapter Configuration	28
3.1.1 For Windows 98 / Me	28
3.1.2 For Windows 2000 / XP	31
3.2 USB ADSL WAN Adapter Configuration	34

1.1 HDSL640 ADSL USB Modem Features

The HDSL640 ADSL USB Modem provides the following features:

- ◆ Bus-powered USB modem for broadband ADSL.
- ◆ Downstream data rate up to 8 Mbps and upstream up to 1 Mbps.
- ◆ No external power supply is required.
- ◆ Hot Plug and Play for Microsoft Windows 98 (SE), 2000, Me, and XP.
- ◆ Supports NDIS interface for RAS and Dial-Up Networking.
- ◆ Software upgradable.
- ◆ Supports multiple data encapsulation formats, including PPPoE, PPPoA, IPoA, and RFC1483 bridged or routed.
- ◆ Friendly GUI Configuration Program.

1.2 Package Contents

The product package comes with the following accessories:

1. One HDSL640 ADSL USB Modem
2. One installation CD with drivers and online manual
3. One RJ-11 ADSL telephone cable
4. One USB cable
5. One Quick Start Guide

1.3 The Front LEDs

LED	Meaning
USB	When this LED is lit, it indicates that the USB port is connected to the PC and working properly.
ADSL	When lit, it indicates that the ADSL (Line) port is connected to the DSLAM and working properly.
TXD	Flashes when transferring data.
RXD	Flashes when receiving data.
READY	When lit, it indicates that the device is working properly.

1.4 Information from ISP

Before you start installing this device, you have to check with your ISP what kind of service (connection method) is provided such as PPPoE, PPPoA, RFC1483 bridged or routed, and IPoA.

Gather the information as illustrated in the following table and keep it for reference.

If your ISP provides PPPoE or PPPoA connection method, please select “USB ADSL WAN Adapter” to install driver. If your ISP provides RFC1483 Bridged or Routed or IPoA, please select “USB ADSL LAN Adapter” to install driver.

PPPoE	VPI/VCI, VC-based/LLC-based multiplexing, Username, Password, Service Name, and Domain Name System (DNS) IP address (it can be automatically assigned from ISP or be set fixed).
PPPoA	VPI/VCI, VC-based/LLC-based multiplexing, Username, Password, and Domain Name System (DNS) IP address (it can be automatically assigned from ISP or be set fixed).
RFC1483 Bridged	VPI/VCI, VC-based/LLC-based multiplexing
RFC1483 Routed	VPI/VCI, VC-based/LLC-based multiplexing, IP address, Subnet mask, Gateway address, and Domain Name System (DNS) IP address (it is fixed IP address).
IPoA	VPI/VCI, IP address, Subnet mask, Gateway address, and Domain Name System (DNS) IP address (it is fixed IP address).

2.1 Installing the HDSL640

Please refer to the following instructions and figures:

1. Connect ADSL telephone cable to the LINE RJ-11 jack.
2. Connect the USB cable to the USB port and connect the other end to the PC.



2.2 Installing the HDSL640 Drivers

2.2.1 For Windows 98

1. Start Windows. After the opening banner, Windows will tell you that the new device has been detected. You will then see the following screen. Click “Next >”.




2. In the next window, select “Search for the best driver for your device” and click “Next >”.

HDSL640 ADSL USB Modem



3. Insert the installation CD into the CD-ROM drive and check "Specify a location". Click "Browse..." to specify the driver directory such as F:\Driver\LAN for installing an USB ADSL LAN Adapter or F:\Driver\WAN for installing an USB ADSL WAN Adapter. (Please refer **Information from ISP** section for more details.) Click "OK" and then "Next>" to continue.



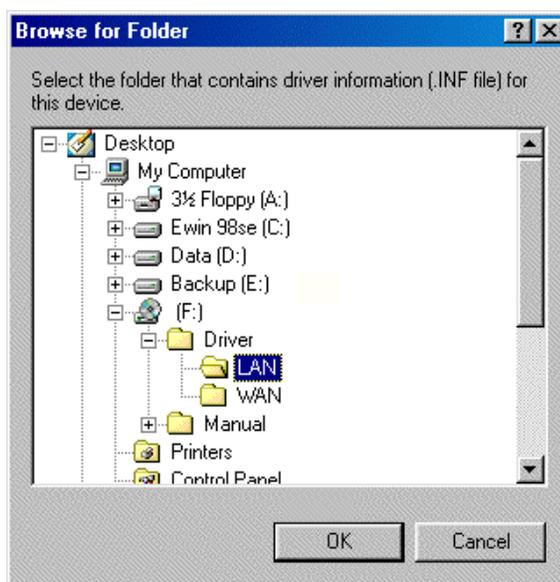

4. Continuing through the Wizard, click the “Next >” button. Windows will start copying files to your system. Then, click “Finish”.
5. You will see the following screen prompting for the path of the Windows source files. Please specify a location. Click “OK”.



HDSL640 ADSL USB Modem

- The HDSL640 ADSL USB Modem driver is successfully installed and the Status Task Bar will appear in the System Tray.




- The HDSL640 ADSL USB Modem icon is installed in the Control Panel.



- Go to the Device Manager, the “USB ADSL LAN Adapter” is under the Network Adapters, and the “HDSL640 ADSL USB Modem” is under the Universal Serial Bus Controllers for USB ADSL LAN driver installation.

Go to the Device Manager, the “USB ADSL WAN Adapter” is under the Network Adapters, and the “HDSL640 ADSL USB Modem” is under the Universal Serial Bus Controllers for USB ADSL WAN driver installation.

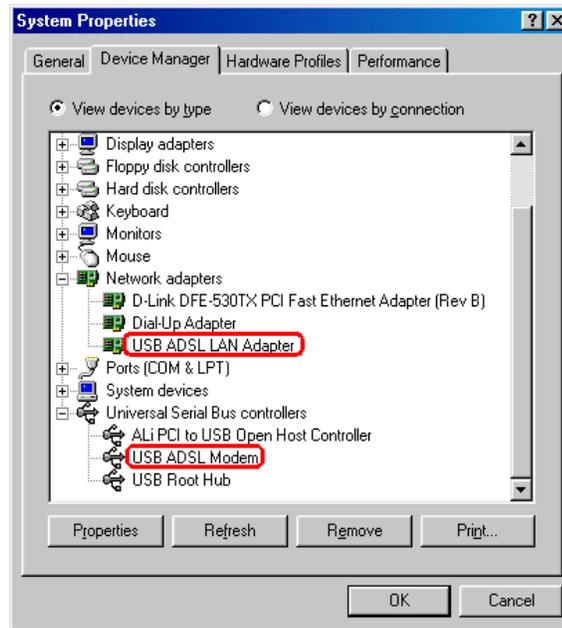

2.2.2 For Windows Me


1. Start Windows. After the opening banner, Windows will tell you that the new device has been detected. Select “Specify the location of the driver” and click “Next >”.

HDSL640 ADSL USB Modem



2. Insert the installation CD into the CD-ROM drive and check “Specify a location”. Click “Browse...” to specify the driver directory such as F:\Driver\LAN for installing an USB ADSL LAN Adapter or F:\Driver\WAN for installing an USB ADSL WAN Adapter. (Please refer **Information from ISP** section for more details.) Click “OK” and then “Next>” to continue.



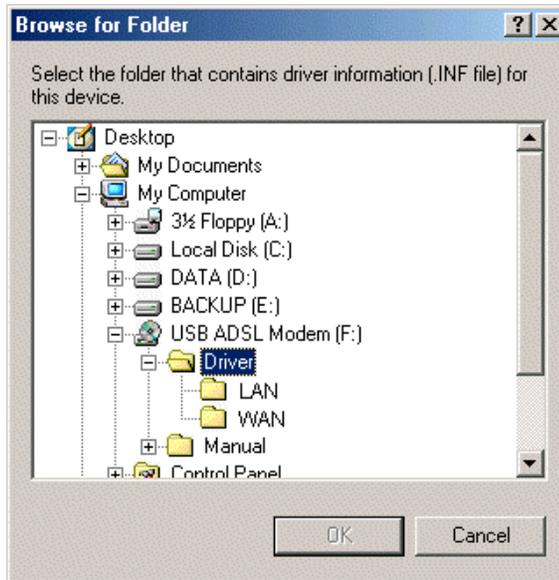


3. Continuing through the Wizard, Windows will start copying files to your system. Then, click "Finish".




HDSL640 ADSL USB Modem

- The HDSL640 ADSL USB Modem driver is successfully installed and the Status Task Bar will appear in the System Tray.

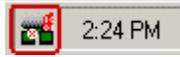


- The HDSL640 ADSL USB Modem icon is installed in the Control Panel.

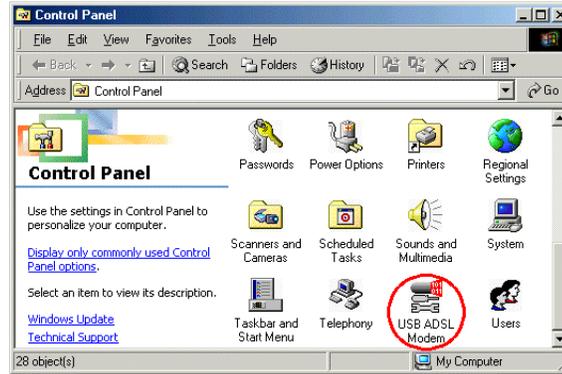

- Go to the Device Manager, the “USB ADSL LAN Adapter” is under the Network Adapters, and the “HDSL640 ADSL USB Modem” is under the Universal Serial Bus Controllers for USB ADSL LAN driver installation.

Go to the Device Manager, the “USB ADSL WAN Adapter” is under the Network Adapters, and the “HDSL640 ADSL USB Modem” is under the Universal Serial Bus Controllers for USB ADSL WAN driver installation.

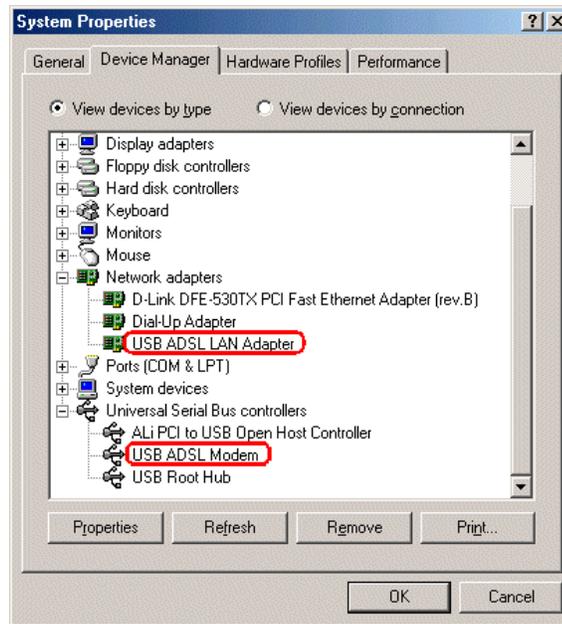

2.2.3 For Windows 2000


1. Start Windows. After the opening banner, Windows will show the new device has been detected. Click “Next>”.




2. Select "Search for a suitable driver for my device". Click "Next>". Then, insert the installation CD into the CD-ROM drive. In next window, check "Specify a location" and click "Next>".



3. Click “Browse...”. In the **Locate File** window, specify the driver directory such as F:\Driver\LAN\CxtCAFEU for installing an USB ADSL LAN Adapter or F:\Driver\WAN\CxtCAFEU for installing an USB ADSL WAN Adapter. (Please refer *Information from ISP* section for more details.) Click “Open” and then “Next>“ to continue.

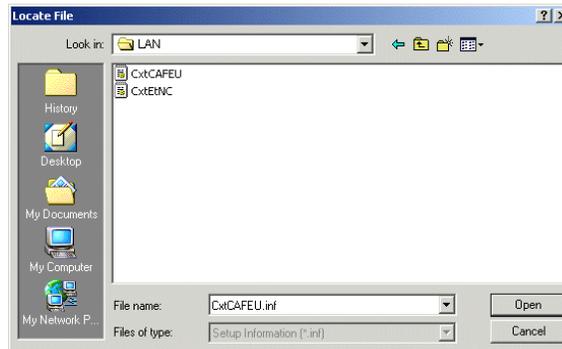

4. When windows titled “Digital Signature Not Found” appear, press “Yes” to continue the installation.

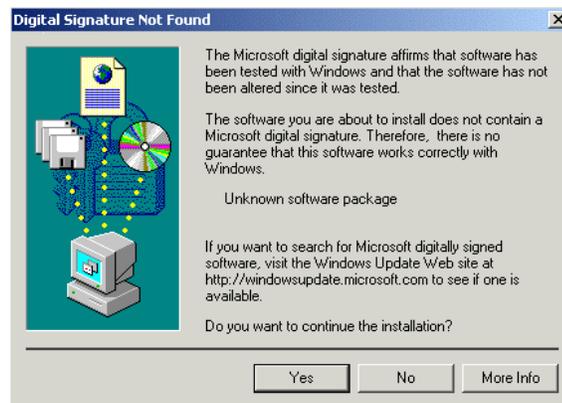

HDSL640 ADSL USB Modem

5. Press "Finish".



6. The HDSL640 ADSL USB Modem driver is successfully installed and the Status Task Bar will appear in the System Tray.




7. The HDSL640 ADSL USB Modem icon is installed in the Control Panel.



8. Go to the Device Manager, the “USB ADSL LAN Adapter” is under the Network Adapters, and the “HDSL640 ADSL USB Modem” is under the Universal Serial Bus Controllers for USB ADSL LAN driver installation.

Go to the Device Manager, the “USB ADSL WAN Adapter” is under the Network Adapters, and the “HDSL640 ADSL USB Modem” is under the Universal Serial Bus Controllers for USB ADSL WAN driver installation.

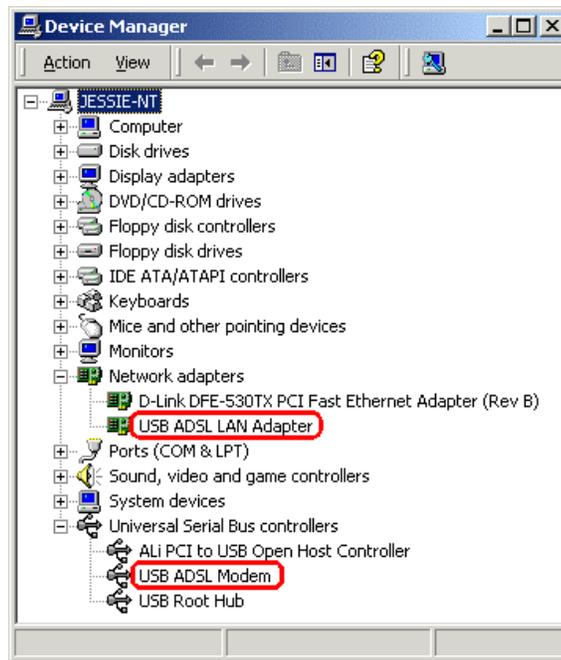

2.2.4 For Windows XP

1. Start Windows. After the opening banner, Windows will tell you that the new device has been detected. Select “Install from a list or specific location” and click “Next >”.



2. Insert the installation CD into the CD-ROM drive and select "Include this location in the search". Click "Browse" to specify the driver directory such as F:\Driver\LAN for installing an USB ADSL LAN Adapter or F:\Driver\WAN for installing an USB ADSL WAN Adapter. (Please refer ***Information from ISP*** section for more details.) Click "OK" and then "Next>" to continue.

HDSL640 ADSL USB Modem



- When windows titled “Hardware Installation” or “Software Installation” appear, press “Continue Anyway” to go on.



- Then, click “Finish”.



5. Wait a few moments. Windows will show the new device, USB ADSL LAN (or WAN) Adapter, has been detected. Select "Install from a list or specific location" and click "Next >".



- Click “Next >” when the following figure appears.



- When windows titled “Hardware Installation” appears, press “Continue Anyway”.



- Then, click “Finish” to end installation.


HDSL640 ADSL USB Modem



9. The HDSL640 ADSL USB Modem driver is successfully installed and the Status Task Bar will appear in the System Tray.




10. The HDSL640 ADSL USB Modem icon is installed in the Control Panel.

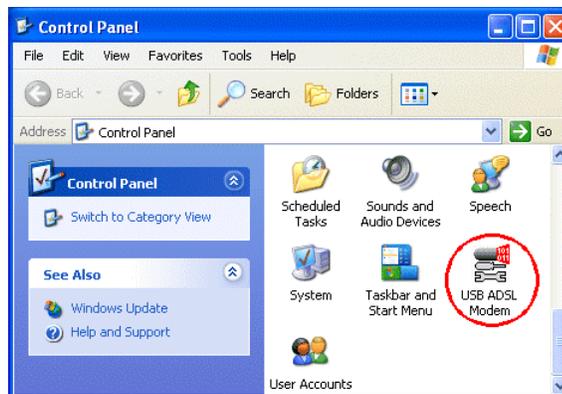

11. Go to the Device Manager, the “USB ADSL LAN Adapter” is under the Network Adapters, and the “HDSL640 ADSL USB Modem” is under the Universal Serial Bus Controllers for USB ADSL LAN driver installation.

Go to the Device Manager, the “USB ADSL WAN Adapter” is under the Network Adapters, and the “HDSL640 ADSL USB Modem” is under the Universal Serial Bus Controllers for USB ADSL WAN driver installation.

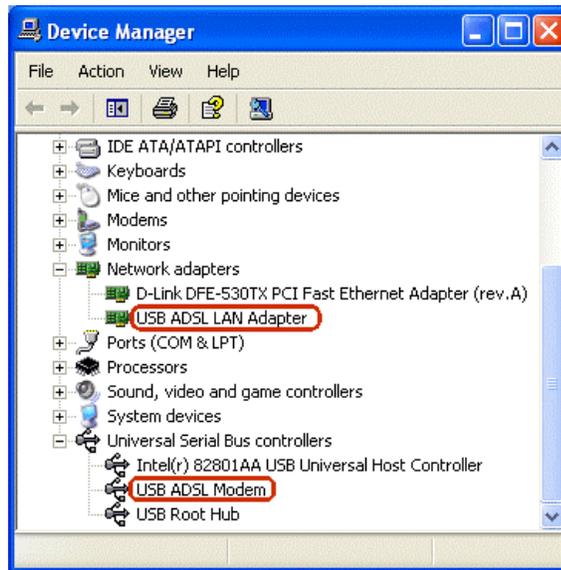

Chapter 3


Configuration

Follow the instructions below to configure your HDSL640 ADSL USB Modem.

1. Click the **HDSL640 ADSL USB Modem** icon in the Control Panel or **ADSL Configuration** icon on the desktop. The status of ADSL connection will be displayed.



2. Press [Alt]+[P] on keyboard, the following figure appears.

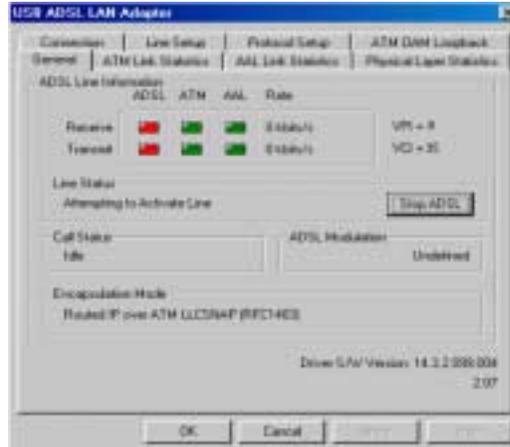


3. Select the **Protocol Setup** tag, please set the value of “VPI”, “VCI” and “Encapsulation Mode”. Then, click “OK”.




3.1 USB ADSL LAN Adapter Configuration

3.1.1 For Windows 98 / Me


1. Go to **Start / Settings / Control Panel**. In the Control Panel, double-click on **Network** and choose the **Configuration** tab.
2. Select **TCP/IP -> USB ADSL LAN Adapter**. Then, click **Properties**.

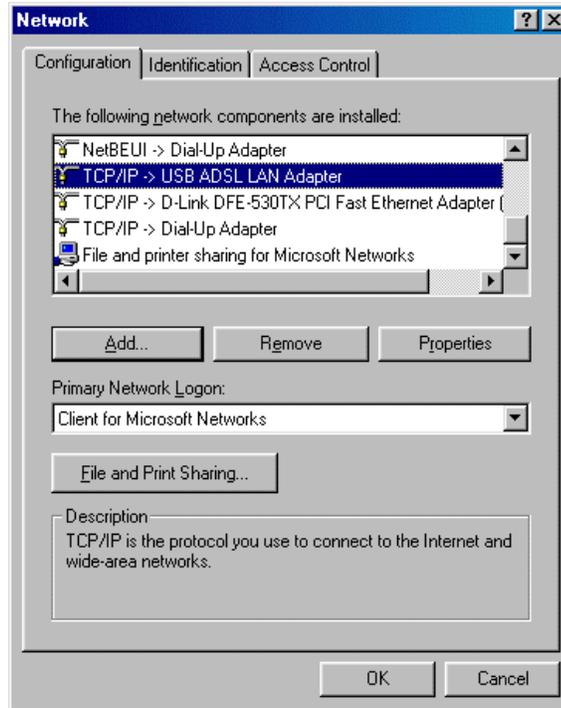


3. Select the **IP Address** tab. In this page, click the **Specify an IP address** radio button and enter the “IP address” and “Subnet Mask” provided by your ISP.

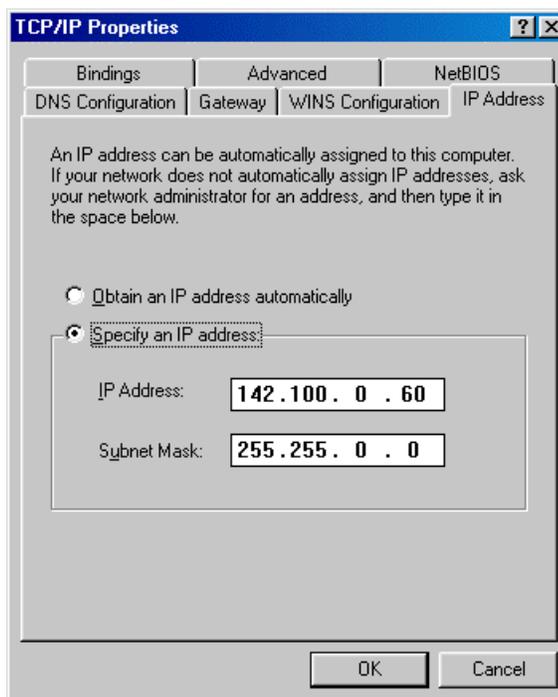

4. Select the **Gateway** tab. Enter the “gateway” provided by your ISP and click **Add**.

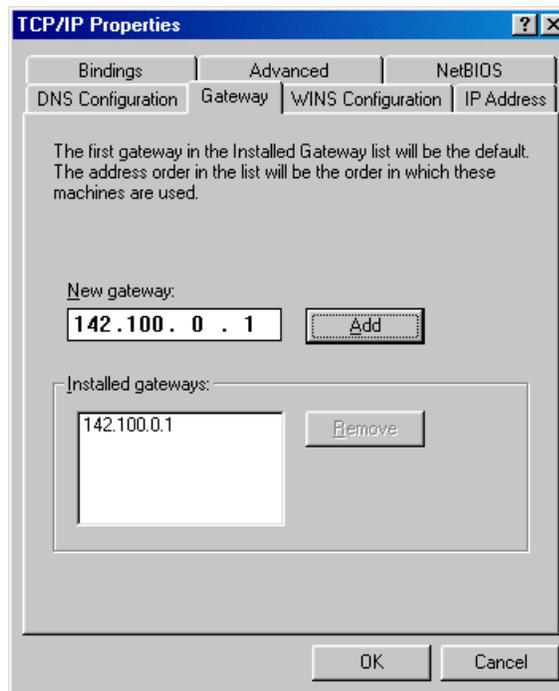


5. In the **DNS Configuration** page, click the **Enable DNS** radio button. Enter the “Host” name and “DNS Server IP address” provided by your ISP. Then, press the **Add** button.

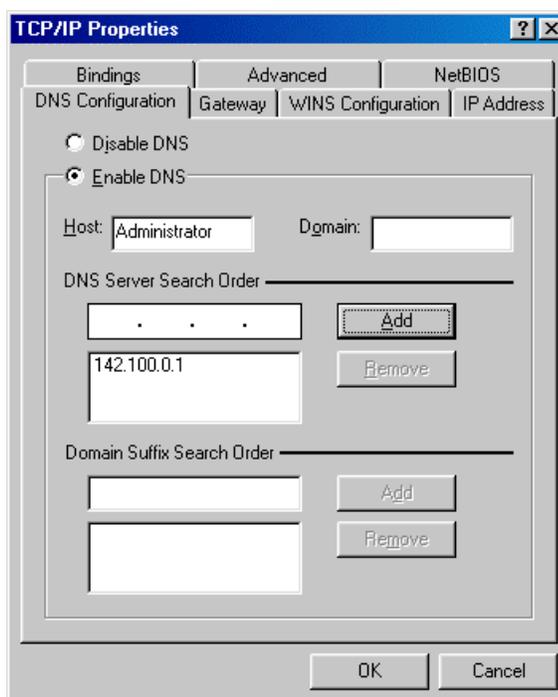


3.1.2 For Windows 2000 / XP

1. Go to **Start / Settings / Control Panel**. In the Control Panel, double-click on **Network and Dial-up Connections**.
2. Right-click on **Local Area Connection** that is using the USB ADSL LAN Adapter and then click "Properties".

HDSL640 ADSL USB Modem

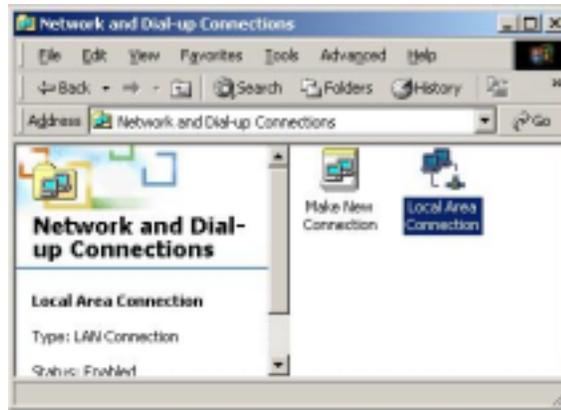


3. Select Internet Protocol (TCP/IP). Then, click "Properties".

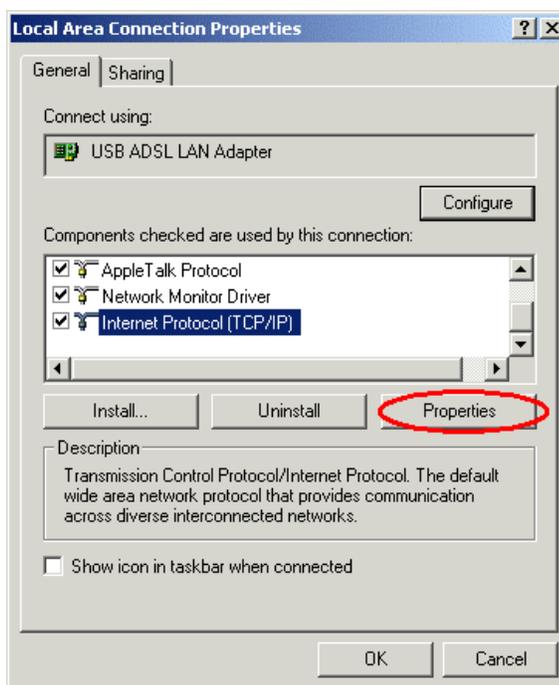

4. Select **Use the following IP address**, and then enter the “IP address”, “Subnet mask”, and “Default gateway” provided by your ISP.

Select **Use the following DNS server addresses** and then enter the provided DNS server IP address.

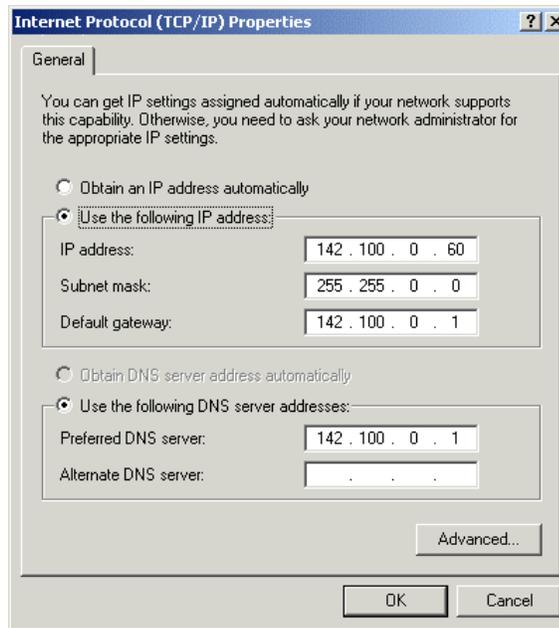

3.2 USB ADSL WAN Adapter Configuration

1. Click ADSL Access icon on the desktop. Then, the following window appears. Enter the "Username" and "Password" provided by your ISP. Let the Phone number field be blank.



2. Click **Connect** and get ready to surf the Internet!