MULTIEYE Usermanual





About this Manual

Especially important information is emphasized by the following symbols in this manual.



Important:

Especially important instructions which must be observed in all cases!



Attention:

Important information.



Tip: General information.

Logos, brand names and brands are the property of the individual manufacturers. The absence of the special characters (\mathbb{R}, \mathbb{C}) or TM cannot be interpreted to mean that the associated description is a free product name. Likewise, it cannot be deduced whether patents or protection of a registered design exist. All other registered and unregistered trademarks are the property of their respective owners.

All texts, pictures and drawings were prepared with great caution. In spite of careful content control the publisher takes over no guarantees for the information given in these instructions. In no case the publisher is liable for any form of direct or indirect damage which might result from the application of this information.

The license conditions of artec technologies AG apply.

The publisher assumes no liability for the content and relevance of links present here. The operators alone are responsible for the content of the pages presented here.

Reproduction, adaptation, or translation of this manual without prior written permission is prohibited, except as allowed under the copyright laws.

Reproductions can be similar. No liability is assumed for product information.

Errors and technical changes cannot be excluded. Specifications may be subject to change anytime without prior notice.

© 2007 artec technologies AG. All rights reserved.

Contents

Introduction		12
Order of Installati	ion	14
System Requirem	ents	16
l General		
2 Minimumrequirem	nents	
3 Hardwarerequiren	nents	
Motherboards		
Processors		17
RAM		17
Harddisks		17
Graphics cards		17
Dual monitor operation	חכ	
4 Supported operati	ng systems	
5 Firewalls and virus	scanner	
6 Choosing the analo	og cameras	
7 Video signals of the	e attached cameras	
8 Adjustment of the	attached cameras	19
Hardware		21
l General		
Contents of delivery		
Contents of delivery M	1ULTIEYE-HYBRID Recorder Kit	
Contents of deliveryM	ULTIEYE-NET	

Contents of deliveryMULTEYE-NET	
Maximum count of video channels of a MULTIEYE system	
Capability characteristics of the MULTIEYE video boards	21
MULTIEYE videoboard-combinations for 8-32 cameras	22
2 Description of the MULTIEYE video boards	23
Video board type 425	23
Video board type 1625	23
Video boards type 1650 and 16100	24
Video board type 16200	24
75 ohm termination: The DIP switches	
Connection of an EX-IOC alarm board	
Delivery contents of the video board type 16200	
Video board type 32100	25
75 ohm termination: The DIP switches	
The extension board for the video board type 32100	26
Connecting the extension board to the video board type 32100	
Contents of delivery video board type 32100	27
Video board type MP8200	27
Video board type MP8200 PCI	27
Video board type MP8200 PCI Express	27
Description video board type MP8200	
75 Ohm termination: The DIP switches	
Contents of delivery video board type MP8200	
Power consumption video board type MP8200	
Other types of connectors on the video boards	28

		20
Watchdog at Multiboard operation		29
75 Ohm terminate resistor		29
Connecting an analog video monitor		29
Connection audio		29
3 Extensionbearde		30
5 ExtensionDoards		. 50
Installation of the audio extension boa	rd for 1650, 16100, 16200, 32100	30
EX-4 extension board		31
EX-IO alarm board		32
Installing extension boards EX-4 and E	X-IO	32
Alarmboard EX-IOC		33
Connecting the alarm board to the video	board type 16200	33
Connecting the alarm board to the video	board type 32100	33
DIP switch settings		34
DIP switch block S1		34
Electrical loads		34 34
4 Additional extension boards		35
		25
		30 25
3 OSB Doligie for MOLTIETE-NE	I (WIBO-Key Dongle)	. 35
6 Connecting PTZ cameras		. 35
7 Recorder chassis		. 36
8 Hints for preparing the system		. 36
BIOS		36
Configuring Windows		37
Automatic Windows login		37
Installing video boards and	software	39
I Installation MULTIEYE-HYBRID	and MULTIEYE-NET	. 39
I Installation MULTIEYE-HYBRID	and MULTIEYE-NET	. 39 39
I Installation MULTIEYE-HYBRID Installation MULTIEYE-HYBRID Installation MULTIEYE-NET	D and MULTIEYE-NET	. 39 39 39
I Installation MULTIEYE-HYBRIE Installation MULTIEYE-HYBRID Installation MULTIEYE-NET	D and MULTIEYE-NET	. 39 39 39 . 39
I Installation MULTIEYE-HYBRID Installation MULTIEYE-HYBRID Installation MULTIEYE-NET 2 Installing MULTIEYE video boar 3 Installation of the videoboard sy	o and MULTIEYE-NET	. 39 39 39 . 39 . 39
 Installation MULTIEYE-HYBRIE Installation MULTIEYE-HYBRID Installation MULTIEYE-NET Installing MULTIEYE video boar Installation of the videoboard sy MULTIEYE-NET: Installing the 	D and MULTIEYE-NET rds stem drivers	. 39 39 . 39 . 39 . 40 41
 Installation MULTIEYE-HYBRIE Installation MULTIEYE-HYBRID Installation MULTIEYE-NET Installing MULTIEYE video boar Installation of the videoboard sy MULTIEYE-NET: Installing the 	D and MULTIEYE-NET ods stem drivers USB-Dongle (WIBU-Key Dongle)	. 39 39 . 39 . 39 . 40 . 41
 Installation MULTIEYE-HYBRIE Installation MULTIEYE-HYBRID Installation MULTIEYE-NET Installing MULTIEYE video boar Installation of the videoboard sy MULTIEYE-NET: Installing the I Installing MULTIEYE-HYBRID 	D and MULTIEYE-NET rds stem drivers USB-Dongle (WIBU-Key Dongle)	. 39 39 . 39 . 39 . 40 . 41 . 42
I Installation MULTIEYE-HYBRID Installation MULTIEYE-HYBRID Installation MULTIEYE-NET Installation MULTIEYE video boar Installation of the videoboard sy MULTIEYE-NET: Installing the Installing MULTIEYE-HYBRID	D and MULTIEYE-NET ods stem drivers USB-Dongle (WIBU-Key Dongle)	. 39 39 . 39 . 40 . 41 . 42 45
I Installation MULTIEYE-HYBRID Installation MULTIEYE-HYBRID Installation MULTIEYE-NET Installation MULTIEYE video boar Installation of the videoboard sy MULTIEYE-NET: Installing the Installing MULTIEYE-HYBRID Licensing and activation I General information about avtiv	o and MULTIEYE-NET ods stem drivers USB-Dongle (WIBU-Key Dongle) vation	. 39 39 39 . 39 . 40 . 41 . 42 45
 Installation MULTIEYE-HYBRIE Installation MULTIEYE-HYBRID Installation MULTIEYE-HYBRID Installation MULTIEYE-NET Installation of the videoboard sy MULTIEYE-NET: Installing the I Installing MULTIEYE-HYBRID Licensing and activation General information about avtiv Licensing of a video board or do 	D and MULTIEYE-NET rds stem drivers USB-Dongle (WIBU-Key Dongle) ration	. 39 39 . 39 . 40 . 41 . 42 45 . 45
 Installation MULTIEYE-HYBRIE Installation MULTIEYE-HYBRID Installation MULTIEYE-NET Installation of the videoboard sy Installation of the videoboard sy MULTIEYE-NET: Installing the Installing MULTIEYE-HYBRID Licensing and activation I General information about avtive Licensing of a video board or do Activating extensions 	D and MULTIEYE-NET rds stem drivers USB-Dongle (WIBU-Key Dongle) vation ration	. 39 39 . 39 . 40 . 41 . 42 45 . 45 . 45
 Installation MULTIEYE-HYBRIE Installation MULTIEYE-HYBRID Installation MULTIEYE-NET Installation MULTIEYE video boar Installation of the videoboard sy MULTIEYE-NET: Installing the Installing MULTIEYE-HYBRID Licensing and activation I General information about avtiv Licensing of a video board or do Activating extensions 	D and MULTIEYE-NET	. 39 39 . 39 . 40 . 41 . 42 45 . 45 . 45 . 46
 Installation MULTIEYE-HYBRIE Installation MULTIEYE-HYBRID Installation MULTIEYE-HYBRID Installation MULTIEYE-NET	D and MULTIEYE-NET rds stem drivers USB-Dongle (WIBU-Key Dongle) ration ngle	. 39 39 39 . 39 . 40 . 41 . 42 45 . 45 . 45 . 46 48
 Installation MULTIEYE-HYBRIE Installation MULTIEYE-HYBRID Installation MULTIEYE-NET Installation MULTIEYE video boar Installation of the videoboard sy MULTIEYE-NET: Installing the Installing MULTIEYE-HYBRID Licensing and activation I General information about avtiv Licensing of a video board or do Activating extensions	D and MULTIEYE-NET rds stem drivers USB-Dongle (WIBU-Key Dongle) vation ngle	. 39 39 39 . 39 . 40 . 41 . 42 45 . 45 . 45 . 45 . 45 . 46 48 48
 Installation MULTIEYE-HYBRIE Installation MULTIEYE-HYBRID Installation MULTIEYE-HYBRID Installation MULTIEYE-NET Installation of the videoboard sy MULTIEYE-NET: Installing the Installing MULTIEYE-HYBRID Licensing and activation I General information about avtiv Licensing of a video board or do Activating extensions Meaning of the license keys Applying per fax for a license key Restoring licenses online	D and MULTIEYE-NET	. 39 39 39 . 40 . 41 . 42 45 . 45 . 45 . 45 . 45 . 45 . 45 . 46 48 48 49 . 49
 Installation MULTIEYE-HYBRIE Installation MULTIEYE-HYBRID Installation MULTIEYE-HYBRID Installation MULTIEYE-NET	D and MULTIEYE-NET	. 39 39 39 . 39 . 40 . 41 . 42 45 . 45 . 45 . 45 . 45 . 45 . 45 . 45 . 45
 Installation MULTIEYE-HYBRIE Installation MULTIEYE-HYBRID Installation MULTIEYE-HYBRID Installation MULTIEYE-NET Installation of the videoboard sy MULTIEYE-NET: Installing the I Installing MULTIEYE-HYBRID Licensing and activation General information about avtiv Licensing of a video board or do Activating extensions	D and MULTIEYE-NET	. 39 39 39 . 39 . 40 . 41 . 42 45 . 45 . 45 . 45 . 45 . 45 . 45 . 45
 Installation MULTIEYE-HYBRIE Installation MULTIEYE-HYBRIE Installation MULTIEYE-NET Installation MULTIEYE video board Installation of the videoboard sy MULTIEYE-NET: Installing the Installing MULTIEYE-HYBRID Licensing and activation I General information about avtive Licensing of a video board or do Activating extensions	D and MULTIEYE-NET	. 39 39 39 . 40 . 41 . 42 45 . 45 . 45 . 45 . 45 . 45 . 45 . 45
 Installation MULTIEYE-HYBRID Installation MULTIEYE-HYBRID Installation MULTIEYE-NET Installation of the videoboard sy MULTIEYE-NET: Installing the Installing MULTIEYE-HYBRID Licensing and activation I General information about avtive Licensing of a video board or do Activating extensions Meaning of the license keys Applying online for a license key Saving and restoring of licences. 	D and MULTIEYE-NET	. 39 39 39 . 40 . 41 . 42 45 . 45 . 40 . 45 . 45 . 40 . 45 . 49 . 49 . 49 . 51 . 45 . 51
 Installation MULTIEYE-HYBRID Installation MULTIEYE-HYBRID Installation MULTIEYE-NET Installation of the videoboard sy Installation of the videoboard sy MULTIEYE-NET: Installing the Installing MULTIEYE-HYBRID Licensing and activation I General information about avtiv Licensing of a video board or do Activating extensions Meaning of the license keys Applying online for a license key Saving and restoring of licences. 	and MULTIEYE-NET	. 39 39 39 . 39 . 40 . 41 . 42 45 . 45 . 49 . 49 . 49 . 49 . 51 . 51 . 51

Starting MultiScreen		. 52
2 Configuring MultiScr	een	53
Drag&Drop		. 53
MultiScreen at the initial	start	. 54
IP camera		. 55
IP Megapixel camera		. 55
Subsequent connection of	of cameras	. 55
Deleting cameras		. 55
Moving or deleting came	ras from MultiScreen	. 55
3 MultiScreen toolbar		56
Trash		. 56
Selecting cameras		. 56
MultiScreen Layout		. 57
Individuel MultiScreen la	yout with the Desktop Layouter	. 57
Configurations and Setti	ngs	. 59
Timer: Start recording		. 59
Replay / Starting MULTI	EYE-HYBRID-Player	. 59
MULTIEYE Remote Con	trol (MRC)	. 60
Locking System		. 60
Date and Time / Display	of "images per second"	. 60
Hide toolbar		. 60
Information about MUL	FIEYE HYBRID	. 60
Minimizing program		. 60
Exiting MULTIEYE-HYB	RID	. 61
Infobar in the camera wi	ndow	. 61
4 The camera window.		62
Toolbar in the camera w	indow	. 62
Fullscreen display		. 62
Symbols in the camera w	vindow	. 62
Camera outage detectio	n (Video loss)	. 63
Camera window context	menu	. 63
Start recording		63
PTZ camera control		64
PTZ control via popup me	enu	64
PTZ via joystick and/or ke	yboard	64
Playback of the most rece	ntly recorded video	65
Anti-aliasing		. 65

Configuring MULTIEYE-HYBRID

I Global settings		. 68
Sound		68
Regional settings		68
System options: Wat	chdog and autostart with Windows	69
MultiScreen otions		69
Small toolbar		69
Moving a camera wind	low out of the MultiScreen	69
Autostart MultiScreen		69
Automatic minimizing		69
Quick configuration		70
2 Image settings		.71
3 Video settings		.72
Video quality and vid	eo compression codec	72
Video compression c	odec	72
Video resolution		73
Frame rates		73
Pre-alarm duration		74

Playback of a video	file in four steps	
Start of the MULTI	EYE-HYBRID-MultiPlayer	
back with the	MULTIEYE-HYBRID-MultiPlayer	1
9 Optional MULTIEY	Ē modules and licenses	
EX-IO alarm board swite	:h outlets	
EX-IO alarm board conr	lectors	
Configuration EX-IO al	arm board	
Report on critical system	ו errors	
Customize text		
Testing alarm message c	onfigurations	
Notification via external	program	
Notification via Window	's NetSend	
Notification via ICQ		
Notification via email		
Delay between messages	5	
Automatic dial-in		
Alarm mailer options		
Configuring status repor	ts	
Alarm and status messag	 jes	
Configuration alarm m	essages	
Configuration video ou	tput for live monitor	
Configuration audio : A	ssigning audio channels to cameras	
Videoserver		
Webserver		
Remote control		
Video / Webserver		
3 Advanced settings .		
Two users login		
Auto-Login		
User management .		
Dynamic ring storage r	nanagement	
Deleting ring storage		
Deleting videos		
Resizing or decreasing	ring storage	
Manuel configuration /	installing additional cameras	
Initial setup: The ring s	torage assistent	
Storage systems		
Manually or dynamicall	y memory management	
ring storage: Config	uring hard disks for recording	
	uning have disks for recording	
Copying time settings t	U ULIEF CATTEFAS	
Copying times	a other comerce	
Conving times	g unies	
Deleting times	a times	
5 Programming recor	ding: The timer menu	
Privat zones		
Setting motion detection	on sensitivity	
Masking		
+ Motion detection .		
Mation data sticn		
Camera text		

Remote inquiry		11
Motion timeline daily	summary	
Multiple playback		11
Synchron playback		11
Trash		
4 Video playback		
Selecting video files		11
Camera symbol or tree	structure display	11
Evaluating videos via th	e camera symbol display	11
Evaluating video via the	tree structure	
The video list		11
The context menu of the	e video list	
Treshhold / Motion leve	el	
5 The playback windo	ows of the video files	
The playback toolbar		
Fast forward and rewin	d	12
Playback options		
Displaying the motion a	ctivity area	
Switching over from sir	gle video to full-day display	
Audio playback in the N	are for the second s	
Playback alternative::	Standard playback	
Playback alternative: I	otionTrack with motion timeline treshhold value	
Playback alternative: I	lotionSearch	
The context menu of	he playback window	
SnapShot	• •	
Search video		
Mute/Unmute audio		
Keyboard support		
Zoom		
Video export		
Open playback list		
Save to playlist		
Close player		
6 Playback via the m	otion timeline bar in the motion timeline-display	
Button details		13
Motion timeline ontion	nc	13
7 Playback videos ov	r network	13
		10
8 MultiPlayer as a ba	ckup player	
LTIEYE Servic		12/
	es menu	134

2 Licences		. 134
3 Options		. 135
Programm protoco	ls (LOG-files)	135
System information		136
Live-Updater		136
SystemRestorer		137
4 Hardware		. 139

2 The LiveViewer		142
Installing and settin	g up LiveViewer	142

Managing LiveViewer w	indows	144
Settings of a LiveViewe	r window	145
Settings video		146
Report event		146
I/O relay remote contro	ol settings	147
Opening LiveViewer dis	play with a click of the mouse	148
3 The HYBRID netwo	rk player (MultiPlayer)	149
Installation of the netwo	ork player	149
4 MULTIEYE Remote	Control (MRC)	150
5 Web based remote a	access	151
LiveCam access of sing	e cameras	151
Access multiple camera	15	152
Menu		153
Playback		154

Special features

156

160

I LiveUpdate		156
2 Keyboard Short-C	Cuts	156
3 Direct Translator		157
4 Watermark		157
5 Customizing		158
6 Telephone support	rt and information from the internet	158

Example applications

I How to integrate a MULTIEYE-Recorder into EBÜS	160
Interaction of the MULTIEYE-Recorder with EBÜS	161
Installation and configuration of the ACC FTP-Uploader	162
Configuring the alarm parameters	164
hnical appendix	67

Technical appendix

I Network connections	
Connection via LAN	
Connection via DSL	
Connection via ISDN/MODEM	
Setting up a Dial-up / RAS Server	
Setting up Dial up/RAS client	173
2 Integrating MULTIEYE-HYBRID cameras into your own web sites	
3 Example of notification via an external program	
4 The hosts file	
5 Userrights in Windows XP Professional	
6 Automatic Windows user login	
7 Video image formats in CCTV technology	
Technical data	186
I Technical data of the MULTIEYE video boards	
2 CE compliance	
Troubleshooting	190

© 2007 artec technologies AG

License conditions194Index196



1 Introduction

12

We are very glad that we could win your interest as a customer for our product **MULTIEYE-HY3RID** or **MULTIEYE-NET**.

MULTIEYE-HYBRID und **MULTIEYE-NET** combine highest technical functionality with dependability and stability and offer the user, in addition to other characteristics, a video surveillance system optimized for use and equipped with all enhancements.

With MULTIEYE-HYBRID you receive a highly professional video surveillance kit.

The combination of analog, digital as well as IP network cameras in one system, combined with the innumerable possibilities to individually and flexibly adapt MULTIEYE-HYBRID to the respective needs of the user, makes the new MULTIEYE-HYBRID unique.



MULTIEYE-HYBRID recorder kits offer Quadplex[©] operation with four mutually independent functions:

- $_{\odot}\,$ Live-Monitoring with MultiScreen
- $_{\odot}$ Video recording
- Playback and evaluation.
- $_{\odot}$ Remote access

You should find the program to be easy to follow and to operate, while keeping the **Look and Feel** of your personal operating system. In just a short time you will succeed in modifying the system and adapting it to meet your requirements.

The graphical structure of **MULTIEYE** has been patterned after the current structure of the Windows operating systems. Correspondingly, many of the functions in this system can be easily executed via Drag & Drop.

- o Assign cameras to individual hard drives
- Program time activation
- Change pre-set variables

The **multilingual capabilities** of MULTIEYE constitute a further factor in its success. In the easiest possible manner, MULTIEYE-HYBRID can be adapted to the most common languages of the earth, thus proving itself to be an uncompromising and reliable assistant for video surveillance. The languages for MultiScreen and the MultiPlayer can be set individually!

The software for both MULTIEYE-HYBRID and MULTIEYE-NET is identical. The following description of MULTIEYE-HYBRID likewise applies to MULTIEYE-NET.



2 Order of Installation

The Installation / activation of a MULTIEYE recorder and/or MULTIEYE software should be done in the following sequence:

- $_{\rm O}$ Installation of the hardware (video boards, audio boards, I/O boards)
- $_{\odot}\,$ Connect the analog and network cameras
- $_{\rm O}$ Turn on the computer

- $_{\rm O}$ Install the hardware drivers
- (only MULTIEYE-NET) connect the dongle
- o (only MULTIEYE-NET) install the dongle driver
- $_{\rm O}$ Install the MULTIEYE-HYBRID software
- $_{\rm O}$ Start the MULTIEYE-HYBRID software
- $_{
 m O}$ Activate / License the software / the system
- Configure the cameras
- $_{\rm O}\,$ Configure the hard drive for recording
- Configure recording
- $_{\odot}$ Test the configurations



3 System Requirements

3.1 General

The system requirements depend on the videoboard, the recording rate (ips) and the image resolution.

The videoboards of the types 425 and 1625 are compatible to the most common CPUs, mainboards and graphicchips. It's possible to use these videoboards in lower performance PCs.

The optimale condition for MULTIEYE-HYBRID for the types 425, 1625 and especially for the types 1650 and 16100 are Intel-based mainboards in combination with Intel CPUs like P4, XEON and better.

3.2 Minimumrequirements

You can see the recommended minimum requirements for the CPUs in the followed table:

Туре 425/1625	Intel/AMD CPUs			
Images per second up to:	25ips 50ips 75ips 100 - 200ips			100 - 200ips
recommended CPU performance:	800 MHz	I,6 GHz	2,4 GHz	3,2 GHz HT
Туре 1650/16100/16200/32100	Intel-based mainboard chipsets			sets
Images per second up to:	-	50ips	75ips	100 - 200ips*
recommended CPU performance:		I,6GHz	2,4GHz	3,2 GHz HT

Attention:

Multiple MULTIEYE videoboards can be combined in one PC (Multiboard-operation). This results in higher image rate but also the system-requirements are scaled up.

The image rate relates to the complete recording rate of a system at:

- Singleboard operation + possible IP-cameras
 - Multiboard-operation + possible IP-cameras

Under use of VIA or SIS mainboard-chipsets in combination with the videoboards 1650 and 16100 it is possible that the recording rate is lowered, because the speed of the PCI bus of these chipsets is relativly slow.

3.3 Hardwarerequirements

3.3.1 Motherboards

It's recommended to use INTEL-motherboards based on Intel 915 (and higher) chipsets.



Important:

You should update the BIOS of the mainboard!

3.3.2 Processors

Processors from Intel and AMD can be used.

Especially interesting are systems with multiple processors (Intel XEON) or multicore-processors like Pentium D, because the MULTIEYE software supports multiple processors and multicore systems and that results in a notable increase of the system performance. This is especially important when you want to use many IP-cameras.



Important:

Avoid a permanent CPU-stress of 80% and more.

3.3.3 RAM

The memory usage of the system should be at least 512 MByte and I GByte for 32-channel systems.

3.3.4 Harddisks

It makes sense to use at minimum two IDE-harddisks with UDMA-interface or SATA-harddisks. In case of safety reasons the harddisks should be formatted with NTFS. SATA-harddisks require a mainboard based on the Intel 915 (or higher) chipset.

It makes sense to use more expensive server-harddisks, because the disks are permanently in operation and these harddisks are specified for a 24/7 use.

The partitioning of the harddisks:

I. Harddisk

Partition 1:	Operating system and software	20-40 GB
Partition 2:	video-files which have to be analy	zed
2. Harddisk(s)	videodata (ring-storage)	120 GB and more



Important:

Make certain of an adequate harddisk-cooling and -ventilation!

3.3.5 Graphics cards

It's recommended to use graphics cards based on a GeForce 4 chipset or better and min. 32 MB memory. Optimal are graphics cards with two monitor-outputs.

Screen-resolution: at least 1024x768 pixel at High-Color (16 Bit color-depth)

18 MULTIEYE Usermanual

3.3.5.1 Dual monitor operation

MULTIEYE-Hybrid supports the dual monitor / dual graphics cards operation. For example it's possible to switch the MultiScreen on monitor one OR monitor two. Just right-click into an empty space in the upper userbar. The software saves the position of the windows.



3.4 Supported operating systems

The operating systems Windows XP, Windows 2000 and Windows 2003 are supported by MULTIEYE.

Under the system Windows XP <u>Professional</u> you must be logged in as a main user with limited administration-rights or as administrator.

It's not possible to work with the rights of a "normal user".

(see also: Userrights in Windows XP Professional 178)

The installation and configuration has to be done always with the rights of an administrator.

When you use Windows XP Home, you must work as administrator.



Attention: WINDOWS 98, ME and NT4

These operating systems are not supported by MULTIEYE-recorders. But a remote request is possible from these systems.

3.5 Firewalls and virus scanner

If you have installed a virus scanner, it should be configured to ignore the drives, where the videos are stored. This avoids the lowering of the system performance, because the virus scanner scans permanently the video files.

MULTIEYE is programmed modular. The separate parts of the software communicate over network connections. This is the case, that a firewall (e.g. *Symantec Norton Internet Security*) has to be configured to allow external access. In case of a remote access the corresponding ports have to be opened.

The integrated firewall in Windows XP blocks only external access. In this case you have only to configure the firewall, if it's necessary to remote access the system.

3.6 Choosing the analog cameras

It's important for the later results to choose the right cameras for the closed circuit television. Only when the image quality at the input of the recorder is good enough, the saved video file will be good too.

3.7 Video signals of the attached cameras

Only when the cameras deliver proper images, the saved images have good quality. It's always optimal to use high-resolution cameras, because more image informations are available after the mandatory compression of the stored video files.

Important:



Pay attention to have clearly video signals. The norm level of the camera is IVss. Heavily damped video signals or signals with signal noise can disturb the video board and accordingly the function of MULTIEYE-Hybrid.

The MULTIEYE video boards work correct in the tolerance range 0.7 - 1.5 Vss. Wrong output levels of cameras can result in color corruption or full loss of the video signal.

3.8 Adjustment of the attached cameras

Important:



All cameras should have correctly adjusted flange focal distance, sharpness and the signal level at the recorder (I Vss).

The signal level at the recorder should be adjusted with an oscilloscope.

The flange focal distance and the sharpness should be adjusted with the help of a greyscale filter (ND).



4 Hardware

4.1 General

4.1.1 Contents of delivery

4.1.1.1 Contents of delivery MULTIEYE-HYBRID Recorder Kit

- 4 channel PCI video board in industrial version
- Audio adapter (only type 1650 and 16100) and connection cable
- CD-ROM with the MULTIEYE-Hybrid software
- Diskette with license
- Watchdog connection cable
- Usermanual

4.1.1.2 Contents of deliveryMULTIEYE-NET

- USB dongle
- CD-ROM with the MULTIEYE-Hybrid software
- Diskette with license
- Usermanual

4.1.1.3 Maximum count of video channels of a MULTIEYE system

The delivered MULTIEYE-Hybrid software supports the operation up to 32 channels in a single system.

Analog and network cameras can be combined together.

If systems with more than 32 channels shall be build, multiple MULTIEYE-Hybrid recorders can be combined in one total system. This can be administrated over <u>one</u> MultiScreen interface.

4.1.2 Capability characteristics of the MULTIEYE video boards

Videoboard Type	Video channels	PCI Device 32 Bit	fps PAL/NTSC	Compression format M-JPEG	Audio channels	Monitor output	Watch Dog
425	4	~	25/30	\checkmark	I	\checkmark	✓
1625	4,8,12,16	~	25/30	✓	I	✓	✓
1650	4,8,12,16	~	50/60	✓	2	✓	✓
16100	4,8,12,16	~	100/120	✓	4	✓	✓
16200	4,8,12,16	~	200/240	✓	8	✓	✓
32100	4,8,12,16,32	~	100/120	✓	4	✓	✓
MP8200	4,8	~	200/240	MPEG-4	8	✓	~

The capability characteristics of the different video boards are shown in the followed table:

Multiple MULTIEYE video boards can operate in a single PC (Multiboard operation)



Attention:

The shown fps-values (Frames per second) correlate to the PAL format and not to the smaller CIF or QCIF formats!

4.1.3 MULTIEYE videoboard-combinations for 8-32 cameras

Because of the Multiboard operation there is a wide range of system capabilities.

Camera	PCI-chassis-	Board	Board EX-4		EX	-24 expansi	on
inputs	slots	l 6xxx	425	expansion	EX-24	BNC-12	Additional licenses
8	2	I		Ι	-	-	-
8	2	I	Ι		-	-	-
12	3	Ι	-	2	-	-	-
16	4	I	-	3	-	-	-
16	2	I	-	-	I	I	3
20	5	2	-	3	-	-	-
20	5	I	Ι	3	-	-	-
20	3	2	-	-	I	I	3
24	6	2	-	4	-	-	-
24	3	2	-	-	I	2	4
28	7	2	-	5	-	-	-
28	3	2	-	-	I	2	5
32	8	2	-	6	-	-	-
32	3	2	-	-	I	2	6

Expansion boards like EX-4, EX-24 and EX-IO can be connected to the video boards of the type 16xxx.

The activation of expansion boards and software extensions are done by the license manager.

4.2 Description of the MULTIEYE video boards

4.2.1 Video board type 425

The video board model 425 is provided with four analog BNC video inputs, audio input, monitor interface, Watchdog jumper ports, connection for an overlay board and the jumpers to activate/deactivate the 75 ohm termination.



4.2.2 Video board type 1625

The video board type 1625 is provided with four analog BNC video inputs, three plug-ins for video extension - boards, two connections for alarm boards, audio input, monitor interface, Watchdog connectors, connection for an overlay board, and the jumpers to activate/deactivate the 75 ohm termination.



4.2.3 Video boards type 1650 and 16100

The video board types 1650 and 16100 are delivered with four analog BNC video inputs, three plug-ins for video extension boards, two connections for alarm boards, one interface for the audio extension board, monitor interface, Watchdog connectors, connection for an overlay board, and the jumpers to activate/deactivate the 75 ohm termination.



The boards can be identified by their component layout: the 1650 has two free IC component locations in the middle next to the larger ICs.

4.2.4 Video board type 16200

The video board type 16200 has up to 16 analog video and 8 audio inputs, one video out for the connection of an analog video monitor and a connector for an EX-IOC alarm board (input / output board). On the video board there are 16 DIP switches for switching of the 75 ohm termination of the video signals.



4.2.4.1 75 ohm termination: The DIP switches

If there should be an additional analog component - e.g. an analog video monitor - plugged to a video channel, the 75 ohm termination has to be deactivated. For this you have to switch the corresponding DIP switch to "OFF".

4.2.4.2 Connection of an EX-IOC alarm board

How to connect an EX-IOC alarm board is described here 33.

4.2.4.3 Delivery contents of the video board type 16200

- Video board type 16200
- Two breakout cables
- One audio extension board and a 5 pole flat ribbon cable
- MULTIEYE-Hybrid software CD
- Diskette with the license
- Watchdog cable
- Usermanual and short information

4.2.5 Video board type 32100



The video board type 32100 and its extension board contains - corresponding to the number of licenses - 32 analog video and four audio inputs, one video output for an analog video monitor, Watchdog connectors, one connector for an overlay board and a connector for an EX-IOC alarm board. The video board contains also the DIP switches to activate/deactivate the 75 ohm termination of the analog input signals.



The connection of the video signals is done by the numbered BNC connectors of the breakout cable. The D-SUB 15 connector has to be plugged into the video board and should be locked.

MULTIEYE Usermanual

26

4.2.5.1 75 ohm termination: The DIP switches

If there should be an additional analog component - e.g. an analog video monitor - plugged to a video channel, the 75 ohm termination has to be deactivated. For this you have to switch the corresponding DIP switch to "OFF".

4.2.6 The extension board for the video board type 32100



The video board type 32100 contains the analog video inputs 1 to 16. Shall the channels 17 - 32 to be used, the delivered extension board has to be connected with the 40 pole flat ribbon cable to the video board.

4.2.6.1 Connecting the extension board to the video board type 32100



Connect the extension board with the delivered 40 pole flat ribbon cable to the video board 32100. Be careful to use the correct connector on the video board.

Fold the cable carefully, to avoid damaging the cable.

The video connectors	where to find them:
I - 8	video board 32100 (lower D-SUB15 connector)
9 - 16	video board 32100 (upper D-SUB15 connector)
17 - 24	extension board (lower D-SUB15 connector, J2)
25 - 32	extension board (upper D-SUB15 connector, J4)

4.2.6.2 Contents of delivery video board type 32100

- $_{\odot}\,$ Video board type 32100
- $_{\rm O}\,$ Break out cable (four pieces)
- $_{\rm O}$ Audio extension board with 5-pole flat ribbon cable
- o MULTIEYE-HYBRID software CD
- $_{\odot}\,$ Diskette with license (bought analog licenses and one IP-Demo license)
- $_{\rm O}$ Extension board with 40-pole flat ribbon cable
- Watchdog cable
- 0 User manual and short instructions

4.2.7 Video board type MP8200

The video board type MP8200 is available in two versions: PCI and PCI-Express. So it's possible to use up to four video boards in one recordersystem. (two PCI and two PCI-Express). Take care to an adequate aircooling and choose an enough dimensioned power supply, because the power consumption of these cards is relatively high.



4.2.7.1 Video board type MP8200 PCI





4.2.7.3 Description video board type MP8200

Both versions of the video board type MP8200 are provided with eight video and eight audio inputs, one video output for an analog monitor, watchdog connector, overlay board connector and a connector for the EX-IOC alarm board.

Further the DIP switches for the 75 Ohm termination of the analog video inputs are mounted on the board.



28

The connection of the video (yellow) and audio signals (red) is done by the numbered BNC-plugs at the break out cable. The D-SUB 15 plug will be connected to the video board and should be screwed well.

4.2.7.4 75 Ohm termination: The DIP switches

If there should be connected a further component - e.g. an analog video monitor - parallel to a video channel, the termination for this channels has to be deactivated. For this you have to switch the corresponding DIP switch to "OFF".

4.2.7.5 Contents of delivery video board type MP8200

- Video board type MP8200 (PCI / PCI-Express)
- Break out cable (2 pieces)
- MULTIEYE-HYBRID Software CD
- License disk (bought analog licenses and one IP demo license)
- Watchdog cable
- MULTIEYE User manual

4.2.7.6 Power consumption video board type MP8200

On the video board are two processors mounted for MPEG-4 hardware coding, which bring a high performance, but on the cost of power consumption. Take care to use an enough dimensioned power supply.

Parameter	Max (A)	Max (W)
+3,3 V voltage supply	2,53	8,35
+5 V voltage supply	2,3	11,5
Complete consumption		19,85

4.2.8 Other types of connectors on the video boards

4.2.8.1 Watchdog connector

On all video boards is a Watchdog installed. This can restart the computer automatically, when the computer don't react on requirements by the operating system.

The Watchdog connector has to be connected with the delivered cable to the mainboard reset connector. If there is a reset switch available it can be connected as shown.



4.2.8.2 Watchdog at Multiboard operation

Are multiple boards like 425, 1625, 1650 etc. used in a PC, so the Watchdog cables have to connected in a row from board to board. (J2 \rightarrow J1 etc.)



4.2.8.3 75 Ohm terminate resistor

Video terminals like video boards, monitors, multiplexer etc. are applied with a 75 ohm terminator. Shall a camera be connected to two terminals like video board and monitor, you have to use a BNC-T adapter.

To avoid stressing the camera output amplifier, the termination of the middle terminal has to be switched off.

This can be done by pulling out of the corresponding jumper on the video boards.



4.2.8.4 Connecting an analog video monitor

Above the BNC connectors on the video board is a Cinch socket (yellow) available to connect an external analog video monitor. Analog signals in live-mode can be sent to the analog monitor if the corresponding settings in the software are set. Be aware, that only signals from direct connected cameras to the video board can be displayed on the analog monitor. Multiboard operation requires multiple monitors, respective a "Quad Video Processor", because it's not allowed to connect the video outputs together for simultaneously displaying of the signals.

4.2.8.5 Connection audio

All video boards contain - according to the type of the video board - one to four mono audio inputs. The boards 425 and 1625 contain a audio jacket for a 3.5mm jack plug for microphone or line-mono signals. The boards 1650 and 16100 are connected over the audio extension board.

The input sensitivity can be justified in a wide range. (see also: Configuration audio 97)

The video board supplies a phantom potential of 2V for operating capacitor microphones.

MULTIEYE Usermanual

4.2.8.6 Overlay board connector

The overlay connectors on the video boards are designated for later expansions.

4.3 Extensionboards

4.3.1 Installation of the audio extension board for 1650, 16100, 16200, 32100



The audio extension board is connected to the video boards 1650, 16100, 16200 and 32100 with the delivered multicolored cable.

This board contains four cinch jackets for the audio signals and don't require a free PCI slot. It can be built into any free slot of the PC.

4.3.2 EX-4 extension board

The EX-4 extension board is delivered with a 10 pole connecting cable. It contains four jumpers to activate/deactivate the 75 ohm termination.

For a secure mounting the delivery contains also a fitting panel and two nuts. The EX-4 extension board can be used with the video boards 1625, 1650 and 16100.



4.3.3 EX-24 extension board

The EX-24 extension board can be used instead of multiple EX-4 extension boards. With this a 32 channel recorder can be realized in one PC chassis, but only three slots are used for all video inputs. The EX-24 can be used with the boards 1625, 1650 and 16100.

The EX-24 contains two SUB-D jackets for connecting max. two BNC-12 break out cables. On the board are six jackets mounted for the 10 pole flat ribbon cables to the video boards. It's possible to activate/deactivate the 75 ohm termination for every camera input. The EX-24 is connected to the jackets with the delivered cables.



You've got another benefit from the EX-24 extension board if the PC is built into a 19" rack. All video cables can be connected to the break out cable and then only the break out cable has to be connected to the extension board.

4.3.4 EX-IO alarm board



The EX-IO alarm board is an extension card with IO connections.

Alarm systems, motion detectors, door opener and other alarm signalers can serve over the EX-IO board into the MULTIEYE-Hybrid system as signalers for motion or event depending recording. (e.g. external alarm system triggers recording)

The EX-IO board is delivered with a 20 pole connection cable. Each card contains eight optical decoupled and potential free contact inputs and also two switching relays.

Rated Relay voltage and current:

125V - 0,5 A - 30 VA

Pay attention to the observance of the electric connected loads!

As a result of destructions by strain of the relay contacts or by the connection of a foreign tension to the inputs the guarantee expires!

4.3.5 Installing extension boards EX-4 and EX-IO

The extension boards are connected to the video board types 16xxx with the enclosed connection cables. Attention must be paid to the sequence of the extension boards as shown in the sketch. The EX-4 and EX-IO extension cards need no PCI slot; they can be inserted in any standard free slot. The extension boards are activated via the license manager (see also: General information about activation 45^{-1}).



4.3.6 Alarmboard EX-IOC



The alarm board EX-IOC is connected to the video board with an 20-pole flat ribbon cable. At the alarm board you can use the upper or lower connector. To cascade with a second alarm board the second connector is used.

(see following pictures)

4.3.6.1 Connecting the alarm board to the video board type 16200



4.3.6.2 Connecting the alarm board to the video board type 32100



MULTIEYE Usermanual

4.3.6.3 DIP switch settings

Absolutely important for a correct operation are the correct settings of both DIP switch blocks on the alarm board EX-IOC!

4.3.6.4 DIP switch block S1

SI-I On Relay Mode:

SI-2 On The input can be triggered by an output relay of an external signaler (e.g. the relay output of a smoke detector). The input optical coupler has then an internal voltage supply.

SI-I Off Voltage Mode:

SI-2 Off The input is driven by an external voltage supply, e.g. a PNP open collector output.

4.3.6.5 DIPswitch block S2

- **S2-1** Off Videoboard Typ 425, 1625, 1650, 16100
 - On Videoboard Typ 16200, 32100
- **S2-2 Off** erstes Alarmboard EX-IOC im System: In I...8 und Out I...2
 - On zweites Alarmboard EX-IOC im System: In 9 .. 16 und Out 3...4

4.3.6.6 Electrical loads

1	Inputs	While Voltage Mode (SI-I and SI-2 set to "OFF"): Min. 3 V, typically 5 V, max. I2 V DC (Relay: min. 0 Ohm, max. I70 Ohn		
	Outputs	max. relay load: 125 V, 0.5 A, 30 W		

4.4 Additional extension boards

4.4.1 Audio extension EX-Audio 16

With the EX-AUDIO16 board, 16 audio sources can be recorded. If the EX-AUDIO16 is operated together with video boards in one system, then the video board's audio input(s) will be automatically de-activated.

MULTIEYE-HYBRID software supports operation with up to 32 audio channels. This corresponds to two EX-AUDIO16 boards.



4.5 USB Dongle for MULTIEYE-NET (WIBU-Key Dongle)

The Software MULTIEYE-NET will be delivered with an USB dongle.

This dongle protects the MULTIEYE software and is similar the license-key for additional extensions, online updates, etc.



Important:

At the installation of the MULTIEYE-NET software the dongle-driver has to be installed separately!



Informations and hints are found in the Windows systemcontrol under "WIBU Key".

4.6 Connecting PTZ cameras

Analog PTZ cameras are normally connected to a RS 485 interface. At the PC an external converter from <u>RS-232</u> to RS-485 is required.

4.7 Recorder chassis

36

Normally the standard PC-chassis offers 6 free usable slots and so it's possible to use up to 24 analog video channels. In addition you can realize a recorder up to 32 channels in s smaller chassis, when you use an EX-24 extension board.

Optimal are 19" server chassis with server boards. Hereby you can use up to 14 free slots for video and extension boards.

This example shows the back of a 16 channel recorder.



4.8 Hints for preparing the system

4.8.1 BIOS

Before installing video boards, you should make sure that the most up-to-date BIOS version is installed. For that, contact either your computer dealer or the producer of the computer mainboards directly.

For the secure operation of MULTIEYE-HYBRID, it is recommended that the computer automatically re-boots after a power outage. This option must be activated in your computer's BIOS. To do this, press the "DEL" or "F2" key (see your mainboard's manual to find out which) when the computer is booting.

The designation for this function can vary greatly, and depends on the used BIOS version. (It is usually "Power up Control" or "PWROn after PWR fail".) Please check your computer's user's manual to see if this function is supported.

In case the MULTIEYE-HYBRID system is to be operated without a keyboard, then the option "Halt on Errors" should be set to "All but Keyboard".

In most cases, it is recommended to set the option "PNP OS" to "NO", since the BIOS will then distribute the available interrupts prior to activation of the operating system.

Changes in the BIOS have to be saved and the computer has to be restarted.

© 2007 artec technologies AG
4.8.2 Configuring Windows

All official updates of the operating system and the most recent drivers for the computer's hardware should be installed prior to installing MULTIEYE-HYBRID. All storage media which are to be used by MULTIEYE-HYBRID for recording video data must be properly partitioned and formatted (NTFS). When using network storage, the respective disk drives must be mapped.

In case a sound card is installed in your PC but no loudspeakers are connected to it, the sound card should be de-activated in the Windows Device Manager. Then MULTIEYE-HYBRID will sound all acoustic messages through the internal PC-speaker.

For the operation of MULTIEYE-HYBRID, a graphics resolution of at least 1024 by 768 pixels is necessary.

The color depth of the graphic card should be set to 16-bit (HiColor) to avoid needlessly wasting CPU resources with a 32-bit display.

In case the computer is connected to the Internet, software can be installed (for example the freeware program " PTBSync") with whose help the clock of the computer can be periodically coordinated with atomic time. Alternatively, a PC atomic clock could take over this function.

4.8.3 Automatic Windows login

So that MULTIEYE will automatically re-boot – for example if a PC reset is activated by the Watchdog or after a power outage – automatic user login must be activated.

Automatic user login can be activated in the Windows user settings. In Windows XP, the "old" user administration (start \rightarrow run \rightarrow "control userpasswords2") must be used in such a case.



5 Installing video boards and software

5.1 Installation MULTIEYE-HYBRID and MULTIEYE-NET

5.1.1 Installation MULTIEYE-HYBRID

During the installation you have to insert the video board and possible add-on modules (e.g. EX-4, EX-24, EX-IOC) into the system first, then to install the hardware system drivers and then afterwards the MULTIEYE-HYBRID software.

5.1.2 Installation MULTIEYE-NET

If you install MULTIEYE-NET the installing of video boards is not applicable. Instead a dongle has to be connected and installed. First you have to install the dongle-systemdriver and then - during the MULTIEYE software installation - the WIBU-Key dongle driver.

5.2 Installing MULTIEYE video boards

The video board is inserted into one of the PC's available PCI slots (DVR-Kit MP8200 PCI EX: PCI-Express Slot). The following tips should be observed for the installation and activation of the video boards.



I. Switch the PC off and remove the power plug!

To avoid static electricity charges while installing the boards, you should create a permanent ground if possible. If that is not possible, at least discharge yourself by touching frequently a grounded object such as a metal radiator

2. Remove the packing without contacting the lower side of the board



3. Insert the video board into one of the PC's free slots

4. If applicable, insert the optional extension boards such as EX-4 and/or the EX-IO into the free slots, screw them down and connect the bus cables with the video board. (Installing extension boards EX-4 and EX-IO 32^{-1})

5. Connect the Watchdog cable as described here: WatchDog 28



6. Connect the analog video cameras with the BNC inputs of the video board

7. Close the PC casing and connect the power cable. Turn on the PC.. The new hardware will automatically detected by the operating system

5.3 Installation of the videoboard system drivers

Driver installation on a Windows XP system is described here. Installation under Windows 2000 is done similarly.

Switch on the PC and insert the MULTIEYE Installation CD in the CD-ROM drive. After boot up, the following dialog window appears.

Found New Hardware Wiz	ard	
	Welcome to the Found New Hardware Wizard Windows will search for current and updated software by looking on your computer, on the hardware installation CD, or on the Windows Update Web site (with your permission). Read our privacy policy Can Windows connect to Windows Update to search for	The new hardware was found by the system and has to be installed now.
	software? Yes, this time only Yes, now and every time I connect a device No, not this time Click Next to continue.	Select 'No, not this time' and confirm with a click on [Next]
	K Back Next > Cancel	

Har dwa	re Installation
1	The software you are installing for this hardware: Meye416 Video #A(Multi)
	has not passed Windows Logo testing to verify its compatibility with Windows XP. (<u>Tell me why this testing is important</u> .) Continuing your installation of this software may impair or destabilize the correct operation of your system either immediately or in the future. Microsoft strongly recommends that you stop this installation now and contact the hardware vendor for software that has passed Windows Logo testing.
	Continue Anyway STOP Installation

Then click [Continue anyway]



After the installation of the video driver is done, the installation of the audio driver follows.

Found New Hardware Wi	zard	
	This wizard helps you install software for: Meye416 Audio #A (Multi) If your hardware came with an installation CD or floppy disk, insert it now.	Please pro installation
	What do you want the wizard to do? Install the software automatically (Recommended) Install from a list or specific location (Advanced)	
	Click Next to continue.	

Please proceed here as you did during the installation of the video driver.

When using multiple video boards or 1650 and 16100 boards, this procedure is to be repeated in correspondence to the number of video chips on the boards.



Important:

After the installation of the hardware the computer has to be restarted.

5.4 MULTIEYE-NET: Installing the USB-Dongle (WIBU-Key Dongle)

Place the installation CD in your CD-ROM drive and insert the dongle into a free USB port. The dongle driver is installed automatically from the CD.



Important:

Always use the same USB port for the dongle!



Hint:

MULTIEYE-NET always requires this dongle to work correctly. When you unplug the dongle while MULTIEYE-NET is running, the program will be deactivated after one hour.

5.5 Installing MULTIEYE-HYBRID



MULTIEYE-HYBRID Complete installation of MULTIEYE-HYBRID (incl. NET)

Network components

LiveViewer Camera live view v

- Network player Plays recorded videos via network
- MULTIEYE Remote Control Remote administration of MULTIEYE-systems

Further components

- VideoCenter (Trial-Version) Site map based camera management (test version)
- VideoCenter II (Licence required) Install all needed parts to run the VideoCenter II
- MULTIEYE Shell (Licence required) Install all needed parts to run the MULTIEYE Shell

Manual (PDF) MULTIEYE-HYBRID manual (requires Acrobat Reader) In addition, specific components can be selected for installation. The functions of those components are described in the installation program.

Installation begins immediately after a click on the appropriate symbol

After all of the files have been installed, you can proceed the installation program by clicking on the symbol

On the next screen you terminate the installation by clicking



. :



Important:

In former versions of MULTIEYE-NET it was necessary to install software for the dongle. This is now no longer necessary!



Hint:

After completing the installation, you should update MULTIEYE-HYBRID to the newest product version. This can easily be done via the Live-Updater which you can start from the folder "MULTIEYE-HYBRID" in the Windows Start Menu (see also: Liveupdate 156).

Now you can start "MULTIEYE-HYBRID" from the Windows Start Menu or directly from the desktop.

You will be requested to enter a valid license, as is described in the next Chapter.



6 Licensing and activation

6.1 General information about avtivation

With the delivery of a MULTIEYE-HYBRID DVR Kit or MULTIEYE-NET, you receive an additional floppy disk with a license key. With this disk, you can activate your software for the delivered hardware.

For licensing, the included video board or the USB dongle must be installed in your system beforehand. If no floppy disk drive is available, the license key can be typed in manually.

The license key is a 56-digit code which is specifically linked to the hardware.

If you extend the system later, for example with EX-4, EX-IO or EX-IP modules, you will receive an activation key with the delivery.

An activation key is not linked to any specific hardware. It allows an extension to be integrated into the system. At the time of activation, a license key is generated from an activation key. Then that license key is linked to the specific hardware.



Important:

When activating hardware, please make sure that you assign the activation key to the correct hardware. Once a key has been assigned, the link cannot be reversed.

6.2 Licensing of a video board or dongle



When you first start MULTIEYE-HYBRID, you will receive the message that no license for MULTIEYE-HYBRID could be found.

Click on the button [Enter License]



Click on

[Import from file].

A window appears which enables the selection of the storage location of the license file. Change to your diskette drive (usually A:\) and choose the license file stored there.

Alternatively, you can type the license key in manually or (in case of an existing internet connection) request it online.

After the license has been imported and/or entered, MULTIEYE must be re-started.

When multiple video boards are used, it is necessary that all license keys are entered one-by-one.

In order to subsequently list your license(s), click on the symbol in the Windows System Tray (next to the Windows clock) and then on the tab "Licenses". All licensed boards, extensions and their associated licenses will be displayed there.

License Manager
😂 🗐
Enter License Key
1) 1 <u>9</u>
OK 🕢 Clear 🛛 🔇 Cancel

Services	Licenses	Options Hardware
P	\bigcirc	1
- 📓 F	l ainboard	\$
<u> </u>	👂 MVB3-0k	(51014800083 [08]
)- 🧐 F	lemote Tr	ansmission
	MNPO-OK	<51014800083
	xtension	Boards
	EXI0-0K5	51014800083

6.3 Activating extensions

When you purchase extension boards or software enhancements, you will receive an activation key with the delivery. This will be needed to allocate the extension to an existing video board or dongle. After successful activation, you will receive a license key; the activation key will then be de-activated and cannot be used for further activations.

If the MULTIEYE system is connected to the Internet, activation can be carried out as described below. Otherwise read <u>Ordering licence key per fax</u> 49° Click on the key symbol in the license display



and then on the button [Activation Key]. Now a further window will open so you can select the hardware (video board, dongle) which is to be activated.

Please pay particular attention in Multiboard operation to the correct activation of the number of channels for each separate video board.

1		×
Licen	se Manager	
R	Add new license	
Enter new	/ License	
	Enter your 56 digit License Key here to activate or upgrade your MULTIEYE-HYBRID Software	
Activation	i Keys	
	Online Key-Generator for Software and Module Add-On's Internet Connection required !	
Restore v	ia Internet	=
	Get all licenses ever registered with your hardware Internet Connection required !	
Use Inte	ernet Explorer Proxy Server	

License Manager		
Enter A	ctivation Key -	
Personal Information r	equired	
First Name		
Last Name		
Street		
ZIP		
City		
E-Mail		
ок 🛛	Clear Cancel	

As soon as you have selected the board, enter the key, together with all personal data being necessary for licensing.

After you confirm this by a click on [OK], the activation key will be analyzed and a new license key created from it. This is to be verified as well.

Afterwards the applied activation key can no longer be used for the activation of additional modules.

The change just carried out will now be displayed in the list of licenses.

If you have just activated an IP camera license, you will now find the MIPO-OK1100... license, for example, in the category "Add-On Modules"

"MIP0" stands for the MULTIEYE IP module and "0K1100..." contains the serial number of the dongle to which this license is linked.



License key	Meaning
вки	Backup-module-license
EXI0	EX-IO board alarm module
EXIA	EX-IO-server license
MDS0	DataLog module license / Kassen-Modul-Lizenz
MHSI	MULTIEYE-HYBRID Shell license
MIPD	I-channel IP-camera-demo-license
MIP0	IP-camera-license (Resolution $< 1280 \times 1024$)
МІРН	IP-camera-license High-Resolution cameras
MNP0	Network player module license
MVB	Video-mainboard license

6.3.1 Meaning of the license keys

One additional camera license always allows the operation of four additional cameras.



Hint:

Activation is always easiest when the MULTIEYE system is connected to the internet.

6.3.2 Applying online for a license key

A license key can likewise be requested at the internet page <u>www.multieye.de</u> \rightarrow Key-Generator. To do this, you must enter the serial number of the additional board and the activation key. The license key will then be dispatched to you by email.

Full Serialnumbe	r of the Videoboard / Dongles
l like ME00123	
Activationkey	
 lik∌ ABC123	-
Captinua	Clear

After receiving the license key via e-mail proceed as outlined in chapter Licensing of a video board or dongle 45

6.3.3 Applying per fax for a license key

If you do not wish to use an internet connection for licensing (e.g. for security reasons), the license key can also be requested via fax at

```
+49 (0)5441 5995-70.
```

6.4 Restoring licenses online

In case the MULTIEYE-HYBRID system has to be reinstalled, all licenses for the installed hardware (video boards and dongles) can be restored if you have an existing internet connection.

Click on the key symbol in the license display







6.5 Saving and restoring of licences





7 MULTIEYE-HYBRID interface

MULTIEYE-HYBRID configures itself automatically, when analog cameras are connected. Before the first recording only the drive for the ringstorage to store the video files has to be selected and configured. Afterwards recording can immediately be started. We recommend to configure MULTIEYE-HYBRID individually to benefit from the many advantages and features of MULTIEYE-HYBRID.

MULTIEYE-HYBRID consists of three parts, which are trimmed for full network integration:

- MultiScreen
 → Interface and configuration of the system

7.1 Starting MULTIEYE-HYBRID

The Product MULTIEYE-HYBRID (-NET) is programmed modular and consists of two main programs:

MULTIEYE Services

MULTIEYE MultiScreen



The module MULTIEYE Services is for the communication of the separate program modules. The module MULTIEYE MultiScreen is the interface for monitoring and configuration.

7.1.1 Starting MULTIEYE Services



MULTIEYE-HYBRID can be started from the Windows startmenu or by double clicking the icon on the desktop.

With the program start the local services are started first.

The wide range of settings are described in the chapter Services 134

According to the system configuration MultiScreen starts automatically or has to be started by clicking on the symbol





7.1.2 Starting MultiScreen

52

MultiScreen functions as a stand-alone application which is used to visualize the user interface (GUI = Graphical User Interface).

MultiScreen can be started from the Windows Start Menu or from the context

menu of MULTIEYE services (right click on the symbol in the Windows System Tray).

	MULTIEVE Services	
9	MultiScreen	-
a)	MULTIEYE Player	
Ŷ	<u>B</u> ackup	•
×	<u>⊂</u> lose all	





MultiScreen is divided into a toolbar and a screen area with camera windows



Important:

Only the visible cameras will be recorded!

After MultiScreen has started, this MultiScreen symbol appears in the Windows System Tray next to the Windows clock.



7.2 Configuring MultiScreen

7.2.1 Drag&Drop



Many functions can be conveniently set by Drag&Drop. For example, the camera windows on MultiScreen can be moved around freely or storage areas can be allocated to cameras.

Example:

With the mouse pointer, go to the panel of the camera which is to be displayed and with which you wish to record. Left-click on the image and hold this key pressed. Now drag the image to a window of your choice and release the mouse button. The camera image will now appear in the selected window.

7.2.2 MultiScreen at the initial start

If you have already connected the analog cameras prior to initially starting MULTIEYE, the screen will be divided to correspond to the number of licensed channels. The connected cameras will be displayed directly.

With MULTIEYE-NET, the symbols of the activated IP-camera will be displayed in the toolbar.

IP cameras must be configured first.

For display, a camera symbol is dragged and dropped in a camera window.

After a click on



the camera can be configured.



#

和周

Set Set Set Set





Important:

Only those cameras which have been dragged and dropped onto the MultiScreen will be recorded!

54

7.2.3 IP camera

At least one camera window on MultiScreen is reserved for an IP camera. If this is not needed, it can simply be dragged and dropped into the trash. \Box

see also: <u>Camera text</u> 81

7.2.4 IP Megapixel camera

MULTIEYE-HYBRID also supports mega-pixel cameras which offer far more exact details when zooming.

To operate megapixel cameras with more than 1.4 million pixels an upgrade license "REC IP-HD Module" is necessary.

7.2.5 Subsequent connection of cameras

If you connect cameras after installing MULTIEYE, these will be automatically detected by the running program but not automatically displayed on MultiScreen.

You can recognize active cameras by their neutral camera icon ²⁰⁰¹. For display you must Drag&Drop these cameras onto the MultiScreen and for recording you must configure at least the ringbuffer.

7.2.6 Deleting cameras

Cameras which are no longer present or do not need to be displayed should be either

- Dragged and dropped in the trash or
- Deleted on MultiScreen (right mouse key → "Delete camera")

Deleting cameras from MultiScreen frees up performance resources which are then applied to the other cameras.

7.2.7 Moving or deleting cameras from MultiScreen

Individual camera windows can be directly removed from MultiScreen by Drag&Drop in order to move these to other windows or to place windows on the desktop as you wish.



Moving cameras:

Drag&Drop the camera window into the center of the desired window. When you release the mouse button, the camera will drop into the picture frame.

Should this window already be occupied by a different camera, that previous camera will now be freed up for new allocation.



When the option "Remove camera window out of MultiScreen" in the 'Global Settings' is activated, camera windows can be placed on the desktop as desired.

Via Drag&Drop you can move the camera window out of the MultiScreen and place it on the desktop where you want it.

The size of the camera window can now be altered!

To reinsert a window which has moved out from the MultiScreen, simply Drag&Drop it in the middle of the desired target window.

7.3 MultiScreen toolbar



7.3.1 Trash



All connected cameras can be distributed among and arranged on the configured video windows by Drag & Drop. In order to reverse the alignment of a camera, you need only Drag&Drop it in the wastepaper basket. In this way, modifications to the user interface can be carried out quickly and without complication.



Hint:

The previous configuration for the camera is \underline{NOT} erased in such a case.

7.3.2 Selecting cameras

In the toolbar you will find an overview of the connected cameras.



If more than 16 cameras are connected, you can switch over to the display of cameras 17 to 32 by clicking on the symbol [>].



Hint:

With a horizontal resolution of 1280 or more pixels all 32 cameras are displayed.

In order to allocate a camera to a video window, you merely need to click on the camera symbol with the left mouse button, hold the button down, and Drag&Drop the symbol into the desired video window.

Symbols with gray highlighted cameras represent analog cameras; blue highlighted camera symbols indicate IP cameras.

Camerastatus		IP-camerastatus
active	Ā	active
active camera active but not displayed on the current MultiScreen	A	active camera active but not displayed on the current MultiScreen
camera connected but has not yet been assigned	飍	camera has not yet been assigned
camera interface has been licensed but not yet assigned	- 	camera license has been confirmed but camera has not yet been configured
video outage		camera or network outage OR not correctly configured

7.3.3 MultiScreen Layout

	H	S

In this selection menu, eight MultiScreen layouts are available. This allows the camera windows, as marked on the graphic symbols, to be displayed. Up to 32 camera windows can be simultaneously displayed on MultiScreen by mouse click.

With the numerous possibilities for configuring MULTIEYE-HYBRID according to your personal wishes, you can give the application a completely new layout in the shortest amount of time.

The possibility to change the layout means that you can also easily adapt the user interface to meet your personal assignment needs (see also Individuel MultiScreen layout 57).

7.3.4 Individuel MultiScreen layout with the Desktop Layouter



With MultiScreen Layouter, you can design your user interface by adapting the video panels to your needs.

You have the possibility to modify the camera display surfaces of your individual work place independently of the default parameters.

With this tool, you can now freely position as many as 32 video windows. Simply Drag&Drop the color-highlighted and numbered panels (see example) until you have the optimal display of your cameras on the MultiScreen. Undo changes by dragging the camera panels into the trash by Drag&Drop. You can store a finished layout directly to the hard drive simply by clicking on [Save].

With the button [Load] you access pre-configured panels which you can load and further modify as you wish. Large video panels are denoted by the same numbering as well as by the same colored display of the panels marked. Example: Window area three consists of nine single panels.

Simply try the Layouter and experiment with various layouts. You will see how quickly you can create your own individual distribution and how easy it is.



Below the tab [Examples], you will find further graphically depicted templates which can be adopted simply by double-clicking on them.



Example of an eight-fold MultiScreen with one large panel and seven small ones.

When you click [Accept] the layout will be transfered to the MultiScreen.



To make the newly created configuration one of the alternative choices in the MultiScreen toolbar, simply click on one of the eight buttons and the layout will be inserted there.



The new layout will be shown in the toolbar of MultiScreen.

7.3.5 Configurations and Settings



All important settings such as video and image settings, ring storage, motion detection, or global settings are called up with this button (see also: <u>Configure MULTIEYE-HYBRID</u> 67)

7.3.6 Timer: Start recording



With a click on the timer button the recording will be started. If recording is activated the button is signed red.

7.3.7 Replay / Starting MULTIEYE-HYBRID-Player



By clicking on the symbol depicted here, you call up the MULTIEYE-HYBRID Player (see also: <u>Analysis with the MULTIEYE-HYBRID-MultiPlayer</u> [117]).

59

7.3.8 MULTIEYE Remote Control (MRC)



With a click on this symbol, you can connect to other MULTIEYE recorders/servers in the network. If a MULTIEYE server is selected and the login process has been carried out, the MultiScreen of the selected MULTIEYE server will automatically open (see also: MULTIEYE Remote Control 150).

7.3.9 Locking System



With a click on the button "Protect System" the MultiScreen will be locked, but the camera displays will remain active.

By a further click on this symbol you have to relog into the system.

7.3.10 Date and Time / Display of "images per second"



In this part of the shell, either the current date and the clock's time OR the video board's current frames per second (ips) are displayed. You can choose the display by a click on the arrow pointing to the right image border. A warning will also appear in this area if the CPU load is too high.

7.3.11 Hide toolbar



i

With this button you hide the MultiScreen toolbar. Only the video windows are visible then. In order to restore the toolbar, just move the mouse pointer to the upper edge of the window. Then the toolbar becomes visible again.

7.3.12 Information about MULTIEYE HYBRID

By a click on this symbol you get version and system information about MULTIEYE-HYBRID.

	Version	
	Company	Artec Technologies AG
methy stream	Program Description	MULTIEYE-HYBRID
	File Version	2.0.2.7
digital security solutions	Internal Name	MULTIEYE-HYBRID
	Copyright	copyright by artec technologies ag®
technologies	Product Version	2.0.0.0
	System information	
GenuineIntel Intel(R) Core(TM)2 CPU 6600	phus Memoru	2 029 76 MB
@ 2.40GHz with support for UMUVcc, MMX,	nhus free Memory	1.329.55 MB
35E, 35E2, 35E3, EXECUTE DISable Bit, EM641, HupperThreading (2 logical)	Pagefile	2 631 88 MB
Evact: Family (2 logical).	Pagefile free	1 756 59 MB
Eamilycode 6 Modelnymber 15 SteppingID 6	Windows directory	C:WINDOWS
ranigoodo o, modoinanioor ro, otoppingio o	System directory	C:\WINDOWS\system32
	Time since system start	12:09:38
	Screen resolution	1280x1024
	Color	1
	User Name	Artec
	Computer Name	STEFAN
	Operating System	Windows XP

7.3.13 Minimizing program



This button makes it possible to run MultiScreen in the background and places a program symbol in the operating system's task bar. Double-clicking on the 🐼 symbol immediately restores MultiScreen.

7.3.14 Exiting MULTIEYE-HYBRID



Attention:

las

MULTIEYE-HYBRID can also be terminated with the symbol in the Windows System Tray (next to the Windows clock). Just click on this symbol with the right mouse button and confirm "Close All".

7.3.15 Infobar in the camera window



With this button, information (connection, camera name and frame rate (ips)) about the respective camera window can be blended in or out.



Video window with infobar



Video window without infobar

The infobar can also be blended in or out for every camera individually. Configuration is done in the camera context menu (see also: <u>Camera window context menu</u> ⁶³)

7.4 The camera window

7.4.1 Toolbar in the camera window

[01] Camera 01

In the infobar you will find the name of the camera, the magnifying-glass symbol, the frame rate (ips) and the loud-speaker symbol.

By clicking on the magnifying glass you access the zoom mode. The cursor in the camera window changes to a magnifying glass. With this magnifying glass you can call up an area in the camera window and enlarge the display. With the next click in the camera window, the entire image will be displayed again.

If an audio extension board has been installed in the system and an audio channel assigned to a camera, the loud-speaker symbol will appear in the infobar of that camera. With this loud-speaker symbol you can turn the audio monitoring function on and off.

The acoustic alarm signal is activated by default, but the alarm can also be deactivated. (see also <u>General configuration Audio</u> 68°).

On a PC without an audio card, the sound is produced through the internal loudspeaker; with an audio card, it is played over the external speakers.

7.4.2 Fullscreen display

When you double-click with the mouse on a camera window, the camera will be displayed in full-screen.

To return to MultiScreen, simply double-click on the full-screen display again.

7.4.3 Symbols in the camera window

The recording status of the individual cameras is indicated by yellow or red dots in the upper left-hand corner of the camera window.



O No dot: no recording

yellow dot: on motion detection standby, no recording

01 fps

yellow dot with a red ring: motion detection active, recording active red dot: continuous recording

Response No recording on this camera: no ring storage assigned to it. (see also: <u>Configuring ring storage</u> (88))

62

7.4.4 Camera outage detection (Video loss)

MULTIEYE monitors the quality of the camera signal.

In case of camera outage (video loss) or if the video signals are outside of the tolerance range, this image appears for the specific camera.



If the image broadcast of an IP camera is interrupted, an outage is announced. The symbol ¹¹ appears in MultiScreen's infobar.

7.4.5 Camera window contextmenu

With a right click on the camera window, this context menu window appears.



→ Anzeige / Optionen



 Motion Detection

 Continuous

Start or stop manual recording for the camera (motion or continuous)

- Call up the camera configuration menu
- Configure the display options
- Display the PTZ control menu (if the camera has been configured as a PTZ camera)
- $_{\odot}$ Here you can immediately replay the most recently recorded video
- o Remove a camera from MultiScreen
- Activate PTZ control via joystick
- $_{\rm O}$ Turn the infobar of the specific camera on or off
- $_{\odot}$ Activate the zoom function in the camera window
- Activate anti-aliasing
- Copy the present image into the clipboard
- o Save the present image as a Bitmap (*.bmp) file

7.4.5.1 Start recording

In exceptional cases, recording on each individual camera can be started manually via the camera pop-up context menu. In most cases, though, the timer function is used to activate recording (see also: <u>Timer: Start recording</u> (see <u>set in the start recording</u> (see <u>set in the start recording</u> (set in the set in the se



Attention:

When you first run the program you will be immediately directed to the window for setting up the ring storage as soon as you start the timer (see also: <u>Ring storage assistent</u> (39)).

7.4.5.2 PTZ camera control

64

PTZ (pan-tilt-zoom) systems (for example dome cameras, pan/tilt heads) can be controlled directly from within MULTIEYE.

7.4.5.3 PTZ control via popup menu

Via the camera window context menu you can call up the PTZ control window directly on the MultiScreen.



You can control a camera directly from within this PTZ control window. Depending on the PTZ protocol and the kind of camera attached, various functions are available here.

According to those factors, presets can be defined and accessed.

You can access further PTZ functions (type-dependent) via the arrow symbol



f

or	example:
	Dome Menü
	ESC
	Relais 1 on
	Relais 1 off
	Tour
	Auto Scan
-	

7.4.5.4 PTZ via joystick and/or keyboard

A camera can be controlled, scanned, tilted and zoomed with a joystick. To activate this capability, just click on "PTZ via Joystick" in the camera pop-up menu window.



7.4.5.5 Playback of the most recently recorded video

This function enables you to replay directly on the MultiScreen the video which was most recently recorded for a specific video window (i.e. camera).



The infobar – normally highlighted in blue – is now highlighted in green.

This shows that the displayed image is the last recorded video.

7.4.5.6 Anti-aliasing

When this option is activated, the image displayed is "softer". Because this setting increases server load, you should only set this feature for cameras when it is truly necessary.



8 Configuring MULTIEYE-HYBRID

p

With this button in the toolbar of MultiScreen you gain access to the configuration of the settings for MULTIEYE-HYBRID.



In the area at the left in the menu you can select the individual functions for configuration.

This column is divided into two main configuration groups:

- $_{\odot}$ Standard
- $_{\rm O}$ Advanced

8.1 Global settings

You can set the general program parameters in the menu "Global Settings".



8.1.1 Sound

An audio file can be played for the following events:

- Sound during drag&drop
- Acoustic alarm during camera loss
- Sound when motion is detected
- Sound on an active alarm input

The sound can be selected for motion detection and active alarm input. The audio files must be available on the computer in WAV format (Windows Media compatible).

8.1.2 Regional settings

Language	English	-
Video norm	PAL	

With this function you can select one of the various languages available in MULTIEYE-HYBRID.

You can also select the video norm of the analog video inputs

68

8.1.3 System options: Watchdog and autostart with Windows

System options Watchdog Autostart MULTIEYE with Windows MULTIEYE-HYBRID includes a hardware Watchdog function which can be activated or deactivated here.

The Watchdog reboots the computer system when it no longer responds to program inquiries within a predetermined space of time (see also: Additional connections 28).

Additionally you can also determine if MULTIEYE starts automatically with Windows or not.

8.1.4 MultiScreen otions



8.1.4.1 Small toolbar

Upon activation of the function 'Small Toolbar', the toolbar of MULTIEYE-HYBRID is reduced to a toolbar.

🐻 Tocan	🛃 Cameras	👌 Desktop	🎯 Timer	🐠 Videos	🞧 Connect to	🛃 Configuration	Remote	
50 L	ock				A:0 IP:3 = 3 i	ps 🕨	_ i	5

8.1.4.2 Moving a camera window out of the MultiScreen

When this function is activated, you can move a camera window via Drag&Drop outside of the MultiScreen, for example to place it on a second monitor.

8.1.4.3 Autostart MultiScreen

After activating this option the MultiScreen will automatically be started after the start of the MULTIEYE Services and you will be presented the login screen. When the option "Auto Login" in the User Management is additionally activated the MultiScreen starts directly without requesting a login.

8.1.4.4 Automatic minimizing

If desired, MultiScreen can be configured in such a way that the image will automatically be minimized after a set period of time.

MULTIEYE-HYBRID continues to run in the background, but the MultiScreen desktop is no longer displayed on the monitor.

The application's symbol 💵 is displayed in the Windows System Tray.

By double-clicking on that symbol, you can immediately call the application back into the foreground.

8.1.5 Quick configuration

A click on the arrow displays the most important configuration parameters, including

- the allocation of the cameras to the hard drives,
- reserved memory storage
- 모 Quick configuration

70

- video image size
- type of recording
- sensitivity parameters for the individual cameras

Sounds		MultiS	creen option	IS		1
	Sound during Drag & Drop Acoustic alarm during camera lost	6	Small t	toolbar camera	window out of Mul	tiScreen
	Sound when motion is detected		⊂ Autost Minimize aft	art Mult	iScreen rer 🗸 sec	
Regional se	ettings	Syste	m options	71 [22.22	<u></u>	
3	Language English	đ	Watc	hdog start MU	LTIEYE with Wind	ows
	Quick c	onfiguratio	n			
ID	Camera	ips	Size	Timer	Ringstorage	Codec
B MULTIE	YE MPEG4					
O1	Cam 01	15			😝 D (DYN.)	Direct S
☑ 02	Sanyo Digital	15			🤹 D (DYN.)	Direct S
🗹 03	Samsung	15			💲 D (DYN.)	Direct S
04	Camera 04				C (DYN.)	
	Camera 05				C (DYN.)	
06	Camera 06				C (DYN.)	
	Camera 07				C (DYN.)	
	Camera 08				C (DYN.)	
🗉 IP Came	ras					
✓ 09	V610-1	12	1		💲 D (DYN.)	Direct S
10	V610-2				D (DYN.)	The second s
11	FW1100	5			💲 D (DYN.)	Direct S
12	Camera 12				D. (DYN.)	
13	Camera 13				D (DYN.)	
14	Camera 14				D (DYN.)	
15	Camera 15				D (DYN.)	
16	Camera 16				D. (DYN.)	
	Sounds Sounds Pegional se Source Pegional se Source Pegional se Source Pegional se Source Pogional se Pogional se Source Pogional se Pogional se Pogi	Sounds	Sounds MultiS Image: Sound during Drag & Drop Acoustic alarm during camera lost Image: Sound when motion is detected Image: Sound when motion is detected Image: Sound when motion is detected Image: Sound when motion is detected Image: Sound when motion is detected Image: Sound when motion is detected Image: Sound when motion is detected Image: Sound when motion is detected Image: Sound when motion is detected Image: Sound when motion is detected Image: Sound when motion is detected Image: Sound when motion is detected Image: Sound when motion is detected Image: Sound when motion is detected Image: Sound when motion is detected Image: Sound when motion is detected Image: Sound when motion is detected Image: Sound when motion is detected Image: Sound when motion is detected Image: Sound when motion is detected Image: Sound when motion is detected Image: Sound when motion is detected Image: Sound when motion is detected Image: Sound when motion is detected Image: Sound when motion is detected Image: Sound when motion is detected Image: Sound when motion is detected Image: Sound when motion is detected Image: Sound when motion is detected Image: Sound when motion is detected	Sounds MultiScreen option	Sounds MultiScreen options	Sounds MultiScreen options

By double-clicking onto the symbols you can configure the settings (Size, Timer, Ringstorage and Codec) or you will be guided to the corresponding configuration pages.

© 2007 artec technologies AG

8.2 Image settings

andard		6%a 6
Global Settings		4 7715 7 1791 (1
📕 Image Settings 🔫 🗕		31
Video Settings		1
Motion Detection	Contrast	-21
Timer Settings	Hue	0
Ring Storage	Saturation	U
User Management		0

The image settings

- o brightness
- o contrast
- o hue
- o saturation

for all available analog cameras can be individually set here. Modify the individual values by sliding the lever in the desired direction. The changes made can be observed at any time in the video preview window. Choose the camera to be configured by clicking on the appropriate camera symbol at the top of the image settings window shown above.



Ratate picture

Automatic Gain Control (AGC)

The modifications can be returned to the factory defaults at any time by clicking on this symbol ("defaults").

Clicking on the panel "Rotate camera image" rotates the camera image by 180°. For the use of black-and-white cameras, clicking the panel "Use Black / White Mode" sets the optimal default settings for B/W cameras.

Use black/while mode

Automatic Gain Control (AGC):

The new analog video boards support automatic adjustment to the input video level.

This does not substitute a correct adjustment of an analog video signal (IVss) because disturbances would also be amplified like the wanted video signal!



Attention:

NOT all settings (brightness, contrast, color tone and saturation) for IP network cameras and IP video servers can be made in this menu. Such settings must be changed with the "Tools" menu for IP systems.

8.3 Video settings



All settings of video quality, frame rate and video size are carried out on this page. Choose the camera to be configured by clicking on the appropriate camera symbol at the top of the video settings window. The configuration options for analog and network cameras differ only slightly.

111 A 111	
Video Settings	
Standard	
Global Settings	
Image Settings	17 18 19 20 21 22 23 24 25 26 27 28 29 30 31 32 Video quality Frames per second (ips) Pre-Alarm duration Pre-Alarm duration
Video Settings 🔫	Low Medium Optimal High Remaining recording rate 20 00 min. 00 sec.
Motion Detection	Direct Stream Dynamic frame rate recording
Timer Settings	IP Camera Settings
Ring Storage	Camera URL http://192.168.101.119/cgi-bin/nph-video?tramerate=10
S User Management	Camera
Advanced	Title of camera
	dd.mm.yyyy hh.m.ss
	Text color
	Background color
	Font
	Arial 💌
	Font size
	02.07.2007.12:27:59 Correct 10
	US.UT.2007 12.27.30 Calliera 19
	Image Reload Image
🐉 Apply	
💽 OK 🚺 Cancel	

8.3.1 Video quality and video compression codec

Here you can configure the video quality and the video compression codec.

1	ki a di ua	Octorel	Liste
LOW	meaium	Uptimai	High
1			

Video quality is variable on a sliding scale. According to the image format chosen, storage requirement ranges from 7.5 to 80 Kbytes per image. Using the MJPEG compression a picture size of 30 - 40 KByte per picture is optimal; increasing gives no significant improvement of video quality.

8.3.2 Video compression codec

For recording the compression codec can be set to MJPEG or MPEG4.



M-JPEG

MPEG4

Attention:

Using the MPEG4 codec the recorder hardware - the computer - needs a lot of more power than using MJPEG compression.

You only should switch to MPEG4 for those video cameras you need to see fast movements.

72
8.3.3 Video resolution



If the slide control is moved, a quality-preview window (Preview) opens automatically. Here you can control picture quality and view the image size.



Image size is displayed in bytes. For example 18360 bytes = 17.93 KBytes (IKByte = 1024 Bytes)

When you click on [Click to stop compressed preview]

the preview is concluded.

8.3.4 Frame rates



The frames per second rate can also be set with the slide lever. The total image speed depends on the performance capacity of the computer system, the video card installed and the number of analog and IP cameras connected.

Dynamic frame rate recording:

If this point is checked, the system automatically controls the frame rates of the system.

The frame rate then can not be set manually for the single cameras anymore.

8.3.5 Pre-alarm duration

Pre-Alarm duration

74

00 n	nin.	00	sec	: 31	-265	1	
Pre-	Alar	m d nn	lura sec	tior	1		
			ं	.	1983	10	. ļ
0		A	١tt	en	tion	:	

The console "Pre-Alarm-Duration" serves to determine how many seconds of a video should be stored before event recording begins. The setting ranges from 0 seconds to 15 minutes and can be set in 10-second steps.

This feature is used e.g. for the German UVV-Kassen recording (15 min Pre-alarm- and 15 min after-alarm recording).

This function is only possible in conjunction with event-driven recording (motion recognition or contact alarm).

lag

Use pre-alarm recording only for specifically chosen cameras!

Each pre-alarm recording includes a permanent interim storage of video images and correspondingly leads to an additional load on the system.

8.3.6 PTZ cameras

If the camera has PTZ control functions, these can be configured here.

PTZ Einstellun	gen		
Kamera Profile		😹 Konfigurieren 💿	Click [Configure]
S Camera Cor	🗙		
Manufactu Mo Ty	irer del		
Profile Admin	stration Info		
Camera ID COM Port			
		First the camera profile has	to be loaded.
Video Size			
Transmission	O JPEG	Click:[Profile]	
JPEG Quality			
Specials			
	OK X Cancel		
http://			

5	
Camera Configurator	
Custom Profile X Custom Profile Cancel Cancel Cancel Ceneral Eletric Cancel Cancel Samsung Samsung Samsung Sansung Samsung Sansung Samsung Sansung Samsung Sansung Samsung Sansung Samsung Sony Samsung Videotec Samsung	Double click on the manufacturer of your camera. Select from the drop-down menu your camera type by double clicking onto the corresponding entry. Sometimes the same camera is shown with different protocols. Select the camera with the correct protocol!
Doubleclick to select profile http://	
Camera Configurator Manufacturer Pelco Model D Protocol Type Analog+PTZ Profile Administration Camera ID COM Port Com 1 Com 1 Com 2 Com 3 Com 4 Com 5 Transmission Com 6 Com 7 Com 8 VIEEG Quality	Now you have to select the Camera ID when the camera is connected via RS-485 (RS-485 address). (Implicated is that there is a RS232-to-RS-485 transceiver between the camera and the COM Port). Then you have to choose the COM Port the camera is connected to.
Specials	
DK Cancel	

8.3.7 Integration of network (IP) cameras and IP video servers

In addition to the possibility of incorporating analog video cameras into your MULTIEYE-HYBRID system, you can also integrate IP cameras and IP video servers as well.

One activated IP camera test connection is standard on MULTIEYE-HYBRID recorder kits with video boards.

If you wish to integrate additional IP cameras and IP video servers, you must obtain additional IP licenses (IP-4 License). These always come in four-packs. When you activate an IP camera license, the IP demo license is deactivated.

Licensing of additional IP cameras is described in the installation manuals.

When you start MULTIEYE-HYBRID the first time, you will be prompted to configure an attached IP-camera if one is present.



To configure the IP-camera, please click on the arrow



This signal in the upper left corner indicates, that no ring storage has been applied.

The configuration page for IP video sources is called up:

		×
Video Settings		
Standard		
Image Settings	Video quality Frames per second (ips) Pre-Alarm duration	
Video Settings	Low Medium Optimal High Remaining recording rate 23 00 min, 00 sec.	
Motion Detection	Direct Stream	
Timer Settings	IP Camera Settings	
Ring Storage	Camera URL	
User Management	Camera Title of camera	
Advanced	IP-Camera	
	dd.mm.yyyy hh:nn:ss	
	Text color	
	Background color	
	http://???	
	Arial	
	Camera 26	
	03 07 2007 12:59:45	
	Show live image	
	Heload Image	
😃 Apply		
OK 🖸 Cancel		

Click on the button [Configuration] for the IP camera settings.

Manufactu Mo Ty	xrer vdel ype IP-Cam
Profile Admin	stration Info
Camera ID	
CUM Port Camera URL/IP	
Custom Parameter	
Video Size	
Transmission	MJPEG
Username	
Password	
Video Quality	
Specials	
	🚮 OK 🛛 🗙 Cancel

Custom Profile	X Cancel	
🗄 🗀 4XEM		2
🗄 🗀 ACTI		
🗄 🚞 Arecont Vis	ion	
- 🛃 Arecont	√ision AV1300	
Arecont	√ision AV2100	
Arecont	√ision AV3100	
- 🛃 Arecont	√ision AV3130	
Arecont	√ision AV5100	
🗄 🙆 Artec Techr	iologies AG	
🗄 🙋 Aviosys		
🗄 📁 Axis		
🗄 📁 Bosslan		
E Canon		
	4.52	
+ 👩 Conceptror		
🗄 👩 Connec re	2	
E D-LINK		
E Digitue		
		19
	<i>2</i> 1	

By clicking on [Profile] you will access the list of supported IP systems (IP network cameras and IP video servers).

With a double-click first choose the manufacturer

Custom Profile	X Cancel
🕀 🗀 4XEM	
🗄 🗀 ACTI	
🖻 🚞 Arecont Vis	on
- 🛃 Arecont	/ision AV1300
🚽 🦪 Arecont	/ision AV2100
🚽 🦪 Arecont	/ision AV3100
— 🔏 Arecont	Vision AV3130
🔄 🖾 🔏 Arecont	/ision AV5100
🗄 🗀 Artec Techr	ologies AG
🗄 🙆 Aviosys	
🗄 🗀 Axis	
🕀 🗀 Bosslan	
🕀 🗀 Canon	
🗄 🙆 Cellvision	
🕀 🔁 Conceptror	ic
🕀 🔁 Connec Te	2
E Convision	
🕀 🗀 D-Link	
🕀 🙆 DigiLan	
🕀 🗀 Digitus	
🕀 🗀 Elmo	·

then the product type of camera you use.

۵		×
Custom Profile	X Cancel	
🕀 🗀 4XEM		-
🗄 🗀 ACTI		
🗄 🗀 Arecont Vis	ion	
🖻 🙆 Artec Techr	iologies AG	
- 🛃 MULTIE'	r'E DesktopLogger	
MULTIE'	YE MVE1000	
- 🛃 MULTIE'	YE MVE2000	
MULTIE'	YE MVE4000 (CBR)	
MULTIE'	YE MVE4000	
- 🙈 MULTIE'	YE Video Server	
- 🛃 Multieye	Hybrid DesktopLogger	
🗌 🕰 OEM De	sktopLogger	
- 🕰 OEM MV	E1000	
OEM MV	E2000	
OEM MV	'E4000 (CBR)	
CEM MV	E4000	
E O Aviosys		
🕀 🙆 Axis		
🕀 🙆 Bosslan		
🕀 🙆 Canon		
🕀 🙆 Cellvision		
Doubleclick to select	profile	

A special feature is the artec profile "MULTIEYE Video Server".

Cameras from other MULTIEYE systems can be integrated into the MultiScreen as an IP camera. With this IP camera profile you can add analog and digital IP cameras of other MULTIEYE recorders into your system (cascading of MULTIEYE systems).

With a click on [Custom Profile] you can configure not listed systems, when you know the parameters for this kind of system.

Mar	nufacturer Lu Model LE Type IP-	menera 375C Cam	
CO Profile A	<u>8</u> dministratio	on Info	
Came	ra ID		1
COM Camera UI	RL/IP	-	
Video	Size		
Transmi	ission MJPE	G	•
User	name		
Pas	sword		
Video Q	uality		
Spi	ecials		



The next step is to configure the IP address of the network camera or video server.

You can enter the address of the desired camera in the space "Camera URL/IP" manually or by clicking on the button



you can also search the network for available cameras.

With a click onto



you get a list of the already used IP cameras, you can directly select with a double click.

To search the LAN network automatically for $\ensuremath{\mathsf{IP}}$ devices click on

Search.

By pressing the 🗷 you can terminate the search.

By using HTTP filters you can restrict the search.

There may be problems finding IP devices due to active firewalls inside your network. Therefore it may happen a camera will not be found if this is located behind a firewall.

2 • 1	68 • 101 • **	* 80	🕨 Search 🗙
Scar	Process	HTTP Fil	lter
P	Response	State	Possible Manufact. 🔺
0 106	Boa/0.94.13 V	200	
3 107	home.htm	200	Pixord
<u>í 109</u>	<u>Boa/0.92o_AXI</u>	<u>200</u>	<u>Axis</u>
a 112	home.htm	200	Pixord
🥭 115	General User Er	401	
🥏 117	thttpd/2.25b 29	200	
🛋 118	RapidLogic/1.1	401	Samsung
0 119	Boa/0.94.14rc1	200	
a 121	FlexWATCH-We	302	Flexwatch
2 124	SIEMENS_We	200	
2 128	jason-httpd inde	200	
🛋 130	Live_view_/	200	Axis
2 131	Boa/0.94.13 50	500	
🛋 132	Live_view_/	200	Axis
a 133	Live_view_/	200	Axis
a 134	Live_view_/	200	Axis 👻

A list of IP-devices found in the network will be displayed Double-click on the device you are using.

0	Manufacturer Lumen Model LE375 Type IP-Can	era C n
C) Profile	S. Administration	A Info
С	amera ID	
C	COM Port	
Camer	a URL/IP http://192	.:168.101.109 🗾 🥑 🥑
Vi	deo Size	
Trai	nsmission MJPEG	<u> </u>
ι	Jsername	
1	Password	
Vide	eo Quality	
	Specials	

Depending on the type of camera you can configure in the next menu video size, transmission, username, password and video quality.

The MJPEG mode should be used if the camera supports it.

If the system permits, the home page of the camera can be called up via Administration to configure the camera.

Again, if the system permits, video size, JPEG quality and further system-wide settings can be made in this menu.

If these settings can NOT be modified here, you will have to set them via the "Tools" of the IP system manufacturer.

If necessary, enter the user's name and password for access to the camera.



Of course, the predefined common camera profiles provided here do not cover the entire range of IP cameras and IP video servers available. Instead, the list only provides a selection of the most commonly available camera types. If you would like to use a camera different from the common ones listed, it is necessary to manually enter that camera's specific string on the configuration line. This string can either be found in the user's manual of the IP camera involved, or can be obtained from the camera manufacturer's technical support.

If, at a later date, you would like to change the settings for the IP-camera(s), you can do this in the standard way via the button "Settings" (1) or via a click with the right mouse key on the camera image.



Attention:

Quality: Series of tests have shown that a JPEG quality level greater than 75 % brings no noticeable improvement in image quality. It does, however, raise the demands on the processor very sharply, with the result that the capacity limit is quickly reached, especially in the case of less powerful computers.

8.3.8 Camera text

For each camera, supplementary text information (title of camera, max. 20 characters) can be entered. In addition, text color, background color, font size, font, and date format can be freely selected. The texts can be positioned as desired - either by choosing one of the four defaults



or by moving the text position window by dragging it with the mouse while holding down the left mouse key.

8.4 Motion detection



MULTIEYE-HYBRID's motion detection is permanently activated during recording, i.e., provides continuous recording.

Motion data / informations are always stored with the recording. This enables a fast analysis of the images with the MultiPlayer. (see also: <u>Analysis with the MULTIEYE-HYBRID-MultiPlayer</u> [11])



8.4.1 Masking

Those areas should be masked in which motion detection should NOT be observed. By masking the camera image, you can thus exclude areas from the motion detection surface which contain, for example, constantly moving trees. The video image is divided into 2304 individual zones, so you can define the relevant areas very precisely.





82

Defining those areas in which motion shall NOT be registered is done simply with the aid of the mouse. In the selection field beneath the camera image, you simply click on the symbol X+ or, for blocks, \Box + Afterward, the individual masks can be drawn with the mouse.

Masked areas can be reduced with X- or \Box -



Tip:

If motion in very small areas is to be detected, it is easiest to mask these first and then invert them; i.e., the masked area then becomes the area monitored.

Invert	Toggle between masked and monitored areas and vice versa
J Delete	Delete a mask
Color of mask	Setting of the mask color

8.4.2 Setting motion detection sensitivity

Motion detection preview	Sensitivity High	Medium	Low	
	< <u>1</u>		>	2,44%
NE PAS	1			0,60%
	Conly show la	st triggered picture		

The sensitivity of motion detection can be set with the slide lever. The extent of motion change is displayed by the small arrows above and below the slide lever. In addition, motion image changes are accentuated in red in the live motion detection control window.

8.4.3 Privat zones



New in MULTIEYE is the feature to define private zones. These masked areas will be blanked in the MultiScreen and in the recorded videos. With this features it is possible view to public areas without disturbing the privacy of people because private areas can be hidden.

8.5 Programming recording: The timer menu



With the timer, you can set the start and stop times for continuous or motion-detection recording on individual cameras. The graphic display of such switching times and the configuration via Drag&Drop, make it very easy to program recording.



Attention:

In the basic setting (default factory setting) of the timer, motion detection is activated (yellow switch times) for all cameras at all times.



Important:

An alarm recording always has priority over recordings regulated by the timer.

84



Days of the week are displayed in this application vertically with a time bar of 24 hours. Within a recording day of 24 hours, you can freely determine when continuous and when motion-dependent recording is to occur.

The types of the individual recording times are displayed in color in the application:

- Yellow \rightarrow Recording only in case of motion in the image
- Red
 → Continuous recording

Grey \rightarrow no recording OR only contact alarm-activated recording

In the field "Holidays", a list of days can be entered which have divergent recording times. Here a starting date can be chosen which is added by a click on "Add" or "New". When, in addition, an end date is given, a series of days can then be entered. Accordingly, such exceptional days (e.g., Christmas, Easter Sunday, etc.) can be included and scheduled into the timer from the very beginning.

8.5.1 Deleting times

When the program is started for the first time, recording is set for motion detection (yellow) on all configured cameras. If you want to set a different recording time you must first delete the programming for that specific day. This is done by clicking one the symbol of the day involved (e.g. "Tue" for Tuesday) and then dragging & dropping it into the trash. The entire time bar for that day is now backlighted in gray and can be re-configured.





Attention:

Individual switching times can be deposited into the trash by using Drag & Drop while holding down the "CTRL" key.

86



8.5.2 Programming recording times

Move the mouse cursor onto the field "Motion" or "Normal" (i.e. continuous).

Left-click the field with the mouse and drag the cursor into the desired day of the week while holding the mouse key down. With the mouse, you can now relocate, extend or shorten the length of time of recording. With a double-click on a switching time, this will be expanded to the edge of the neighboring switching time. In the area at the top, the start, end and total amount of time are displayed and can be adjusted here in three minute steps. You can program a maximum of 24 switching times per day.



Attention:

To avoid blank spaces between two recording / switching times, the timer fields have been "magnetized", i.e., neighboring switching times mutually attract one another and close the gaps between themselves.

8.5.3 Copying times

88



Go with the mouse cursor to the day's abbreviation (e.g. Thu) located at the top of the daily column.

Click on the field of the day to be copied and with Drag&Drop (left mouse key held down) drag the cursor onto another day's abbreviation.

8.5.4 Copying time settings to other cameras



Individual recording time settings can be transferred (copied) to every available camera. You only need to select the specific cameras and check mark each field under "Copy time settings to". With a click on the button [Copy] the time settings of the original camera are then copied to the additional cameras.

8.5.5 Timer options

- I in	ner Uptions
Г	Always start recording (Timer) on program startup
7	Alarm recording only if Timer is active

Always start recording (Timer)
on program start upWith these timer options MULTIEYE's recording can be finetuned.In many
times it is necessary starting the recording with the start of the computer
(e.g. very important on stand alone systems),Alarm recording only if
Timer is activeThe MULTIEYE system can be configured in that way, that alarm recording
starts with the programm and Timer recording is not yet started.

8.6 Ring storage: Configuring hard disks for recording



As already described in Chapter Hardware requirements – hard drives 17, at least two hard drives should always be used in a MULTIEYE-HYBRID system. The first drive should be reserved for the operating system, and the video data should be stored on the other hard drive(s).

8.6.1 Manually or dynamically memory management

In "Ring Storage Management", you assign the storage hard drive(s) to the individual cameras and define individual storage capacity for each camera.

The hard disk memory can be managed dynamically or not dynamically. Using a non-dynamic hard disk management the administrator assigns to every camera a dedicated amount of memory on the hard disks. Using the dynamic hard disk management the MULTIEYE system manages automatically the hard disks for the cameras.



Important:

Until storage has been assigned to a camera its videos cannot be recorded!

8.6.2 Storage systems

Basically speaking, only hard drives which are built into the system should be used for storage. These drives can be either IDE or SCSI drives.

In an IDE system, a maximum of two hard drives can be attached in addition to the operating system drive and a CD/DVD-ROM drive.

SCSI hard drive systems have the advantage that up to 15 hard drives can be attached in them. However, such hard drives are considerably more expensive than IDE drives.

RAID systems are also appropriate as storage systems. They have the advantage that – dependent on the RAID level – faster writing speeds and/or greater data security (redundancy) can be attained.

NAS storage is appropriate for backups. At the present time, they cannot be recommended as primary storage media because – dependent upon the manufacturer of the individual NAS system – problems with indexing the videos can occur. They are ideal as backup media, though, because they can be incorporated into a network with very little effort.

8.6.3 Initial setup: The ring storage assistent

When timer recording is activated for the first time, the dialog window "Ring Storage Assistant" appears.

Ring Storage Assistant

C:\[] D:\[Volume] 34952.65 MB 92622.74 MB		
Use ⊗ All Cameras ○ Only connected Cameras	IP-Cameras	Ringstorage Management
	1	

First you have to determine the management of the hard disks. Best solution is always:

- One hard drive for the operating system and programs
- One hard drive for evaluated videos and data
- · All other hard drives for video recording

With MULTIEYE it is possible to lock drives / partitions so that they will not be used as memory for recording. With a right click onto the drive you get the context menu and you can lock or unlock this drive.

Ring Storage Assistant

Please select	a drive below for auto D:\ [Volume]	matic setup	
34952.65 N			Ring stars of a management
 All Camer Only con 	ras nected Cameras	Use IP-Cameras	Dynamic
Autar	natic configuration	Manual configuration	

The drive is marked then as locked.

Ring Storage Assistant

C\[] D:\[Volume]		
14352.55 ME 92622.74_MB Use ⊙ All Cameras ⊙ Only connected Cameras	IP-Cameras Use IP-Cameras	Ringstorage Management
A summer and a sector	Manual marking and	

Then choose with a click the hard drive volume / partition on which the video files are to be stored.



Important:

If you configure ring storage only for the available cameras, you will need to re-configure it if any new cameras are added later on.

Without configuring ring storage to include new cameras, they cannot be used for recording.



Use IP Cameras: If you do not use IP cameras or video servers you should deactivate the feature because else hard disk space would be reserved for IP devices.

Using the dynamic ring storage management you do not have to take care of the volume sizes for each camera. MULTIEYE automatically manages the hard disk memory for recording.

Now click on

🕙 Autamatic canfiguration

The storage capacity of the drive will now be equally split up for all cameras.

If you want to configure the ring storage individually for each camera, click on the button

🕘 Manual configuration 🚽

You will then be directed to the next menu window.



8.6.4 Manuel configuration / installing additional cameras

As shown in the display, ring storage settings can be individually adapted. Click on a camera and Drag&Drop it onto the hard drive. If there are more than one drives in the system, you can also divide the storage load among several drives and thus increase

© 2007 artec technologies AG

8.6.5 Resizing or decreasing ring storage



A change in allocated ring storage will be displayed in MBytes in "Camera ring storage". The storage allocation of the present partition or hard drive will be displayed in "partition data". The fields "Reserver" and "Totally Reserved" are not necessary when using Dynamic Ring Storage Management and will be therefore not displayed.

If the ring storage of a camera is reduced below the level of the storage space already used, the old videos of that specific camera will be erased once the new setting is saved.

In case of such changes, an exclamation mark will appear in the window to call attention to the erasure.

📖 [19] Cam	era 19	
Currently used	0,31 GB	Δ
Reserved	0,00 GB	A
Totally reserved	20,09 GB	

8.6.6 Deleting videos

Delete	Videos after
	💌 Days
E Rei	move also locked videos

Here you can configure the time after which recorded videos have to be deleted automatically even if the complete ring storage is not completely used. The configuration can be separately set for the locked videos (IO alarm videos).

This setting is sometimes precondition inside many companies and also in public areas to allow video surveillance and to fulfill protection of privacy.



Important:

Only those users having the rights in the User Management to change the ring storage can set or change the time for deleting video.

8.6.7 Deleting ring storage

Procedure for deleting a camera's ring storage:

- In the toolbar of the MultiScreen, end any recording activity
- Drag & drop the camera window from the MultiScreen into the trash
- Select "ring storage" in the configuration menu
- Drag & drop the specific camera symbol



into the trash

• Confirm the deletion procedure

92

8.6.8 Dynamic ring storage management

The previous chapters described how ring storage can be manually configured.

A further alternative is to let the system dynamically manage ring storage.

If this function is activated, MULTIEYE-HYBRID will independently manage the available hard drive storage in accordance with the requirements of the individual cameras. This function is especially helpful in the beginning phases of configuring a system when you have had little experience in determining how much storage the individual cameras effectively need.

Of course, the cameras must have already been assigned to the hard drives.

Important:

You should not use this function if you have only one hard drive and/or partition in your system, because MULTIEYE-HYBRID might reserve too much storage for its needs which, for example, the operating system needs for its virtual memory page file.

8.7 User management



With "User Management", user groups can be easily created and assigned specific group rights. Within these groups, individual users are identified who then automatically have the benefit of those specific group rights.

The advantage of this procedure is that you do not have to spend a lot of time considering which rights new individual users must be assigned. You need only give consideration to assigning the necessary rights to the individual user groups when those groups are first defined.

If users change their areas of activity, they can easily be transferred via Drag&Drop into other user groups and automatically receive the rights of those new groups.

You can, for example, define one group as administrators who can make changes in the system; another group of "normal" users who work with the system on a daily basis; and a third group of users who are only permitted to view a certain selection of live cameras but have no access to recorded videos.

You create a new group with the button "New group". The appropriate rights are then assigned to this new group, for example, by entering a check mark \square for the access rights to individual cameras.

Users can be deleted easily by simply dragging and dropping them into the trash.

The following graphic illustrates some of the rights of the user group "User":



A number of users can be assigned to each user group of course.

Users	
Administrators Admin Admin Tankstelle Series Alarking Frika Hanking Rita Schürbur Werkstatt Werkstatt Heinrich Moling Herbert Reiniger Joerg Thoelke Justus Fribau Peter Schubert	
Login Name Rita Schürbu	Die Cabillar
	nita schulbu
Password	
Confirm	
📕 Save	•



Important: Every user must be assigned a password!

General tip:

If you are responsible for the system or for setting it up, you should create a "Superuser" account with full administrator rights for yourself.

You should, however make changes to the system only through this superuser account. The advantage is that if you made something wrong, you can still change it by logging in as the 'normal' Administrator.

To implement changes to the system, you should always log in with the user account.





Attention:

By clicking the key combination Ctrl-L from within MultiScreen, you can log in with other user rights (e.g. as Administrator).

8.7.1 Auto-Login



Auto Login:

With this function, a user will automatically be logged into MultiScreen during startup of the system.

By default, "localhost" is entered as the server, i.e. MultiScreen automatically logs into the MULTIEYE-HYBRID kernel of the local computer at the next start-up.

Do not forget to select a user and, if appropriate, enter the password.

For a complete system re-start, for example after power outage Automatically login 37.

8.7.2 Two users login

A new interesting feature is the point "Two users login required (four eyes principle)": Activating this feature, always two users have to login one after another to get access to the MultiScreen.

8.8 Advanced settings

In the sub-menu "Advanced" of the configuration menu you will find the settings for additional components and system messages.

- $_{\rm O}$ Video / Webserver
- $_{\rm O}$ Audio

96

- $_{\rm O}$ Video display on the live monitor
- Alarm messages
- o Event reports
- Status reports
- $_{\odot}$ I/O alarm boards

The number of settings is depending on the additionally installed hardware and software (e.g. DataLog).

8.8.1 Video / Webserver

Remote access is a very important feature within MULTIEYE. The communication is done through the network with standard IP address and dedicated network ports.

Here the following TCP/IP ports for can be set:

- Remote Access
- Web server
- Video server

The web server and video server services can be activated. Due to system security both services are disabled during software installation.

andard	Remote access via LiveVier	wer. MultiPlayer or M	ULTIEYE Bem	ote Control	
Global Settings	TCP/IP Port 2004	, and the second second			
Image Settings	Web access via standard W	/eb Browser			
Video Settings	TCP/IP Port 2840	Start	Stop	Autostart Web s	erver
Motion Detection	Video server provides live in	nages for the Web a	ccess		
Timer Settings	TCP/IP Port 2841	Start	Stop	Autostart Video	server
	Camera			Login	Password
Ring Storage	💌 [01] Camera 13			admin	1
9	🙁 [02] Lange Strasse			admin	2
User Management	🔀 [03] Camera 15			admin	3
Ivanced	D4] MULTIEYE			admin	4
	🛒 🛛 🔲 🖾			admin	5
🚽 Video / Webserver 🔫	K [Uo] Camera 06			admin	6
	[07] Camera 07			admin	7
Alarm Messages	[X] [08] Camera 08			admin	8
IO Alarm Paard	[X] [U9] Camera 09			admin	8
	X [10] Lamera 10			admin	1U
h Datal og	[X] [11] Camera 11			admin	11
- Databog	(X) [12] Lamera 12			admin	12
Backup	X [13] Lamera 13			admin	13.
	(X) [14] Lamera 14			admin	14
	IN [15] Lamera 15			aamin	15
	□ [17] Camera 16			dunin	10
	I [17] Camera 17			admin	18
	[10] Lamera 10			admin	10
	[10] Camera 20			admin	20
	[20] Camera 21			admin	21
	[22] Camera 22			admin	22
	[23] Camera 23			admin	23
	[124] Camera 24			admin	24
	1 1251 Camera 25			admin	25
😃 Apply					

8.8.1.1 Remote control

The access to a MULTIEYE system with the LiveViewer, MultiPlayer or MULTIEYE Remote Control communicates through TCP/IP port 2004. If this port is already in use you can configure here a different one.

8.8.1.2 Webserver

For a remote access via an internet browser the web server has to be started. This can be done manually or automatically. The MULTIEYE standard TCP/IP port is 2840. If this port is used by another service it can be changed here. If video pictures should be displayed the video server has to be started too!

Due to system security the web server is deactivated in the basic settings and has to be started manually or automatically.

8.8.1.3 Videoserver

The video server provides live pictures and recorded videos in the JPEG or MJPEG format for displaying in the integrated or own web server. The video server is also needed when cascading MULTIEYE systems. Each camera can be integrated into another MULTIEYE system as a network camera. MULTIEYE acts like a web and video server, making analog video cameras available through the network.

Due to system security the video server is deactivated in the basic settings and has to be started manually or automatically.

Before starting the video server all the camera to be used with remote access have to be checked. For each camera different logins (user name, password) can be configured (these login names and passwords do not correlate with those defined in the User Management)

8.8.2 Configuration audio : Assigning audio channels to cameras



Under "Audio Settings" you can assign the available audio sources to the existing video sources. Each audio channel can be assigned to one or more video channels. The audio data will then be synchronized with the video data and stored in a Windows Media compatible AVI file.



Attention:

If you wish to record audio, it is advisable to set up continuous recording. This is because no videos and, correspondingly, no audio recordings are made during motion pauses!

Audio Settings				
☆ Standard	Camera	Audio Channel	Audio Channels	Gain
Clobal Settings	🛃 (01) Camera 01	Channel 01	Channel 01	10
Giobar Settings	🛃 [02] Camera 02		🛛 🧶 Channel 02	00
Image Settings	🛋 [03] Camera 03	Channel 03	🕘 Channel 03	04
	🕰 [04] Camera 04		🕲 Channel 04	00
Video Settings	6 [05] Camera 05			
K Motion Detection	(06) Camera 06 (d) (07) Camera 07 (d) (08) Camera 08			
Primer Settings	🔏 [09] Camera 09			
Hing Storage			Input sensitivity	
User Management				J
Advanced			1 - 1 - 1 - 1 - 1 - 1 - 1 - 1	(1, 1) = (1, 1) = (1, 1) = (1, 1)
Video / Webserver			-Trash can-	
🖉 Audio Settings 🔫			R.	
🕄 🗋 Video Output				
Alarm Messages			Master volume	
💏 IO Alarm Board				2
😃 Apply				
🚮 OK 🔣 Cancel				

Via Drag&Drop an audio channel can be assigned to one or more video channels.

To do this, just click on the audio channel and Drag & Drop it to the video channel. This assignment can be easily reversed by simply using Drag & Drop to place the audio channel (displayed next to the video channel) in the trash. The playback volume can be set for each audio input with the Input Sensitivity slider.

The playback volume for all audio channels in MultiScreen can be set with the Master Volume slider.

Audio quality can also be controlled. Simply click in the MultiScreen onto the speaker icon is of the related camera.

The audio input level is set for 1100 mVss by default, but can also be set at other levels:

Туре	Max. level	Input sensitivity level
Dynamisc mike	10 mV	11
Condeser mike	40 mV	9
Line I	300 mV	6
Line 2	1100 mV	4

Since a phantom power supply of 2 V is available, condenser microphones can also be attached to the audio input.



Hint:

The best audio results are obtained with condenser microphones combined with an external preamplifier with integrated phantom power.

8.8.3 Configuration video output for live monitor



With the option "Video output", connected and activated analog cameras can be displayed on an analog video monitor, such as for:

- I. Camera switchover with adjustable time intervals (per time)
- 2. Camera switchover in case of events (on Motion / on contact Alarm)
- 3. Camera switchover via mouse click on the MultiScreen





Hint:

Video images from IP cameras and/or IP video servers cannot be displayed on the analog monitor interfaces.

8.8.4 Configuration alarm messages



MULTIEYE-HYBRID provides an extensive integrated mailer program with which alarm and/or recorder status messages – including image attachments – can be dispatched by Email, SMS, ICQ, Windows NetSend or via "external programs".

Just like an alarm system, the status report mailer can dispatch periodical status reports.

			×
Alarm Me	ssages		
🌣 Standard		Report events on	-
Global S	ettings	IO Alarm Board Contact alarm	
Image Se	ettinas	Image: Second Se	
	otango	[30] Küche	
Video Se	ettings	Send only during active timer	
Motion D	Detection	Events	
Timer Se	ettings	Status Report	
🕘 Ring Sto	orage	Every Knone> at 00:00:00	
Ser Mai	nagement	Send log files as attachment	
Advanced		Alam Mailer Options	
Video / \	Webserver	Via e-mail E-Mail [ICQ Net Send External Program	1
🧑 Alarm Me	essages 🔫	Via Win2K/XP NetSend SMTP Server Z5	
10 Alarm	Board	Username Username	
📲 🖕 DataLog	1	Sender	
Backup		Usemane	
		Password POP login before SMTP SMTP server needs authentication Alam image attachment	
		I Minutes I Customize Text	
		Error Reports	
	1		
	Apply		
🕜 ОК	🛂 Cancel		



Alarm and status messages

8.8.4.1

10 Alarm board	Contact alarm
🖃 👜 [01] ADAM	
🗖 Input 01	
🗖 Input 02	
- 📃 Input 03	
🗖 Input 04	
🖸 Input 05	
📄 🔤 🖂 Input 06	
🔲 Input 07	
🗌 👘 🗔 Input 08	

Alarm messages make it possible for the user of MULTIEYE-HYBRID to be informed in cases of contact alarms, event-activated recordings, video loss of one or more cameras and/or activation / deactivation of the timer (recording).

Contact alarm:

The inputs have to be checked which shall trigger an alarm message.

The inputs of an alarm board and of an IO Server are equally served.

V [01] Camera 01	
1021 Camera 02	
[U3] Camera U3	-
[04] Camera 04	-
[05] Camera 05	
[06] Camera 06	
[07] Camera 07	
[08] Camera 08	
[09] CV610	
[10] Camera 10	~

Camera loss:

When one of the checked cameras fails, a message will be sent.

🗹 [01] Camera 01	~
🗹 [02] Camera 02	
[03] Camera 03	
[04] Camera 04	
[05] Camera 05	
[06] Camera 06	-
[07] Camera 07	
[08] Camera 08	
🔲 jogi CV610	
[10] Camera 10	Y

Motion detection:

If a motion is detected at one of the marked cameras a message will bet sent.

Send only during active timer

As a special feature it can be configured that sending a motion detection driven alarm message can also be activated if the timer is deactivated.

Timer On/Off DataLogging Signal Words	Event:
 Report Program Start 	While an checked event of
	Timer On/Off
	 DataLog Signal Word
	 Report Program Start
	an alarm message will be sent.

The alarm and status messages will be sent to the configured recipients.

8.8.4.2 Configuring status reports

Here you see the option to have system status reports sent to yourself via Email in self-defined intervals. If the option "Send Log Files as Attachment" is activated, you receive the MULTIEYE log files as an attachment to the report itself. These files can be viewed with standard text editors. All relevant system characteristics are documented in such reports. An automatic remote and operational analysis is available with this function.

Status Report Send Status re	port			
Every	Monday	-	at 08:00:00 ÷	
	Send log files as attachment			

Example of a dispatched report:

Ursprüngliche M /on: <u>hybridt@@art</u> Gesendet: Montag, in: contro <u>@video-n</u>	Vachricht <u>e.de</u> 12. Janu etworkin	t uar 2004 11:3- I <u>g.com</u>	4					
	FPS	tatus Repor	t	RingStorage	lized	State	Network	Motio
101101 Camera	05	Record		E 5000 MB	4997 MB	99%	-	
1021 02 Camera	06	@ Record	44.5	⇐ E 5000 MB	4999 MB	99%	-	
103] 03 Camera	00	Record	-	🗢 E 5000 MB	-	0%	-	
[04] 04 Camera	06	B Record	-	🗢 E 100000 MB	99989 MB	99%	-	
(05) 05 Climeta		Ø None				010	22	_
(DE) 06 Camera	00	Ø Nore		C 15000 HI		104		
1071 107 Carryena		Ø Norie		C E 5000 MB		03.	-	
(10) 03 Carryina		Ø Norm		🗢 E 5000 MB		102	17	
209503.Cimena		Ø Nort		Sec. 5000 Mil		921	20 h =	
TIOTIC Camera		Ø Nore		State 5000148.		1011		
[11] 11 Camera	00	@ None		C E 5000 MB		01	- 1	
112] 12 Canetia		Ø Nore		🗢 E 5000 MB		02		
[13] 10 Camero		Ø Nore		🗢 E 5000 MB		10 E		
114/14 Cameta	00	0		🗢 E 5000 MB		(Pt		6
[15] 15 Camera		Ø None		🗢 E 5000 MB		105		
116 16 Carona		Ø Norie		🗢 E 5000 MD		0.0		1
[17] 17 Camera	00	Record	75	See E 5000 MB	4992 MB	99%	100	
🗧 [18] 18 Camera	00	Record	-	🗢 E 5000 MB	4995 MB	99%	4	
E [19] 19 Camera	00	Record	-	S000 MB	4998 MB	99%	1.1	1
[20] 20 Camera	00	Record		🗢 E 5000 MB	-	00:		

8.8.4.3 Alarm mailer options

In this menu you can choose how messages are to be dispatched. It is possible to choose one, several, or all variations.

Via e-mail	E-Mail ICQ Net Send Externa	al Program	
via Win2K/XP NetSend	POP Server pop.domain.de	110	
🗾 🥅 via external program	SMTP Server smtp.domain.de	25	
7 Auto dial in	Username user@domain.de		
Auto ularin Dravidar	Password ********		
Visername user Password ★★★★★★★★★	Sender MULTIEYE-HYBR	ID 💿	
	Recipient user@watcher.com	user@watcher.com	
	I POP login befo I SMTP server n I Alarm image att	/e SMTP eeds authentication achment	
Minutes			

8.8.4.4 Automatic dial-in

If a broadband connection is to be opened for a dial-in connection, this can be selected here. Enter the name of the pre-set connection (see "Network Connections" in the Windows Control Panel), the user's name and the password here.

If the square "Hang up Connection" is activated, the dial-up connection will automatically be disconnected after the alarm report has been completely transferred.



Important:

A dial-up connection cannot automatically be ended by MULTIEYE-HYBRID if that connection was activated by another application prior to the message dispatch.

8.8.4.5 Delay between messages

Here you can set the intervals at which alarm messages shall be dispatched.



Hinweis:

This value should not be set too low or else the same event might result in several alarm messages being dispatched.

8.8.4.6 Notification via email



For the dispatch of messages via email, the necessary information must be entered here.

Some email providers also require that the pop server address be entered (pop login before SMTP: for example web.de).

Several email addresses may be entered for a recipient. These addresses must be separated by semicolons ;

8.8.4.7 Notification via ICQ



For the dispatch of messages via ICQ, the dispatcher's and recipient's information must be entered here.

8.8.4.8 Notification via Windows NetSend

E-Mail ICQ	Net Send	External Program	
Recipient	big_brother		
	🔂 Tes	st 🛛 🔂 🗔 Cu:	stomize Text

By entering the register for "NetSend", you can configure MULTIEYE-HYBRID so that the MULTIEYE-HYBRID recorder (server) dispatches text messages to a client PC.

For that to function it is essential that the Windows operating system's NetSend service (Messenger) is activated and set for "automatic" start in the operating systems of both the MULTIEYE-HYBRID recorder and the client PC.

You can check out the configuration of Windows NetSend in the "Services" menu of your operating system. NetSend must be started on both computers.

Windows XP	Windows 2000
Start	Start
Scontrol panel	♥ Settings
Administrative Tools	🖏 Control panel
♥ Services	Administrative Tools
	Scomputer administration
	Services

104

p ③ I ② → ■ II ■→ Services (Local) senger				
Services (Local)				
Services (Local) senger				
senger				
	Name /	Description	Status	Startup Typ
the service art the service ription: smits net send and Alerter service ages between clients and servers. service is not related to Windows	HTTP SSL Human Interface Device Access IMAPI CD-Burning COM Service Indexing Service IPSEC Services Sulogical Disk Manager Logical Disk Manager Aministrative	This service implements the secure hypertext transfer protocol Enables generic input access to Human Interface Devices (HID Manages CD recording using Image Mastering Applications Pro Indexes contents and properties of files on local and remote c Manages IP security policy and starts the ISAKMP/Oakley (IKE Detects and monitors new hard disk drives and sends disk volu Configures hard disk drives and volumes. The service only run	Started Started	Manual Disabled Manual Manual Automatic Automatic Manual
renger. If this service is stopped, er messages will not be transmitted. s service is disabled, any services explicitly depend on it will fail to	Messenger MS Software Shadow Copy Provider Net Logon NetWeeting Remote Desktop Sharing Network Connections Network DDE	Transmits net send and Alerter service messages between clie Manages software-based volume shadow copies taken by the Supports pass-through authentication of account logon events Enables an authorized user to access this computer remotely b Manages objects in the Network and Dial-Up Connections folde Provides network transport and security for Dynamic Data Exc	Started Started	Automatic Manual Manual Manual Disabled
rip sm aq ser er s : er	vition: its net send and Alerter service ges between clients and servers, rvice is not related to Windows iger. If this service is stopped, messages will not be transmitted. service is disabled, any services splicitly depend on it will fail to ided Standard	Storie is and and Alerter services ges between clients and services rycice is not related to Windows nger. If this service is disabled, any services splicitly depend on it will fail to anded \bigwedge Standard /	A standard A policitations A poli	a def Address Manages CD recording using Image Mastering Applications Pro vition: Indexes contents and properties of files on local and remote c uits net send and Alerter service Indexes contents and properties of files on local and remote c ges between clients and servers, rvice is not related to Windows Images ID security policy and starts the ISAKMP/Oakley (IKE Started messages will not be transmitted, service is disabled, any services glicitly depend on it will fail to Masages TP security policy and starts the reservice messages between client. Started Messages will not be transmitted, service is disabled, any services glicitly depend on it will fail to Masages oftware-based volume shadow copies taken by the Started Messages will not be transmitted, service is disabled, any services glicitly depend on it will fail to Messages oftware-based volume shadow copies taken by the Started Messages oftware-based volume shadow copies taken by the Supports pass-through authentication of account logon events Supports pass-through authentication of account logon events Started NetWoork DDE Provides network transport and security for Dynamic Data Exc Started Meade / Standard / Started Started

Unfortunately, the NetSend service is deactivated when the Windows XP Service Pack 2 is installed.

Messages can be sent by the command "NetSend", but this permits the use of computer names only; it is not possible to dispatch a message to the IP address of the client system.

If you have no server in your network for resolving unqualified DNS names (DNS server) you can define and then utilize a DSN name yourself by entering it into the "hosts" file (see <u>The hosts file</u> [177]).

To test the connection, open the DOS command windo	Τо	test the conr	nection, open	the DOS	command	windov
--	----	---------------	---------------	---------	---------	--------

Windows XP	Windows 2000
Start	Start
& Programs	& Programs
& Accessories	& Accessories
& Command Prompt	& Command Prompt

You can call up the DOS command window even faster by using

"Start → Run → CMD 🖉"

You dispatch messages to that client computer with the command "NetSend [name of client computer]] news".



The following message should then appear on the client computer:



If this functions properly here, then it will also function correctly with MULTIEYE-HYBRID (with entry of the client computer's name).

A message sent from MULTIEYE-HYBRID in a case of motion detection could look like this on the client computer.



The Windows NetSend service is based on the NetBIOS interface which uses the TCP port 139. If you use a firewall, this port must be unblocked. This is especially important for users of Windows XP Service Pack 2. "File and Printer Sharing" in the Windows Firewall permission must be checked here.

Notification via external program 8.8.4.9



Messages can also be dispatched by external programs can be used to dispatch messages which can be configured with parameters as well.

This can even be a simple copy routine with which a video image is copied to a server.

A sample batch file is found her: Example for notification via external program

8.8.4.10 Testing alarm message configurations

🛐 Test

You can check the settings by clicking on the button [Test]

8.8.4.11 Customize text



8.8.4.12 Report on critical system errors

Additionally to the described messages reports on critical system errors can be sent by e-mail to one or more recipients. The recipients have to be separated by a semicolon.



Critical system errors are:

- hard drive errors
- backup medium full

8.8.5 Configuration EX-IO alarm board



MULTIEYE-HYBRID can be upgraded optionally by one or more I/O alarm boards. This enables the connection of external alarm sensors such as motion sensors, alarm installations or door circuits directly to the recording system. In addition, relays can be controlled and switched remotely, for example, to activate doors, gates, or illumination.

8.8.5.1 EX-IO alarm board connectors

The configuration of I/O boards is quite easy:

- I. Choose an I/O board
- 2. Click on the specific connector in the image
- 3. Determine the kind of the alarm contact (NO Normally opened or NC normally closed) and which cameras shall record
- 4. Confirm your selection by clicking on [Apply] or [OK]

landard	IO Alarm Board	IP-Address	Profile
Global Settings	Image:	1 1	TIONE
Image Settings			
Video Settings			
K Motion Detection			
Timer Settings			
Ring Storage			
🙎 User Management	Inputs/Outputs 2		
dvanced Video / Webserver	000000		0
			a bud
Audio Settings			
Audio Settings			
Audio Settings	Input Description Input 01		
Audio Settings Video Output Alarm Messages IO Alarm Board	Input Description Input 01 Input 01 Input 01 Input 01	Camera ✓ [01] Camera 01 ✓ [02] Camera 02 ☐ [03] Camera 03 ☐ [04] Camera 04 ☐ [05] Camera 05 ☐ [06] Camera 06 3	& Duration of recording 120 Seconds ✓ Protect videos Protected videos will not be deleted by the ring storage

By clicking on a relevant input contact (2.) of the displayed I/O board (1.), you can connect each of the eight inputs with one or several cameras (3.) for recording.

To the right of the camera selection area, you can set the recording duration in seconds for each separate outlet.

By activating the check box 'Protect videos' \square (4.), you can prevent the automatic deletion of previously recorded video material from ring storage. Such material can, however, still be deleted manually.
tandard	IO Alarm Board
了 Global Settings	□ ∰ K51014800083
Image Settings	
Video Settings	
Kotion Detection	
Timer Settings	Inputs/Outputs
Bing Storage	
User Management	
Advanced	I T
Dettings Audio Settings	Output
Video Output	Description Output 01
Alarm Messages	If Message from 01 Camera 01 Camera 02 Contact closed for 1.0 Seconds
🛸 IO Alarm Board	[04] Camera 04 [05] Camera 05
률 🖗 DataLog	[06] Camera 06 [07] Camera 07 [08] Camera 08 [09] Elexwatch 110
	Controlled by
	Cameras Remote Access Test
	Camera Loss

8.8.5.2 EX-IO alarm board switch outlets

A click on one of the switch outlets will call up a different menu display. The multifunctional alarm board relays can be toggled by various occurrences, for example:

- Motion detection
- Remote access via LiveViewer
- Video loss (analog and/or network cameras)

Relay switching times can be individually adjusted in seconds. With the setting "-----" a relay remains activated as long as motion is detected, the LiveViewer switch button is operated, or the video loss continues.

8.9 Optional MULTIEYE modules and licenses

After installing of the additional MULTIEYE modules

- Autobackup
- DATALOG
- EX-IO Server

additional settings in the MULTIEYE configuration menu will appear.

The configurations of these modules are described in the documentation of the modules.



9 Playback with the MULTIEYE-HYBRID-MultiPlayer

The MultiPlayer in MULTIEYE-HYBRID is one of the most powerful tools in the system.

MULTIEYE-HYBRID MultiPlayer makes possible:

- the simple playback of one or more recorded video sequences
- video selection via a motion timeline (histogram)
- the combination of several players in nearly synchronous playback with sophisticated functions for analyzing the video files via the motion timeline.

Regardless of the method of recording, MULTIEYE-HYBRID always registers and stores motion activities parallel to the video images. Because of this, you can quickly locate specific events and display specific motion activities recorded by various cameras.

In the following description you will find detailed and exact instructions for operating the MultiPlayer with all its functions and possibilities.

To avoid unreasonably burdening the user who may only be looking for basic playback functions, we will start with the most important steps for the playback of video files and a correspondingly fast result in chapter Playback of a video in four steps 12.

9.1 Start of the MULTIEYE-HYBRID-MultiPlayer

The MULTIEYE-HYBRID-MultiPlayer is started from the MultiScreen interface by a click on this symbol in the toolbar.

The MultiPlayer screen is divided into:





Attention:

To switch to a full-screen playback of a video from a two or four baseline window display, double-click on the specific playback window.

© 2007 artec technologies AG

MULTIEYE Usermanual

112

9.2 Playback of a video file in four steps

The active cameras are illustrated in the upper left half of the MULTIEYE-HYBRID MultiPlayer's image window. Above that, you can choose how many video windows shall be available for playback.



• First select one, two or four baseline video windows by clicking on the appropriate symbol



- Click on the symbol of the camera with the video which you wish to play back OR drag that camera's icon while holding the left mouse key down (Drag&Drop) into the desired Player window.
- Now the first image of the most recently recorded video immediately appears. In the menus located beneath the camera selection, the recording date and the available associated video files are displayed.
- Start playback with the Player's bottoms \bullet or \blacktriangleleft

9.3 General settings and options in the player



At the top edge of the MultiPlayer you will find various symbols whose functions will be explained in the following.

9.3.1 Camera symbols or tree structure display

With this button you switch between the camera symbol and the tree structure displays.



Camera symbol display

113

9.3.2 Player settings

114

2

This button opens the sub-menu used to set the various MultiPlayer options.



Settings: Global settings

In "Global settings" the language files for the MultiPlayer are selected and additional playback options are set.

The language for MultiPlayer can be set independently of the language set for MultiScreen.

Settings: Motion timeline (histogram)

The selection "Motion Timeline" facilitates the search for motion-dependent recordings within a video.

The kind of display of the activity level can be entered here for both the video motion timeline as well as for the time bar.

		X	
Player Settings			
Global Settings Motion Timeline	Videodisplay	Audio Keyboard	
Modification of play setting of max. devi	ers' resolution a ation in simultar	nd neous mode	
Resolution	-Simultaneous r	mode	
Maximum 320 x 240 220	Maximum devi	ation in sec. 3	
0 384 x 288 0 640 x 480	Remote settings		
◯ 768 x 576			
Antialiasing	Erame size in k	Bute	
	Frame size in KByte		
Plaver Settings		X	
Global Settings Motion Timeline	Videodisplay	Audio Keyboard	
Audio options			
Auto mute non-active vio	deos		
_			
	😹 Save	🚽 🙀 Standard	

Settings: Video Display

In the video display window you can set the video size default as well as the maximum time difference for synchronized mode. Synchronized mode enables the nearly simultaneous playback of several videos.

To reduce blocks (JPEG-artefacts) when enlarging a camera image, anti-aliasing can be activated.

In addition, you can set the maximum image size of, for example, image transmission over a network.

Settings: audio

As soon as the volume control knob of one Player is activated, all other Players are automatically muted.



Settings: keyboard This screen displays the keyboard allocations for control of the Player.

To display further keyboard short-cuts use the scroll bar.

9.3.3 Remote inquiry

So that you can call up video files from other MULTIEYE-HYBRID servers you have a remote dialer at your disposal.

(see also: <u>Playback videos over network</u> 13¹)

9.3.4 Motion timeline daily summary

see also: Playback by motion timeline with histogram 129

9.3.5 Multiple playback

With this selection you can determine if one, two or four video playback windows are to be displayed simultaneously.

9.3.6 Synchron playback



The displayed videos can be played back either independently (normal) or in synchronization with one another.

Synchronized playback is available only when two or more playback windows are displayed.

When you start the Player, all other Players are directed to play back video files with recordings made at a selected point in time. This takes place almost simultaneously. For technical reasons, completely synchronous playback is not possible but time delays remain well within a scale of one to two seconds.





If no recording was made by one of the selected cameras at the selected point in time, then naturally no synchronized playback for that camera can occur.

Such a case will be indicated by an appropriate message in the video window.

9.3.7 Trash

0

With the function "Trash", all active Player windows can be dragged and dropped into the trash, for example to enable the call-up of a new display variation.

9.4 Video playback

If you wish to go into further detail now and, for example, display various videos simultaneously or play back event-driven videos, you should take a closer look at the following chapter. You will see that the Player is very easy to operate and that you will be able to operate the MultiPlayer tool with expertise after just a short amount of time.

9.4.1 Selecting video files

9.4.1.1 Camera symbol or tree structure display

With this symbol you can switch back and forth between camera symbol or tree structure display.

In the **camera symbol** display choose the desired camera and then the playback date. All videos recorded on that date are then displayed in the lower window (video list).

The tree structure display shows all cameras with their specific recordings.



9.4.1.2 Evaluating videos via the camera symbol display

Click on the camera in this display with the video files which you wish to monitor. Move the camera into the video playback window per Drag&Drop. The date and time of the desired videos for each specific camera can be selected in the calendar. After this selection, the videos recorded on that date are displayed in the video list below. If more than one camera (two or four baseline window display) is to be displayed, Drag&Drop the cameras into the empty areas of the video playback window.

9.4.1.3 Evaluating video via the tree structure

This area displays a tree structure showing all cameras available for recording. The folder for each camera is divided into subfolders for the year, month and day.

By clicking you can navigate through the tree and you can also see on a first view if there are videos available for the selected day.

If a day has video files available or not is signed by the icon.





9.4.2 The video list

[02] Lange Strasse 3.July 2007		Motion Leve
Start	End	20 %
16:32:32	16:32:47	
16:33:06	16:33:11	
16:33:12	16:33:27	
16:33:59	16:34:20	
16:34:48	16:34:53	
16:34:59	16:35:04	
16:35:17	16:35:48	
16:35:59	16:36:04	
16:36:06	16:36:11	
16:36:13	16:36:23	
16:36:29	16:36:34	
16:36:37	16:37:03	

The video list exhibits the video files selected by date in chronological order. Here you can choose whether you want a list of all videos or, more specifically, only of those recorded by motion recognition, continuous recording, or contact alarm. You can also choose read-only files.

You can Drag&Drop video files into a player window for playback. The file name of the video displayed in the playback window is backlighted in blue in the selection list.

9.4.2.1 The context menu of the video list

120



9.4.2.2 Treshhold / Motion level

You further have the option of displaying only videos with a motion level above a specific threshold.

By clicking on the button Motion Level you can turn the threshold function on or off.

With the slide lever located under the Motion Level button, you can set the threshold level at which videos will be played back. This function is practical, for example, when you only want to view videos with a considerable level of activity. The threshold level is shown by a percentage figure below the slide lever.

Video files whose threshold level of activity lies below the selected threshold level will be excluded from the selection. They are grayed out in the bar graph (see figure below).

Example without threshold:Example with threshold:All videos will be playedOnly videos with a level of motion activity over 20% will be played

[02] Lange S 3.July 2007	Motion Level	
Start	End	
16:32:32	16:32:47	
16:33:06	16:33:11	
16:33:12	16:33:27	
16:33:59	16:34:20	
16:34:48	16:34:53	
16:34:59	16:35:04	
16:35:17	16:35:48	
16:35:59	16:36:04	
16:36:06	16:36:11	-
16:36:13	16:36:23	
16:36:29	16:36:34	
16:36:37	16:37:03	
16:37:10	16:37:19	
16:37:40	16:37:50	
16:37:52	16:38:01	
16:38:15	16:38:20	
16:38:30	16:38:35	
16:38:36	16:38:41	
16:38:44	16:39:16	
16:39:36	16:39:41	

[02] Lange S 3.July 2007	trasse	Motion Level
Start	End	20%
16:32:32	16:32:47	
16:33:06	16:33:11	
16:33:12	16:33:27	
16:33:59	16:34:20	
16:34:48	16:34:53	
16:34:59	16:35:04	
16:35:17	16:35:48	
16:35:59	16:36:04	
16:36:06	16:36:11	
16:36:13	16:36:23	
16:36:29	16:36:34	
16:36:37	16:37:03	
16:37:10	16:37:19	
16:37:40	16:37:50	
16:37:52	16:38:01	
16:38:15	16:38:20	
16:38:30	16:38:35	
16:38:36	16:38:41	
16:38:44	16:39:16	
16:39:36	16:39:41	T

The videos are highlighted by colors

Additionally you can select the videos to be displayed by selecting the videos you want to have to be displayed.



Motion Videos,Alarm Videos,Locked Vide		
Motion Videos		

🗌 Normal Videos

red

Alarm Videos

Locked Videos
Signal Word Videos

121



9.5 The playback windows of the video files

With the register bar, you can choose among three playback alternatives:

	🚳 Standard Playback 🖄 MotionTrack 🖾 MotionSearch
Normal playback	Normal playback is just like that with a normal video recorder
MotionTrack	Playback depends on a threshold value set in a motion timeline
MotionSearch	An area in the video image is defined. Only those videos which registered motion detection in the defined area will then be played back.

9.5.1 The playback toolbar

The toolbar controls the playback of videos.

Depending on the playback alternative selected in the register bar, the toolbar of the playback window displays various functions for managing video playback as well as for searching via (fast) forward and rewind.

🗺 You can also comfortably control playback with the keyboard: single image forwards/backwards, fast forward/backward, pause, etc. You can find the key codes under "Keyboard" in the options menu.

9.5.1.1 Fast forward and rewind



If you click on the playback button, hold the left mouse-key down and move the mouse cursor lightly upwards, a slide lever will appear with which you can set the speed in incremental amounts above the normal rate.

9.5.2 Playback options

9.5.2.1 Displaying the motion activity area

火

By clicking on this symbol with the left mouse-key you activate the function which displays all areas in a video image in which motion activity was registered. A click with the right key deactivates this function.

9.5.2.2 Switching over from single video to full-day display



With this button, you can select whether a single video or a whole day's recordings should be displayed in the motion timeline. (IV = I video; 24h = one day).

9.5.2.3 Audio playback in the MultiPlayer

You adjust the volume level of the player with this control.

9.5.3 Playback alternative:: Standard playback



In the motion timeline field, the specific camera's motion activities of the selected single video OR those of the entire day camera are displayed as a gray bar-graph.



<u>The last video</u> can be selected with a left mouse-key click on called up with a right click on the same symbol.

symbol. The first video of this camera can be

9.5.4 Playback alternative: MotionTrack with motion timeline treshhold value



MULTIEYE Usermanual

When selecting the tab "MotionTrack", a green horizontal line is displayed in the motion timeline (histogram).

By clicking on this line with the right mouse-key, you can move the line up or down to the level which you wish to serve as the threshold level.

The motion activity bars above the threshold level (green line) are displayed in blue.



With the operations arrows \checkmark you can now jump from one motion activity to the following or to the preceding motion activity which lies above the threshold level.

The arrows for "Advance one video" and "Reverse one video" are now different from those in the normal playback toolbar.

The motion activity bars above the threshold level (green line) are displayed in blue.

124



9.5.5 Playback alternative: MotionSearch

You can define an area by holding down the CTRL key and the left mouse-key at the same time.

125

Now only those videos will be displayed in which activity within this defined area motion activity has been registered.

Delete a defined area by hitting the CTRL key and the right mouse-key at the same time.



In this example, only those videos will be displayed in which motion activity was registered within the area marked in red.



After you marked the area you have to press once the button



The start and stop date for the search have to be set.

The program searches for all videos with activity in the marked area. With a double click the video can be displayed.

The arrows for "Advance one video" and "Reverse one video" are now different from those in the normal playback toolbar.



With the operations arrows vou can now jump from one video to the following or the preceding one in which activity was registered in the defined window.

9.5.6 The context menu of the playback window

With a right click on the selected player window you can open the options menu with the following functions:



9.5.6.1 SnapShot

In order to store an individual image, an entire video or even the videos of several cameras, just click on this button. A dialog window will now open in which you can store the video or a snapshot OR print the selected image.



9.5.6.2 Search video



9.5.6.3 Mute/Unmute audio

With this, the sound for all Players can be completely switched on/off.

MULTIEYE Usermanual

9.5.6.4 Keyboard support

With this selection, all operations elements of the player such as Start, Stop, Forward and Rewind can also be controlled with the keyboard and jog shuttle.

9.5.6.5 Zoom

With a click on this symbol, you can open the magnifying glass function for the specific player window. By holding down the left mouse-key, you can draw up a particular area.

You deactivate this zoom by clicking on the window with the left key.

9.5.6.6 Video export



An event which was captured by a single or a number of cameras (for example a service station operation) can be converted into an AVI file – i.e. a number of video files into one - and completely archived on the hard drive as a single event.

Set Sta Start 15:3	rt -> End Time- at 4:23 📫	End	
04.0	7.2007 🛨	15:34:33	00 h 00 m 10 s
Camera	selection		
	Export Ca	meras [02] Lange Stra	isse 🐨
Export	mode		
(R)	C Create or	ne large video for each	camera
Ð	C Create or LT No at C Copy all s	ne large video for each udio export suitable videos for each	camera
9	C Create or └── No ar Copy all s	ne large video for each udio export suitable videos for each	camera camera
narget	C Create or L No a Copy all s	ne large video for each udio export suitable videos for each	camera camera
Target	C Create or No a Copy all s Target director	ne large video for each udio export suitable videos for each ory	camera
Target	C Create or No al Copy all s Target directo C:\	ne large video for each udio export suitable videos for each ory	camera I camera
Target	C Create or No ai Copy all s Target directs C:\ Create su	he large video for each udio export suitable videos for each ory b-directories for offline whuttiPlaner	camera I camera Playback
Target	C Create or No ai Copy all s Target directo c:\ Create su V Copy	he large video for each udio export suitable videos for each ory b-directories for offline ; MultiPlayer required video codec	camera I camera playback
Target	C Create or No a Copy all s Target directr C:\ C Create su V Copy V Copy V Create	ne large video for each udio export suitable videos for each ory ub-directories for offline ; MultiPlayer required video codec te quickstart files	camera I camera I playback
Target	C Create or No a Copy all s Target direct C:\ C:\ Create su V Copy V Create Copy V Create	he large video for each udio export suitable videos for each ory b-directories for offline MultiPlayer required video codec te quickstart files	camera I camera playback

After entering the start and stop dates and the appropriate times, select the cameras whose videos are to be exported:

[01] Camera 01	
[02] Camera 02	
[03] Camera 03	
[04] Camera 04	
[05] Camera 05	
🔲 [06] Camera 06	-

Alternatively, you can decide if the videos of each camera will be stored in one large AVI file, with or without audio, or if they will be exported as separate files.

In addition, you can also decide if the directory structure will be maintained and if the Player and the necessary playback codec are copied and an autostart file is created as well.

By selecting all of these points, you can burn the target directory with all its videos directly onto a CD which can then be independently started when the file "Play_Videos.bat" is called up.

9.5.6.7 Open playback list



All videos which you have captured by a double-click (see Options/ Global settings: "double-click on player timeline adds video to Playlist") or added by 'Save to Playlist' are listed here. You can select a video for playback with the Player by double-clicking on it.

128

۹.				×	
Playlist					
Load	Save Print Clear				
Camera	Date / Time	Comments	Filename	Position	
2	2007-07-04 15:34:57		D:\MultieyeVide	34	
2 2007-07-03 15:54:46			D:\MultieyeVide	0	
2	2007-07-03 16:09:50		D:\MultieyeVide	0	
2	2007-07-03 16:23:01		D:\MultieyeVide	0	

9.5.6.8 Save to playlist

With the function "Save to Playlist", the actual video is placed into the playlist.

9.5.6.9 Close player

0

Close the active camera playback window by clicking on this button.

9.6 Playback via the motion timeline bar in the motion timeline-display

The motion timeline table enables you to analyze the recorded motion activities of all cameras over a period of 24 hours.

The active cameras are listed individually in the vertical bar of the overview; the recorded events are color highlighted in the horizontal display.

9 <mark>8</mark> .			<u>×</u>
Tuesday , 03.July 2007			
	06 07	08 09 1	0 11 12 13 14 15 16 17 18 19 20 21 22 23
01		10:0	4 Lange Strasse
02			had be
03			
04			
05			
06			
07			
08			
10			
11		-	
12			
13		1	
14		1	
15			
16			
17			
18			
19			di blant le . nás 🛛 👘 👘
Drag & Drop a timeline segment	1 2		Motion timeline options Show available videos and motion timeline Show available videos and motion timeline Show available videos and motion timeline
into a player window	3 4	Details	Show motion timeline only

If you move the cursor to any spot in the window, you can choose the camera as well as the point in time of the selected day. Once you have made a suitable selection, simply drag it via Drag&Drop to a playback window symbol to the right of the command button "Drag a timeline segment into a player window" and the selected point in time appears in the MultiPlayer. Depending upon the selected number of windows, up to four possible command buttons appear.

8			x
Tuesday , 03.July 2007			
00 01 02 03 04 05	06 07 08	09 10	
01		10:0	4 Lange Strasse
02		itel at a	
03			
04			12 12
05			
06			
07			
08			
09			
10			
11			
12			
13			
14			
15			
16			
17			
18			
19			di bland in "da madu 🔰 🗸 👘
		-	Motion timeline options
Drag & Drop a timeline segment	1 2		C Show available videos and motion timeline 03.07.2007 ▼ ◀ ►
into a player window	3 4	Details	C Show available videos only Show motion timeline only

Mark a position in the video window and drag it onto the 'Details button'. You will then get a detailed overview over the videos of the selected camera (next picture).





By clicking on this button you will get back to the overview.

9.6.1 Button details



After a click on the button "Details", a selected area will be extended to an interval of about six minutes; the kind of recording (constant or motion-activated recording) and the level of the motion activity will also be displayed. A further click on the button "Details" returns you to the day's summary.

9.6.2 Motion timeline options

Motion timeline options

- C Show available videos and motion timeline
- C Show available videos only
- Show motion timeline only



Here you can choose to display video recordings (color-sorted as continuous or motion-activated recordings) in combination with the motion timeline, video recordings by themselves, or only the motion timeline by itself.

The buttons in "Select Date" help you choose the desired date either from the calendar or by paging forward and backward with arrows. The button "Show" displays the activities of the day selected.

9.7 Playback videos over network

For remote playback, the external server must also be activated – i.e., licensed - for remote playback (Network Player Server License).



By clicking on this button you start the remote inquiry.

The operation and functions of network-based remote playback are quite similar to those of the playback of locally stored videos. Audio playback and remote storage of video sequences are not yet possible at this time.

The following describes remote call-up.

erver connect	Connect t
Server]	
	۵ 📢
Connection to	Using
Localhost	Direct
Lokaler Rechner über IP	📦 Network
MEH Demo	A Network

Select the camera in the network with which you wish to be connected and the click on

[Connect]

See the next chapter for information about creating network connections.

131



You now have access to the Player's familiar user interface and can select cameras and evaluate recorded videos in the customary manner.

9.8 MultiPlayer as a backup player

A specialty of the MultiPlayer is made available by the symbol in the connections window. With this feature, you can open video directories and evaluate video files which have been recorded on other PCs.

For example, the police can view and evaluate a recorded incident which has been exported onto a CD.

Ordner suchen	? 🗙
Add new Videodir (example C:\MultieyeVideos\)	
🖃 🞯 Desktop 🕀 🌐 Eigene Dateien	^
☐ g Arbeitsplatz ⊕	
CD-Laufwerk (D:) CD-RW-Laufwerk (E:) Surbon (C)	
Grading Camera01	
🗄 🗁 Camera09	
E Setzwerkumgebung	×
ОК АЬЬ	rechen

Hybrid Player	Verbinden mit
Server	
📁 🤕	
F:\MultieveVideos\	



10 MULTIEYE Services menu

10.1 Overview

134

A double-click on the symbol in the Windows System Tray (next to the Windows clock) opens the dialog window "MULTIEYE Services" with the features Services, Licenses, Options and Hardware.

Services	Licenses Options	Hardware	
Start	Stop Backup	ernel	\$
- 🍋 D	ataLog		
- 9	Z Data Source	2.0.2.7	
F 🖗	Data Writer	2.0.2.7	
``````````````````````````````````	, Data Analyzer ideo Services	2.0.2.7	
	IP-Cam Source	<b>2.0.2.7</b>	
😰 🖥	ase Services		
T Fe	BingStorage	M 2027	
	Motion Detector	2027	
- 10	Videowriter	2.0.2.7	
-	Backup Modul	2.0.2.7	
	MotionSearch	2.0.2.7	
- 💫 🖥	emote Services		
- 3	Remote Server	2.0.2.7	
	IO External	2.0.2.7	
1- 💫 M	essenger	in an	
L 5	Messenger Modul	2.0.2.7	

In the first area  $\Box$  "Services" you will find a status summary of various program modules such as video and audio services, etc.

With a click onto the + sign the entries can be expanded for a detailed view.

With the buttons  $\rightarrow$  Start and  $\blacksquare$  Stop, you can activate or terminate the modules.

To activate MultiScreen for display of the camera(s), click on the



# 10.2 Licences



In the second category  $\Box$  Licenses you will find a summary of the licensed and activated video boards and add-on modules.

# 10.3 Options



In the third category  $\square$  Options the protocol files can be viewed, a status window can be opened, the language for the MultiScreen can be configured, a live update can be done and the SystemRestorer can be started.

# 10.3.1 Programm protocols (LOG-files)



A click on this symbol will display the log files. The occurrence of events is documented in these files.

Refresh       Save as       Clear list         Object       Report       Clear         Number       Day/Time       Module       Object       Report         Output       Day/Time       Module       Object       Report         Object       Day/Time       Module       Object       Report         Number       Day/Time       Module       Object       Report         Object       Day/Time       MainForm       Error in VideoControlletError: fSock Not A         Object       Display       TMainForm       Error in VideoControlletError: fSock Not A         Object       Display       RingStorage       RingStorageThr02       Camera02 Can not delete Video "D: Mul         Object       Display       RingStorage       RingStorageThr02       Camera02 Can not delete Video "D: Mul         Object       Display       RingStorage       RingStorageThr02       Camera02 Can not delete Video							
Object         Report         Search         Clear           Number         Day/Time         Module         Object         Report           0630852         2007.07.04         17.11:15.6         M2Player         TMainForm         Error in VideoControlletError: (Sock Not A           0630850         2007.07.04         17.09:16.8         M2Player         TMainForm         Error in VideoControlletError: (Sock Not A           0630850         2007.07.04         17.05:64.4         M2Player         TMainForm         Error in VideoControlletError: (Sock Not A           0630849         2007.07.04         17.05:06.4         M2Player         TMainForm         Error in VideoControlletError: (Sock Not A           0630849         2007.07.04         17.05:06.4         M2Player         TMainForm         Error in VideoControlleteror: (Sock Not A           0630847         2007.07.04         17.05:06.4         MingStorage         RingStorageThr02         Camera02. Can not delete Video "D:Mul           0630845         2007.07.04         17.04:06.4         RingStorage         RingStorageThr02         Camera02. Can not delete Video "D:Mul           0630843         2007.07.04         17.04:05.3         RingStorage         RingStorageThr02         Camera02. Can not delete Video "D:Mul           06	2	Refresh	Save as	s 🧭 Clea	ar list		
All         Control         Log         IP-Cameras           Number         Day/Time         Module         Object         Report           0630852         2007.07.04         17.11:15.6         M2Player         TMainForm         Error in VideoControlletError: fSock Not A           0630851         2007.07.04         17.09:16.8         M2Player         TMainForm         Error in VideoControlletError: fSock Not A           0630850         2007.07.04         17.09:16.8         M2Player         TMainForm         Error in VideoControlletError: fSock Not A           0630843         2007.07.04         17.06:54.4         M2Player         TMainForm         Error in VideoControlletError: fSock Not A           0630843         2007.07.04         17.06:54.4         RingStorage         RingStorageThr02         Camera02. Can not delete Video "D:VMul           0630844         2007.07.04         17.04:40.4         RingStorage         RingStorageThr02         Camera02. Can not delete Video "D:VMul           0630843         2007.07.04         17.04:40.3         RingStorageThr02         Camera02. Can not delete Video "D:VMul           0630843         2007.07.04         17.04:40.4         RingStorageThr02         Camera02. Can not delete Video "D:VMul           0630843         2007.07.04         <	1	Object			Report		🔍 Search 🐻 Clear
Number         ▼         Day/ Time         Module         Object         Report           © 0530852         2007.07.04         17.11:15.6         M2Player         TMainForm         Error in VideoControllerError; fSock Not A           © 0530850         2007.07.04         17.09:16.8         M2Player         TMainForm         Error in VideoControllerError; fSock Not A           © 0530840         2007.07.04         17.05:54.4         M2Player         TMainForm         Error in VideoControllerError; fSock Not A           © 0530848         2007.07.04         17.05:55.3         RingStorage         RingStorag	12	🗂 All	1	🙁 Error	Log	📔 😴 IP-Ca	ameras
©         0630852         2007.07.04         17.11:15:6         M2Player         TMainForm         Error in VideoControllerError: (Sock Not A)           ©         0630851         2007.07.04         17.09:16:8         M2Player         TMainForm         Error in VideoControllerError: (Sock Not A)           ©         0630850         2007.07.04         17.09:16:8         M2Player         TMainForm         Error in VideoControllerError: (Sock Not A)           ©         0630849         2007.07.04         17.09:54:4         M2Player         TMainForm         Error in VideoControllerError: (Sock Not A)           ©         0630848         2007.07.04         17:09:06:4         RingStorage         RingStorageThr02         Camera02. Can not delete Video 'D:VMul           ©         0630845         2007.07.04         17:04:40:4         RingStorage         RingStorageThr02         Camera02. Can not delete Video 'D:VMul           ©         0630845         2007.07.04         17:04:05:4         RingStorage         RingStorageThr02         Camera02. Can not delete Video 'D:VMul           ©         0630843         2007.07.04         17:04:05:4         RingStorage         RingStorageThr02         Camera02. Can not delete Video 'D:VMul           ©         0630841         2007.07.04         17:04:05:4	Numbe	rΣ	Day/Time		Module	Object	Report
©         0630851         2007.07.04         17.09:16.8         M2Player         TMainForm         Error in VideoControllerError: (Sock Not A           ©         0630850         2007.07.04         17.07:44:3         M2Player         TMainForm         Error in VideoControllerError: (Sock Not A           ©         0630849         2007.07.04         17.05:65:4         M2Player         TMainForm         Error in VideoControllerError: (Sock Not A           ©         0630847         2007.07.04         17.05:05:3         RingStorage         RingStorageThr02         Camera02. Can not delete Video "D:\MuL           ©         0630846         2007.07.04         17.04:40:4         RingStorage         RingStorageThr02         Camera02. Can not delete Video "D:\MuL           ©         0630844         2007.07.04         17.04:64:4         RingStorage         RingStorageThr02         Camera02. Can not delete Video "D:\MuL           ©         0630844         2007.07.04         17.04:64:4         RingStorage         RingStorageThr02         Camera02. Can not delete Video "D:\MuL           ©         0630842         2007.07.04         17.04:55:3         RingStorage         RingStorageThr02         Camera02. Can not delete Video "D:\MuL           ©         0630841         2007.07.04         17.02:55:4	8	0630852	2007.07.04	17:11:15:6	M2Player	TMainForm	Error in VideoControllerError: fSock Not A
© 06308502007.07.0417:07:44:3M2PlayerTMainFormError in VideoControllerError: (Sock Not A© 06308492007.07.0417:05:06:4RingStorageRingStorage Thr02Camera02. Can not delete Video "D:\Mul© 06308482007.07.0417:05:06:4RingStorageRingStorageThr02Camera02. Can not delete Video "D:\Mul© 06308462007.07.0417:05:05:3RingStorageRingStorageThr02Camera02. Can not delete Video "D:\Mul© 06308462007.07.0417:04:06:4RingStorageRingStorageThr02Camera02. Can not delete Video "D:\Mul© 06308452007.07.0417:04:06:4RingStorageRingStorageThr02Camera02. Can not delete Video "D:\Mul© 06308442007.07.0417:04:06:4RingStorageRingStorageThr02Camera02. Can not delete Video "D:\Mul© 06308422007.07.0417:04:05:3RingStorageRingStorageThr02Camera02. Can not delete Video "D:\Mul© 06308422007.07.0417:02:51:3RingStorageRingStorageThr02Camera02. Can not delete Video "D:\Mul© 06308402007.07.0416:55:73RingStorageRingStorageThr02Camera02. Can not delete Video "D:\Mul© 06308352007.07.0416:55:73RingStorageRingStorageThr02Camera02. Can not delete Video "D:\Mul© 06308362007.07.0416:55:83RingStorageRingStorageThr02Camera02. Can not delete Video "D:\Mul© 06308372007.07.0416:55:83RingStorageRingStor	8	0630851	2007.07.04	17:09:16:8	M2Player	TMainForm	Error in VideoControllerError: fSock Not A
© 06308492007.07.0417:05:54:4M2PlayerTMainFormError in VideoControllerError: (Sock Not A© 06308482007.07.0417:05:06:4RingStorageRingStorageThr02Camera02. Can not delete Video "D:\Mul© 06308472007.07.0417:05:05:3RingStorageRingStorageThr02Camera02. Can not delete Video "D:\Mul© 06308462007.07.0417:04:06:4RingStorageRingStorageThr02Camera02. Can not delete Video "D:\Mul© 06308452007.07.0417:04:06:4RingStorageRingStorageThr02Camera02. Can not delete Video "D:\Mul© 06308442007.07.0417:04:06:4RingStorageRingStorageThr02Camera02. Can not delete Video "D:\Mul© 06308432007.07.0417:04:06:4RingStorageRingStorageThr02Camera02. Can not delete Video "D:\Mul© 06308412007.07.0417:02:52:4RingStorageRingStorageThr02Camera02. Can not delete Video "D:\Mul© 06308412007.07.0417:02:51:3RingStorageRingStorageThr02Camera02. Can not delete Video "D:\Mul© 06308412007.07.0417:05:51:3RingStorageRingStorageThr02Camera02. Can not delete Video "D:\Mul© 06308432007.07.0416:55:75:3RingStorageRingStorageThr02Camera02. Can not delete Video "D:\Mul© 06308352007.07.0416:55:83RingStorageRingStorageThr02Camera02. Can not delete Video "D:\Mul© 06308372007.07.0416:55:83RingStorageRingS	Ø	0630850	2007.07.04	17:07:44:3	M2Player	TMainForm	Error in VideoControllerError: fSock Not A
<ul> <li>0630848</li> <li>2007.07.04</li> <li>17:05:06:4</li> <li>RingStorage</li> <li>RingStorage</li></ul>	8	0630849	2007.07.04	17:06:54:4	M2Player	TMainForm	Error in VideoControllerError: fSock Not A
<ul> <li>0630847</li> <li>2007.07.04</li> <li>17:05:05:3 RingStorage</li> <li>RingStorage</li> <li< td=""><td>8</td><td>0630848</td><td>2007.07.04</td><td>17:05:06:4</td><td>RingStorage</td><td>RingStorageThr02</td><td>Camera02. Can not delete Video "D:\Mul</td></li<></ul>	8	0630848	2007.07.04	17:05:06:4	RingStorage	RingStorageThr02	Camera02. Can not delete Video "D:\Mul
<ul> <li>0630846</li> <li>2007.07.04</li> <li>17:04:40:4</li> <li>RingStorage</li> <li>RingStorage</li></ul>	8	0630847	2007.07.04	17:05:05:3	RingStorage	RingStorageThr02	Camera02. Can not delete Video "D:\Mul
© 06308452007.07.0417:04:39:3RingStorageRingStorageRingStorage Thr02Camera02. Can not delete Video "D:\Mul© 06308442007.07.0417:04:06:4RingStorageRingStorage Thr02Camera02. Can not delete Video "D:\Mul© 06308432007.07.0417:04:05:3RingStorageRingStorage Thr02Camera02. Can not delete Video "D:\Mul© 06308422007.07.0417:02:52:4RingStorageRingStorage Thr02Camera02. Can not delete Video "D:\Mul© 06308412007.07.0416:58:42:3RingStorageRingStorage Thr02Camera02. Can not delete Video "D:\Mul© 06308392007.07.0416:56:44:3RingStorageRingStorage Thr02Camera02. Can not delete Video "D:\Mul© 06308372007.07.0416:56:39:3RingStorageRingStorage Thr02Camera02. Can not delete Video "D:\Mul© 06308372007.07.0416:55:85:3RingStorageRingStorage Thr02Camera02. Can not delete Video "D:\Mul© 06308372007.07.0416:55:85:3RingStorageRingStorage Thr02Camera02. Can not delete Video "D:\Mul© 06308372007.07.0416:55:85:3RingStorageRingStorage Thr02Camera02. Can not delete Video "D:\Mul© 06308362007.07.0416:55:85:3RingStorageRingStorage Thr02Camera02. Can not delete Video "D:\Mul© 06308372007.07.0416:55:26:3RingStorageRingStorage Thr02Camera02. Can not delete Video "D:\Mul© 06308332007.07.0416:55	8	0630846	2007.07.04	17:04:40:4	RingStorage	RingStorageThr02	Camera02. Can not delete Video "D:\Mul
<ul> <li>0630844</li> <li>2007.07.04</li> <li>17:04:06:4</li> <li>RingStorage</li> <li>RingStorage</li></ul>	8	0630845	2007.07.04	17:04:39:3	RingStorage	RingStorageThr02	Camera02. Can not delete Video "D:\Mul
<ul> <li>0630843</li> <li>2007.07.04</li> <li>17:04:05:3</li> <li>RingStorage</li> <li>RingStorage</li></ul>	8	0630844	2007.07.04	17:04:06:4	RingStorage	RingStorageThr02	Camera02. Can not delete Video "D:\Mul
<ul> <li>0630842</li> <li>2007.07.04</li> <li>17:02:52:4 RingStorage</li> <li>RingStorage</li> <li< td=""><td>8</td><td>0630843</td><td>2007.07.04</td><td>17:04:05:3</td><td>RingStorage</td><td>RingStorageThr02</td><td>Camera02. Can not delete Video "D:\Mul</td></li<></ul>	8	0630843	2007.07.04	17:04:05:3	RingStorage	RingStorageThr02	Camera02. Can not delete Video "D:\Mul
<ul> <li>0630841</li> <li>2007.07.04</li> <li>17:02:51:3</li> <li>RingStorage</li> <li>RingStorage</li></ul>	8	0630842	2007.07.04	17:02:52:4	RingStorage	RingStorageThr02	Camera02. Can not delete Video "D:\Mul
<ul> <li>0630840</li> <li>2007.07.04</li> <li>16:58:42:3</li> <li>RingStorage</li> <li>RingStorage</li></ul>	8	0630841	2007.07.04	17:02:51:3	RingStorage	RingStorageThr02	Camera02. Can not delete Video "D:\Mul
© 0630839       2007.07.04       16:57:57:3       RingStorage       RingStorage Thr02       Camera02. Can not delete Video "D:\Mul         © 0630838       2007.07.04       16:56:44:3       RingStorage       RingStorage Thr02       Camera02. Can not delete Video "D:\Mul         © 0630837       2007.07.04       16:56:39:3       RingStorage       RingStorage Thr02       Camera02. Can not delete Video "D:\Mul         © 0630836       2007.07.04       16:55:28:3       RingStorage       RingStorage Thr02       Camera02. Can not delete Video "D:\Mul         © 0630835       2007.07.04       16:55:28:3       RingStorage       RingStorageThr02       Camera02. Can not delete Video "D:\Mul         © 0630835       2007.07.04       16:55:28:3       RingStorage       RingStorageThr02       Camera02. Can not delete Video "D:\Mul         © 0630834       2007.07.04       16:55:08:3       RingStorage       RingStorageThr02       Camera02. Can not delete Video "D:\Mul         © 0630833       2007.07.04       16:55:08:3       RingStorage       RingStorageThr02       Camera02. Can not delete Video "D:\Mul         © 0630833       2007.07.04       16:55:08:3       RingStorage       RingStorageThr02       Camera02. Can not delete Video "D:\Mul         © 0630831       2007.07.04       16:55:37:3	8	0630840	2007.07.04	16:58:42:3	RingStorage	RingStorageThr02	Camera02. Can not delete Video "D:\Mul
<ul> <li>             0630838         </li> <li>             2007.07.04             16:56:44:3             RingStorage             RingStorage             RingStorageThr02             Camera02. Can not delete Video "D:\Mul</li>             Camera02. Can not delete Video "D:\Mul             Co30837         </ul> <ul> <li>             0630837             2007.07.04             16:55:63:3             RingStorage             RingStorageThr02             Camera02. Can not delete Video "D:\Mul</li>             Co30835             2007.07.04             16:55:58:3             RingStorage             RingStorageThr02             Camera02. Can not delete Video "D:\Mul <li>             0630835             2007.07.04             16:55:58:3             RingStorage             RingStorageThr02             Camera02. Can not delete Video "D:\Mul</li>             Co30833             2007.07.04             16:55:08:3             RingStorage             RingStorageThr02             Camera02. Can not delete Video "D:\Mul             Co30834             2007.07.04             16:55:08:3             RingStorage             RingStorageThr02             Camera02. Can not delete Video "D:\Mul             Co30833             2007.07.04             16:53:06:3             RingStorage             RingStorageThr02             Camera02. Can not delete Video "D:\Mul             Co30831             2007.07.04             16:52:73:             RingStorage             RingStorageThr02             Camera02. Can not delete Video "D:\Mul             Co30833             2007.07.04             16:52:73:             RingStorage             RingStorageThr02             Camera02. Can not delete Video "D:\Mul             Co30830             2007.07.04             16:52:73:             RingStorage             RingStorageThr02             Camera02. Can not delete Video "D:\Mu</ul>	8	0630839	2007.07.04	16:57:57:3	RingStorage	RingStorageThr02	Camera02. Can not delete Video "D:\Mul
	8	0630838	2007.07.04	16:56:44:3	RingStorage	RingStorageThr02	Camera02. Can not delete Video "D:\Mul
		0630837	2007.07.04	16:56:39:3	RingStorage	RingStorageThr02	Camera02. Can not delete Video "D:\Mul
		0630836	2007.07.04	16:55:58:3	RingStorage	RingStorageThr02	Camera02. Can not delete Video "D:\Mul
	8	0630835	2007.07.04	16:55:25:3	RingStorage	RingStorageThr02	Camera02. Can not delete Video "D:\Mul
\u03e9             0630833             2007.07.04             16:54:15:3             RingStorage             RingStorage             RingStorageThr02             Camera02. Can not delete Video "D:\Mul             Camera02. Can not delete Video "D:\Mul             Camera02. Can not delete Video "D:\Mul             O630831             2007.07.04             16:52:37:3             RingStorage             RingStorageThr02             Camera02. Can not delete Video "D:\Mul             O630830             2007.07.04             16:52:37:3             RingStorage             RingStorageThr02             Camera02. Can not delete Video "D:\Mul             O630830             2007.07.04             16:52:16:3             RingStorage             RingStorageThr02             Camera02. Can not delete Video "D:\Mul             O630820             2007.07.04             16:52:16:3             RingStorage             RingStorageThr02             Camera02. Can not delete Video "D:\Mul             Ofas0820             2007.07.04             16:53:56:9             M2Player             TMainForm             Error in VideoControlletError: fSock Not A             Camera02             Can not delete Video "D:\Mul             Camera02             Can not delete Video "D:\Mul             PingStorageThr02             Camera02. Can not delete Video "D:\Mul             Camera02.             Can not delete Video "D:\Mul             PingStorageThr02             Camera02. Can not delete Video "D:\Mul             PingStorageThr03             Camera02.             Can not delete Video "D:\Mul             PingStorageThr03             Camera02.             Can not delete Video "D:\Mul             PingStorageThr03             Camera02             Can not delete Video "D:\Mul             PingStorageThr03             Camera02             Can not delete Video "D:\Mul             PingStorageThr03             Camera02		0630834	2007.07.04	16:55:08:3	RingStorage	RingStorageThr02	Camera02. Can not delete Video "D:\Mul
Image: Strange	8	0630833	2007.07.04	16:54:15:3	RingStorage	RingStorageThr02	Camera02. Can not delete Video "D:\Mul
X         0630831         2007.07.04         16:52:37:3         RingStorage         RingStorage Thr02         Camera02.         Can not delete Video "D:\Mul           X         0630830         2007.07.04         16:52:16:3         RingStorage         RingStorageThr02         Camera02.         Can not delete Video "D:\Mul           X         0630830         2007.07.04         16:53:56:9         M2Player         TMainForm         Error in VideoControllerError: (Sock Not A           6842         Entries found         X         X         X         X         X	8	0630832	2007.07.04	16:53:06:3	RingStorage	RingStorageThr02	Camera02. Can not delete Video "D:\Mul
2007.07.04 16:52:16:3 RingStorage RingStorage Camera02. Can not delete Video "D:\Mul     0630829 2007.07.04 16:33:56:9 M2Player TMainForm Error in VideoControllerError: (Sock Not A  6842 Entries found	8	0630831	2007.07.04	16:52:37:3	RingStorage	RingStorageThr02	Camera02. Can not delete Video "D:\Mul
S 0630829 2007.07.04 16:33:56:9 M2Player TMainForm Error in VideoControllerError: (Sock Not A 6842 Entries found	8	0630830	2007.07.04	16:52:16:3	RingStorage	RingStorageThr02	Camera02. Can not delete Video "D:\Mul
6842 Entries found	8	0630829	2007.07.04	16:33:56:9	M2Player	TMainForm	Error in VideoControllerError: fSock Not A
	6842 En	tries found					

You can distinguish among errors (e.g. defect storage drives), events (e.g. video outage), and IP camera messages. When analyzing errors, it can often be helpful to export the log files ("Save as") and submit them to our technical support via Email (support@MULTIEYE.de).

# 10.3.2 System information



By clicking on this symbol, you receive a very informative status summary of all available cameras, their frame rates (ips) and recording modes, the allocated ring storage capacity and availability, active network connections, and motion indicators.

If you do not need to constantly have the video windows in sight, keeping this status window open is a very helpful way of keeping an eye on the system.

1										l l	×
System Inform	natio	on									
Total Fram Lowest Frame Highest Frame	nes rate rate	1 1 1	Total Us Total Reserv Usa	sed 1 ved 1 age	GB Drive	Reserved 1 GB	Used 1 1 GB	_			
Camera	ips	Recording	DataLog	Audio	Ringstorage	Utilized	Percentage	Network	Motion	Codec	
🗧 [01] Camera 13	12	None	-		4		+			HW	*
😴 [02] Lange Strasse	01	Ø Motion	353	3752	🥯 D 1243 MB	1209 MB	97%			HW	
😴 (03) Camera 15	-	None								HW	
😴 [04] MULTIEYE		None	244			2 +	141			HW	
6 [05] Camera 05		None									
😴 [06] Camera 06		None			2					HW	
😴 (07) Camera 07		None									
🐻 [08] Camera 08	1.000	None				1.000	(m)			HW	

# 10.3.3 Live-Updater



Live-Updater see also: <u>Live-Update</u> 1567

# 10.3.4 SystemRestorer

MULTIEYE SystemRestorer			×
Import       Delete       Restore         Restore Files       Last Edit         MEH36902742 2007-03-12 125617.mrf       12.03.2007 13:56:34         STEFAN 2007-06-07 113627.mrf       07.06.2007 11:36:44         MULTIEYE SystemRestorer       MULTIEYE SystemRestorer         File description       Create 2007-07-04 17:35:51         System: STEFAN       Protect file         Protect file       Password         Re-Enter       Suser Profiles         User Program Settings       Configuration         Wider Configuration       K Reference Configuration         K Lisences       System         System       K Lisences         System       K Lisences         Connections       Create	MULTIEYE SystemR	estorer	
Create       Import       Delete       Restore         Restore Files       Last Edit       12.03.2007 13:56:34         MEH36902742 2007-06-07 113627.mrf       07.06.2007 11:36:44         STEFAN 2007-06-07 113627.mrf       07.06.2007 11:36:44         MULTIEYE SystemRestorer       X         File description       X         Create 2007-07-04 17:35:51       X         System: STEFAN       Password       X         Protect file       Password       X         Wuser /related       User /related       X       Second page         Content       Configuration       X       Reference Configuration         K User Program Settings       X       Connections       X		5	
Restore Files       Last Edit         MEH36902742 2007-03-12 125617.mrf       12.03.2007 13:56:34         STEFAN 2007-06-07 113627.mrf       07.06.2007 11:36:44         MULTIEYE SystemRestorer       Image: Stepace of the system in the	Create Import Delete	Restore	
MULTIEYE SystemRestorer         File description         Create         Content         Protect file         Configuration         Re-Enter	Restore Files	1	Last Edit
STEFAN 2007-06-07 113627.mrf       07.06.2007 11:36:44         MULTIEYE SystemRestorer         File description         Created: 2007-07-04 17:35:51         System: STEFAN         Protect file         Protect file         Password         Re-Enter         Content         User / related         User Profiles         User Profiles         Configuration         Configuration         Configuration         Reference Comera Images         System         System         Connections	MEH36902742 2007-0	3-12 125617.mrf	12.03.2007 13:56:34
File description         Created: 2007-07-04 17:35:51         System: STEFAN         Protect file         Image: Step Protect file     <	STEFAN 2007-06-07 1	13627.mrf	07.06.2007 11:36:44
File description         Created: 2007-07-04 17:35:51         System: STEFAN         Protect file         Protect file         Password         Re-Enter         Content         User / related         Ver / related         Ver / ser Management         Ver Profiles         Ver Orngitation         Complete Configuration         Reference Comera Images         System         System         Connections	MULTIEYE SystemR	estorer	×
Created: 2007-07-04 17:35:51 System: STEFAN    Protect file  Password  Re-Enter  Content  Content  User / related  User / related  User Program Settings  Configuration  Reference Configuration  Reference Configuration  Reference Configuration  Reference Configuration  Reference Configuration  Create Create Cancel	File description		
Protect file Password Re-Enter Content User / related K User Program Settings Configuration Reference Comfear Configuration Reference Comera Images System K Licences Connections Create Cancel	Created: 2007-07-04 17:35:5 System: STEFAN	51	
Password Re-Enter Content Ver / related Ver	Protect file		
Re-Enter  Content  Suser / related  Continue Configuration  Configuration  Reference Camera Images  System  Connections  Create Cancel	Passv	vord	
Content Content User / related Kuser Management Kuser Program Settings Configuration K Complete Configuration K Reference Camera Images System K Licences K Connections Create Cancel	Re-E	nter	
Content Subser / related Subser / related Subser / rolles Configuration Reference Camera Images System Connections Create Cancel	Contract		
Image: Solid product	Content		
Image: State of the state o	Ser / Telated		
Image: Configuration       Image: Complete Configuration       Image: C	User Profiles		
Configuration Complete Configuration Reference Camera Images REVENCE Connections Create Cancel	1 S R S R S R S R S R S R S R S R S R S	tings	
Create Complete Configuration Create Cancel	📃 🔤 🗵 User Program Setl	cings.	
Image: Image System       Image: Image System       Image: Image System       Image System <td< td=""><td>🕞 😿 User Program Sett</td><td></td><td></td></td<>	🕞 😿 User Program Sett		
Er wige system F K Licences K Connections Create Cancel	Viser Program Set     Set	ration	
Create Cancel	Wer Program Set     Super Set     Super Set     Super Set	ration a Images	
Create Cancel	K User Program Sett      Grnfiguration      K Complete Configu      X Complete Configu      X System      System      K Licence      K Licence	ration a Images	
Create Cancel	Wer Program Sett      Grnfiguration      K Configuration      K Complete Configu      X Reference Camer.      System      K Licences      X Connections	ration a Images	
	Viser Program Sett      Songlete Configuration      K Complete Configu      K Reference Camere      System      K Licences      K Connections	ration a Images	

With the SystemRestorer all settings of a MULTIEYE system can be stored and - if needed - restored

Storing the program settings With a click onto [Create] the next window appears.

Here you can define the settings to be saved. The created file can be secured with a password.

Clicking onto [Create] the file (with the extension ".mrf") will be stored.

The standard file path is in the program directory of MULTIEYE in the subdirectory "RestoreFiles", but you can also choose a different path.

Due to system security you should save the file onto a floppy disk or CD and store this at a save place.

	×
MULTIEYE SystemRestorer	
Create Import Delete Restore	
Restore Files	Last Edit
MEH36902742 2007-03-12 125617.mrf	12.03.2007 13:56:34
STEFAN 2007-06-07 113627.mrf	07.06.2007 11:36:44
	04.07.2007 17:34:22
	XI
	×
MULTIEYE SystemRestorer	X
MULTIEYE SystemRestorer	×
MULTIEYE SystemRestorer	×
MULTIEYE SystemRestorer	X
MULTIEYE SystemRestorer	X
MULTIEYE SystemRestorer	r V V
MULTIEYE SystemRestorer	r Last Edit
MULTIEYE SystemRestorer	r V V
MULTIEYE SystemRestorer	r V V Last Edit 12.03.2007 13:56:34 07.06.2007 11:36:44
MULTIEYE SystemRestorer	r C C C C C C C C C C C C C C C C C C C
MULTIEYE SystemRestorer	r V Last Edit 12.03.2007 13:56:34 07.06.2007 11:36:44 04.07.2007 17:38:22
MULTIEYE SystemRestorer	r V Last Edit 12.03.2007 13:56:34 07.06.2007 11:36:44 04.07.2007 17:38:22
MULTIEYE SystemRestorer Create Import Delete Restore User Administrato Password Restore Files MEH36902742 2007-03-12 125617.mrf MEH36902742 2007-03-12 125617.mrf STEFAN 2007-06-07 113627.mrf STEFAN 2007-07-04 173805.mrf	r V Last Edit 12.03.2007 13:56:34 07.06.2007 11:36:44 04.07.2007 17:38:22
MULTIEYE SystemRestorer	r V Last Edit 12.03.2007 13:56:34 07.06.2007 11:36:44 04.07.2007 17:38:22
MULTIEYE SystemRestorer	Last Edit 12.03.2007 13:56:34 07.06.2007 11:36:44 04.07.2007 17:38:22
MULTIEYE SystemRestorer	r Last Edit 12.03.2007 13:56:34 07.06.2007 11:36:44 04.07.2007 17:38:22
MULTIEYE SystemRestorer	r Cast Edit 12.03.2007 13:56:34 07.06.2007 11:36:44 04.07.2007 17:38:22

The created restore file appears in the list, where also all other restore files are listed which are saved in the folder

"MULTIEYE-Programmordner\RestoreFiles\".

### Restoring the program settings:

The existing restorer files in the subdirectory "RestoreFiles" are displayed. If your files are not located there, click onto [Import]. The dialog for opening a file appears.

A restorer file can be deleted by highlighting the file and then pressing [Delete].

The MULTIEYE system will be restored after highlighting the file and pressing Restore

If the File is located in another directory or e.g. on an USB stick you can import the file by clicking [Import].

# 10.4 Hardware

Services Licenses Options	Hardware	
🖃 🥒 Dongles		
USB10085936		
E Setwork card		
MC-1676BEC5C0	)	
E WMAudio Devices		
SigmaTel Audio		
OLLs / Drivers		
MEyeECP.SYS (	(1.6.1.0)	
MEyeMP.SYS [1	1.U.8.8J	
WkWin32.dll (5.	10.0.500)	
MeyeA.dll (5.2.9	.bj .c)	
Meyev.dli (3.1.2	.2J 2.7)	
Meyea.sys (0.3.	3.7] ว.0)	
Mouch16 aug (5	2.0j 2.271	
► meii/20 dll (2.2.2	5.3.7) 54)	
libmmd dll (9.0.9	.04) 21	
mpcodec dll [1 []	103) 103)	-
Manufacturer		
Artec Technologies AG		
Mühlenstrasse 15-18		
49356 Diepholz		
🛐 support@multieye.de		
01805-278320		
(0)5441-599570		

The fourth feature -  $\Box$  Hardware - of the MULTIEYE-HYBRID services settings consists of a list of all installed video boards, dongles, and DLL / driver files.

The version numbers of the DLL and driver files are also displayed.

At the bottom of the window you will find information about the manufacturer of the system.



# 11 Remote Access of Videos via Network / ISDN / DSL and Internet

# 11.1 Remote access modes

MULTIEYE-HYBRID offers several modes for remote access:

- LiveViewer → poll I 64 live cameras from one or several stations and display the results on your Windows desktop
- Network Player → network-based remote access of recorded videos with the MultiPlayer (optional)
- MULTIEYE Remote Control (MRC) → remote control and configuration of MULTIEYE-HYBRID systems.
- Web Browser → browser based access of live cameras and recordings from one station

#### Important:

**Port accessibility:** Many networks are protected by firewalls. If you wish to use remote inquiries, the firewall should be configured to make the necessary IP ports transparent accessible.



The standard port is **Port 2004** (TCP) for LiveViewer, network Player, MULTIEYE Remote Control (MRC)

And for browser-based remote access **Port 2840** (TCP) for the integrated web server **Port 2841** (TCP) for the video server

MULTIEYE PC Kits come with LiveViewer software as standard feature.



The LiveViewer enables the call-up of single or several live cameras via every kind of TCP/IP based computer network (such as LAN, WAN via ISDN or broadband).

The LiveViewer is multifunctional, e.g. the pop-up window in case of an alarm.

# 11.2 The LiveViewer





LiveViewer windows are resizeable and can be placed at any location on the Windows desktop. Up to 64 LiveViewers from up to 10 different servers can be called up and displayed at the same time.

This is an especially interesting feature when working with a dual monitor system, for size and position of the windows can be stored and restored as wished.

In addition, bandwidth and image quality can be individually set for each LiveViewer; this is particularly advantageous with ISDN connections.

You can select either the MPEG-4 or the JPEG format for data transmission with the LiveViewer.

### 11.2.1 Installing and setting up LiveViewer

You can install LiveViewer on the remote (client) computer with the help of the MULTIEYE-HYBRID CD. After installation has been completed, LiveViewer can be called up via the Windows Start Menu  $\rightarrow$  MULTIEYE-HYBRID  $\rightarrow$  LiveViewer.

After start-up the window of the connection manager appears.



142

Wiewer IUL TIEYE-HY	BRID LiveViewe
MULTIETE Server	
Description	
Server 123	
Address	
197.100.188.256	6
Username	Password
User	********
LAN T1	Port 2004
384 KB - B 192 KB - Dual ISDN - ISDN - Modem	ireitbandverbindung
🌙 Save	🗙 Cancel

#### Global settings : General

All data needed for establishing a connection with a remote system is entered in this menu.

You can choose your own description, but the MULTIEYE-HYBRID server name or its IP address must be entered in the address field.

If the same user is to be logged in all the time, his user name and password can be entered here. The connection speed can likewise be configured here.

In case you wish to use a dial-up connection (ISDN, modem, VPN), you much select the option "Use RAS Connection". See <u>Setting up Dial up/RAS client</u> [173] for details.

With these symbols you can choose whether to target your search for available MULTIEYE-HYBRID servers or have it done automatically.

assword protection	Parameter h "Re-establishing last co	nnection"
$\alpha$	Password	
	Enable	Disable
guage glish		

By clicking on this symbol, you access the "General Settings" of the LiveViewer.

You can enter the password and select the language file here.

In addition, you decide here if all LiveViewer windows are always to be displayed in the foreground.

#### Global settings : Parameter



Establish a pre-defined connection:



After a double-click on a connection, first you have to login to the server with your password. Then the available cameras will be displayed in the tree structure. By double-clicking on one of the camera symbols, you open the LiveViewer window.

Such a window can be opened for every camera. Please note, though, that with a modem or ISDN connection, displaying several windows simultaneously can result in reduced frame rates.

# 11.2.2 Managing LiveViewer windows

The LiveViewer symbol is displayed in the Windows System Tray. You can access the options menu by clicking on the LiveViewer symbol with the right mouse-key.



Here you can access various LiveViewer functions:

- the login menu
- $_{\odot}$  display the active LiveViewer windows
- o display all LiveViewer windows
- o minimize all LiveViewer windows
- o automatically arrange all LiveViewer windows
- o close the LiveViewer program
### 11.2.3 Settings of a LiveViewer window



With click of the right mouse key on the LiveViewer window, you see the context menu.

windows which have been minimized can be maximized again by clicking

145

#### Minimize:

		with the right mouse-key on the symbol ២ in the Windows System Tray
		and selecting "Display all LiveViewers".
-	Minimize	This can also be done automatically with the pop-up function (see below).
<b>.</b>		Settings:
DE	Decenda	described in greater detail below
I	Zoom	Zoom:
	Arrange LiveViewer Positions	here you can zoom the LiveViewer window size between 33% and 200%
-	Copy to Cliphoard	Arrange LiveViewer positions:
wa .	Coby to Cilpboard	enables you to easily arrange LiveViewers on the desktop
	Sa <u>v</u> e to File	Save to File:
10	PTZ Control	Video can be copied to the clipboard or stored as a file
R	Display Infobar	PTZ Control:
	Maria all'i all'anna	Calls up the PTZ control box for remote operation of dome cameras
	Move all Liveviewer	Display Infobar:
0	Close this LiveViewer	turns the info-bar with the camera name, time and ips on or off
×	Close LiveViewer Program	Move all LiveViewers:
1.1		if this is selected, all LiveViewer windows can be moved as a group
		Close this LiveViewer:
		only the LiveViewer selected is ended
		Close program LiveViewer:

the complete LiveViewer program is closed

### 11.2.4 Settings video

146

In this menu you can determine the kind of connection as well as the targeted frame rate (ips) and the quality. The standard transmission format is MPEG 4 which provides a high image repetition rate at a low bandwidth.



JPEG: when this option is selected, single images are transferred with high image quality. This requires a higher network bandwidth though.

To reduce the demands placed on bandwidth, you can opt for the gray-scale mode.

Additionally you can optimize the videos by activating "Antialiasing" (the block artifacts of the JPEG / MPEG compression will be reduced).

With a click onto

a short cut can be created on the desktop for the actual video window.

#### 11.2.5 Report event

Camera Set	tings	
Video	Report Event	IO-Relays
Report eve	m Motion De entat ⊑⊽ only if ⊡ I/O Alarm	etection recording is enabled
Popup on ev	vent	
Sound on ev	vent	
		Copy Settings
Camera status	ner über IP	Copy Settings
Camera status	ver über IP	Copy Settings

The LiveViewer can report events with a pop-up window and/or a sound which are conveyed by MULTIEYE-HYBRID.

For this, activate the appropriate event to be surveyed and choose the action you wish (pop-up and/or sound).

With the pop-up function, a time can be set after which the LiveViewer window will automatically be minimized again.

With "Sound on event", you can select a WAV file which will be played in case of an event.



you can create a short cut on the By clicking desktop.

#### 11.2.6 I/O relay remote control settings

Video F	leport Event	10-Relays	
Alarm board	Assigned	Button Button Button Button Button Button	01 02 03 04 05 06 07 08
mera status 1 Lokaler Rechner übe 2 Administrator	er IP		Ľ

Relays can be activated remotely with the LiveViewer. Each LiveViewer can control up to eight different relays when this has been authorized in the settings of the MULTIEYE-HYBRID system.

147

Assignment of the individual activation buttons to the relays is done by way of Drag&Drop.

While holding down the left mouse key, drag the respective button to "Output". This establishes a link.

In LiveViewer a switch panel is displayed then. With a mouse click on the button, remote operation of the relays is possible. Upon successful keying, the activation button lights up in yellow.



148



#### 11.2.7 Opening LiveViewer display with a click of the mouse

Open the LiveViewer and, if not already done, activate a connection.

In the familiar way, call up on the server the cameras which you would like to have called up at the next start of the LiveViewer.

These can also be servers at different locations. The maximum number of simultaneously active servers is limited to 10.

Open the cameras and arrange them on your monitor as desired.

Click on this symbol for automatic call up of the desired cameras in the future and confirm the dialog in order to have a link generated on your desktop.







### 11.3 The HYBRID network player (MultiPlayer)

When MULTIEYE-HYBRID is utilized for video recording with several systems, accessing recorded video data can quickly prove to be quite expensive and time-consuming, dependent on the number of MULTIEYE servers.

Accordingly, Network Player was developed to enable the time-saving and central evaluation of the video data of all servers.

The set-up of Network Player is identical to that of the MULTIEYE-HYBRID Player.

In contrast to the local MULTIEYE-HYBRID Player, though, it cannot provide synchronized playback, although it can offer the simultaneous playback of several videos.



#### Important:

Remote access is only possible if the server involved has been licensed for remote access.

#### 11.3.1 Installation of the network player

You can install the network player on the remote (client) computer with help of the MULTIEYE-HYBRID-CD.

When the program is started, the window of the Connection Manager – which was explained in the previous Chapter - is displayed.

150

#### 11.4 **MULTIEYE Remote Control (MRC)**

MRC is the tool for remote configuration of MULTIEYE servers. This license is included in the base package. After the installation set up a connection to the server you want to configure. When you have established the connection you can configure the server as you are used to do it.

With the installation CD, you can install the MULTIEYE Remote Control on a computer system for remote surveillance and configuration.

Start the program "MULTIEYE Remote Control" in the program menu.

In the dialog box, select a MULTIEYE-HYBRID server. The procedure for establishing a connection is the same as



erver Connect	Connect to
Server	
	6
Connection to	Using
Localhost	Direct
Lokaler Rechner über IP	Metwork

After successful connection, the MultiScreen of the selected system appears.

You now have the possibility of remote configuration of the MULTIEYE-HYBRID system.



-

-



#### Attention:

To re-access MultiScreen on your own system, simply go through the same registration procedure via **Localhost Direct** 

### 11.5 Web based remote access

Web and video servers are integrated into MULTIEYE-HYBRID. With these servers, web-based remote access of live cameras and recorded videos is possible. For security reasons, both servers are de-activated at the time of the first installation. If you wish to use these web and video servers, you must first activate them.

The web server is responsible for accessing HTML pages. Live images and recorded videos are accessed with the Video server.

Camera inquiry is called up via the HTTP protocol in the browser.

Sample syntax: http://[IP address or computer name]:2840

2840 stands for the IP-port assigned to the web server.

**Example:** http://127.0.0.1:2840

After starting the internet browser, entering the address of the recorder to be polled, and logging in according to user administration, you will access the LiveCam starting page.

#### 11.5.1 LiveCam access of single cameras

You can individually access and display live cameras from a station. Video size, frame rate and image quality can also be configured. Live image display will be updated automatically.

If the polled camera is a PTZ camera and its protocol is supported by the MULTIEYE-HYBRID recorder, this can be remote controlled as well.



#### 11.5.2 Access multiple cameras

The Multiview display provides the images of those cameras which have been licensed and activated as described in the "Advanced kernel settings: Remote access" in the submenu "Video server" in the "Services" menu of MULTIEYE-HYBRID.

Further, you can set the image actualizing rate and image quality. By modifying image quality, you can adapt the data volume which has to be transferred.

SIEFAN		
11:17:10	Multiview	
		Artec Technologies AG
Refresh 10 Seconds ▼ Quality 60 kbyte ▼ Camera 13	No or more than 16 cameras selected	
🗖 Lange Strasse		
Camera 15		
🗖 Camera 05		
🗔 Camera 06		
Camera 07		
🗖 Küche		
ок		
Live Cameras		
Main		
STEFAN		
11.21.38	Multiview	
	MULTINEW	
		Artec Technologies AG
Refresh 10 Seconds 👤 Quality 60 kbyte 👤	[01] Camera 13	[02] Lange Strasse
<b>G</b> c 10		
IM Lamera I3		
IM Lange Strasse		
Camera 15		
I Kijoho		
L. INCOME		
ОК		
Live Camerae		
Live Gameras		
Main		1071 O-mark 07
	[Uo] Camera Io	[U/] camera u/

#### 11.5.3 Menu

By clicking on [Main] , you gain access to the system settings for live remote access and configuration.

The settings and reports are similar to those in the settings for MultiScreen and in the MULTIEYE-HYBRID services.

stefan 11:25:50	System	
Options		
Refresh	Start Services Stop Se	ervices
Licenses	Data Logging Services	
System	Data Source	2.0.2.7
	Data Writer	2.0.2.7
Log Files	Uata Analyzer	2.0.2.7
Status Report	IP-Cam Source	2027
10	Base Services	2.0.2.1
IU	RingStorage	2.0.2.7
Live Cameras	Motion Detector	2.0.2.7
_	Videowriter	2.0.2.7
Player	Backup Modul	2.0.2.7
	MotionSearch Modul	2.0.2.7
	Remote Services	
	Remote Server	2.0.2.7
	IO External	2.0.2.7
	🤪 Messenger	

Messenger Modul

2.0.2.7

### 11.5.4 Playback

After a click on Player and entry of the camera, date and time, playback is activated. Here you can also set the desired quality level as well. A playlist of videos which you can call up by double-clicking the mouse is displayed.



By clicking on this symbol image. by clicking on take a snap shot: this can be stored or printed by right clicking on the image.



This image shows an enlarged section of the image above.



# **12** Special features

### 12.1 LiveUpdate



With the program "LiveUpdater" and an internet connection, the MULTIEYE-HYBRID recorder can be updated online. All program updates, patches etc. can easily be installed in this way. The LiveUpdater checks which version numbers your installed modules have, and which program enhancements or updates are available. After implementation of the updates, the version number(s) will be brought up to date in your directory.



Via the button [Search for updates] you can determine whether and for which modules updates are available and/or necessary.

A click on the button [Update now] will carry out the update.

First of all, the necessary files are loaded onto your local hard drive. The actual update process can only be carried out after you have made two confirmations.

This requires that the modules are stopped and re-started.

## 12.2 Keyboard Short-Cuts

With direct keyboard entries (short-cuts), some functions can be called up directly.

Short cut	Function
CTRL-D	Remove all cameras from the desktop
CTRL-L	Call up of a direct login
CTRL-T	Call up of the Direct Translator

# 12.3 Direct Translator



With the Direct Translator, new languages can be created or the entire MULTIEYE-HYBRID dialog changed.

We will be happy to send you documentation for operation of the Direct Translator upon request.

### 12.4 Watermark

From Version 2.0.0.3 on, all JPEG images exported by MULTIEYE-HYBRID are protected by watermarks. With these watermarks the authenticity of an image can be subsequently verified. This verification is performed by the program PIC-Validator which can be found in the directory "\setupdata\Extras" on the MULTIEYE-HYBRID CD.



The program PIC Validator checks the JPEG file.

If this was created by a MULTIEYE-HYBRID system and has not been subsequently manipulated, image authenticity is indicated by "VALID".

If the image was not created by a MULTIEYE-HYBRID system or has been subsequently manipulated, this is indicated by "INVALID".

### 12.5 Customizing

158

The user interfaces, i.e. the GUIs of MULTIEYE-HYBRID can be adapted to your specific customer needs and provided with your own individual logos and corporate identity. For example, in case of camera outage your own service telephone number can be automatically displayed in the camera-outage window.

Inappropriate changes to the original images can, however, lead to malfunctions of MULTIEYE-HYBRID, so please contact artec technologies AG before making any such changes.

No changes to the brand names "MULTIEYE", "Quadplex", and "MULTIEYE-HYBRID" may be made without the consent of artec technologies AG.





### **12.6** Telephone support and information from the internet

With HYBRID DVR you receive not only a professional DVR recorder but also professional support if something does not work out as you expected. Our support team consists of competent and trained coworkers who will stand by you in the search for speedy and secure solutions to your problem.

Please understand that troubleshooting and solving problems over the phone mean new challenges each and every time for our support staff members. You can make a considerable contribution to the quick solution of your problem if you clearly describe your situation and perhaps can convey to us the steps which you took before the malfunction occurred.

Experience has shown that important clues will sometimes not be mentioned since the customer considers them unimportant or because he fears he has done something wrong which has perhaps damaged the system. You cannot destroy the MULTIEYE-HYBRID system by incorrectly configuring the recorder! So, please describe exactly what led to the malfunction.



# **13** Example applications



# 13.1 How to integrate a MULTIEYE-Recorder into EBÜS

In the followed chapters is outlined how to integrate a MULTIEYE-Recorder into the software

### EBÜS - Das Einheitliche BildÜbertragungsSystem

from Accellence Technologies.

160

### 13.1.1 Interaction of the MULTIEYE-Recorder with EBÜS

#### The process of an alarm event and how the different components interact.

- 1. The MULTIEYE-Recorder generates an alarm-image and stores this into a predefined folder. Similar the software starts the external program AccFTPUploader installed on the same machine with the parameters of the just generated image.
- 2. The AccFTPUploader will be started and the software sends the stored alarm-image to a defined FTP-server. Circa 12 second after finishing the job the AccFTPUploader will be terminated.
- 3. The Alarm-server is permanently checking the folders where the FTP-server stores the alarm-images.
- 4. If the FTP-server has received an alarm-image, the Alarm-server generates a message to all connected EBÜS-Clients. One of these clients checks out the this alarm-message and the generated image is loaded from the corresponding folder and shown in the preview of the client.
- 5. At least the client is switched to the live-stream of the recorder.





#### Attention:

The Alarm-server and the FTP-server have to be installed on the same PC, because the Alarm-server can only monitor local folders.



#### Hint:

It's possible to run the combination Alarm-server+FTP-server: I. on a separate PC

2. on a EBÜS-client somewhere in the network.

162

### 13.1.2 Installation and configuration of the ACC FTP-Uploader

The AccFTPUploader is a FTP-client which can be operated by interface and by command-interpreter.

First you have to unpack the archive into an folder of your choice on the MULTIEYE-Recorder,

e.g. "C:\\Program Files\AccFTPUploader\".

To install the AccFTPUploader correctly on the MULTIEYE-Recorder, the FTP-client has to be configured.

You have to start the program, so that the profile for command-interpreter of the program can be generated. Here you have to enter your login data into the shown fields.



After entering your login data you should test by clicking on the button [Connect], if the access is correctly configured. On the FTP-server the corresponding folder to the assigned image-resource has to exist! If the folder doesn't exist it has to be created e.g. with the FTP-client. (for example: "//root/artec/")

If the connection is successful the button is shown in green and you can terminate the program. The configuration-file with the login data for command line execution is saved in the file "AccFTPUploader.cfg" when the program is terminated.



164

### 13.1.3 Configuring the alarm parameters

The next step is to configure the MULTIEYE-Client, so that in case of an alarm-event an external program is used. When this occurs the AccFTPUploader is used to send an alarm-image to the FTP-Server which is monitored by the Alarm-server.

- 1. Start the configuration of the recorder and chose the entry [Alarm Messages]
  - If the entry is not visible, just click on the entry [Advanced] to show the hidden entries.

Alarm Meldungen	AUFNAHME AKTIV
Standard     Standard     Allgemeine Einstellungen     Bildeinstellungen     Videoeinstellungen	Meldung übermitteln bei         II: Alarmboard         Kontakt-Alarmauslösung         Konne>         Videousfall         II: [01] Camera 01         Wir bei aktivem Timer mit bewegungserkannter Aufzeichnung senden         Konne>
Timer Ringspeicher	Statusbericht Statusbericht per Mail Jeden Knone> um 00:00:00
Erweitert     Video / Webserver     Alarm Meldungen	Optionen für Alammeldungen         via E-Mail         via ICQ Pager Botschaft         via Windows Nachrichtendienst         via Windows Nachrichtendienst         via externem Programm         Automatisch inwählen         Ør Verbindung tunnen         Benutzername         Passwort         Pause zwischen Benachrichtigung         Minuten
Ubernehmen           Ubernehmen           OK	Report bei kritischen System/ehlern senden an Empfänger

2. Next step is to select the events, when an alarm images has to be sent.

IO Alarmboard		Kontakt-Alarmauslösung
[01] Camera 01		Videousfall
[01] Camera 01		Bewegungserkennung
— 🔲 Nur bei aktivem Timer mi	t bewegungs	- erkannter Aufzeichnung senden
Start von MULTIEYE		Ereionis

3. The next step is to call the external program AccFTPUploader if an alarm event occurs

1	2 3
ptionen für Alammeldungen	E-Mail   ICQ   Nachrichtendienst Externer Programm
<ul> <li>via ICQ Pager Botschaft</li> <li>via Windows Nachrichtendienst</li> <li>via externem Programm</li> </ul>	Programm
Verbindung trennen Benutzername	Platzhalter der Parameterübergabe: <camera> Kammernummer <event> Ereignistyp: None / Motion / Alarm / Cameraloss/</event></camera>
Pause zwischen Benachrichtigung	CONTURE> absoluter Pfad zum Alarmbild

Enable "via external program"



Enter the absolute program folder to the AccFTPUploader or choose the file by the file explorer [...]

Example: "C:\Program Files\AccFTPUploader\AccFTPUploader.exe"



The parameters to control the AccFTPUploader have to be entered here.

In this case a string is sent, which is a combination of the two programs.

Because of the predefined configuration of AccFTPUploader it's only required to set the additional parameters which are defined as followed:

[FTP-Uploader-Variable]="Text+[MULTIEYE-Variable]"

- Alarm image:
- alarmimg="<PICTURE>"
- Message:

msg="Alarmierung MULTIEYE \r\nKamera=<CAMERA>\r\nEvent=<EVENT>"

• FTP-path: ftppath="/artec/"

#### In this example:

```
alarmimg=<sup>"</sup><PICTURE>" msg="Alarmierung
MULTIEYE\r\nKamera=<CAMERA>\r\nEvent=<EVENT>" ftppath="/artec/"
```



# 14 Technical appendix

### 14.1 Network connections

In the following chapters, the most common kinds of network connections are briefly explained in the context of MULTIEYE.

IULTIEYE-H	IYBRID	LiveViewe
MULTIEYE Se	erver	
Description		
Itest		
Address		
MEH-demo		 61 🥌
, Username	Passwor	1
demo		
		Port 2004
LAN TI - 🖂	Use RAS Conn	ection
DSL -		
384 KB -	Breitbandverbindu	ng
192 KB -		
Dual ISDN -		
ISDN -		
Modem - I		
N o		X Cancel

The input mask of the connection configuration is identical in all modules of the MULTIEYE-HYBRID system which are compatible to a network. Therefore, we describe it in more detail in this chapter.

A "Connection Name" can be freely chosen but should contain a clear, expressive reference to the associated MULTIEYE-HYBRID system.

In the following sub-chapters, we will show you what you should enter in the field "Address", as this depends upon the kind of network connection used.

If the same user always logs in, then that user's name and password can be entered here.

The connection speed can be defined here.

The function "Use RAS Connection" will be described after the next page.

#### 14.1.1 Connection via LAN

The simplest form of network connection is that of the local area network (LAN):



In such a case, both the MULTIEYE-HYBRID recorder (server) as well as the remote station (client) are permanently connected via a broadband network structure.

Since, as a rule, a Domain Name Service (DNS) exists in this kind of network, the name of the MULTIEYE-HYBRID system can be entered in the line "Address" for the connection configuration. If, contrary to expectations, this should not function, please enter the IP address instead.

#### 14.1.2 Connection via DSL

168

In a MULTIEYE-HYBRID configuration, DSL connections are similar to LAN connections. However, such connections require DSL-routers, and the variety of router models available on the market is so great that it is impossible to describe the configuration of individual routers here. At the time of purchase, you should pay attention to the functionality described below.



Since this connection is established via the Internet, we recommend using routers which contain built-in firewalls. Further, the router should be able to forward inquiries (port forwarding) coming in on the MULTIEYE-HYBRID page, so that MULTIEYE-HYBRID can respond to these correctly.

In case the DSL-connection has no static IP address (for example, T-DSL IP addresses change at least every 24 hours), a dynamic DNS service such as e.g. DynDNS (<u>www.dyndns.org</u>) can be utilized, which, as a rule, is free of charge. Details about this can be found in the online documentation at <u>www.multieye.de</u>. Accordingly, support by the DynDNS service via the router would be ideal.

The static IP address or, alternatively, the DynDNS-name (e.g. mycompany.dyndns.org) should be entered into the line "Address" of the connection configuration at the client's end.

#### 14.1.3 Connection via ISDN/MODEM

For a client to poll images from a MULTIEYE-HYBRID recorder (server) via ISDN/modem (GSM as well), both the client as well as the server must be set up for this dial-up/RAS (Remote Access Services) connection. Since these are configured differently, server and client set-up will be explained in the following chapters, in both cases using a Windows XP system as an example.



The description assumes that an ISDN card or a modem - in other words a functional dial-up/RAS device - is connected, set up and serviceable.



#### Attention:

Please note that dialing in is only possible when both server and client use the same kind of device. If, for example, the server is only set up for ISDN, then connection with a client which is only equipped with a (GSM) modem will not be possible.

#### 14.1.3.1 Setting up a Dial-up / RAS Server

Via "Start  $\rightarrow$  Control Panel  $\rightarrow$  Network Connections" you arrive in the section where you can configure a dial-up/RAS connection.





llse	
	You can specify the users who can connect to this computer.
	Select the check box next to each user who should be allowed a connection to this computer. Note that other factors, such as a disabled user account, may affect a user's ability to connect.
	ASPNET (ASP.NET Machine Account)  Guest  HelpAssistant (Remote Desktop Help Assistant Account)  MultieyeRAS (MultieyeRAS)  SUPPORT 388945a0 (CN=Microsoft Corporation,L=Redmond,S=Washingt
	Add Remove Properties

Choose the user or add a new user who is permitted to dial into the system and then [Next]



#### Important:

Be sure to make a note of the user name(s) and password(s), as this information is essential to set up the client station!



The basic component for transmission via network is the internet protocol (TCP/IP). This must be configured now.

To do this, mark the entry "Internet Protocol (TCP/IP)" and then click on [Properties]

For security reasons, the option "Allow calling computer to specify its own IP address" should be de-activated.

Because, as a rule, no so-called DHCP-server is available, "Specify TCP/IP addresses" must be activated and an address range such as "192.168.28.1" to "192.168.28.100" entered.

Please make a note of the first address (192.168.28.1), as this will be needed when setting up the client!

The last option should be de-activated, because the client, as a basic rule, should be assigned its valid IP address from the selected server.

New Connection Wizard		
	Completing the New Connection Wizard You have successfully completed the steps needed to create the following connection: Incoming Connections	Now you have done all settings for the server.
	The connection will be saved in the Network Connections folder.	Please click on [Finish] to conclude.
	To create the connection and close this wizard, click Finish.	
	< <u>B</u> ack Finish Cancel	

From now on, the system will be waiting for a call.

### 14.1.3.2 Setting up Dial up/RAS client

erver Connect	
Server Connection Name Remote Connection to Surveillance Remote Connection to Surveillance Adress Port 192.168.1.5 2004 Username Password LAN T1 - DSL - 512 KB - 384 KB - 192 KB - 192 KB - 192 KB - Save Cancel	<ul> <li>The IP address just as it was defined when configuring the server (for example 192.168.28.1), has to be entered here ("Address") as well.</li> <li>The kind of connection should be selected corresponding to the device used (ISDN or Modem).</li> <li>So that the connection manager will automatically dial in the option "Use RAS Connection" must be activated.</li> <li>By clicking on this symbol you arrive in the "Network Connection Wizard".</li> </ul>
Connection Wizard  ype of Connection Select the type of the connection.  Dial-up to private network. Connect using my phone line (modem or ISDN).  Connect to a private network through the Internet. Create a Virtual Private Network (VPN) connection or tunnel through the inter Connect directly to another computer. Connect using my serial, parallel, or infrared port.  Connect through my broadband connection.	Image: Select ,,Dial-up to private network" here.         Select ,,Dial-up to private network" here.         Then click on [Next]         In the next window select the device here over which the connection to the server shall be created. Then click on [Next]
Connection Wizard      Connection Wizard      More Number to Dial      What is the phone number you will use to make this connection?      Type the phone number below.      Phone number:     05441975369      You might need to include a "1" or the area code, or both. If you are not surre you need the extra numbers, dial the phone number on your telephone. If you hear a modem sound, the number dialed is correct.	In the next step, enter the call number of the server with which you intend to establish the connection.
	Then click on [Next]



Now enter a name for the connection here.

This name should refer to the geographic location of the server in order to avoid confusion.

Click on [Finish]

The connection created in this way will be displayed first in the connection configuration after the "Refresh" symbol (

Server			
Connection Name			
remote ras connec	ction		
Adress			Port
192.168.28.3			2004
Username		Password	
watch-1		******	
LAN T1 - DSL - 512 KB - 384 KB - 192 KB - 192 KB - Dual ISDN - ISDN - ISDN -	Vs 200 artec	e RAS Conn I 🗐 📑	z
Save			ancel

With this symbol you can view and/or edit the properties of the dial-up/RAS-connection.

After saving these, you again arrive in the main mask of the connection manager.

Server Connect Connect to
Server
Connection to Using
🖓 Localhost 🔶 Direct
localnet 🕜 Network
remote connect to Surv
Connect X Cancel
Server Connect Connect to
Remote Access Service
Windows Username       Windows Password

If you click here on the connection just created, the protocol window for the dial-up/RAS dial-in will appear.

Please enter on the lines "Windows username" and "Windows password" the user's data which you entered when configuring the dial-up/RAS server.

Don't forget to save this so that the data must not be re-entered for every dial-up.

After you click on [Dial], the connection will be initiated, as will be shown in the middle field of this window.

After a successful dial-up, come back to the connection manager where the available cameras of the selected server will now be displayed.

### 14.2 Integrating MULTIEYE-HYBRID cameras into your own web sites

Of course, cameras which are connected to MULTIEYE-HYBRID can be integrated into you own web sites. The following code pages provide an example of such integration.

#### Example HTML Code:

```
<HTML>
<HEAD>
<Script Language="JavaScript">
var picready = 1;
var Opera = 0;
var timerID = 0;
var piccounter = 0;
var somDate = new Date();
var lastpicrequest = 0;
var lrtime = 3000;
x=navigator.userAgent.indexOf("Opera");
if(x>0)Opera=1;
// This is the Callback for the Timer
function UpdateTimer() {
 if(timerID) {
 clearTimeout(timerID);
 timerID=0;
 timerID = setTimeout("UpdateTimer()", 300);
 if((picready==1)||(Opera==1)) {
 neuladen();
 // Emergency Push
 piccounter++;
 maxWert = 100;
 if(lrtime>100)maxWert=100;
 if(lrtime>400)maxWert=50;
 if(lrtime>800)maxWert=10;
 if(lrtime>1800)maxWert=5;
 if(lrtime>2800)maxWert=4;
 if(lrtime>5000)maxWert=2;
 if(lrtime>8000)maxWert=1;
 if(piccounter>maxWert) {
 piccounter=0;
 picready=1;
 }
}
function neuladen() {
 picready=0;
 var s=document.images[0].src;
 // we must cut the &rnd parameter of the string
 // this is only required for netscape & co
iPos=s.indexOf("&rnd=");
 if (iPos>0)
 s=s.substring(0,iPos);
 iPos=s.indexOf("cachebust=");
 if (iPos>0) {
 iPos+=10;
 iBustLen=s.length-(s.length-iPos);
 snew=s.substring(0, iBustLen);
 snew=snew+Math.round((Math.random()*100000));
 } else {
 snew=s;
 }
 // we add a random id to the img url
 // only required for netscape & co
 snew=snew+"&rnd="+Math.round((Math.random()*100000));
 document.images[0].src=snew;
 piccounter=0;
}
</Script>
</HEAD>
<BODY OnLoad="UpdateTimer()">
<img id="img" name="img" width=320 height=240
 src="http://192.168.100.107/images1sif?fmt=sif&delay=10">
</BODY>
</HTML>
```

### 14.3 Example of notification via an external program

🕪 🔲 via E-Mail	E-Mail	ICQ	Nachrichtendienst	Externes Programm
via ICQ Pager Botschaft       via Windows Nachrichtendienst       via externem Programm	Pro	gramm[ ameter[	C:\Temp\Hybrid\Alarr <camera> <event:< td=""><td>n.bat &gt; "<picture>" "c:\Temp\Hvbrid</picture></td></event:<></camera>	n.bat > " <picture>" "c:\Temp\Hvbrid</picture>
□ A 1 12 1 2 291	10000	CONTRACTOR L		E STATE

```
@REM 4 Parameter erforderlich, z.B.: <CAMERA> <EVENT> "<PICTURE>" "c:\Temp\Hybrid\"
@Echo off
if not exist %3 goto ende
copy %3 %4image%1_%2.jpg
del %3
:ende
Echo %date% %time% %2 >> %4Event%1.log
```

see also: How to integrate a MULTIEYE-Recorder into EBÜS 1607

### 14.4 The hosts file

The "hosts" file is a kind of DNS file with which a specific computer performs a name resolution, i.e., generates an IP address from out of a name.

This file is located in the operating system's directory.

In Windows XP:

c:\windows\system32\drivers\etc\

The "hosts" file can be opened with the editor contained in the operating system.

#### Structure of the file:

```
Copyright (c) 1993-1999 Microsoft Corp.
#
Dies ist eine HOSTS-Beispieldatei, die von Microsoft TCP/IP
für Windows 2000 verwendet wird.
Diese Datei enthält die Zuordnungen der IP-Adressen zu Hostnamen.
Jeder Eintrag muss in einer eigenen Zeile stehen. Die IP-
Adresse sollte in der ersten Spalte gefolgt vom zugehörigen
Hostnamen stehen.
Die IP-Adresse und der Hostname müssen durch mindestens ein
Leerzeichen getrennt sein.
Zusätzliche Kommentare (so wie in dieser Datei) können in
einzelnen Zeilen oder hinter dem Computernamen eingefügt werden,
aber müssen mit dem Zeichen '#' eingegeben werden.
#
 Zum Beispiel:
#
 102.54.94.97
 # Quellserver
#
 rhino.acme.com
 x.acme.com
#
 38.25.63.10
 \# \tilde{x}-Clienthost
127.0.0.1
 localhost
192.168.1.254 router
192.168.1.25
 MULTIEYE-HYBRID-SERVER
192.168.1.26
 MULTIEYE-HYBRID-ANZEIGECLIENT
```

The entry "localhost" must never be altered!

When saving, pay attention that no extension is added to the file (for example, "hosts.txt" would be incorrect), otherwise it cannot be recognized by the operating system then.

Pay attention to upper and lower case. The entries are case-sensitive, i.e. a distinction is made between capital and lower case letters.

### 14.5 Userrights in Windows XP Professional

Simple user rights are assigned when a new user is created in Windows XP Professional. You can choose between Administrator and User rights.

Significantly more advanced user-rights settings can, however, be set in Windows XP Professional's "Computer Management".



The possible assignments, including their rights and permissions, are listed in "Local Users and Groups" under "Groups". MULTIEYE-HYBRID users should be given the group rights of an Administrator or Power Users. Using the Power User rights makes the most sense.



All users are listed under "Local Users and Groups" in the folder "Users". Here you can find, in addition to the Administrator and built-in account users, all users who were established at the time the operating system was set up. A double-click on the user's icon opens up that user's properties folder.

iba Prop	erties		? 🔀
General	Member Of	Profile	
S	iba		
Full nar	ne:		
Descrip	otion:		
Use	r must change r cannot char sword never e ount is disable	e password at next logon ige password expires ed	
Acc	ount is locked	l out	
		OK Cancel	Apply

Under the tab [General] you can find out, e.g., if a user must use a password at the next login.

iba Properties General Member Of Profile	? 🔀	
Member of: Administrators Add Remove OK Car	cel Apply.	Under the tab [Member of] you can see which group the user belongs to; in this example he is a member of the "Administrators" group and as such, has full access to the operating system That is not always desirable, though, as such a user can basically change any and all security settings if he wishes. To change rights, click on [Add]

Select Groups	? 🔀		
Select this object type:			
Groups	Object Types		
From this location:			
TEST	Locations	Now continue with	
Enter the object names to select (exan	iples):	[Advanced]	
	Check Names		
Advanced	OK Cancel		
Groups     Groups        Groups     Object Types     Tom this location:     TEST     Locations     Common Queries     Name:   Starts with      Continue on by clicking on     Image (RDN)        In Folder     OK     Cancel	elect Groups	<u> </u>	
---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------	------------------------------------	--------------	----------------------------
Trom this location: TEST Locations Common Queries Name: Starts with Description: Starts with Disabled accounts Non expiring password Days since last logon: Continue on by clicking on [Find now] Continue on by clicking on [Find now]	Select this object type: Groups	Object Types	
TEST       Locations         Common Queries       Columns         Name:       Starts with          Description:       Starts with          Disabled accounts       Stop         Non expiring password       Stop         Days since last logon:       Image: Cancel         Name (RDN)       In Folder	From this location:		
Common Queries   Name:   Starts with    Description:   Starts with    Disabled accounts   Non expiring password   Days since last logon:   OK   Cancel   Hame (RDN) In Folder	TEST	Locations	
Name:       Starts with          Description:       Starts with          Disabled accounts       Find Now         Non expiring password       Stop         Days since last logon:       Image: Continue on by clicking on [Find now]         OK       Cancel         Name:       Stop         Image: RDN)       In Folder	Common Queries		
Description: Starts with    Disabled accounts Stop   Non expiring password Stop   Days since last logon:    OK Cancel   Rame (RDN) In Folder	Name: Starts with 👻	Columns	
Disabled accounts Non expiring password Days since last logon: Continue on by clicking on [Find now]	Description: Starts with 👻	Find Now	
Non expiring password       Solution       Continue on by clicking or [Find now]         OK       Cancel         ame (RDN)       In Folder	Disabled accounts	Stop	
Days since last logon: Continue on by clicking or [Find now]	Non expiring password		
ame (RDN) In Folder	Days since last logon:		Continue on by clicking or
OK Cancel			[Find now]
lame (RDN) In Folder			
Iame (RDN) In Folder			
	Name (RDN) In Folder		

Select Groups	? 🛛
Select this object type:	
Groups	Object Types
From this location:	
TEST	Locations
Common Queries	
Name: Starts with	Columns
Description: Starts with 👻	Find Now
Disabled accounts	Stop
Non expiring password	
Days since last logon.	<b>X</b>
	OK Cancel
Name (RDN) In Folder	
Administrators TEST	
Backup Oper TEST	
Cluests TEST	
Webpervices IEST	
Power Liese TEST	
Bemote Desk TEST	
Replicator TEST	
WUsers TEST	
Destination Trainform	

All possible user groups are displayed now.

Select Groups	? 🛛	
Select this object type:		
Groups	Object Types	
From this location:		
TEST	Locations	
Common Queries		
Name: Starts with v	Columns	
Description: Starts with 👻	Find Now	
Disabled accounts	Stop	
Non expiring password		By marking the desired user group and clicking
Description (1991)		on
Days since last logon:		
		you assign the desired rights to the user
Name (RDN) In Folder		
Administrators TEST		
22 Backup Oper TEST		
Cuests TEST		
WHelpServices IEST		
Retwork Confi TEST		
Power Users TEST		
Papelioster TECT		
A TEST		
Lis Users IEBT		

Object Types
Object Types
Locations
Locations
Check Names

By marking the desired user group and clicking on

#### [OK]

you assign the desired rights to the user.

a Properties		? 🔀
General Member Of	Profile	
Member of:		
Administrators		
Add	Remove	
	UK Cancel	

In this window you can see the rights of the user.

Delete any rights which should not be assigned to this user by marking the appropriate entry and clicking on [Remove]

## 14.6 Automatic Windows user login

If MULTIEYE should automatically startup after the booting computer you have to enable an automatic login without entering a password of a user (only Windows XP Professional!).



Run	<u> </u>
	Type the name of a program, folder, document, or Internet resource, and Windows will open it for you.
Open:	control userpasswords2
	OK Cancel Browse

In next window deactivate ? 🗙 **User Accounts** Users Advanced "Users must enter a user name and password to use Use the list below to grant or deny users access to your this computer" 1 computer, and to change passwords and other settings. Users must enter a user name and password to use this computer. by removing the mark. Users for this computer: User Name Group Apply the settings with [OK] Administrator Administrators Guest Giba Users Enter now user and password to be automatically Guests Administrators logged on the system. With the next boot the systems directly starts up Add... <u>R</u>emove Properties without a user login request. Password for Administrator To change the password for Administrator, click Reset Password. Reset Password... OK Cancel Apply

### 14.7 Video image formats in CCTV technology

Abbreviation	Resolution	Englisch	Deutsch
DI	720 × 576		
4CIF	768 x 576	Frame	Vollbild
2CIF	768 × 288	Field	Halbbild
CIF	384 × 288		
QCIF	192 x 144		



# 15 Technical data

### 15.1 Technical data of the MULTIEYE video boards

Video inputs	$4 \times BNC$ 1,0 Vss, 75 Ohm termination jumper (can be turned off), extendable up to 16 channels
Video norm	PAL, NTSC
Network (IP) camera inputs	Integration of common IP cameras such as AXIS, Mobotix, Pixord, etc., which support the JPEG or MJPEG formats
Cameras per system	Up to 32: analog only, IP only, or a mixture of analog and IP
Monitor interface	Cinch, live display of analog cameras, switch and alarm displays can be programmed
PTZ camera control	Yes (serial and IP)
Audio input	${\sf I}$ – 4 depending on the video board, synchronized recording with TLAV technology
Resolution in pixels	384 X 288 or 768 X 578 (PAL example), adjustable for each camera
Alarm inputs/relays	16 Alarm In, 4 Alarm out through 2 x EX-I/O Boards, for all model types 16xxx
Compression process	MJPEG selectable in 4 steps
Live monitoring	6 fixed and 4 freely programmable MultiScreens with 1 – 32 fold display
Real time display	All boards include connectors for "Real-Time Display Boards"
Text Overlay	Time and date formats, free text: 20 characters, fields freely positional, fonts, font sizes, and highlight colors are selectable
Motion detection	Matrix with 2304 single fields, unlimited fields scaleable
Weekly timer	Adjustable for each camera, continuous, motion detection, off
Playback	I – 4 channel playback, simultaneous or synchronized
Search criteria	Date, time, motion activity, alarm, video list
Video loss detection	Optical, acoustical and via alarm e-mail
Video Export	Yes, in the AVI Format, single files or lists
Snap Shots + Export	BMP or JPEG
Recording rate	Up to 200 ips
Ring storage management	Storage capacity and drive individually adjustable for each camera
Password protection	Tri-level: administrator, user, guest
Video remote transmission	Live Viewer: bandwidth, pop-up and acoustic alarms adjustable, network Player (optional)
Functional reliability	Video board Watchdog, crash recovery, auto-record, mailer
Alarm Messenger	per Email, ICQ, Windows NetSend with/without alarm image
Log book	Log book – Directory + log display
Software update	per LiveUpdater via the Internet
Menu languages	Ger, GB/USA, further languages individually editable with the Direct Translator or through downloads

Translator	Integrated editor for adapting the menu and editing new dialogs and languages
PC system	Types 425 and 1625 : P3/AMD CPUs from 1,2GHz, with Multiboard operation from 1,6 GHz
Requirements	Types 1650 and 16100 : Intel P4 from 2 GHz, Intel based mainboard chipsets, graphic card with min 32 MB , RAM 256MB
Operating system requirements	Windows 2000 or XP

## 15.2 CE compliance

188

These products have been tested and found to comply with the requirements of the European Council Directives 89/336/EEC: EN 55022: 1998/A1:2000 Class A EN 50130-4: 1995/A1:1998



# 16 Troubleshooting

Error	Possible cause / Solution
MultiScreen won't start	Check the firewall settings
Recording won't start	No ring storage was allocated to the camera
"Error Info.DB" appears	In rare cases data bank errors can occur which are then displayed in an Info Box with "Error Info.DB". The cause of this can be, among others, that videos have been manually deleted from the video directory in Windows Explorer and/or that the data bank has been corrupted by a hardware crash.
	In the standard operating procedure, the data bank is compared with the existing videos when MULTIEYE is started. I.e. manually deleted video are removed from the data bank. If videos are not automatically deleted from ring storage, it can be that those videos were marked as "read only". In case of data bank errors which can not be automatically corrected, the MULTIEYE data bank directory (c:\Programme\artec technologies ag\MULTIEYE\DATABASE) must be deleted after MULTIEYE has been ended. At the next start, this directory and the data banks contained therein will be re-created.
Deleting a camera's	How can I completely delete a camera's recordings?
recordings	"Settings > Video Settings" shows how many Mbytes on the hard drive are occupied by the cameras' videos. When the image of a camera has been dragged and dropped into the trash (i.e., it is not displayed on the desktop), the additional button "Delete Ring Memory" will appear with which all recordings of the selected camera can be deleted.
The right file system	Which file systems are supported by MULTIEYE and/or which is recommended?
	All Windows file systems for the deposit of videos recorded with MULTIEYE are supported (e.g., FAT, FAT32, NTFS, NTFS5 and network hard drives). Because of certain file system restrictions with FAT, we recommend Windows 2000 as the operating system and NTFS formatted partitions.
Firewall, Unblocking ports, Router	In addition to the RAS access, as discussed above, access can also be had via the internet, in which case the customer uses a router. What must be considered in MULTIEYE when the server is behind a firewall? Which ports are necessary? Is it enough to simply enter the IP address for access, or do you have to establish connection via a VPN with the IP already used for the RAS?
	MULTIEYE always communicates via the TCP port 2806. That means that you must unblock this port in the firewall. If I assume that the router is configured for NAT routing, then an incoming access attempt via port 2806 must be routed to the internal IP address of the MULTIEYE computer. You can find out how to configure your router for such "port forwarding" by consulting the router's user's manual. You do not need a VPN if you only intend MULTIEYE inquiries. If operating from a client, you need either the IP address of the router or (in case a URL was reserved) the name of the router.
Activation key is not requested	After the request for the password at the initial start-up of MULTIEYE. there is no request for the activation key: MULTIEYE is closed down without any error message MULTIEYE starts without any active cameras

	In re 1: The driver of the video card must be (re-) installed. Put the MULTIEYE-CD in the CD-ROM drive and install the driver with the help of the Windows Device Manager. In re 2. Switch the option "Plug&Play OS" in the computer's BIOS to "No" if it is on "Yes" or vice versa.
ATTENTION: Setting is not permitted	When checking off the autostart function, you receive the error message: "Setting is not Permitted" (Win2k)
	You must log in as Administrator, as certain rights are required to make changes in MULTIEYE
Some MULTIEYE icons are covered	The clock in MULTIEYE partially covers other symbols and/or not all settings are visible.
	MULTIEYE displays will only be correct when monitor resolution is set at $1024 \times 768$ pixels or higher and "Small fonts" are selected.
No image in print	When printing a snap shot via the MULTIEYE Player, the print shows only text, but no image.
	There is not enough main memory available. Does your system have at least 128 Mbytes RAM? Close all other applications and repeat the print process.
Live images have a	The color gradient of live display images is quite coarse.
coarse color gradient	Please set the color quality in the Windows monitor settings to 24 or 32 bits or "Truecolor"
Problems installing drivers	When installing drivers, the computer crashes or the driver cannot be loaded ("Code 10" in the Device Manager).
	Implementation of the APIC support in the BIOS is false. We have found this to be true especially with ECS boards K7S5A, K7S6A und K7SEM.
	Flash your BIOS to the most recent version. Especially with K7S6A, the BIOS date must be at least 15.03.2002 or newer. Please follow the instructions of the motherboard's manufacturer. Failure to observe them may make your computer disfunctional!
Computer hangs up or	During operation, the entire computer hangs up or crashes ("blue screen")
Crasnes	When using a mainboard with a Via chipset, you should install the Via 4in I driver, as an error in the chipset, in combination with the IDE controller, can lead to a loss of data (http://www.viaarena.com/?PageID=2)
Constant alarm noise	What does the constant alarm noise in MULTIEYE mean?
	MULTIEYE is "protesting" that at least one input signal is missing. Please drag and drop all windows which display a crossed out camera into the trash.
Using dual graphic boards	Does MULTIEYE support systems with two graphic boards or dual head graphic boards?
	Yes. In the file "MULTIEYE.INI" in the MULTIEYE program directory you can set the position of the main window.

Using partitions	Can MULTIEYE and Windows be placed in the same partition?	
	We recommend setting up a separate partition for video data so that there will be no conflict with other programs (e.g. 4 GByte system partition and 36 GByte data).	
Are VFW or DirectShow supported?	Does the MULTIEYE card driver also provide support for "Video for Windows" and/or "DirectShow" so that these can be used for other video programs?	
	We intentionally excluded drivers for VfW and DirectShow because experience has shown that interaction between MULTIEYE and other video grabber software often leads to problems. MULTIEYE and the card driver are optimally harmonized	



# 17 License conditions

Please read the following license conditions attentively and carefully, before you use the software on your computer.

By opening the software package or using the software, you state your express agreement with the following license regulations.

If you do not agree to these license conditions, you may not use the software. The software is not sold, but is licensed for usage purposes. You only obtain ownership of the storage medium (CD), as well as the manual or other written documents.

#### I. Grant of a license

194

This license permits you the use of a copy of the software on a single computer on condition that the software is used on only one computer at any time. If you acquire multiple licenses for the software, you may have only so many copies in use as the number of licenses acquired by you. If the prospective number of the software users exceeds the number of the acquired licensees, you must have appropriate mechanisms or procedures ready in order to guarantee that the number of the persons who use the software at the same time does not exceed the number of licenses.

#### 2. Copyright

The software is protected by copyright and all rights evolving from such copyright are granted only to artec technologies ag. The software contains copyrighted material. It is forbidden to decompile, reverse engineer, or in any other way to convert it into a generally readable form. It is forbidden to modify, to adapt, to translate, to rent, to lease, to lend or to manufacture the software or sections or derivations of the software.

The copyright covers in particular the program code, the documentation, the brand names MULTIEYE®, QUADPLEX®, the structure and organization of the program files, the program names, logos, and other forms of presentation within the software itself. Each duplication, use, distribution, modification or playback of contents of the software not expressly approved is forbidden. The user's manual as well as all other documentation belonging to the software are copyrighted. It is forbidden to reproduce, change or distribute all written material without written permission from artec technologies ag.

#### 3. Length of validity of license

The grant of the license is for an unlimited period of time. The license automatically loses its validity – without the necessity of cancellation – if you violate any of the terms of this agreement. In case of termination of the license, you are required to destroy the software and all copies thereof. You can void this license at any time by destroying the software and all copies thereof.

#### 4. Limited warranty

artec technologies ag guarantees for a period of 3 months, starting from the point in time of the transfer, that the software essentially corresponds to the program description in the accompanying documents regarding its mode of operation. If any defects appear, such defects and their effects are to be described so exactly in a written notification of defect (e.g. reproduction of malfunction warnings) that an examination thereof is feasible and the exclusion of an operating error (e.g. description of the work procedures) is possible.

In the case of correction of a malfunction for which the user is responsible, the company reserves the right to charge to the user the corresponding costs as contractually agreed upon or otherwise appropriate rates.

In case of a justified notification of defect, the company retains the right to improve or provide replacement of the product. No liability is assumed that the software is suitable to the purposes of the user or will function in conjunction with other software in use by the user.

Descriptions in the user's manual / documentation and/or advertising materials which refer to possible enhancement of the software or available accessories are not binding, especially as the software is subject to continual modification, and such descriptions can be construed to refer to future developments. Above and beyond this guarantee, artec technologies ag is liable only in cases of intentional or severe negligence in accordance with legal regulations. In cases of minor negligence, artec technologies ag is liable only when an essential obligation of contract (cardinal obligation) is violated or in cases of default or impossibility.

#### 5. Other

This license agreement is subject to the laws of the Federal Republic of Germany. If regulations of this license agreement are or become totally or partly ineffective, this does not affect the validity of the remaining regulations. Such ineffective regulation must instead be replaced by regulations which correspond as closely to the sense and purpose of the ineffective regulation as possible. Verbal agreements are not binding. Changes in this license agreement must be made in writing. The same applies to the cancellation of these written terms of agreement.

Exceptions can be taken for "OEM versions" of the software. This requires, however, a contractual agreement between artec technologies ag and the OEM partner.

Specifications may be subject to change without prior notice

11.07.2007 artec technologies AG

# Index

#### - | -

16100241620024, 25, 33162523165024

#### - 2 -

2CIF 73

#### - 3 -

32100 25, 26, 27, 33

#### - 4 -

425 23 4CIF 73

#### - 7 -

75 Ohm 29

## - A -

45 activation activation extensions 46 adjustment 19 advanced settings 96 alarm mailer 102 100, 101 alarm messages analog video monitor 29 anti aliasing 65 assigning audio channels 97 audio extension board 30 audio playback 123 auto login 95 automatic dial in 103 automatic log in 183 automatic Windows login 37 automatical start 69 Autostart 69

### - B -

backup player 132 BIOS 36 Board types 21 break out cable 25 button details 131 - C camera status 56 camera symbol 118 camera symbols 113 camera text 81 Capability characteristics 21 CCTV 184 **CE** compliance 188 CIF 73 close player 129 compression codec 72 configuration and settings 59 configuration ring storage 91 configuring 67 configuring windows 37 connecting PTZ cameras 35 connection 25, 26 connection audio 29 connection cameras 55 21, 25, 27, 28 contents of delivery context menu 63, 126 context menu video list 120 copying time settings 88 copying times 88 customize text 107 Customizing 158

## - D -

date 60 delay between messages 103 deleting cameras 55 deleting ring storage 92 deleting times 86 deleting videos 92 description MP8200 28 Desktop Layouter 57 Dial up client 173 Dial up Server 169 DIP S1 34 DIP S2 34

196

197

DIP switch settings 34 DIP switches 26 Direct Translator 157 Drag&Drop 53 DSL 168 Dual monitor 18 dynamic ring storage management 93

### - E -

EBÜS 160, 161, 162, 164 electrical loads 34 evaluating videos 118 EX-24 31 EX-4 30 example notification 177 EX-Audio 16 35 EX-IO 107 EX-IO alarm board 32 EX-IO inputs 108 EX-IO switch outlets 109 EX-IOC alarm board 33 exiting MULTIEYE-HYBRID 61 extension board 26

## - F -

fast forward 122 fast rewind 122 firewall 18 frame rates 73 full-day display 123 fullscreen 62

## - G -

global settings 68 graphic cards 17

## - H -

harddisks 17 hardware 139 hide toolbar 60 hosts file 177

## - | -

IDE 17 image settings 71 Imagequality 18 60 images per second individual MultiScreen layout 57 infobar in the camera window 61 information 60 initial setup 89 Installation EX-4 32 Installation EX-IO 32 installation MULTIEYE-HYBRID 39.42 installation MULTIEYE-NET 39 installation network player 149 40 installation system drivers installation USB dongle 41 installation video boards 39 installing LiveViewer 142 interface 51 Introduction 12 IO relay remote control settings 147 IP camera 55, 75 IP megapixel camera 55 ISDN 168

# - J -

joystick 64

# - K -

keyboard 64 keyboard support 128

# - L -

LAN 167 licence key fax 49 license conditions 194 48 license key online license keys 48 licensing 45 live monitor 99 Liveupdate 156 Live-Updater 136 LiveViewer 142 locking system 60 LOG-files 135

# - M -

managing windows 144 masking 82

#### 198

maximum count of video channels 21 memory management 89 menu 153 minimieren 69 minimizing program 60 minimum requirements 16 MODEM 168 motherboards 16 motion activity area 123 motion detection 82 motion detection sensitivity 83 motion level 120 125 motion search motion timeline 116 motion timeline options 131 motion track 124 moving cameras 55 moving out 69 MP8200 27 MP8200 PCI 27 MP8200 PCI-Express 27 MRC 60, 150 Multiboard 29 MultiPlayer settings and options 112 multiple LiveCam access 152 multiple playback 116 MultiScreen initial start 54 Multiscreen layout 57 MultiScreen options 69 MultiScreen toolbar 56 mute/unmute video 127

#### - N -

NAS 89 network camera 75 network connections 167 network player MultiPlayer 149 notification via email 103 notification via external program 106 notification via ICQ 104 notification via NetSend 104

#### - O -

open playback list 128 opening LiveViewer display 148 Operating System 18 optional licenses 109 optional modules 109 Order of installation 14 outage detection 63 overlay 30 own web sites 175

## - P -

playback 65, 111, 154 playback in four steps 112 playback over network 131 playback toolbar 122 playback via motion timeline 129 playback windows 122 player settings 114 possibilitys 22 power consumption MP8200 28 power loss 37 Pre-alarm 74 privat zones 84 processors 17 protocols 135 PTZ 64,74

# - Q -

quick configuration 70

## - R -

RAID 89 RAM 17 **RAS** client 173 RAS Server 169 recorder chassis 36 recording times 87 regional 68 remote access modes 141 60.97 remote control 116 remote inquiry replay 59 report event 146 107 report on critical system errors resizing ring storage 92 restoring licenses online 49 ring storage 88 ring storage assistent 89

# - S -

SATA 17 save playlist 129 saving and restoring licenses 49 search video 127 selecting cameras 56 134 services licences services options 135 services overview 134 setting up LiveViewer 142 settings LiveViewer window 145 settings video 146 ShortCuts 156 single LiveCam access 151 123 single video 127 snapshot sound 68 standard playback 123 start MultiPlayer 111 start recording 59,63 starting MULTIEYE services 51 starting MULTIEYE-HYBRID 51 starting Multiplayer 59 starting MultiScreen 52 status messages 101 status report 102 storage system 89 symbols 62 synchron playback 117 system information 136 System requirements general 16 SystemRestorer 137

### - T -

technical data 186 telephone support 158 terminate resistor 29 termination 25, 26 termination MP8200 28 testing alarm message 106 time 60 timer menu 84 timer options 88 toolbar 69 toolbar camera window 62 trash 56, 117 tree structure 113.118 treshhold 120 troubleshooting 190 two users / four eyes 95

#### - U -

ULTRA DMA 17 USB dongle 35 user management 93 userrights Windows XP 178

## - V -

video board combinations 22 video export 128 video image formats 184 video list 119 video loss 63 video playback 117 video qualtity 72 video resolution 73 video server 75, 96, 97 72 video settings video signals 19 virus scanner 18

## - W -

Watchdog 28, 29, 37, 69 157 watermark 151 web based remote access web server 96, 97 WIBU-Key 35 Windows 2000 18 Windows 2003 18 Windows XP 18

# - Z -

zoom 128



Mühlenstrasse 15-18 D-49356 Diepholz Germany Tel. +49 (0) 5441 / 5995 – 0 Fax. +49 (0) 5441 / 5995 – 70 www.artec.de | www.multieye.de

© artec technologies AG

MULTIEYE, Quadplex, XentauriX and CVoD are registered brands of artec technologies AG.

All other company names and products are trademarks or registered trademarks of the respective companies.

Technical changes and errors cannot be excluded.

Release: M01E - 11.07.2007