


SPL-32R/SPL-32T

UHF Wireless Tour Guide System

User Manual

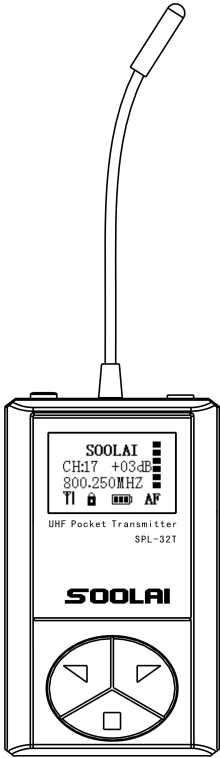

SPL-32T

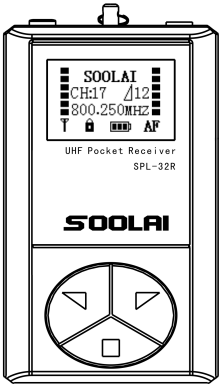

SPL-32R

Thank you for choosing SOOLAI!

Please take a few moments to read these instructions carefully, as we want you to enjoy your new SOOLAI products quickly and to the fullest.

Special features

- Super mini, light weight, metal shell and five colors for choice
- UHF professionally frequency, PLL synthesized design, 32 channels available
- 16 digital ID pilotone design to avoid the background noise
- High performance double-IF circuit design to enforce RF level
- 96*64 dot matrix White LCD display
- LCD display Channel, frequency, volume, battery, RF level, AF level, transmitter gain, RF power, and lock. Mode
- Transmitter dynamic display of AF level, AF Over load warning, 31-step microphone gain adjustment design
- Quick-mute function
- Receiver digital 16-step volume control
- Receiver digital 21-step SQ adjusting
- Locking protection of panel operation with security codes
- Inputting Lithium-ion battery working for 9-11 hours
- Two ways of attaching belt clips: downwards and upwards
- 3.5mm input jack for inputting background music, CD, MP3, etc
- Transmitting range 300 ft (line-of-sight)

Main Applications:

Simultaneous interpretation

International conference simultaneous interpretation

Touring

Widely used in touring, visiting museums, exhibitions

Guest reception

Used in reception of visitants in product presentation, advanced exhibition of large companies

Teaching

Used in meeting and teaching of school and so on


Stage monitoring

Monitoring of performance: especially for acting singer to monitor accompaniment

CONTENT

SPL-32R receiver	04
Operating controls	05
Adjusting channel/frequency	06
Adjusting the squelch threshold.....	06
Setting locking/unlocking	07
Exiting from setting operation.....	08
SPL-32T transmitter	09
Operating controls.....	10
Adjusting channel/frequency	11
Adjusting microphone gain.....	11
Adjusting transmitting power.....	12
Setting locking/unlocking	13
Operating belt clip	13
SC-02 two unit charger.....	15
SCB-20 twenty unit charging and storing case	16
Application samples.....	17
Troubleshooting	19
specifications.....	20
frequency diagram.....	21

Receiver (SPL-32R)

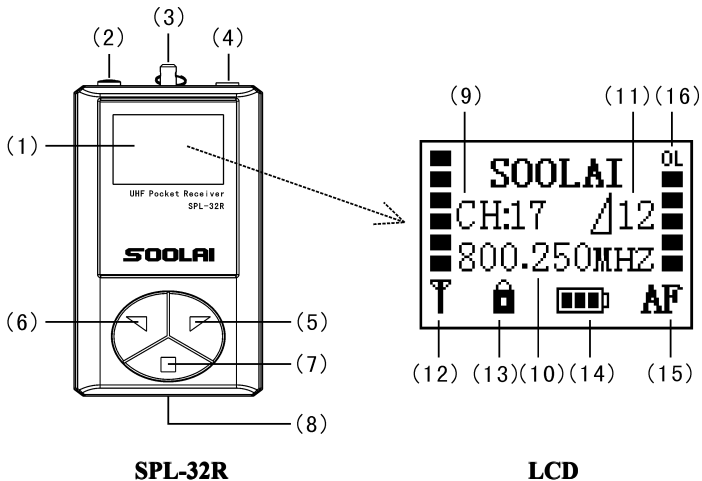

(figure 1)


- (1). LCD
- (2). On/Off button (keeping it pressed for 3 seconds will switch the receiver on)
- (3). Tie pillar or 1/4 wavelength flexible antenna
- (4). 3.5 mm jack socket for headphones
- (5). Rocker button (UP)
- (6). Rocker button (DOWN)
- (7). SET button
- (8). Charging contact
- (9). Channel display
- (10). Frequency display
- (11). 16-step headphone output volume display
- (12). 6-step dynamic RF display
- (13). Lock mode icon (lock mode is activated)
- (14). 4-step battery status display
- (15). 6-setp dynamic AF display
- (16). Audio overload display, 'OL' means transmitter microphone input volume is too high. It needs to be reduced (adjusting transmitter AF gain until there is no OL on display)

Operating controls

1. Via keeping ON/OFF button pressed for 3 seconds, you can switch the receiver on.
2. Via pressing UP or DOWN button, you can add or reduce headphone volume.(The minimum is 1, and the max is 16.)
3. Via keeping ON/OFF button pressed for 3 seconds, you can switch the receiver off.
4. Via keeping SET button pressed for 3 seconds, you can enter the operating manu, as shown in the figure 2. If there is no operating manu, you will see the code inputting picture, as shown in the figure 3. It means the former user has set the lock mode. You have to input the code, if you want to enter. Please refer to (Setting Locking/unlocking)



(figure 2)

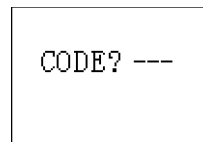

(figure 3)

- If you can not switch the receiver on, it means the battery is flat. You have to charge before open it again.
- The receiver will switch off automatically when the battery is flat to protect the lithium-ion battery. Please do not open before you have charged the battery.
- While the transmitter being off, please check the RF on display of receiver. If there is no RF volume display, it means there is no frequency interference. You can use this channel, as shown in the figure 4. If there is RF volume display, it means the frequency is interfered. Please change to another channel so that it is not interfered, as shown in the figure 5. (Please refer to adjusting channel/frequency) If there is AF volum on display, it means the receiver has received signal from one transmitter which is switched on (as shown in the figure 6).
- Listening at high volume levels for long periods can lead to permanent hearing defects. Set the volume for the connected headphones to the minimum before putting the headphones on.



Adjusting channel/frequency

1. Keeping SET button pressed for 3 seconds, you can enter the operating manu.
2. Via “◀” or “▶” button, you can select “SET CH” icon, as shown in the figure 7. Then press SET button to enter, as shown in the figure 8.
3. Via “◀” or “▶” button, you can go to the channel you want and then press “■” button. The channel is stored.



(figure 7)



(figure 8)


- ※ While adjusting the channel, if there is RF display, it means there is interference. Please change to another to ensure perfect performance.

Adjusting the squelch threshold

1. Via keeping SET “■” button pressed for 3 seconds, you can enter the operating manu.
 2. Via “◀” or “▶” button, you can select “SET SQ” icon, as shown in the figure 9. Then press “■” button to enter, as shown in the figure 10.
 3. Via “◀” or “▶” button, you can adjust the SQ volume, then press “■” button to store the setting.
- ※ While the transmitter being off, if there is RF volume on display of receiver, it means the receiver is interfered by background noise. Please adjust to another channel or add the SQ volume. For adding the SQ volume, the transmitting range will become shorter. The more the SQ is, the shorter the transmitter range becomes. (The minimum SQ is -10, while the max is +10).



(figure 9)

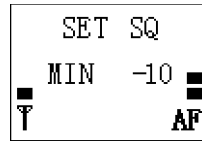

(figure 10)

Setting locking / unlocking


1. Keeping “■” button pressed for 3 seconds, you can enter the operating manu.
 - ※ If there is no operating manu but “CODE?---” displays, it means the former user has set locking code, as shown in the figure . You have to enter the correct code via “◀” or “▶” button. Then press “■” button to continue. If you enter wrong codes, there will be “INVALID” on the display. Please enter the correct code. If the code is lost, you can try entering the following total 8 codes one by one, until you can enter successfully. “◀◀◀”, “▶▶▶”, “◀▶▶”, “▶◀◀”, “◀◀▶”, “▶▶◀”, “◀▶◀”, “▶◀▶” .
2. Via “◀” or “▶” button, you can go to the “LOCK OFF” icon and press “■” button to unlock the panel operating, as shown in the figure 11.
3. Via “◀” or “▶” button, you can go to “LOCK ON” icon and then press “■” button, as shown in the figure 12. You will need to enter 3 codes, as shown in the figure 13.
4. Via “◀” or “▶” button, you can enter 3 codes. Then press “■” button to store t he operating. Next time you have to enter the 3 codes before you can enter the operating manu successfully..



(figure 11)



(figure 12)

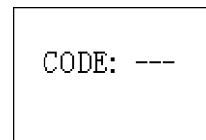

(figure 13)

Exiting from setting operation


1. In the operating manu, you can go to “EXIT” icon via “◀” or “▶” button, as

- shown in the figure 14. Then press “■” button to exit from setting operation.
2. Under any operation status, the receiver will return to start display if there is no operating for 5 seconds.



```
SET CH
SET SQ
LOCK ON
→EXIT
```

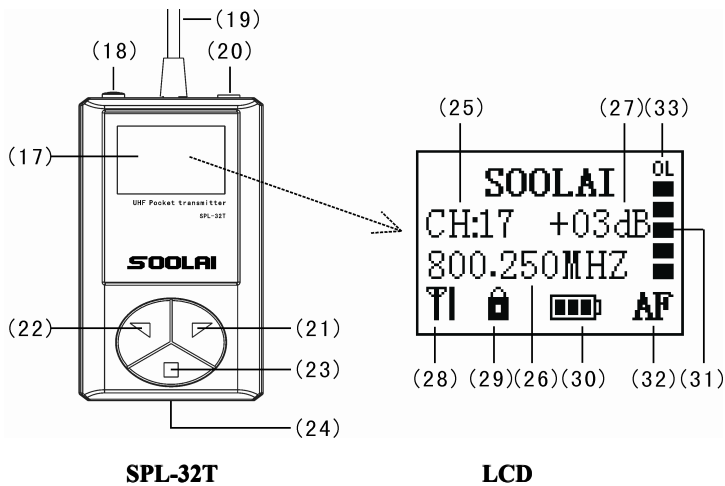

(figure 14)



(figure 15)


- (17). LCD
- (18). ON/OFF button, (serve as mute button in operating manu)
- (19). 1/4 wavelenth flexible antenna
- (20). Microphone/line input (MIC/LINE), 3.5 mm jack socket
- (21). Rocker button (UP)
- (22). Rocker button (DOWN)
- (23). SET button
- (24). Charging contact
- (25). Channel display
- (26). Frequency display
- (27). Microphone gain (-10dB----+20dB)
- (28). Transmitting RF power display (NORMAL or HIGH)
- (29). Lock mode icon (Lock mode is activated.)
- (30). 4-step battery status display
- (31). 6-step dynamic AF display
- (32). Mute display icon
- (33). Audio overload display icon (OL status is activated.) It means the transmitter microphone input volume is too high . You need to reduce the volume via adjusting the AF GAIN until the OL icon disappears from the LCD.

Operating controls


1. Via keeping “” button pressed for 3 seconds, you can switch the transmitter on, as shown in the figure 16.
2. “” button serves as mute button in operating manu. You can switch by pressing the button between mute mode and no mute. It is in mute mode, as shown in the figure 17



(figure 16)

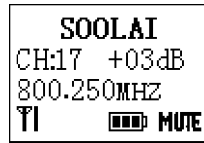


(figure 17)

3. Via keeping pressing ON/OFF button for 3 seconds, you can switch the transmitter off.
4. Via keeping pressing “” button for 3 seconds, you can enter the operating manu, as shown in the figure 18. If the “CODE?---” appears, as shown in the figure 19, you have to enter the correct three codes. Please refer to Setting locking / unlocking.




(figure 18)

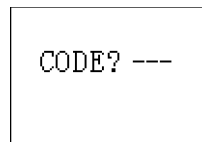


(figure 19)

- If you can not switch the receiver on, it means the battery is flat. You have to charge before open it again.
- The receiver will switch off automatchially when the battery is flat to protect the lithium-ion battery. Please do not open before you have charged the battery.
- Before using, please insert the microphone to Microphone/line input (MIC/LINE), 3.5 mm jack socket.
- While using, please do not pull out the microphone.
- Please put headmicrophone or lavalier microphone as close as to speaker’s mouth to get perfect performance.
- In normal speaking volume, if AF display 1-2 steps, it means transmitter microphone input volume it too low, as shown in the figure 20, which needs to be adjusted higher via adjusting transmitter AF GAIN. If it is 4-5 steps, it means perfect performance. If there is OL icon, you have to adjust AF GAIN lower. Please


refer to Adjusting AF gain.

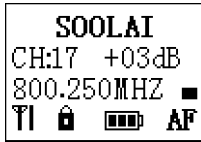

(figure 20)

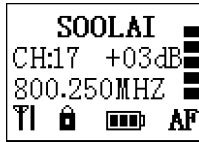

(figure 21)

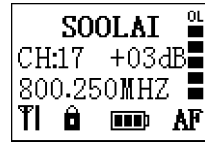


(figure 22)

- ※ While using, the antenna has to be kept away from direct touching skin to ensure perfect performance.

Adjusting channel/frequency

1. Via keeping “■” button pressed for 3 seconds, you can enter operating manu 2
2. Via “▼” or “►” button, you can go to “SET CH” icon, as shown in the figure then press “■” button to enter, as shown in the figure 24.
3. Via “▼” or “►” button, you can go the the channel you want, then press “■” button to confirm.

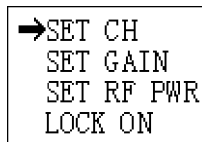

(figure 23)



(figure 24)

- Please do not change channel or frequency at will, unless the using channel is interfered.


Adjusting transmitter microphone gain

1. Keeping pressing “■” button for 3 seconds, you can enter the operating manu.
2. Via “▼” or “►” button, you can go to “SET GAIN” icon, as shown in the figure 25. And then press “■” button to confirm, as shown in the figure 26.
3. Via “▼” or “►” button, you can adjust the AF GAIN and press “■” button to confirm.(The max is +20dB, which means the microphone input volume is enlarged by 20dBs. While the minimum is -10dB, which means the volume is reduced by 10dBs.)

- The user can adjust the AF GAIN according to AF dynamic volume display. If OL appears, please reduce AF gain. If AF display 1-2 steps, you need to add AF gain. Generally, 4-5 steps is the best performance.



(figure 25)

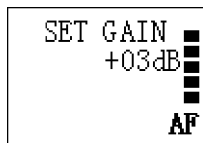

(figure 26)


- While using head microphone, the reference range is 0dB---5dB.
- While using lavalier microphone, the reference range is +13---+18dB.
- ※ In noisy background, you are suggested to use head microphone to get perfect performance.

Adjusting transmitting RF power


1. Keeping pressing “■” button for 3 seconds, you can enter operating manu.
2. Via “▼” or “▲” button, you can go to “SET PWR” icon, as shown in the figure 27. And press “■” button to confirm, as shown in the figure 28 or 29.
3. If you select “HIGH” icon, it means you select higher transmitting power---20mW.
4. If you select “NORMAL” icon, it means you select normal transmitting power---10mW.



(figure 27)

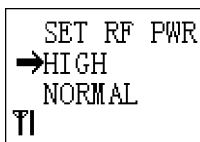

(figure 28)

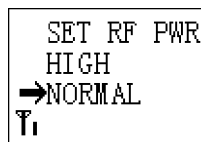

(figure 29)

Setting locking / unlocking

1. keeping pressing “■” button for 3 seconds, you will enter operating manu.
- If there is no operating manu, but “CODE?---” icon, it means the former user has set code. You need to input the code and press “■” button to confirm. If the code is wrong, “INVALID” will appear. Please try other codes. If the code is lost,

please try the following total 8 codes one by one, until you can enter.

“▲▲▲▲”, “▲▲▲▲”, “▲▲▲▲”, “▲▲▲▲”, “▲▲▲▲”, “▲▲▲▲”, “▲▲▲▲”, “▲▲▲▲”.


2. Via “▲” or “▼” button, you can go to “LOCK OFF” icon, as shown in the figure 30. Then press “■” button to confirm unlocking the panel.
3. Via “▲” or “▼” button, you can go to “LOCK ON” icon, as shown in the figure 31. Then press “■” button to confirm locking the panel.
4. Input 3 codes via “▲” or “▼” button and then press “■” button. You have set the code successfully. You will have to input the codes before you enter the operating menu next time.



(figure 30)




(figure 31)

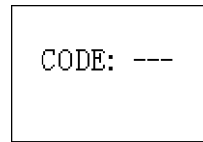

(figure 32)

Operating belt clip

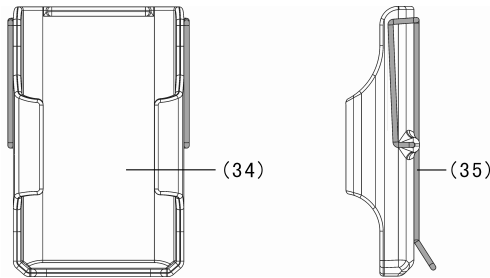


(figure 33)

(34) Belt clip plastic shell


(35) Metal spring clip

1. Insert the transmitter or receiver into the belt clip upwards or downwards, as shown in the figure 34.
 2. Then insert microphone or headphone into jacks of machines.
- ※ If the direction is in downwards, the microphone or headphone should be attached finally to avoid being crashed.

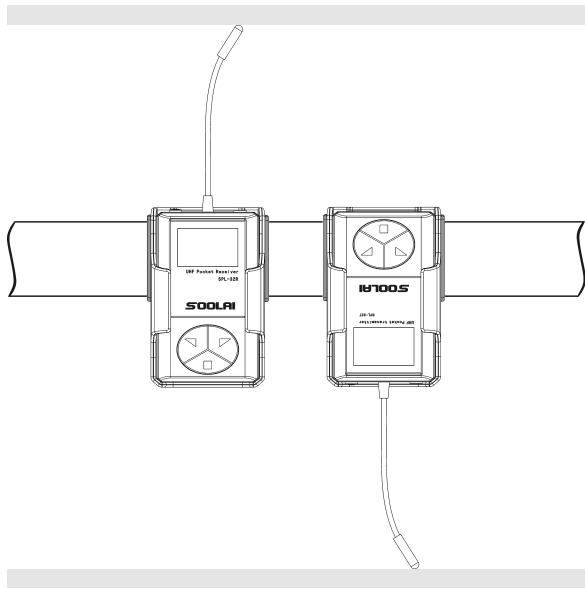

(figure 34)

SC-02double unit charger

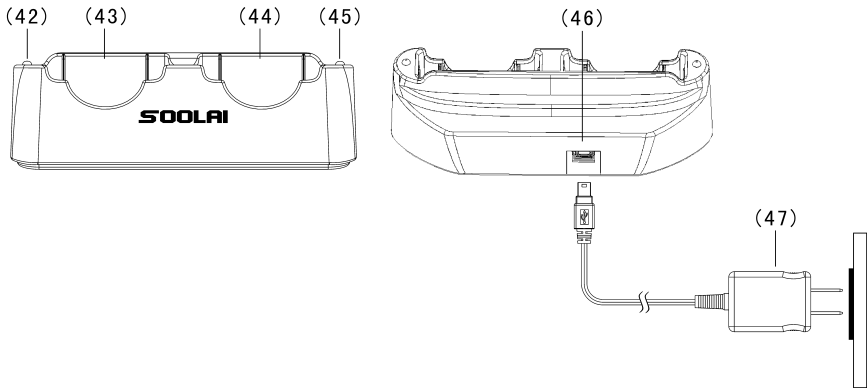


(figure 36)

- (42) LED for charging compartment(left)
- (43) Charging compartment(left)
- (44) Charging compartment(right)
- (45) LED for charging compartment(right)
- (46) Power input jack, mini USB 5Pin.
- (47) Power adapter, 5V/1A

Operation controls:

1. Connect the power adapter to AC power and connect the other side to Power input jack on the charger, as shown in the figure 36.
2. Put the machines into the charging compartment upwards. You have being charging the units.
3. You can charge one or two units once. The charging time is approx 2 hours.
 - LED flashing means there is no unit in the charging compartment or the unit does not touch the charging contact appropriately.
 - LED lit means being charged.
 - LED off means charging finished.

SCB-20 twenty unit charging and storing case

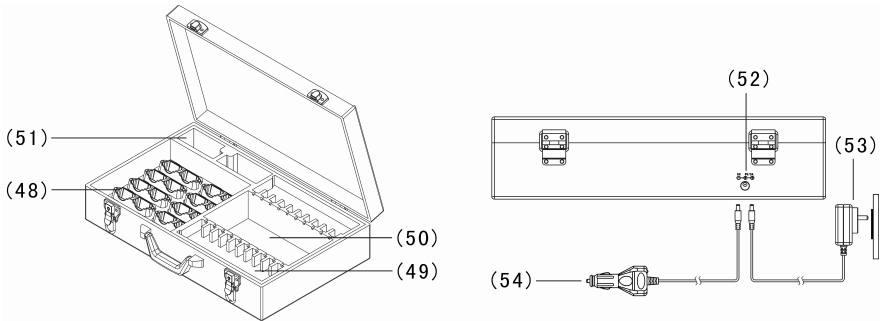

(figure 37)

- (48) charging compartment/storing compartment, 20 totally
- (49) storing compartment
- (50) compartment for storing headphone, earphone, etc
- (51) compartment for storing Power adapter
- (52) Power input jack
- (53) Power adapter, 5V/3A
- (54) Car power adapter connector SA-503

Operation controls:

1. Connect the power adapter to AC power and connect the other side to Power input jack on the charger, as shown in the figure 37.
 2. You can connect input jack of SA-503 to cigarette-lighter Plug on car. And connect the other side to Power input jack of SCB-20.
 3. Put the units into the charging compartment upwards to charge.
 4. You can charge the units from 1-20 units at the same time once and the charging time is approx. 4 hours.
 5. You can put total 40 units in SCB-20 for storage.
- LED flashing means no units in the charging compartment or the unit does not touch the charging contact appropriately.
 - LED lit means units being charged.
 - LED off means units charging finished.

Pay attentions:


- ① Do not close the case when you charge the units with enforcing antenna.
- ② Do not store the units in charging compartment which have enforcing antenna.

Main application samples

In trialogue setting, you are proposed to use the units with enforcing antenna to enlarge transmitting range. In the following samples, TX means transmitter. RX means receiver. (A), (B), (C).....means different channels/frequencies: channel A, channel B, channel C.....

A . **tourjing, visiting**

One speaker with many listeners.

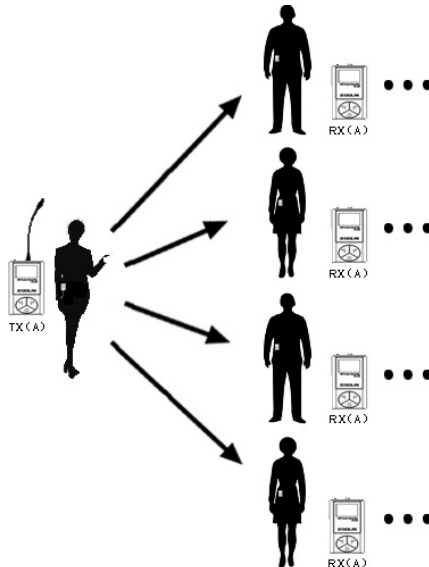


1. The speaker can transmit his voice via transmitter.
2. Other listeners can hear via attaching receivers.

The number of receivers can be added at will.

The speaker can take one EL-60 extend linker to input background music. It will make your touring or visiting more interesting.(The speaker can also hear the music.)

B. Simultaneous Interpretation

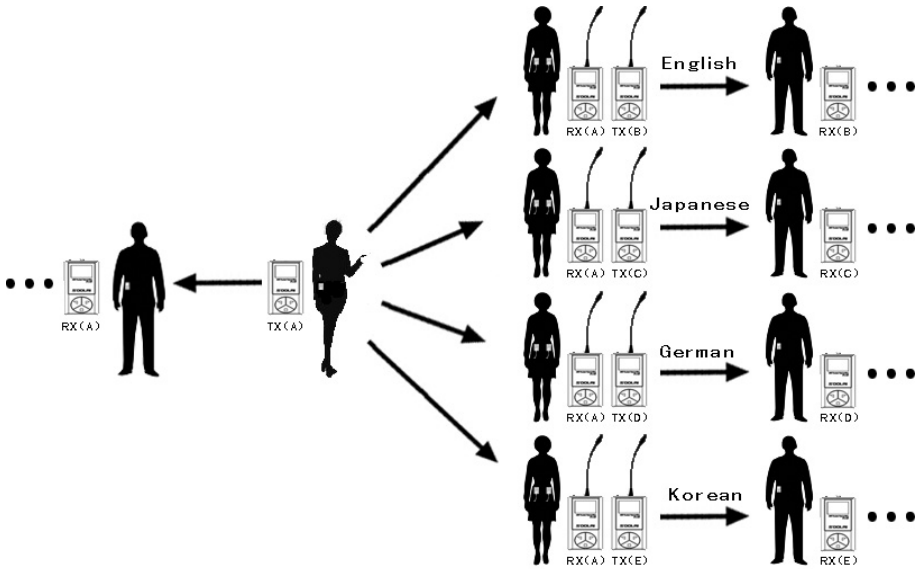

1. The speaker takes one transmitter set on non-interference channel(TX A) and one microphone.
2. Mother language listeners take receivers set on the same channel(RX A) as the transmitter's so that they can hear what the speaker is saying.
3. Interpreters take receivers(RX A) for hearing the mother language and transmit their interpreted languages to other language listeners via attaching transmitters (TX B, TX C)
4. Other language listeners can hear the interpreters' voice via the their receivers RX B, RX C that are set on the same channel as that of cooresponding interpreters'.

Pay attentions:

While using multiple channels, please select channels without interence between each other.

If one takes both one receiver for listenning and one transmitter to interprete what he hears to another language, he needs to make the distance between the receiver and the transmitter as far as possible to avoid being interfered.

Please try the following solution if there is still interference. Set the channel into

different frequency ranges, such as range A and range B.(You have to contact SOOLAI to preset the channel frequency for you!!!)(Please refer to Frequency diagram on page 21.)

Troubleshooting

No voice in receiver output

1. Make sure the transmitter and receiver are both powered.
2. Make sure the transmitter and the receiver are on the same channel frequency.
3. Make sure the microphone and earphone are attached appropriately.
4. Make sure the transmitter is not in Mute mode
5. Make sure the volume control on receiver is not adjusted on the minimum.

Short working distance

1. Make sure the antenna is not broken.
2. Make sure the transmitter is not close to other transmitter powers. In simultaneous interpretation, make sure the interpreter's transmitter and receiver are not on the same channel frequency.
3. Try to set receiver's SQ to "MIN -10" to check the effect.
4. Try to use another channel.
5. Check line of sight transmitting range.

Voice distortion

1. Make sure that there is no other transmitter using the same channel.
2. While using multiple channels, make sure there is no interference between each other.
3. Make sure the transmitter's microphone GAIN is adjusted to the best volume.
4. Try to adjust the receiver's SQ to "MAX +10" to check the effect.

Too low voice

1. Make sure the transmitter's microphone GAIN is adjusted at the best volume.
2. Make sure the receiver's volume is adjusted at the best volume.
3. Replace the earphone to check the effect.

If still operating problems with your transmission installation occur, please contact your local SOOLAI agent for assistance.

Specifications

SYSTEM:

RF Carrier Frequency Range	UHF 518~865MHZ (country dependent)
Operating Range	300ft (environment dependent)
Switching Bandwidth	20MHZ
Switchable Frequencies	32
Display Screen	96*64 dot matrix LCD
Oscillation Type	PLL Synthesized
Modulation	FM ± 45 KHZ deviation (nominal)
Audio Frequency Response	50hz to 15khz (+/-3dB);earphone dependent
Total Harmonic Distortion (1KHZ)	<0.8% (Ref. ± 45 KHZ deviation)
Signal-to-Noise ratio	80dB typical (A-weighted)
Power Requirement	Built-in polymer battery 3.6v/450mAh
Batter Life	9 ~11 hours
Dimension	69mm * 42mm * 14mm
Unit Weight	less than 50g (With battery)
Operating Temperature	-10°C to +55°C

RECEIVER (SPL-32R):

Sensitivity	2uV (60dB S/N)
Antenna	Uses earphone cable
Squelch	RF noise squelch & digital Pilotone squelch
AF Output	100mw maximum ,16setps digital volume
Minimum Load Impedance	16 Ω

TRANSMITTER (SPL-32T):

RF Output Power	NORMAL=10mW HIGH=20mW(max)
Antenna	1/4 λ flexible antenna
Microphone input	Unbalanced, 3.5mm connector (Tip)
Line input	Unbalanced, 3.5mm connector (Ring) ATT -10dB
Microphone Sensitivity	programmable in 31 steps , -10dB to +20dB
Max Microphone input level	7dBV to -22dBV (-10dB to +20dB)
Max line input level	17dBV to -12dBV (-10dB to +20dB)

Frequency diagram

Different countries have different wireless frequency range requirements. We do three ranges: A, B, and C. Our existing machine is in range A. If you need machine in range B or range C, please be free to let us know. And we will do our best to help.

A: 790~810MHZ 、 B: 690~710MHZ 、 C: 850~870MHZ

A: 790~820MHZ

Group 1		Group 2		Group 3		Group 4	
CH2	790.875MHZ	CH3	791.500MHZ	CH1	790.250MHZ	CH2	790.875MHZ
CH7	794.000MHZ	CH8	794.625MHZ	CH4	792.125MHZ	CH5	792.750MHZ
CH15	799.000MHZ	CH16	799.625MHZ	CH10	795.875MHZ	CH11	796.500MHZ
CH25	805.250MHZ	CH27	806.500MHZ	CH16	799.625MHZ	CH17	800.250MHZ
CH31	809.000MHZ	CH31	809.000MHZ	CH23	804.000MHZ	CH24	804.625MHZ
				CH31	809.000MHZ	CH32	809.625MHZ

B: 690~720MHZ

Group 1		Group 2		Group 3		Group 4	
CH2	695.875MHZ	CH3	696.500MHZ	CH1	695.250MHZ	CH2	695.875MHZ
CH7	699.000MHZ	CH8	699.625MHZ	CH4	697.125MHZ	CH5	697.750MHZ
CH15	704.000MHZ	CH16	704.625MHZ	CH10	700.875MHZ	CH11	701.500MHZ
CH25	710.875MHZ	CH27	711.500MHZ	CH16	704.625MHZ	CH17	705.250MHZ
CH31	714.000MHZ	CH31	714.000MHZ	CH23	709.000MHZ	CH24	709.625MHZ
				CH31	714.000MHZ	CH32	714.625MHZ

C: 840~870MHZ

Group 1		Group 2		Group 3		Group 4	
CH2	850.875MHZ	CH3	851.500MHZ	CH1	850.250MHZ	CH2	850.875MHZ
CH7	854.000MHZ	CH8	854.625MHZ	CH4	852.125MHZ	CH5	852.750MHZ
CH15	859.000MHZ	CH16	859.625MHZ	CH10	855.875MHZ	CH11	856.500MHZ
CH25	865.875MHZ	CH27	866.500MHZ	CH16	859.625MHZ	CH17	860.250MHZ
CH31	869.000MHZ	CH31	869.000MHZ	CH23	864.000MHZ	CH24	864.625MHZ
				CH31	869.000MHZ	CH32	869.625MHZ

SOOLAI

SOOLAI ELECTRONICS CO.,LTD

Add: Xishanqiao, Yuhuatai Zone, Nanjing, 210041, China

Tel : 86-25-52803489

Fax: 86-25-84083635

E-mail:sales@soolai.com

<http://www.soolai.com>