

iVision-GR Grain Size Automatic Analysis Software USER'S MANUAL

June 4, 2011

USER'S MANUAL

TABLE OF CONTENTS


	<u>Page #</u>
1.0 GENERAL INFORMATION	1-2
1.1 Software Overview	1-2
1.2 System Requirements	1-2
1.3 Main Features	1-2
1.3.1 Grain size analysis	1-2
1.3.2 Camera calibration	1-2
1.4 Standard Features	1-2
1.4.1 Geometric Measurement.....	1-2
1.4.2 Image Processing	1-2
1.4.3 Document Entry	1-2
1.4.4 Album Management	1-3
1.4.5 Printing With Magnification.....	1-3
2.0 SOFTWARE INSTALLATION.....	2-2
2.1 Installation Overview	2-2
2.2 Installation Instructions	2-2
3.0 GETTING STARTED.....	3-1
3.1 Camera Setup.....	3-1
3.1.1 Camera driver installation.....	3-1
3.1.2 Camera selection.....	3-1
3.1.3 Image resolution setup	3-1
3.1.4 Camera parameter setup.....	3-2
3.2 Starting the application.....	3-3
3.2.1 Graphical User Interface (GUI) setup.....	3-3
3.2.2 Camera calibration	3-4
3.3 Analysis by contours.....	3-6
3.3.1 Settings	3-6
3.3.2 Automatic analysis.....	3-6
3.4 Analysis by cross points	3-7
3.4.1 Settings	3-7
3.4.2 Automatic analysis.....	3-7
3.5 Appendix: Using the standard features	3-8
3.5.1 Geometric measurement	3-8
3.5.2 Image processing	3-8
3.5.3 Document entry	3-8
3.5.4 Album management.....	3-9
3.5.5 Printing with magnification	3-9

1.0 GENERAL INFORMATION

1.0 GENERAL INFORMATION

1.1 Software Overview

iVision-GR grain size analysis software is used in automatically finding grains and calculating the average grain size on digital images. Two methods, by grain contours and by cross points, are provided in the calculation.

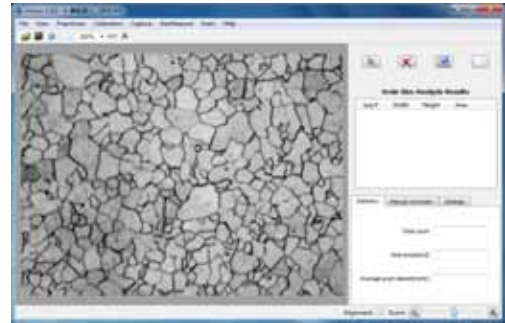

1.2 System Requirements

System: IBM compatible PC with Windows XP, Windows Vista, or Windows 7 32-bit operating system. 1GHz CPU and 512MB RAM or higher are recommended due to the intensive calculation in image processing. At least two USB2.0 ports are required with one for the USB license key and another for the USB camera (if needed).

1.3 Main Features

1.3.1 Grain size analysis

To automatically find grains and calculate their average grain diameter.

1.3.2 Camera calibration

To calibrate camera either in manual mode or in automatic mode

1.4 Standard Features

1.4.1 Geometric Measurement

System provides the tools to draw and measure common geometric shapes such as lines, angles, 4-point angles (for missing or hidden vertexes), rectangles, circles, ellipses, and polygons. Note that the measurement assumes the system is calibrated.

1.4.2 Image Processing

System provides a rich set of image processing tools for advanced users. The standard tools in the system include adjusting Brightness, Contrast, Gamma, and Histogram Level, and the Sharpen, Smooth, Invert, and Convert to Grey functions. On grey scale images, system provides various advanced tools in filtering and finding edges, as well as some standard tools in morphological operations such as Open, Close, Dilation, Erosion, Skeletonize, and Flood Fill.

1.4.3 Document Entry

On an image, system provides a document editor to enter/edit documents with contents either in simple plain text format or in advanced HTML format with objects including tables, list, and images.

1.4.4 Album Management

System allows user manage multiple images in an album which can be saved to and opened from an album file. The images can have the standard geometric shapes and the documents as entered by user as described above.

1.4.5 Printing With Magnification

System can print the image with user specified magnification if the camera is calibrated.

2.0 SOFTWARE INSTALLATION

2.0 SOFTWARE INSTALLATION

2.1 Installation Overview

iVision software is modular in architecture. It consists of the application platform and upon which the application modules. The following components are installed in iVision-GR: 1) Microsoft VC++ redistributable package since iVision is developed with MSVC; 2) iVision software platform; 3) Related hardware drivers in the package such as the camera driver; 4) iVision application modules such as iVision-GR.

2.2 Installation Instructions

Double-click the installer file iVision_v1.0.0_WIN32_XP_TZXXXXXX_installer.exe to start the installation process, and answer “Yes” at all the prompts in the camera driver installation, where TZXXXXXX is the USB license key ID. Note to change the drive in installation directory if other than the default D: drive. Also note that if installation error message “II Camera 02 DirectX registration failed” shows up in the installation process, then it is necessary to manually register the camera DirectX driver after the installation process by running (double-clicking) the **reg.bat** in the iVision installation folder (D:\Intelligent Instruments\iVision_v1.0.0\Drivers\II_Camera_02\DirectX).

3.0 GETTING STARTED

3.0 GETTING STARTED

3.1 Camera Setup


It is necessary to set up the USB camera for the system at the first time use and these steps can be totally skipped at later use.

3.1.1 Camera driver installation

When the USB camera is plugged in at the first time use after iVision is installed, depending on the computer operation system the computer may ask to install the camera driver either manually or automatically. Answer “automatic” since the camera driver is already pre-installed during installation.


3.1.2 Camera selection

Open iVision, select menu **Image Capture ->Open capture window** to invoke the “**Media Capture**” window. Then go to menu **Devices** and select **II Camera 02** or another applicable camera. Note that the following setup instructions apply to II Camera 02 only, and different cameras have different parameter configurations.

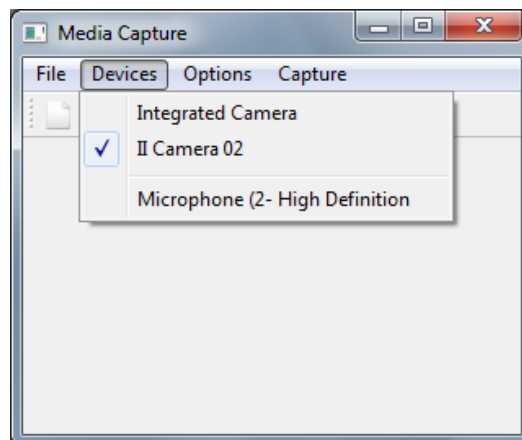


3.1.3 Image resolution setup

On **Media Capture** window, select menu **Options -> Video Capture Pin...** to bring up the camera video format setup **Properties** dialog and select desired resolution on **Video Format** under **Format** tab.

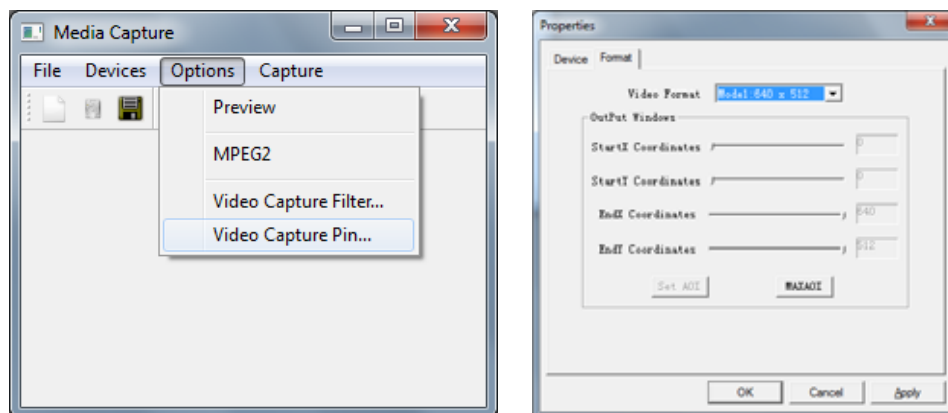


3.1.4 Camera parameter setup

On **Media Capture** window, select menu **Options -> Video Capture Filter...** to bring up the camera parameters setup **Properties** dialog. Under tab **Plugin**, click button **Plugin**, select menu **Plugin Manager...** to invoke the **Plugin Manager** dialog. Make sure all the plugin components are checked.

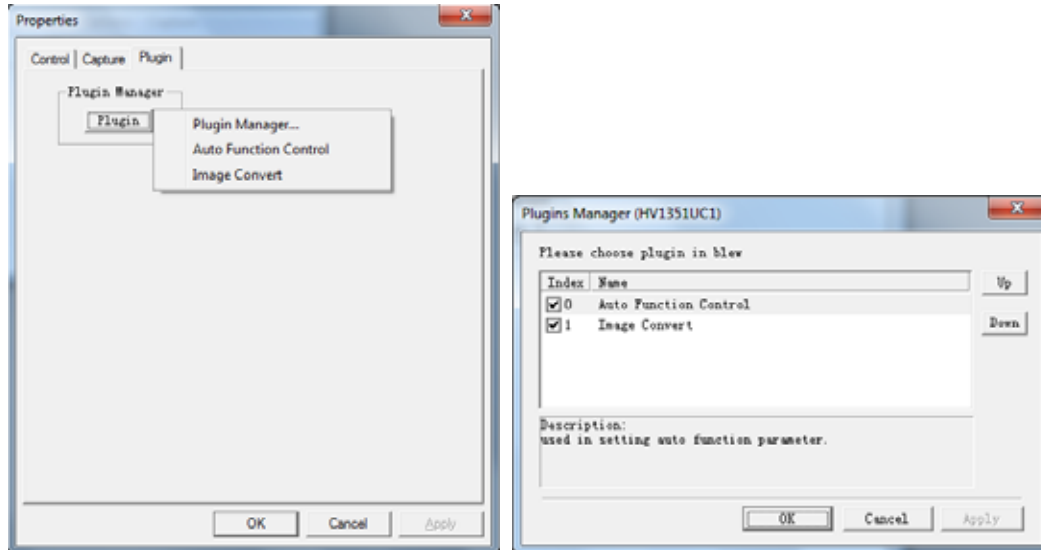

Finally go back to **Media Capture** window, and select menu **Preview**, camera video preview should appear on both Media Capture window and iVision main window. Select menu **Options -> Video Capture Filter...** to bring up the camera parameter setup **Properties** dialog again and adjust the **A/D -> Change Level** under **Capture** tab, and the **Shutter->Speed** and the **Gain->Gain** parameters under **Control** tab for the best quality image capture. Note the **Units** selection in **Shutter** speed.


Exit iVision, the above camera settings should be saved and there is no need to do the setup when iVision is opened the next time.

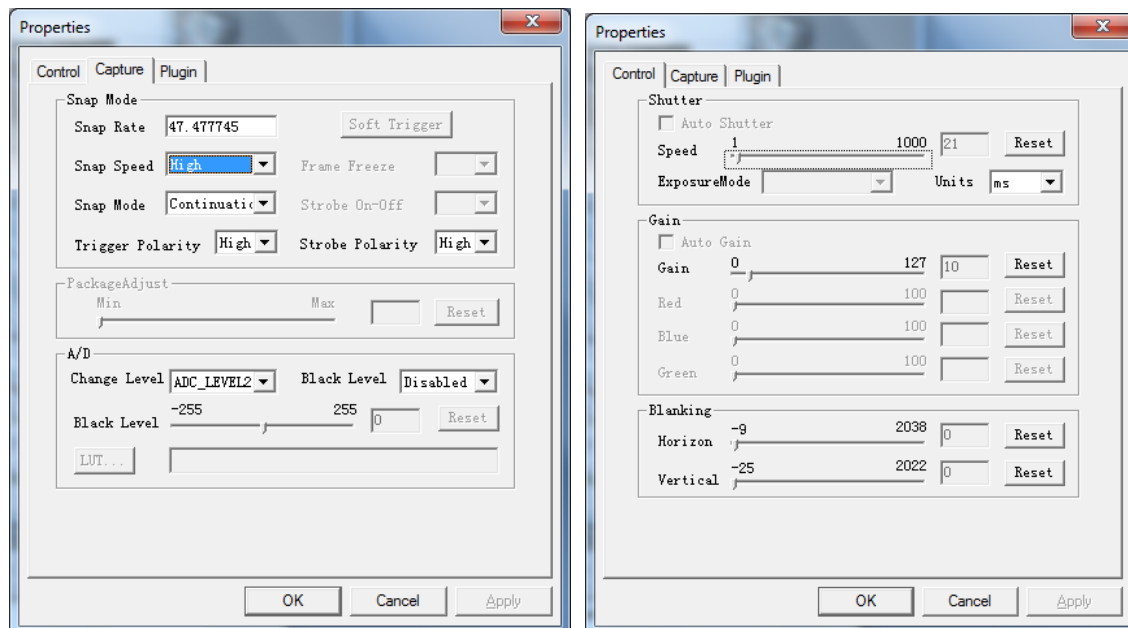


3.2 Starting the application

3.2.1 Graphical User Interface (GUI) setup

Layouts: Different application module in iVision has its own GUI . Select menu Grain->Contour or Cross analysis to bring out the main interface, depending on which method to calculate the average grain size.

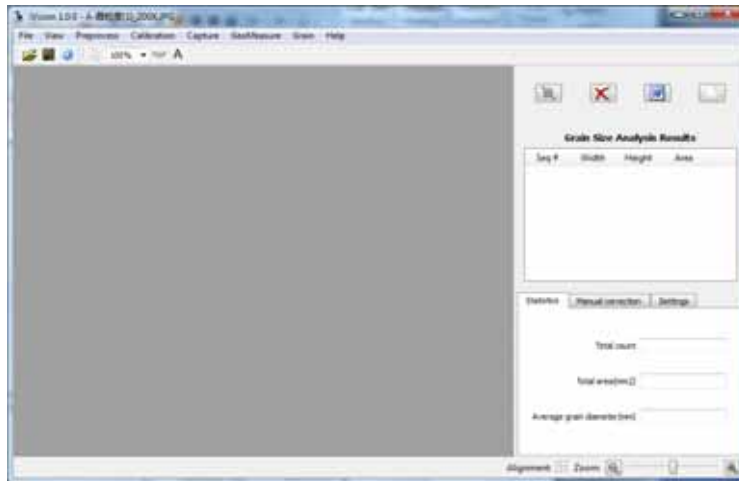

Configurations: Many other GUI settings such as menu orders can be configured in the **Configuration Settings** dialog through menu **File -> View/Edit configurations...**

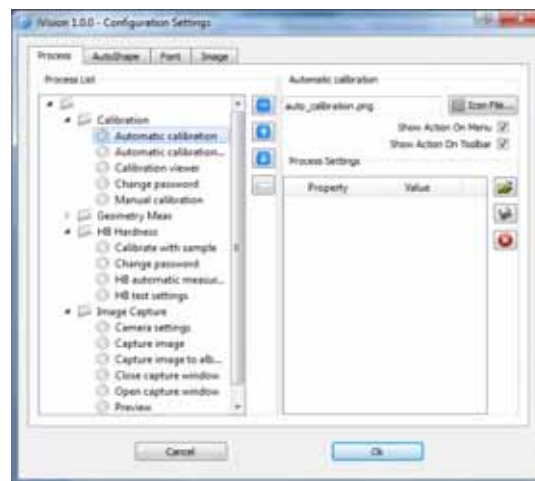

Language: To choose a different GUI language, go to menu Help and select menu Language. Choose the new language and the application will exit. After restarting the application the new language will take effect.


3.2.2 Camera calibration

To get quantitative geometric measurement from the camera image it is necessary to calibrate the camera to obtain the conversion from pixel locations to their object physical locations. There are two methods to calibrate the camera in iVision.


a) Manual calibration



Manual calibration simply calculates the linear scale between the pixel distance and the physical distance of two points on image. Place the calibration ruler or grid under the camera, start video preview by selecting menu **Image Capture -> Preview**, move the ruler or camera to make sure the lines are approximately aligned in preview and snap an image by selecting menu **Image Capture -> Capture Image**.

Select menu **Calibration -> Manual calibration**, hold down the mouse and drag from one line to another line with known and adequate separation distance and then release mouse.

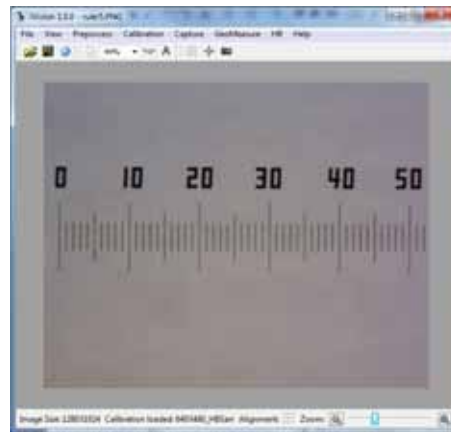

A dialog will prompt user for the known physical distance between the dragged start and end lines and a name for the calibration. After the manual calibration is done, system will prompt user whether to load the done calibration or not. In any case user can load the named calibration by selecting menu **Calibration->Calibration viewer** and load the calibration from there.




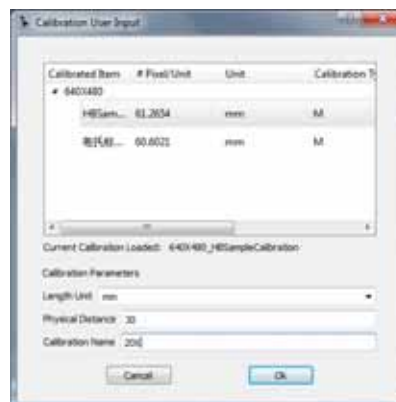


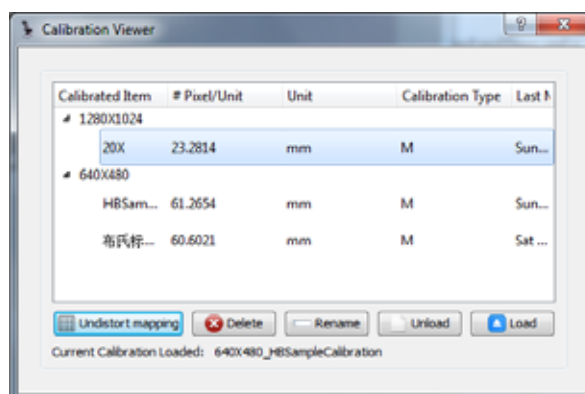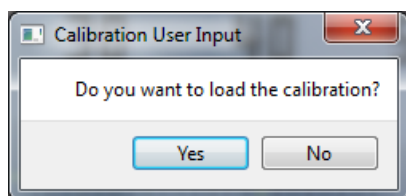

b) Automatic calibration

Automatic calibration is much more complex in process but more convenient in usage. It automatically finds the cross points on the grid image, map them to their physically locations and obtain the true 2-D mapping between a physical location and its pixel location via interpolation.

In stead of a calibration ruler, a calibration grid is needed to do the automatic calibration. First select menu Calibration->Auto calibration settings to set up the X&Y line distance, unit etc. If the lines in image will be darker than the background then Invert Image needs to be checked. Snap an image with the grid approximately aligned. Select menu Calibration->Automatic calibration to perform the automatic calibration after which the system will locate and mark most of the cross points of the grid image.

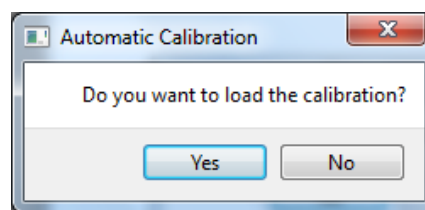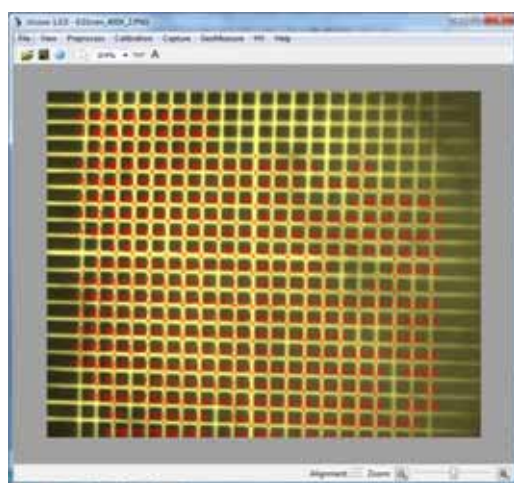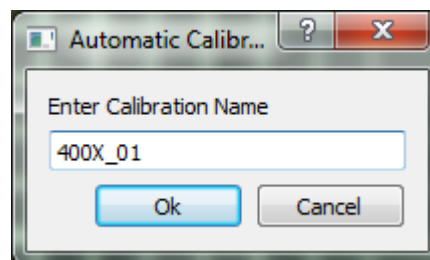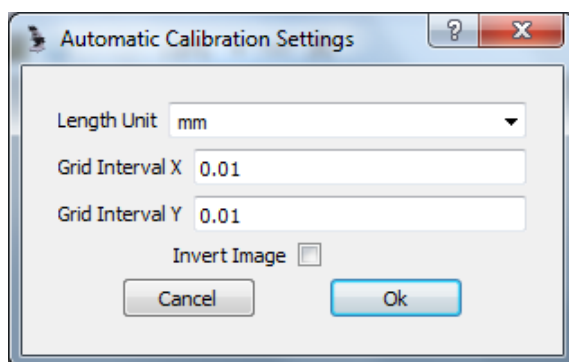


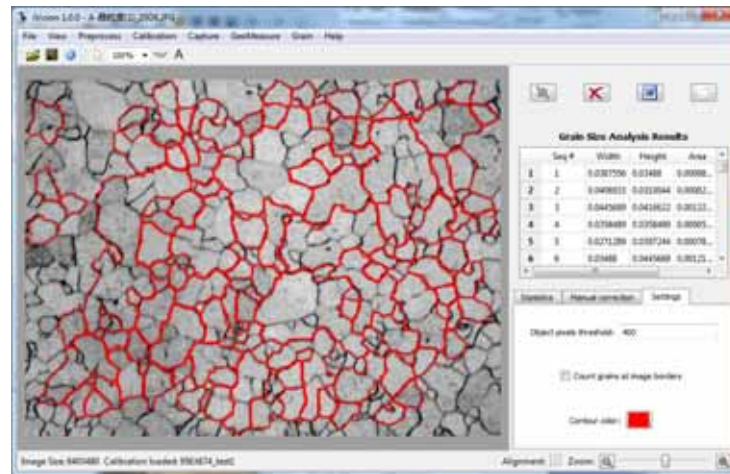
3.3 Analysis by contours






3.3.1 Settings

If the (UI)user interface of grain contour analysis is not shown, select menu Grain->Contour to bring it out. Under tab Settings, set Object pixels threshold which is the minimum number of pixels for an object in the image to be analyzed. If it is too small then nuisance little objects will be taken into account, otherwise if it too large then the desired objects may be ignored. Check or uncheck “Count grains at image borders” depending on whether or not to count those grains at image borders. User may change the contour color under the settings.

3.3.2 Automatic analysis

1. **Image capture:** If needed, select menu Capture->Video preview to get preview, then select Snap image to get an image from the camera.
2. **Automatic analysis:** On the main UI, click on the Automatic Measurement tool button , iVision will automatically find the contours of the grains. The contour of each found grain will be displayed on the image.






3. **Manual correction:** After a manual correction, the analysis results will be updated automatically.
 - a) **Dimension:** Click to select the object to be corrected. Mouse drag move a vertex on the contour to match the contour with the real grain.
 - b) **Delete:** Click to select the object (or CTRL click to select multiple objects) to be deleted, hit Delete key on the keyboard or click the Remove selected  button on the UI.
 - c) **Merge:** Click and CTRL click to select two grain contours that have touching (or close to touching) edges, under the Manual correction tab click the Merge  button, then the mouse icon will become cross to let user position the mouse. At each end of the touching edge of the two grain contours to be merged, click on both sides with total of 4 clicks to define the edge to merge, and the two grains contours will be merged.
 - d) **Split:** Click to select the object, under the Manual correction tab click the Split  button, click on two points (outside of the grain) to define the splitting line and the grain contour will be split.
 - e) **Add:** To add a grain contour, under the Manual correction tab click the Add  button, click on the real grain to make a polygon contour(note to click on the first point at the end to form a polygon).
4. **Generate report:** Click on Generate report tool button  to generate a Word document report.


3.4 Analysis by cross points


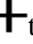

3.4.1 Settings

If the main UI of Cross distance analysis is not shown, select menu Grain->Cross distance to bring it out. The parameter Grain edge threshold defines the threshold value in finding the grain edges.

3.4.2 Automatic analysis

1. **Image capture:** If needed, select menu Capture->Video preview to get preview, then select Snap image to get an image from the camera.
2. **Automatic analysis:** On the main UI, click on the tool button Add line  or Add circle , and draw the base lines and /or circles on the image. Click on toll button Find cross points , the software will automatically find the cross points on the base lines and circles that cross with the grain edges, and calculate the average distance between the cross points and hence the average grain diameter.

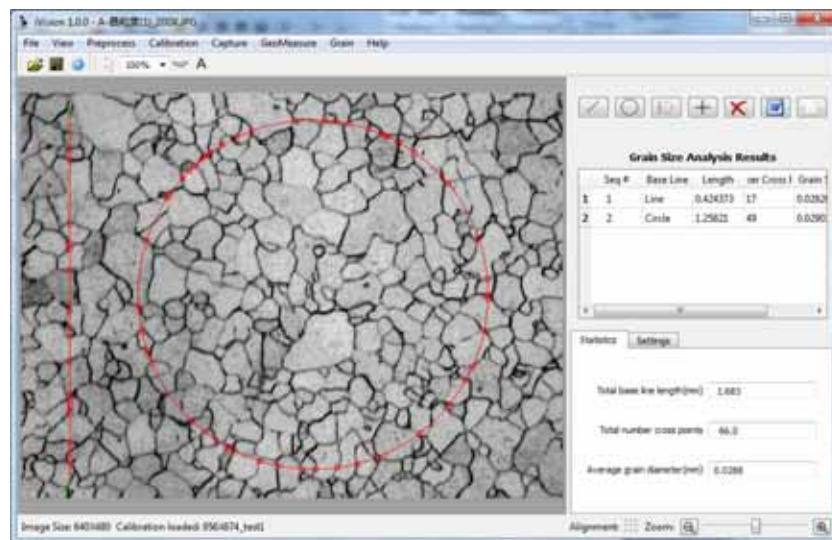


3. **Manual correction:** Like in the analysis by contours, after a manual correction the analysis results will be updated automatically.
 - a) **Add:** To add cross points that are missed out, click on Add cross points tool button , the cursor will become a cross to let user position the mouse, click on the locations to add the cross points. After adding is completed click on the tool button  to finish.
 - b) **Delete:** To delete a cross point, drag mouse to select the point and hit the Delete key. To delete a base line or circle and the cross points on it, click on the line or circle to select and hit the Delete key.
 - c) **Classification:** Each cross point can be manually classified (counted) either as 0.5(green), 1(red), or 1.5(blue) to take into account. Drag mouse to select the cross point, right click to bring out the popup menu to classify. Note that in the cases of base lines, as required the two cross points at both ends are automatically classified as 0.5.
4. **Generate report:** Click on Generate report tool button  to generate a Word document report

3.5 Appendix: Using the standard features

3.5.1 Geometric measurement


Select any one of the sub-menus on the menu GeoMeasure, the geometric measurement main interface will appear. Draw the standard geometric shapes on the image and their measurement results will be displayed on the data table on the right and on the shapes for some shape types. User may edit a shape by click selecting the shape and mouse dragging on one of its control points, and the corresponding measurement results will be automatically updated.

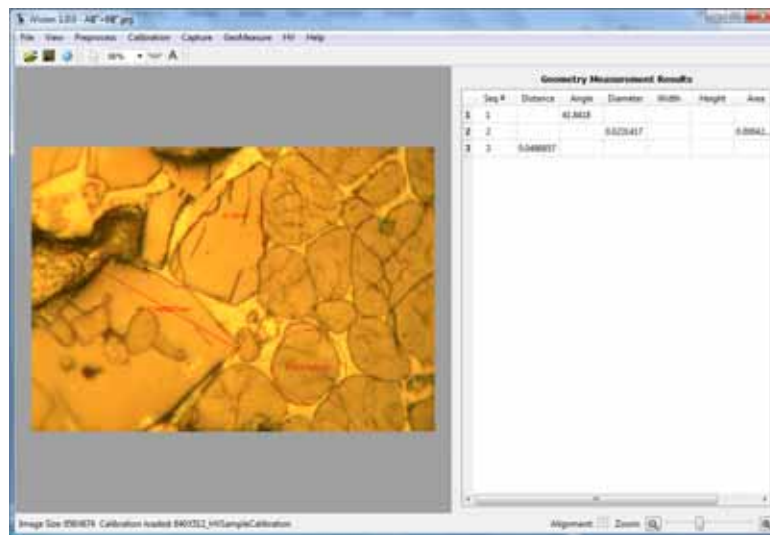


3.5.2 Image processing

Select menu Preprocess and its sub-menus to access the image processing tools.

3.5.3 Document entry


Push on the **Add text**  tool button, or select **Add text** sub-menu under GeoMeasure, then click on the image, enter text at the small text entry box. To edit the text or to enter complex HTML format documents, double click on the text to invoke the document editor.

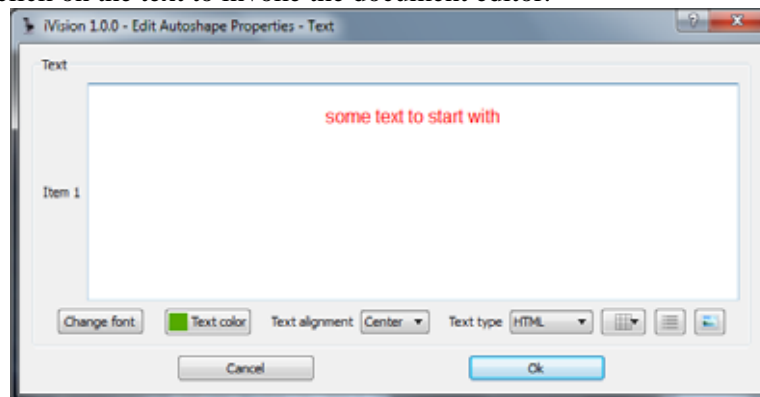

To edit the text in HTML format, select HTML on Text type. To insert table, list, or image, click on the tool buttons at the right bottom. The tool buttons to change font, text color, and text alignment lie at the left bottom.

3.5.4 Album management

- To view the album, select menu View->Image Album. To change image display size in album, move the splitter. Album can be docked in the main window and it can be floated also.
- Double-click on the image will copy the image into the album, and conversely double-click on the image on the album will copy it to the image panel
- To open/save album file go to menu File
- To reorder the images in album, drag an image with its frame and drop it to position
- To remove an image or images on album, click to select and press the Delete key

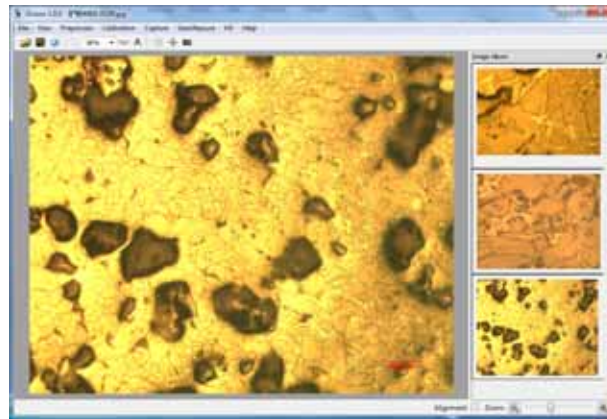

3.5.5 Printing with magnification

Connect to the printer first and select menu **File->Print...** to bring up the printing dialog. Select or enter the desired magnification at the bottom, the image print size will change accordingly in preview. User may enter text (can be in HTML format to include tables,lists,images etc) under user input and the text will be saved for next printing. Analysis result tables and statistics summaries can be checked for printing. And all the above elements to be printed have options in printing locations in either top, bottom, left, and right. The textbox widths can be limited by their width inputs.

