

GB

RENLIIG

FWM8



Design and Quality
IKEA of Sweden

Contents

| | | | |
|---------------------|----|----------------------|----|
| Safety information | 4 | Consumption values | 17 |
| Safety instructions | 5 | Hints and tips | 18 |
| Product description | 7 | Care and cleaning | 19 |
| Control panel | 8 | Troubleshooting | 21 |
| Before first use | 10 | Technical Data | 24 |
| Settings | 11 | ENVIRONMENT CONCERNS | 25 |
| Daily Use | 11 | IKEA GUARANTEE | 25 |
| Programmes | 14 | | |

Subject to change without notice.

Safety information

Before the installation and use of the appliance, carefully read the supplied instructions. The manufacturer is not responsible if an incorrect installation and use causes injuries and damages. Always keep the instructions with the appliance for future reference.

Children and vulnerable people safety

- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Do not let children play with the appliance.
- Children of less than 3 years should be kept away unless continuously supervised.
- Keep all packaging away from children.
- Keep all detergents away from children.
- Keep children and pets away from the appliance door when it is open.
- If the appliance has a child safety device, we recommend you activate it.

- Cleaning and user maintenance shall not be made by children without supervision.

General Safety

- Do not change the specification of this appliance.
- Obey the maximum load volume of 8 kg (refer to the “Programme chart” chapter).
- The operating water pressure (minimum and maximum) must be between 0,5 bar (0,05 MPa) and 8 bar (0,8 MPa).
- The ventilation openings in the base (if applicable) must not be obstructed by a carpet.
- The appliance is to be connected to the water mains using the new supplied hose-sets. Old hose sets must not be reused.
- If the supply cord is damaged, it must be replaced by the manufacturer, its Authorised Service Centre or similarly qualified persons in order to avoid a hazard.
- Before maintenance, deactivate the appliance and disconnect the mains plug from the mains socket.
- Do not use water spray and steam to clean the appliance.
- Clean the appliance with a moist soft cloth. Only use neutral detergents. Do not use abrasive products, abrasive cleaning pads, solvents or metal objects.

Safety instructions

Installation

- Remove all the packaging and the transit bolts.
- Keep the transit bolts. When you move the appliance again you must block the drum.
- Always be careful when you move the appliance because it is heavy. Always wear safety gloves.
- Do not install or use a damaged appliance.
- Obey the installation instruction supplied with the appliance.
- Do not install or use the appliance where the temperature is less than 0 °C or where it is exposed to the weather.
- Make sure that the floor where you install the appliance is flat, stable, heat resistant and clean.
- Make sure that there is air circulation between the appliance and the floor.

- Adjust the feet to have the necessary space between the appliance and the carpet.
- Do not install the appliance where the appliance door can not be fully opened.

Electrical connection

- The appliance must be earthed.
- Always use a correctly installed shockproof socket.
- Make sure that the electrical information on the rating plate agrees with the power supply. If not, contact an electrician.
- Do not use multi-plug adapters and extension cables.
- Make sure not to cause damage to the mains plug and to the mains cable. Should the mains cable need to be replaced, this must be carried out by our Authorised Service Centre.
- Connect the mains plug to the mains socket only at the end of the installation. Make sure that there is access to the mains plug after the installation.
- Do not touch the mains cable or the mains plug with wet hands.
- Do not pull the mains cable to disconnect the appliance. Always pull the mains plug.
- Only for UK and Ireland: The appliance has a 13 amp mains plug. If it is necessary to change the fuse in the mains plug, use a 13 amp ASTA (BS 1362) fuse.
- This appliance complies with the E.E.C. Directives.

Water connection

- Make sure not to cause damage to the water hoses.
- Before you connect the appliance to new pipes or pipes not used for a long time, let the water flow until it is clean.

- The first time you use the appliance, make sure that there is no leakage.

Use



Warning! Risk of injury, electrical shock, fire, burns or damage to the appliance.

- Use this appliance in a household only.
- Obey the safety instructions on the detergent packaging.
- Do not put flammable products or items that are wet with flammable products in, near or on the appliance.
- Make sure that you remove all metal objects from the laundry.
- Do not put a container to collect possible water leakage under the appliance. Contact the Authorised Service Centre to ensure which accessories can be used.
- Do not touch the glass of the door while a programme operates. The glass can be hot.

Service

- To repair the appliance contact an Authorised Service Centre.
- Use original spare parts only.

Disposal




Warning! Risk of injury or suffocation.

- Disconnect the appliance from the mains supply.
- Cut off the mains cable and discard it.
- Remove the door catch to prevent children and pets to get closed in the appliance.


Product description

Appliance overview

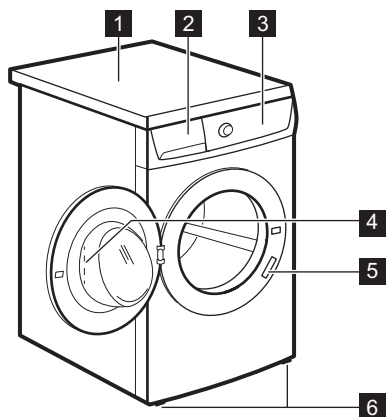

- 1 Worktop
- 2 Detergent dispenser
- 3 Control panel
- 4 Door handle
- 5 Rating plate
- 6 Feet for the appliance level

Detergent dispenser drawer

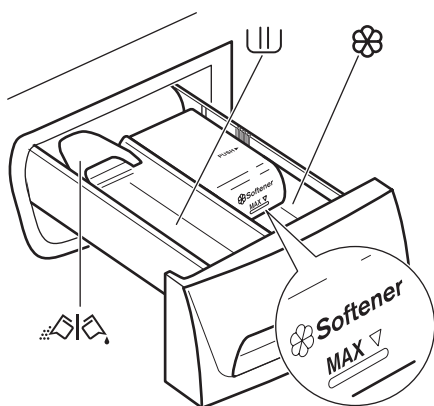

- Detergent compartment for washing phase. If you use liquid detergent, put it immediately before you start the programme.
- Compartment for liquid additives (fabric softener, starch).
- Flap for powder or liquid detergent.


- Follow the product manufacturer's recommendations on quantities to use and do not ever exceed the **MAX** mark in the detergent dispenser drawer. Any fabric softener or starching additives must be poured into the compartment before starting the wash programme.

- Caution!** If you wish to carry out the prewash, pour the detergent among washing items into the drum.

⚠ Caution! Depending on the type detergent you use (powder or liquid), ensure that the flap, placed in the main wash compartment, is in the desired position.

Child safety device

This appliance incorporates a special feature to prevent children and pets becoming trapped inside the drum. Make sure that children or pets do not climb into the drum. Please check into the drum before using it.

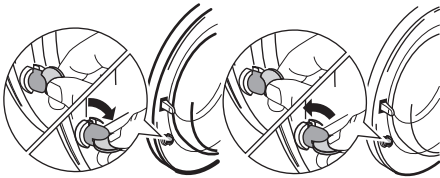


To activate this device, rotate the button clockwise (without pressing it) inside the door until the groove is horizontal. If necessary use a coin.

To disable this device and restore the possibility of closing the door, rotate the button anticlockwise until the groove is vertical.

Control panel

Control panel description

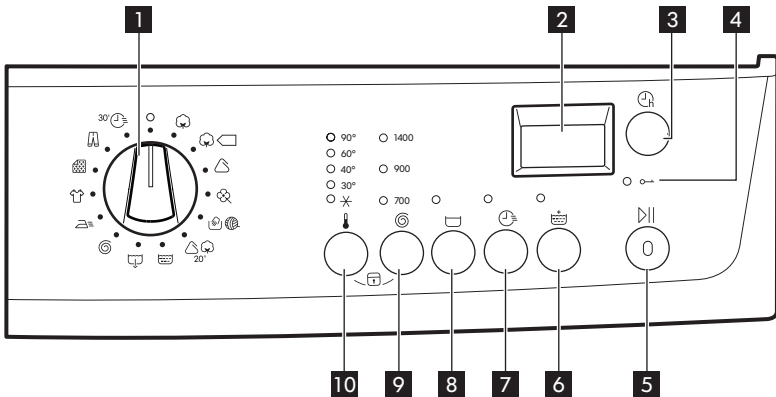

1 Programme knob

2 Display

3 Delay Start button

4 Door lock indicator

5 Start/Pause button







6 Extra Rinse button

 

 




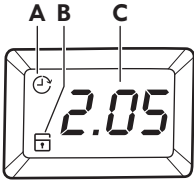

7 Super Quick button 

8 Rinse Hold button 

9 Spin reduction 

10 Temperature button 

| | |
|--|---|
| <p>Programme knob</p> | <p>It allows you to switch the appliance On/Off and/or to select a programme.</p> |
| <p>Display</p>  | <p>The display shows the following information:</p> <ul style="list-style-type: none"> • A - Delay Start indicator The indicator comes on the display when the related option is set. • B - Child safety lock This device permits you to leave the appliance unattended during it's functioning. • C - Digit: <ul style="list-style-type: none"> - Duration of the selected programme. After selecting a programme, the duration is displayed in hours and minutes (for example 2.05). The duration is calculated automatically on the basis of the maximum recommended load for each type of fabric. After the programme has started, the time remaining is updated every minute. - Delayed start. The selected delay appears on the display for a few seconds, then the duration of the selected programme is displayed again. The delay time value decreases by one unit every hour and then, when 1 hour remains, every minute. - Alarm codes. In the event of operating problems, some alarm codes can be displayed, for example (see paragraph «Troubleshooting»). - Incorrect option selection. If an option which is not compatible with the set wash programme is selected, the message E r r is displayed at the bottom of the display for a few seconds. The integrated red indicator of button  start flashing. - End of programme. When the programme has finished the flashing zero  is displayed, the indicator  and the indicator of button  go out. The door can be opened. |
| <p>Delay Start button </p> | <p>The programme can be delayed from 30 min - 60 min - 90min, 2 hours and then by 1 hour up to a maximum of 20 hours by means of this button.</p> |

| | |
|---|---|
| <p>Door lock indicator</p>  | <p>This indicator illuminates when the programme starts and indicates if the door can be opened:</p> <ul style="list-style-type: none"> • indicator on: the door cannot be opened. The appliance is working or has stopped with water left in the tub. • indicator off: the door can be opened. The programme is finished or the water has been emptied out. • indicator blinking: the door is opening in a few minutes. |
| <p>Start/Pause button</p>  | <p>This button allows you to start or to interrupt the selected washing programme.</p> |
| <p>Extra Rinse button</p>  | <p>This appliance is designed for saving energy. If it necessary to rinse the laundry using an extra quantity of water (extra rinse), select this option. Some additional rinses will be performed. This option is recommended for people who are allergic to detergents, and in areas where the water is very soft.</p> |
| <p>Super Quick button</p>  | <p>By pressing this button, the appliance performs a short cycle for lightly soiled items or for laundry which needs only freshening up. We recommend you to reduce the fabric loading. The relevant indicator illuminates.</p> |
| <p>Rinse Hold button</p>  | <p>Set this option to prevent the laundry creases. The drum turns regularly to prevent the laundry creases.</p> <p> There is a water in the drum when the programme is completed. The door stays locked. You must drain the water to unlock the door. To drain the water refer to «At the end of the programme».</p> |
| <p>Spin reduction button</p>  | <p>By pressing this button you can change the spin speed of the selected programme.</p> <p>The relevant indicator illuminates.</p> |
| <p>Temperature button</p>  | <p>By selecting a programme, the appliance proposes automatically a default temperature. This button allows you to increase or decrease the washing temperature. If you select  position, the appliance will perform a washing with cold water.</p> <p>The relevant indicator illuminates.</p> |

Before first use



1. Ensure that the electrical and water connections comply with the installation instructions.
2. Remove any material from the drum.

Settings

Acoustic signals

The appliance is provided with an acoustic device, which sounds in the following cases:



- at the end of the cycle;
- if there is a fault.



By pressing the  and  buttons simultaneously for about 6 seconds, the acoustic signal is deactivated (except if there is a fault). By pressing these 2 buttons again, the acoustic signal is reactivated.

Child Lock

This device permits you to leave the appliance unattended so you do not need to worry that children might be injured by or cause damage to the appliance. This function remains enabled also when the appliance is not working.




There are two different ways to set this option:

- Before pressing button : it will be impossible to start the appliance.
- After pressing button : it will be impossible to change any other programme or option.

To enable or disable this option press simultaneously for about 6 seconds buttons  and  until on the display, the icon appears or disappears.

Permanent Extra Rinse

With this option you can **permanently** have an extra rinse when you set a new programme.

- To **activate/deactivate** this option touch the buttons  and  at the same time until the indicator  **comes on/goes off**.

Daily Use

Loading the laundry

Open the water tap. Connect the mains plug to the mains socket.

1. Pull the door handle to open the appliance door.
2. Put the laundry in the drum, one item at a time.
3. Shake the items before you put them in the appliance.

Make sure not to put too much laundry in the drum. Refer to max. loads indicated in "Programme chart".


4. Close the door.



Caution!
Make sure that no laundry stays between the seal and the door.


There is a risk of water leakage or damage to the laundry.

Using detergent and additives

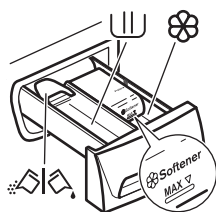


1. Measure out the detergent and the fabric conditioner.
2. Put the detergent and the fabric conditioner into the compartments.
3. Carefully close the detergent drawer.

Liquid or powder detergent

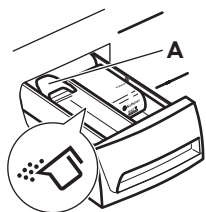


The default position of the flap is **A** (powder detergent).

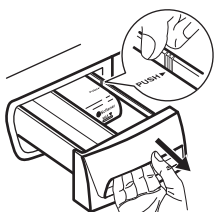

To use liquid detergent:


1. Remove the drawer. Push the drawer edge in the place with the arrow (PUSH) to remove the drawer easily.

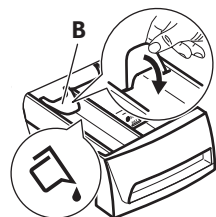

2. Adjust the flap in position **B**.
3. Put back the drawer in the recess.

i When you use the liquid detergent:

- Do not use gelatinous or thick liquid detergents.
- Do not put more liquid than 120 ml.
- Do not set the delay start.

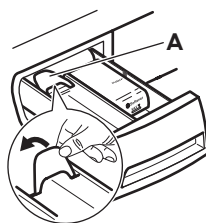

When the flap is in position **B** and you want to use powder detergent:

1. Remove the drawer.
2. Adjust the flap in position **A**.
3. Put back the drawer in the recess.

Setting a programme


 
1. Turn the programme knob to switch the appliance on and set the programme:
 - The indicator of the button flashes.
 - The display shows the programme duration.
2. If necessary, change the temperature and the spin speed or add available options. When you activate an option, the indicator of the set option comes on.

i If you set something incorrect, the display shows the message **E r r**.

i For the description of each wash cycle, the compatibility among the washing programmes and the options, consult the chapter «Programmes».



 
Starting a programme without the delay start


 


Press the button .

- The indicator of the button  stops to flash and stays on.
- The programme starts, the door locks, the indicator  is on.
- The programme time decreases with steps of one minute.


 



- i** The drain pump can operate for a short time at the beginning of the washing cycle.

Starting a programme with the delay start option

1. Press the button  again and again until the display shows the delay you want to set. The delay start indicator comes on.
2. Press the button :
 - The door is locked and the indicator  is on.
 - The appliance starts the countdown.
 - When the countdown is completed, the programme starts automatically.



- i** You can cancel or change the set of the  option before you press the button . After pressing the button  you can only cancel the  option.

To cancel the  option:


- a. Press the button  to set the appliance to pause. The indicator of button  flashes.
- b. Press the button  until the display shows .
Press the button  again to start the programme immediately.

Interrupting a programme and changing the options

You can change only some options before they operate.


 
1. Press the button .
The indicator flashes.
2. Change the options.
3. Press the button  again.
The programme continues.

Cancelling a running programme


1. Turn the programme knob to position  to cancel the programme and to deactivate the appliance.
2. Turn the programme knob again to activate the appliance. Now, you can set a new washing programme.




 
- i** Before starting the new programme the appliance could drain the water. In this case, make sure that the detergent is still in the detergent compartment, if not fill the detergent again.

Opening the door



 

While a programme or the  operates, the appliance door is locked. The indicator  is on.

- ⚠ Caution!** If the temperature and level of the water in the drum are too high and the drum still rotates, you cannot open the door.


 

To open the door during the first minutes of the cycle or when the  operates:

1. Press the button  to pause the appliance.
2. Wait until the indicator  goes off.
3. You can open the door.
4. Close the door and touch the button  again. The programme (or the ) continues.






At the end of the programme

- The appliance stops automatically.
- The acoustic signal operates (if it is activated).
- In the display  comes on.
- The indicator of the button  goes off.
- The door lock indicator  goes off.
Turn the programme knob to position  to deactivate the appliance.
- You can open the door.
- Remove the laundry from the appliance. Make sure that the drum is empty.
- Close the water tap.
- Keep the door and the detergent drawer ajar, to prevent the mildew and odours.

The washing programme is completed, but there is water in the drum:


- The drum turns regularly to prevent the creases in the laundry.
- The indicator  stays on to remind you to drain the water.
- The door lock indicator  is on. The indicator of button  is off. The door stays locked.
- You must drain the water to open the door.

Draining the water:

1. To drain the water.
 - Set a  or a  programme.
 - Press the button . The appliance drains the water and spins.
2. When the programme is completed and the door lock indicator  goes off, you can open the door.
3. Turn the programme knob to the position  to deactivate the appliance.

Stand by


Some minutes after the end of the washing programme, if you do not deactivate the appliance, the energy saving status activates. The energy saving status decreases the energy consumption when the appliance is on the standby:


 
- All indicators go off.
- The indicator of the button  flashes slowly.










Press one of the buttons to deactivate the energy saving status.






Programmes

Programme Chart


 Please always refer to the care label symbol of your garment and select the washing programme based on what it says.

| Programme Temperature range | Maximum load Maximum spin speed | Programme description (Type of load and soil level) |
|---|---------------------------------|--|
|  COTTONS 90° - 60° - 40° - 30° -  (Cold) | 8 kg 1400 rpm | White cotton and coloured cotton. Normal soil and light soil. |

| Programme Temperature range | Maximum load Maximum spin speed | Programme description (Type of load and soil level) |
|--|---------------------------------------|---|
|  COTTONS ECO ¹⁾ 60°C - 40°C | 8 kg 1400 rpm | White cotton and colour-fast cotton. Normal soil. The energy consumption decreases and the time of the washing programme is extended. |
|  SYNTHETICS 60° - 40° - 30° - ✖ (Cold) | 3 kg 900 rpm | Synthetic items or mixed fabric items. Normal soil. |
|  DELICATES 40° - 30° - ✖ (Cold) | 3 kg 700 rpm | Delicate fabrics as acrylics, viscose, polyester items. Normal soil. |
|  HANDWASH- WOOL 40° - 30° - ✖ (Cold) | 2 kg 900 rpm | Machine washable wool, hand washable wool and delicate fabrics with «hand washing» care symbol. ²⁾ |
|  MIX 20° 20°C | 2 kg 900 rpm | Special programme for cotton, synthetic and mixed fabrics with light soil. Set this programme to decrease the energy consumption. Make sure that the detergent is for low temperature in order to have good washing results ³⁾ . |
|  RINSE | 8 kg 1400 rpm ⁴⁾ | To rinse and spin the laundry. All fabrics. |
|  DRAIN | 8 kg | To drain the water in the drum. All fabrics. |
|  SPIN | 8 kg 1400 rpm | To spin the laundry and to drain the water in the drum. All fabrics. |
|  EASY IRON 60° - 40° - 30° - ✖ (Cold) | 1 kg 900 rpm | Synthetic items to be gentle washed. Normal and light soil. ⁵⁾ |

| Programme Temperature range | Maximum load Maximum spin speed | Programme description (Type of load and soil level) |
|--|--|--|
|  REFRESH 20 MIN 30°C | 1 kg 900 rpm | Synthetic and delicate items. Light soil items or items to refresh. |
|  DUVETS 40°C - 30°C | 3 kg 700 rpm | Special programme for one synthetic blanket, duvet, bedspread and so on. |
|  JEANS 60° - 40° - 30° - ✕ (Cold) | 3 kg 900 rpm | Items in denim and jersey. Also for dark coloured items. |
| 30°  MINIPRO- GRAMME 30°C | 3 kg 700 rpm | A short cycle for synthetics and delicate items with light soil level or for items to freshen up. |
|  ON/OFF | Position to turn the appliance off or/and reset a programme. | |

1) **Standard programmes for the Energy Label consumption values.** According to regulation 1061/2010, these programmes are respectively the «Standard 60°C cotton programme» and the «Standard 40°C cotton programme». They are the most efficient programmes in terms of combined energy and water consumption for washing normally soiled cotton laundry.

 The water temperature of the washing phase may differ from the temperature declared for the selected programme.



 




2) During this cycle the drum rotates slowly to ensure a gentle washing. It can seem that the drum doesn't rotate or doesn't rotate properly. Consider this as a normal functioning of the appliance.



 
















3) The appliance performs the short heating phase if the water temperature is below 20°C. The appliance can show the temperature setting as "cold".

4) The default spin speed is 700 rpm.

5) To reduce the creases of the laundry, this cycle regulates the water temperature and performs a soft wash and spin phase. The appliance adds some rinses.


Programme options compatibility


| Programme |  |  |  |  |  |
|--|---|---|---|---|---|
|  | ■ | ■ | ■ | ■ | ■ |
|  | ■ | ■ | | ■ | ■ |

| Programme |  |  |  |  |  |
|---|---|---|---|---|---|
|  | ■ | ■ | ■ | ■ | ■ |
|  | | ■ | ■ | ■ | ■ |
|   | ■ | ■ | | | ■ |
| 20°   | ■ | ■ | | ■ | ■ |
|  | ■ | ■ | | ■ | ■ |
|  | | | | | ■ |
|  | ■ | | | | ■ |
|  | ■ | ■ | | ■ | ■ |
|  | ■ | | | | ■ |
|  | | | | | ■ |
|  | ■ | ■ | | | ■ |
| 30°  | | | | | ■ |

1) When you set this option, we recommend that you decrease the quantity of the laundry. It is possible to keep the full load but the washing results can be unsatisfactory. Recommended load: cotton: 4 kg, synthetics and delicates: 1,5 kg.

Consumption values

 The data of this table are approximate. Different causes can change the data: the quantity and type of laundry, the water and ambient temperature.

 At programme start the display shows the duration programme for the maximum load capacity. During the washing phase the programme duration is automatically calculated and can be greatly reduced if the laundry load is lower than the maximum load capacity (e.g. Cotton 60°C, maximum load capacity 8 kg, the programme duration exceeds 2 hours; real load 1 kg, the programme duration don't reach 1 hour). When the appliance is calculating the real programme duration a dot blinks in the display.

| Programmes | Load (kg) | Energy consumption (kWh) | Water consumption (litre) | Approximate programme duration (minutes) | Remaining moisture (%) ¹⁾ |
|-----------------------------------|-----------|--------------------------|---------------------------|--|--------------------------------------|
| Cottons 60 °C | 8 | 1,35 | 70 | 159 | 52 |
| Cottons 40 °C | 8 | 0,87 | 69 | 158 | 52 |
| Synthetics 40 °C | 3 | 0,60 | 56 | 103 | 35 |
| Delicates 40 °C | 3 | 0,55 | 59 | 81 | 35 |
| Wool/Handwash 30 °C | 2 | 0,30 | 53 | 57 | 30 |
| Standard cotton programmes | | | | | |
| Standard 60 °C cotton | 8 | 0,96 | 52 | 244 | 52 |
| Standard 60 °C cotton | 4 | 0,73 | 40 | 210 | 52 |
| Standard 40 °C cotton | 4 | 0,62 | 41 | 196 | 52 |

1) At the end of spin phase.

| Off Mode (W) | Left On Mode (W) |
|--|------------------|
| 0.48 | 0.48 |
| The information given in the chart above are in compliance with the EU Commission regulation 1015/2010 implementing directive 2009/125/EC. | |

Hints and tips

The laundry load

- Divide the laundry in: white, coloured, synthetics, delicates and wool.
- Obey the washing instructions that are on the laundry care labels.
- Do not wash together white and coloured items.
- Some coloured items can discolour with the first wash. We recommend that you wash them separately for the first times.
- Button up pillowcases, close zippers, hooks and poppers. Tie up belts.
- Empty the pockets and unfold the items.
- Turn inside out multilayered fabrics, wool and items with painted illustrations.
- Remove hard stains.
- Wash with a special detergent heavy soil stains.
- Be careful with the curtains. Remove the hooks or put the curtains in a washing bag or pillowcase.
- Do not wash in the appliance laundry without hems or with cuts. Use a washing

bag to wash small and/or delicate items (e.g. underwired bras, belts, tights, etc.).

- A very small load can cause balance problems with the spin phase. If this occurs, adjust manually the items in the tub and start the spin phase again.

Stubborn stains

For some stains, water and detergent is not sufficient.

We recommend that you remove these stains before you put the items in the appliance.

Special stain removers are available. Use the special stain remover that is applicable to the type of stain and fabric.

Detergents and additives

- Only use detergents and additives specially made for washing machines:
 - powder detergents for all types of fabric,
 - powder detergents for delicate fabrics (40 °C max) and woollens,
 - liquid detergents, preferably for low temperature wash programmes (60 °C max) for all types of fabric, or special for woollens only.
- Do not mix different types of detergents.
- To help the environment, do not use more than the correct quantity of detergent.
- Obey the instructions that you find on the packaging of these products.

- Use the correct products for the type and colour of the fabric, the programme temperature and the level of soil.
- If your appliance has not the detergent dispenser with the flap device, add the liquid detergents with a dosing ball (supplied by the detergent's manufacturer).

Ecological hints

- Set a programme without the prewash phase to wash laundry with normal soil.
- Always start a washing programme with the maximum load of laundry.
- If necessary, use a stain remover when you set a programme with a low temperature.
- To use the correct quantity of the detergent, check the water hardness of your domestic system

Water hardness

If the water hardness in your area is high or moderate, we recommend that you use a water softener for washing machines. In areas where the water hardness is soft it is not necessary to use a water softener.

To know the water hardness in your area, contact your local water authority.

Use the correct quantity of the water softener. Obey the instructions that you find on the packaging of the product.

Care and cleaning



Warning! Refer to Safety chapters.



Caution! Do not use alcohol, solvents or chemical products.

External cleaning

Clean the appliance only with soap and warm water. Fully dry all the surfaces.

Descaling

If the water hardness in your area is high or moderate, we recommend that you use a

water descaling product for washing machines.

Regularly examine the drum to prevent limescale and rust particles.

To remove rust particles use only special products for washing machine. Do this separately from the laundry wash.


- i** Always obey the instructions that you find on the packaging of the product.

Maintenance wash

With the low temperature programmes it is possible that some detergent stays in the drum. Make regularly a maintenance wash. To do this:

- Remove the laundry from the drum.
- Set the cotton programme with the highest temperature with a small quantity of detergent.


Door seal

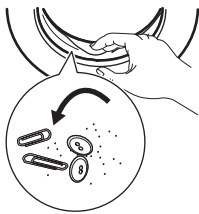


Regularly examine the seal and remove all objects from the inner part.

Cleaning the detergent dispenser


The washing powder and additive dispenser drawer should be cleaned regularly.

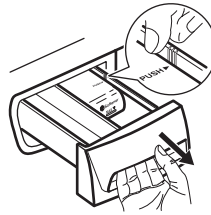


- Remove the drawer.

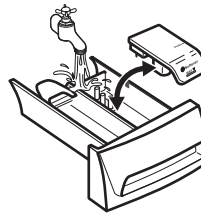

- To aid cleaning, the top part of the additive compartment should be removed.
- Clean all the removed parts of the dispenser drawer under a tap to remove any traces of accumulated powder.

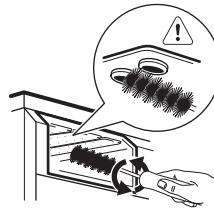

- Use the brush to clean the recess, ensuring that upper and lower part of it is well cleaned.

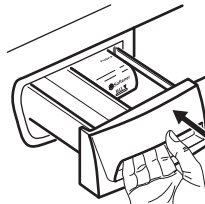


- After having cleaned the dispenser and the drawer recess, replace it.

Cleaning the inlet filter and the filter valve


If the appliance takes long to fill with water or doesn't fill, the starting button indicator flashes in red. Check if the water inlet filter

and the valve filter are blocked (see chapter "Troubleshooting" for more details).


Proceed as follows:

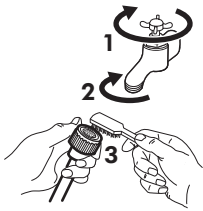


- Turn off the water tap.
- Unscrew the hose from the tap.
- Clean the filter in the hose with a stiff brush.
- Screw the hose back onto the tap. Make sure the connection is tight.

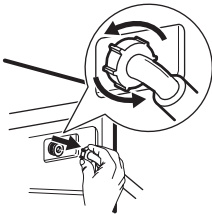

- Unscrew the hose from the machine.
- Keep a rag nearby because some water may flow.

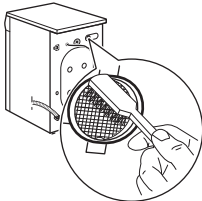

- Clean the filter in the valve with a stiff brush or with the piece of cloth.

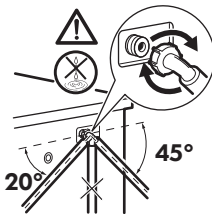


- Screw the hose back to the machine and make sure the connection is tight.
- Turn on the water tap.

Frost precautions

If the appliance is installed in an area where the temperature can be less than 0 °C, remove the remaining water from the inlet hose and the drain pump.

i Do this procedure also when you want to do the emergency drain.

1. Disconnect the mains plug from the mains socket.
2. Remove the water inlet hose.
3. Remove the drain hose from the rear support and unhook it from sink or spigot.
4. Put the ends of the drain and inlet hose in a container. Let the water flow out of the hoses.

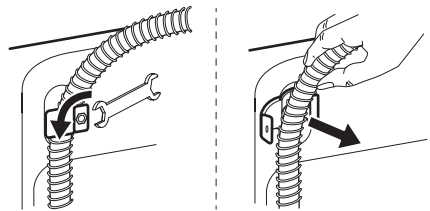

5. When no more water flows, install the inlet hose and the drain hose again.

⚠ Caution! Make sure that the temperature is more than 0 °C before you use the appliance again. The manufacturer is not responsible for damages caused by low temperatures.

Troubleshooting

⚠ Warning! Refer to Safety chapters.

Introduction

The start of the appliance does not occur or it stops during operation.

First try to find a solution to the problem (refer to the table). If not, contact the Authorised Service Centre.

With some problems, the acoustic signals operate and the display shows an alarm code:

- *E10* - The appliance does not fill with water properly.
- *E20* - The appliance does not drain the water.

- *E40* - The appliance door is open or not closed correctly. Please check the door!
- *E40* - The mains supply is unstable. Wait until the mains supply is stable.

⚠ Warning! Deactivate the appliance before you do the checks.

Possible failures

| Problem | Possible solution |
|--|---|
| The programme does not start. | <ul style="list-style-type: none"> • Make sure that the mains plug is connected to the mains socket. • Make sure that the appliance door is closed. • Make sure that there is not a damaged fuse in the fuse box. • Make sure that the Start/Pause has been pressed. • If the delay start is set, cancel the setting or wait for the end of countdown. • Deactivate the Child Lock function if it is on (if available). |
| The appliance does not fill with water properly. | <ul style="list-style-type: none"> • Make sure that the water tap is open. • Make sure that the pressure of the water supply is not too low. For this information, contact your local water authority. • Make sure that the water tap is not clogged. • Make sure that the filter of the inlet hose and the filter of the valve are not clogged. Refer to "Care and cleaning". • Make sure that the inlet hose has no kinks or bends. • Make sure that the connection of the water inlet hose is correct. • Make sure that the drain hose is in the correct position. The hose may be too low. |
| The appliance does not drain the water. | <ul style="list-style-type: none"> • Make sure that the sink spigot is not clogged. • Make sure that the drain hose has no kinks or bends. • Make sure that the connection of the drain hose is correct. • Set the drain programme if you set a programme without drain phase. • Set the drain programme if you set an option which ends with water in the drum. • If above mentioned solutions do not help, contact the Authorised Service Centre (as the filter of the drain pump may be clogged). |

| Problem | Possible solution |
|---|--|
| The spin phase does not operate or the washing cycle lasts longer than usually. | <ul style="list-style-type: none"> • Set the spin programme. • Adjust manually the items in the tub and start the spin phase again. This problem may be caused by balance problems. • If above mentioned solutions do not help, contact the Authorised Service Centre (as the filter of the drain pump may be clogged). |
| There is water on the floor. | <ul style="list-style-type: none"> • Make sure that the couplings of the water hoses are tight and there is not water leakages. • Make sure that the inlet hose and/or the drain hose have no damages. • Make sure you use the correct detergent and the correct quantity of it. |
| You cannot open the appliance door. | <ul style="list-style-type: none"> • Make sure that the washing programme is finished. • Set the drain or the spin programme if there is water in the drum. |
| The appliance makes an unusual noise. | <ul style="list-style-type: none"> • Make sure the levelling of the appliance is correct. Refer to 'Installation Instruction'. • Make sure that the packaging and/or the transit bolts are removed. Refer to 'Installation Instruction'. • Add more laundry in the drum. The load may be too small. |
| The cycle is shorter than the time displayed. | The appliance calculates a new time according to the laundry load. See the 'Consumption Values' chapter. |
| The cycle is longer than the time displayed. | An unbalanced laundry load increases the duration time. This is a normal behaviour of the appliance. |
| The washing results are not satisfactory. | <ul style="list-style-type: none"> • Increase the detergent quantity or use a different detergent. • Use special products to remove the stubborn stains before you wash the laundry. • Make sure that you set the correct temperature. • Decrease the laundry load. |
| You cannot set an option. | <ul style="list-style-type: none"> • Make sure that you press only the wanted button(s). |


After the check, activate the appliance. The programme continues from the point of interruption.

If the problem occurs again, contact the Authorised Service Centre.

If the display shows other alarm codes. Deactivate and activate the appliance. If the problem continues, contact the Service.

Service

We recommend the use of original spare parts. After the check, switch on the

appliance and press the button  to restart the programme.

If the problem remains, contact your Authorised Service Centre.

Model description


(MOD):

Product number (PNC):

Serial number (S.N.):

The necessary data for the service centre is on the rating plate. We recommend that

you write the data here:

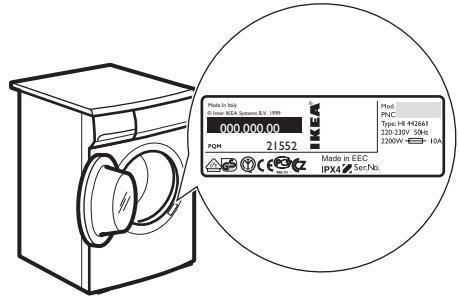

Technical Data

| | | |
|--|---|---------------------------------------|
| Dimension | Width/ Height/ Depth/ Total depth | 600 mm/ 850 mm/ 559 mm/ 578 mm |
| Electrical connection | Voltage Overall power Fuse Frequency | 230-240 V 2200 W 13 A 50 Hz |
| Level of protection against ingress of solid particles and moisture ensured by the protective cover, except where the low voltage equipment has no protection against moisture | | IPX4 |
| Water supply pressure ¹⁾ | Minimum Maximum | 0,5 bar (0,05 MPa) 8 bar (0,8 MPa) |
| Water supply ²⁾ | | Cold water |
| Maximum Load | Cotton | 8 kg |
| Energy Efficiency Class | | A+++ |
| Spin Speed | Maximum | 1400 rpm |
| Washing class | | A |
| Spinning class | | B |
| Washing noise | | 58 dB(A) |
| Spinning noise | | 78 dB(A) |

| | |
|---|-------------|
| Average annual energy consumption ³⁾ | 190 kWh |
| Average annual water consumption ³⁾ | 9999 litres |

1) The appliance works correctly if the water pressure is not less than 0.05 MPa (0.5 bar). If you can not connect the water inlet hose to the cold water tap of the primary hydraulic system, connect it to your domestic cold water storage system. Make sure not to have more than a distance of 5.02 m (16.5 ft) between the appliance inlet hose and the bottom of the water storage tank.


2) Connect the water inlet hose to a water tap with a 3/4" thread.

3) The data is based on the Standard Cotton programmes for test institutes assuming 200 cycles per a year.



Information on the electrical connection, voltage and overall power is given on the rating plate, on the inner edge of the appliance door.

ENVIRONMENT CONCERNS

Recycle the materials with the symbol . Put the packaging in applicable containers to recycle it. Help protect the environment and human health and to recycle waste of electrical and electronic appliances. Do not

dispose appliances marked with the symbol  with the household waste. Return the product to your local recycling facility or contact your municipal office.

IKEA GUARANTEE

How long is the IKEA guarantee valid?

This guarantee is valid for five (5) years from the original date of purchase of Your appliance at IKEA, unless the appliance is named LAGAN in which case two (2) years of guarantee apply. The original sales receipt is required as proof of purchase. If service work is carried out under guarantee, this will not extend the guarantee period for the appliance,

Which appliances are not covered by the IKEA five (5) years guarantee?

The range of appliances named LAGAN and all appliances purchased in IKEA before 1st of August 2007

Who will execute the service?

IKEA service provider will provide the service through its own service operations or authorized service partner network.

What does this guarantee cover?

The guarantee covers faults of the appliance, which have been caused by faulty construction or material faults from the date of purchase from IKEA. This guarantee applies to domestic use only. The exceptions are specified under the headline "What is not covered under this guarantee?" Within the guarantee period, the costs to remedy the fault e.g. repairs, parts, labour and travel will be covered, provided that the appliance is accessible for repair without special expenditure. On these conditions the EU guidelines (Nr.

99/44/EG) and the respective local regulations are applicable. Replaced parts become the property of IKEA.

What will IKEA do to correct the problem?

IKEA appointed service provider will examine the product and decide, at its sole discretion, if it is covered under this guarantee. If considered covered, IKEA service provider or its authorized service partner through its own service operations, will then, at its sole discretion, either repair the defective product or replace it with the same or a comparable product.

What is not covered under this guarantee?

- Normal wear and tear.
- Deliberate or negligent damage, damage caused by failure to observe operating instructions, incorrect installation or by connection to the wrong voltage, damage caused by chemical or electro-chemical reaction, rust, corrosion or water damage including but not limited to damage caused by excessive lime in the water supply, damage caused by abnormal environmental conditions.
- Consumable parts including batteries and lamps.
- Non-functional and decorative parts which do not affect normal use of the appliance, including any scratches and possible color differences.
- Accidental damage caused by foreign objects or substances and cleaning or unblocking of filters, drainage systems or soap drawers.
- Damage to the following parts: ceramic glass, accessories, crockery and cutlery baskets, feed and drainage pipes, seals, lamps and lamp covers, screens, knobs, casings and parts of casings. Unless such damages can be proved to have been caused by production faults.

- Cases where no fault could be found during a technician's visit.
- Repairs not carried out by our appointed service providers and/or an authorized service contractual partner or where non-original parts have been used.
- Repairs caused by installation which is faulty or not according to specification.
- The use of the appliance in a non-domestic environment i.e. professional use.
- Transportation damages. If a customer transports the product to their home or other address, IKEA is not liable for any damage that may occur during transport. However, if IKEA delivers the product to the customer's delivery address, then damage to the product that occurs during this delivery will be covered by this guarantee.
- Cost for carrying out the initial installation of the IKEA appliance. However, if an IKEA service provider or its authorized service partner repairs or replaces the appliance under the terms of this guarantee, the service provider or its authorized service partner will re-install the repaired appliance or install the replacement, if necessary.

This restriction do not apply to fault-free work carried out by a qualified specialist using our original parts in order to adapt the appliance to the technical safety specifications of another EU country.

How country law applies

The IKEA guarantee gives You specific legal rights, which covers or exceed local demands. However these conditions do not limit in any way consumer rights described in the local legislation

Area of validity

For appliances which are purchased in one EU country and taken to another EU country, the services will be provided in the framework of the guarantee conditions

normal in the new country. An obligation to carry out services in the framework of the guarantee exists only if the appliance complies and is installed in accordance with:

- the technical specifications of the country in which the guarantee claim is made;
- the Assembly Instructions and User Manual Safety Information;

The dedicated After Sales Service for IKEA appliances:

Please do not hesitate to contact IKEA After Sales Service to:

1. make a service request under this guarantee;
2. ask for clarification on installation of the IKEA appliance in the dedicated IKEA kitchen furniture. The service won't provide clarifications related to:
 - the overall IKEA kitchen installation;
 - connections to electricity (if machine comes without plug and cable), to water and to gas since they have to be executed by an authorized service engineer.
3. ask for clarification on user manual contents and specifications of the IKEA appliance.

To ensure that we provide you with the best assistance, please read carefully the Assembly Instructions and/or the User Manual section of this booklet before contacting us.

How to reach us if You need our service



Please refer to the last page of this manual for the full list of IKEA appointed contacts and relative national phone numbers.

i In order to provide You with a quicker service, we recommend that You use the specific phone numbers listed at the end of this manual. Always refer to the numbers listed in the booklet of the specific appliance You need an assistance for. Before calling us, assure that You have to hand the IKEA article number (8 digit code) for the appliance of which you need our assistance.

i **SAVE THE SALES RECEIPT!** It is Your proof of purchase and required for the guarantee to apply. Note that the receipt reports also the IKEA article name and number (8 digit code) for each of the appliances you have purchased.

Do You need extra help?

For any additional questions not related to After Sales of your appliances, please contact our nearest IKEA store call centre. We recommend you read the appliance documentation carefully before contacting us.

| Country | Phone number | Call Fee | Opening time |
|-----------------|--|---|--|
| België | 070 246016 | Binnenlandse gesprekskosten | 8 tot 20 Weekdagen |
| Belgique | | Tarif des appels nationaux | 8 à 20. En semaine |
| България | 00359888164080 0035924274080 | Такса за повикване от страната | От 9 до 18 ч в работни дни |
| Česká republika | 246 019721 | Cena za místní hovor | 8 až 20 v pracovních dnech |
| Danmark | 70 15 09 09 | Landstakst | man. - fre. 09.00 - 20.00 lør. 09.00 - 16.00 1 søndag pr. måned, normalt første søndag i måneden |
| Deutschland | +49 1806 33 45 32* | * 0,20 €/Verbindung aus dem Festnetz max. 0,60 €/Verbindung aus dem Mobilfunknetz | 8 bis 20 Werktage |
| Ελλάδα | 211 176 8276 | Υπεραστική κλήση | 8 έως 20 κατά τις εργάσιμες ημέρες |
| España | 91 1875537 | Tarifa de llamadas nacionales | De 8 a 20 en días laborables |
| France | 0170 36 02 05 | Tarif des appels nationaux | 9 à 21. En semaine |
| Hrvatska | 00385 1 6323 339 | Trošak poziva 27 lipa po minuti | radnim danom od ponedjeljka do petka od 08:00 do 16:00 |
| Ireland | 0 14845915 | National call rate | 8 till 20 Weekdays |
| Ísland | 5880503 | Innanlandsgjald fyrir síma | 9 til 18. Virka daga |
| Italia | 02 00620818 | Tariffa applicata alle chiamate nazionali | dalle 8 alle 20 nei giorni feriali |
| Κυπρος | 22 030 529 | Υπεραστική κλήση | 8 έως 20 κατά τις εργάσιμες ημέρες |
| Lietuva | 5 230 06 99 | Nacionalinių pokalbių tarifai | Pr. - Ketv.: 8:00 - 12:00, 12:45 - 17:00 Pnkt.: 8:00 - 12:00, 12:45 - 15:45 |
| Magyarország | 061 998 0549 | Belföldi díjszabás | Hétköznapi 8 és 10 óra között |
| Nederland | 0900 235 45 32 en/of 0900 BEL IKEA | 15 cent/min., starttarief 4,54 cent en gebruikelijke belkosten | ma - vr 08.00 - 20.00, zat 09.00 - 20.00 (zondag gesloten) |
| Norge | 815 22052 | Takst innland | 8 til 20 ukedager |
| Österreich | 0810 300486 | max. 10 Cent/min. | Mo - Fr 8.00 - 20.00 Uhr |
| Polska | 012 297 8787 | Stawka wg taryfy krajowej | Od 8 do 20 w dni robocze |
| Portugal | 211557985 | Chamada Nacional | 9 às 21. Dias de Semana *excepto feriados |
| România | 021 211 08 88 | Tarif apel național | 8 - 20 în zilele lucrătoare |
| Россия | 8 495 6662929 | Действующие телефонные тарифы | с 8 до 20 по рабочим дням Время московское |
| Schweiz | 031 5500 324 | Tarif für Anrufe im Bundesgebiet | 8 bis 20 Werktage |
| Suisse | | Tarif des appels nationaux | 8 à 20. En semaine |
| Svizzera | | Tariffa applicata alle chiamate nazionali | dalle 8 alle 20 nei giorni feriali |
| Slovensko | | (02) 3300 2554 | Cena vnútroštátneho hovoru |
| Suomi | 030 6005203 | Lankapuhelinverkosta 0,0835 €/puhelu + 0,032 €/min Matkapuhelinverkosta 0,192 €/min | arkipäivisin 8.00 - 20.00 |
| Sverige | 0775 700 500 | lokalsamtal (lokal taxa) | mån-fre 8.30 - 20.00 lör-sön 9.30 - 18.00 |
| Türkiye | 212 244 0769 | Ulusal arama ücreti | Hafta içi saat 09:00'dan 18:00'a kadar |
| Україна | 044 586 2078 | Міжміські дзвінки платні | 9 - 21 В робочі дні |
| United Kingdom | 020 3347 0044 | National call rate | 9 till 21. Weekdays |
| Slovenija | | www.ikea.com | |
| Србија | | www.ikea.com | |

