

I. SAFETY INSTRUCTIONS



To ensure your safety and the safety of others, please ensure that you read all the safety information before operating this product.

Keep this information in a safe place for future reference.



This symbol indicates that this product incorporates double insulation between hazardous mains voltage and user accessible parts.

WARNING: To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture.

Safety Considerations.

- ▶ Position the cables so that they cannot be walked on or pinched by items placed on or against them.
- ▶ Do not use the Mobile D9 Wireless Game in humid or damp conditions.
- ▶ Do not allow the Mobile D9 Wireless Game to get wet.
- ▶ Do not expose the Mobile D9 Wireless Game to dripping or splashing.
- ▶ Do not place water filled objects such as vases on top of the Mobile D9 Wireless Game.
- ▶ Do not place naked flame sources, such as candles, on the top of the Mobile D9 Wireless Game.
- ▶ To prevent direct exposure to the laser beam, do not open the enclosure.

Ventilation

The slots and openings on the Mobile D9 Wireless Game are for ventilation. Do not cover or block them as it may cause overheating.

NEVER let children push anything into the holes or slots on the case.

Battery Disposal

Please ensure batteries are disposed of safely.

Never dispose of batteries in a fire or with other household waste.

Check with your local authority for disposal regulations.

Cleaning

ALWAYS unplug the product before you clean it.

Do not use liquid or aerosol cleaners.

Clean the Mobile D9 Wireless Game with a soft, damp (not wet) cloth.

2. HEALTH AND SAFETY INFORMATION

Excessive video games play can cause repetitive motion injuries and eyestrain. Other symptoms you can experience due excessive play are: eyes irritation, headache or visual acuity, discomfort in the hand and wrist for tendinitis development.

While playing if you or your childrens feels symptoms such as tingling, numbness, burning or stiffness, we recommend you to stop playing: To avoid any of these symptoms always try to:

- ▶ Stay as far as possible from the Mobile D9 screen.
- ▶ Do not play if you or your children are tired or need sleep.
- ▶ Always play in a well-lit room.
- ▶ Take a 10 to 15 minute break per every game hour.

 
If you continue to have any of the above symptoms or other discomfort stop playing and see a doctor.

3. ACCESORIES

Ítem	Function
Wireless game controller	Use the wireless game controller that provides an unique game experience more realistic and intuitive.
Padded Headphones	Connect them to the earphones output of your Mobile D9 Wireless Game to enjoy an improved stereo sound more personal with noise absorb.
A/V Cable	Use the A/V cable to connect your Mobile D9 Wireless Game to a TV.
AC/DC Adapter	External power adapter.
Remote Control	To controll your Mobile D9 Wireless Game.
Car Kit	Includes easy mounting carry case adjustable to the car headrest and I2V car adapter.

5. CONTROLS AND CONNECTIONS


5.1. PANEL ILLUSTRATION

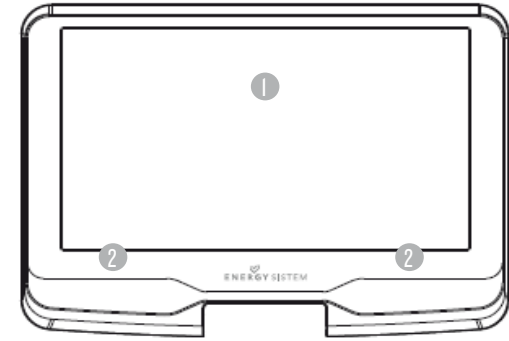


1. Screen.
2. Stereo speakers.



 3. Power ON/OFF indicator.
4. Infrared Sensor to receive the remote control signals.
5. Battery-charge indicator

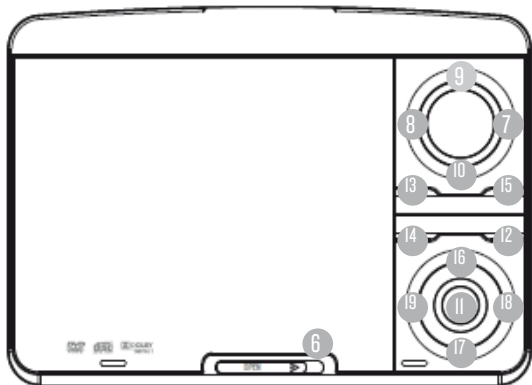

 - 6. Disc cover opening button.
- 7. Shift right in the menus. Fast Forward.
- 8. Shift left in the menus. Fast Rewind.
- 9. Move up in the menus.
- 10. Move down in the menus.
- 11. OK: to confirm the selection.
- 12. SOURCE: media selection.
- 13. SETUP: Mobile D9 wireless game's setup menu.
- 14. MENU: access to the main menu.
- 15. TFT: Turn off/on the screen.
- 16. Play/Pause: starts of pauses the playback.
- 17. Stop: stops the playback.
- 18. Next track/file.
- 19. Previous track/file.




- 20. On/Off switch.
- 21. DC IN Power connection (12 V).
- 22. 3.5 mm (1/8") stereo earphones output.
- 23. 3.5 mm (1/8") TRRS A/V output.
- 24. Volume control.
- 25. USB host port (Type A).



- 26. Card reader.

5.2. CONNECTING TO A TV

 
Your Mobile D9 Wireless Game allows you to connect it to any television and display the media content that is being playing from DVD unit or from external devices (USB, CARD). From GAME module you can also connect your Mobile to a TV and display in both screen your games.

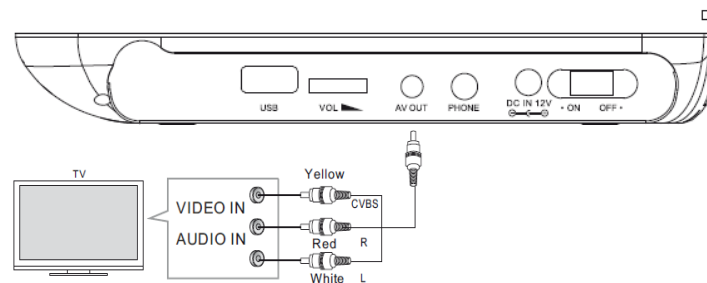

* Always remember to point the wireless game controller to your Mobile IR sensor to be able to interact with the games.

6. REMOTE CONTROL

 
6.1. BUTTON DESCRIPTION

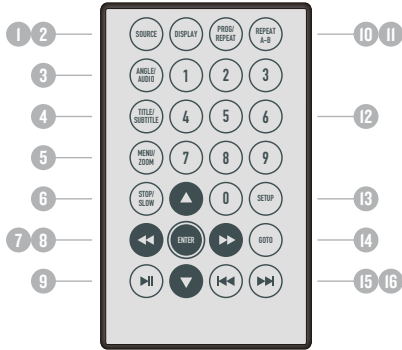

1. **SOURCE:** Switches between DVD/USB/Card Reader.
2. **DISPLAY:** Shows detailed information about the current file or disc
3. **ANGLE/AUDIO:** Short press changes the audio mode (if available). Long press changes the angle mark (if available).
4. **TITLE/SUBTITLE:** Short press changes between subtitles (if available). Long press to access DVD title menu.
5. **MENU/ZOOM:** Short press to access DVD main menu. Long press to zoom in.
6. **STOP/SLOW:** Short press to activate slow motion. Long press to stop playback.
7. **Navigation buttons/Fast forward and rewind.**
8. **ENTER:** To confirm a selection.
9. **PLAY/PAUSE:** Start/pause/resume the playback.
10. **PROG/REPEAT:** Short press to switch between different repeat modes. Long press to access program mode.
11. **REPEAT A-B:** First press sets start point, second press sets end point and third press returns to normal playback mode.
12. **Numeric keyboard.**
13. **SETUP:** Access the setup menu.
14. **GOTO:** Go to a specific time index.
15. **Previous:** Go to previous chapter/track/file.
16. **Next:** Go to next chapter/track/file.

6.2. REMOTE CONTROL BATTERY REPLACEMENT

 Pull the battery loader out and insert a CR2025 battery.

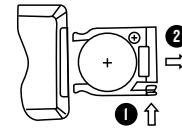

Make sure to place the battery in the correct direction

When not using the remote control for a long time remove the battery..

When operating range reduces replace the battery.

6.3. USING THE REMOTE CONTROL

 
To use the remote control, point it towards to the IR receiver.

The remote control has a range of 4 metres from the Mobile at an angle of $\pm 30^\circ$.

The remote control will not work if the way to the receiver is blocked.

Sunlight or other very strong light will decrease the sensitivity of the remote control.

7. WIRELESS GAME CONTROLLER

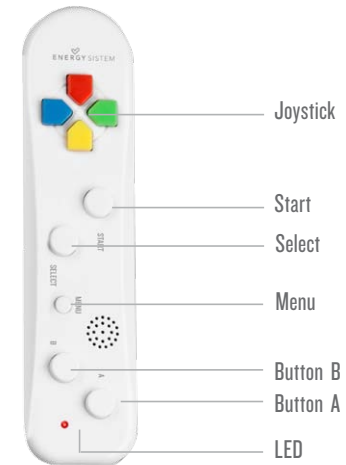

7.1. WIRELESS GAME CONTROLLER BATTERY REPLACEMENT

Remove the battery cover from the remote control and put 3xAAA size batteries inside the compartment. The following diagram shows the correct way to insert batteries.



- ▶ Keep batteries out of reach of children. If someone swallows a coin cell or battery must receive immediate medical attention.
- ▶ Do not attempt to reactivate the batteries using heat, loading, or by other means. Never dispose of batteries in fire, or disassemble or short circuit. Replace batteries at least once a year to avoid spillage.
- ▶ Replace all batteries at the same time and replace them with the same type.
- ▶ When not using the remote control for a long time, remove the batteries

8. BUILT-IN RECHARGEABLE LITHIUM BATTERY

Your Mobile D9 Wireless Game has a built-in rechargeable lithium battery.

- ▶ We recommend making a full charge of the battery before first use at least during 8 hours. Charging time takes around 4 hours. Full battery has autonomy enough for 2,5 hours.
- ▶ When the battery has a low charge level, a symbol will be displayed and the device will automatically power-off after some minutes.

9. USING YOUR ENERGY MOBILE D9 WIRELESS GAME

With your Mobile D9 Wireless Game you can play multimedia files (videos, pictures, music) from optical disk (CD/DVD), and USB devices or card memories, and also you have a built-in game module that accurate you hours of fun.

To power on your Mobile D9 Wireless Game move the ON/OFF switch to the ON position. During the starting the welcome screen will be displayed and you can choose between the different sources

pressing the "SOURCE" button on the remote control and use the up/down keys to select between DVD, GAME, USB or CARD (to display USB and CARD options the external devices must be connected on your Mobile).

9.1. PLAYING DVD-R/CD-R DISC

Switch the OPEN button on the arrow direction to open the disc compartment. Insert the disc and make sure the printed side is up. If is your first time using your Mobile be sure to remove the protection card from DVD player's lens.

Press down the DVD cover to close the DVD compartment. The playback will be started automatically. If the menu appears, select the desired option and press ENTER to start the playback.

Your Mobile D9 Wireless Game supports the following disc types: DVD-R/DVD+R/DVD-RW/DVD+RW/CD-R/CD-RW.

9.2. PLAYING FROM USB OR MEMORY CARDS

You can enjoy your multimedia content (videos, music, pictures) from external disk such as USB devices and memory cards.

Press the direction buttons to choose the desired directory and the button "ENTER" to display the stored content. Using the directions buttons select the file you want to play and press "ENTER" to start the movie, music or picture playback.

To return to the previous menu just select the directory named '..' and press the button "ENTER".

The USB playback is only compatible with USB devices with FAT/FAT32 format.

The Card reader accepts MemoryStick (MS), Secure Digital (SD/SDHC) and MultiMedia Card (MMC) types.

Your Mobile D9 wireless game allows you to adjust the playback settings according to your preferences.

- ▶ Filter: allows selecting the categories of files (Audio, Photo and Video) displayed in the browser list.
- ▶ Repeat: to switch different repeat playing mode.
- ▶ Mode: select different playing mode.
 - Normal: shuffle mode is cancelled.
 - Shuffle: shuffle mode enabled. When playback reaches the end of the current chapter/track, playback jumps to a random chapter/track. As the end of each chapter/track is reached, another random chapter/track will be played until all tracks/chapters have been played or the Shuffle mode is cancelled by toggling to a different Mode Option.
 - Music Intro: in this mode, the media will play 10 seconds then skip to next media.

Edit Mode: to enable programmed playback mode. When you select the mode, press LEFT Direction key to directory and press ENTER to choose the desired track and press Add to program to start program playback.

10. SYSTEM SETUP

Press the **SETUP** button on the remote control, the **SETUP MENU(main)** will be displayed. After accessing the setup menu, press the direction buttons up/down to select an item, then press the **ENTER** button to confirm.

Press **LEFT** direction button return to the previous menu. To exit the setup, press the **SETUP** button again.

10.1. LANGUAGE

- ▶ **OSD:** use this item to select the language of the setup menu and screen display.
- ▶ **Subtitle:** this option provides the preset subtitle language. Follow the operating instructions stated in **DVD MENU SETUP** in combination with the desired option.
- ▶ **MPEG4 Subtitle:** choice different MPEG4 subtitle encoding option.
- ▶ **Audio:** follow the operating instructions stated in **DVD MENU SETUP** in combination with the desired option. This option provides the built-in disc dubbing language options.
- ▶ **DVD Menu:** this option provides the films menu language options. Follow the operating instructions stated in **DVD MENU SETUP** in combination with the desired option.

10.2. VIDEO

- ▶ **Aspect Ratio:** 4:3PS, 4:3LB, 16:9
- ▶ **TV System:** NTSC, PAL, Auto
- ▶ **Smart picture.:** adjust display effect for video output:
Standard: default effect.
Bright: internal setting for bright view effect.
Soft: internal setting for soft view effect.
Dynamic: user adjust brightness, contrast, colour, etc.

10.3. RATING

- ▶ **Parental Control**
Selecting a rating allows the user to set the parental control feature of the player. Select **Parental Control**, and press **ENTER** to change the different mode.
Note: Unlock the password before setting **Parental Control**.
- ▶ **Set Password**
Use the 0-9 keys to input four digits(password), then press **ENTER** to confirm.
Note: If you forget your password, please use the default password 6666 to unlock.

10.4. MISCELÁNEOS

- ▶ **Use Default Settings:** Reset setup data to factory defaults.
- ▶ **Screen saver:** Enable/Disable screen saver function.

11. 32-BIT GAMES BUILT-IN

To access to the **GAME** module in your **Mobile D9** select the option **GAME** from the main menu.

 
Your **Mobile D9** includes more than 80 exciting and challenging 32-bit games in different categories: sports, adventure, strategy, music, puzzle, racing.







To move on the **GAME** menu use the directions buttons (up/down/right/left) on your wireless gamepad controller and choose the desired game by pressing the button **A**.

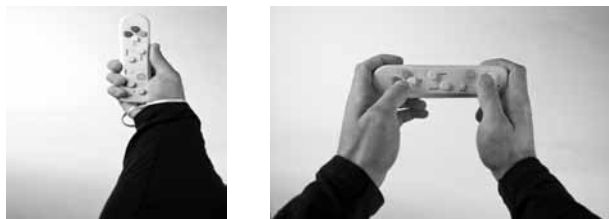11.1. USING YOUR WIRELESS GAMEPAD CONTROLLER

Depending on the game, you can hold your wireless gamepad controller either in one or two hands. Be sure to hold firmly your wireless gamepad in all moment and use always the wrist strap.



Basic Operations

Swinging		Move your wireless gamepad "swinging" to the right or to the left and at the same time keep pressing the button A, imitating the game movements. Example: to play tennis just hold the wireless gamepad as would hold a tennis racket and swing to the right or to the left.
Pulling		Move your wireless gamepad to the front /back and at the same time keep pressing the button A.
Hitting		To play boxeo just hold your wireless gamepad and punch imitating the real movements.
Pointing		Point your wireless gamepad to your Mobile Game screen.

12. TROUBLESHOOTING

If you experience problems with your Energy Mobile D9 Wireless Game, in the first instance please read carefully the relevant sections of this User Manual and this Troubleshooting section.

Problem	Possible cause	Solution
There is no picture or no sound	Improper connection with AC adapter or car adapter	Check the connection and confirm that the power adapter is correctly inserted into the device.
	Low battery	Conecta el dispositivo a la fuente de alimentación.
	Use of unauthorized power supply	Your device may be damaged. Use only the power supply provided with de device. In case of lost visit our spare parts & accessories section: www.energysystemstore.com
	Power switch is on OFF position)	Turn the switch to ON position
There is no sound	If you can hear nothing through the speakers, maybe the earphone is plugged in	Unplug the earphone
	The sound is muted	Use the volume control to unmute the sound
Dark picture	Brightness and contrast are not properly adjusted	Adjust Brightness, Contrast correctly
The remote control is not working	Battery exhausted	Charge battery
	Remote control is incorrectly aimed	Aim the remote control to the device. Check that nothing blocks the front panel
Can't play the music file correctly OR can't play the video	The file is damaged or the codec is wrong	Change the file
	The format of the video is not compatible, or the file is damaged (check the specifications table for the supported formats).	
The wireless game controller doesn't respond accordingly to the player's movements	Batteries exhausted	Change the batteries for a new ones.
	There is any object that blocks the device IR sensor or the controller is not properly pointed	Remove the objects that can block the sensor. Point the game controller to the IR sensor on the device.
The images appear distorted during playback of the DVD	The disc is dirty.	Use a soft cloth to clean the disk.
	The disc may be quite scratched.	Replace it with another disc.
	Format not compatible	Check that the video output format of the disc is compatible.

13. FIRMWARE UPDATE

To update the firmware of your Mobile D9 Wireless Game, visit our download section in our website: www.energysistem.com You will find all the files and instructions needed to update successfully your device.

14. SPECIFICATIONS

General	
TV System	PAL / NTSC
Supported disc formats	DVD, VCD, CD, CD-R, CD-RW, DVD+-R/W
Supported file formats	MP3, JPEG, MPEG4
Video	
S/N Ratio	>= 65 dB
Resolution	>= 500 lines
Audio	
Frequency	20 Hz - 20 kHz +/- 1 dBI
S/N ratio	>= 90 dB
Dynamic Range	>= 80 dB
Distortion	< 0.01 %
D/A Converter	96 KHz / 24 bit
Output	
Screen technology	TFT-LCD Color
Screen size	9"
Video output	1 Vp-p (75 Ohms)
Audio output	2 CH
Power supply	DC 12 V
Power consumption	<= 12 W
Size	238 x 170 x 41 mm
Weight	1.0 Kg

Specifications are subject to change without further notice.

WARRANTY

- ▶ Energy Sistem Soyntec SA is liable for any lack of conformity which exists at the time the goods were purchased during a period of 36 months. Batteries are excluded from the 36-month warranty, having a warranty period of 12 months.

This warranty covers any defects in workmanship or materials. This warranty doesn't cover any failure of the product due to accidents, misuse or alteration made by an unauthorized person.

The special 36-months warranty is valid for the European Union. For other countries, please refer to your specific legislation or your local distributor.

WARRANTY PROCEDURE

1. Visit the Support section at <http://support.energysistem.com> and select your product to view the FAQ (Frequently Asked Questions). The solution to your problem is very likely to have been already published there. You will also be able to download user manuals, user guides, drivers and updates. You can check the availability of the user manual in your language at <http://www.energysistem.com/es-es/support/manuals>
2. If you cannot find an appropriate solution in the Support section, you may send us your enquiry or warranty service request by email: support@energysistem.com
3. Alternatively, you may prefer to contact the distributor from which you purchased the product, presenting the purchase receipt or invoice.

Important: This warranty doesn't cover any damage or loss to any data stored in the product memory, therefore Energy Sistem's Technical Service will not assume any loss of the above mentioned information so it is recommended to make a backup of your data and to remove any data or personal info from its internal memory before you send the product, or to send it only with the original factory default values.

Trademarks. All company, brand and product names are trademarks or registered trademarks of their respective companies.

© 2012 by Energy Sistem®. All rights reserved



DECLARATION OF CONFORMITY

Manufacturer Name: Energy Sistem Soyntec S.A.

Address: Pol. Ind. Finestrat, C/. Calpe, I - 03509, Finestrat Alicante (Spain)

Tel: 902 388 388

Fax: 902 119 034

NIF: A53107488

We declare under our own exclusive responsibility that the product:

Energy Sistem® Portable DVD Player Energy™ Mobile DVD D9 Wireless Game

Manufacturing country: China

Is in compliance with the essential norms and standards of the Directive 2004/108/EC of the European Parliament and of the Council of December 15th 2004.



This symbol on the product or the instructions means that your electrical and electronic equipment should be disposed at the end of life separately from your household waste. For more information, please contact the local authority or dealer where you purchased the product.