

| | | |
|-------------------------------|---|---|
| Telegesis |  | TG-PM-510 ZigBee Communications Gateway |
| ZigBee Communications Gateway | | Product Manual 0510r4 |

Telegesis ZigBee Communications Gateway

Product Manual



Rev: 4

Date: April 2014

Table of Contents

| | | |
|-------|---|----|
| 1 | Change Log | 4 |
| 2 | Abbreviations | 4 |
| 3 | Package Contents..... | 5 |
| 4 | Specifications..... | 6 |
| 4.1 | Order Codes | 6 |
| 4.2 | Examples | 6 |
| 4.3 | Power | 10 |
| 4.4 | LED Indicators | 11 |
| 4.5 | Buttons Actions..... | 12 |
| 4.5.1 | Restore factory defaults | 12 |
| 4.5.2 | Gateway reboot | 12 |
| 4.5.3 | Gateway recovery mode | 12 |
| 4.5.4 | Issue ZigBee command | 12 |
| 5 | Functionality..... | 13 |
| 5.1 | Start-up..... | 13 |
| 5.2 | Gateway Discovery | 13 |
| 5.2.1 | Discovery on a windows-7 PC | 13 |
| 5.2.2 | Discovery on other platforms: | 14 |
| 5.3 | Gateway Webserver | 15 |
| 5.3.1 | Authentication | 15 |
| 5.3.2 | Web Pages | 16 |
| 6 | Appendix A | 29 |
| 6.1 | Bootloading ETRX3 ZigBee module..... | 29 |
| 7 | Warranty | 32 |
| 7.1 | Caution | 33 |
| 7.2 | Cleaning | 33 |
| 8 | Compliance with Laws and Regulations..... | 34 |
| 9 | Disclaimer..... | 34 |
| 10 | Software License:..... | 34 |
| 11 | Contact Information | 34 |

Table of Figures

Figure 1: Package contents.....5

Figure 2: Gateway front view..... 7

Figure 3: Gateway without RS232/RS485 back view..... 7

Figure 4: Gateway with RS232/RS485 back view 8

Figure 5: Gateway bottom view 9

Figure 6: Top label 9

Figure 7: Bottom label 10

Figure 8: Device Discovery 13

Figure 9: Discovery Python Script 14

Figure 10: Discovery Output..... 14

Figure 11: HTTP server authentication..... 15

Figure 12: Configurations Page..... 16

Figure 13: ZigBee Interface Configurations page23

Figure 14: Web Terminal page..... 24

Figure 15: Firmware Upgrade page..... 25

Figure 16: Logout page 28

Figure 17: Dialin socket connection..... 29

Figure 18: ETRX3 Bootload prompt 30

Figure 19: Ready to receive upgrade image file via XMODEM..... 31

1 Change Log

Table 1

| Version | Date | Comments | Author |
|---------|---------------|--|------------------------------|
| 1 | Aug 28, 2013 | Initial draft | Nikhil Sarnaik |
| 2 | Oct 13 2013 | Button command modified | Nikhil Sarnaik |
| 3 | Jan 22, 2014 | Added Change Log. Added pinout for RS232/485 ports. Added configuration options for RS232/RS485 ports. Corrected order codes. Restore factory defaults by button updated | Nikhil Sarnaik, Alex Wood |
| 4 | April 22,2014 | Added license message | Nikhil Sarnaik |

2 Abbreviations

| | |
|------|-------------------------------|
| PoE | Power over Ethernet |
| LED | Light Emitting Diode |
| HTTP | Hyper Text Transfer Protocol |
| UPnP | Universal Plug and Play |
| UDP | User Datagram Protocol |
| TCP | Transmission Control Protocol |
| SSL | Secure Socket Layer |
| DNS | Domain Name System |
| SNTP | Simple Network Time Protocol |
| DHCP | Dynamic Host Control Protocol |
| IP | Internet Protocol |
| MAC | Media Access Control |

3 Package Contents

The package contains the following items,

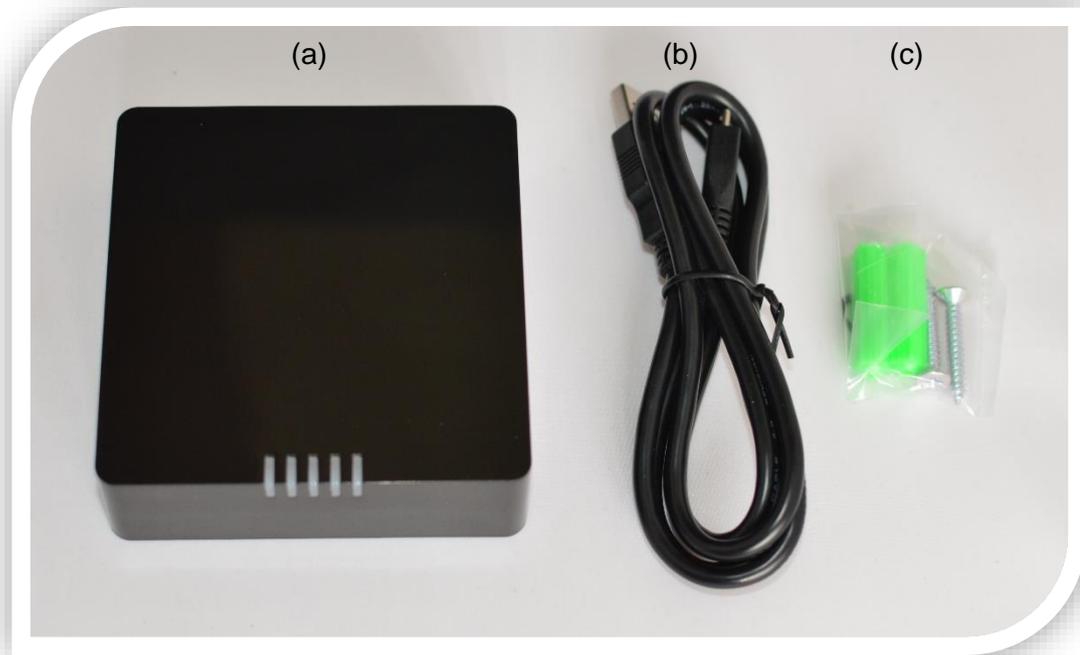


Figure 1: Package contents

- a. ZigBee Communications Gateway
- b. Micro USB power cable
- c. Mounting screws

4 Specifications

| | |
|--------------------------------|--|
| Model Number | GW357 |
| RF Interface | ZigBee Pro |
| RF Output Power | +8dBm |
| Antenna | Half-wave Dipole Antenna 2dBi Gain or Integrated Antenna |
| Clock Battery | 1x 3V 220mAh Sony CR2032 Battery |
| Power Source | 5Volts @ 500mA via USB Micro Connector Charging source should be current limited |
| Ethernet | RJ45 10/100Mbps |
| Power Over Ethernet (optional) | 802.3af Compliant Class 1 Device |
| Operating Temperature | -20 to 70C |
| Humidity | 95% TH Non-condensing |
| IP Rating | IP20 (subject to testing) |
| Net Weight | 110g |
| RS485/RS232 | Baud rate: 2400, 4800, 9600, 19200, 38400, 57600, 115200 Parity: none, odd, even Stop bits: 1 or 2 RS485 120Ω termination resistor built in |

4.1 Order Codes

| | | |
|------------------|------------------------------------|--------------------|
| GW | Gateway | |
| GW357 | Core Silabs IC | |
| GW357-X | 1st module | 1 = ETRX357 |
| GW357-0X | 2nd module | 2 = ETRX357HR |
| GW357-00-X | Power of Ethernet (P) | 3 = ETRX357-LRS |
| GW357-00-0-X | WiFi or GSM (W or G) | 4 = ETRX357-HR-LRS |
| GW357-00-0-0-X | RS232/RS485 (1=yes 0=No) | |
| GW357-00-0-0-0-X | SD Memory Card size i.e. 4, 8 etc. | |

4.2 Examples

GW357-11-P-W-1-8 Gateway with 2xETRX357 module, Power-over-Ethernet, WiFi, RS232/RS485 and an 8MB SD Memory Card

GW357-1 Basic Gateway with 1xETRX357 module

GW357-30-0-0-1 Gateway with 1xETRX357-LRS and RS232/RS485

Layout

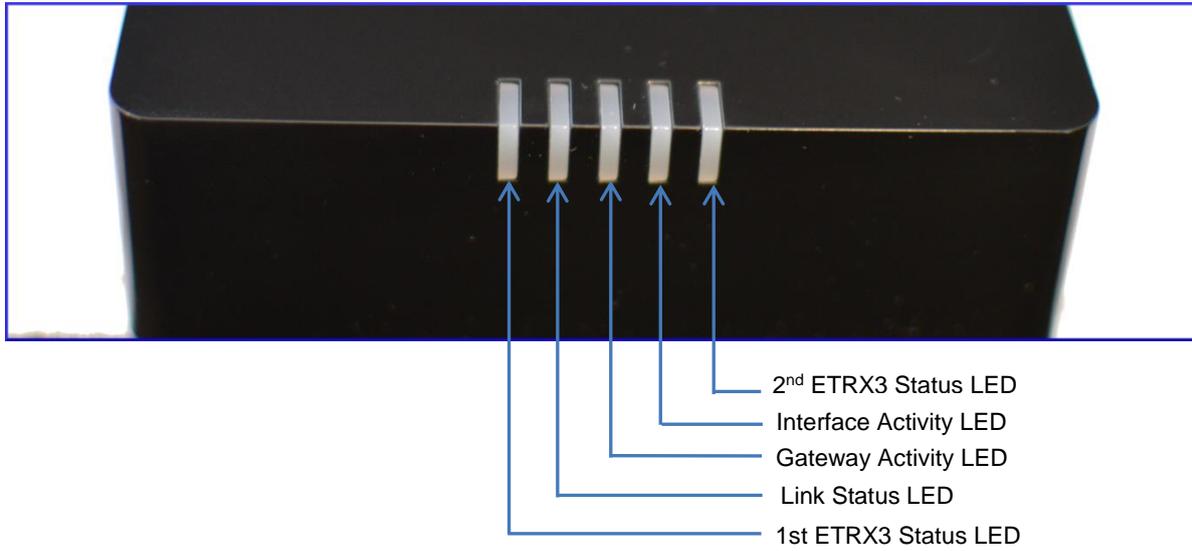


Figure 2: Gateway front view

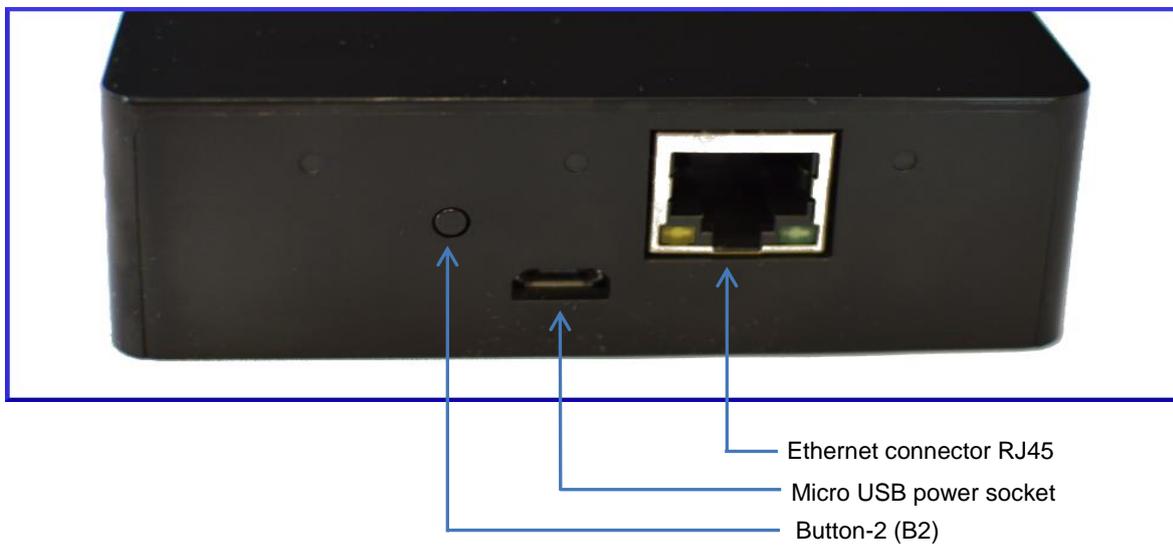


Figure 3: Gateway without RS232/RS485 back view

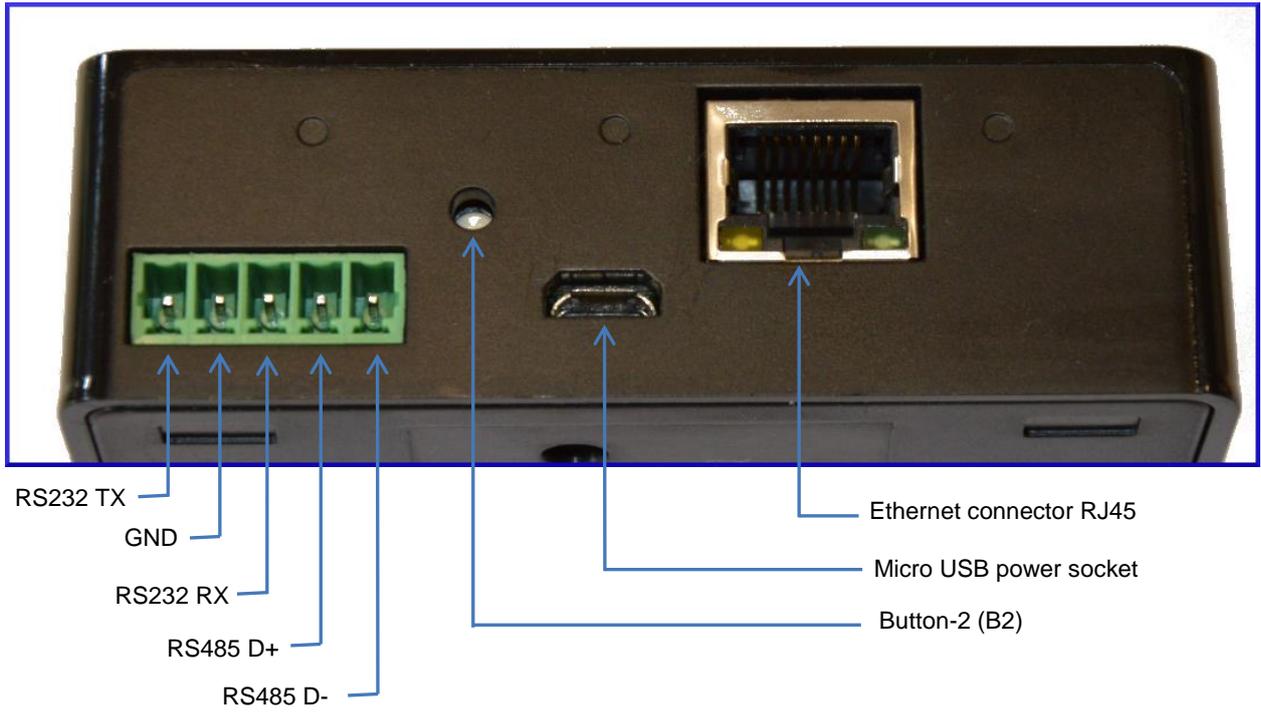


Figure 4: Gateway with RS232/RS485 back view¹

¹ Compatible connectors for RS232/RS485 port
 MULTICOMP - MC000099
 MULTICOMP - MC000107
 MULTICOMP - MC000115



Figure 5: Gateway bottom view

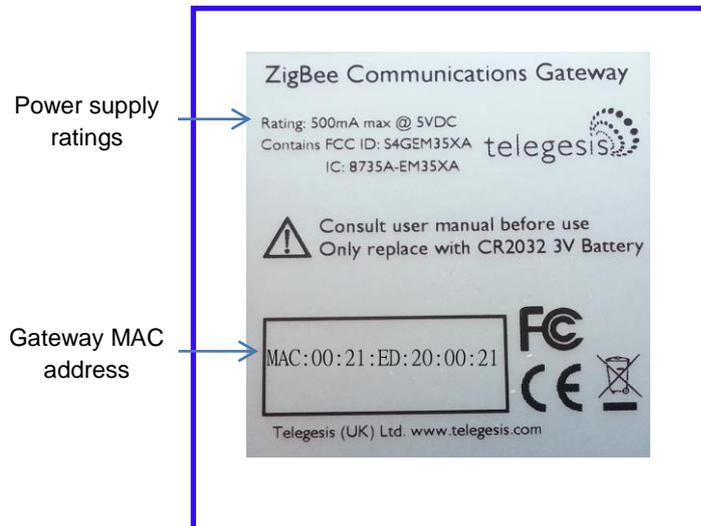


Figure 6: Top label


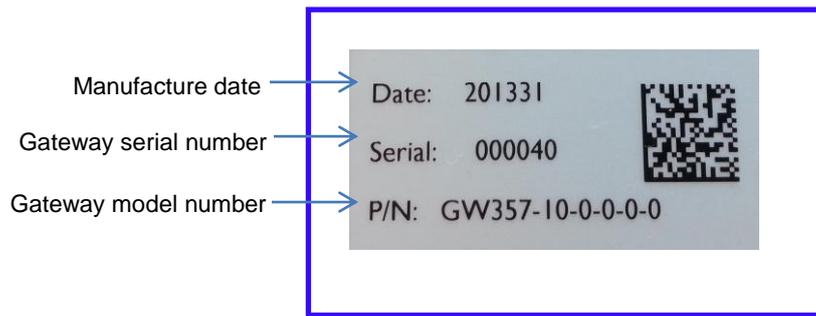


Figure 7: Bottom label

4.3 Power

The Gateway can be powered ON by plugging in the micro USB cable in the socket provided as shown in [figure-3](#) with power source as specified in the [Specifications](#). Selected models of gateway incorporating Power over Ethernet (PoE) can be powered on using the PoE injector through RJ45 cable.

4.4 LED Indicators

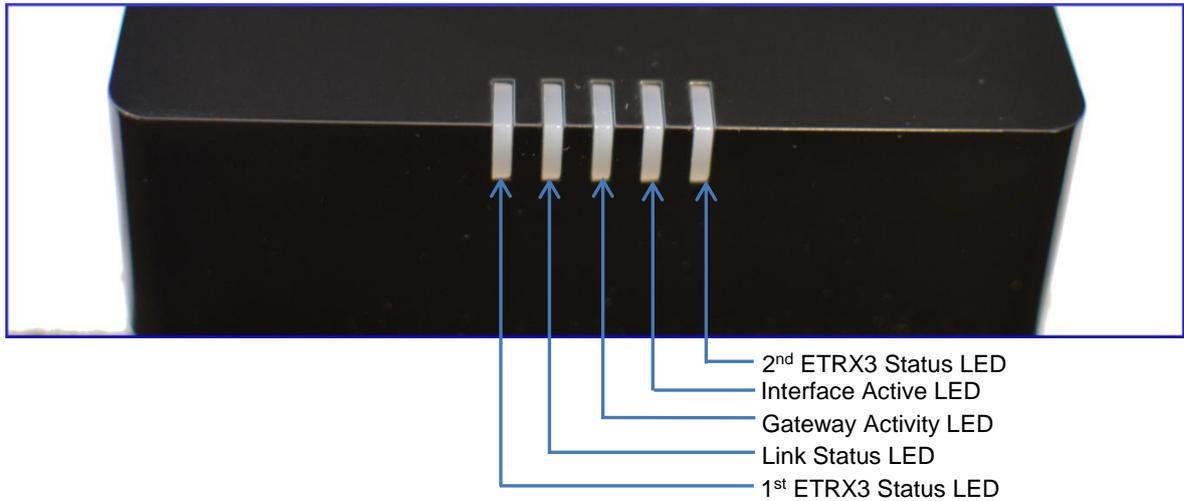

| Sequence Number | Gateway State | 1 st ETRX3 Status LED | Link Status LED | Gateway Activity LED | Interface Active LED | 2 nd ETRX3 Status LED |
|-----------------|---|--|-----------------|--------------------------|----------------------|----------------------------------|
| 1 | Power UP Sequence | ON | Red + Green | Blinking Amber for 5 sec | OFF | ON |
| | | All LEDs will turn ON and then following blink one after the other twice except for the ETRX3 Status LEDs which are controlled by ETRX3 ZigBee modules | | | | |
| 2 | Ethernet link inactive | - | Red | Blinking Amber | - | - |
| 3 | Ethernet link active | - | Green | OFF | - | - |
| 4 | Any socket connected to either ZigBee module OR Web Terminal connected | - | - | - | Green | - |
| 5 | Any communication with ZigBee modules OR Any communications on Ethernet lines | - | - | Blinking Amber | - | - |

Table 2: LED Sequence table

4.5 Buttons Actions

The Gateway has three hardware buttons as shown in the [Layout](#) which can perform multiple functions as described in this section.

1. **Button 1 (B1)**
2. **Button 2 (B2)**
3. **Button 3 (B3)**

4.5.1 Restore factory defaults

Follow the following procedure with buttons in order to restore the factory default configuration settings on the Gateway using **B3** and **B1**.

1. Press and hold **B3**
2. Then with **B3** pressed, press and hold **B1** for approximately 3 seconds after which the Gateway reboots and LED power up sequence is seen.

4.5.2 Gateway reboot

Press **B3** and hold for 5 seconds to reboot the Gateway.

 
4.5.3 Gateway recovery mode

Perform following procedure to put the Gateway in recovery mode².

1. Press and hold **B3** until gateway reboots.
2. At power up hold **B2** and wait for 3 seconds.
3. The Gateway will be in recovery mode now.

4.5.4 Issue ZigBee command

Button **B2** is used to issue custom ZigBee command to the 1st ETRX3 ZigBee module which can be configured in Button Command section of the [Gateway Configurations](#) as shown below.



So whenever the B2 is pressed the command ("AT+BCAST:00,hello" by default) is issued to the 1st ETRX3 ZigBee module.

² Recovery mode not implemented in initial release but will be added in subsequent release soon.

5 Functionality

5.1 Start-up

Turn ON the ZigBee Communications Gateway by inserting the micro USB power cable into the socket shown in figure 3. The LEDs on the front panel will light up as described in the [LED's Sequence table](#). Once the Start-up LED sequence is complete the gateway will continuously look for an Ethernet link which is indicated by LED sequence-3. Insert the Ethernet cable in the RJ45 socket shown in figure 3. The gateway will try to obtain an IP address by using DHCP (by default DHCP is enabled but the user can also set static IP address for the Gateway). Once an IP address is allocated successfully the LED sequence-4 is displayed on the LED panel.

5.2 Gateway Discovery

5.2.1 Discovery on a windows-7 PC

Gateway implements UPnP discovery service so the user can directly go to “Network settings” and look for devices under “Network Infrastructure” category. The Gateway will show up as ZigBee Communications Gateway as shown below. Navigate to properties by right clicking on the device to view the device properties. Browse to the IP address shown in the device properties or alternatively double click on the device to navigate to the webpage hosted by Gateway.

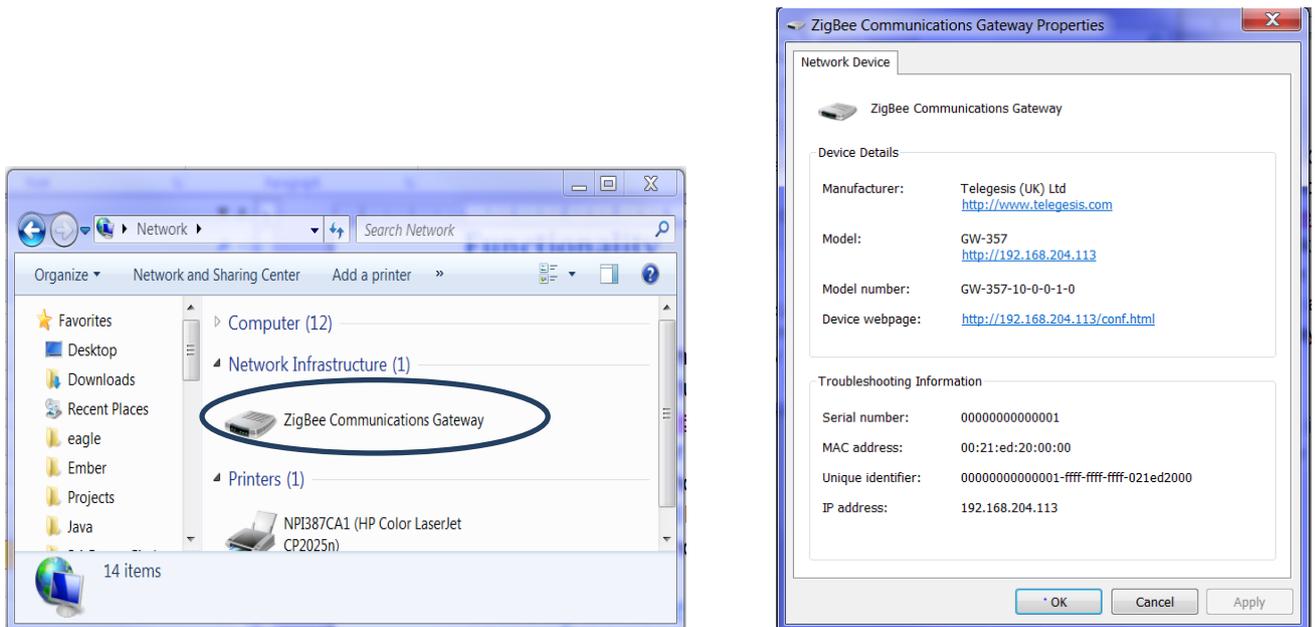


Figure 8: Device Discovery

5.2.2 Discovery on other platforms:

On other platforms where UPnP services are not available, the device can be discovered using the following python script which basically listens to the UDP broadcast on port 14099 by the gateway once every minute.

```
import socket, traceback, commands
host = ''          # Bind to all interfaces
port = 14099


#start a udp socket server to listen on port 14099

s = socket.socket(socket.AF_INET, socket.SOCK_DGRAM)
s.setsockopt(socket.SOL_SOCKET, socket.SO_REUSEADDR, 1)
s.setsockopt(socket.SOL_SOCKET, socket.SO_BROADCAST, 1)
s.bind((host, port))

print "Waiting for Telegesis Gateway:"
while 1:
    try:
        message, address = s.recvfrom(8192)
        print "Telegesis Gateway Found on IP Address:
        %r"%(address[0])
    except (KeyboardInterrupt, SystemExit):
        raise
```

Figure 9: Discovery Python Script

Run the above script from command line and the output window would show the IP addresses of the ZigBee Communications Gateways in the network as shown below

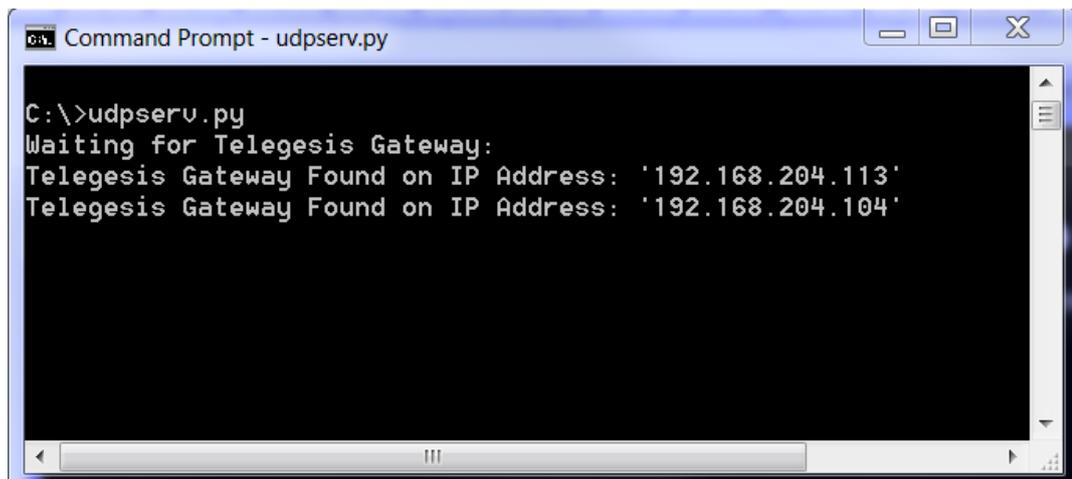

```
Command Prompt - udpserve.py
C:\>udpserve.py
Waiting for Telegesis Gateway:
Telegesis Gateway Found on IP Address: '192.168.204.113'
Telegesis Gateway Found on IP Address: '192.168.204.104'
```

Figure 10: Discovery Output

5.3 Gateway Webserver

ZigBee Communication Gateway hosts a http webserver to serve webpages which help the user to configure the Gateway and communicate with the ZigBee device via a simple web interface.

5.3.1 Authentication

The http webserver is protected by basic authentication hence a valid username **“admin”** and password **“password”** must be provided when prompted to access the webpages. The password can be changed through the GW357 Configuration webpage as explained in the later section.

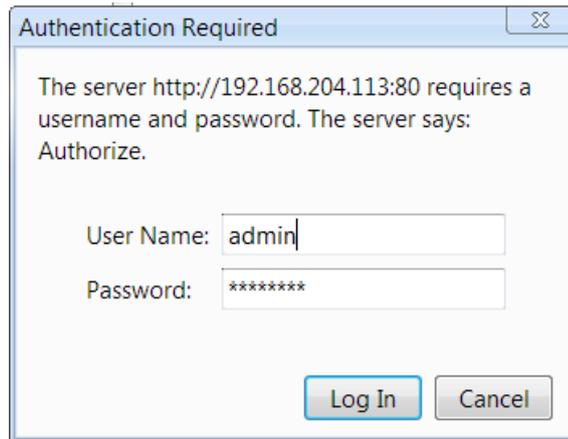



Figure 11: HTTP server authentication

5.3.2 Web Pages

Following web pages are served by the http web server on the ZigBee Communications Gateway

GW357 Configuration

The Gateway configuration page is the main page of the http webserver. This page provides access to the configuration parameters of the Gateway.

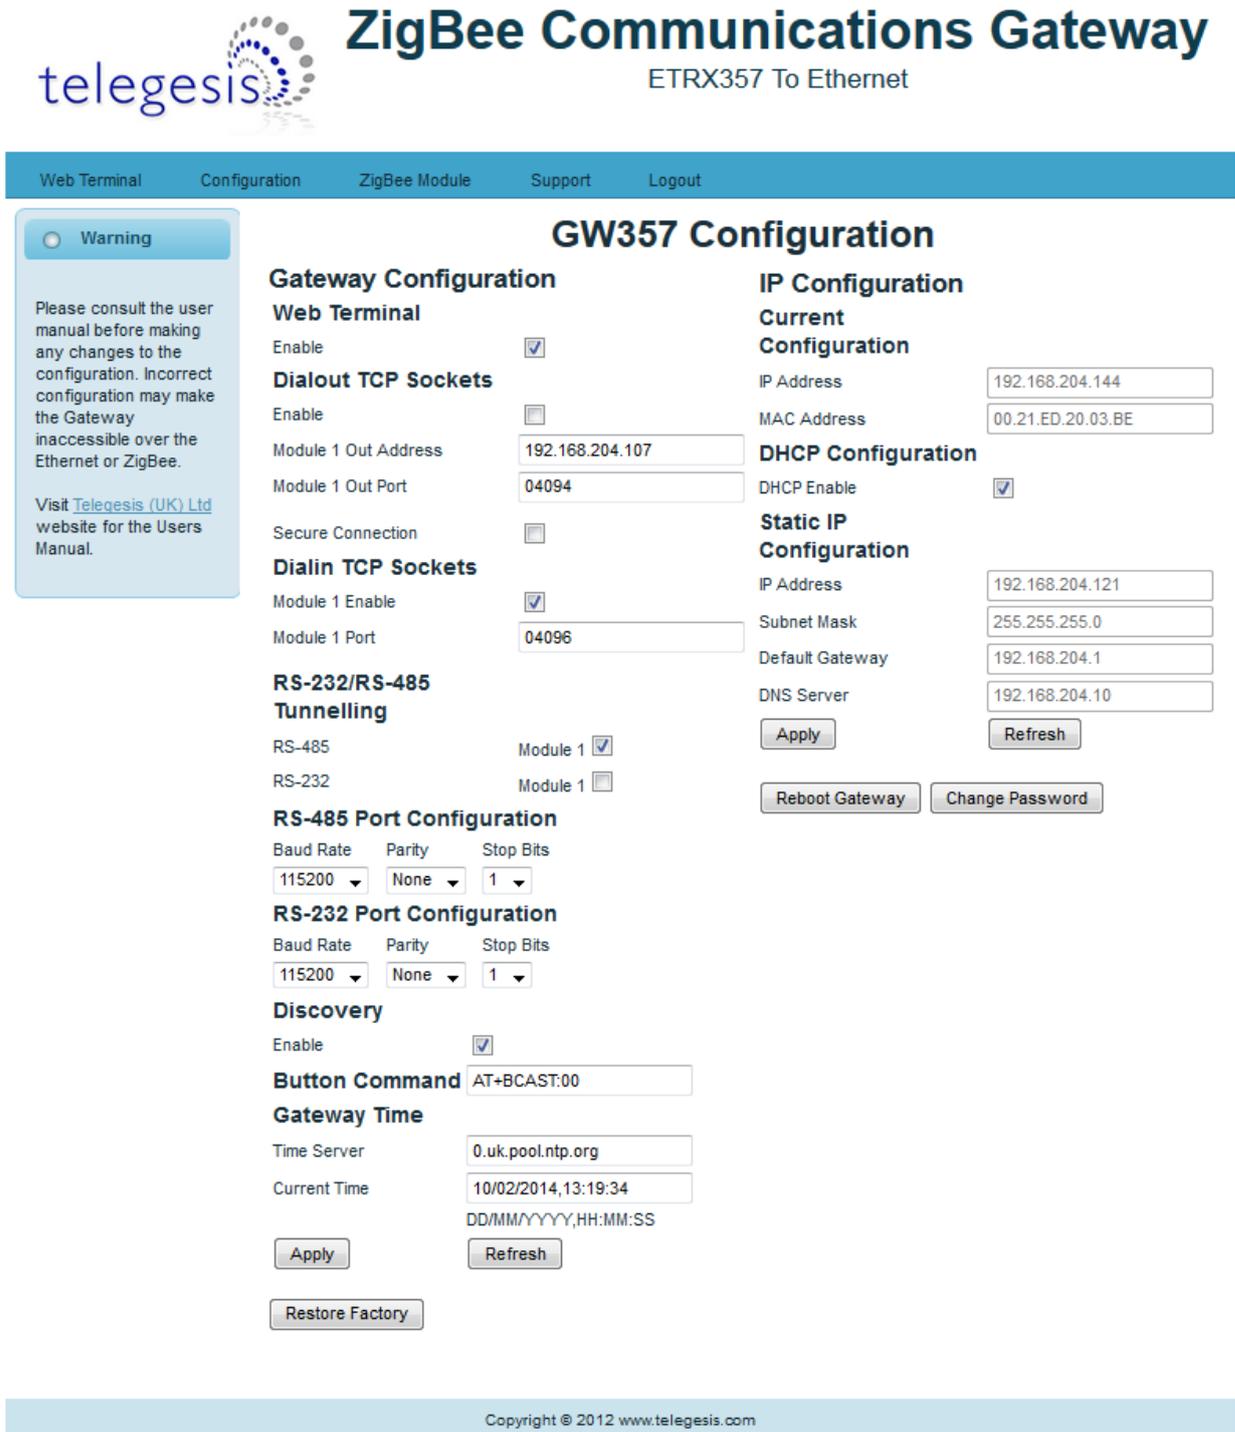

telegesis ZigBee Communications Gateway
ETRX357 To Ethernet

Web Terminal Configuration ZigBee Module Support Logout

Warning

Please consult the user manual before making any changes to the configuration. Incorrect configuration may make the Gateway inaccessible over the Ethernet or ZigBee.
Visit [Telegesis \(UK\) Ltd](#) website for the Users Manual.

GW357 Configuration

Gateway Configuration

Web Terminal
Enable

Dialout TCP Sockets
Enable
Module 1 Out Address
Module 1 Out Port
Secure Connection

Dialin TCP Sockets
Module 1 Enable
Module 1 Port

RS-232/RS-485 Tunnelling
RS-485 Module 1
RS-232 Module 1

RS-485 Port Configuration
Baud Rate Parity Stop Bits

RS-232 Port Configuration
Baud Rate Parity Stop Bits

Discovery
Enable

Button Command

Gateway Time
Time Server
Current Time
DD/MM/YYYY,HH:MM:SS

IP Configuration

Current Configuration
IP Address
MAC Address

DHCP Configuration
DHCP Enable


Static IP Configuration
IP Address
Subnet Mask
Default Gateway
DNS Server

Copyright © 2012 www.telegesis.com

Figure 12: Configurations Page

Gateway Configuration

 a. Web Terminal




| | |
|---------------------|-------------------------------------|
| Web Terminal | |
| Enable | <input checked="" type="checkbox"/> |

This option enables or disables the access to ZigBee module via the web terminal. The Gateway provides an access to the ZigBee module via Web Terminal page which can be used to issue commands to the ZigBee module and monitor the response of the module. The Web Terminal only supports communication in ASCII.

Default value is enabled.

b. Dialout TCP Sockets

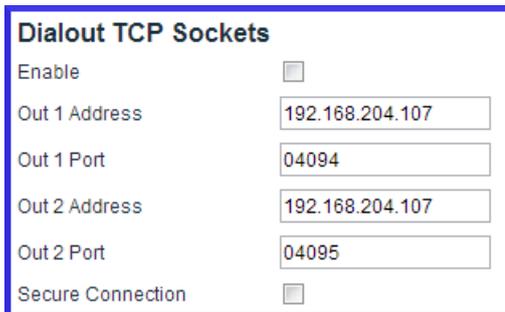

| | |
|----------------------------|--|
| Dialout TCP Sockets | |
| Enable | <input type="checkbox"/> |
| Out 1 Address | <input type="text" value="192.168.204.107"/> |
| Out 1 Port | <input type="text" value="04094"/> |
| Out 2 Address | <input type="text" value="192.168.204.107"/> |
| Out 2 Port | <input type="text" value="04095"/> |
| Secure Connection | <input type="checkbox"/> |

Enable

The Gateway can establish an outgoing TCP socket connections to a specified dialout addresses and port numbers. This option can enable or disable the outgoing socket connections for both the ZigBee modules.

Default value is disabled.

Out 1 Address

The address specified in this option is used by the gateway to establish the outgoing socket connection for the 1st ETRX3 ZigBee module. The dialout address can either be an IP address or a host name.

Out 1 port

This item specifies the port number for the dialout connection from 1st ETRX3 ZigBee module.

Out 2 Address³

The address specified in this option is used by the gateway to establish the outgoing socket connection from the 2nd ETRX3 ZigBee module. The dialout address can either be an IP address or a host name.

Out 2 port³

This item specifies the port number for the dialout connection from 2nd ETRX3 ZigBee module.

³ This option only available in Gateway models with two ZigBee modules on-board. Please refer order codes

Secure Connection

This option enables the SSL on the outgoing socket connection⁴.

c. Dialin TCP Sockets

| Dialin TCP Sockets | |
|--------------------|-------------------------------------|
| Module 1 Enable | <input checked="" type="checkbox"/> |
| Module 1 Port | <input type="text" value="04096"/> |
| Module 2 Enable | <input checked="" type="checkbox"/> |
| Module 2 Port | <input type="text" value="04097"/> |

Module 1 Enable

The Gateway also allows an incoming TCP socket connection on a specified port which enables access to the 1st ETRX3 ZigBee module.

Module 1 Port

The IP port number to access the 1st ETRX3 ZigBee module via incoming TCP socket.

Module 2 Enable⁵

The Gateway also allows an incoming TCP socket connection on a specified port which enables access to the 2nd ETRX3 ZigBee module.

Module 2 Port⁵

The IP port number to access the 2nd ETRX3 ZigBee module via incoming TCP socket.

d. RS232/RS485 Tunnelling

This is only available on GW357 gateway models which have the RS232\RS485 option (see the order codes table.) A “Module 2” check box will also be present if your GW357 has a second ETRX3 ZigBee module fitted.

This option creates a direct connection between the RS232 or RS485 port on the gateway and the ETRX3 ZigBee module.

The GW357 doesn't support addressing in multidrop networks. Any data received on the RS485 port will be automatically forwarded to the ETRX3 ZigBee module.

e. RS232/RS485 Port Configuration

This option is only available on GW357 gateway models which have the RS232\RS485 option (see the order codes table.)

Here the user can select the RS232 and RS485 port settings. Note: it is recommended (although not a requirement) that the RS232/RS485 port on the gateway and the ETRX3 ZigBee module have the same baud rate. The gateway has a limited capacity to buffer messages; ensuring the baud rates are the same removes the potential for a buffer overflow in the RX or TX paths.

⁴ The SSL is not implemented in current release.

⁵ This option only available in Gateway models with two ZigBee modules on-board. Please refer order codes

f. Discovery

| |
|---|
| Discovery Enabled <input checked="" type="checkbox"/> |
|---|

This option is enables the Gateway to send discovery broadcasts by UDP on port 14099 once every minute. This option is enabled by default.

g. Button Command

| |
|---|
| Button Command <input type="text" value="AT+PJOIN"/> |
|---|

This is a command string that will be sent to the 1st ETRX3 ZigBee module each time the Button-2 (B2) is pressed.

h. Gateway Time

| |
|---|
| Gateway Time |
| Time Server <input type="text" value="0.uk.pool.ntp.org"/> |
| Current Time <input type="text" value="20/08/2013,11:15:33"/> |
| DD/MM/YYYY,HH:MM:SS |

Time Server

The Gateway implements SNTP client which can update Gateway time from a valid time server specified in time server field.

Current Time

The current time of the gateway is displayed in this field when the page is loaded or is clicked.

After changing any settings on the webpage must be clicked in order to apply the changes to Gateway configuration. Following message will be displayed to confirm the change.

| |
|--|
| Gateway configurations change successful |
|--|

IP Configuration

a. Current IP Configurations

| Current Configuration | |
|-----------------------|-------------------|
| IP Address | 192.168.204.113 |
| MAC Address | 00.21.ED.20.00.00 |

IP address

The current IP address of the Gateway is displayed in this field.

MAC address

The MAC address of the Gateway is displayed in this field.

b. DHCP Configuration

| DHCP Configuration | |
|--------------------|-------------------------------------|
| DHCP Enable | <input checked="" type="checkbox"/> |

DHCP Enable

If this option is enabled the Gateway can acquire IP configurations like IP address, subnet mask, default gateway and the DNS server dynamically by using DHCP protocol. If the DHCP option is not selected then stored Static IP configuration is used to setup the network interface.

c. Static IP Configurations

| Static IP Configuration | |
|-------------------------|-----------------|
| IP Address | 192.168.204.121 |
| Subnet Mask | 255.255.255.0 |
| Default Gateway | 192.168.204.1 |
| DNS Server | 192.168.204.10 |

IP Address

The gateway uses the IP address specified in this field as static IP when DHCP option is not selected.

Subnet Mask

The gateway uses the subnet mask specified in this field as subnet mask when DHCP option is not selected.

Default Gateway

The gateway uses the default gateway specified in this field as default gateway when DHCP option is not selected.

DNS Server

The gateway uses the DNS server specified in this field as DNS server when DHCP option is not selected.

After changing any settings in the IP configuration must be clicked in order to apply the changes in Gateway. Following message will be displayed to confirm the change.



Click refresh to verify if the settings are changed successfully.

Restoring Factory Defaults

The factory settings can be restored by clicking . The factory defaults can also be restored by combination of hardware button presses as described in [Buttons Actions](#) section. Following are the factory defaults:

Default Gateway Configurations

1. Web Terminal : Enabled
2. Dialout : Disabled
3. Out 1 Address : 192.168.204.107
4. Out 1 Port : 4094
5. Out 1 Address : 192.168.204.107
6. Out 1 Port : 4095
7. Secure Connection⁶ : Disabled
8. Module 1 Enable : Enabled
9. Module 1 Port : 4096
10. Module 2 Enable : Enabled
11. Module 2 Port : 4097
12. Time Server : 0.uk.pool.ntp.org\0
13. Username : admin
14. Password : password

Default IP Configurations

1. DHCP Enable : Enabled
2. Static IP Address : 192.168.204.121
3. Subnet Mask : 255.255.255.0
4. Default Gateway : 192.168.204.10

⁶ The SSL is not implemented in current release.

Changing the Admin Password

User can change the Gateway's default password by clicking [Change Password](#) which will display following fields on the configurations page. Fill in all the fields and hit change to apply new password.

| | | |
|--------------|----------------------|---------------------------------------|
| Old Password | <input type="text"/> | |
| New Password | <input type="text"/> | Max 9 chars |
| Retype New | <input type="text"/> | <input type="button" value="Change"/> |

Once the password is changed successfully the following message will be displayed.

| |
|----------------------------|
| Password change successful |
|----------------------------|

Password can also be reset to factory default by restoring factory default configurations mentioned in [Buttons Actions](#).

ZigBee Interface Configurations

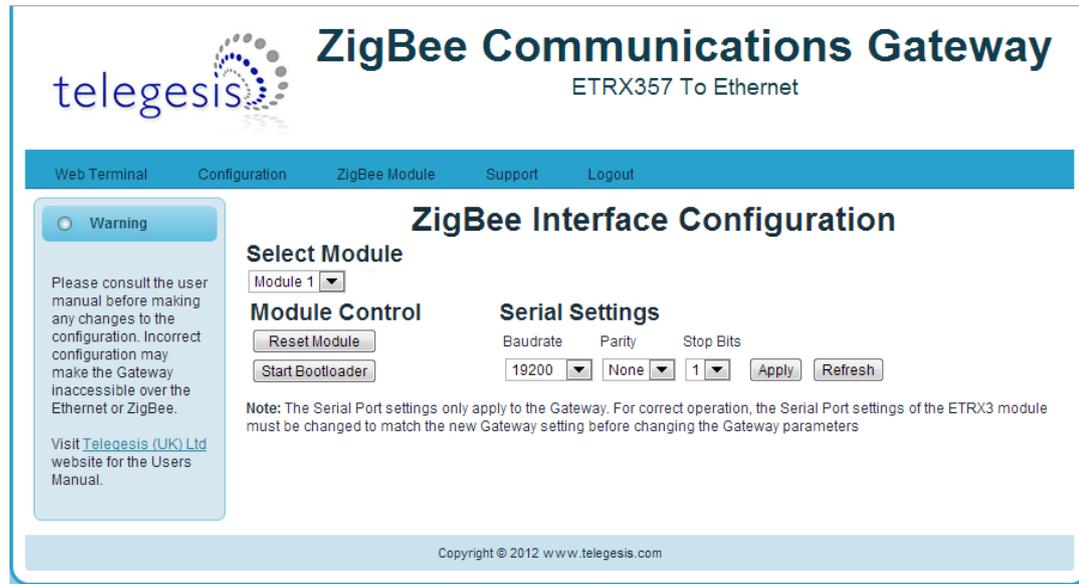


Figure 13: ZigBee Interface Configurations page

The Gateway comes with Telegesis ZigBee AT-commands⁷ Firmware programmed onto the assembled ETRX3 ZigBee module. This firmware communicates at baud rate settings of 19200-8N1. The ZigBee Interface Configurations page is useful to change⁸ the serial settings of the gateway serial ports connected to the ETRX3 ZigBee modules. This page also provides the options to reset the selected ETRX3 ZigBee module and to start the bootloader.

a. Select Module

This field selects the ETRX3 ZigBee module to apply the settings to (there can be two module as per the model number of gateway).

b. Module Control

Reset Module

Click for gateway reset the selected ETRX3 module.

Start Bootloader

Click to start the bootloader on selected ZigBee module. The standard AT-Command firmware has serial Bootloader which can be used to upgrade the ZigBee firmware in the selected module. Process of upgrading ETRX3 ZigBee firmware in standard Gateway is described in the [Appendix A](#). The bootloader is initiated by holding down the PA5 pin of the EM35x and then issuing a hardware reset to the module

c. Serial Settings

Select the serial settings for the selected module and click to apply the settings

⁷ Please refer AT-commands documentation at [Telegesis document centre](#)

⁸ The Serial Port settings only apply to the Gateway. For correct operation, the Serial Port settings of the ETRX3 module must be changed to match the new Gateway setting before changing the Gateway parameters

Web-Terminal



Figure 14: Web Terminal page

The Web Terminal is a simple web interface to communicate with the 1st ETRX3 ZigBee module on the Gateway. User can issue AT-Commands⁹ to the module in ZigBee input command box, click and monitor the response in the ZigBee output window.

The Terminal status shows the current status of the web terminal and the Gateway time is also displayed in the top right of the ZigBee output window,

Terminal Disabled Status:



If the Web Terminal option is disabled in the [Configurations page](#) Terminal status as shown above will be displayed. No commands can be issued to the ZigBee module via Web Terminal if this status is been displayed.

Terminal Enabled Status:



When the Web Terminal connects successfully to the ZigBee module above status will be displayed. The Gateway time will also start updating once every second. Now, the user may enter an AT-Command in ZigBee input box and click issue the command¹⁰ to the ZigBee module and expect the response in approximately one sec.

⁹ Please refer AT-commands documentation at [Telegesis document centre](#)

¹⁰ Note: Pressing Enter Key on Keyboard will NOT send the command but will refresh the page.

Firmware Upgrade

The Gateway firmware can be updated over Ethernet. To perform Gateway firmware upgrade, navigate to “http://<gateway_ip_address>/bootload.html” page which looks like below.



Figure 15: Firmware Upgrade page

Stored Image Info

| Stored Image Info | |
|-------------------|-----------------|
| Image Header | GW357_APP_IMAGE |
| Firmware Version | 00010001 |
| Image Size | 0004E004 bytes |

This section gives the information of the Gateway firmware image stored in the Gateway.

Image Header

Each image stored in the Gateway has an Image Header for identifying the type of image. This field displays the image header of selected Image type.

Firmware Version

This field displays the firmware version of image stored.

Image Size

This field displays the size of stored image in bytes.

Upload Images



Upload Images
Select Upload Image Type
Gateway Image
Choose File GW357_BRD...Z_K60.img
Upload New Image

Select Upload Image Type:

Select the type of image to be uploaded to the Gateway. Currently Gateway supports three types of images

- a. Gateway Image
This is the gateway upgrade image which will replace the current Gateway firmware when gateway is rebooted with Update Gateway flag enabled.
- b. Bootloader Image
This is the recovery bootloader¹¹ upgrade image which will replace the current secondary bootloader when gateway is rebooted with Update Bootloader flag is enabled.
- c. Configuration Settings Image
All the configurations settings mentioned in [Configurations page](#) can be updated by this image type. The settings will get applied after the gateway is rebooted. No flag is necessary to be enabled for the configuration settings to be update.

Image Upload Process

Click **Choose File** which opens a dialogue box to navigate to the image, navigate to appropriate file and click open.

Now click **Upload New Image** a pop-up box will open to confirm correct file is uploaded. Click OK to proceed. Gateway activity LED will be blinking while the file is being transferred. If the image is uploaded and stored successfully in Gateway "**FW image sent successfully**" message is displayed in a new tab in the browser.

¹¹ Recovery bootloader mechanism is not implemented in the initial release but will be implemented in subsequent release soon.

Update Flags and Reboot



Update Gateway
Disabled

Update Bootloader
Disabled

Wait for Serial command
Disabled

Update Gateway

If this flag is enabled upon reboot the gateway will validate the Gateway Image stored by image upload process mentioned above and updates the gateway firmware if a valid image is present.

Update Bootloader

If this flag is enabled upon reboot the gateway will validate the Bootloader Image stored by the image upload process mentioned above and updates the recovery bootloader firmware if a valid image is present.

Wait for Serial Commands

The Gateway can accept some serial commands at start-up (available only on models with RS232-RS485 port present). If this flag is enabled the gateway will wait for 5 sec to accept any serial commands on the RS232 lines and then jump to the main gateway application.

Enable the appropriate flags and click buttons to upgrade the gateway with stored image.

Upgrading may take few minutes, be patient and do not interrupt the upgrade process until power up sequence is indicated on the LED panel. The upgrade process will be indicated by blinking of gateway activity LED.

Support

Support link will redirect to telegesis Support page on the internet <http://www.telegesis.com/support/>

Logout

Logout will end current session and “**Logged out successfully**” message will be displayed and the user will need to authenticate with username and password at the next login.

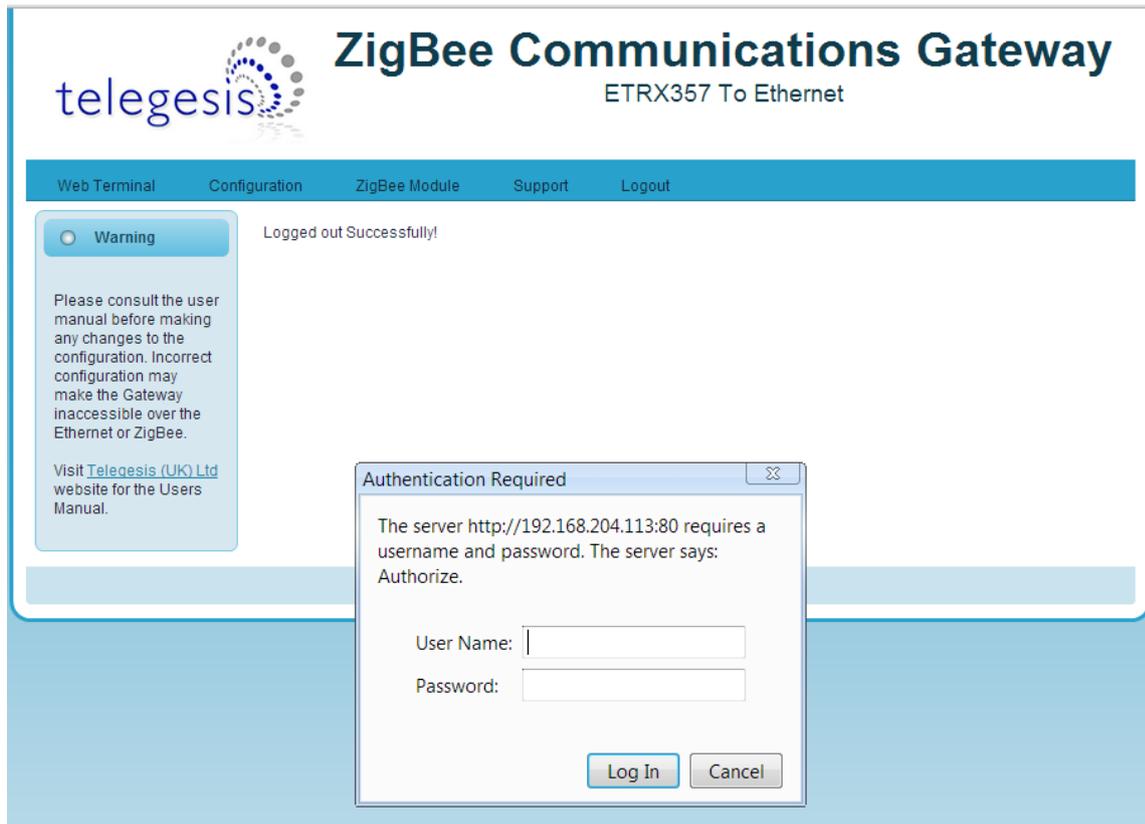


Figure 16: Logout page

6 Appendix A

6.1 Bootloading ETRX3 ZigBee module

The procedure to upgrade firmware on ETRX3 module over a TCP socket is as described below.

1. For this example assume the firmware of 1st ETRX3 ZigBee module is to be updated remotely over a TCP socket.
2. Make sure dialin socket is enabled for the 1st ETRX3 ZigBee module as shown below

| Dialin TCP Sockets | |
|--------------------|-------------------------------------|
| Module 1 Enable | <input checked="" type="checkbox"/> |
| Module 1 Port | <input type="text" value="04096"/> |
| Module 2 Enable | <input checked="" type="checkbox"/> |
| Module 2 Port | <input type="text" value="04097"/> |

3. Connect to the Gateway's dialin socket for the 1st ETRX3 ZigBee module using Telegesis terminal (Version 4 or higher) as shown below.

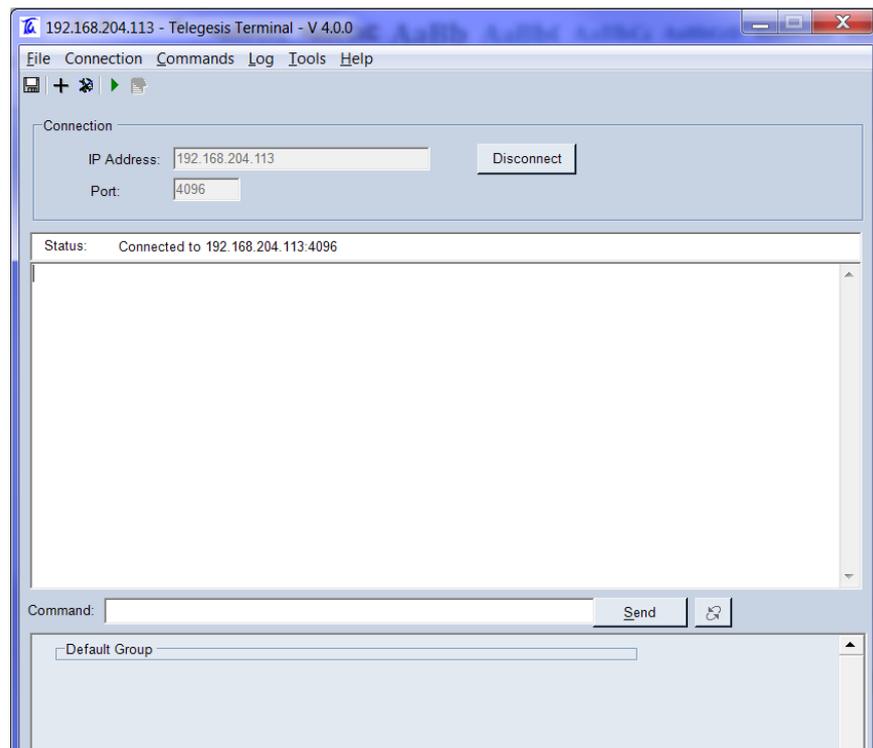


Figure 17: Dialin socket connection

- The [LED sequence 4](#) should be indicated by LED panel.
- Navigate to ZigBee Interface Configuration and Select Module 1 as shown below.



Select Module
Module 1 ▼

Module Control
Reset Module
Start Bootloader

Serial Settings
Baudrate Parity Stop Bits
115200 ▼ None ▼ 1 ▼ Apply Refresh

- Click **Start Bootloader** to start the bootloader on selected ZigBee module.
- Change the baudrate to 115200 and click **Apply**.
- On Telegesis terminal hit Enter key to see following prompt

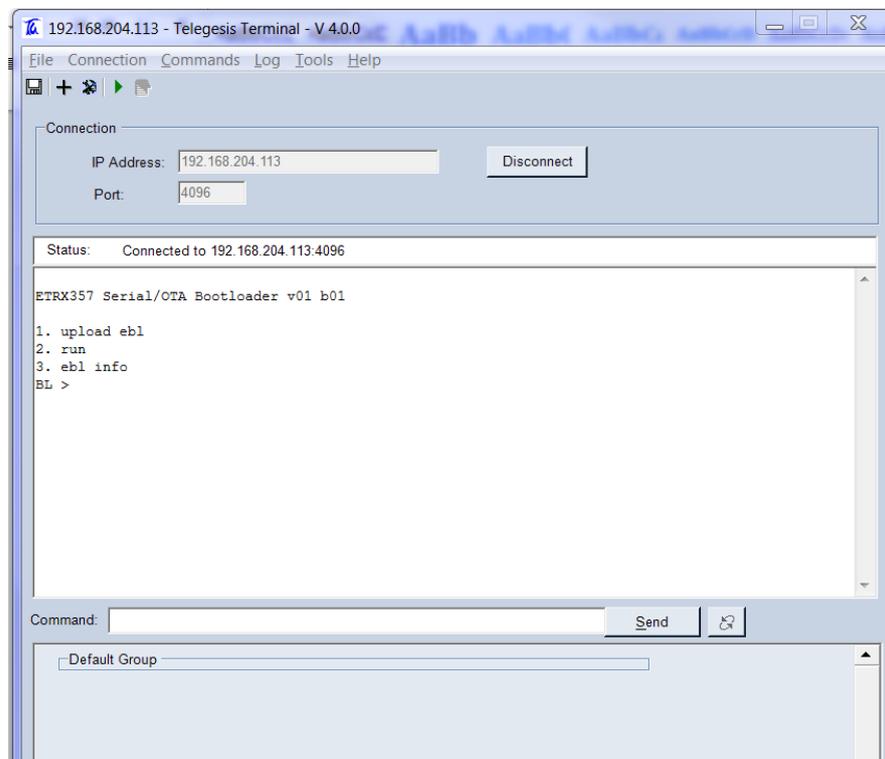


Figure 18: ETRX3 Bootload prompt

- Press “1” to see character ‘C’ displayed periodically as shown which indicates the ZigBee module is ready to receive upgrade image file via XMODEM

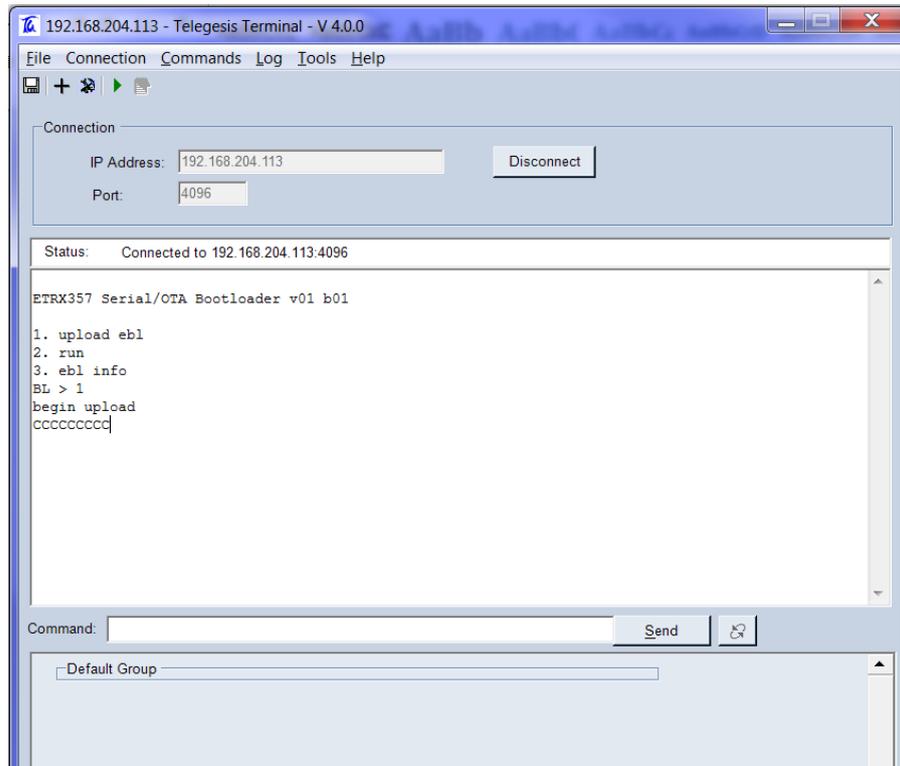


Figure 19: Ready to receive upgrade image file via XMODEM

- Go to Tools->Transfer File (XMODEM) and send the appropriate upgrade image file.
- Once successful change the baudrate of module according to upgraded firmware and the ZigBee module will communicate according to the new firmware. For Telegesis R3xx firmware the default baud rate is 19200-8N1

7 Warranty

1. Telegesis warrants that at the date of delivery the Goods will conform in all material respects to any written specification published or provided by Telegesis and that for the periods set out below in respect of each product type the Goods will be free from defects in workmanship and materials under normal use and service. The Buyer must notify Telegesis of any defect in writing. Telegesis' obligation under this warranty will not arise until the Buyer returns the defective Goods at its own expense and risk, to Telegesis. Telegesis' sole obligation under this warranty shall be at its option to replace or repair without charge such defective Goods or component parts thereof. Any replacement of Goods or component parts under this warranty shall not extend the period of warranty beyond that of the goods or component parts so replaced.
2. All Hardware is supplied with one year return to base warranty unless indicated otherwise. All Software is supplied with a 90-day warranty period.
3. With respect to any computer software comprised in the Goods supplied by Telegesis any defects arising after expiry of the warranty period referred to above should be notified to Telegesis in writing, Telegesis may at its discretion endeavour to correct any such defects but Telegesis gives no warranty that any such defects can be corrected or that defects will be corrected within a particular time.
4. Telegesis shall not be liable hereunder:
 - a) If the Goods alleged to be defective have been repaired or altered by any person other than Telegesis designated personnel or authorised representative or other person approved by Telegesis in writing; or
 - b) Where testing or examination by Telegesis reveals any alleged defect in the goods to have been caused by the buyers misuse, neglect, improper installation, failure to follow instructions (whether oral or in writing), or the supply by the Buyer of incorrect or inadequate instructions or information with the regards to the design of any Goods or to have been caused by any similar equipment to which the Goods are attached or in which the Goods are incorporated or any cause beyond the range of intended use of the Goods or by accident, fire or other hazard; or
 - c) Where component parts alleged to be defective were not manufactured by Telegesis but were included in the Goods at the request of the Buyer, in which case the Buyer shall only be entitled to the benefit of any such warranty or guarantee as is given by the manufacturer or supplier of such parts to Telegesis.

5. If the goods are to be manufactured or any process is to be applied to them by Telegesis in accordance with a specification submitted by the Buyer, the Buyer shall indemnify Telegesis against all loss, damages, costs and expenses awarded against or incurred by Telegesis in connection with or paid or agreed to be paid by Telegesis in settlement of any claim which results from Telegesis' use of the Buyer's specification, including but not limited to any claim for infringement of any patent, copyright, design, trade mark or other intellectual property rights of any other person.
6. Telegesis' liability hereunder shall be in lieu of any other representation (unless fraudulent), warranty or condition, expressed or implied by law or otherwise with respect to the goods or any liability imposed by common law, statute or otherwise and Telegesis hereby excludes all such representations (unless fraudulent), warranties and conditions and shall not be liable to the Buyer for any loss or damage whatsoever (including without prejudice to generality of the foregoing any liability in contract, negligence, or any other tort for indirect consequential or economic loss or for loss of profit or opportunity of any kind) arising directly or indirectly in connection with the contract, the Goods or otherwise except insofar as any exclusion or limitations of Telegesis' liability hereunder is prohibited, void or enforceable by law.
7. Telegesis shall not be responsible in any manner whatsoever for any software, information or memory data stored on or integrated with any of the Goods returned to Telegesis for repair or replacement under this warranty.
8. Without prejudice to any other provision in these Terms, in any event Telegesis' total liability for any one claim or for the total of all claims arising from one act of default on Telegesis' part (whether arising from Telegesis' negligence or otherwise) shall not exceed the purchase price of the Goods the subject matter of any claim but nothing herein shall limit or exclude Telegesis' liability for death or personal injury caused by Telegesis' negligence or Telegesis' liability for fraudulent misrepresentation.
9. Where the buyer deals as a consumer within the meaning of the unfair contract Terms Act 1977 nothing in these terms shall restrict or exclude any liability of Telegesis for breach of its implied undertakings as to conformity of the goods with description or sample or as to their quality or fitness for the purpose.
10. In the case of a consumer transaction nothing in these terms shall affect the statutory rights of the Buyer as defined in the Consumer Transaction (Restrictions on Statements) Order 1976 (as mentioned).
11. The period or terms of the warranty contained in this clause shall only be varied or extended where Telegesis has granted the Buyer an Extended Warranty.



7.1 Caution

The user must read through the user manual and learn to use the equipment appropriately. Telegesis (UK) Ltd will not accept any liability arising from using the equipment in the manner not specified by the documentation accompanied by the equipment.

7.2 Cleaning

Dust or wipe only with damp cloth; do not allow moisture to penetrate the enclosure. Do not use aggressive cleaning agents

8 Compliance with Laws and Regulations

The Buyer hereby certifies that no Goods will be exported directly or indirectly outside the United Kingdom unless, where necessary, the appropriate prior authorisation to such export has been obtained from the Department of Trade and Industry, London, and/or (where applicable) the Office of Export Administration of the US Department of Commerce.

9 Disclaimer

Product and Company names and logos referenced may either be trademarks or registered trademarks of their respective companies. We reserve the right to make modifications and/or improvements without prior notification. All information is correct at time of issue. Telegesis (UK) Ltd. does not convey any license under its patent rights or assume any responsibility for the use of the described product.

This device should not be used without proper consideration and design of associated system architecture and redundant safety features in applications where failure may result in death or injury. The manufacturer accepts no responsibility for injury, death or loss human or material caused by the use or misuse of this device

10 Software License:

This product is licensed under the wireless network patent portfolio license for use by a consumer or other uses for which there is no remuneration. Any other use of this product in any manner is not licensed and is expressly prohibited without a license under applicable patents in the wireless network patent portfolio, which license is available from MPEG LA, LLC, 4600 S. Ulster St., Suite 400, Denver, Colorado 80237 U.S.A. see <http://www.mpegla.com>

11 Contact Information

Website: www.telegesis.com
E-mail sales@telegesis.com
Telegesis (UK) Limited
Abbey Barn Business Centre
Abbey Barn Lane
High Wycombe
Bucks
HP10 9QQ