

A3 SUPER

RC Airplane Flight Control System

User Manual

For F/W Ver 2.x



VERY IMPORTANT!

- 1 This manual is written for firmware Ver.2.x.
- 2 **Always choose a reliable BEC or ESC to provide a stable operating voltage for the controller. The BEC should have sufficient capacity to provide working current for all the electronic devices on the aircraft especially when using several high torque servos.**
- 3 Remember to perform stick centering after first installation, or replacing a new radio system, or making a trimming or sub-trim change in the transmitter. See P16 "12.13. Stick Centering".
- 4 After the installation, center all surfaces of the aircraft by adjusting the length of the linkage rods, or sub-trim and trimming setting in the transmitter. Then perform a stick centering to make the controller re-learn the new center position for all channels.
- 5 **It is extremely important to make sure that the gyros are compensating in the correct direction before flight, otherwise it could lead to losing control or even crash during flight!** See P13 "12.8. Gyro Direction".
- 6 Always disable any mixing functions for delta-wing or v-tail in your radio system, these will be done by A3 Super.
- 7 Such functions as End-Point, D/R or EXP of the radio system can be used as usual according to your preferences. But please let them stay at default during installation.
- 8 Before power on, the aircraft should be placed face up on a stable horizontal platform whatever the mounting way of the controller is. Don't move the aircraft during initializing (while the LED flashing WHITE rapidly). Always verify that the gyro compensates in an correct direction before every flight.
- 9 Following the suggestions on your first flight: Switch to normal stabilization mode, set all the gyro gain to a lower volume (about 30%), or turn off the gyro completely. Adjust the trimming buttons on the transmitter to find a appropriate zero offset for all surfaces during the flight, then perform "Stick Centering" to make the controller re-learn the current center positions. Too large gain setting could make the aircraft difficult to control. We would strongly recommend that you use the remote master gain control to make it much more convenient for gain adjusting during the flight.
- 10 If the servo moves to one side automatically without any controls when switching to 3D flight mode, you have to perform the stick centering again, or even increase the stick dead band.
- 11 When operating in self-balance mode, the controller is used as a level stabilizer. The angle error caused by installation will probably make a wrong attitude detection of the aircraft, when it happens, the function of level offset should be used to correct the errors. See P15 "12.12.Level Offset".
- 12 The included USB adapter is only used to upgrade the firmware for A3 Super and program card. Please check our website WWW.HOBBYEAGLE.COM where we will inform you about the latest updates and downloads.
- 13 The controller or the card can be reset by refreshing the firmware, when it doesn't work, it will be an effective way to resolve the problems caused by the software.

1. Introduction

A3 Super is the latest RC flight control system of EAGLE's A3 Series. It is designed especially for fixed-wing. With an integrated built-in high precision 6-axis (3 gyro + 3 acc) MEMS sensor and advanced attitude and PID control algorithm, the controller can accurately detect the angular velocity and attitude of the aircraft and issue commands to all servos, which enables the balance and stability throughout the flight. A3 Super provides features of delta-wing (flying-wing), v-tail, remote master gain adjustment and separate dual aileron and elevator control. It can be used in nearly any type of RC aircrafts.

A3 Super offers four flight modes, including Normal Stabilization Mode, 3D Attitude Locking Mode, Self-balance Mode and Gyro Deactivated Mode. It also provides three kinds of control behavior including Stable Mode, Normal Mode and Sport Mode to meet the need of various user's requirement.

We also provide you a program card. Without connecting to a PC, you can easily setup all the functions and parameters even in the outdoor flight. The firmware can be upgraded through the USB adapter. Please check out our website WWW.HOBBYEAGLE.COM for the latest updates and downloads.

2. Features

- ✓ Integrated design of 6-axis (3 gyro+3 acc) MEMS sensor for self-stability and self-balance.
- ✓ Advanced brown-out fast recovery ability provides you better security and reliability.
- ✓ 4 flight modes: Normal Stabilization, 3D Attitude Locking, Self-balance and Gyro Deactivated Modes.
- ✓ 4 AUX modes to define functional combination of input pins.
- ✓ 3 control behaviors: stable, normal and sport modes.
- ✓ 5 operating frequencies for servos, compatible with analog or digital servos.
- ✓ Remote master gain adjustment during flight.
- ✓ Separate dual aileron and elevator with dual input supported.
- ✓ Independent gyro direction setup for aileron 2 and elevator 2.
- ✓ Easy-to-use program card which supports both Simplified Chinese and English.
- ✓ Independent gyro gain adjustment and gyro ratio selection for each flight mode.
- ✓ Separate adjustments for servo travel limits.
- ✓ Mixing functions of delta-wing (flying-wing) and v-tail.
- ✓ More advanced settings such as gyro response rate, gyro switch, level offset, stick centering and stick dead band etc.

3. Specifications

Gyroscope: ± 2000 dps

Accelerometer: $\pm 4g$

Input Voltage: DC5V~6V

Supported Servo Type: 1520 μ s analog and digital servo

Operating Temperature: -40 °C ~ 85 °C

Size: 43×27mm

Weight: 10g (excluding wires)

4. Package Contents

A3 Super



Program Card




Data Cable



Double-sided tapes



Receiver Wires 15cm x 3




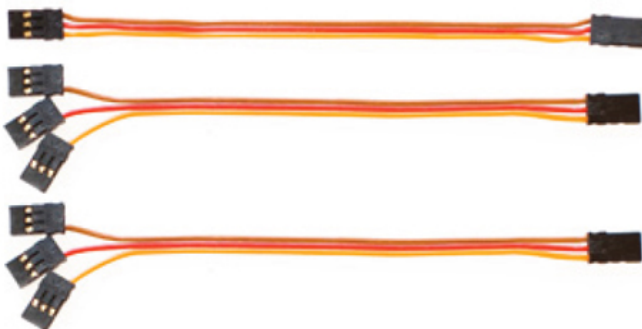


USB Adapter



5. Installation

The controller must be mounted on the platform of the airframe by using one of the provided double-sided tapes. There are two mounting ways: face up and face down. Once mounted, you need to choose the correct mount orientation using the program card or config tool. As the controller is designed for balancing, please make sure that the mounting platform should be parallel to the horizon and locate the controller as close to the CG as possible. The function "Level Offset" can help you to correct the deviation of installation. When mounting, make sure the longer side of the controller is along with the heading direction according to the illustration below:

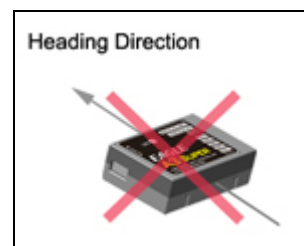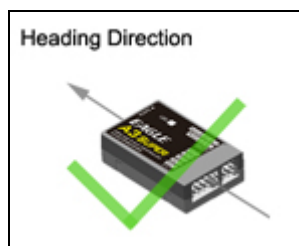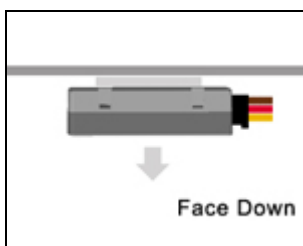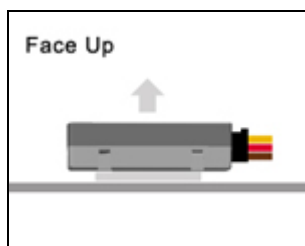

6. Connection Case

6.1. Description


As there are many different ways while connecting between A3 Super and the receiver since ver.2.x, here we need to take an example to give you a better understanding about it. Let's assume that the aircraft has two aileron servos and one elevator servo, which is the most common application. And you are going to enable both features of remote master gain and flight mode switch during the flight. In such case, AUX Mode-3 should be used for the controller and you need a 7-channel receiver at least, for example FUTABA's R6008HS.

6.2. AUX Mode


Ver.2.1 provides 4 functional combinations for the second group of input pins, including AUX Mode-1, Mode-2, Mode-3 and Mode-4. These 3 pins can be used as AIL2, ELE2, Flight Mode (FMOD) or Master Gain Control (GAIN) as the chart below shows. In this case, we choose AUX mode-3.

AUX Mode	AUX3	AUX2	AUX1
Mode-1	FMOD	ELE2	AIL2
Mode-2	GAIN	ELE2	AIL2
✓ Mode-3	FMOD	GAIN	AIL2
Mode-4	FMOD	GAIN	ELE2


AUX Mode - 1

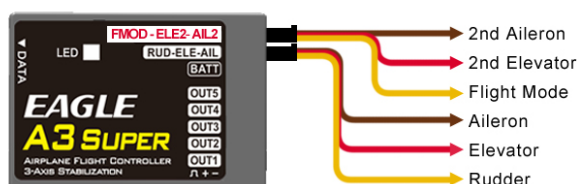


AUX Mode - 2

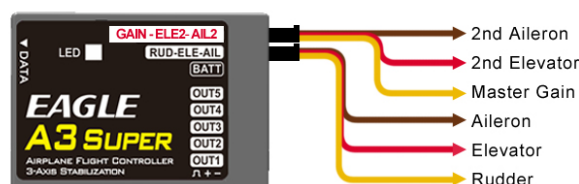

AUX Mode - 3

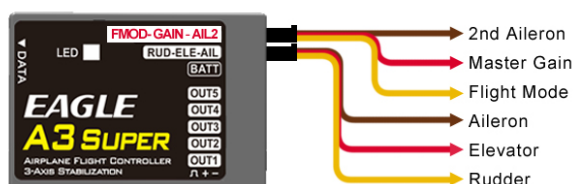

AUX Mode - 4

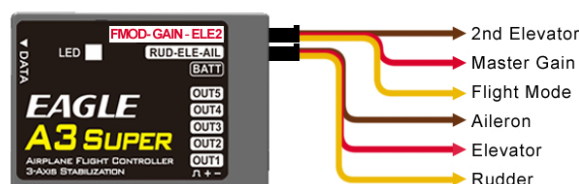

6.3. Transmitter Preparing

Create a new model and set the model type as fixed-wing with 2AIL+1ELE in your transmitter. Verify that all trimming buttons and sub-trims are set to 0%. Disable any mixing functions for delta-wing or v-tail in your radio system, these will be done by A3 Super. Let other settings stay at default this moment such as Servo Travel (End Point), Dual Rate and EXP etc. They can be adjusted as usual after installation. Make a channel mapping according to the table below:

CH1	CH2	CH3	CH4	CH5	CH6	CH7
Aileron	Elevator	Throttle	Rudder	Flight Mode	Aileron 2	Master Gain


FUNCTION 1/4		
	CTRL	TRIM
1 AIL	J1	T1
2 ELE	J3	T3
3 THR	J2	T2
4 RUD	J4	T4

FUNCTION 2/4		
	CTRL	TRIM
5 GEAR	SE	--
6 AIL2	--	--
7 AUX1	RD	--
8 AUX2	--	--

A 3-position switch (SE) is assigned to channel-5 for flight mode switching, which is implemented by using the GEAR function in the radio system. A knob (RD) is assigned to channel-7 for the adjustment of master gain, surely you might use a 3-position switch instead to get a 3-level gain control if you like.

6.4. Wiring

Connect all the required channels between the controller and the receiver, using the included plain 3-wire cables, which have only one lead of the control signal on the receiver side, and are connected to the controller on the combined connector. The controller requires at least 3 receiver channels, up to 7 channels. The channels of AIL, ELE and RUD must be connected all the time otherwise the controller will not work. The other 3 pins should be connected according to the AUX mode currently selected. The throttle servo or ESC is connected as normal to the throttle channel of the receiver without bridging the controller. The illustration below shows the wiring method only for AUX Mode-3, which is used in this case.

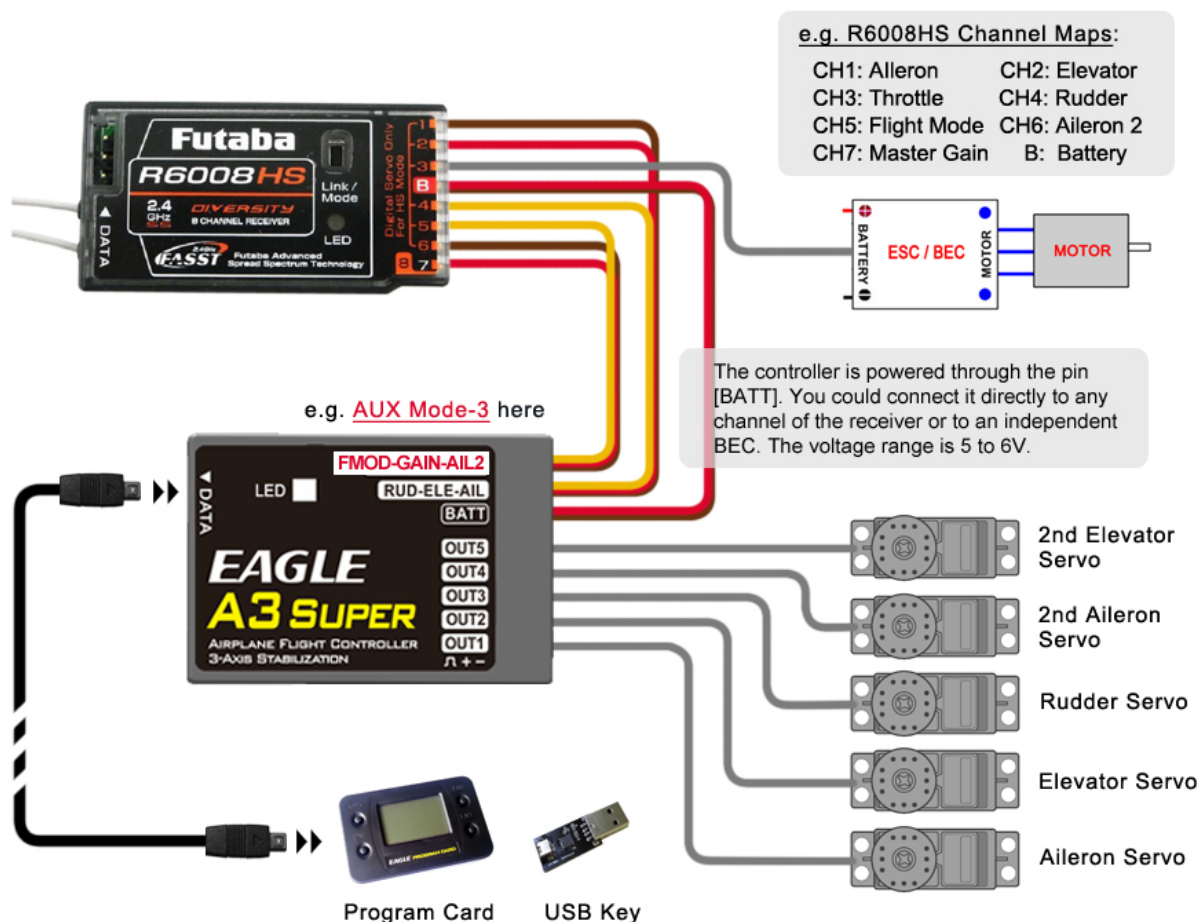

6.5. Power Supply

The controller is powered through the [BATT] pins. To achieve it, you can connect it directly to any idle channel of the receiver using the included 3-wire receiver cable, or to an independent BEC. The voltage range is 5 to 6V. **If a BEC is used as the power supply, please make sure that the voltage not exceeding the working voltage permit of your servos, and verify that the BEC have sufficient capacity to provide working current for all the electronic devices on the aircraft especially when using several high torque servos.**

6.6. Flight Mode Channel (FMOD)

[FMOD] is used for switching the flight mode. We have assigned a 3-position switch to it as mentioned above. The expected flight mode can be preset in the function "Flight Mode" of the program card or config tool. System will default to the mode which assigned to position-1 if you leave this pin unconnected. Even so, it is recommended that you always use an independent channel to switch the mode in flight.

	Position-1	Position-2	Position-3
Pulse Width	1020-1320μs	1320~1720μs	1720-2020μs
Default	Normal Mode	3D Mode	Self-balance

6.7. Master Gain Control Channel (GAIN)

[GAIN] is used to control the master gain remotely. In this case, we use a knob (RD) to make a linear adjustment of the gain. Surely a 3-position switch can be used instead to get a 3-level gain control.. Once connected, the master gain will be controlled by the transmitter directly. Only when the pin is disabled or unconnected, the master gain can be modified via the program card or config tool.

6.8. Dual Aileron & Dual Elevator

A true dual aileron and elevator system is available now on A3 Super, the OUT4 is for the 2nd aileron servo and the OUT5 is for the 2nd elevator servo. Mostly we use two aileron servos with single aileron input, in this condition, you just need to plug the two aileron servos into OUT1 and OUT4 respectively. The OUT4 will become a mirror of OUT1 by the software automatically, which can avoid the hassle using a Y-extension cable. This is very similar in connecting the dual elevator.


The dual channels share the same settings, such as servo limits, gyro direction and gain setting and so on. For example, if you set the servo limits of aileron channel to $\pm 80\%$, the maximum travel of both aileron servos will be $\pm 80\%$.

When using a dual aileron or elevator control, both two aileron servos should move in the same direction but the two elevator servos should move in the opposite. Please verify that you have made the correct settings in the REVERSE function of your transmitter.


6.9. Wing Type & Mixing

A3 Super has already built in such mixing functions as delta-wing (flying-wing) and v-tail. When operating it in such modes, the corresponding mixing must be disabled within your transmitter. **All you need is to set your radio to a single 4-channel fixed-wing mode.** Connect the servos by following the illustration shown.


Normal Fixed-wing

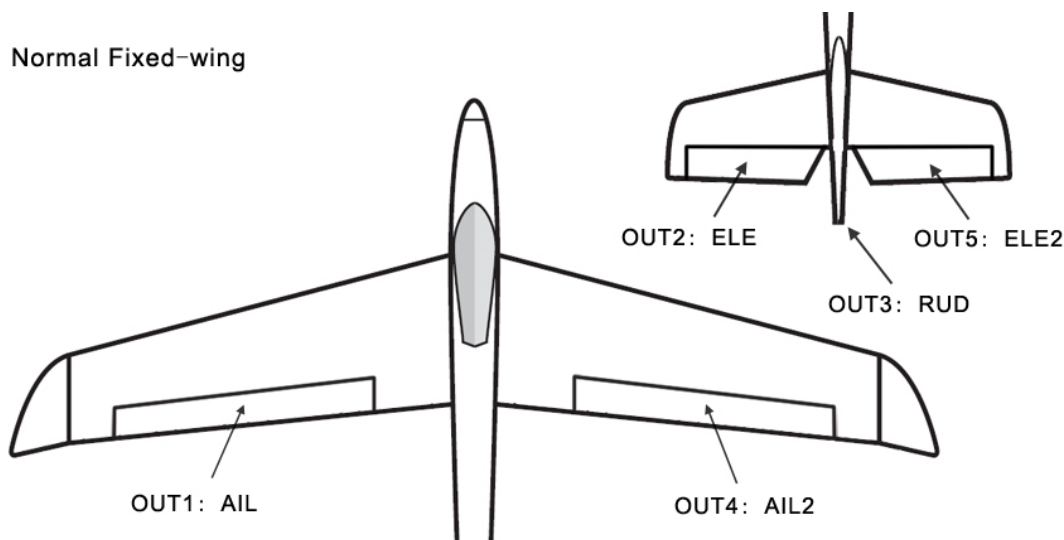

Flying-wing (Delta-wing)

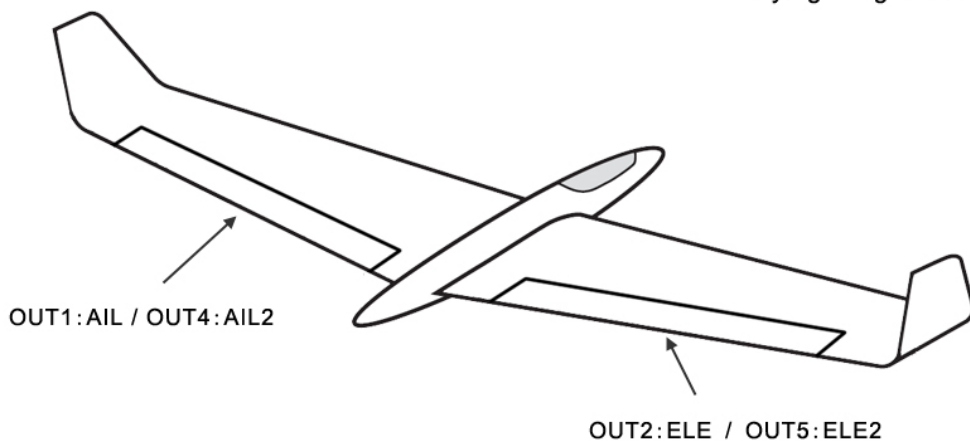

V-TAIL

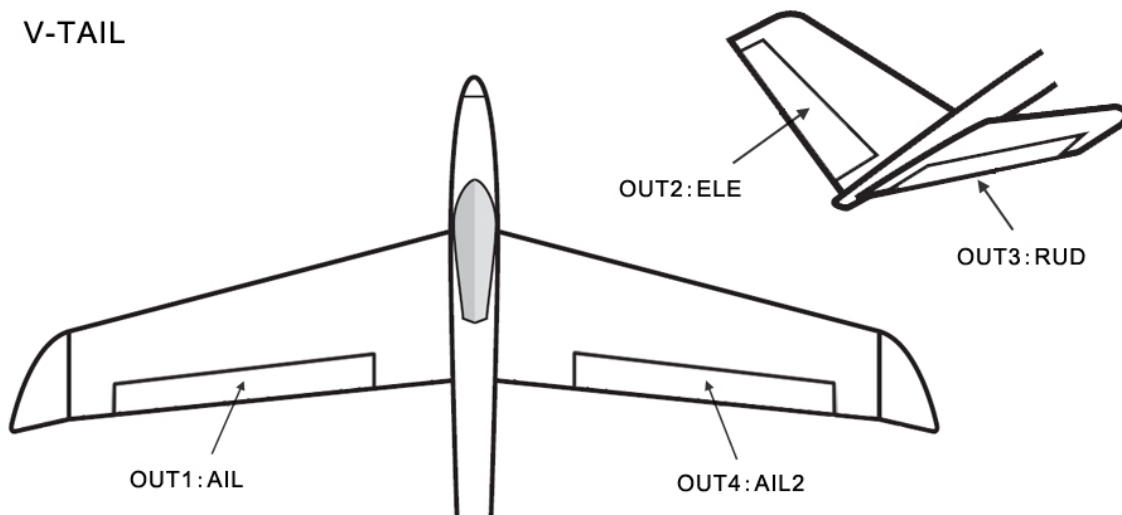

7. Brown-out Fast Recovery

The recommended operating voltage of A3 Super is 5~6V. The controller will perform a protective reset when an unforeseen power failure occurs such as a voltage drop (< 2.7V) or interruption of the BEC. It will take several seconds in normal startup process because of the self-test and gyro calibration, which will be unacceptable during flight. This function is used to handle such emergency situations. When an unexpected reboot happens, the controller will perform a fast startup and resume working very quickly by skipping the self-test and gyro calibration to ensure the safety of your aircraft. But even so, the most important issue is that you should always choose a reliable BEC for your aircraft!

8. LED Indicator

A RGB LED indicator is used for working status display and error report, shown below:

Condition	Color	Description
Power On	White, 2 Seconds	Ready to start initialization.
	White, Fast Flashing	Initializing, don't move the aircraft until initialization is done!
	White, 1 Flash	Initialize success.
	Red, Fast Flashing	Initialize failed, please retry.
Operating	Red, Slow Flashing	No signal checked, you must get AIL, ELE and RUD connected.
	Solid Red	Gyro deactivated mode, ready for flight.
	Solid Blue	Normal stabilization mode, ready for flight.
	Solid Violet	3D flight mode, ready for flight.
	Solid White	Self-balance mode, ready for flight.
Others	Green, Fast Flashing	Stick centering.

9. Start Up Steps

To achieve the best performance, please follow the steps below before every flight:

Step 1 Turn on the transmitter.

Step 2 A3 Super needs to perform a horizontal calibration during initialization, before power on, place the aircraft on a stable platform and keep it in the horizontal state. **Don't take it in your hand to power on!** The aircraft should be placed face up whatever the mounting way is, or it may not initialize properly or even result in a complete failure.

Step 3 Power on the aircraft, **the LED will turn WHITE for about 2 seconds then begin to flash rapidly, which means the controller is initializing. Do not move it during this phase.** After successful initialization, the LED will flash WHITE once. If the LED keeps flashing RED rapidly, you have to cut off the power and retry.

Step 4 After initialization, the color of the LED will give you the information about which flight mode is currently selected. Don't forget to move the sticks and check if the servos move in the correct direction before flight.

10. PC Config Tool

Download the newest config tool from our website if you haven't a program card. Please make sure that the tool is the correct version. The config tool ver.2.x is developed only for the firmware ver.2.x. For more details, please refer to the instructions inside the download package.



11. Program Card

All functions and parameters can be setup by the program card. When the controller shows the system is ready, plug the card into the DATA port on the controller using the included black data cable. Once connected, the card will be on and start to read the data from the controller. The adjustment through the card will take effect immediately without a final confirmation. You can exit the setup mode by simply pulling out the cable.



11.1. Buttons

- UP/+** Scroll up the menu or increase the value.
- DN/-** Scroll down the menu or decrease the value.
- ESC** Exit without saving the modified and return to the menu.
- ENT** Enter the function or save the value, hold it over 2 seconds to restore to the default setting.

11.2. Device Connection

After connected, the card will begin initializing and display: Connecting... When data loading completes, the main menu will be shown. Press the ESC button to reload again when in the main menu. After reloading, the current data will be overwritten.

Connecting...

11.3. Language Selection

The program card supports both Simplified Chinese and English. You can select suitable language through the menu "System Menu -> 语言/Language", or press and hold the button while connecting the card to the device until the language selection dialog shows.


语言/Language

简体中文
ENGLISH

11.4. Setting Methods


11.4.1. Menu Operation

By pressing the UP/+ or DN/- buttons, you can select the different functions within a menu. Press the ENT button to enter the selected item. When a second-level menu exists, the symbol ">" will appear on the right of the corresponding items.

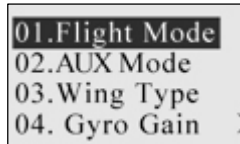


11.4.2. Option Selection

For example, when you are in the function "Wing Type". Press the UP/+ or DN/- button to switch to the different option. Press the ENT button to save changes or ESC to cancel. The unconfirmed item will keep flashing until the ENT button is pressed.

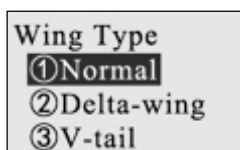

11.4.3. Value Adjustment

For example, when you are in the function "Normal Gain". Press the UP/+ or DN/- button to select the channel, press ENT button to enter edit mode. In edit mode, the value will keep flashing, you can increase or decrease the value by pressing UP/+ or DN/- buttons, press the ENT button to save changes or ESC to cancel. Press and hold the ENT button over 2 seconds can restore the default settings when in edit mode.

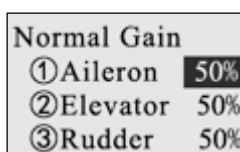

12. Functions

12.1. Flight Mode

It is used to preset the flight mode for the 3-position switch.


Normal Stabilization Mode (NORM) The most basic function of the gyroscope. In this mode, the gyroscope will sense roll velocity and make a momentary compensation for each axis, which improves the stability during flight.

3D Attitude Locking Mode (3DAL) Also called AVCS Mode, it is designed especially for 3D flight. With the active angular velocity control algorithm, the aircraft will try to lock its attitude when there is no command sent by the radio during flight.

Self-balance Mode (SBAL) Suitable for the junior players or the FPV application. In this mode, the controller will command the aircraft to maintain level flight automatically when you're releasing the sticks.


Gyro Deactivated Mode (DACT) Choose this mode to disable the gyros of all channels, the aircraft will be completely under the control of the radio.

Also see P7 "6.6.Flight Mode Channel (FMOD) for more detail.

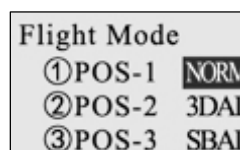


12.2. AUX Mode

See P5 "6.2.AUX Mode".

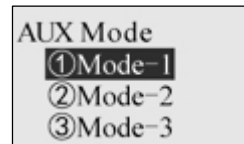

12.3. Wing Type



See P8 "6.9.Wing Type & Mixing".

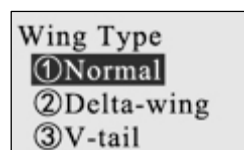

12.4. Gain Menu




12.4.1. Master Gain

See P7 "6.7. Master Gain Control Channel (GAIN)".

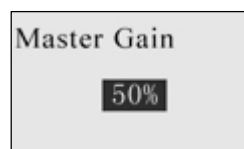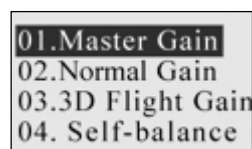

12.4.2. Gain Adjustment for each Flight Mode


This function is used to set the gyro gain of aileron, elevator and rudder for each flight mode. The gain can be set from 0% to 100%, the higher the gain, the

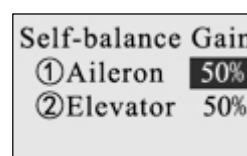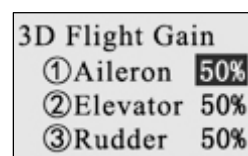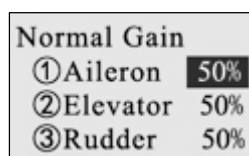

more stable the aircraft. The gain is affected by many factors there is no standard answer to that how much it should be. You need to fine-tune carefully to get the best result. The aircraft will become vibrative if the gain is too large, you'd better start with a lower volume for your first flight and then increase it gradually. The function of remote master gain will make it much more convenient for changing the gain during flight.


12.4.3. Gain Ratio

In order to meet more needs, A3 Super provides 3-level gain ratio for each flight mode. The ratio can be selected between Small (S), Medium (M) and Large (L), default is Medium which will be suitable for most aircrafts. You can choose a larger level when the current gain is still not large enough, even when it has been set to the maximum. But remember that always use as small ratio as possible to improve the precision of gain adjustment.

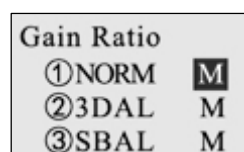

12.5. Mount Orientation

As mentioned in P4 "5.Installation", you have to choose the correct mount orientation here after installation. Incorrect setting will result in an unexpected failure.

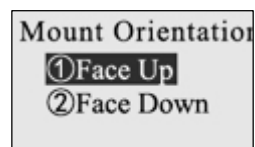

12.6. Servo Limits

This function is used to set the mechanical limits for aileron, elevator and rudder servos. The max limit is determined by the maximum possible control travel of the mechanism. The limits can be set between 0-100% corresponding to the pwm pulse length from 1020 to 2020 μ s. The default setting is 100%. When adjusting, switch the controller to the 3D flight mode first, move the sticks to one side, the servo will move to the set limit, increase or decrease the value until no binding occurs by using the program card or config tool. Always try to achieve the maximum possible travel limit to obtain the best performance.

Servo Limits	
① AIL-L	100%
② AIL-R	100%
③ ELE-U	100%

Servo Limits	
④ ELE-D	100%
⑤ RUD-L	100%
⑥ RUD-R	100%

12.7. Gyro On-off

It is used to turn on or off the gyro for each channel. When set to OFF, all gyro functions for the corresponding channel will be disabled whatever the flight mode is.

Gyro On-Off	
① Aileron	ON
② Elevator	ON
③ Rudder	ON


12.8. Gyro Direction

It is extremely important to make sure that the gyros of all channels are compensating in the correct direction before flight, otherwise it could lead to losing control or even crash during flight! To perform the examination, power on the aircraft, pick it up and check it by following the illustrations below. Turn it to REV(Reversed) if the gyro compensates in a incorrect direction.


Gyro Direction	
① Aileron	NOR
② Elevator	NOR
③ Rudder	NOR

The gyro directions of Aileron 2 and Elevator 2 can be set separately since Ver.2.1!


AILERON Quickly move the right wing downward around the roll axis. The right aileron should flap down and the left aileron flap up as shown.

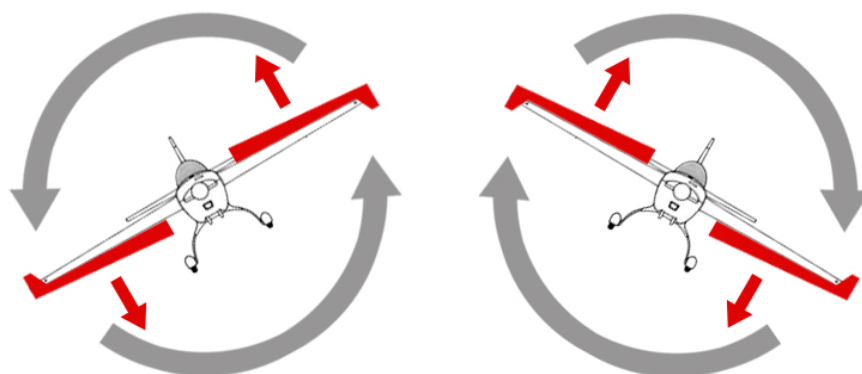

ELEVATOR Quickly move the nose of the aircraft downward around the pitch axis. The elevator should flap up as shown.

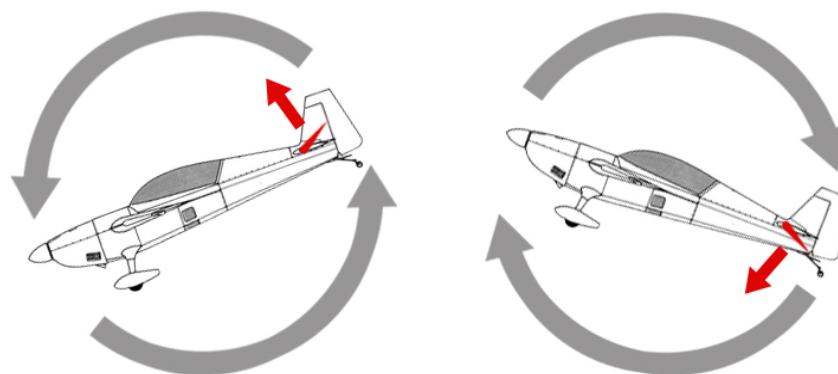

RUDDER Quickly move the nose of the aircraft to the left around the yaw axis. The rudder should flap right as shown.

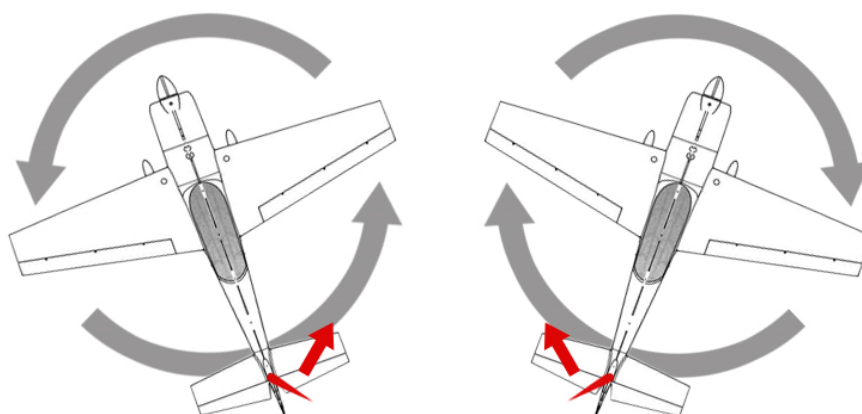

12.9. Servo Frequency

Ver.2.x provides 5 operating frequencies for the servos including 50Hz, 63Hz, 83Hz, 125Hz and 250Hz. **Analog servos usually tolerate only 50Hz** while digital servos allow usually higher frequencies. But you may need to check the manual of the servos.

If you don't know what the maximum frequency your servos can tolerate, please keep the default setting 50Hz. **A higher driving frequency can lead to a failure of the servos!**

Servo Frequency
① 50Hz
 ② 63Hz
 ③ 83Hz

Servo Frequency
③ 83Hz
 ④ 125Hz
 ⑤ 250Hz

12.10. Response Rate

A3 Super provides five levels of response rate, the faster the rate the more sensitive the gyro. The default setting is acceptable for most aircrafts. To optimize the performance, the response rate is the faster the better, but you have to do your best to reduce vibration of your aircraft.

Response Rate
 ① Very Slow
 ② Slow
③ Standard

Response Rate
③ Standard
 ④ Fast
 ⑤ Very Fast

12.11. Control Behavior

Here you can choose three different kinds of control behavior including stable, normal and sport mode. The default setting is "Normal", this should be suitable for most pilots.


Control Behavior	
①Stable Mode	
②Normal Mode	
③Sport Mode	

12.12. Level Offset


It is used to offset the absolute angle error caused by installation of the controller. When operating in self-balance mode, such errors may result in the climbing up or sliding down of the aircraft. In this condition, a angle compensation is needed to make the aircraft maintain level flight. The value can be set within the range of $\pm 20^\circ$ for both roll and pitch axis. The following illustrations show you that what happens if a angle error exists during installation.

Level Offset	
①Roll	0°
②Pitch	0°

PITCH

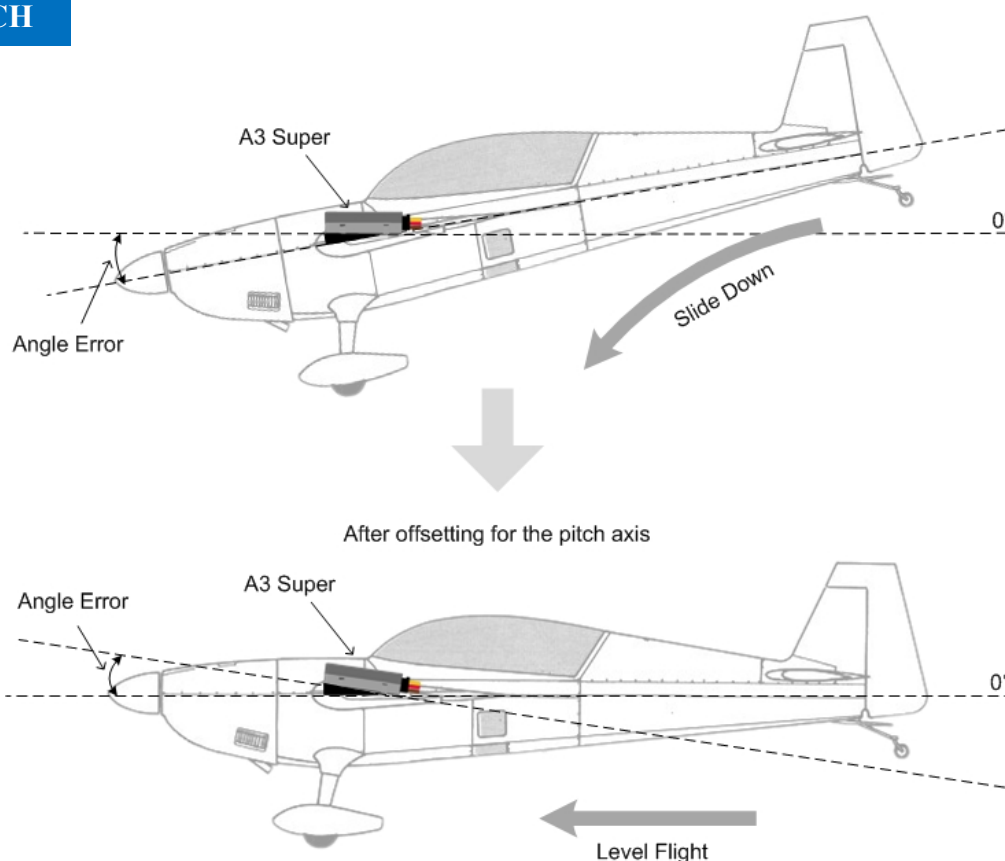

ROLL

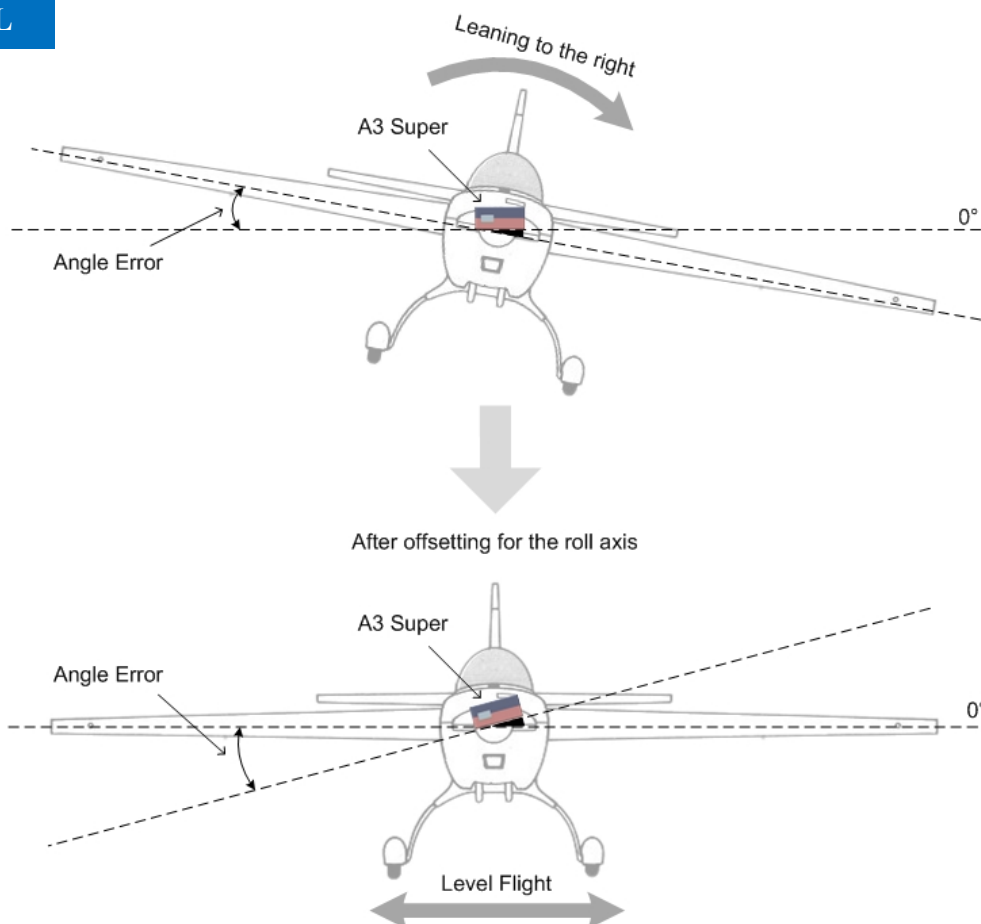

12.13. Stick Centering

Stick centering is used to calibrate and remember the center pulse width of receipt signal. The controller has to re-learn the new center position of the sticks in the conditions as following:

In what conditions a stick centering should be needed?

- 1 First-time use or after installation.
- 2 After replacing a new radio system.
- 3 After making a trimming or sub-trim change within the transmitter.
- 4 If the servos move to one side automatically when switching to 3D flight mode.

e.g. How to perform centering?

- Step 1** Get the controller connected from receiver by the corresponding channels first.
- Step 2** Turn on the transmitter, keep all the sticks in the center position.
- Step 3** Power on the controller and receiver, get it ready to work.
- Step 4** Plug the program card into the controller and select the function Stick Centering, press the ENT button to start, the card will display "Calibrating..." and the LED will keep flashing GREEN rapidly for about 1 second. **While calibrating please don't move the sticks until calibration is done.** The stick centering is only for the channels connected, the unconnected ones or the switch channels will be ignored automatically during calibrating.

12.14. Stick Deadband

The dead band is the range around the very center of the stick at where A3 Super will not react. Some transmitters have the problem that when the sticks are brought back after an input, they are not exactly at the same center position as before which may generate a deviation on the corresponding function, although the sticks seems to be in the middle. The parameter can be adjusted between 0% and 10%, the default is 5%. You can set it higher if it is difficult to find the stick center position even the stick centering function has been applied already.

Stick Deadband

5%

12.15. System Menu

12.15.1. Data Save

In order to make a backup or sharing of the settings, you can save 5 copies of the data into the internal memory within the program card. Press UP/+ or DN/- buttons to select the corresponding archive and press ENT to save them. * indicate the saved archive, data will be overwritten if saving it again.

Save to
Data 1*
Data 2
Data 3

Overwrite?
No Yes

Saved OK!
OK

12.15.2. Data Load

It is used to load data from the saved archive within the card, after loaded, the new settings will be written into the controller immediately. A message of "Data Empty" will be showed when trying to load archives without *.

Load from
Data 1*
Data 2
Data 3

Load Data?
No Yes

Data Empty!
OK

12.15.3. Language

See P10 "11.3. Language Selection".

12.15.4. Device Info.

The device name and the current firmware version number of the controller can be found here.

Device Name
A3 Super
F/W Version
Ver. 2. 0

12.15.5. Card Info.

The current firmware version number of the program card can be found here.

F/W Version
Ver. 2. 0

12.15.6. Data Reset

Restores the controller to the factory default settings.
It will be useful to reset the device when it doesn't work.

