

DVD Maker II Installation Manual

Contents

V1.0

Chapter 1 : DVD Maker II Hardware Installation	2
1.1 Package Contents	2
1.2 System Requirements.....	2
1.3 Hardware Installation.....	2
Chapter 2 : DVD Maker II Quick Installation	3
Chapter 3 : FAQ	4
1. How to check if the driver has been installed successfully or not?	4
2. How to uninstall device driver?	4

Chapter 1 : DVD Maker II Hardware Installation

1.1 Package Contents

Unpack your DVD Maker II package and make sure that all items are intact. The following items should be included in your package:

- DVD Maker II Device
- Multi-cable
- External USB cable
- Quick start guide
- Installation CD
- CD-ROM with CyberLink PowerDirector 6 and CyberLink PowerProducer 4


1.2 System Requirements

- Pentium-IV 1.6GHz or higher (recommended)
- 256 MB RAM of system memory or above (recommended)
- One available USB2.0 port (preferably USB2.0)
- Graphics Card (Must support DirectX 9.0c)
- Sound Card (AC97 compatible sound card)
- 1GB Free HD Space
- CD-ROM Drive (For software installation)
- Microsoft Windows XP/ Windows Vista/Apple Mac OSX 10.4 above

1.3 Hardware Installation

Please follow the steps shown below for installation of your DVD Maker 2 and follow the pictorial guide below for peripheral connections.

1. Connect the AV/S-VIDEO input into the DVD Maker II connector.
2. Plug DVD Maker 2 Dongle into the USB 2.0 port of your system.

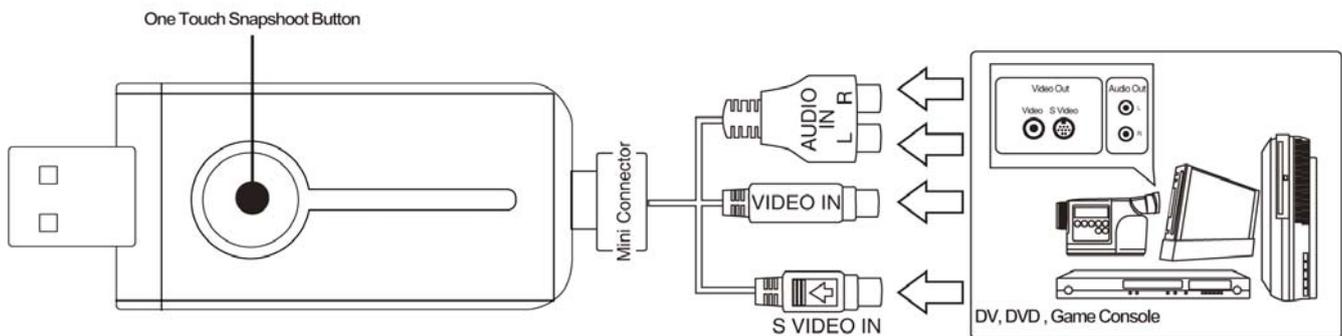


Chapter 2 : DVD Maker II Quick Installation

The DVD Maker II package comes with complete Windows software utilities. These utilities can be found on the CD-ROM in this package. During installation, it is highly recommended to disable any sub-programs. These include applications such as antivirus software and system monitoring applications.




1. When you finish the hardware setup, the “**Found New Hardware Wizard**” window will pop up. Please click “**Cancel**”

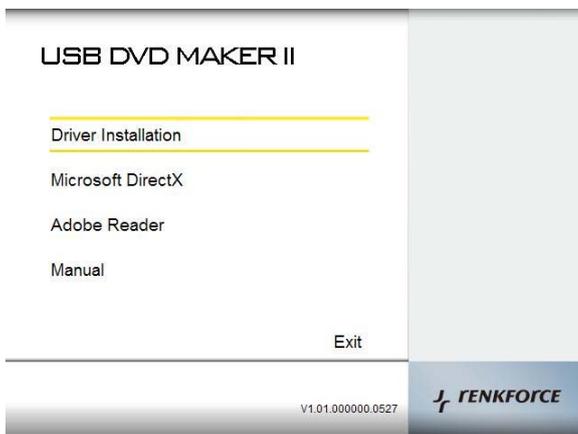

2. Insert the installation CD into the CD ROM device. The autorun page will appear as the left image. Please choose “**Driver Installation**”.

Note: Your DVD Maker II device must plug in the USB2.0 port before installation.

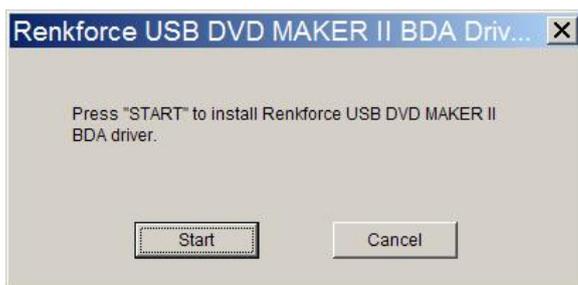

3. Please select “**Start**” to install the driver.



4. Click “**OK**” to driver complete installation.



5. Please re-Plug in the USE device on your computer. After finishing it please click “**OK**”.

Chapter 3 : FAQ

1. How to check if the driver has been installed successfully or not?

Ans : Right click on “My Computer” on the desktop and choose “Properties”. Once in “Properties” window, click on “Device Manager” in Hardware panel. Click on the plus icon of “Sound, video and game controllers” to open the device list. See Fig.1 below.



Fig.1

2. How to uninstall device driver?

Ans : Click on “Start” on the left-down desktop and choose “Setting”. Once in “Control Panel” window, click on “Add or Remove Programs”. Click on the plus icon of “Change or Remove Programs” then choose “HiVision USB DVD Maker Device Driver” to remove the device

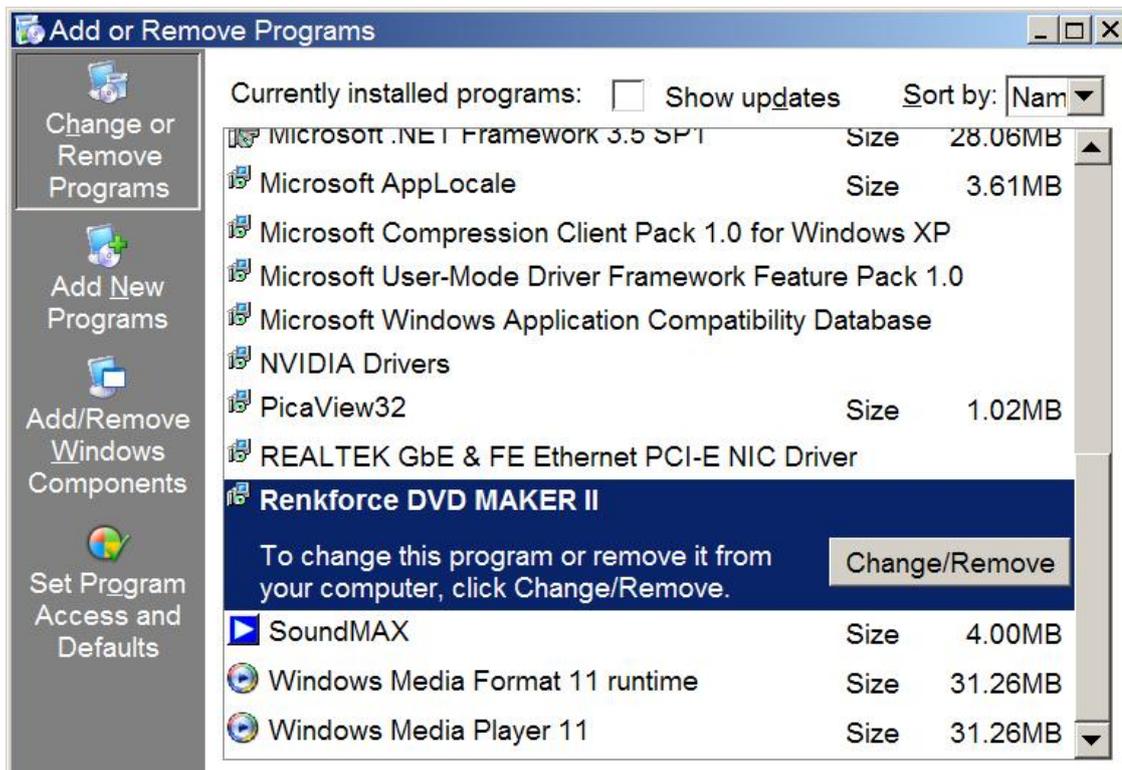


Fig.2