

# VARYTEC

User manual



## Stage Master S-1200

---

## Table of contents

1. Safety instructions .....	3
2. FOR SAFE AND EFFICIENT OPERATION.....	3
2.1. Be careful with heat and extreme temperature. ....	3
2.2. Keep away from humidity, water and dust! .....	3
2.3. To avoid placing on un-stable location. ....	3
2.4. If out of work, contact sales agency immediately! .....	3
3. Start-up procedure .....	4
4. Remote control .....	4
5. Cleaning and Maintenance .....	4
6. Technical data .....	4

## 1. Safety instructions



- This device is suitable for indoor use only.
- All modifications to the device will void the warranty.
- Repairs are to carry out by skilled personnel only.
- Use only original parts as spare parts.
- Protect the unit from rain and humidity to avoid fire and electric shocks.
- Make sure to unplug the powersupply before opening the housing.

### **Take care with the power cable**

Never pull the power cable to remove the plug from the receptacle, be sure to hold the plug.

When not using the device for an extended period of time, be sure to disconnect the plug from the receptacle.

## 2. FOR SAFE AND EFFICIENT OPERATION

### **2.1. Be careful with heat and extreme temperature.**

Avoid exposing it to direct rays of the sun or near a heating appliance.

Not put it in a temperature bellow 32°F /0°C, or exceeding 104°F /40°C.

### **2.2. Keep away from humidity, water and dust!**

Do not place the set in a location with high humidity or lots of dust.

Containers with water should not be placed on the set.

### **2.3. To avoid placing on un-stable location.**

Select a level and stable location to avoid vibration.

Install the machine in a horizontal position, the maximum angle should not be more than +/- 15 degrees.

### **2.4. If out of work, contact sales agency immediately!**

Any troubles arose, remove the power plug soon, and contact with an engineer for repairing, do not open the cabinet by yourself, it might result a danger of electric shock.

**Important:**

**Damages caused by the disregard of this user manual are not subject to warranty.**

**The dealer will not accept liability for any resulting defects or problems.**

**Make sure the electrical connection is carried out by qualified personnel.**

**All electrical and mechanical connections have to be carried out according to the European safety standards.**

### **3. Start-up procedure**

Check the machine for transport damages.

Fill in the snow fluid into the tank and close the tank. Always close the fluid tank and the fluid canister to avoid contamination by dust and other foreign matter. Fill the fluid tank to max. 2/3 and do not keep the fluid in vicinity of children. Use only the appropriate fluid. Do not operate the machine without fluid (dry). Connect the remote control to the "CONTROL INPUT" socket and switch "ON" the machine. During operation, you can hear a fan noise.

### **4. Remote control**

If you push the switch to position „I“ then the machine starts with „Snow production“.

To stop the „Snow production“ you have to push the switch to position „0“.

The Volume control allows you to adjust the output volume.

### **5. Cleaning and Maintenance**

Do not use chemical or volatile liquid for cleaning! Metal parts can be cleaned with a damp cloth.

Always disconnect the power plug before cleaning the machine!

Clean the snow machine after about 40 hours of operation. Flush the machine with 1-2 liters of distilled water. Clean the textile of snow throw-off at regular intervals.

### **6. Technical data**

Power Input: 110-230V 50/60HZ

Power output: 1200W

Snow volume: 40m<sup>3</sup>

Capacity: 5 liters

Dimension: 600x370x370 mm

Weight: 9,5 kg

**Importer:**

**B & K Braun GmbH**

**Industriestraße 2**

**D-76307 Karlsbad**

**[www.bkbraun.com](http://www.bkbraun.com)**

**[info@bkbraun.com](mailto:info@bkbraun.com)**

