 


Welcome to ZOMM.

Congratulations on your new Wireless Leash!

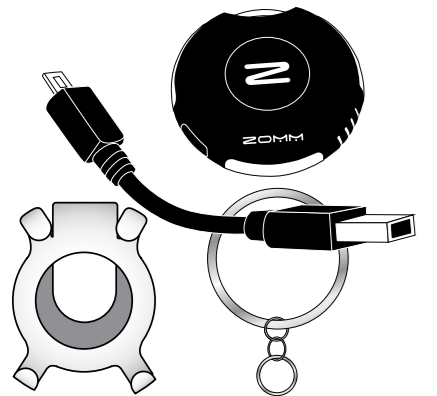

Included in this package:

- 1 Wireless Leash
- 1 micro-USB cable
- 1 clear belt clip
- 1 keychain

 
Questions? Contact our world-class service team at support.zomm.com

Getting Started:

This guide will help you get started with your Wireless Leash in four easy steps. For more information on your Wireless Leash or to download a full user manual, visit our support center at support.zomm.com

In addition to what is included with your Wireless Leash, you will need:

- Mac or Windows computer*
- Mobile phone or tablet
- Internet connection*

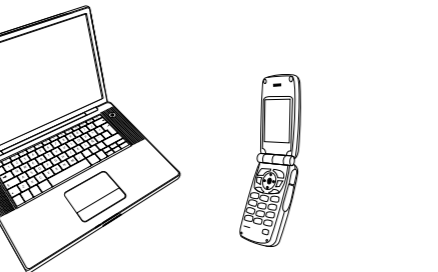


*Internet connected Mac or PC is required to customize the Wireless Leash. Use of the Wireless Leash does not require a personal computer.

© ZOMM, LLC 2010, 2011, 2012. ALL RIGHTS RESERVED.
MATERIAL PRESENTED WITHIN SUBJECT TO CHANGE WITHOUT NOTICE.
BLUETOOTH® IS A TRADEMARK OWNED BY THE BLUETOOTH SIG, INC. AND IS USED UNDER LICENSE.
ZOMM®, WIRELESS LEASH™, Wireless Leash™, AND myZOMM™ ARE ALL TRADEMARKS OF ZOMM, LLC.
ANDROID™ IS A TRADEMARK OF GOOGLE, INC. BLACKBERRY® IS A TRADEMARK OF RESEARCH IN MOTION, LTD.

1 Charge your Wireless Leash

 For optimal battery life, charge your Wireless Leash for a full 4 hours. Use the included micro-USB cable to charge your Wireless Leash using the USB port on your computer.

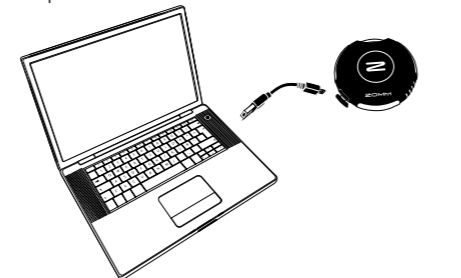

2 Prepare your Wireless Leash to be Customized


- Using a Mac or PC, navigate your web browser to zomm.com/myzomm.
- Follow the on-screen instructions to prepare your Wireless Leash for customization.

*If you do not have an internet-connected Mac or PC, please skip to Step 4 for pairing instructions.

3 Customize Your Features with myZOMM

After completing step 2, you are ready to select the custom settings for your Wireless Leash.

- Name your Wireless Leash
- Set out-of-range alarm distance
- Personalize with available custom tones
- Raise or lower the volume of alerts
- Manage multiple ZOMM devices
- Receive the latest ZOMM updates for free

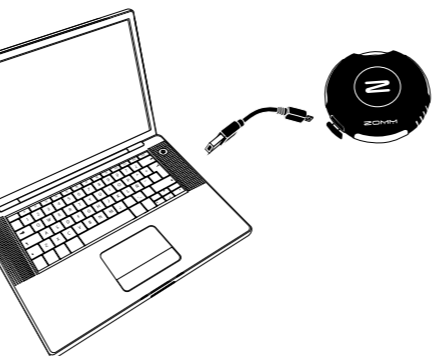

4 Pairing the Wireless Leash

The following instructions will help you to pair the Wireless Leash to your mobile phone or tablet. If you need any help, visit zomm.com/pairing for instructional videos, walkthroughs, and more.

Standard Mobile Phones:

1. Make sure that the Wireless Leash is unplugged and turned off (Z-light is off and not flashing).
2. Press and hold the Z-button until the 2nd beep (6 seconds).
3. On your phone, turn the *Bluetooth* feature on and then search for *Bluetooth* devices.
4. Select the name of your Wireless Leash from the list of *Bluetooth* devices found on your phone.
5. Pair and connect the Wireless Leash. If a PIN is required, use 0000.

When connected, the Z-light will flash once every few seconds.

iOS (Apple):

1. Navigate to “Settings” > “General” > “*Bluetooth*.”
2. Make sure the *Bluetooth* feature is on.
3. On your Wireless Leash, press and hold the Z-button until the 2nd beep (6 seconds).
4. On the iPhone, touch the name of your Wireless Leash (ZOMM is default) when it appears in the phone’s “Devices” list.

When connected, the Z-light will flash once every few seconds.

4 Pairing the Wireless Leash (continued)

Android:

1. Navigate to “Settings” > “Wireless & Networks” > “*Bluetooth* settings.”
2. On your Wireless Leash, press and hold the Z-button until the 2nd beep (6 seconds).
3. On the phone, make sure your *Bluetooth* feature is on and then select “Scan for devices.”
4. Select name of your Wireless Leash (ZOMM is default) from the list of found devices. If prompted for a PIN or Passkey, enter 0000.

When connected, the Z-light will flash once every few seconds.

Blackberry:

1. Navigate to “Manage Connections” > “Set up *Bluetooth*.”
2. On your Wireless Leash, press and hold the Z-button until you hear the 2nd beep (6 seconds).
3. On the Blackberry, select “Search.”
4. Select the name of your Wireless Leash (ZOMM is default) from the list of found devices. If a PIN or Passkey is required, enter 0000.
5. If prompted to connect to the ZOMM, select “Yes.”

When connected, the Z-light will flash once every few seconds.

To see our full pairing guide, visit zomm.com/pairing.

Frequently Asked Questions

Can I turn the volume up on my Wireless Leash?

Many phones default *Bluetooth* devices to a low volume. The volume of the Wireless Leash’s speakerphone feature can only be adjusted using the volume controls on your mobile phone. During an active call, with the call audio coming through the Wireless Leash, press the volume up button on your phone to turn up the volume of the Wireless Leash.

What is the ZOMM Replacement Guarantee?

If you damage your Wireless Leash for any reason, the Replacement Guarantee replaces up to two damaged units for two years.

Learn more at zomm.com/rg

How often do I need to charge my Wireless Leash?

Your Wireless Leash can last up to 6 days or two hours of continuous speakerphone talk time. The more you use your speakerphone or alarm, the shorter your battery life will be. When the battery level is low, the Wireless Leash will sound three short beeps every few minutes.*

*After receiving the most recent firmware update, your Wireless Leash will alert you by saying “Low Battery”.

HOW TO: Trigger a Distance Alarm or Find Your Keys


With the default settings, your Wireless Leash will sound a progressive alarm when your phone or tablet moves out of range (30-120 feet).

To trigger a distance alarm:

Separate your mobile device from your Wireless Leash. Once the *Bluetooth* connection is broken, your Wireless Leash will vibrate, flash, and alarm. If the *Bluetooth* wireless connection with your phone is lost or if your phone is turned off while connected to your Wireless Leash, this will also trigger the distance alarm.

To use your phone or tablet to find your keys:

If you've attached your Wireless Leash to your keys and need to locate them, press the "Find my ZOMM" button in the myZOMM App. If your phone does not support mobile apps, you can trigger the distance alarm by turning the *Bluetooth* feature of your mobile phone off. (Your Wireless Leash must be connected for this feature to work.)

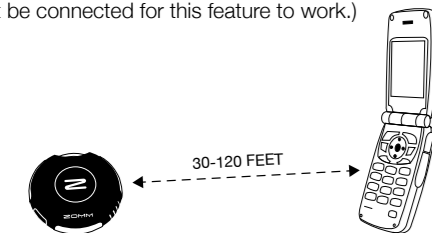

HOW TO: Manage Incoming Calls

When a call is incoming, your Wireless Leash will flash, vibrate, and then ring to alert you. (This feature can be customized.)

To answer an incoming call:

Tap the Z-button once to answer the call. The audio for the call will be in the Wireless Leash speakerphone.

To reject an incoming call:

Tap the Z-button twice in a row. This will send the call to voicemail.

To transfer the call to your phone (or back to your Wireless Leash):

During an active call press the Z-button once and the call will be routed to the phone or press again and route the call back to the Wireless Leash.

To end the call:

During the call, press the Z-button twice in a row.

Important:

The volume of your Wireless Leash speakerphone can only be adjusted using the volume controls on your mobile phone during an active call.

HOW TO: Connect to Emergency Assistance

To initiate an emergency call, your Wireless Leash must be on and paired to a mobile phone that has active cellular service.

Sound a panic alarm and auto-dial 911*:



- Press and hold the Z-button for 9 seconds (through the panic alarm).
- Release the Z-button after your Wireless Leash says "Dialing Emergency Assistance".
- Your Wireless Leash will auto-dial 911* and will serve as a speakerphone during the call.

To end an emergency call:

To end an emergency call, you must do so from your mobile phone. You cannot end an emergency call from your Wireless Leash.

**You can change the emergency number using the myZOMM software and/or App.*

Using your Wireless Leash

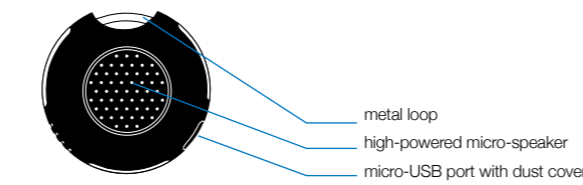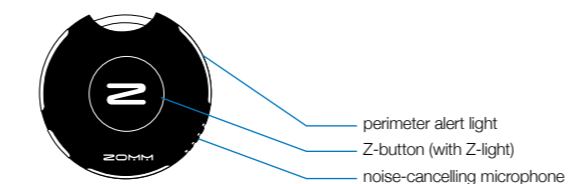

To	Do this
Turn on the Wireless Leash	Hold the Z-button until you hear the first beep (3 seconds). The Wireless Leash will automatically reconnect with the last-paired device.
Turn off the Wireless Leash	Hold the Z-button until you hear the first beep (3 seconds). The Z-light will turn off.
Answer incoming call	Tap the Z-button once to answer.
Ignore incoming call	Tap the Z-button twice to ignore.
Transfer active call to phone	Tap the Z-button once to transfer call.
Transfer active call	Tap the Z-button once to transfer call.
End active call	Tap the Z-button twice to end call.

To	Do this
Increase the speaker volume	When using the Wireless Leash as a speakerphone during an active call, turn the volume up on your phone - this will adjust the volume of the speakerphone.
Sound panic alarm	Hold the Z-button until alarm sounds (6 seconds), then release the Z-button. The alarm will continue to sound until you tap the Z-button again.
Call emergency assistance	Hold the Z-button for 9 seconds through the 3-second panic alarm until the Wireless Leash notifies you it is dialing emergency services.
Contact Customer Service:	Visit support.zomm.com and submit a ticket or talk to a customer service representative via phone or live chat.

Questions? Contact our top-notch service team at support.zomm.com



Setup in 4 Easy Steps

