

- DIGITAL MULTIMETER
with Non-Contact Detection

5231



Statement of Compliance

Chauvin Arnoux®, Inc. d.b.a. AEMC® Instruments certifies that this instrument has been calibrated using standards and instruments traceable to international standards.

We guarantee that at the time of shipping your instrument has met its published specifications.

An NIST traceable certificate may be requested at the time of purchase, or obtained by returning the instrument to our repair and calibration facility, for a nominal charge.

The recommended calibration interval for this instrument is 12 months and begins on the date of receipt by the customer. For recalibration, please use our calibration services. Refer to our repair and calibration section at www.aemc.com.

Serial #: _____

Catalog #: 2125.64

Model #: 5231

Please fill in the appropriate date as indicated:

Date Received: _____

Date Calibration Due: _____



AEMC®
INSTRUMENTS

Chauvin Arnoux®, Inc.
d.b.a AEMC® Instruments
www.aemc.com

Table of Contents

| | |
|---|-----------|
| 1. INTRODUCTION | 3 |
| 1.1 International Electrical Symbols..... | 4 |
| 1.2 Definition of Measurement Categories | 4 |
| 1.3 Receiving Your Shipment..... | 5 |
| 1.4 Ordering Information..... | 5 |
| 1.4.1 Accessories and Replacement Parts | 5 |
| 2. PRODUCT FEATURES | 6 |
| 2.1 Description..... | 6 |
| 2.2 Control Features | 7 |
| 2.3 Display Features..... | 8 |
| 2.4 Button Functions..... | 8 |
| 2.5 Rotary Functions..... | 9 |
| 3. OPERATION | 10 |
| 3.1 Turning the Multimeter ON..... | 10 |
| 3.2 Turning the Multimeter OFF | 10 |
| 3.3 Activating/Deactivating Auto-OFF | 10 |
| 3.4 Auto and Manual Range Selection | 10 |
| 3.5 Non-Contact Voltage (NCV)..... | 11 |
| 3.6 Voltage Measurement..... | 11 |
| 3.7 Resistance Measurement | 12 |
| 3.8 Continuity Test | 13 |
| 3.9 Diode Test..... | 14 |
| 3.10 Current Measurement Using a Clamp-on Probe | 15 |
| 4. MAINTENANCE | 16 |
| 4.1 Warning..... | 16 |
| 4.2 Battery Replacement | 16 |
| 4.3 Cleaning..... | 16 |

5. SPECIFICATIONS..... 17

Repair and Calibration.....19

Technical and Sales Assistance19

Limited Warranty20

 
Warranty Repairs.....20

INTRODUCTION









 



This device complies with safety standard IEC-61010-1 (Ed 2–2001) for voltages up to 1000V CAT III or 600V CAT IV, at an altitude below 2000m, indoors, with a pollution level of not more than 2.

Failure to observe the safety instructions may cause an electric shock, fire, explosion, or destruction of the instrument and of the installations.

- Do not use the instrument in an explosive atmosphere or in the presence of flammable gases or fumes.
- Do not use the instrument on networks of which the voltage or category exceeds those mentioned.
- Do not exceed the rated maximum voltages and currents between terminals or with respect to earth/ground.
- Do not use the instrument if it appears to be damaged, incomplete, or not properly closed.
- Before each use, check the condition of the insulation on the leads, housing, and accessories. Any element of which the insulation is deteriorated (even partially) must be set aside for repair or scrapped.
- Use leads and accessories rated for voltages and categories at least equal to those of the instrument.
- Observe the environmental conditions of use.
- Do not modify the instrument and do not replace components with “equivalents”. Repairs and adjustments must be done by approved qualified personnel.
- Replace the battery as soon as the  symbol appears on the display unit. Disconnect all leads before opening the battery compartment cover.
- Use personal protective equipment when conditions require.
- Keep your hands away from unused terminals of the instrument.
- When handling probes or contact tips, keep your fingers behind the guards.

1.1 International Electrical Symbols

| | |
|---|---|
|  | Signifies that the instrument is protected by double or reinforced insulation. |
|  | This symbol on the instrument indicates a WARNING that the operator must refer to the user manual for instructions before operating the instrument. In this manual, the symbol preceding instructions indicates that if the instructions are not followed, bodily injury, installation/sample and/or product damage may result. |
|  | Compliance with the Low Voltage & Electromagnetic Compatibility European directives (73/23/CEE & 89/336/CEE) |
|  | AC – Alternating current |
|  | AC or DC – Alternating or direct current |
|  | Risk of electric shock. The voltage at the parts marked with this symbol may be dangerous. |
|  | Important instructions to read and understand completely. |
|  | Important information to acknowledge. |
|  | Ground/Earth symbol |
|  | In conformity with WEEE 2002/96/EC |

1.2 Definition of Measurement Categories

- CAT I:** For measurements on circuits not directly connected to the AC supply wall outlet such as protected secondaries, signal level, and limited energy circuits.
- CAT II:** For measurements performed on circuits directly connected to the electrical distribution system. Examples are measurements on household appliances or portable tools.
- CAT III:** For measurements performed in the building installation at the distribution level such as on hardwired equipment in fixed installation and circuit breakers.
- CAT IV:** For measurements performed at the primary electrical supply (<1000V) such as on primary overcurrent protection devices, ripple control units, or meters.

1.3 Receiving Your Shipment

Upon receiving your shipment, make sure that the contents are consistent with the packing list. Notify your distributor of any missing items. If the equipment appears to be damaged, file a claim immediately with the carrier and notify your distributor at once, giving a detailed description of any damage. Save the damaged packing container to substantiate your claim.

1.4 Ordering Information

Multimeter Model 5231 Cat. #2125.64

Includes set of two 5 ft color-coded leads (red/black) with needle tip {CAT IV 1000V 15A}, soft carrying case and a user manual.

1.4.1 Accessories and Replacement Parts

Case - Replacement Carrying Pouch **Cat. #2125.87**

Lead - Replacement Set of 2, 5ft Color-Coded (Red/Black)
with needle tip {CAT IV 1000V 15A) **Cat. #2152.21**

Order Accessories and Replacement Parts Directly Online
Check our Storefront at www.aemc.com for availability

PRODUCT FEATURES

2.1 Description

The Model 5231 is a TRMS digital multimeter, specially designed to combine the various functions and measurements of the following electrical quantities:

- Non-contact detection of presence of network voltage (NCV function)
- AC voltmeter with low input impedance (voltage measurements for electricity and electrical engineering)
- AC/DC voltmeter with high input impedance (voltage measurements for electronics)
- Ohmmeter
- Continuity test with buzzer
- Diode test
- Ammeter (measurement using current clamp-on probe)

2.2 Control Features

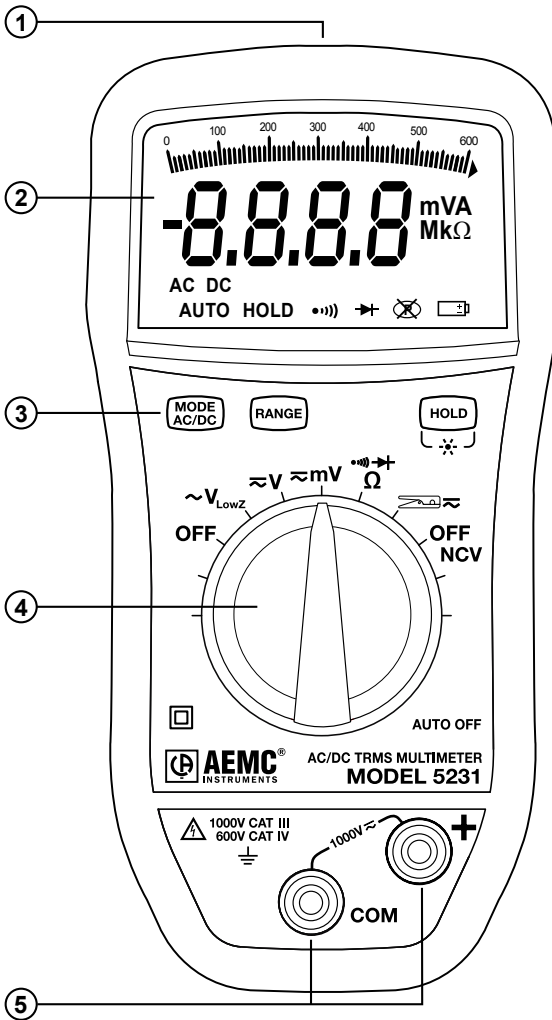
 
 
 







Figure 2-1

1. NCV detection sensor (see § 3.5)
2. Analog and digital display (see § 2.3)
3. Function buttons (see § 2.4)
4. Rotary switch (see § 2.5)
5. Positive (Red) input and COM (Black) input


 
2.3 Display Features

| Icon | Function |
|---|---|
| AC | Alternating Current |
| DC | Direct Current |
| AUTO | The Automatic Range symbol indicates that the instrument will automatically adjust to the correct measurement range when taking the measurement |
| HOLD | Freezes the display of the measurement |
| m | Prefix “mili” |
| V | Voltage |
| A | Ampere |
| M | Prefix “Mega” |
| k | Prefix “kilo” |
| Ω | Ohm |
| <i>OL</i> | The Overload symbol is displayed when the signal measured exceeds the range of the device |
|  | Low Battery |
|  | Continuity Beeper Enabled |
|  | Diode Test |
|  | Auto Power OFF function activated |

2.4 Button Functions

| Button | Function |
|---|---|
|  | <ul style="list-style-type: none"> Measurement type selection NOTE: The DC mode is activated by default Activates/Deactivates the Auto-OFF function at start-up (see § 3.3) |
|  | <ul style="list-style-type: none"> Allows manual selection of a measurement range (short press) Returns to Auto-Range mode (long press > 2s) NOTE: Continuity and Diode modes are not Auto-ranging |
|  | <ul style="list-style-type: none"> Freezes/Unfreezes the display of the measured value (short press) Activates/Deactivates the display backlight  (long press > 2s) |

2.5 Rotary Functions

| Range | Function |
|---|---|
| OFF | Powers down the multimeter |
| $\sim V_{\text{LowZ}}$ | Low impedance AC voltage measurement |
| $\approx V$ | AC or DC voltage measurement (V) |
| $\approx \text{mV}$ | AC or DC voltage measurement (mV) |
|  Ω | Resistance measurement Continuity test Diode test |
|  \approx | Current measurement with AC or DC clamp, ratio 1mV/A |
| OFF NCV | NCV (Non-contact Voltage) + Partial OFF mode of the multimeter (NCV function active) |

OPERATION


3.1 Turning the Multimeter ON

Turn the switch to the appropriate function. All segments of the display will light for a few seconds. The screen corresponding to the chosen function will then appear. The multimeter is now ready for measurements.


3.2 Turning the Multimeter OFF



To turn the meter off manually, turn the switch to **OFF**. If left unused for 15 minutes, the meter will turn off automatically. At 14 minutes, five beeps warn that the meter is about to be turned off. To turn back on, press any button on the unit.



NOTE: The **OFF**  position does not completely turn the multimeter off. It remains active for non-contact detection of the presence of network voltage (NCV).

3.3 Activating/Deactivating Auto-OFF

By default, Auto-OFF is activated and the  symbol is displayed.

A long press on the  button during start-up, while turning the switch to any range, deactivates the Auto-OFF function. The  symbol is not displayed.

3.4 Auto and Manual Range Selection

By default, the meter is in auto-range. This is indicated by the **AUTO** symbol on the display. While on, the instrument will automatically adjust to the correct measurement range when taking the measurement.

To change the range selection to Manual, press the  button.

3.5 Non-Contact Voltage (NCV)

- Turn the rotary switch to the **NCV** position.
- Move the Model 5231 (NCV detection sensor) close to the potentially live conductor(s) (presence of phase).

If a network voltage of 90V or greater is present, the back-lighting lights up red, otherwise, it remains off.

3.6 Voltage Measurement

The Model 5231 measures AC voltage at low input impedance (V_{LowZ}), DC and AC voltages.

- Set the switch to $\sim V_{LowZ}$, $\approx V$, or $\approx mV$. When set to $\sim V_{LowZ}$ the device is in AC mode only.
- For $\approx V$ or $\approx mV$, select AC or DC by pressing MODE
AC/DC. By default the meter is in DC mode.
- Insert the red lead to the red “+” input jack and the black lead to the black “COM” input jack.
- Connect the test probe tips to the sample under test.

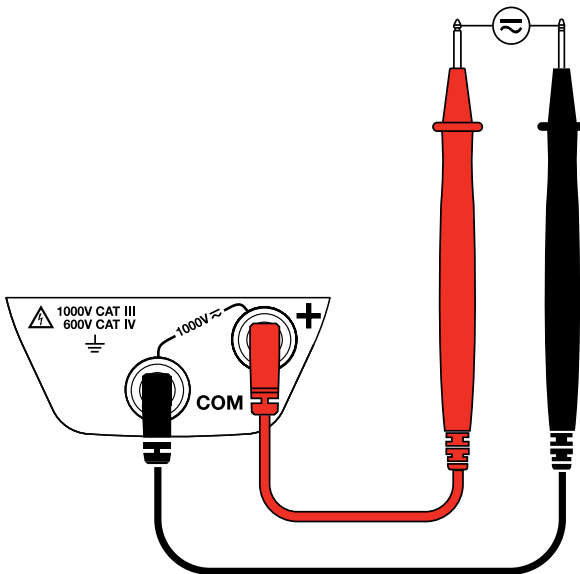


Figure 3-1

3.7 Resistance Measurement



WARNING: When making a resistance measurement, make sure that the power is off (de-energized circuit). It is also important that all capacitors in the measured circuit be fully discharged.

- Turn the rotary switch to the Ω position.
- Insert the red lead to the red “+” input jack and the black lead to the black “COM” input jack.
- Connect the test probe tips to the sample under test.

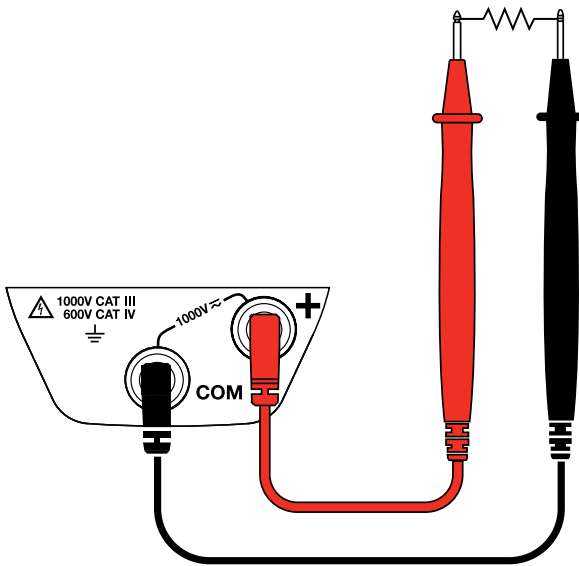


Figure 3-2

3.8 Continuity Test



WARNING: When making a resistance measurement, make sure that the power is off (de-energized circuit).

- Turn the rotary switch to the Ω position.
- Press the **MODE AC/DC** button. The $\bullet \cdot \cdot \cdot)$ symbol is displayed.
- Insert the red lead to the red “+” input jack and the black lead to the black “COM” input jack.
- Connect the test probe tips to the sample under test.
- The buzzer sounds when the circuit to be checked is DC or has a resistance of less than $100\Omega \pm 3\Omega$.

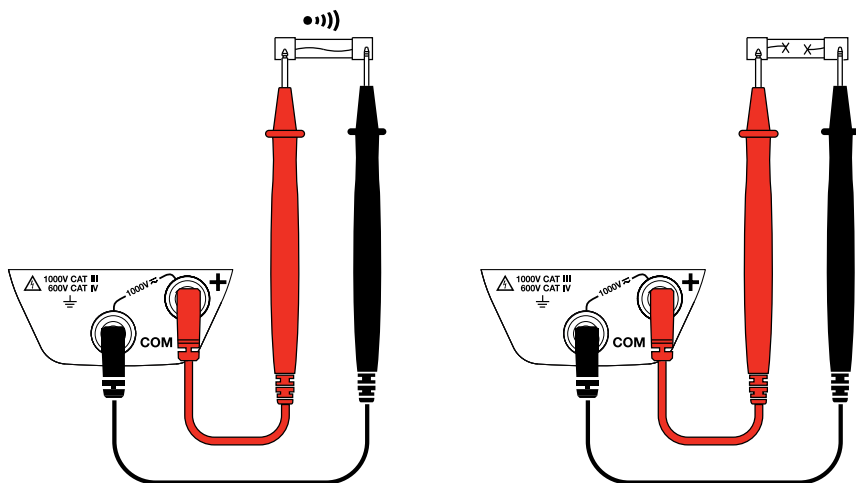


Figure 3-3

3.9 Diode Test



WARNING: When making a diode measurement, make sure that the power is off (de-energized circuit).

- Turn the rotary switch to the Ω position.
- Press the **MODE AC/DC** button twice. The $\rightarrow|$ symbol is displayed.
- Insert the red lead to the red “+” input jack and the black lead to the black “COM” input jack.
- Connect the test probe tips to the sample under test.

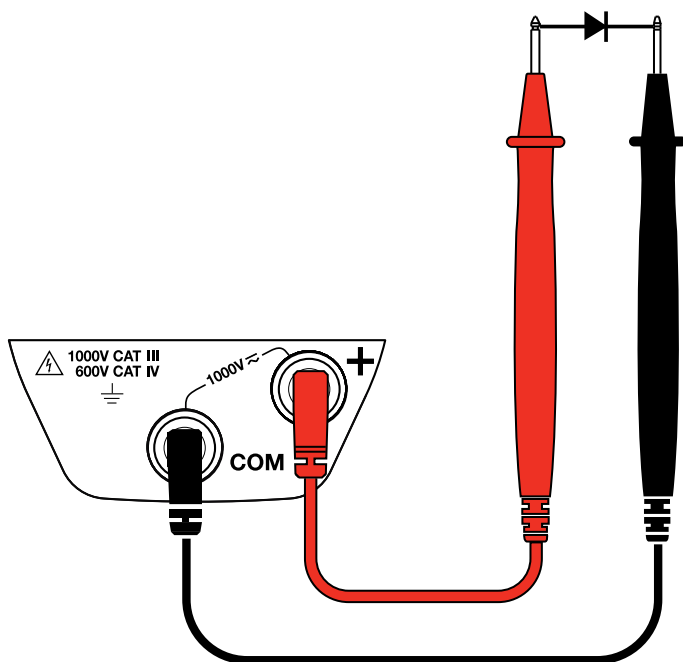
 



Figure 3-4

3.10 Current Measurement Using a Clamp-on Probe

- Turn the rotary switch to the  position.
- Select AC or DC by pressing the  button. By default the meter is in AC mode. Depending on the selection, the screen displays AC or DC.
- Insert the current probe's red lead to the red “+” input jack and the black lead to the black “COM” input jack.
- Clamp the current probe around the current carrying conductor to be tested.

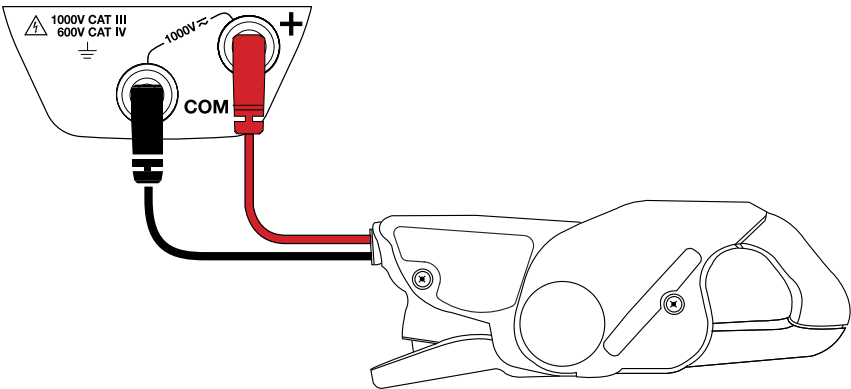


 
Figure 3-5

MAINTENANCE

4.1 Warning

- Remove the test leads from any input before opening the case. Do not operate the instrument without a battery case cover.
- To avoid electrical shock, do not attempt to perform any servicing unless you are qualified to do so.
- If the meter is not going to be used for a long period of time, take out the batteries. Do not store the meter in high temperatures or high humidity.
- To avoid electrical shock and/or damage to the instrument, do not get water or other foreign agents into the probe.

4.2 Battery Replacement

- The batteries will need to be replaced when the  symbol appears on the display.
- The meter must be in the **OFF** position and disconnected from any circuit or input.
- Using a screwdriver, unscrew the four screws of the battery compartment cover on the back of the housing.
- Replace the old battery with one new 9V battery, observing the polarity.
- Replace the battery compartment cover and tighten the screws.

4.3 Cleaning

- Disconnect all leads from the instrument and set the switch to **OFF**.
- To clean the instrument, wipe the case with a damp cloth and mild detergent. Do not use abrasives or solvents. Dry thoroughly before use.
- Do not get water inside the case. This may lead to electrical shock or damage to the instrument.

SPECIFICATIONS

Reference Conditions: Accuracy given @ 23°C ± 2°C; Relative Humidity 45 to 75%; Supply Voltage 8.5V ± 0.5V

| ELECTRICAL | | | | | |
|------------------------------|-------------|-------------|-------|-------------|--------------|
| DC (mVdc) | 60mV | | | 600mV | |
| Resolution | 0.01mV | | | 0.1mV | |
| Accuracy (±) | 1% + 12cts | | | 0.6% + 2cts | |
| Input Impedance | 10MΩ | | | | |
| DC (Vdc) | 600mV | 6V | 60V | 600V | 1000V |
| Resolution | 0.1mV | 0.001V | 0.01V | 0.1V | 1V |
| Accuracy (±) | 06% + 2cts | 0.1% + 2cts | | | 0.15% + 2cts |
| Input Impedance | 10MΩ | | | | |
| AC (mVAC TRMS) | 60mV | | | 600mV | |
| Resolution | 0.01mV | | | 0.1mV | |
| Accuracy (±) 40 to 60Hz | 1% + 12cts | | | 1 % + 3cts | |
| Accuracy (±) 60Hz to 1kHz | 1% + 12cts | | | 2% + 3cts | |
| Input Impedance | 10MΩ | | | | |
| AC (VAC TRMS) | 6V | 60V | 600V | 1000V | |
| Resolution | 0.001V | 0.01V | 0.1V | 1V | |
| Accuracy (±) 40 to 60Hz | 1% + 3cts | | | | 2% + 3cts |
| Accuracy (±) 60Hz to 1kHz | 2.5% + 3cts | 2% + 3cts | | | 2.5% + 3cts |
| Input Impedance | 10MΩ | | | | |
| AC (VAC LowZ TRMS)* | 6V | 60V | 600V | 1000V | |
| Resolution | 0.001V | 0.01V | 0.1V | 1V | |
| Accuracy (±) 40 to 60Hz | 2% + 1ct | | | | |
| Input Impedance | 270kΩ | | | | |

*NOTE: A low input impedance serves to eliminate the effects of interference voltages due to the supply network, and makes it possible to measure an AC voltage with a minimum of error.

| ELECTRICAL | | | | | | |
|---|--|-------------|--------|-------|---------|--------------|
| Resistance | 600Ω | 6kΩ | 60kΩ | 600kΩ | 6MΩ | 60MΩ |
| Resolution | 0.1Ω | 0.001kΩ | 0.01kΩ | 0.1kΩ | 0.001MΩ | 0.01MΩ |
| Accuracy (±) | 2% + 2cts | 0.3% + 4cts | | | | 0.5% + 20cts |
| Continuity Test | 600Ω | | | | | |
| Resolution | 0.1Ω | | | | | |
| Measurement Current | < 0.35mA | | | | | |
| Accuracy (±) | Audible signal < 100Ω + 3Ω | | | | | |
| Diode Test | 2.8V | | | | | |
| Resolution | 0.001V | | | | | |
| Open-circuit Voltage | < 2.8V | | | | | |
| Measurement Current | < 0.9mA | | | | | |
| Accuracy (±) | 1% + 2cts | | | | | |
| AC/DC Current (with clamp having a ratio of 1mV/1A) | | | | | | |
| Range | 600A | | | | | |
| Resolution | 0.1A | | | | | |
| Accuracy (±) | 40Hz to 1kHz; 2.0% + 2cts* | | | | | |
| Power | 9V (6LR61) alkaline battery | | | | | |
| Battery Life | > 100 hours | | | | | |
| Auto Power OFF | Automatic shut down after 15 minutes of no use | | | | | |
| ENVIRONMENTAL | | | | | | |
| Operating Temp. | 32° to 122°F (0° to 50°C) | | | | | |
| Storage Temp. | -4° to 158°F (-20° to 70°C) | | | | | |
| Operating RH | ≤ 90% at 104°F (40°C) | | | | | |
| Storage RH | ≤ 50% at 140°F (60°C) | | | | | |
| MECHANICAL | | | | | | |
| Dimension | 6.1 x 2.95 x 2.17" (155 x 75 x 55mm) | | | | | |
| Weight | 11 oz (320g) with battery | | | | | |
| Measurement Acquisition | 3 times per second | | | | | |
| Bargraph | 61 segments, refresh interval 30ms | | | | | |
| SAFETY | | | | | | |
| Safety Rating | IEC/EN 61010-1, 1000V CAT III, 600V CAT IV; Pollution Degree 2 | | | | | |
| Double Insulated | Yes | | | | | |
| Electro-magnetic Compatibility | EN-61326/A2:2001 | | | | | |
| Drop Test | 1m (in accordance with standard IEC-68-2-32) | | | | | |
| Case Protection | IP54 as per EN 60529 | | | | | |
| CE | Yes | | | | | |

*Not including current clamp sensor accuracy

Repair and Calibration

To ensure that your instrument meets factory specifications, we recommend that it be scheduled back to our factory Service Center at one-year intervals for recalibration, or as required by other standards or internal procedures.

For instrument repair and calibration:

You must contact our Service Center for a Customer Service Authorization Number (CSA#). This will ensure that when your instrument arrives, it will be tracked and processed promptly. Please write the CSA# on the outside of the shipping container. If the instrument is returned for calibration, we need to know if you want a standard calibration, or a calibration traceable to N.I.S.T. (Includes calibration certificate plus recorded calibration data).

Ship To: AEMC® Instruments
15 Faraday Drive
Dover, NH 03820 USA
Tel: (800) 945-2362 (Ext. 360)
(603) 749-6434 (Ext. 360)
Fax: (603) 742-2346 or (603) 749-6309
repair@aemc.com

(Or contact your authorized distributor)

Costs for repair, standard calibration, and calibration traceable to N.I.S.T. are available.

NOTE: You must obtain a CSA# before returning any instrument.

Technical and Sales Assistance

If you are experiencing any technical problems, or require any assistance with the proper operation or application of your instrument, please call, mail, fax or e-mail our technical support team:

AEMC® Instruments
200 Foxborough Boulevard
Foxborough, MA 02035 USA
Phone: (800) 343-1391
(508) 698-2115
Fax: (508) 698-2118
techsupport@aemc.com
www.aemc.com

NOTE: Do not ship Instruments to our Foxborough, MA address.

Limited Warranty

The Model 5231 is warranted to the owner for a period of one year from the date of original purchase against defects in manufacture. This limited warranty is given by AEMC®, not by the distributor from whom it was purchased. This warranty is void if the unit has been tampered with, abused or if the defect is related to service not performed by AEMC®.

For full and detailed warranty coverage, go to www.aemc.com. The warranty information is located in our customer service section.

What AEMC® will do:

If a malfunction occurs within the one-year period, you may return the instrument to us for repair, provided you submit a proof of purchase. AEMC® will, at its option, repair or replace the faulty material.

Warranty Repairs

What you must do to return an Instrument for Warranty Repair:

First, request a Customer Service Authorization Number (CSA#) by phone or by fax from our Service Department (see address below), then return the instrument along with the signed CSA Form. Please write the CSA# on the outside of the shipping container. Return the instrument, postage or shipment pre-paid to:

AEMC® Instruments
Service Department
15 Faraday Drive • Dover, NH 03820 USA
Tel: (800) 945-2362 (Ext. 360)
(603) 749-6434 (Ext. 360)
Fax: (603) 742-2346 or (603) 749-6309

Caution: To protect yourself against in-transit loss, we recommend you insure your returned material.

NOTE: You must obtain a CSA# before returning any instrument.



01/12

99-MAN 100358 v1