

1

+ECO Solar Clock Model: RMR331ES / RMR331ESU / RMR331ESA

USER MANUAL

CONTENTS	
Earth Friendly	2
Overview	2
Front View	2
Top View	3
Bottom View	3
Solar Panel	4
Remote Sensor	4
Getting Started	4
Solar Panel	4
Backup Power	6
Remote Sensor	6
Clock and Calendar	7
Clock Reception	7
Manually Set Clock	7
Alarm	8
Temperature	8
Backlight	8
Reset	8

Specifications	9
Precautions	9
About Oregon Scientific	. 10
EU-Declaration of Conformity	. 10
FCC Statement	. 10

EARTH FRIENDLY


The +ECO line embodies our commitment to environmental concerns. Aware of threats facing the world we live in, Oregon Scientífic™ has combined technological know-how, practicality and style to create this line of environmentally friendly products. These products provide practical solutions while enabling you and us to fulfill our environmental responsibility.

Simply detach the solar panel and face it directly towards the sun for a few hours to receive the amount of energy necessary to power the device.

Together we can improve the world we live in.

OVERVIEW


FRONT VIEW

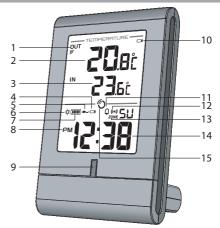

- 1. $\overset{OUT}{=}$: Remote sensor reception indicator
- 2. Outdoor temperature
- 3. Indoor temperature
- 4. **(IDE):** Main unit back-up batteries low / no battery
- 5. = AC adaptor connected
- 6. *: Rechargeable battery is low / solar panel detached
- 7. : Rechargeable battery level indicator

- 8. AM / PM
- 9. Rechargeable battery status LED indicator
- 10. **Cutdoor remote sensor battery low**
- 11. **Q**: Daily alarm is On
- 12. (•): Alarm time is displayed
- 13. ZONE: Time zone offset
- 14. Calendar / Clock with weekday / seconds
- 15. O: Clock signal reception indicator


TOP VIEW

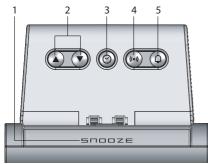

- 1. SNOOZE: Activate snooze alarm / backlight
- 2. ▲ / ▼: Increase / decrease value of the setting; activate / deactivate clock reception signal

- 3. O: Change display; set clock
- 4. (•): View alarm status; set alarm
- 5. Q: Activate / deactivate alarm function


BOTTOM VIEW

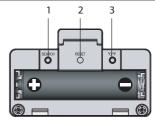

- 1. SEARCH: Initiate sensor search
- 2. RESET: Reset unit to default settings
- 3. °C / °F: Select temperature unit


R

SOLAR PANEL

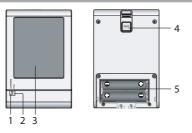

- 1. CHARGING: charging in process
- 2. FULL: batteries fully charged (when TEST is pressed)
- 3. Solar panel
- 4. TEST establish if battery is full
- 5. Battery compartment

REMOTE SENSOR

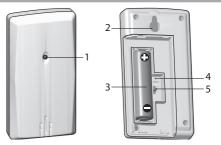

- 1. LED status indicator
- 2. Wall mount hole
- 3. Battery compartment
- 4. RESET: Reset unit to default settings
- 5. CHANNEL switch

GETTING STARTED

SOLAR PANEL

This product uses two AAA rechargeable batteries which should be charged via the solar panel. For the batteries' first charge, it is strongly advised to charge it for at least 12 hours.

R

To charge the battery:

1. Detach solar panel by exerting downward pressure and pulling at a 45° angle (approx.) away from main unit.



2. Insert 2 AAA rechargeable batteries in battery compartment located at the back of the solar panel.

IMPORTANT Place ONLY NIMH type rechargeable batteries in the solar panel battery compartment. Do not charge non-rechargeable batteries.

 Expose the solar panel directly to sunlight for approximately 5-6 hours to charge the battery. The (red) CHARGING LED on solar panel will light up indicating there is sunlight and unit is charging. 4. Align holes with protruding plastic. Push solar panel towards main unit and snap into place.

5-6 hours of battery charging will normally provide power to operate unit for 2 months.

When the rechargeable battery is nearly flat or when solar panel has been detached, the (green) LED indicator on the main unit and $\dot{\Psi}$ will flash.

TIPS

- For best results when charging the battery, place the solar panel directly with view to sunlight.
- · Direct solar panel as follows:

Solar panel facing:	if you reside in the:
North	Southern Hemisphere
South	Northern Hemisphere

- Do not scratch the solar panel's surface or wipe it with strong detergent.
- Do not expose the solar panel to rain, snow or moisture.
- The duration of the rechargeable battery's charging or operating time is determined by either the intensity of sunlight or the position of the solar panel towards the sun.
- · Do not overcharge the batteries.

TIP Press and hold **TEST** located at the back of the solar panel. (Green) FULL LED indicates batteries have been fully charged.

BACKUP POWER

1 piece AAA battery

In the case when the rechargeable battery is flat or nearly flat or when the solar panel has been detached, the AAA battery can act as backup power supply for the main unit.

- 1. Remove the battery compartment located at the base of the unit.
- 2. Insert the battery, matching the polarity.
- 3. Press RESET after each battery change.

NOTE When the rechargeable battery power is exhausted or when the solar panel has been detached, the backlight function will be disabled and the performance of the radio controlled clock may be affected.

Power adaptor (not included)

The adaptor powers the unit and can also be used for charging the rechargeable battery. When connected to the main unit, \Rightarrow will be displayed.

NOTE The main unit and adaptor should not be exposed to wet conditions. No objects filled with liquid, such as vases, should be placed on the main unit and adaptor.

REMOTE SENSOR

To set up the remote sensor:

1. Slide open the battery compartment.


- 2. Slide channel switch to select a channel (1, 2, 3).
- 3. Insert the battery, matching the polarities.
- 4. Press **RESET** after each battery change.
- 5. Close the battery compartment.
- Press and hold SEARCH for 2 seconds to initiate a sensor search.

NOTE Use alkaline batteries for longer usage and consumer grade lithium batteries in temperatures below freezing.

The remote sensor reception icon will show the following status:

ICONS	MEANING
.out → out	Main unit is searching for sensor(s)
$\overset{\text{out}}{\to} \overset{\text{out}}{\to} \overset{\text{out}}{\to} \overset{\text{out}}{\to} \overset{\text{out}}{\to} \overset{\text{out}}{\to}$	A sensor channel has been found
OUT	No sensor found

TIP Ideal placements for the sensor would be in any location on the exterior of the home at a height of not more than 1.5 m (5 ft) and which can shield it from direct sunlight or wet conditions for an accurate reading.

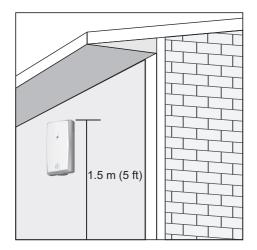

CLOCK AND CALENDAR

CLOCK RECEPTION

This product is designed to synchronize its clock automatically with a clock signal.

RMR331ES: EU: DCF-77 signal: within 1500 km (932 miles) of Frankfurt, Germany.

RMR331ESU: UK: MSF-60 signal: within 1500 km (932 miles) of Anthorn, England.

RMR331ESA: WWVB-60 signal: within 3200km (2000 miles) of Fort Collins Colorado.

To enable / disable clock signal reception:

Press and hold \blacktriangle to enable or \blacktriangledown to disable clock signal reception.

NOTE Reception takes 2-10 minutes. If the signal is weak, it can take up to 24 hours to get a valid signal. If signal reception is unsuccessful, place your unit next to a window, press and hold \blacktriangle to force another signal search.

Clock signal reception indicator:

STRONG SIGNAL	WEAK / NO SIGNAL
Ś	ن

MANUALLY SET CLOCK

To set the clock manually, disable the clock signal reception first.

- 1. Press and hold \mathfrak{O} .
- 2. Press \blacktriangle / \blacktriangledown to change the settings.
- 3. Press ⊘ to confirm.

The settings order is: time zone, 12/24 hr format, hour, minute, year, calendar mode (month – day / day – month), month, day and language.

RMR331ES / RMR331ESU: Time zone offset sets the clock +/- 23 hours from the received clock signal time. If you have deactivated the clock signal reception, do not set a value for time zone.

NOTE If you enter +1 in the time offset setting, this will give you your local time plus one hour. If you are in the US (RMR331ESA) set the clock to:

PA for Pacific time MO for Mountain time

CE for Central time EA for Eastern time

NOTE The language options are English (E), German (D), French (F), Italian (I), Spanish (S) and Russian (R).

To select clock display:

Press O to toggle between clock with seconds, clock with weekday and calendar.

ALARM

To set the alarm:

- 1. Press and hold (•) to enter alarm setting.
- 2. Press \blacktriangle / \bigtriangledown to set hour / minute.

Press (••) to confirm.
Q indicates alarm is ON.

To activate / deactivate alarm:

Press Q.

To silence the alarm:

Press SNOOZE to silence it for 8 minutes

OR

 Press any key to turn the alarm off and activate it again after 24 hours.

To display alarm:

Press ((•))

TEMPERATURE

To toggle temperature unit: Press °C / °F.

BACKLIGHT

Press SNOOZE to activate backlight for 3 seconds.

RESET

Press RESET to return to the default settings.

SPECIFICATIONS

MAIN UNIT

TYPE	DESCRIPTION
LxWxH	126 x 80 x 57 mm (5 x 3.15 x 2.24 in)
Weight	240 g (8.47 oz) without battery
Signal frequency	433 MHz
Power	2 x UM-4 (AAA) rechargeable batteries; 6V AC adaptor (not included) 1 x UM-4 (AAA) battery (for backup)

REMOTE SENSOR (THN132N)	
LxWxH	96 x 50 x 22mm (3.78 x 1.97 x 0.87 in)
Weight	62 g (2.22 ounces) without battery
Transmission range	30 m (98ft) unobstructed
Temperature range	-20°C to 60°C (-4°F to 140°F)
Power	1 x UM-3 (AA) 1.5 V battery

PRECAUTIONS

- Do not subject the unit to excessive force, shock, dust, temperature or humidity
- Do not cover the ventilation holes with any items such as newspapers, curtains etc.

- Do not immerse the unit in water. If you spill liquid over it, dry it immediately with a soft, lint-free cloth.
- Do not clean the unit with abrasive or corrosive materials.
- Do not tamper with the unit's internal components. This invalidates the warranty.
- Only use fresh batteries. Do not mix new and old batteries.
- Images shown in this manual may differ from the actual display.
- When disposing of this product, ensure it is collected separately for special treatment.
- Placement of this product on certain types of wood may result in damage to its finish for which Oregon Scientific will not be responsible. Consult the furniture manufacturer's care instructions for information.
- The contents of this manual may not be reproduced without the permission of the manufacturer.
- Do not dispose old batteries as unsorted municipal waste. Collection of such waste separately for special treatment is necessary.
- Please note that some units are equipped with a battery safety strip. Remove the strip from the battery compartment before first use.

NOTE The technical specifications for this product and the contents of the user manual are subject to change without notice.

NOTE Features and accessories will not be available in all countries. For more information, please contact your local retailer.

ABOUT OREGON SCIENTIFIC

Visit our website (www.oregonscientific.com) to learn more about Oregon Scientific products. If you're in the US and would like to contact our Customer Care department directly, please visit:

www2.oregonscientific.com/service/support.asp

For international inquiries, please visit: www2.oregonscientific.com/about/international.asp

EU-DECLARATION OF CONFORMITY

Hereby, Oregon Scientific, declares that this +ECO Solar Clock (model: RMR331ES / RMR331ESU / RMR331ESA) is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC. A copy of the signed and dated Declaration of Conformity is available on request via our Oregon Scientific Customer Service.



COUNTRIES RTTE APPROVED COMPLIED All EU countries, Switzerland CH and Norway N

FCC STATEMENT

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.

WARNING Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- · Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.

- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio / TV technician for help.

DECLARATION OF CONFORMITY

The following information is not to be used as contact for support or sales. Please visit our website at <u>www2.</u> <u>oregonscientific.com/service</u> for all enquiries.

We

Name:	Oregon Scientific, Inc.

- Address: 19861 SW 95th Ave.,Tualatin, Oregon 97062 USA
- Telephone No.: 1-800-853-8883

declare that the product

- Product No.: RMR331ES / RMR331ESU / RMR331ESA Product Name: +ECO Solar Clock
- Manufacturer: IDT Technology Limited
- Address: Block C, 9/F, Kaiser Estate, Phase 1, 41 Man Yue St., Hung Hom, Kowloon,
 - Hong Kong

is in conformity with Part 15 of the FCC Rules. Operation is subject to the following two conditions: 1) This device may not cause harmful interference. 2) This device must accept any interference received, including interference that may cause undesired operation. E