



Technology Leadership
for Digital Cinema

RAPID

DIGITAL CINEMA MASTERING STATION

User Manual

Version 1.4

Table of Contents

1 Introduction.....	6
1.1 PURPOSE.....	6
1.2 RAPID ENCODER PRESENTATION	7
1.3 RAPID GUI VERSION.....	7
1.4 CONTACT.....	8
2 System Overview.....	9
2.1 RAPID SETUP.....	9
3 Launching the RAPID	11
4 Encoding Overview.....	12
4.1 ENCODING FROM A FILE SOURCE.....	13
4.1.1 File Naming and Numbering Convention.....	13
4.1.2 Audio Files.....	14
4.2 ENCODING FROM A FILE SOURCE.....	14
4.2.1 To Edit the Default Settings.....	14
4.3 STOPPING THE ENCODING JOB.....	16
4.4 ENCODING FROM HD-SDI.....	20
4.4.1 Supported Formats.....	20
4.4.2 Default and Custom File Names.....	20
4.4.2.1 Video HD-SDI Captures.....	20
4.4.2.2 Audio HD-SDI Captures.....	21
4.5 ENCODING FROM A HD-SDI SOURCE.....	22
4.6 HD-SDI TIMECODE.....	24
4.6.1 Timecode for Video Streamer.....	26
4.7 REAL-TIME AND NON-REAL TIME CAPTURE	27
4.7.1 RAPID	27
4.7.2 RAPID 2X.....	27
4.8 COLOR SPACE CONVERSION FOR FILE AND HD-SDI CAPTURE.....	28
4.8.1 Default Profiles for Color Space	29
4.9 SAMPLE SPACE CONVERSION FOR HD-SDI CAPTURE.....	29
4.9.1 Obtaining a 4:4:4 Signal From HD-SDI Capture.....	30
5 Output Tab.....	32
5.1 DESTINATION DIRECTORY.....	32
5.2 NUMBER OF FRAMES.....	33
5.3 VIDEO STANDARD	33
5.3.1 How to Form and Crop the Image's "active area"	34
5.3.1.1 How to Format and Crop an Image At 4k (4096x2160).....	35
5.3.1.2 How to Format and Crop an Image At 4k ("active area").....	35

5.3.1.3 How to Upscale HD Scope Image (1920 pixels x 804 lines to 2048 pixels x 858 lines):.....	35
5.3.1.4 How to Upscale HD Flat Image (1920 pixels x 1038 lines to 1998 pixels x 1080 lines):.....	35
5.4 CUSTOMIZABLE LABEL FOR HD-SDI CAPTURE.....	37
5.4.1 <i>Default Label</i>	37
5.4.2 <i>Custom Label</i>	37
5.5 EMBEDDED LOGO	37
6 Compression Tab.....	38
6.1 COARSE STEPSIZE OPTION.....	40
7 VTR Control Tab.....	41
7.1 EXTERNAL DEVICE CONTROL BUTTON.....	41
7.2 AUTOMATIC CONTROL OF VTR BUTTON.....	42
7.2.1 <i>Main Function</i>	42
7.2.2 <i>Automatic Commands Sent To Server</i>	43
7.2.3 <i>VTR Shuttle Button</i>	44
8 Job Manager Tab.....	45
8.1 HOW TO SCHEDULE MULTIPLE JOBS (FILE SOURCE ONLY).....	45
8.2 HOW TO REORDER AND DELETE JOBS	46
9 Report Tab.....	48
9.1 HEADING TAB FUNCTIONS.....	48
9.2 SAVING SETTINGS.....	51
9.3 PREFERENCES MENU.....	51
9.3.1 <i>How to Change the Default Settings from the Preferences Window</i>	51
10 RAPID Player	53
10.1 OVERVIEW	53
10.2 PRESENTATION	53
10.3 SUPPORTED FORMATS.....	53
10.4 LAUNCHING THE RAPID PLAYER GUI.....	54
10.5 EDITOR TAB.....	54
10.5.1 <i>Reel Composition</i>	54
10.5.2 <i>Reel Manager</i>	55
10.6 PLAYBACK TAB.....	58
10.6.1 <i>Playback Functions</i>	58
10.7 REPORT TAB.....	60
11 Software and Firmware Upgrades.....	61
11.1 HOW TO PERFORM A SOFTWARE OR FIRMWARE UPGRADE FROM A USB.....	61
12 File Transfer Protocol (FTP)	67

12.1 FTP SERVER ON RAPID.....	67
12.2 FTP CLIENT ON RAPID.....	67
12.3 GFTP SERVER ON RAPID.....	70
12.3.1 How To Access a "gFTP" Client From the RAPID.....	70
13 Network File System (NFS).....	72
13.1 SETTING AN NFS SERVER.....	72
13.1.1 How To Access NFS From a Linux Desktop	72
13.2 SETTING AN NFS SERVER ON THE CLIENT.....	76
14 Samba Directory for Windows.....	77
14.1 SETTING A SERVER.....	77
14.1.1 How To Create A Samba Shared Directory For Windows Users.....	77
14.1.2 How To Create A New Samba Share Directory	81
14.2 CONNECTING TO A SAMBA NETWORK.....	84
15 Useful Commands.....	85
15.1 LS.....	85
15.2 DU.....	85
15.3 DF.....	85
15.4 MOUNT.....	86
15.5 FDISK.....	86
16 Trouble Shooting.....	88
17 Acronyms.....	90
18 Document Revision History.....	91

Software License Agreement

The software license agreement can be found at the following location:

<http://www.doremilabs.com/warranties.html>

Hardware Warranty

The hardware warranty can be found at the following location:

<http://www.doremilabs.com/warranties.html>

1 Introduction

1.1 Purpose

The RAPID is a Digital Cinema Mastering Station compliant with DCI specifications. Mastering and Generation, of a DCP package, is made in two steps:

- Compressing/Encoding video content into JPEG-2000 files following DCI specified standards using the RAPID Encoder.
- Generating a DCP package using the JPEG-2000 compressed video content and the audio, subtitle and projector configuration files.

Note: This user manual describes the Encoding Process, refer to the MXF Wrapping User Manual for information on how to generate a DCP package.

This User Manual also describes the RAPID Player (see Section “RAPID Player” below). It is recommended that the RAPID Player be used to preview the encoded files to ensure the quality of the images.

The RAPID Player serves two functions:

- 1) It can be used to playback compressed and uncompressed files.
- 2) It can be used to preview the encoded files to ensure their quality (i.e., color, resolution, sharpness, etc).

Note: This user manual describes the encoding process, refer to the MXF Wrapping User Guide for information on how to generate a DCP package.

1.2 RAPID Encoder Presentation

The RAPID is a hardware accelerated JPEG-2000 compressor. It allows the encoding of uncompressed files, typically, but not restricted to tiff files and JPEG-2000 files compliant with the DCI specification.

The RAPID Encoder GUI is laid out in six tabs:

Source Tab	Use this tab to encode frames from a File or HD-SDI (High Definition-Serial Digital Interface) device. User must choose the source from this tab.
Output Tab	Use this tab to view and change the properties of the source for encoding. Properties such as number of frames, video standard (i.e., pixels and lines), color space, etc.
Compression Tab	Use this tab to control the rate at which encoding occurs. The default rate is set to VBR (Variable Bit Rate) at 250Mb/s (DCI Specified), however, these options can be changed.
VTR Control	Use this tab to send commands to the HD-SDI device, either manually or automatically. The VTR control uses the standard Sony 9Pin protocol to send commands to the device.
Job Manager	Use this tab to view, schedule, add, or delete encoding jobs (primarily available when encoding from a file source).
Report Tab	Use this tab to view the various messages encountered by the server while encoding (i.e., encoding job started/finished, duration of the job, number of frames encoded, missing frames, etc).

1.3 RAPID GUI Version

This document is referenced with "RAPID Encoding GUI" version 3.2.0 and with "RAPID Player" GUI version 3.2.0.

1.4 Contact

If in need of help or assistance, please contact your nearest Doremi Labs Technical Support at:

USA

- 24/7 Technical Support Line: +1-866-484-4004
- Technical Support Email: support@doremicinema.com

Europe

- 24/7 Technical Support Line: +33 (0) 492-952-847
- Technical Support Link: <http://support.doremitechno.org/ticketing>

Japan

- Technical Support Line: +044-966-4855
- Technical Support Email: support@doremilabs.co.jp

Australia ~ China ~ India ~ Indonesia ~ Korea ~ Malaysia ~ New Zealand ~ Philippines ~ Singapore ~ Taiwan ~ Thailand

- Technical Support Email: supportasia@doremilabs.com

2 System Overview

The RAPID runs the Linux OS, 64 bit kernel revision 2.6.18. A RAID5 of six 1TB drives provides 5 TB of storage accessible (mounted) on directory “/data”.

There are two username setups by default:

- “root”: Used only for administration of the unit. The password is “doremi.” It is recommended to change the root password at the customer site.
- “dms2000”: For the encoding sessions and other operations related to encoding including use of the RAPID Player. The password is “doremi”.


Note: It is highly recommended that users be logged in as “root” only when absolutely necessary. Being logged in as “root” increases the risk of fatally damaging the system in case of a wrong operation (i.e., involuntary delete of the system). It might also modify the system permission on some necessary files making the use of the application for the normal RAPID user partial or impossible.

2.1 RAPID Setup

The RAPID has only one Dolphin DCI board with one license installed on it. The RAPID 2x has two Dolphin DCI boards. Currently, all RAPID 2x units are produced and shipped with licenses for both Dolphin DCI boards. However, in the past, RAPID 2x units were shipped with only one license installed on one board only.

Note: Initially, RAPID 2x units were shipped with only one license installed (on the Dol-Enc 2 board). If the Dolphin DCI Dol-Enc 2 board failed then only the first Dolphin card would be detected and the license would have to be re-installed.

Description	<p>The RAPID2x has two Dolphin Encoder (Dol-Enc) cards. Each card has dual link HD-SDI video inputs and outputs. Each Dol-Enc requires 2 bracket spaces. See illustration below on how to connect.</p> <ul style="list-style-type: none">• Connect the video source to the HD-SDI input Dol-Enc 1• Connect the output of Dol-Enc 1 to the input of Dol-Enc 2
--------------------	---

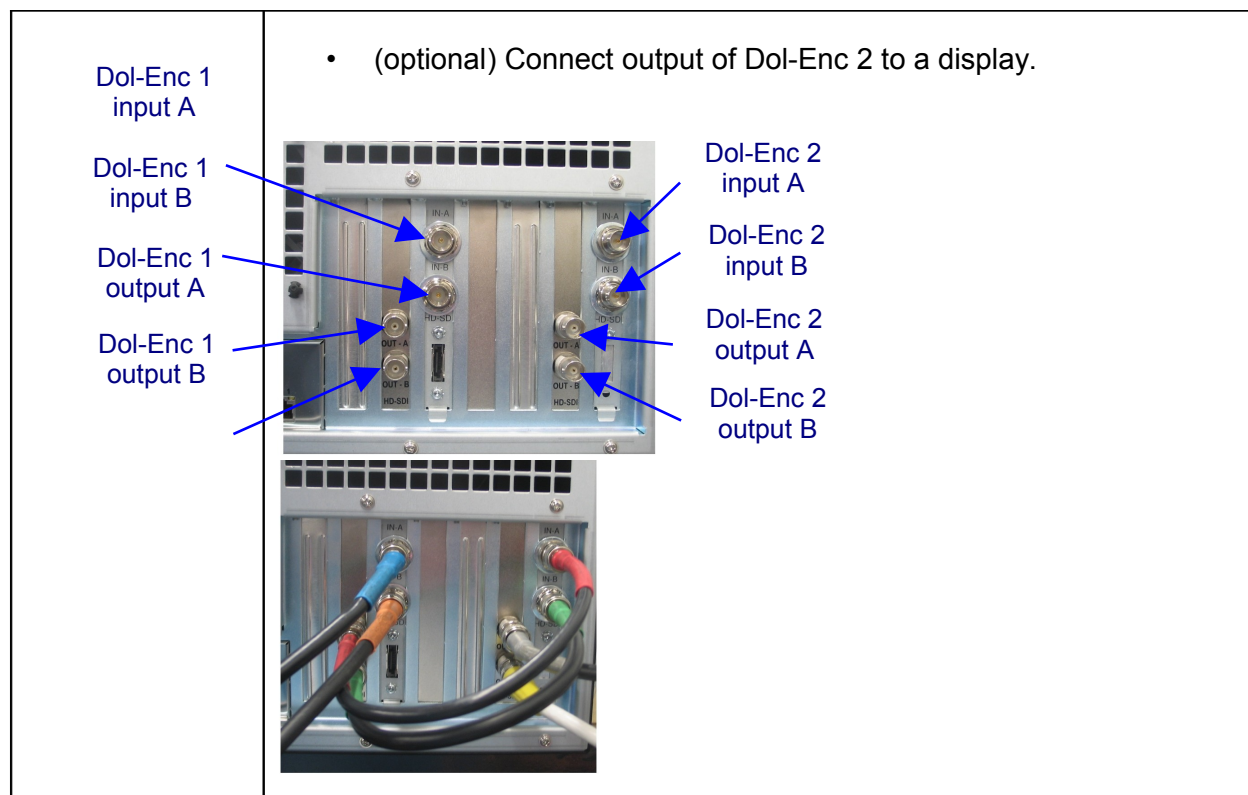

3 Launching the RAPID

- Launch the RAPID GUI by double-clicking on the "RAPID Encoder GUI" icon on the desktop (see Figure 1 below).
- The "Rapid Encoder GUI" will appear as illustrated below:

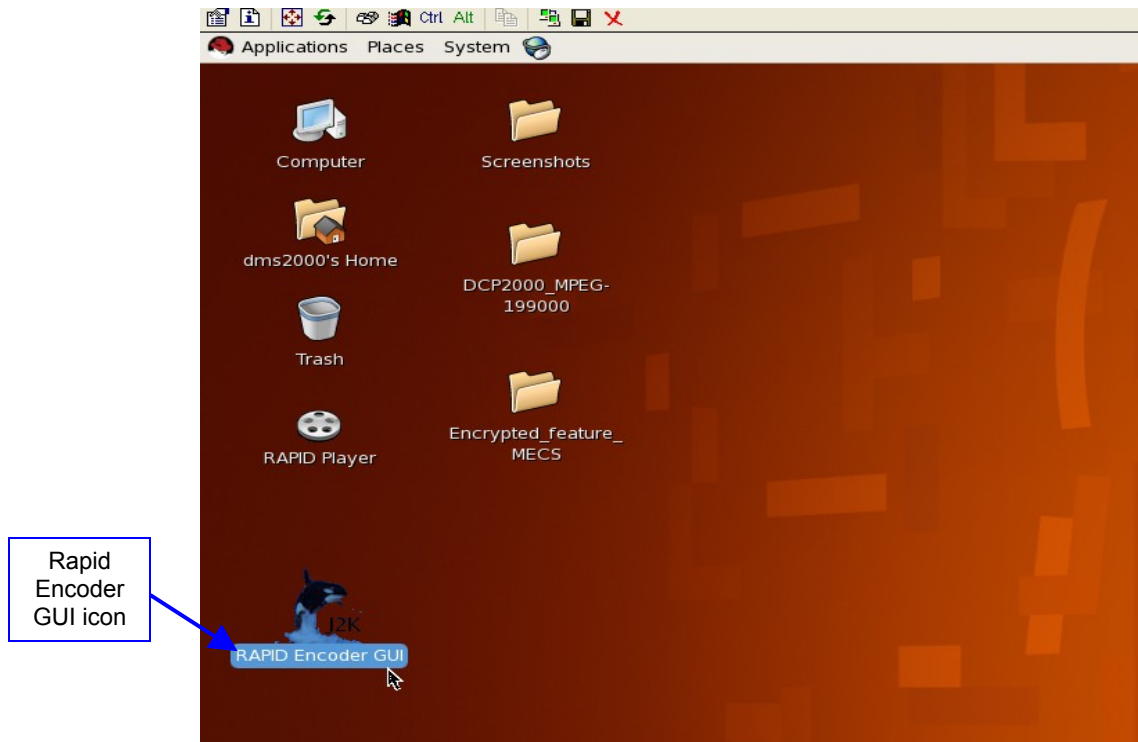


Figure 1: RAPID Encoding GUI Icon

4 Encoding Overview

The user can encode data from a file source or an HD-SDI source. Each source will be described in full detail below.

- General encoding LCD color schemes when encoding:
- Orange: The server is idle (not encoding anything) or has already finished encoding a job (see Figure 2 below).
- Green: Encoding in progress (see Figure 3 below).
- Red: Server is preparing encoding job (see Figure 4 below).

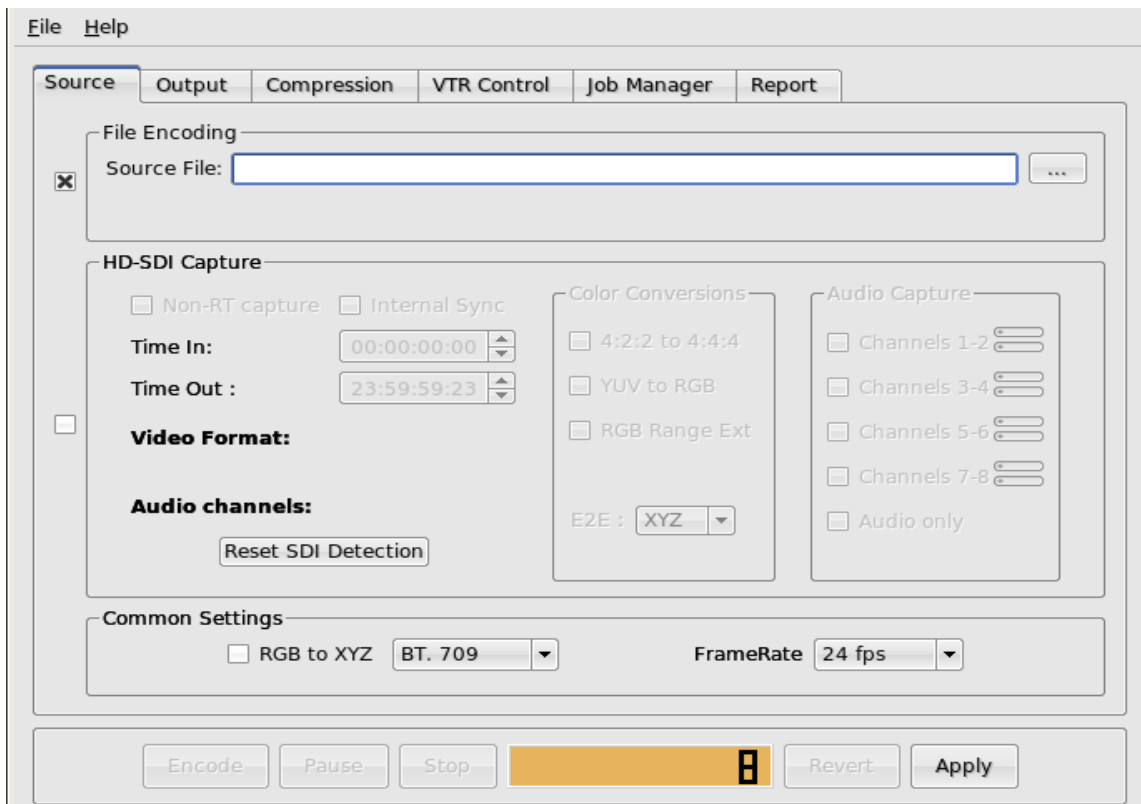


Figure 2: Server Is Idle

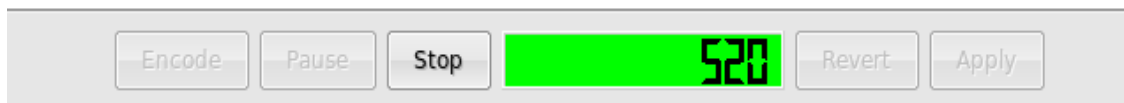


Figure 3: Encoding In Progress



Figure 4: Server Is Preparing Encoding Job

4.1 *Encoding From a File Source*

When encoding from a file source (most recommended are TIFF files, although other formats are supported), the user will choose the folder that contains the files to be compressed. The software application will automatically detect the number of frames with a consecutive incrementing index in a file and include it in the extension file name.

4.1.1 File Naming and Numbering Convention

By default the server will keep the same base name and number identifier as the original uncompressed file. The server will automatically convert the ".tif" file name extension to a ".j2c" extension.

It is assumed that SMPTE recommended standards were followed when creating the original image sequence files. The basic recommended standards are as follows:

- Each image is in a separate file.
- An image sequence consists of a series of files in a directory structure.
- The file name will end with the extension: ".tif" (delimited by the period character).
- Immediately before the file extension is the frame number identifier.
- Leading zeros are used to maintain a constant number of digits.
- The "base name" (also known as the "pre-number identifier") is preceded by alphanumeric text and characters (delimited by another period character).
- Example: "My_Movie.00192.tif" where "My_Movie." is the base name, "00192" is the number identifier and ".tif" is the file name extension. When the server has finished compressing the file, the end result will be "My_Movie.00192.j2c".

The frame number identifiers are in ascending order (i.e., 1, 2, 3, 4, 5, 6...) with no gaps in the sequence for a given image sequence. Zeros are used to keep a constant number of digits.

Post-production reel names and abbreviations may be used. Any alphanumeric text used in the file name will remain constant for all image files intended for the same image sequence. The only characters that will change in a sequence are the frame number identifiers.

When the user(s) selects a file to encode that file will be the first image in that image sequence. By default the server will automatically encode the remaining images in the sequence after it.

- Example: If the user(2) has 10,200 frames in an image sequence and you wish to start from frame "002567," the server will automatically encode the remaining frames until it reaches the last frame in the sequence, i.e., "010200". If the user(s) does not want to encode all of the remaining frames in the image sequence, then it is possible to change it from the "Output Tab." See Section "Output Tab" below:

4.1.2 Audio Files

Audio and “TIFF” files are named in the same manner. The only difference is that audio files are created using “.wav” instead of “.tif”.

- Example: “My_Movie.00192.wav” will be compressed to “My_Movie.00192.j2c”

4.2 Encoding From a File Source

- To launch the RAPID GUI, double-click on the “RAPID Encoder GUI” on the desktop.
- From the “Source” tab select the check-box immediately to the left of the “File Encoding” option.
- Choose a file from the “Browse Directory”.
- This file will be the first image in the image sequence (see Figure 5 below).
- To keep the default settings click the “Apply” button.
- Click “Encode” to begin the encoding process.

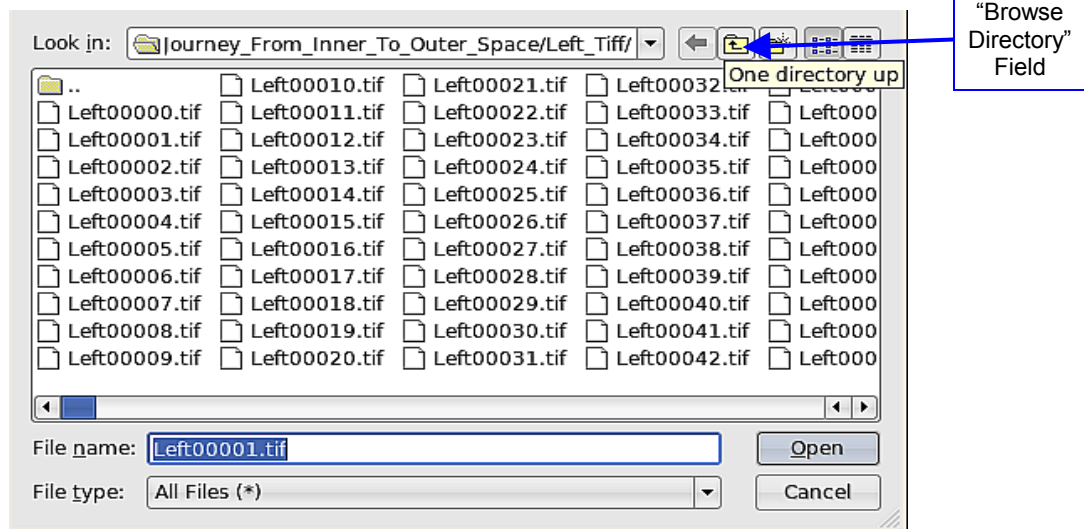


Figure 5: Browse Directory Button

4.2.1 To Edit the Default Settings

- Use the “Common Settings” option to change the “framerate” or to convert from “RGB to XYZ” (see Figure 6 below).

Note: A license is needed to use the “RGB to XYZ” conversion feature. To receive the license contact Doremi Technical Support at support@doremicinema.com

- If the file is a 3D sequence (48fps) select the “48fps” option from the “FrameRate” drop-down list (see Figure 6 below).
- The user can convert the color of the frames from RGB to XYZ (see Figure 6 below) . It is very important that the user understand the implications of using this option because it will effect the resolution and quality of the images that are generated.
- Click the “Apply” button.
- Click the “Encode” button to begin the encoding process.

Note: The duration of the encoding process depends on which station is being used (i.e., Rapid 1x or 2x) and how many frames to encode. The RAPID encodes in “Real-Time” (i.e., 1 hour, which equals to 086400 frames, will take approximately 1 hour to encode). The RAPID 2x is half of “Real-Time” (i.e., 1 hour, which equals to 086400 frames, will take approximately 30 minutes).

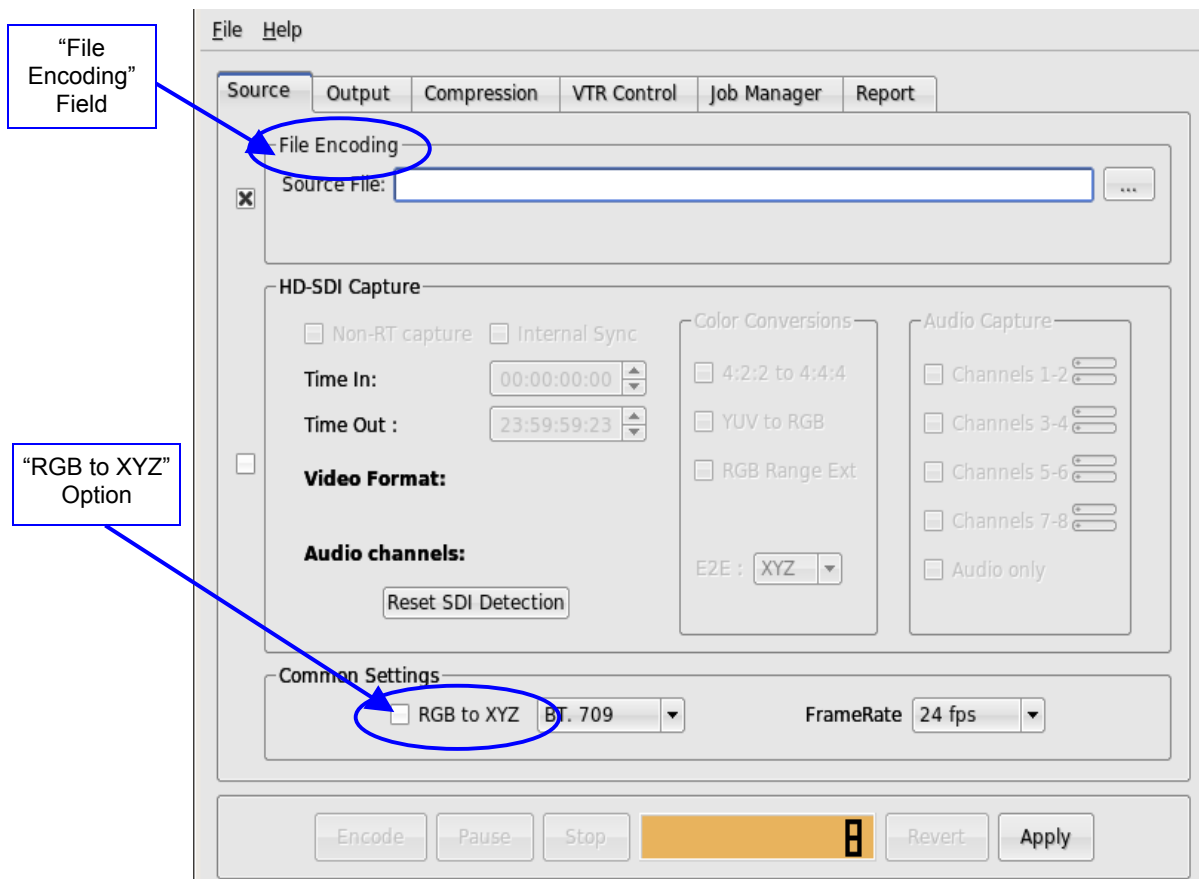


Figure 6: RAPID Encoder GUI - File Encoding Option

4.3 Stopping the Encoding Job

- To stop encoding job, click the “Stop” button.
- The “Stopping Video Compression” window will appear (see Figure 9 below).
- When the user clicks on “Stop”, the server will begin finalizing the frames in the buffer.
- This process takes less than one minute to complete.
- To immediately end the encoding job click on the “Terminate Now” button.

Note: The “Terminate Now” option terminates the encoding process without waiting for the server to finalize the frames in the buffer. It is highly recommended that the user allow the server to finalize the frames in the buffer and to use the “Terminate Now” option only when absolutely necessary. The “Terminate Now” option will still do a quick check of the frames to detect any possible issues (i.e., missing frames, corrupt input files, etc). This check takes approximately 20-30 seconds.

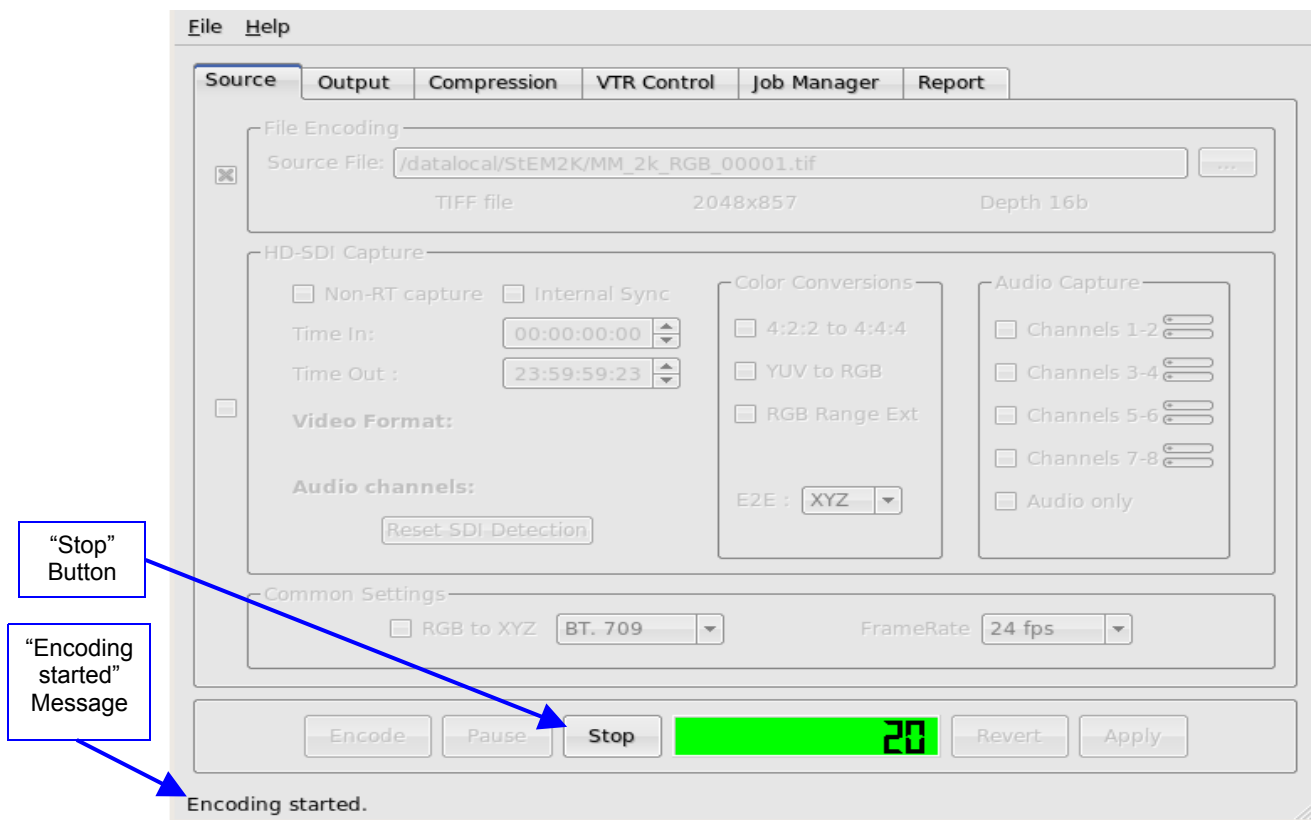


Figure 7: Rapid Encoder GUI - Source Tab

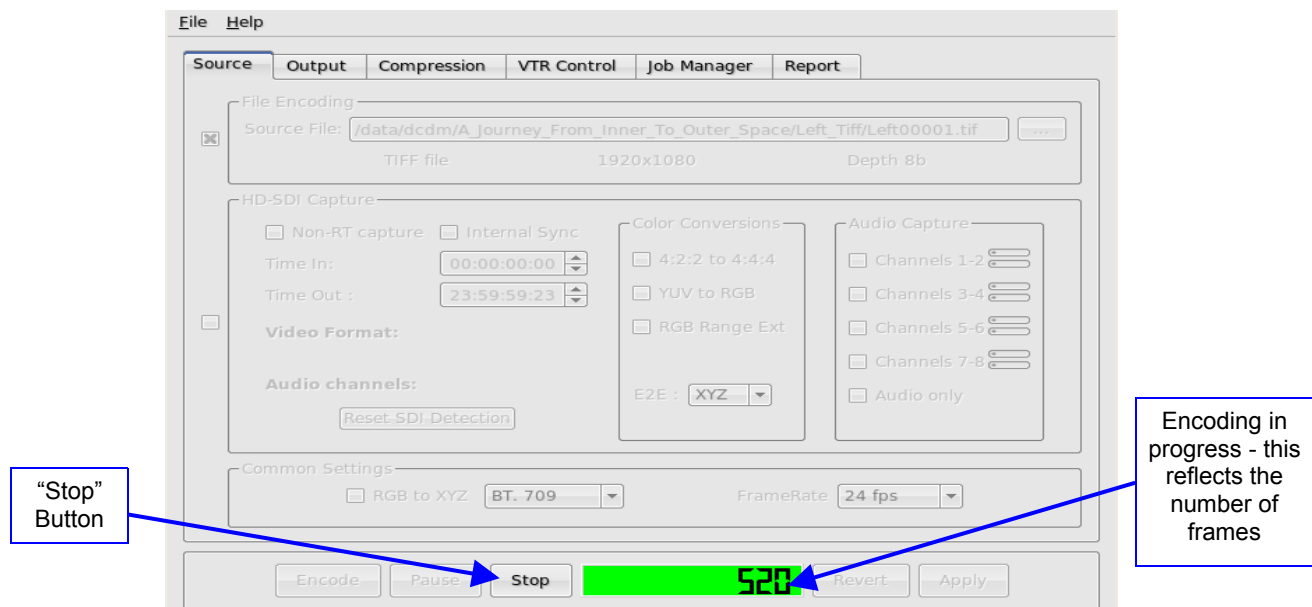


Figure 8: Source Tab - File Encoding In Progress

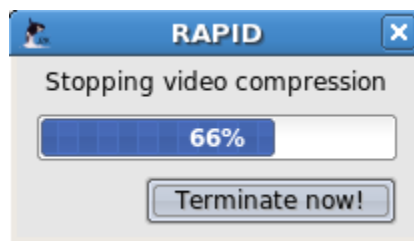


Figure 9: Stopping Video Compression Message

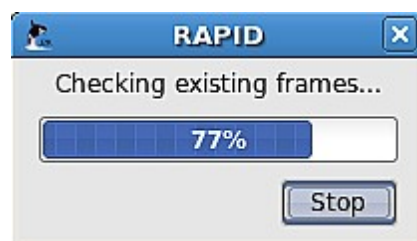


Figure 10: RAPID Encoder GUI - File Encoding Option

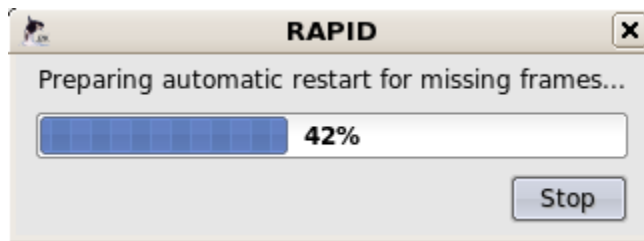


Figure 11: RAPID Encoder GUI - Encoding Missing Frames

- After the server is done encoding a “job”(an image sequence), go to the “Report” tab and view the status of that particular encoding job (see Figure 12 below).

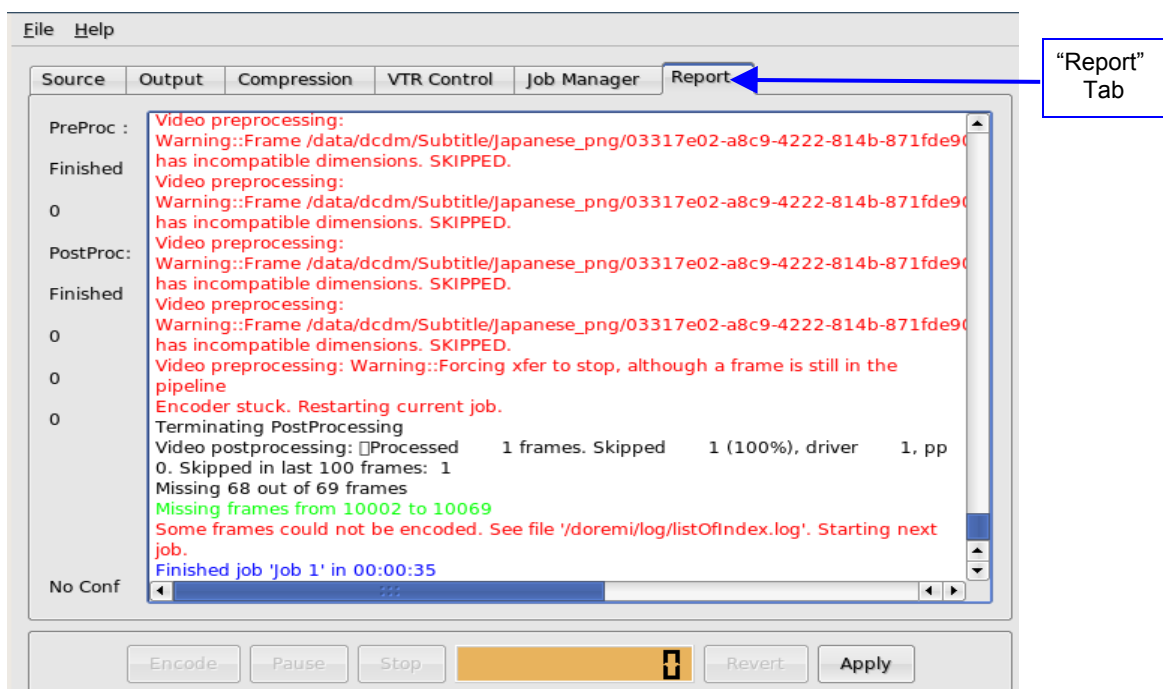


Figure 12: RAPID Encoder GUI - Report Tab

- The "Job Manager" tab displays information about the “Job” including its source, bit rate, and frame number (see Figure 13 below).

Note: To schedule several “jobs” and to choose which order the server will encode them go to the “Job Manager” tab and enable the “Multiple Jobs”option by clicking “Add Job”. The server will automatically highlight the new job. Go back to the “Source” tab and continue with the instructions as laid out under Section 4.1.

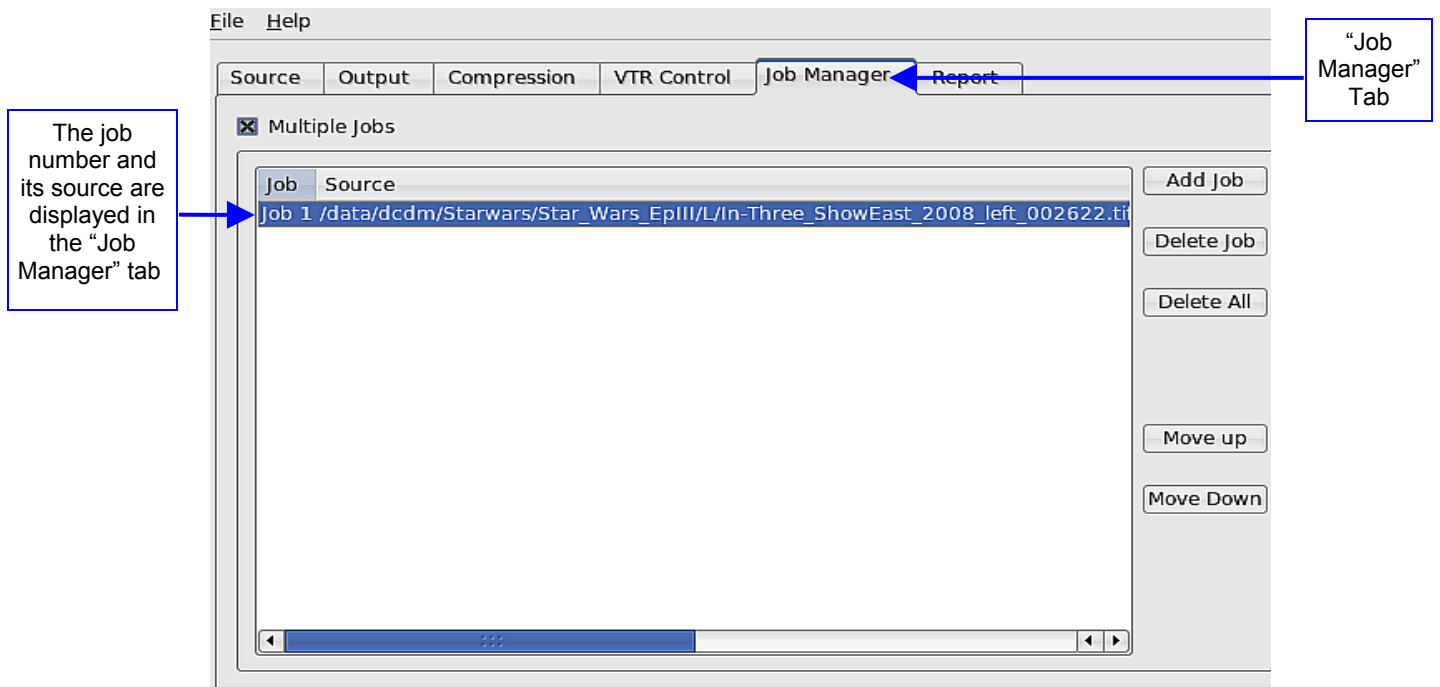


Figure 13: RAPID Encoder GUI - Job Manager Tab

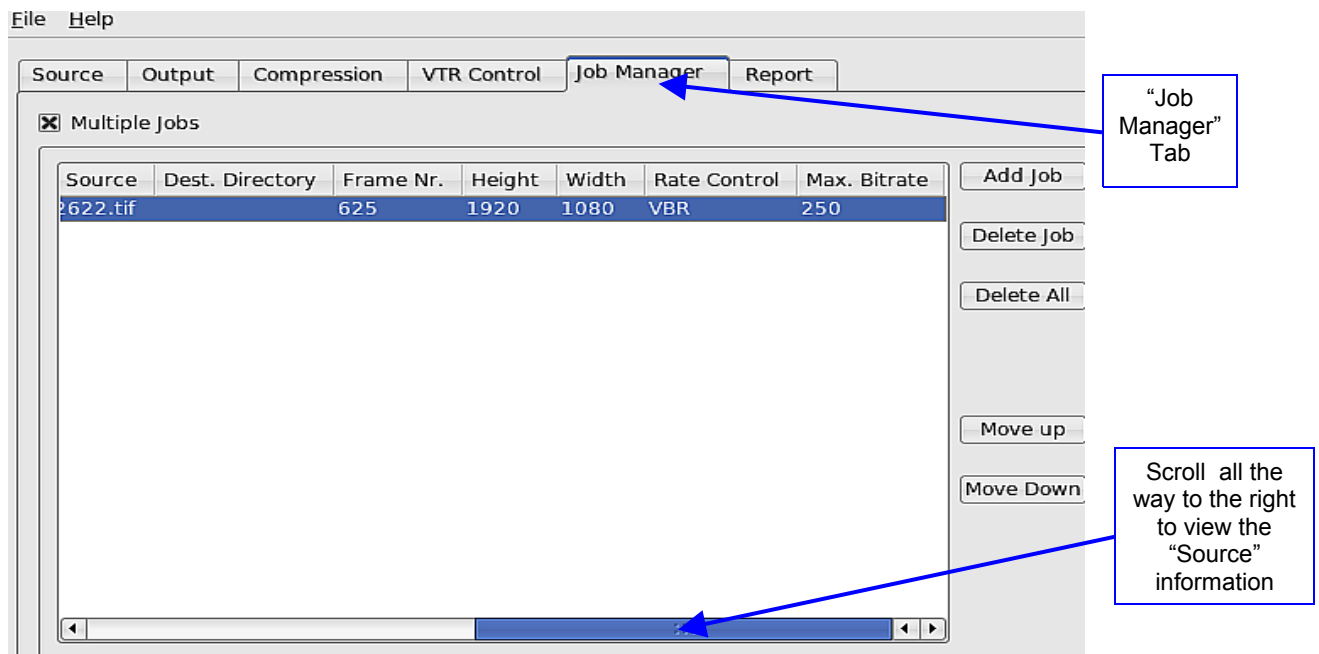


Figure 14: Job Manager Tab - Viewing the Source Information

4.4 Encoding From HD-SDI

HD-SDI (“High-Definition Serial Digital Interface”) is a standard used for transmission of uncompressed and unencrypted digital video signals. When encoding from a HD-SDI source the RAPID unit will automatically detect the HD-SDI unit connected to it and display the corresponding information in the “Source” tab.

The RAPID will automatically extract the format and the time code from the ancillary data for both single and dual link HD-SDI video inputs. However, the user must manually set the appropriate frame rate to correspond to the HD-SDI input (see Figure 15 below).

4.4.1 Supported Formats

Supported in Real-Time Capture Mode HD-SDI format for the RAPID and RAPID 2x:

- 2Ksf 24fps and 25fps
- 2Kp 24fps and 25fps
- 1080i 24fps and 25fps
- 1080p 24fps and 25fps

Supported only in Non-Real Time Capture Mode on the RAPID (less than 50% speed):

- 2Ksf 30fps
- 2Kp 30fps
- 1080i 30fps
- 1080p 30fps

Formats not supported:

- 23.98fps
- 29.97fps
- 720p

4.4.2 Default and Custom File Names

4.4.2.1 Video HD-SDI Captures

The RAPID uses the HD-SDI embedded time code and converts each frame to a “j2c” file using an incrementing index. See Section 4.6 for more information on how this works.

- The default name of the compressed files will be “hdsdi_capture_0000254.j2c”.
- Example: One j2c file per image: hdsdi_capture_nnnnnnn.j2c” where 'nnnnnnn' is the index corresponding to the time code of the image. See Section 4.6 for more information.

- To customize the “hdsdi_capture” base name to a user defined string use the “Label” field from the “Output” tab. See Section 5 for more information.

4.4.2.2 Audio HD-SDI Captures

Audio is embedded in the HD-SDI stream. Each channel is captured into a specific file.

- Audio files are created in the following way:
- One wave file per audio channel: “hdsdi_capture_chnn.wav” where 'nn' is the channel number.

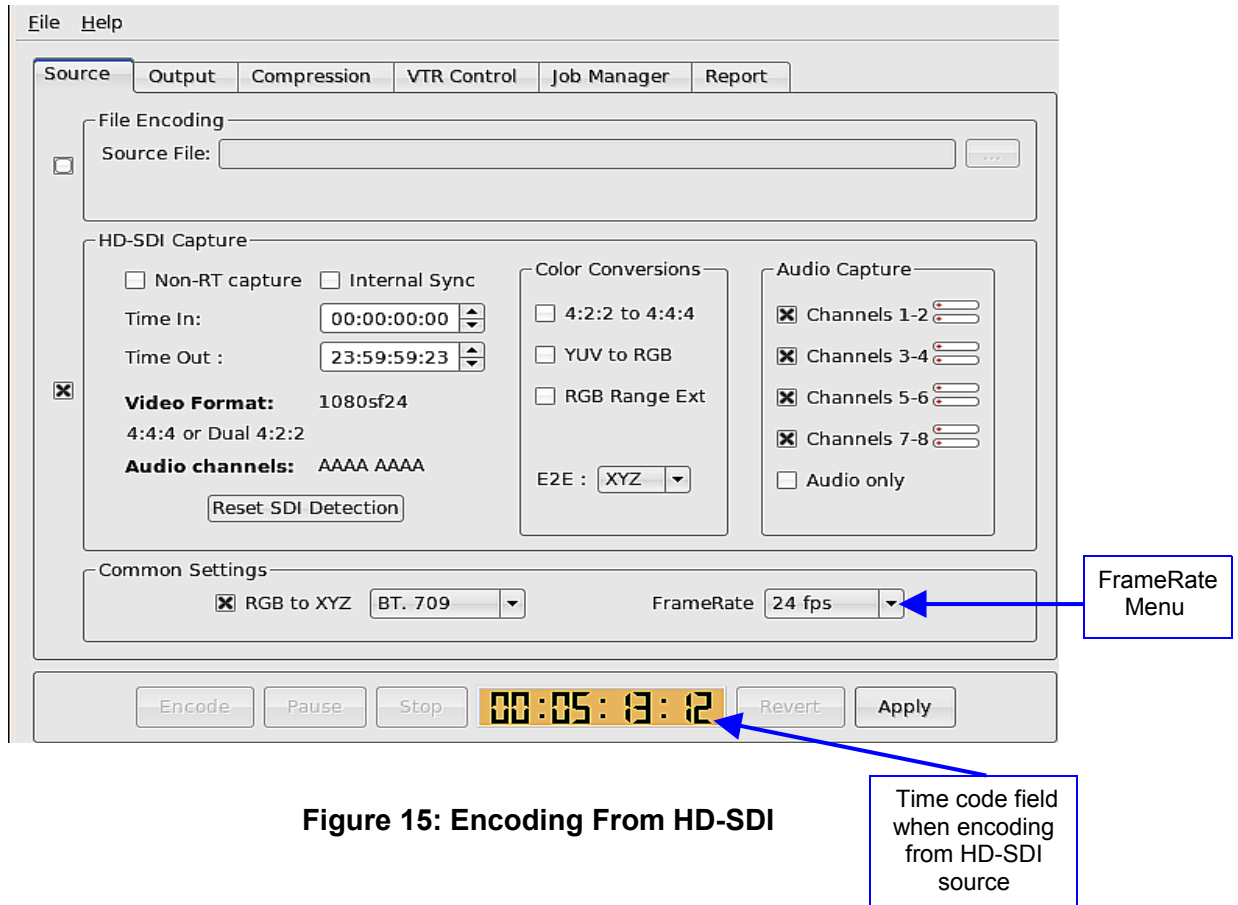


Figure 15: Encoding From HD-SDI

4.5 Encoding From a HD-SDI Source

- Double-click on the “RAPID Encoder GUI” from the desktop to launch the RAPID GUI.
- From the “Source” tab select the check-box immediately to the left of the “HD-SDI Capture” (see Figure 16 below).
- Enter the Time-In (time-code of the first image to capture) and the Time-Out (time-code of the last image to capture).

Note: It is highly recommended to enter a “Time-In” and “Time-Out” before encoding, otherwise the server will encode the entire duration of the video which may be up to 24 hours. See Section 4.6 below for more information.

- To keep all of the server’s default settings, click “Apply” and then click “Encode”.
- If the “Video Format” or “Audio Channels” fields are blank click the “Reset SDI Detection” button and the server will search for the SDI connection and display the corresponding information (see Figure 16 below).

Note: The HD-SDI device must be properly connected.

- The “Video Format” can only be changed from the source not from the server.
- By default, the server will automatically enable the number of audio channels the device has (usually 4 or 8). However, the user can manually select the channels to encode by checking or unchecking the boxes (see Figure 16 below). If the user does not wish to encode any audio, then make sure none of the channels are selected. The server supports up to 8 audio channels (see Figure 16 below).

Note: If the user wishes to encode only audio files, then select at least one audio channel and check the “Audio Only” box. If the user does not select any audio channel, then the user will be prompted to an error message (see Figure 17 below).

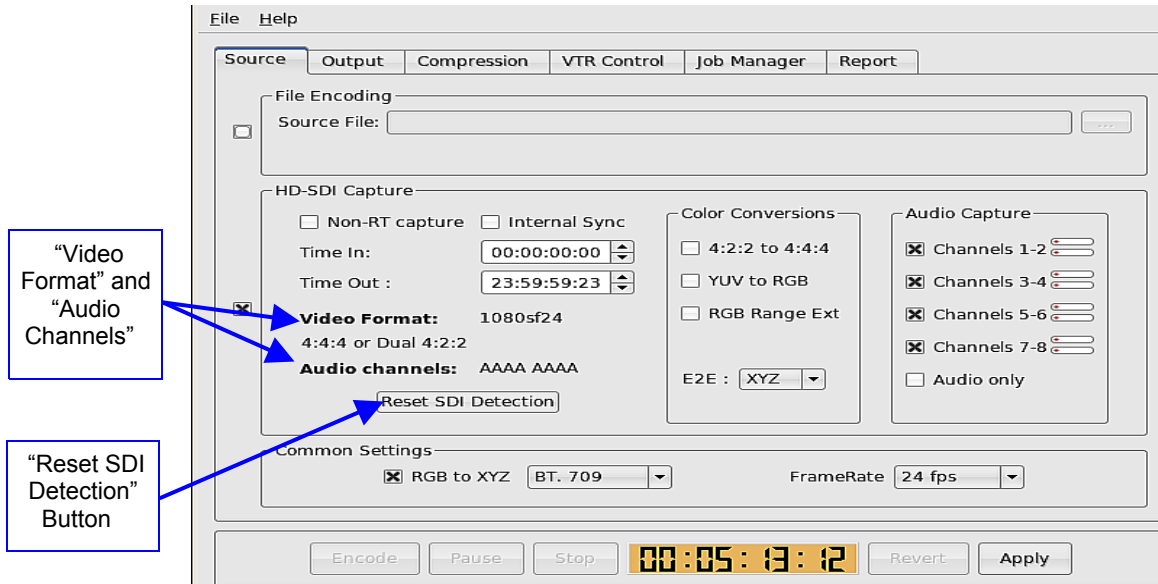


Figure 16: Source Tab and the Reset SDI Detection Button



Figure 17: Error Message - "No Audio Channel Selected"

- The number of Audio Channels detected by the server will be represented by "A" characters on the source tab in the "Audio Channels" field (see Figure 17 above).
- Example: "AAAA____" represents four channels detected (see Figure 18 below) "AAAA AAAA" represents eight channels (see Figure 17 above).

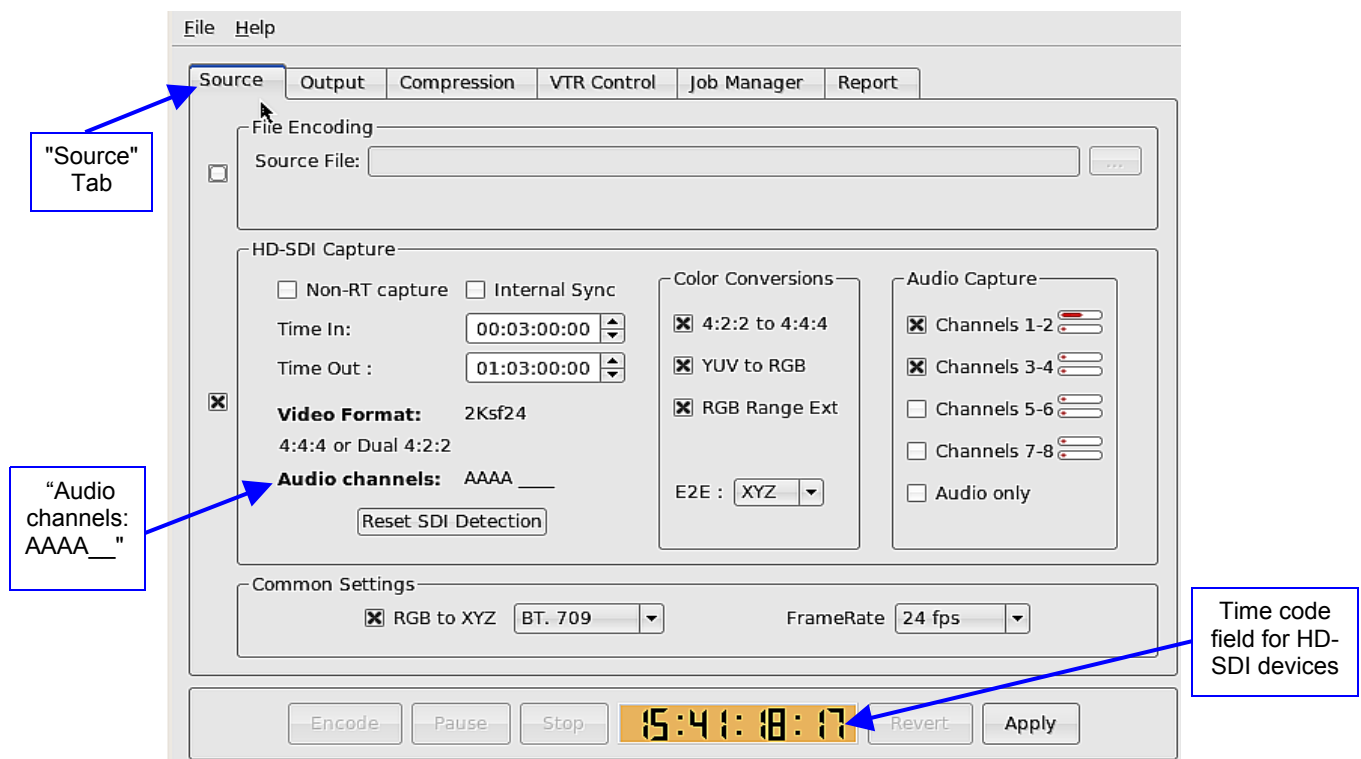


Figure 18: Source Tab - Time Code Field

4.6 HD-SDI Timecode

By default, the RAPID uses the HD-SDI embedded time code detected from the device and converts the compressed files with an incrementing frame index. The time code will be in the following format 15:41:18:17. This reflects Hours, Minutes, Seconds, and the Frame Number (see Figure 18 above).

Depending on the frame rate and format, the HD-SDI device is set at (i.e., 24, 25 or 30fps). The server will automatically capture the time code of the frames and embed them with an incrementing frame index. See the Section 4.4.1 above for all supported formats.

- Example: If the frame is captured at time code "00:00:10:04" (this indicates the frame at 10 Seconds and Frame Number 4), and the source's frame rate is at 25fps the server will automatically compress this file to "hdsdi_capture_0000254.j2c".
- If the video encoding does not have its own time code, the server will generate an internal time code for the video starting at 00:00:00:00 using the RAPID's "Internal Sync" feature.

Note: The user must manually adjust the video/tape start from the first frame (the beginning of the video). To command the server to apply an internal time code check the "Internal Sync" box and click "Apply" and then click "Encode."

Note: It is highly recommended to enter a “Time-In” and “Time-Out” before beginning encoding, otherwise the server will encode the entire duration of the video which may be up to 24 hours. The user cannot exceed more than 24 hours of encoding at a time. If entering a “Time-In” or “Time-Out” value that exceeds a value greater than 23 hours (i.e., 23hr:59min:59sec), the server will not allow it. If entering a value that exceeds 20 hours (i.e., 30 , 31, 32, 40...), the Timecode field will turn red (see Figure 20 below).

HD-SDI Capture

☐ Non-RT capture ☐ Internal Sync

Time In: 00:00:00:00

Time Out: 23:59:59:23

☒ Video Format: 1080sf24

4:2:2

Audio channels: AAAA AAAA

Reset SDI Detection

Color Conversions

☒ 4:2:2 to 4:4:4

☒ YUV to RGB

☐ RGB Range Ext

E2E: XYZ

Audio Capture

☒ Channels 1-2

☒ Channels 3-4

☒ Channels 5-6

☒ Channels 7-8

☐ Audio only

Common Settings

☒ RGB to XYZ BT. 709

FrameRate 24 fps

Figure 19: HD-SDI Capture Field

HD-SDI Capture

☐ Non-RT capture ☐ Internal Sync

Time In: 00:02:00:00

Time Out: 30:02:00:00

☒ Video Format: 2Ksf24

4:2:2

Audio channels: AAAA

Reset SDI Detection

Color Conversions

☒ 4:2:2 to 4:4:4

☒ YUV to RGB

☒ RGB Range Ext

E2E: XYZ

Audio Capture

☒ Channels 1-2

☒ Channels 3-4

☐ Channels 5-6

☐ Channels 7-8

☐ Audio only

Common Settings

☒ RGB to XYZ BT. 709

FrameRate 24 fps

Figure 20: Time Code For Video Streamer

4.6.1 Timecode for Video Streamer

When encoding from a Video Streamer (i.e., satellite reception or camera feed), the RAPID detects the streaming video from the source and the frames will begin to “roll” automatically. The main RAPID Encoder GUI will therefore always show the time code field as “rolling”. The user must set the “Time-In” and “Time-Out” values. Begin encoding by selecting the preferred settings and then clicking on “Apply”. Click on “Encode” to begin the encoding process.

Note: When the server has finished encoding the user specified frames (time-in and time-out), the time code field will still continue to be “rolling” (see Figure 21 below). Notice that the “Time-Out” value set on the server has been passed, however, the server will still continue to “roll” the video.

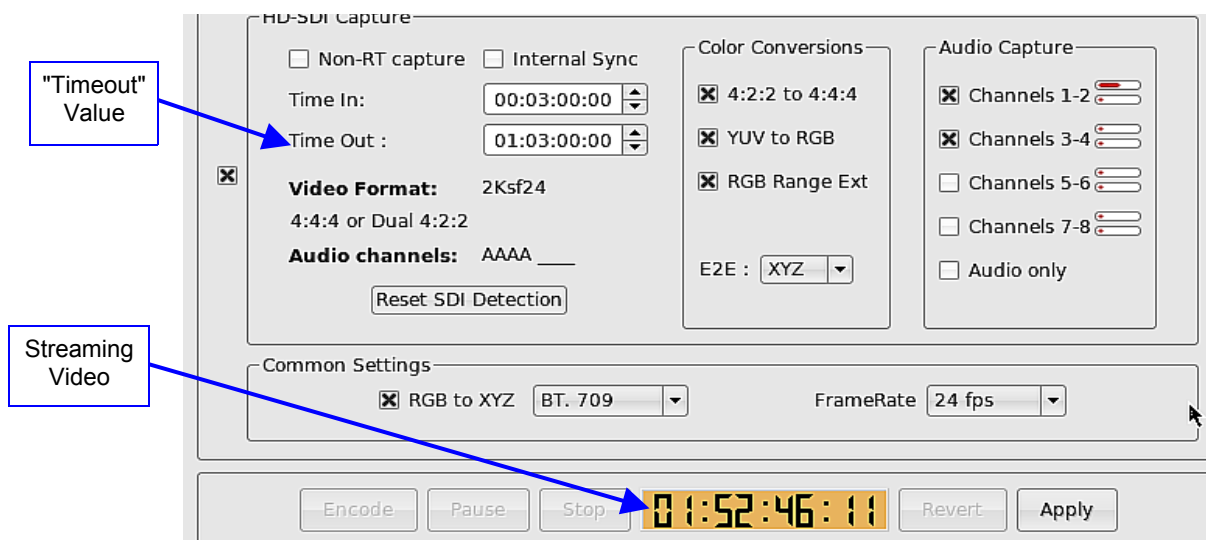


Figure 21: Time Code For Video Streamer

4.7 Real-Time and Non-Real Time Capture

4.7.1 RAPID

When in Real-Time capture mode, a very high bandwidth of data in the hardware compressor accelerator can be generated. Some frames that are extremely difficult to encode, such as random noise, will overflow the hardware accelerator causing it to possibly crash. To avoid crashes, a filtering process is done in real-time capture mode. This filtering might cause a degradation of the quality of the resulting picture.

To keep the best quality possible, encode in “Non-Real Time” capture mode (see Figure 22 below). In this mode, the source must be set to run at less than 50% speed. If the “VTR Control” (Video Tape Recorder) is selected, the application will automatically set the source at 48%. This will cause the RAPID-1X encoding process to be approximately half of “Real-Time”. Audio cannot be captured in “Non-Real Time” Mode. The “Non-Real Time” capture mode has been tested with HDCAM-SR. Test the equipment first to ensure that it will output proper progressive frames in this mode and not repeat fields or interpolate (alter) frames.

4.7.2 RAPID 2X

“Non-Real Time” capture mode on the RAPID-2X is not necessary. The RAPID-2X encodes with the best quality possible at “Real-Time” speed without having to slow down. This is possible due to the fact that the RAPID-2X has an additional Dolphin DCI Card.

Note: The “Non-Real Time” capture mode on a RAPID 2X will be viewable, as well as, on the RAPID. However, it is only usable on the RAPID.

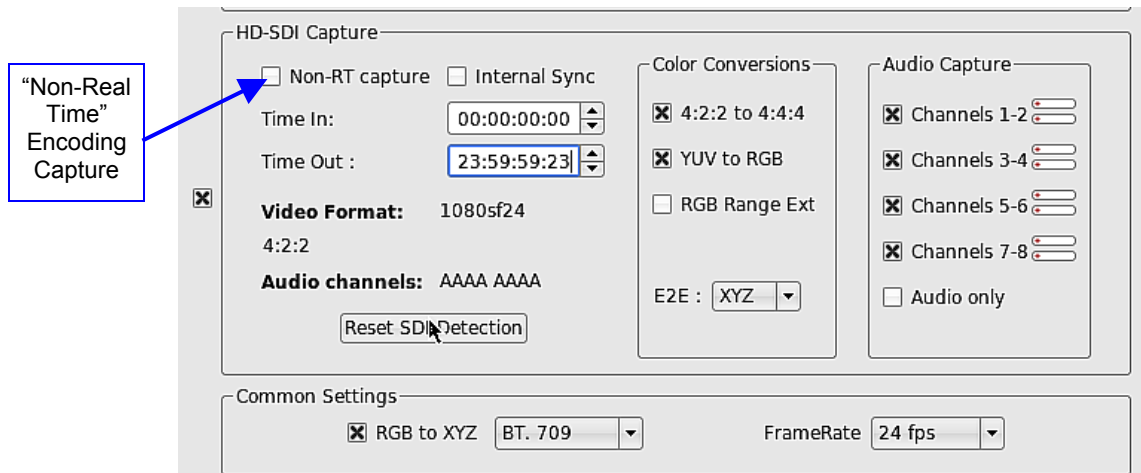


Figure 22: Source Tab - HD-SDI Capture Field

4.8 Color Space Conversion for File and HD-SDI Capture

To be consistent with DCI color and sample space specifications, the RAPID automatically assumes that the frames are encoded to “XYZ” color space. If the frames are not “XYZ”, then convert the frames from “RGB to XYZ” from the “Source Tab” (see Figure 23 below).

Note: A license is needed to use the “RGB to XYZ” conversion feature. To receive the license contact Doremi Technical Support at support@doremicinema.com.

Note: If the files are already “XYZ”, then selecting the “RGB to XYZ” setting will result in a blurry resolution. At the same time if the user is unsure whether the files are “XYZ” and files have not been converted from “RGB to XYZ”, the compressed files will result in a lower quality resolution. The user must be sure that the frames are actually “RGB” or “XYZ” before encoding. The user should receive this information from the administrator or creator of the files. If the user is unsure what color space the frames are (“RGB” or “XYZ”) then do an encoding test with a small number of frames first to check the resolution of the compressed files.

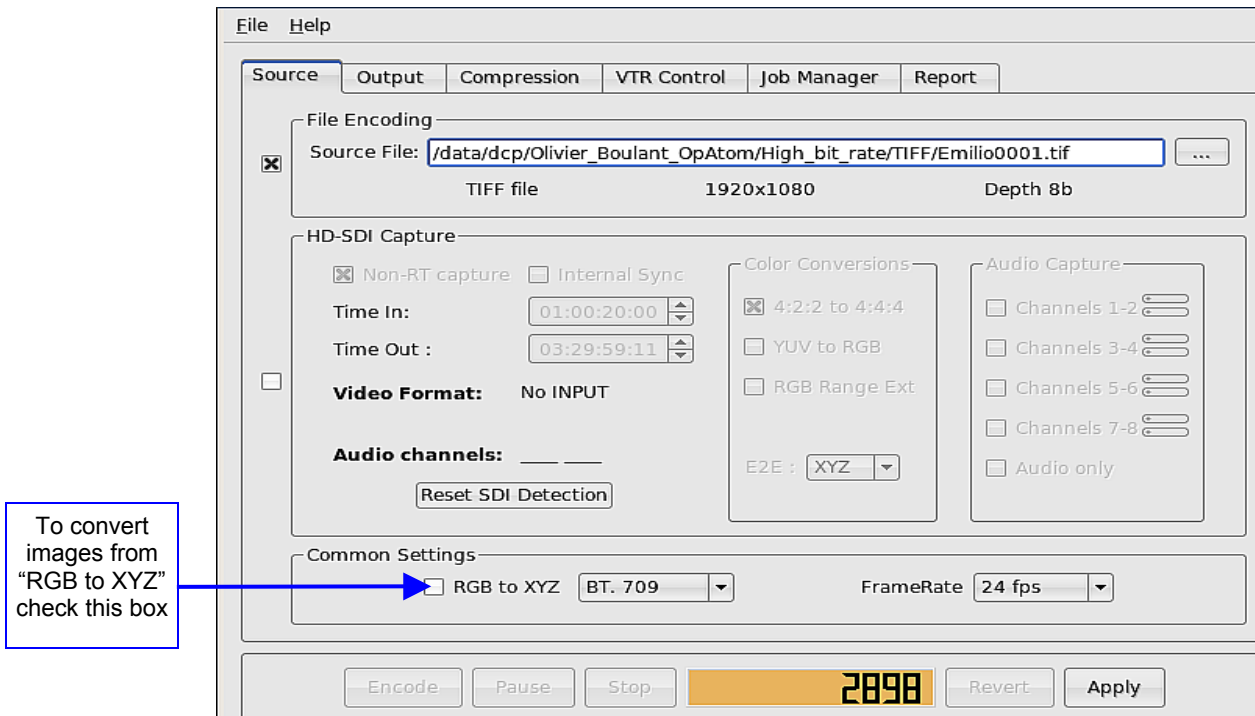


Figure 23: Source Tab - Converting Images From RGB to XYZ

4.8.1 Default Profiles for Color Space

The objective is to obtain a “4:4:4” (sample space) and “XYZ” (color space) signal in all cases. Change the default settings if required.

- If the files are “RGB”, then select the appropriate settings to convert to “XYZ” (See Figure 24 below).
- “BT 709”, to convert from “RGB” compliant with ITU-BT Rec. 709 color space with 2.2 gamma to DCI X’Y’Z’.
- “P3 DCI D65”, to convert from P3 D65 “RGB” with 2.6 gamma to DCI X’Y’Z’.
- “Custom” allows user to define, save and load a new profile. For each profile user can select values for the inverse gamma used on the “RGB” in the “Gamma In” area.

Note: For more information on the “Custom” feature contact Doremi Cinema Technical Support at support@doremicinema.com

4.9 Sample Space Conversion for HD-SDI Capture

To be consistent with DCI color and sample space specifications, the RAPID automatically assumes that the frames are set to “XYZ” (color) and “4:4:4” (sample) space. “4:4:4” specifies the size of each sample (i.e., what range was used). If the user knows the frames are not “XYZ,” then the user can convert the frames from “RGB to XYZ” from the “Source” tab (see Figure 24 below).

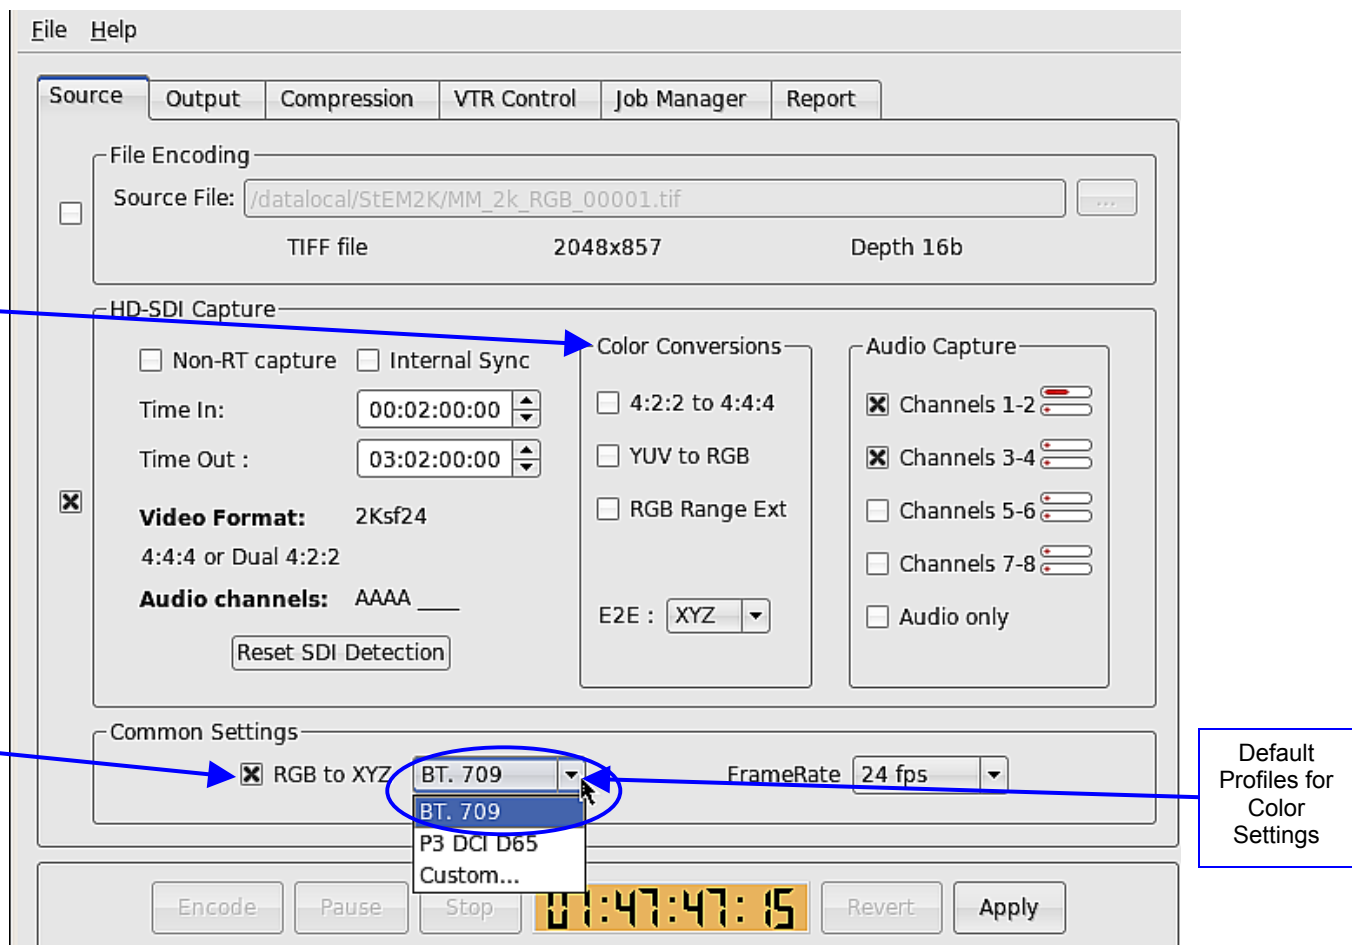


Figure 24: Source Tab - Color Conversions and "RGB to XYZ" Field

4.9.1 Obtaining a 4:4:4 Signal From HD-SDI Capture

- Default Settings for sample space:

Note: The "RGB to XYZ" box must be checked first before changing any of the default settings (see Figure 24 above).

- Single link: When user is connected to the RAPID from a single link, it is assumed that the signal is a YUV signal. To convert the signals and to obtain a 4:4:4 XYZ signal, choose from one of the following settings that have been created (see Figure 24 above).
 - 4:2:2 to 4:4:4
 - YUV to RGB
 - RGB Range Ext (In case the YPbPr signal follows Rec. 709, select the "RGB Range Ext" option to enable the conversion to full range in order to keep true colors).

- Dual link: When the user is connected to the RAPID from a dual link it is assumed that the signal is a 4:4:4 RGB signal.
- To convert to a 4:4:4 XYZ signal use the “RGB to XYZ” setting (see Figure 24 above).

Note: This section is on sample space (i.e., 4:4:4). For information on how to obtain “XYZ” color space see Section Color Space Conversion for File and HD-SDI Capture above.

5 Output Tab

The purpose of the “Output” tab is to create the desired value outputs of the compressed “j2c” files. Output fields consist of the following:

- Destination Directory
- Number of Frames
- Video Standard
- Label
- Embedded Logo

5.1 Destination Directory

When compressing files by default, the compressed files will keep the same base name (name without the extension) including the same index number as the original uncompressed file. The compressed file will be converted to contain a “.j2c” extension.

- Example: If the first file is named “perfect_movie.00001.tif” the compressed file will be named “perfect_movie.00001.j2c”.
- If the user wants to create a different or new directory to put the compressed files into select the “Browse” button (see Figure 25 below).

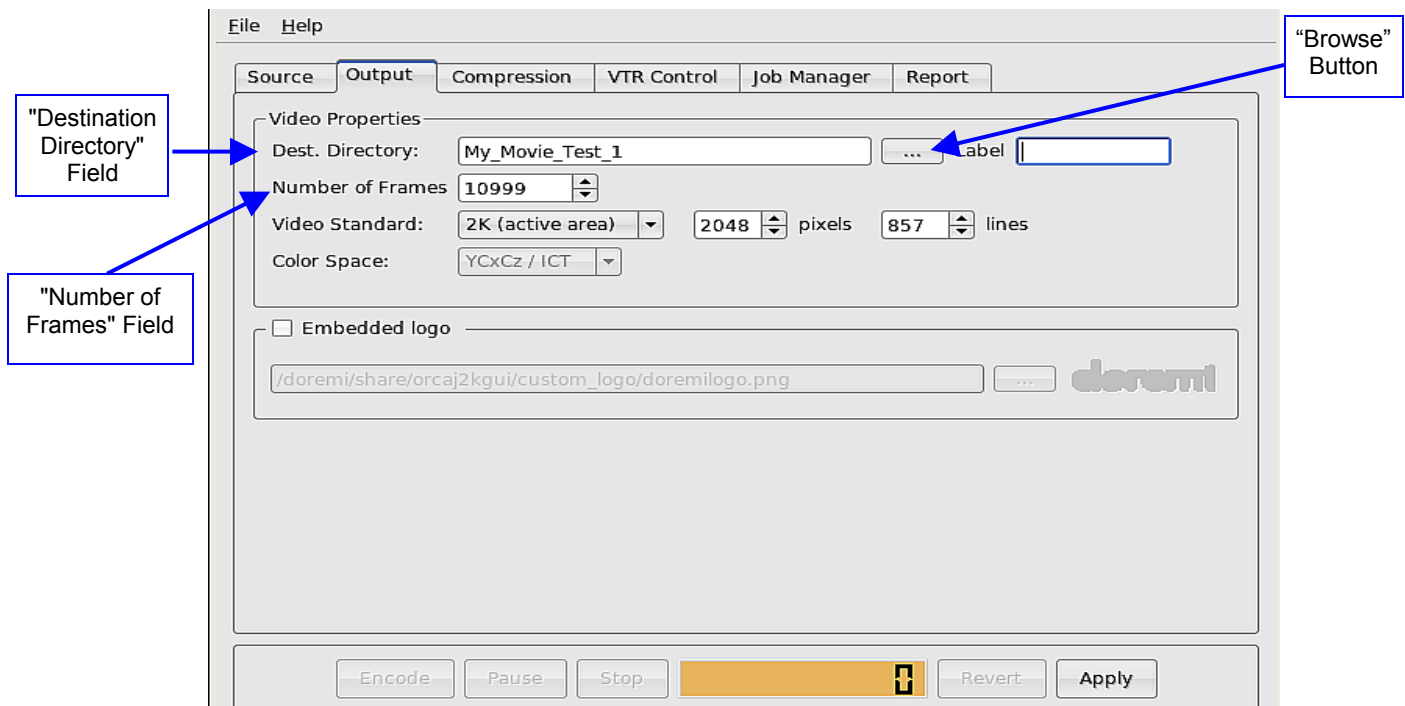


Figure 25: Output Tab - Destination Directory and Browse Button Window

5.2 Number of Frames

The “Number of Frames” field on the “Output” tab will automatically reflect the number of consecutive images detected from the source. If the user wants to reduce the number of frames, then adjust the number from this field (see Figure 26 below).

Note: The user can only adjust the number of frames when the source is coming from a file. Every time the user changes the file source, it becomes possible to change the number of frames to encode.

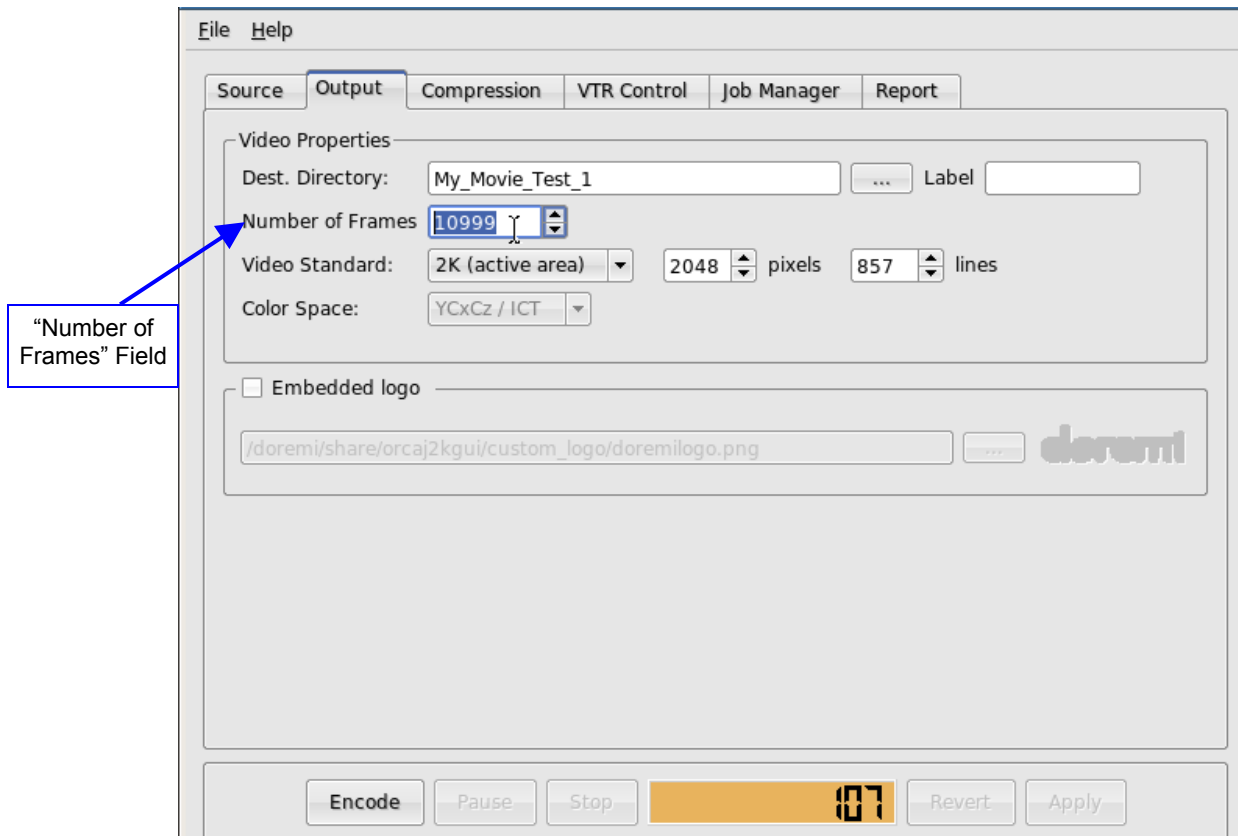


Figure 26: Output Tab - "Number of Frames" Field

5.3 Video Standard

The selection of the video standard is valid for both file and HD-SDI encoding. The default format is 2048 pixels x 1080 lines. This option is available from the “Output” tab (see Figure 27 below). The illustration of ratio aspects is below.

When encoding from File and HD-SDI Source, "Default Setting" formats the entire image area.

- Full 2K Container (2048 pixels x 1080 lines).

- The input frame will be cropped or padded with black strips to center the image.

5.3.1 How to Form and Crop the Image's "active area"

- Select "Video Standard 2K ("active area").
- Define the size of the frame (number of pixels and number of lines) to be generated.
- The input frame will be cropped or padded with black strips to center the image.

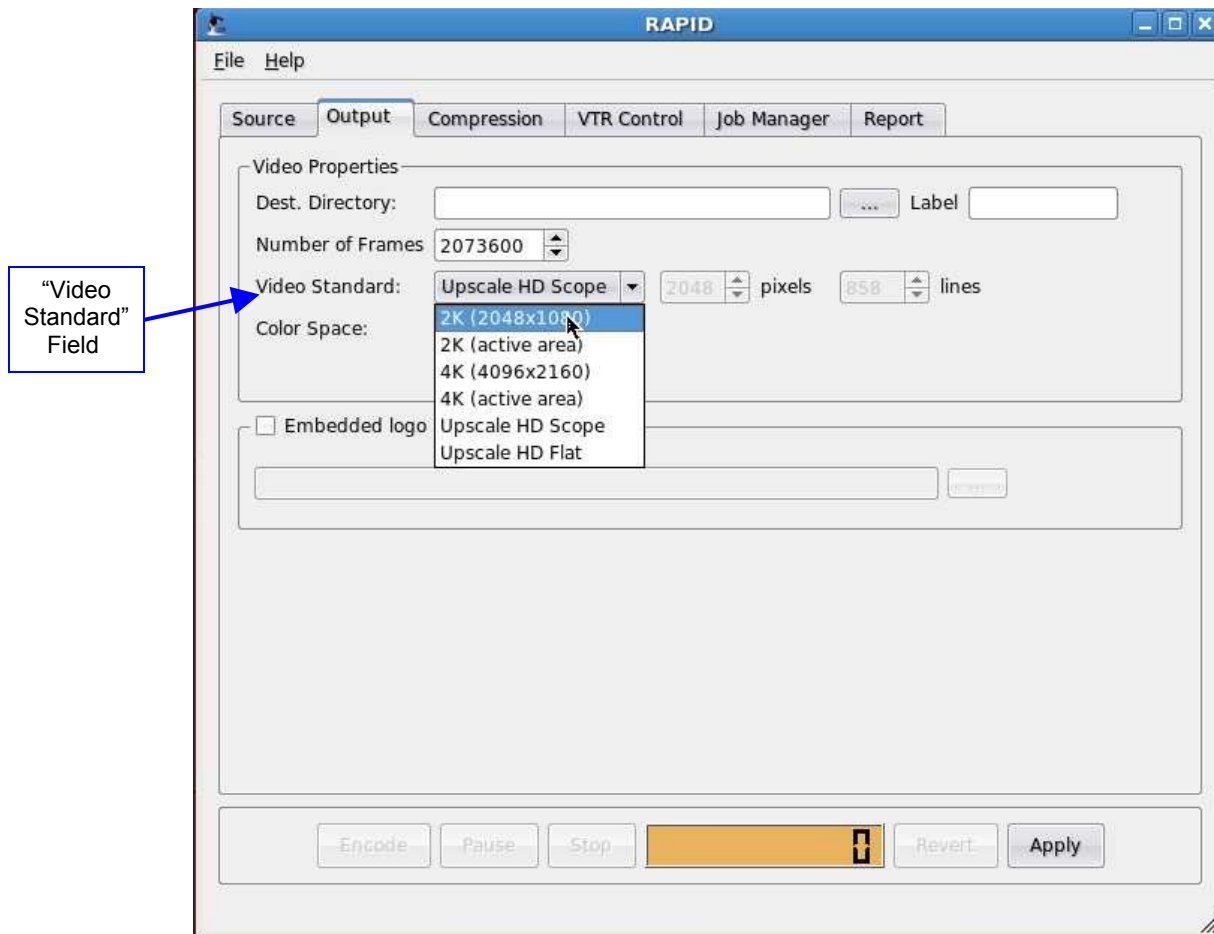


Figure 27: Output Tab - Selection of the "Video Standard" Field

Note: For the File Source of 4k (4096x2160) and 4k (active area) images, user will need a license.

5.3.1.1 How to Format and Crop an Image At 4k (4096x2160)

- From the "Output" tab in the "Video Standard" field select 4k (4096x2160).
- This will capture the image at 4096 pixels x 2160 lines.
- The input frame will be cropped (centered) or padded with black strips (centered).

5.3.1.2 How to Format and Crop an Image At 4k ("active area")

- If the user wants to capture the image's "active area", select 4k (active area) from the "Video Standard" field (see Figure 27 above).
- Define the size of the frame (number of pixels and number of lines) to be generated (see Figure 27 above).
- The input frame will be cropped (centered) or padded with black strips (centered).

Note: 4K Video Standard is only supported when encoding from a File Source. If the user selects a 4K Video Standard format when encoding from a HD-SDI device, an error message will appear.

5.3.1.3 How to Upscale HD Scope Image (1920 pixels x 804 lines to 2048 pixels x 858 lines):

- From the "Output" tab in the "Video Standard" field, select "Upscale HD Scope" (1920 pixels x 804 lines to 2048 pixels x 858 lines).
- This will upscale the HD Scope image (1920 pixels x 804 lines) to 2K scope (2048 pixels x 858 lines) before compression.
- The input frame will be cropped (centered) to 1920 pixels x 804 lines if the image is larger than HD scope, or padded with black strips (centered) to 1920 pixels x 804 lines if the image is smaller than HD scope, before up-scaling it to 2K scope.

5.3.1.4 How to Upscale HD Flat Image (1920 pixels x 1038 lines to 1998 pixels x 1080 lines):

- From the "Output" tab in the "Video Standard" field select "Upscale HD Flat" (1920 pixels x 1038 lines to 1998 pixels x 1080 lines).
- This will upscale the HD Flat image (1920 pixels x 1038 lines) to 2K flat (1998 pixels x 1080 lines) before compression.
- The input frame will be cropped (centered) to 1920 pixels x 1038 lines if the image is larger than HD flat, or padded with black strips (centered) to 1920 pixels x 1038 lines if the image is smaller than HD flat, before up-scaling it to 2K flat.



Description	Presentation Aspect Ratio	Size	Image Area
Full 2K Container	1.89:1	2048 X 1080	
Scope	2.39:1	2048 X 858	
Flat	1.85:1	1998 X 1080	
HD	1.78:1	1920 X 1080	

Scope compared to Full 2K Container	Flat compared to Full 2K Container	HD compared to Full 2K Container

Figure 28: Presentation Aspect Ratio Description

5.4 Customizable Label for HD-SDI Capture

The user can choose to change the default name of the compressed files when encoding from an HD-SDI Source. The “Label” field on the “Output Source” allows the user to change the default “hdsdi_capture” base name to a user-defined string (see Figure 29 below).

5.4.1 Default Label

- “hdsdi_capture_0000000.j2c” (for video files)
- “hdsdi_capture_chXX.wav (for audio files)

5.4.2 Custom Label

- From the “Output” tab, click in the “Label” field and enter the desired label for the file.

5.5 Embedded Logo

By selecting the “Embedded Logo” option, the user can add a logo on the bottom-left corner of the compressed frames (see Figure 29 below). The RAPID will automatically convert the frames to satisfy the color and size dimensions for the logo.

- If the user wants to change the default “Doremi” logo, click on the “Browse” button and choose a new logo.
- When the user chooses a new logo, the RAPID will automatically convert the logo to satisfy the required color and size specifications.

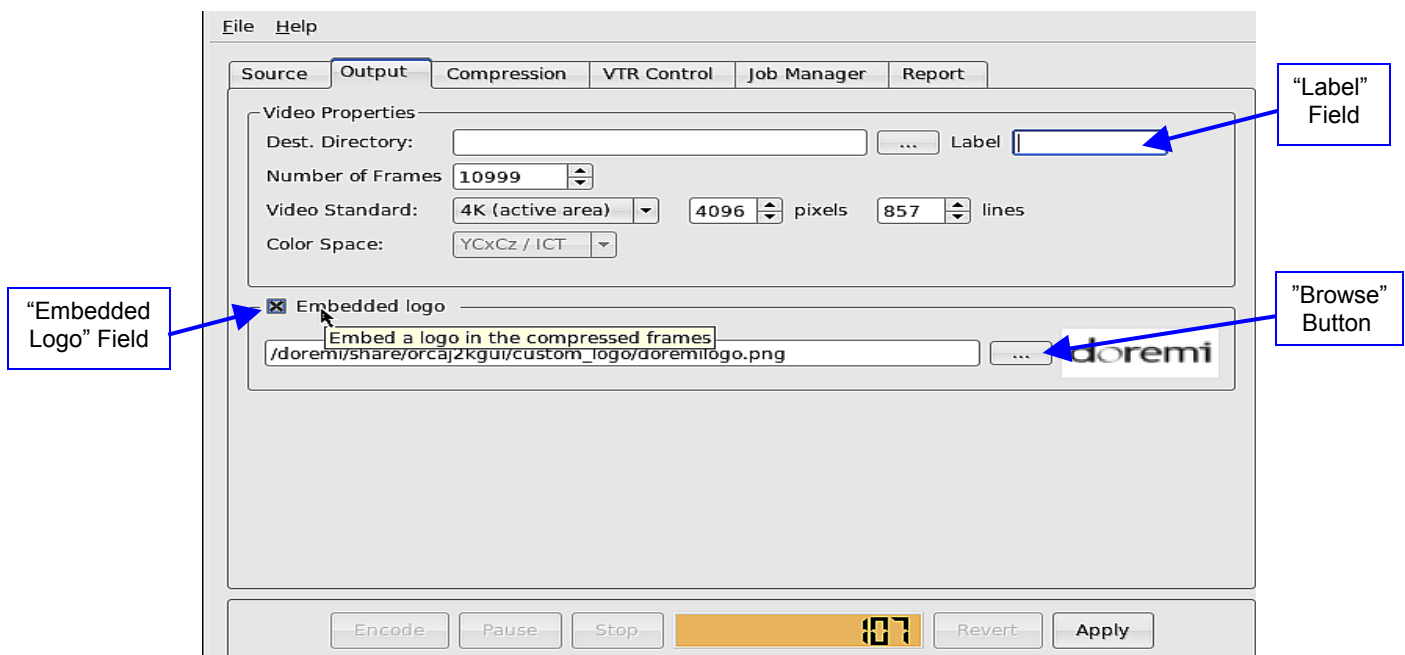


Figure 29: Output Tab - "Embedded Logo" Field

6 Compression Tab

The Compression tab is used to control the rate at which encoding occurs. DCI specifications require that the image stream bit rate be set at 250 Mb/s, therefore the default values on the RAPID are set to “VBR” (Variable Bit Rate) at 250 Mb/s (see Figure 30 below). When in “VBR” mode, 250 Mb/s is the maximum rate at which to encode. However, these values can be changed to reflect the desired user output.

Note: The first series of RAPID units using a Linux 2.4 kernel have a disk access limitation. Encoding from HD-SDI at high bit rate will force the encoder to skip video frame. Select the “Automatic control of VTR” in the “VTR control” tab to have the application redo the skipped frame automatically. The “Expected Average” value (see Figure 30 below) corresponds to the average targeted rate that each frame will be encoded at (i.e., from 75-150 Mb/s). The difficulty of encoding each image depends on the degree of its details. This will vary the size of the image and the level of quality at which the images are encoded. The default level of quality is 75-150 Mb/s.

The expected average applies only to VBR, not CBR (Constant Bit Rate). The default value is set at 75-150 Mb/s. The drop-down menu lists the different levels of quality in descending order (i.e., 120-250 Mb/s is the highest quality and 40-100 Mb/s is the lowest quality). It is recommended that the user keep the default value at 75-150 Mb/s. See the next section for further explanation on “RC Profile” and “Coarse Stepsize”.

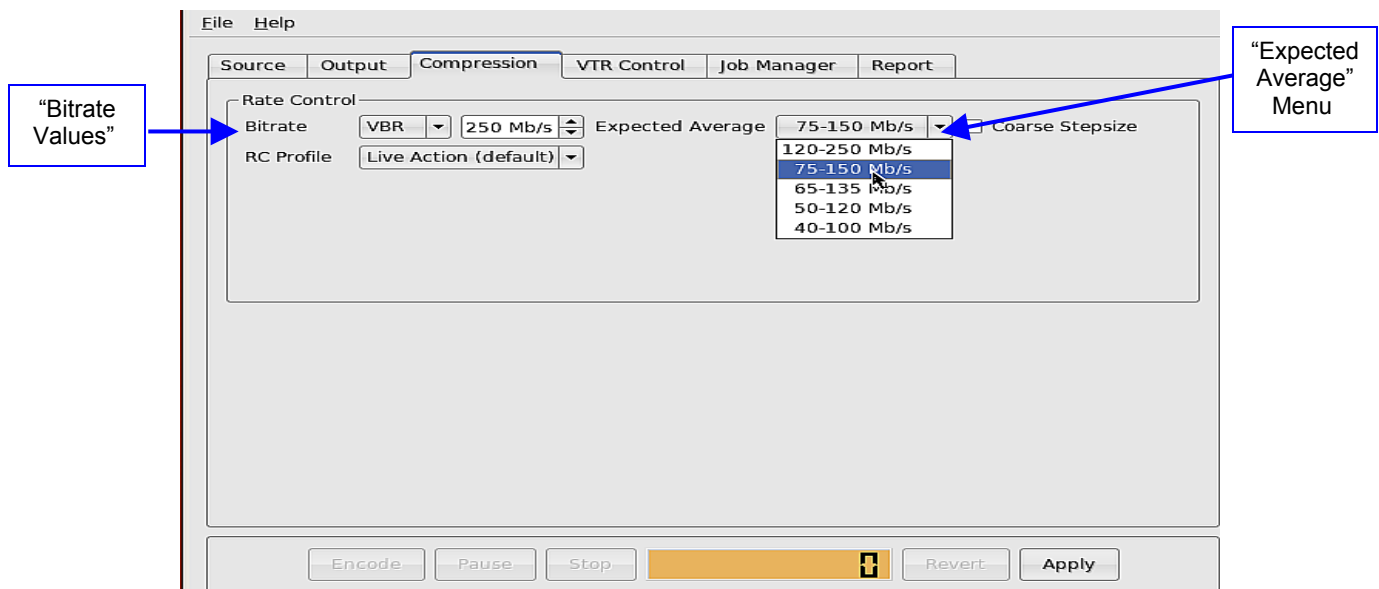


Figure 30: Compression Tab

“RC Profile” (Rate Control) contains three predefined settings: “Live Action” (default), “Animation”, and “Low Grain”.

If the user chooses the “Custom” option, the “Rate Control” window will appear where the user will be able to change the predefined values (see Figure 31 below). These settings are contingent on the type of film.

- Apply the “Live Action” setting to images that have live characters (i.e., not animated).
- Apply the “Animation” (CGI) setting to images that are animated (i.e., cartoon, caricature, etc).
- Apply the “Low Grain” setting to images that are used in advertising, music videos, and drama. Mismatches of grain, color cast, and so forth between shots are often deliberate and added in post-production.

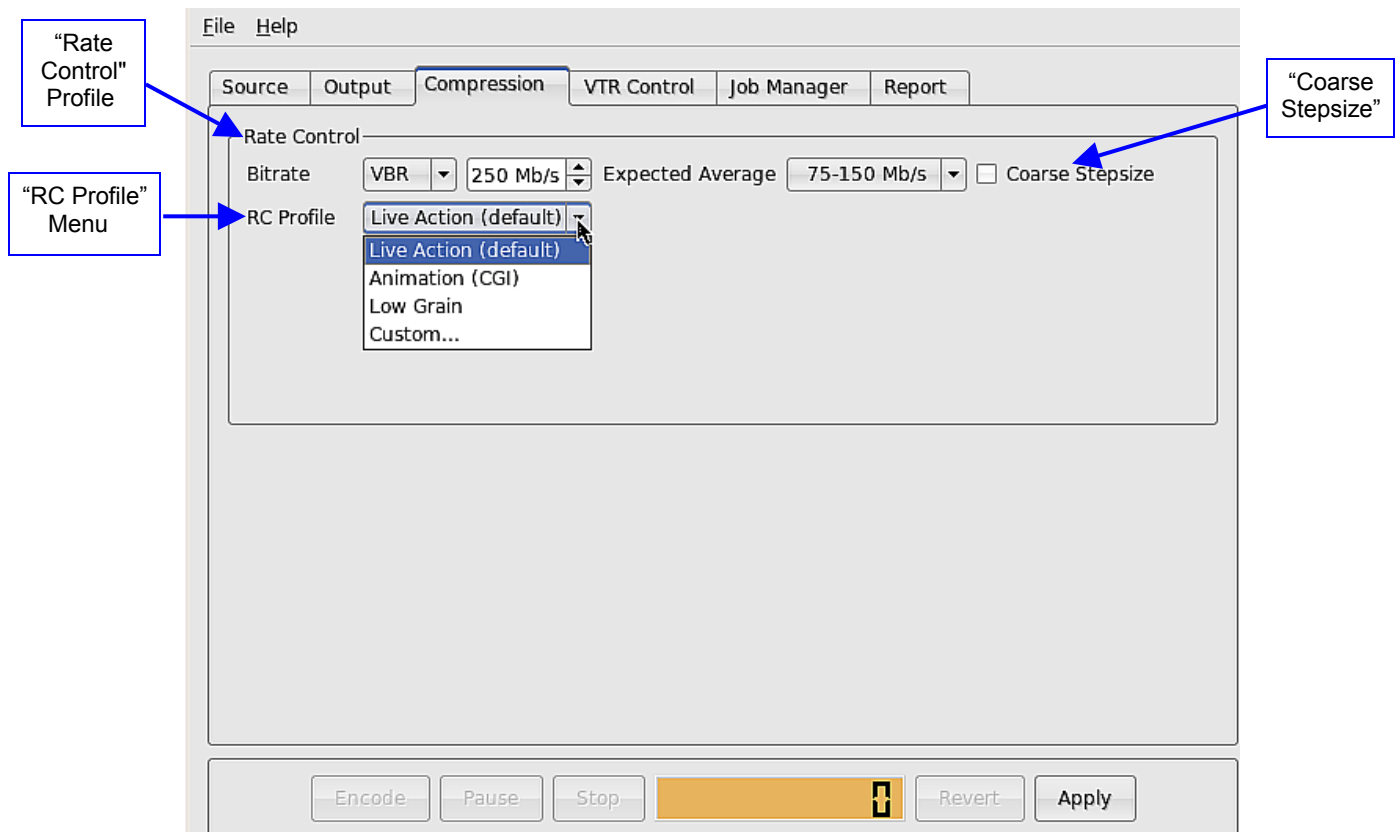


Figure 31: Compression Tab - Predefined Settings Set To "Live Action"

The figure above is an example of the predefined settings when set to “Live Action” which is also the default setting. If the user wants to change the settings, click on “Custom” from the “RC Profile” menu (see Figure 31 above).

6.1 Coarse Stepsize Option

Selecting the “Coarse Stepsize” option when encoding will reduce the amount of compressed generated data. The coarseness is usually due to the harshness/graininess of the images. Therefore, selecting this option will reduce the harshness/graininess which will result in a significantly smaller frame size with a minimum loss of quality.

7 VTR Control Tab

The "VTR Control" tab (Video Tape Recorder) has the settings and transport buttons to control VTR devices. It uses the serial port to control a playback device using the "Sony 9 Pin Control" protocol. The "VTR Control" tab allows the operator full control of an external VTR device that will be used as a HD-SDI source for an encoding job.

The "VTR Control" tab applies only when encoding from an HD-SDI source not a file source. The "Sony 9 Pin Control" standard protocol allows the user to send commands to the HD-SDI device manually or automatically. It is important to remember that the "VTR Control" is not enabled when encoding from a HD-SDI device that does not support the "Sony 9 Pin Control" protocol.

Note: The user cannot use the VTR control buttons (i.e., play, stop, pause, fast-forward, rewind) during the encoding job.

7.1 External Device Control Button

Selecting the "External Device Control" button will enable control of any VTR device connected to the RAPID using remote communication.

- When the LCD is green a connection is established and all of the navigation buttons will be enabled (see Figure 32 below).
- When the LCD is red a connection is not established and the HD-SDI device does not support the "Sony 9 Pin Control" protocol.
- Use the "Go to Time Code" option to enter a specific frame and then press the "Locate" button, the frame time code will be reflected in the green LCD (see Figure 32 below).

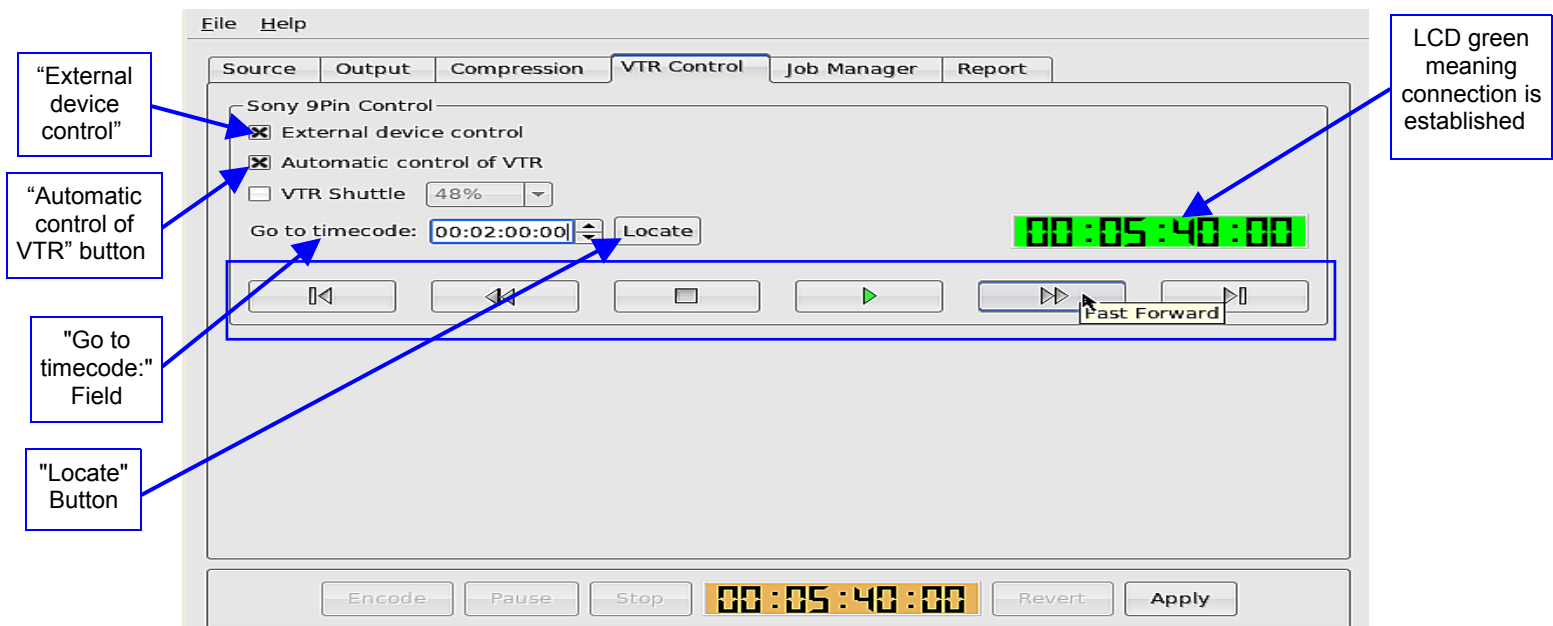


Figure 32: VTR Control Tab - External Control Device Button

7.2 Automatic Control of VTR Button

The "Automatic control of VTR" button will automate the encoding process from a VTR (see Figure 32 above). The RAPID will take full control of the VTR device using the Sony 9Pin commands. It will position the device at the specified "Time-In" point. Issue the proper file to initiate playback. It will stop the device once the job is completed. In case the encoding process failed to capture certain images, the automatic control mode will automatically recapture the failed images in a second pass.

7.2.1 Main Function

The "Automatic control of VTR" button will automatically enable the RAPID to re-encode images that failed during the encoding job. When selecting this button after the encoding job has finished, all the images that failed during encoding will be encoded again.

Note: The first series RAPID units used a Linux 2.4 kernel that had a disk access limitation. Encoding from HD-SDI at high bit rate will force the encoder to skip video frame. Select the "Automatic control of VTR" button in the VTR Control tab to have the application redo the skipped frame automatically.

7.2.2 Automatic Commands Sent To Server

The “Automatic control of the VTR” button sends commands to the server as part of the encoding process. The important commands that the user should be aware of and can edit with are as follows:

- “VTR Pre-Roll” (see Figure 34 below): This option will automatically locate the first frame/”time-in” of the image sequence to be encoded. The Pre-roll is set at 5 seconds by default. This means that the server will automatically locate 5 seconds before the first frame to be encoded and sync the server with the source.
- To change the default setting, go to the file menu in the RAPID Encoder GUI.
- Select “Preferences” and uncheck the box associated with the “VTR Pre-roll” option.
- Use the up and down arrows to change the seconds (see Figure 34 below).
- “Non-Real Time” Capture Mode is available only on the RAPID not the RAPID 2X.
- Selecting the “Non-Real Time Capture” mode from the “Source” tab will automatically command the RAPID to encode at 48% speed (approximately half of real-time speed).

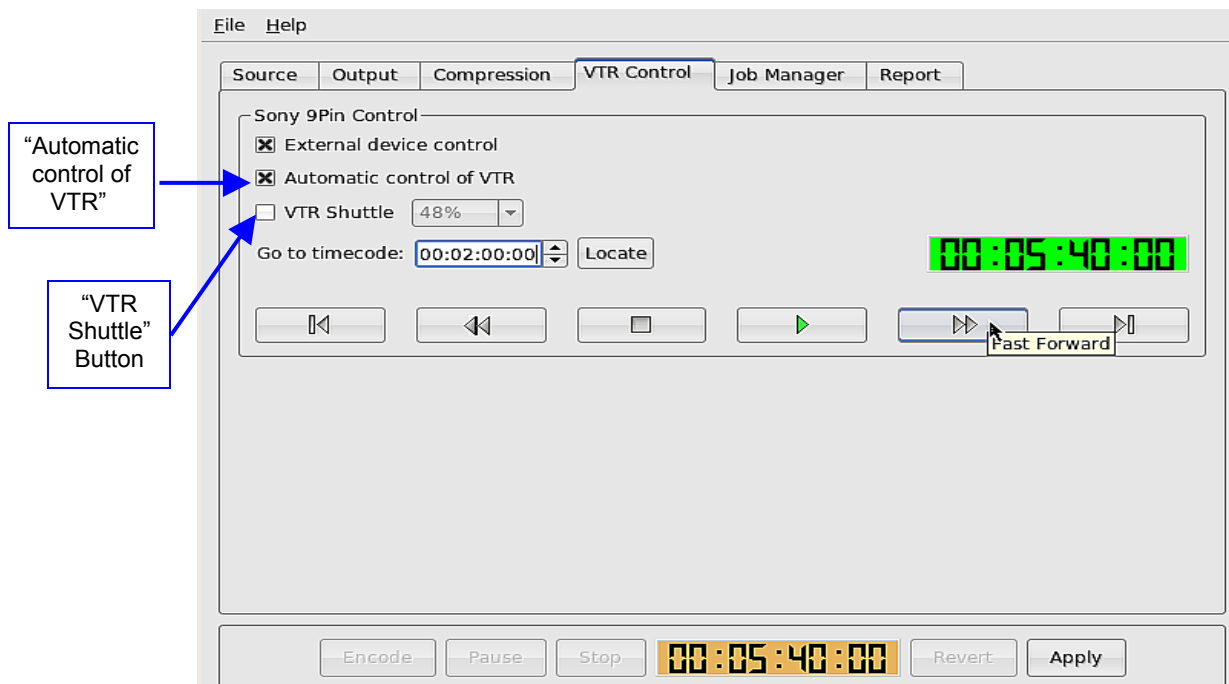


Figure 33: VTR Control Button Showing Real - Time Speed

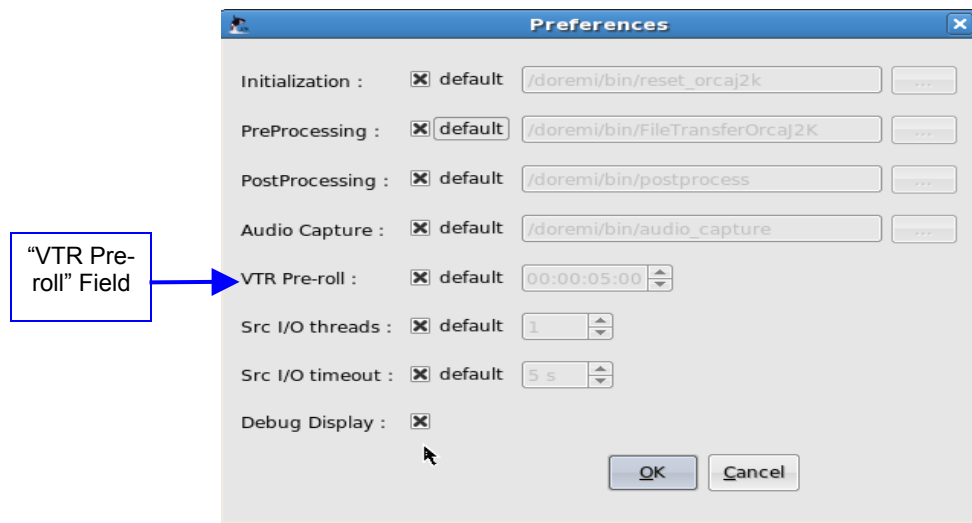


Figure 34: RAPID Encoder GUI Preferences Menu

7.2.3 VTR Shuttle Button

The "VTR Shuttle" button allows the user to manually select the encoding speed for testing and viewing of compressed images to ensure full user satisfaction. There are three speeds available:

- 100%: Real-Time Speed.
- 48%: Approximately half Real-Time Speed (i.e. "Non-Real Time Capture Mode).
- 20%: The purpose of this option is to encode at a much slower speed (i.e., compressed images are blurry, etc).

Note: The "VTR Shuttle" and "Automatic control of VTR" buttons are exclusive. This means that the user cannot select both buttons at the same time. "Automatic control of VTR" will encode at 48% speed. The "VTR Shuttle" allows the user to manually choose from one of the three speeds.

8 Job Manager Tab

The “Job Manager” tab allows the user to view, schedule, and reorder encoding jobs. Scheduling and reordering encoding jobs apply only when encoding from a file source. Use the Job Manager tab to view all relevant information pertaining to the encoding job. This applies to “jobs” from File Source and HD-SDI Sources. Scroll to the right side of the window to see all the information pertaining to a job (see Figure 35 below).

8.1 How to Schedule Multiple Jobs (File Source Only)

- From the “Job Manager” tab check the “Multiple Jobs” box (See Figure 35 below).
- Click the “Add Job” button - the new job will automatically be highlighted.
- Go to the “Source” tab and select the file to encode from.
- Select all the properties to apply to the job - usually all of the parameters that would normally apply (see Section 4.1) .
- Go to the “Job Manager” tab to view the information of the newly added job - the job will be assigned a number (i.e., “Job 2”).
- Repeat the steps above to continue adding jobs.

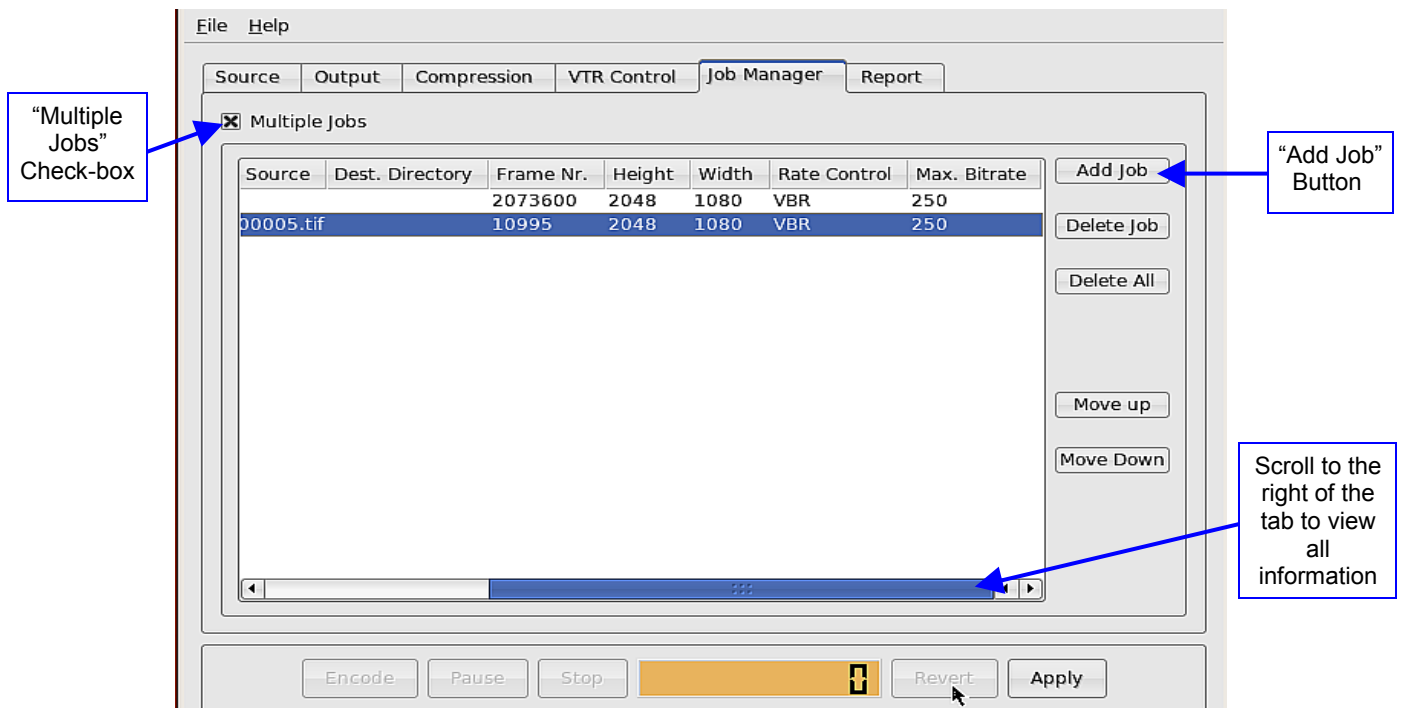


Figure 35: Job Manager Tab

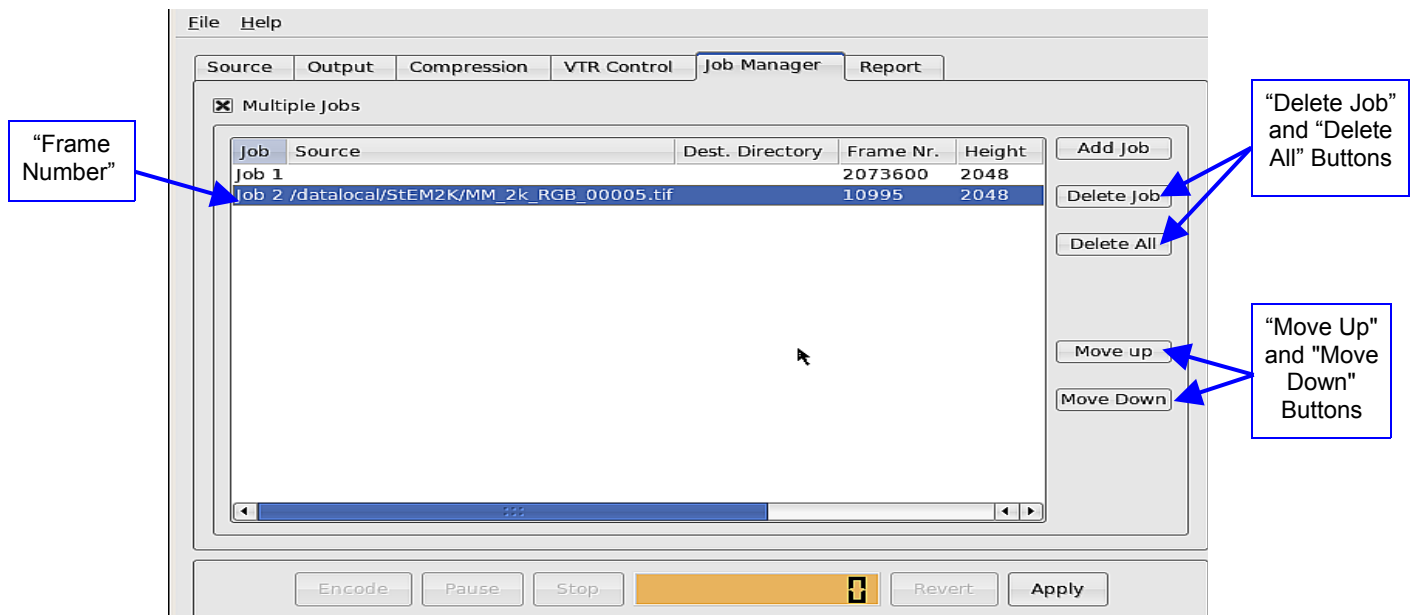


Figure 36: Job Manager Tab - Frame Numbers

Note: The “Frame Nr.”(see Figure 36 above) reflects the value of the “time-out” minus “time-in”. In other words, the number of frames included in the job to be encoded.

8.2 How to Reorder and Delete Jobs

- To reorder a job in the list click on the job and use the “Move Up” and “Move Down” arrows accordingly.
- The job will still keep the same number that was originally assigned to it (i.e., if reordering “job 3” to encode before “job 2”).
- The numbers assigned to the jobs will not change (see Figure 37 below).
- To delete a scheduled job click on the job to delete - it will be highlighted.
- Click the “Delete Job” button (see Figure 37 below).
- A window asking to delete the job will appear click “Yes”.

Note: This action cannot be undone.

- To delete all scheduled jobs click “Delete All”.
- A window asking to delete all the jobs will appear click “Yes” (see Figure 38 below).

Note: This action cannot be undone.

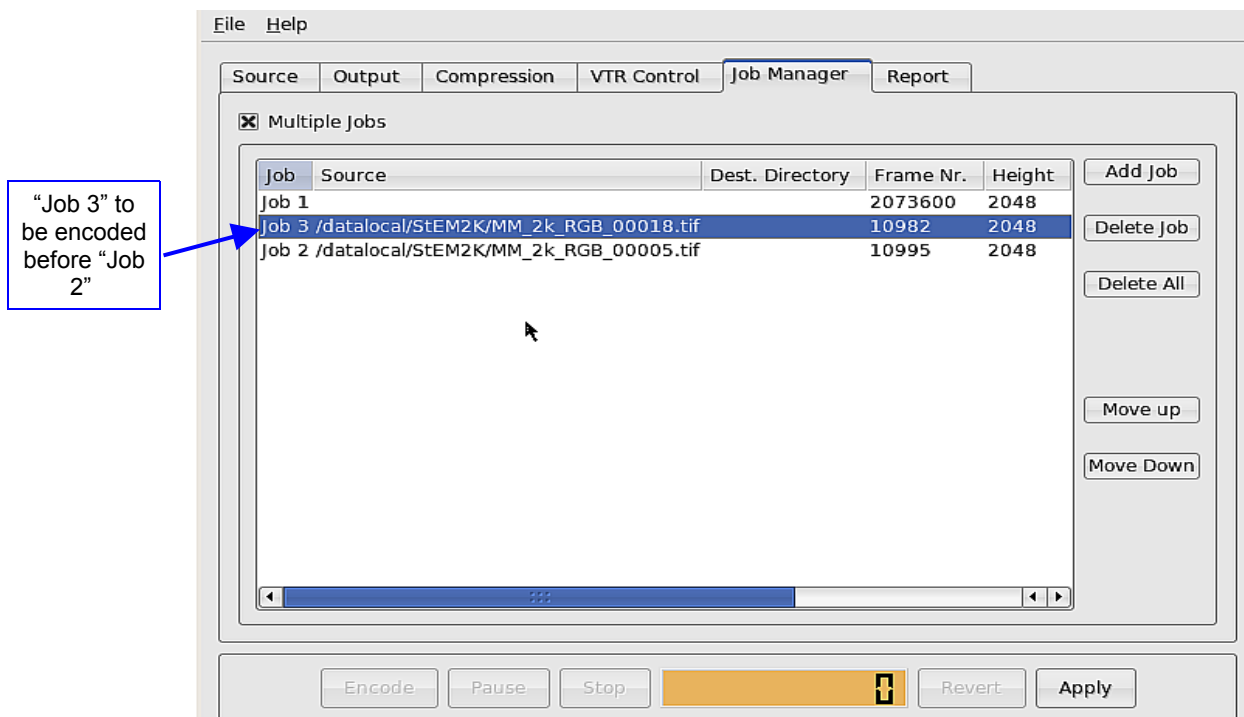


Figure 37: Job Manager Tab - Jobs Field

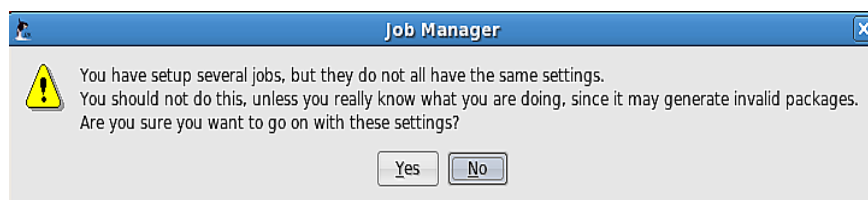


Figure 38: Window Asking User To Delete All Jobs

9 Report Tab

The primary purpose of the "Report" tab is to view all commands sent to the RAPID prior to, during, or after the encoding job. The "Report" tab is accessed from the RAPID Encoder GUI (see Figure 39 below). The parameters that are applied to the "job" will be displayed in the "Report" tab.

9.1 Heading Tab Functions

- Select the parameters to apply to the encoding job and click the "Apply" button.
- The "Destination Filename" will appear in the "Report" tab and the "Encode" button becomes enabled (see Figure 39 below).
- When modifying the parameters the "Encode" button is disabled and the "Apply" button is enabled again.

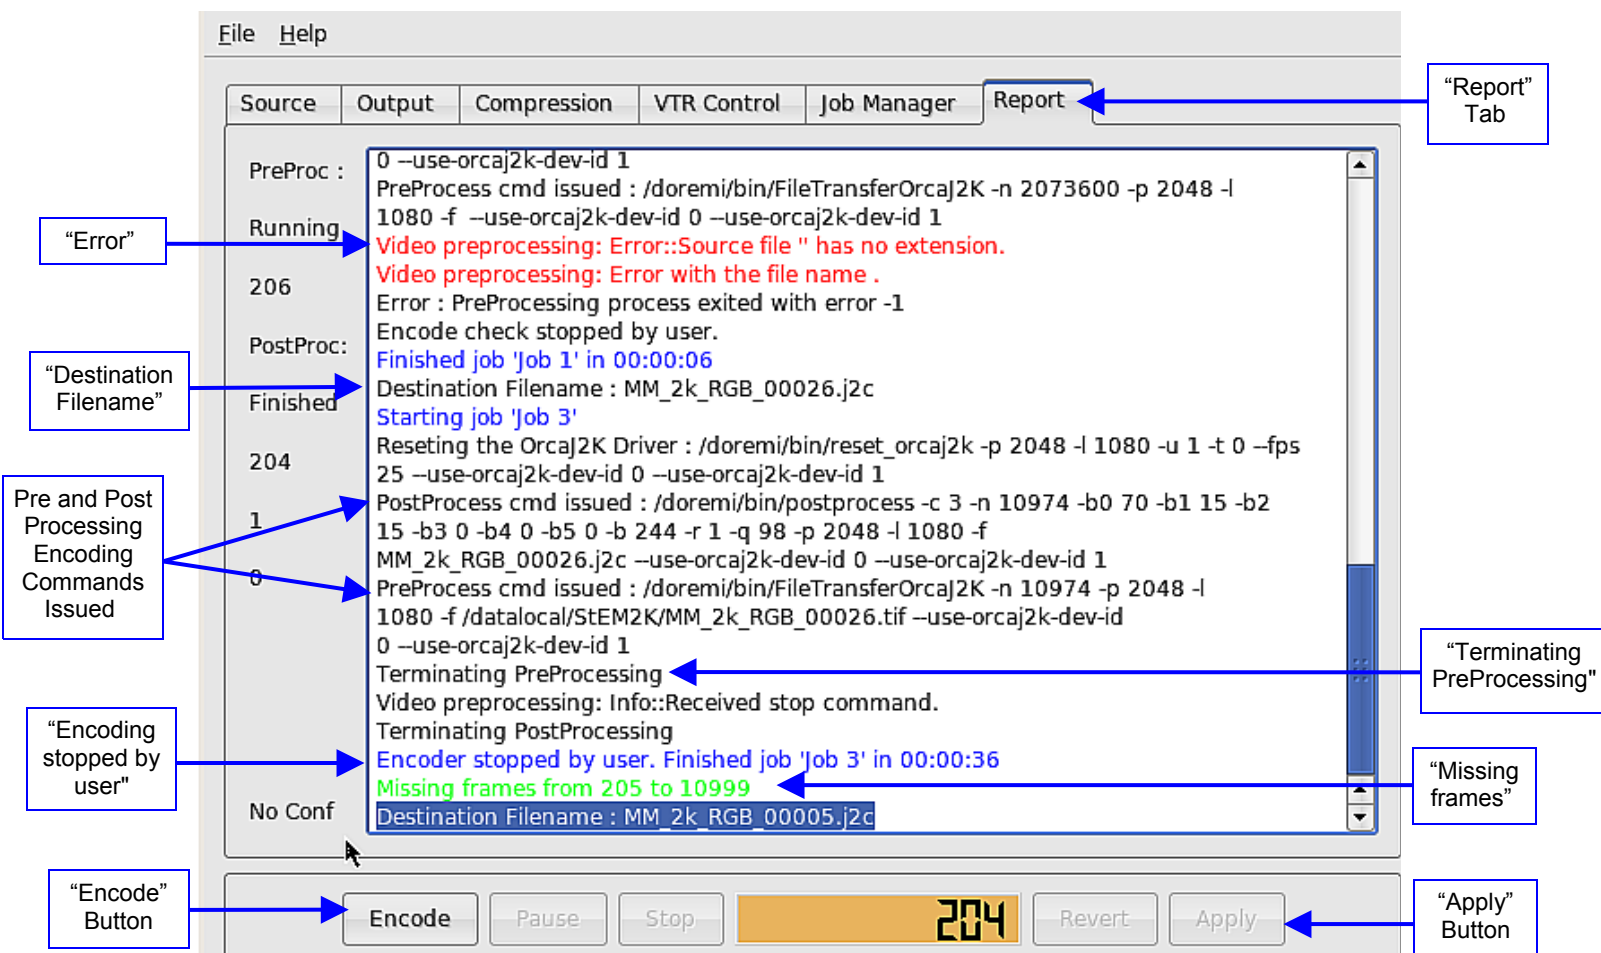


Figure 39: Report Tab

- The “Destination Filename” field displays the targeted file and its corresponding parameters (see Figure 39 above).
- If any error occurs prior, during, or after the encoding job the “Report” tab will list the error (see Figure 39 above).
- Pre and Post processing encoding commands issued to the RAPID will be displayed in the “Report” tab (see Figure 39 above).
- If user clicks the “Stop” button when the RAPID is encoding a “Terminating PreProcessing” message will appear. An “Encoder Stopped by User” message will appear afterward (see Figure 39 above).
- The RAPID will automatically check for any missing frames once a job is finished or interrupted while encoding. The “Report” tab will display a message stating “Missing frames from (i.e., 205-10999)” (see Figure 39 above).

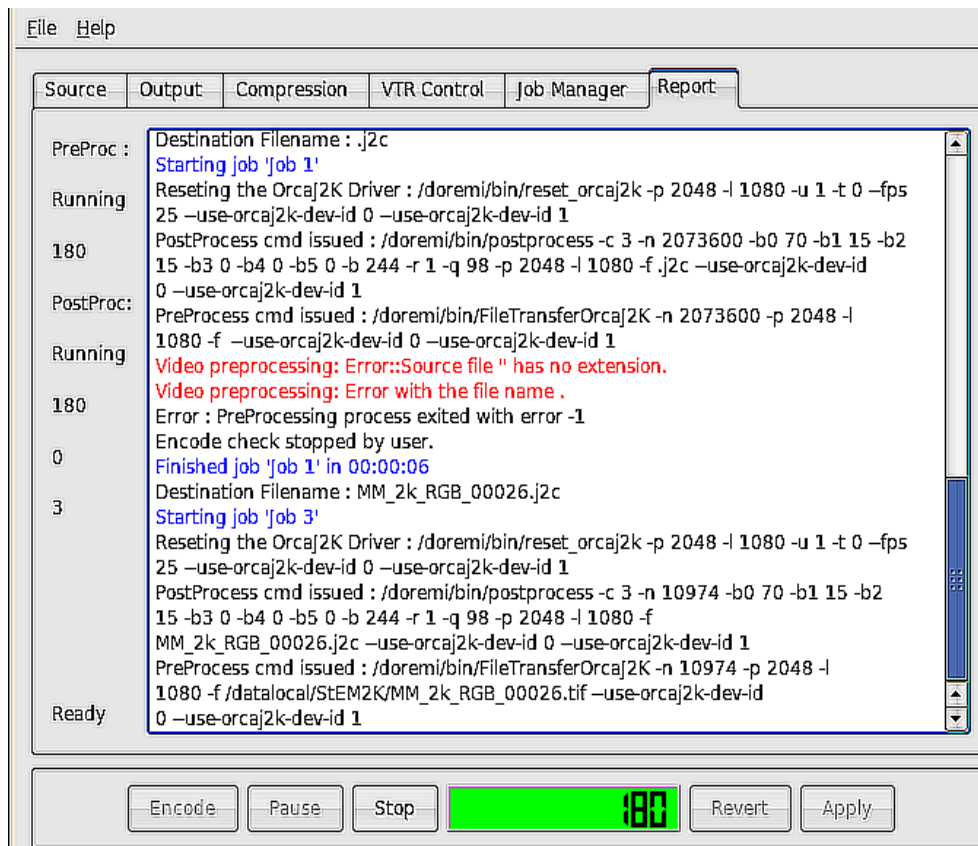


Figure 40: Report Tab

9.2 Saving Settings

Use the File Menu to "Save" or "Save As" the current settings into a file or to open a file with a saved setting.

The setting file contains all the settings for each job including the bitrate, video standard, source type (file or HD) and color space conversion. It contains all the jobs that were defined when the settings are saved.

9.3 Preferences Menu

The server automatically sends commands to the RAPID during the encoding process. These commands can be changed from the "Preferences" window (see Figure 42 below). It is not recommended to change these default settings unless the user understands the implications.

9.3.1 How to Change the Default Settings from the Preferences Window

- From the "RAPID Encoder GUI", go to the "File" menu and select "Preferences" (see Figure 41 below).
- The "Preferences" window will appear (see Figure 42 below).
- Important default commands are as follows:
 - "Src I/O Timeout" (source): This command applies only when encoding from a File Source. The default is set at 5 seconds. This command automatically tells the server to look for another file to encode for only 5 seconds after the last frame in the image sequence.
 - To change the default settings, un-check the box next to the "Src I/O Timeout" option and use the up and down arrows to change to the desired seconds.
 - "VTR Pre-Roll": This command will automatically locate the first frame/"time-in" of the image sequence to be encoded. The Pre-roll is set at 5 seconds by default. This means that the server will automatically locate 5 seconds before the first frame to be encoded and sync the server with the source.
 - To change the default setting un-check the box associated with the "VTR Pre-roll" option and use the up and down arrows to change to the desired seconds.

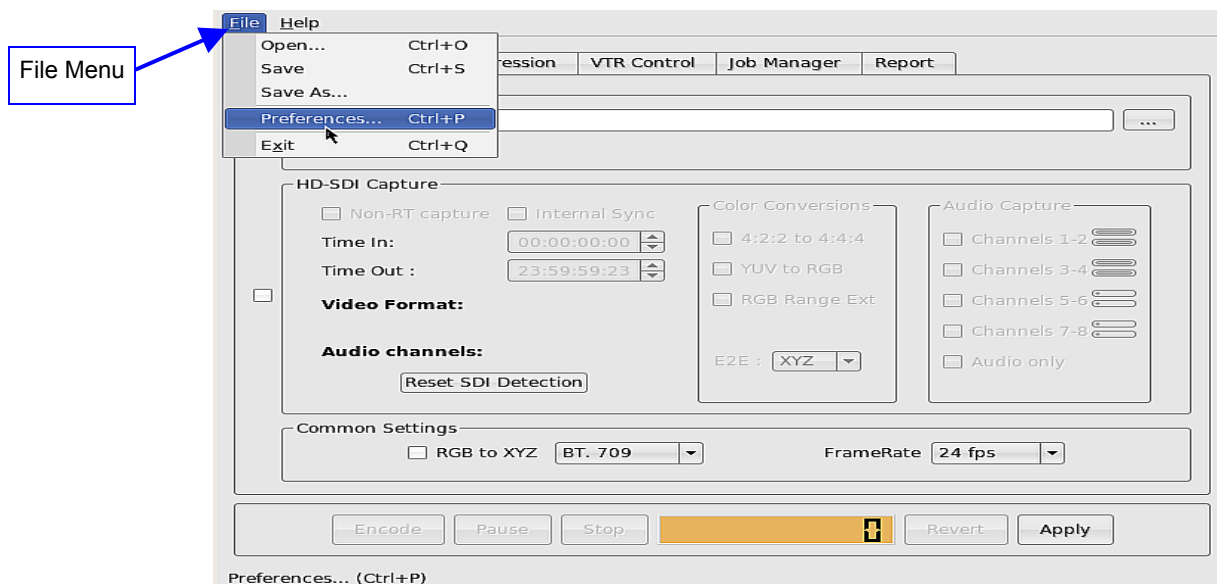


Figure 41: RAPID Encoder GUI - File Menu

Note: It is recommended to leave the other automatic commands at their default settings. If the user chooses to change these settings then follow the steps above.

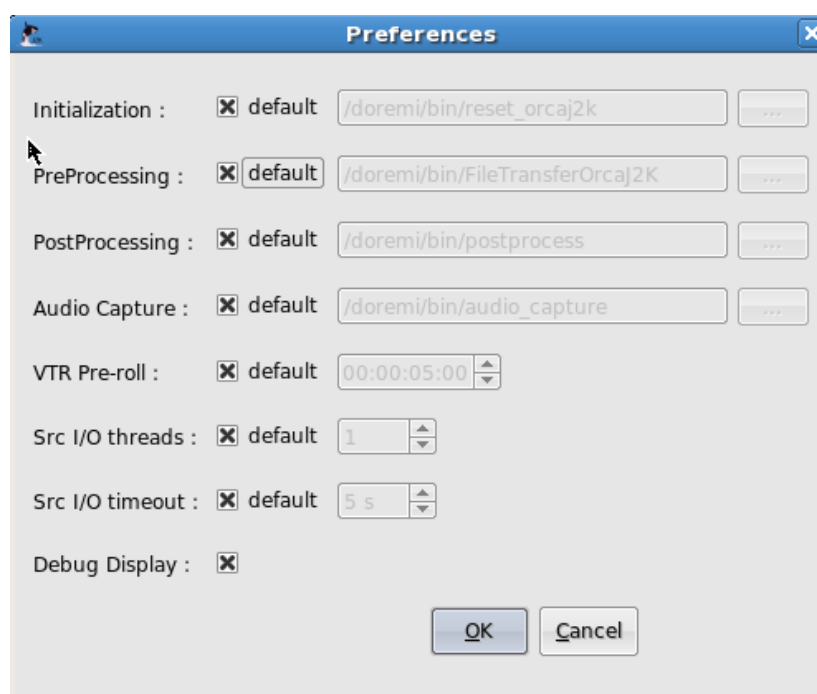


Figure 42: Preferences Menu

10 RAPID Player

10.1 Overview

The RAPID Player is meant to be used as playback of compressed ("j2c") and uncompressed ("tiff") files. However, the RAPID Player is also useful to preview what the images look like on screen (resolution, color, sharpness, etc.) The RAPID Player and Encoder serve different functions. The user must use one to the exclusion of the other (i.e. neither the Encoder or Player can be launched at the same time).

10.2 Presentation

The RAPID Player consists of three tabs: Editor, Playback, and Report.

- Editor tab: Use this tab to define the source parameters of each playback. Each reel consists of one "j2c" file and may consist of some or no audio files. The "Editor" tab is made up of two sections, "Reel Manager" and "Reel Composition".
- Playback tab: Use this tab to playback the reels that were created in the "Editor" tab.
- Report tab: Use this tab to view all information that is relevant to the status of the playback (reel parameters, warning messages, and errors).

10.3 Supported Formats

The RAPID Player outputs video on its HD-SDI dual link output and embeds audio in the HD-SDI stream. To view the content for playback, the user must have the RAPID connected to a monitor screen.

The RAPID supports real-time playback of unencrypted/compressed DCI-compliant JPEG-2000 files and audio WAV files. Playback of uncompressed files is also supported (e.g. TIFF, DPX, etc.). Real-Time or Non Real-Time playback of uncompressed files depends on whether the files are coming from an external drive (i.e., a usb) or a RAID. If the files are on an external drive playback in Real-Time is not available. If the files are on a RAID with 6 drives playback in Real-Time is available (not available on a RAID with 3 drives).

10.4 Launching the RAPID Player GUI

- Launch the RAPID Player GUI by double-clicking on the icon on the desktop (see Figure 43 below).

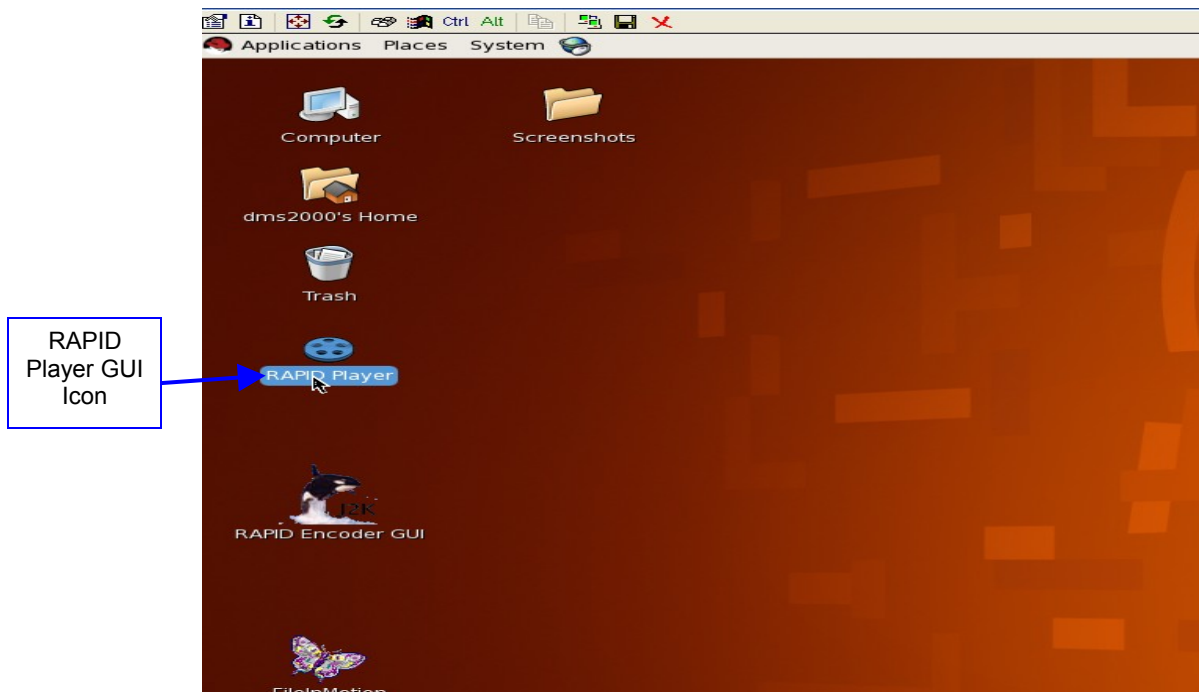


Figure 43: RAPID Player GUI Icon

10.5 Editor Tab

Use this tab to define the source parameters of each reel. Each reel consists of one “j2c” file and some or no audio files. The “Editor” tab is made up of two sections, the “Reel Manager” and “Reel Composition” (see Figure 44 below). The user must connect the RAPID to a monitor in order to view the contents for playback.

10.5.1 Reel Composition

- For each reel select the first video file of the sequence in the 'Video' field.
- User can choose up to 8 audio files (up to 16 audio channels).
- Click the “browse” button and select the first frame of the video (see Figure 44 below).
- The “Audio Entry Point” box is used to synchronize audio and video frames.

- The user must determine the point at which the audio first begins to come in.
- This is done by actually playing the files first and listening to detect the “2popleader”.
 - The “2popleader” is a precursor to the first audio frame. User will hear a beep noise, usually two seconds prior to the first audio frame. Once the first audio frame is detected the user must set this “audio entry point” to sync with the first video frame.
 - For example: if the first audio file begins at frame number 8, the “entry point” has to be set to 8 (see Figure 44 below).
- When playing back “j2c” files the framerate must be set at: 24fps, 25fps, or 30fps.
- Set the appropriate setting for each reel from the drop-down menu (see Figure 44 below).
- When playing back “tiff” files the frame rate settings are irrelevant.
- To allow a seamless transition between reels all reels must have the same characteristics: i.e., the same number of audio channels, same type of video file (compressed/uncompressed), same video characteristics, etc.

Note: The user may still create reels with different characteristics. The difference is that the transition in playback mode will not be as smooth going from one reel to another reel. If the user try's to play these types of reels, then the user will get an “incompatible settings” error message (see Figure 45 below). The message will say that the user created a playlist with several reels with different settings. The user will then be asked to continue. Click yes to continue (optional).

10.5.2 Reel Manager

- To edit the contents of any reel click anywhere on that particular reel from the “Reel Manager” field (i.e., click on “Reel 1”).
- The contents of that reel will be displayed in the “Composition Reel” field - any modifications will be applied immediately.
- From the “Reel Manager” field the user can "Add", "Delete Reel", or "Delete All" reels (see Figure 44 below).

Note: Deleting a reel cannot be undone.

- Scroll all the way to the right of the “Reel Manager” window to see the file name and entry points of each file in the reel (see Figure 44 below).

- When the user is playing back a reel the "Editor" tab will be gray and the reel that is being played back will be highlighted in blue (see Figure 46 below).

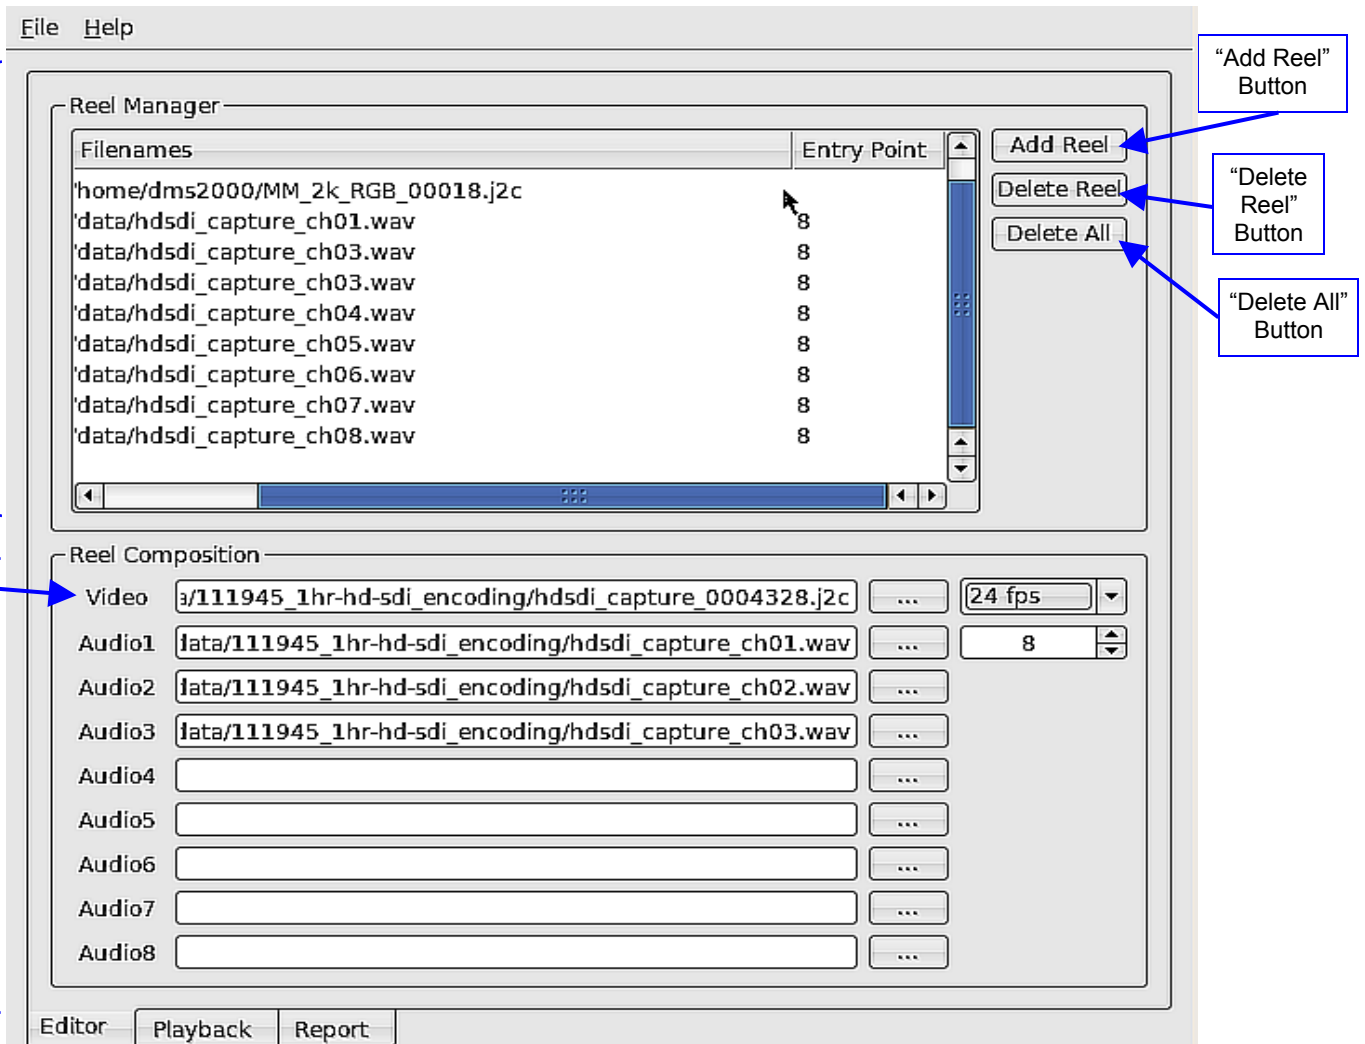


Figure 44: Reel Manager Field With Video and Audio Files

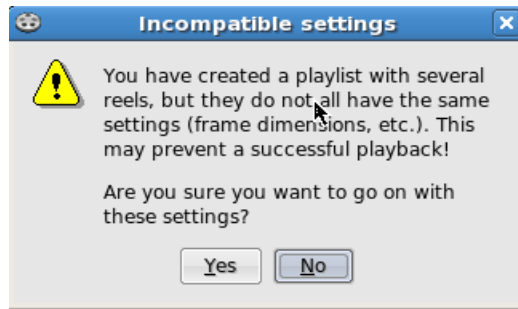


Figure 45:"Incompatible settings" Error Message

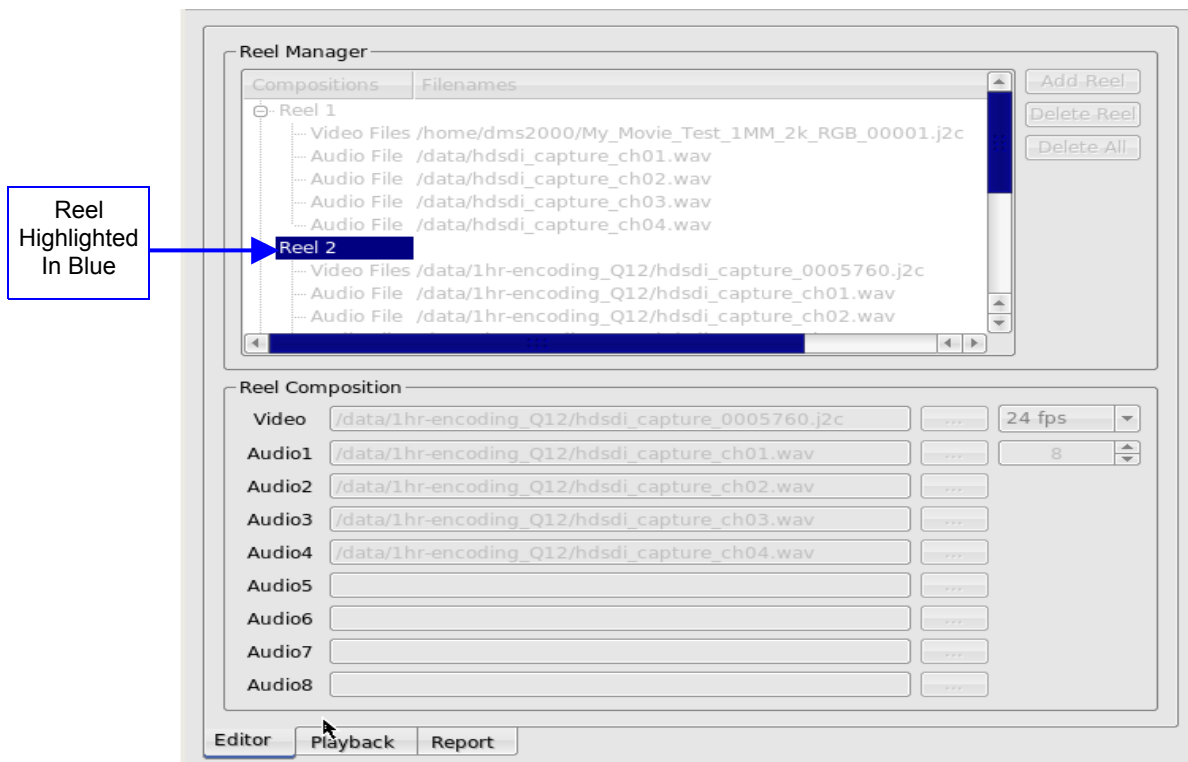


Figure 46: Reel Manager Field - Video Highlighted In Blue

10.6 Playback Tab

Use the "Playback" tab to play and preview reels.

10.6.1 Playback Functions

- Once the user has created the reels in the "Editor" tab, go to the "Playback" tab.
- The reels ready for playback will be listed in the white box on the right part of the window (see Figure 47 below).
 - An orange circle indicates that the reel has already been played back.
 - A green circle indicates that the reel is currently being played back.
 - If there is nothing next to a reel it means that the reel is waiting to be played.
- Use the navigation buttons: Play, Stop, Pause, Fast Forward, and Rewind to control the playback (see Figure 47 below).
- To skip to the next or previous reel, click the Pause button and then select "Go to next Reel" or "Go to previous Reel" buttons (see Figure 47 below).
- To go to the next frame click the "Previous Frame" or "Next Frame" buttons (see Figure 47 below).
- Use the "Locate" button to skip to the exact frame.
- Enter the frame number or use the up and down arrows and then click the "Locate" button.
- There is a "Display Mode" button in the "Playback" tab This feature allows the user to choose to see the frames that are being played (i.e., either by frame number or by timecode).
- There is a "RGB to XYZ" conversion box in the "Playback" tab. The user must have a license to use this feature during the encoding process. For more information on this feature and how to obtain a license contact Doremi Tech Support at support@doremicinema.com
- This feature reproduces the conversion of RGB to XYZ during the encoding process and is useful to have during playback to ensure the quality of the files.
- Audio playback is disabled when video files are uncompressed and playback of audio/video on MXF files is not supported.

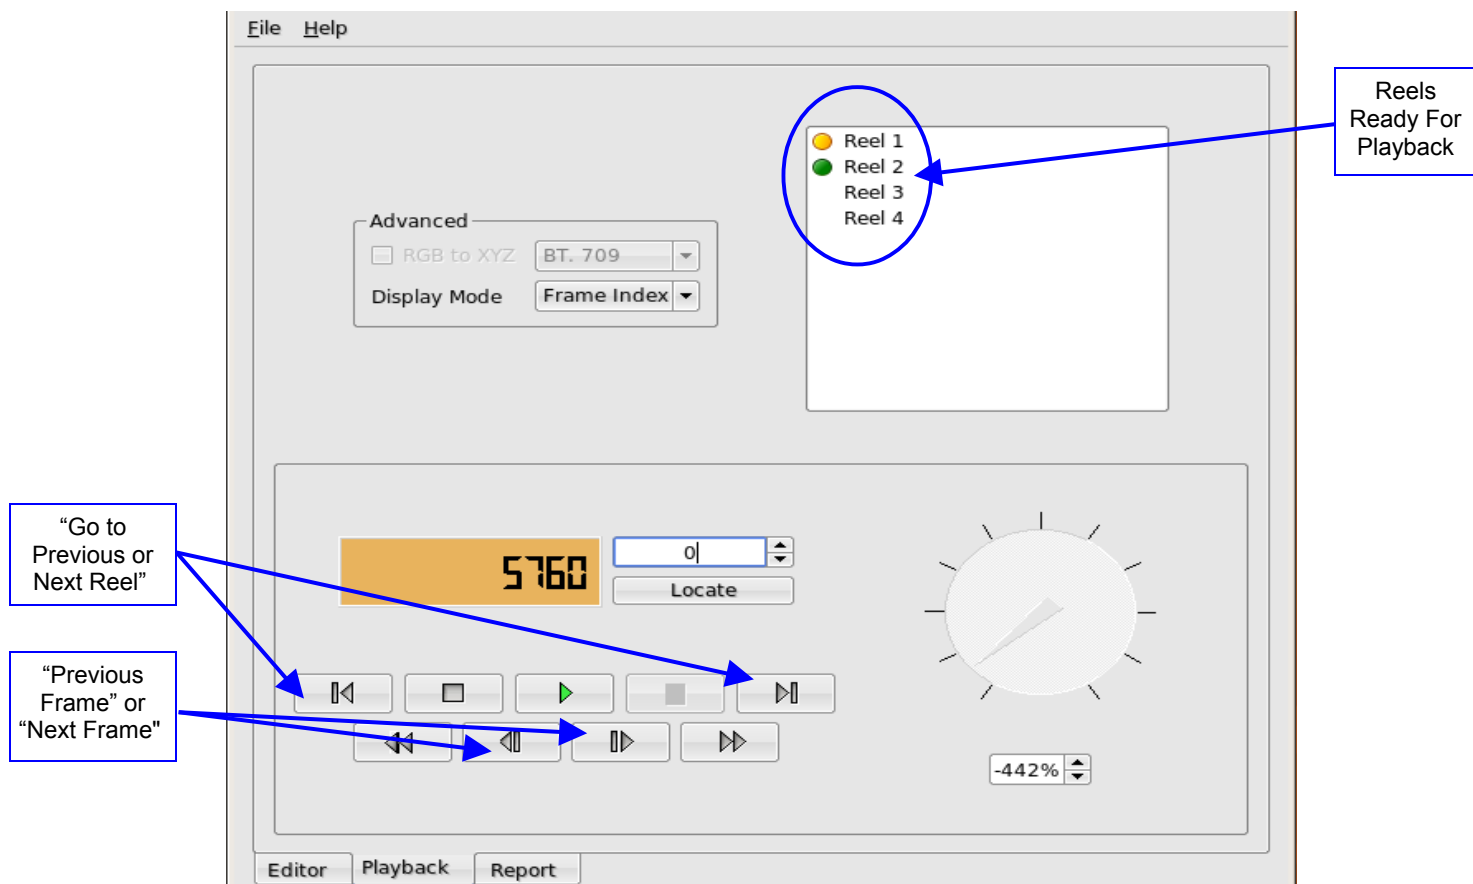


Figure 47: Playback Functions For Reels

10.7 Report Tab

Use this tab to view all information that is relevant to the status of the playback such as: reel parameters, warning messages, errors encountered during playback, etc.

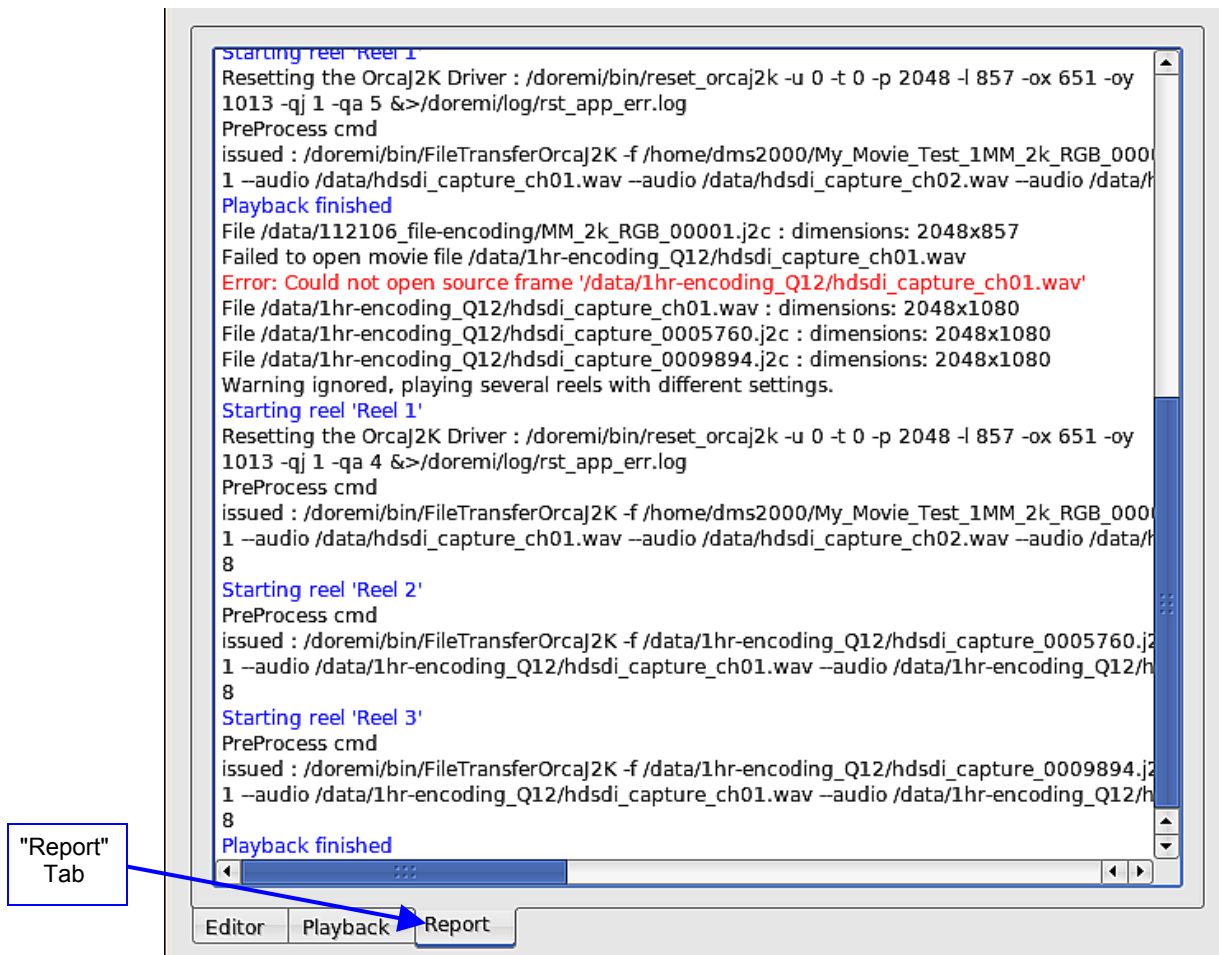


Figure 48: RAPID Player GUI - Report Tab

11 Software and Firmware Upgrades

Software and Firmware upgrades are provided by Doremi Labs. There are several ways that the user can perform the upgrade which includes, but is not limited to; USB, DVD, and FTP. The upgrade package has to be copied into the directory “/doremi/etc/rc.once” and the user must then reboot. The most common way to upgrade the software and firmware is from a USB.

11.1 How to Perform a Software or Firmware Upgrade From a USB

- Once the user has received the upgrade package from Doremi Labs, copy the package onto a USB drive.
- Plug the USB drive into the RAPID USB port.
- From the Linux desktop double-click on the “dms2000's Home” icon (see Figure 49 below).

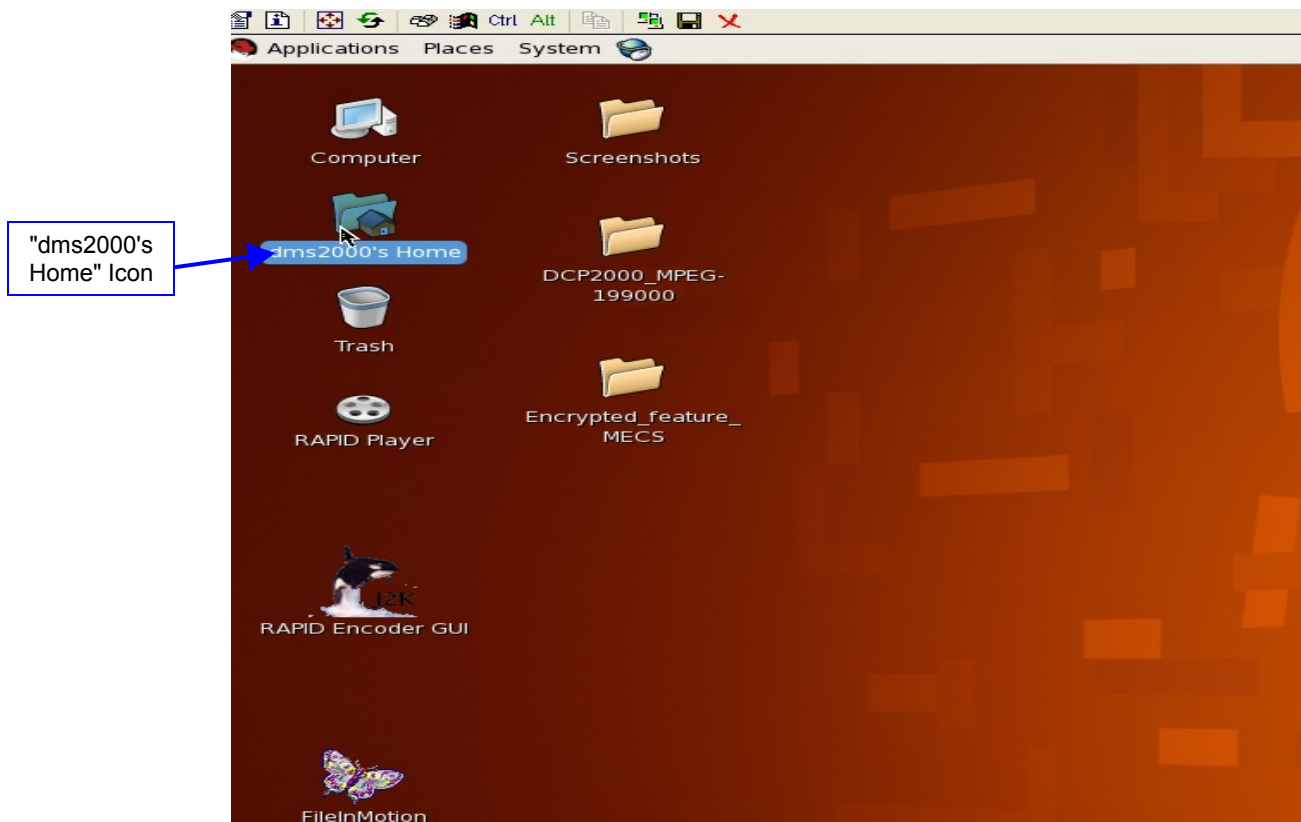


Figure 49: Linux Desktop - "dms2000's Home" Icon

- User will be prompted to the “Home Folder” (see Figure 50 below).
- Double-click on “File System” (see Figure 51 below) and scroll all the way to the right until the "doremi" folder appears.
- Double-click on the “doremi” folder (see Figure 52 below).
- User will be prompted to the “etc” folder and then double-click on this folder (see Figure 53 below).
- Double-click on the “rc.once” folder (see Figure 54 below).
- User must drag and drop or copy and paste the upgrade package into the “rc.once” folder.
- After the update is copied into the “rc.once” folder reboot the unit.

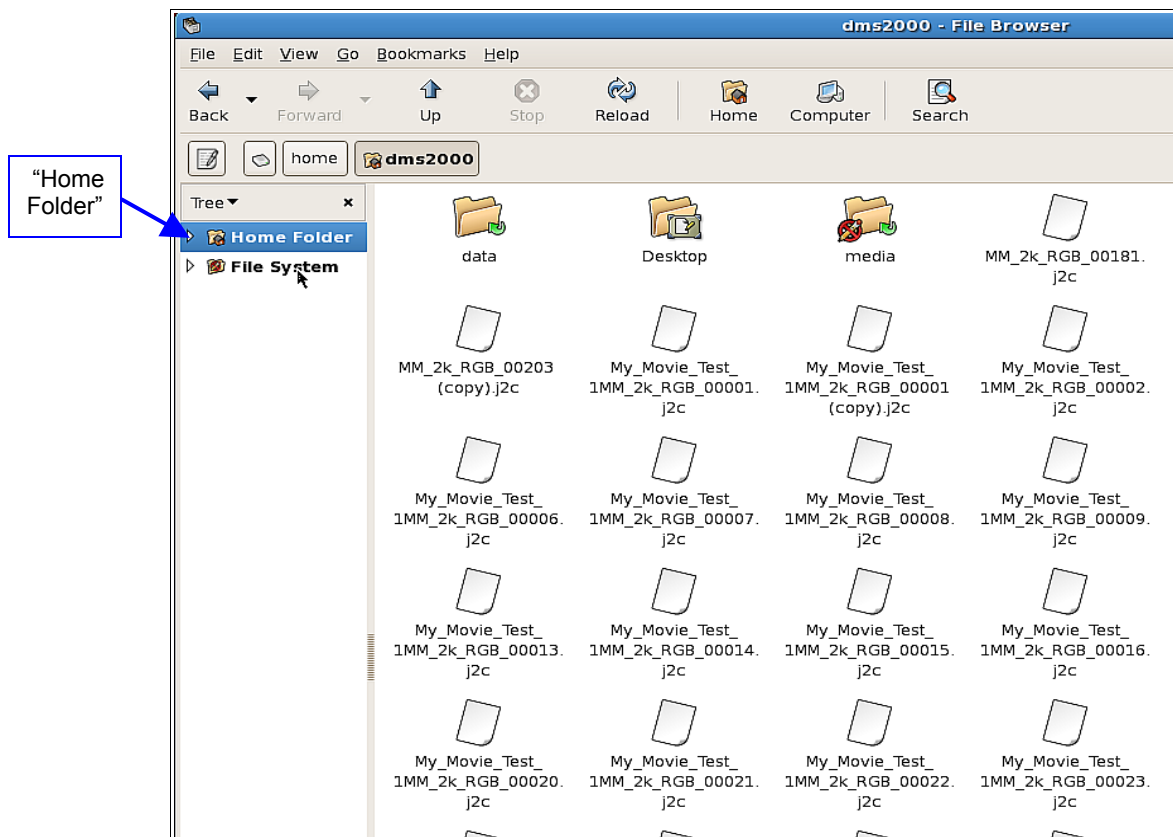


Figure 50: File Browser - "Home Folder"

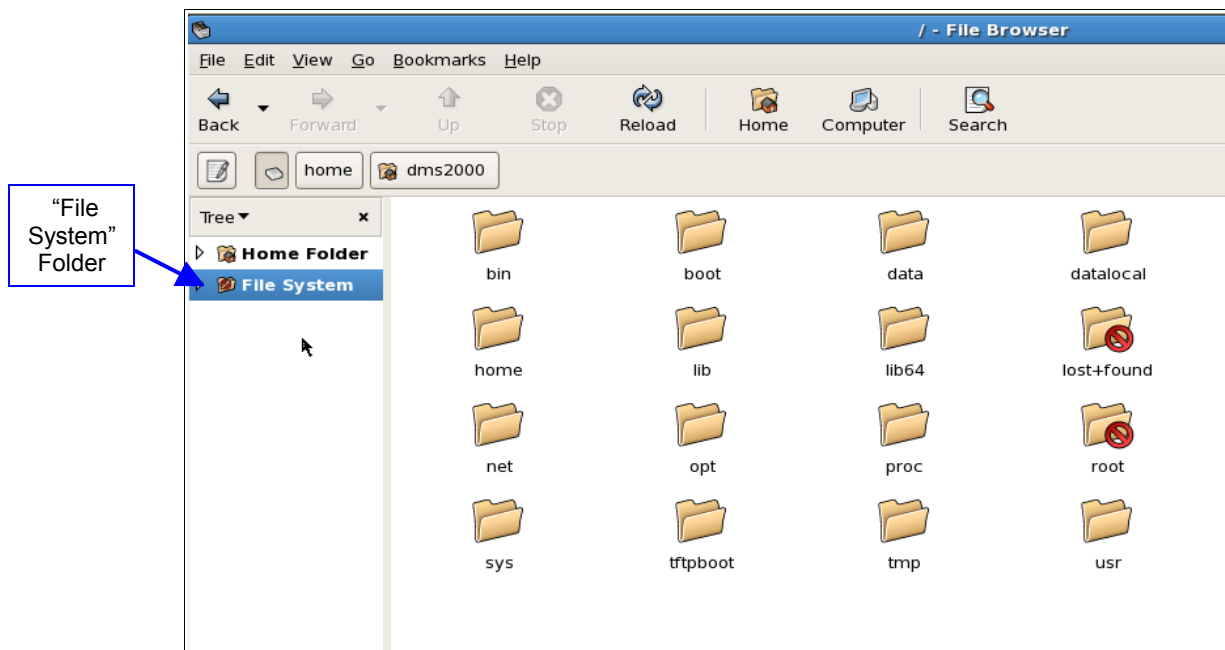


Figure 51: File Browser - File System Folder

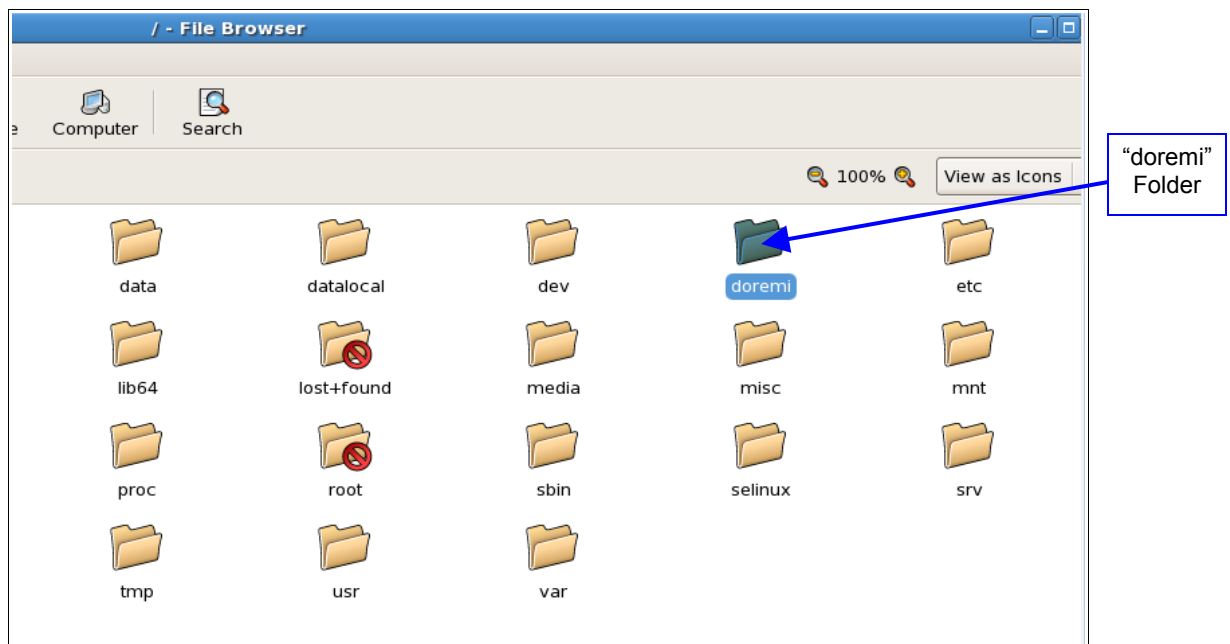


Figure 52: File Browser - “doremi” Folder

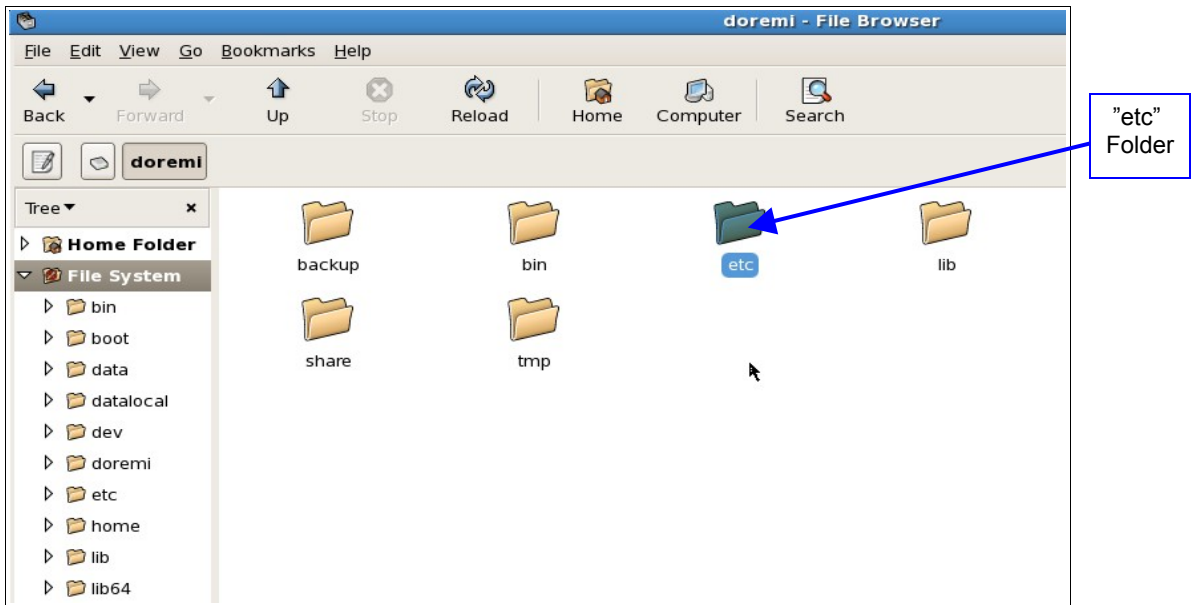


Figure 53: File Browser - "etc" Folder

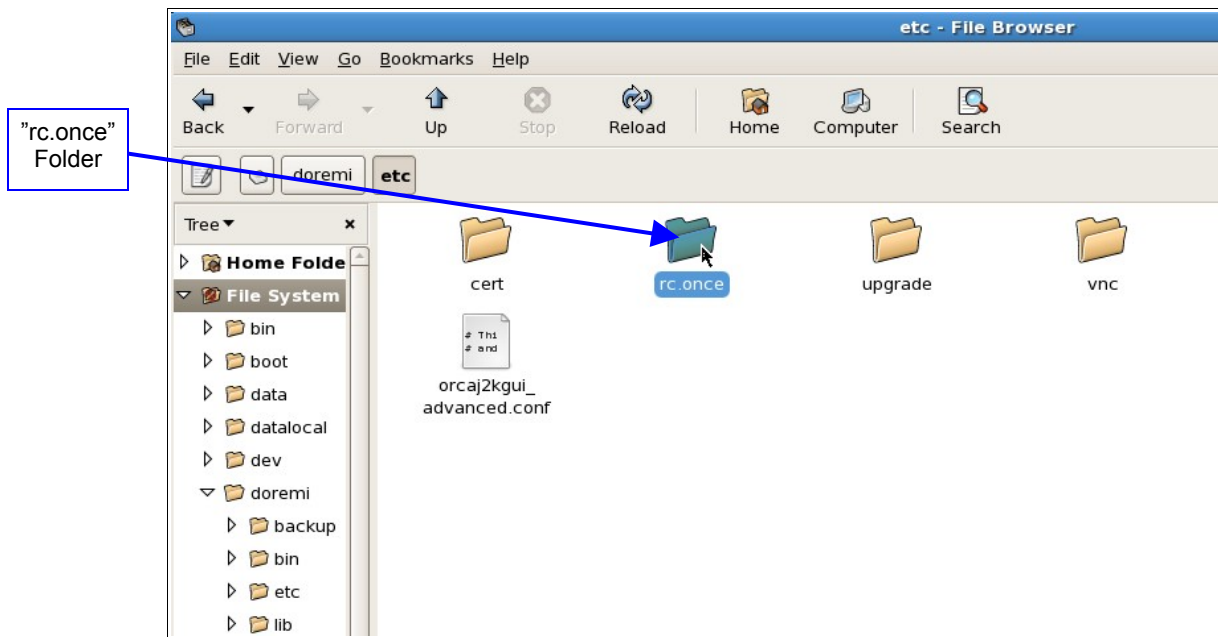


Figure 54: File Browser - “rc.once” Folder

12 File Transfer Protocol (FTP)

12.1 *FTP Server on RAPID*

Use the FTP (File Transfer Protocol) client on the RAPID to transfer information and data to and from any unit. The user can connect to the FTP directory from any computer on the same network using the FTP client with the following username and password:

- Username : dms2000
- Password : doremi
- The default ftp directory is “ /home/dms2000”.

12.2 *FTP Client on RAPID*

Another way to connect to a FTP server is with the Nautilus application.

- Click on "dms2000's home icon (see Figure 49 above) and type the following address:
 - ftp://username:password@IP address
- The username and password are the same that are used for the FTP server.
 - Example: If user wants to connect to a DCP-2000 unit to ingest, the username would be "ingest" and the password would be "ingest" and then the IP Address of that unit.
 - Example: ftp://ingest:ingest@10.10.1.33 (see Figure 56 below).

There is a link to the “/data” directory in the dms2000 home folder. Double-clicking on the “dms2000's Home” icon from the desktop will prompt the user to the dms2000 home folder (see Figure 55 below).

- Some FTP clients like Filezilla under Windows recognize this and allow access to “/data”. Some FTP clients like Internet Explorer under Windows do not recognize this and will not allow user to access “/data”.
- Another way of accessing the “/data” directory is by double-clicking on “Computer” from the desktop and then entering the “username:password@IpAddress” in the “Location” field.

Note: The easiest way to connect to the FTP directory is by using “gFTP”. See Section gFTP Server on RAPID below on using a gFTP client on the RAPID.

Home Folder
for "dms2000"

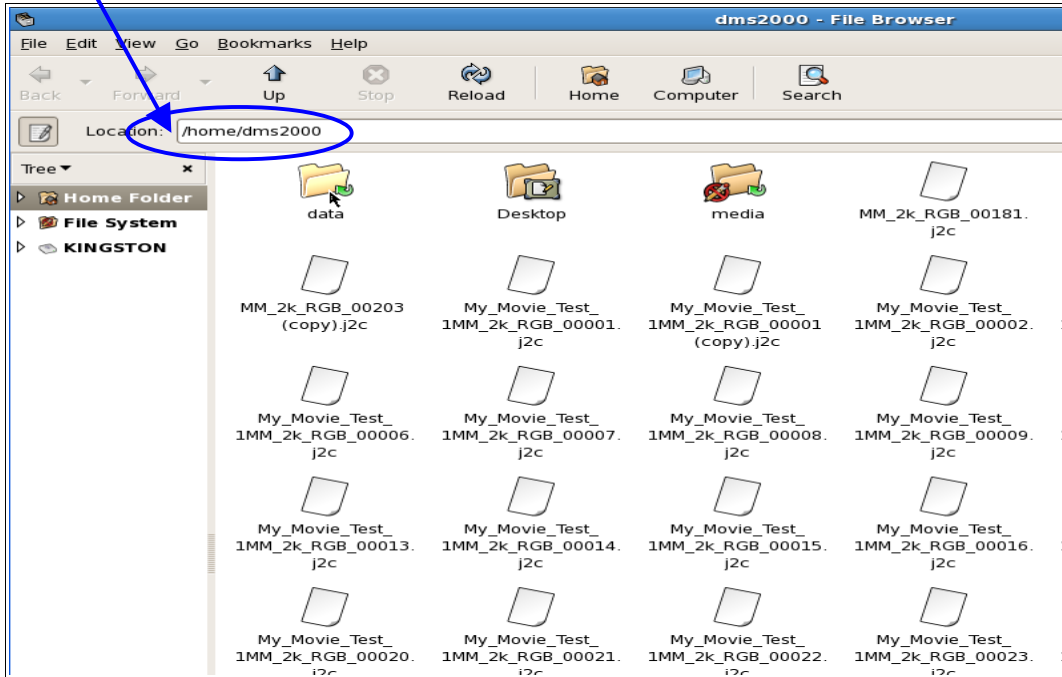


Figure 55: Home Folder - "dms2000"

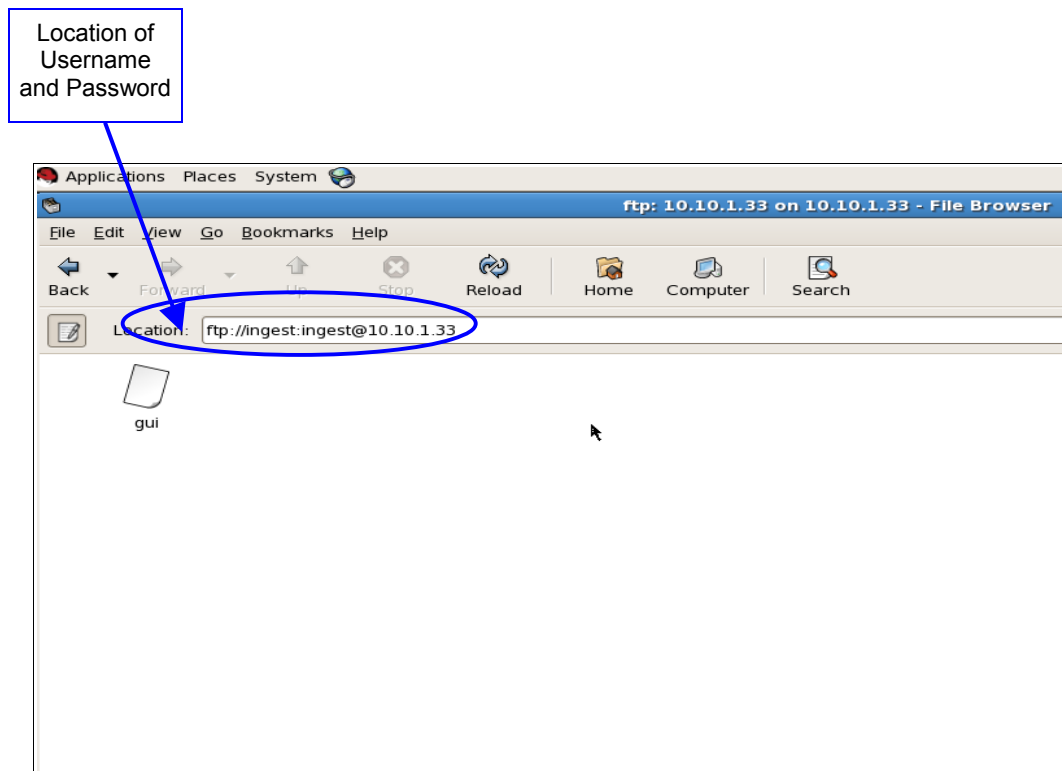


Figure 56: Example of Username and Password Ingest

12.3 gFTP Server on RAPID

The "gFTP" is a free and open source multi-threaded FTP client. It is most used on Unix-like systems like Linux and Mac OS X. It includes both a GUI (which utilizes the GTK+ (GIMP Toolkit) and a command-line interface.

12.3.1 How To Access a "gFTP" Client From the RAPID

- From the Linus desktop go to "Applications".
- Click "Internet" and then select "gFTP" (see Figure 57 below).
- User will be prompted to the "gFTP" GUI (see Figure 58 below).
- Enter the IP address of the unit in the "Host" field (see Figure 58 below).
- Enter the "Username" and "Password" that corresponds to the unit.
- This will allow the user to access and transfer data from the director.

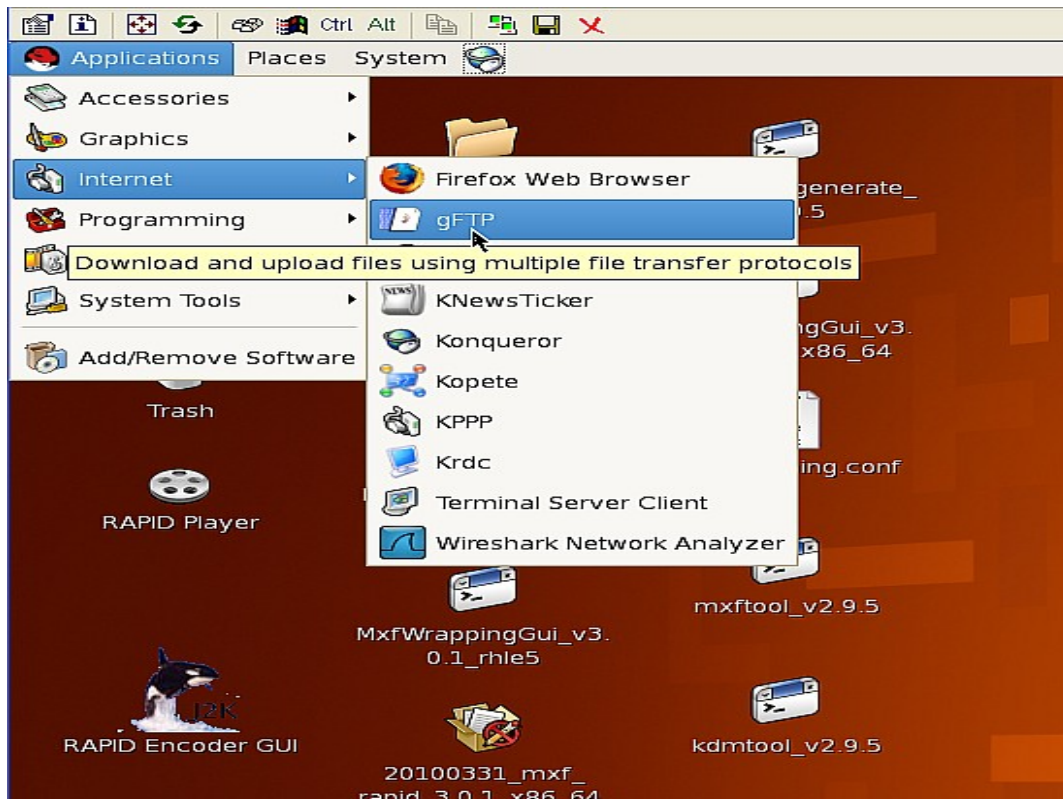


Figure 57: gFTP Location

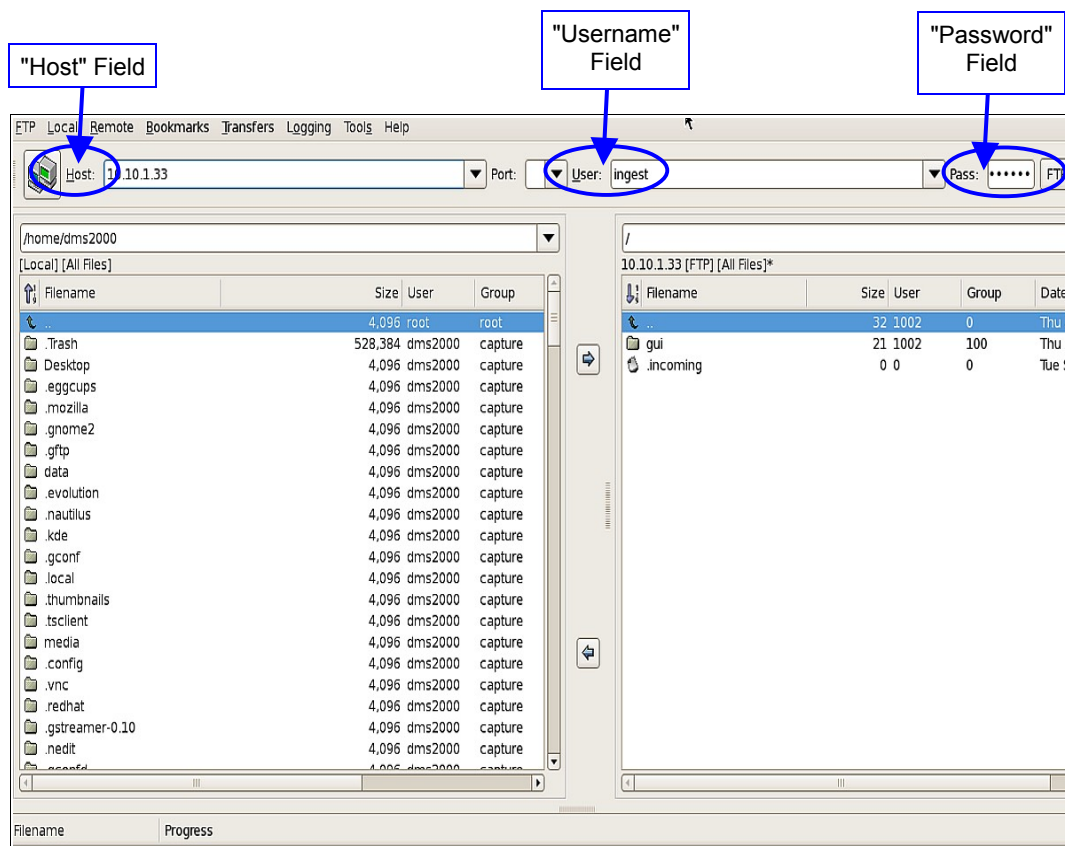


Figure 58: "gFTP" GUI Window

13 Network File System (NFS)

13.1 *Setting an NFS Server*

If the user wants to share a directory from the RAPID with NFS, the user will need to allow access to that directory for a specific machine. The RAPID should have the NFS support enabled and running.

13.1.1 How To Access NFS From a Linux Desktop

- From the “System” tab go to “Administrator”.
- Click “Server Settings” (see Figure 59 below).
- Click on “NFS”.
- User will be prompted to the “NFS Server Configuration” window (see Figure 60 below).
- If user wants to edit an existing NFS directory click on the directory to edit.
- Click “Properties”.
- User will be prompted to the “Edit NFS Share” window (see Figure 61 below).

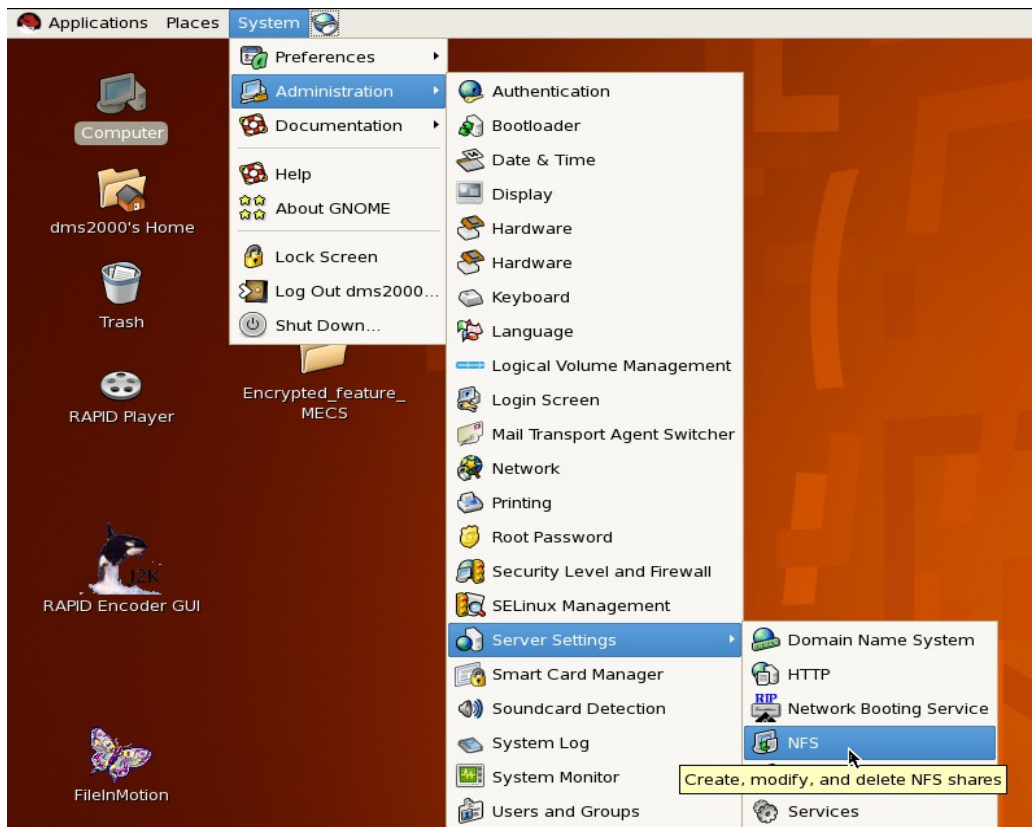


Figure 59: Linux Desktop - System Tab

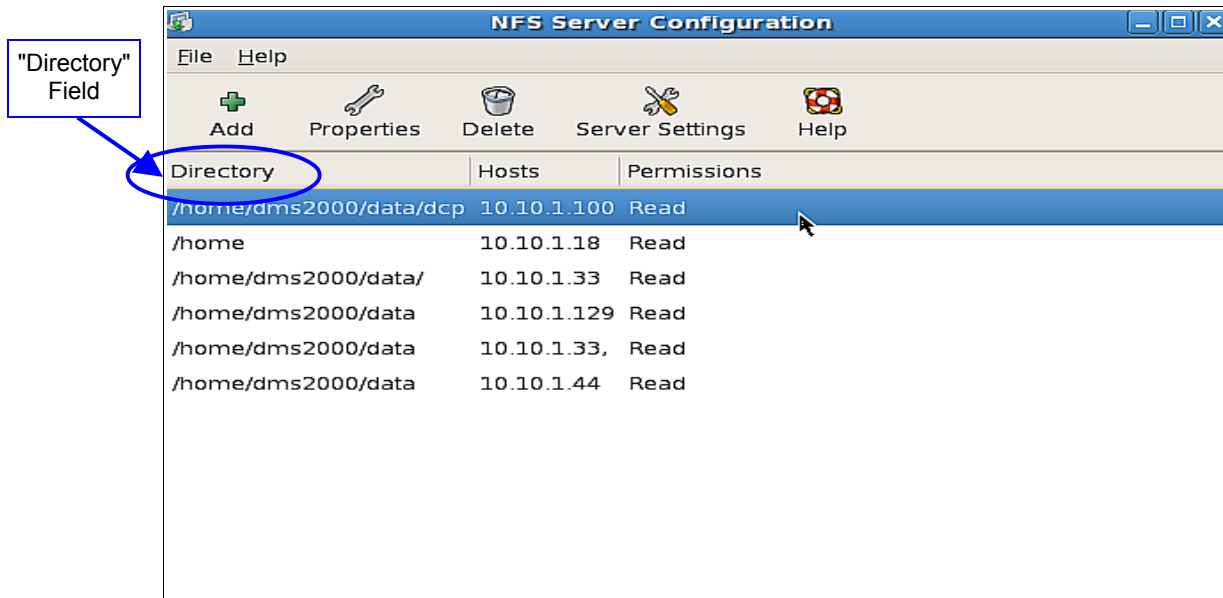


Figure 60: NFS Server Configuration Window

Note: It is recommended that the user use only the “Basic” tab for editing purposes and leave the default settings on the “General Options” and “User Access” tabs as they are. If necessary, see the figures below for a list of the options that can be selected from these tabs.

- From the “Basic” tab the user can change the IP Address (i.e. host).
- Change user permissions (i.e., read only or read and write).
- Change the directory path or create a new directory path from the “browse” button.

Note: The user can have more than one host/IP Address.

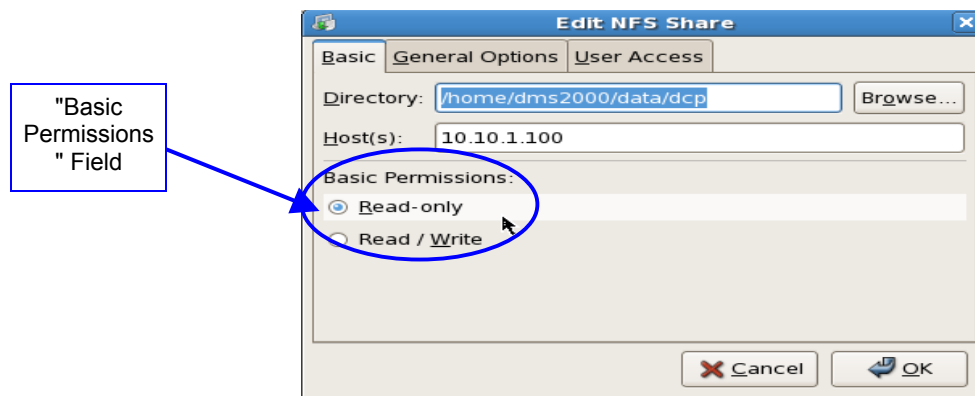


Figure 61: Edit NFS Share Window - Basic Tab

- The following are the default settings on the “General Options” tab:
- “Sync write operations on request”.
- “Hide filesystems beneath”.

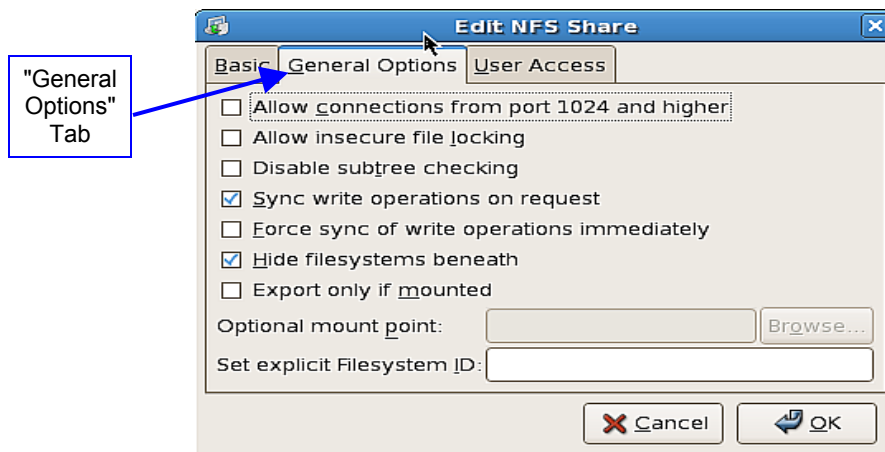


Figure 62: Edit NFS Share Window - General Options Tab

- From the “User Access” tab the user can change any of the following settings (see Figure 63 below).
- By default none of the options are selected.

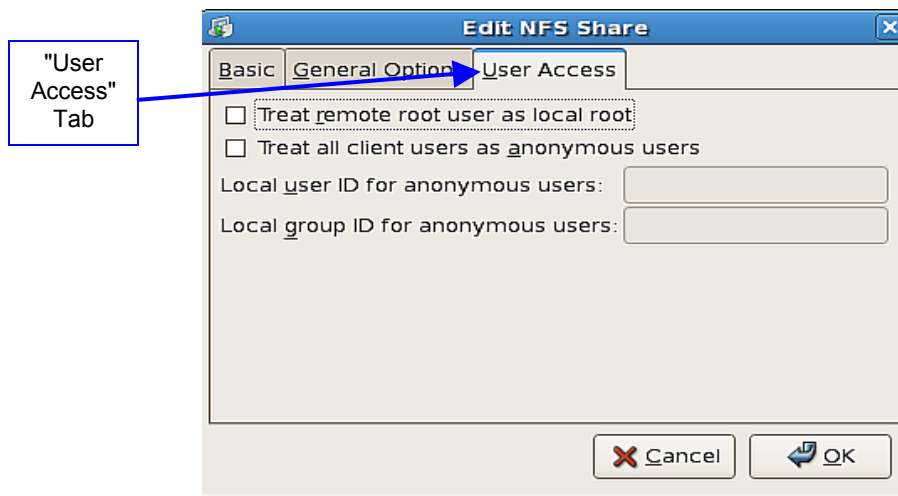


Figure 63: Edit NFS Share Window - User Access Tab

13.2 Setting an NFS Server on the Client

On the client machine, the user needs to mount the NFS shared directory. On a command line while logged in as "root", do the following to mount the NFS shared directory:

- Type: **mount 192.168.100.001:/data/dcp <space> /mnt/nfs** and then press "Enter".

Note: The above is only an example, where:

- The number characters represent the IP Address of the RAPID.
- The "/data/dcp" represents the directory path in the RAPID.
- The "/mnt/nfs" is the path to the shared directory.
- To unmount the NFS shared directory do the following:
- Type: **umount <space> /mnt/nfs** and then press "Enter".

Note: If the /mnt/nfs directory does not exist then the user needs to create it first. Refer to <http://nfs.sourceforge.net/nfs-howto/> for more information on setting up NFS shares.

14 Samba Directory for Windows

14.1 *Setting a Server*

14.1.1 How To Create A Samba Shared Directory For Windows Users

- From the Linux desktop go to “System”.
- Click on “Administration”.
- Click on “Server Settings” and then choose “Samba” from the list.
- User will be prompted to the “Samba Server Configuration” window (see Figure 65 below).
- To generate a new "Samba User" click on “Preferences” (see Figure 65 below).
- Click on “Samba Users” and then click “Add User” (see Figure 66 below).
- User will be prompted to the “Create New Samba User” window (see Figure 67 below).
- Select “dms2000” as the Unix and Windows username is "doremi" and the Samba Password is “doremi” (see Figure 67 below).

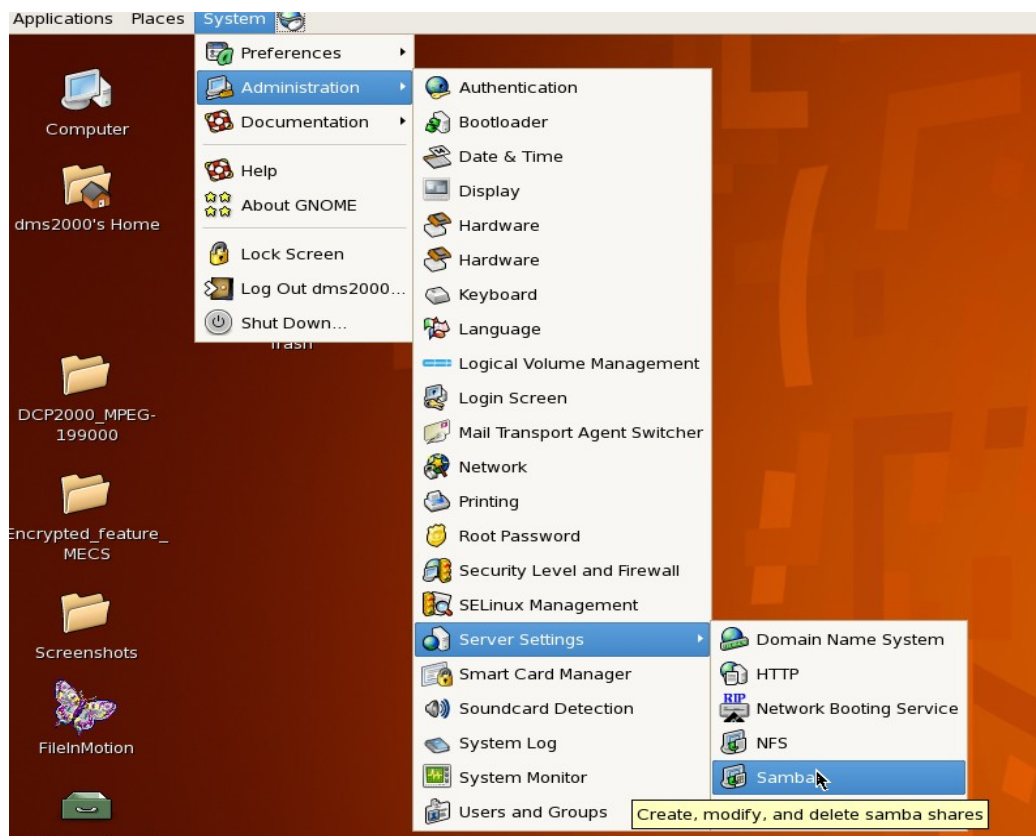


Figure 64: Linux Desktop - Samba List

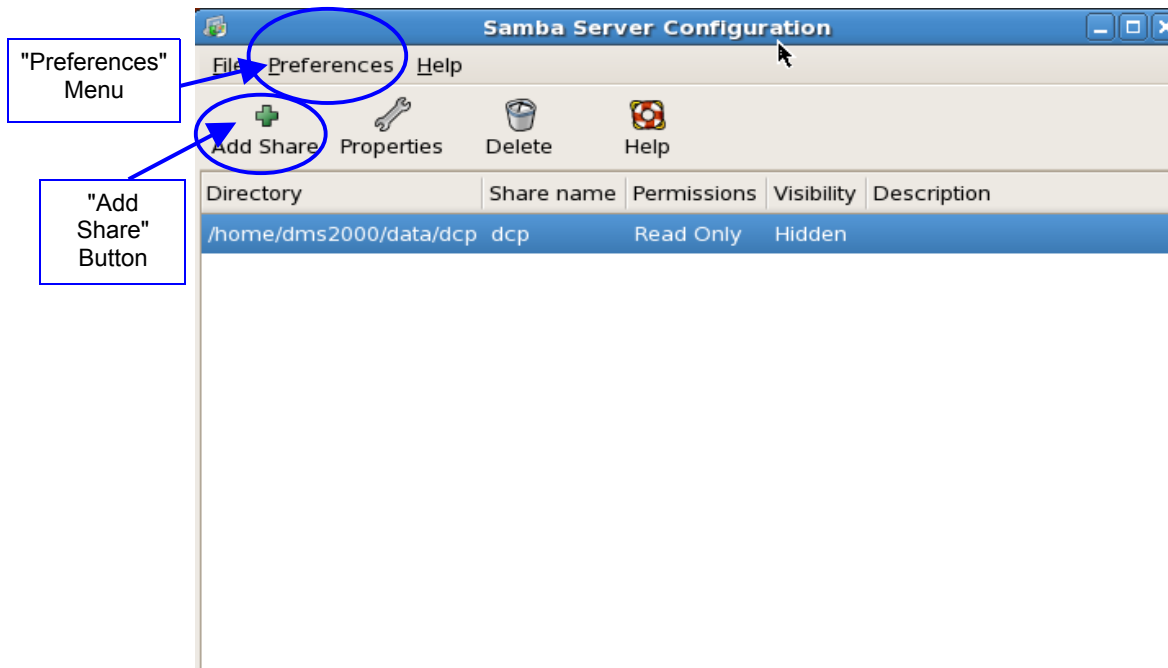


Figure 65: Samba Server Configuration Window


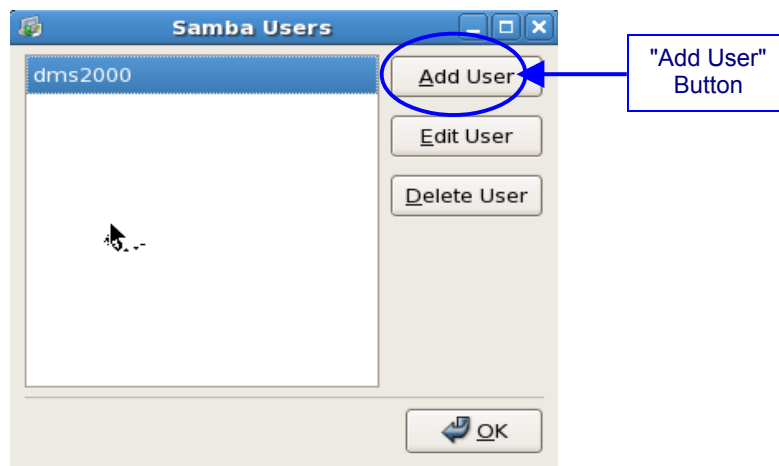


Figure 66: Samba Users Window

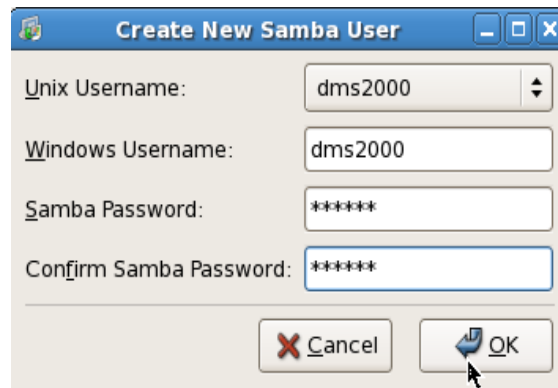

A screenshot of a Windows-style dialog box titled "Create New Samba User". The dialog has a blue title bar with standard minimize, maximize, and close buttons. It contains four input fields: "Unix Username:" with a dropdown menu showing "dms2000", "Windows Username:" with a text box containing "dms2000", "Samba Password:" with a masked password "*****", and "Confirm Samba Password:" with a masked password "*****". At the bottom, there are two buttons: "Cancel" with a red 'X' icon and "OK" with a blue checkmark icon. A mouse cursor is pointing at the "OK" button.

Figure 67: Create New Samba Users Window

14.1.2 How To Create A New Samba Share Directory

- Click on the “Add Share” button from the “Samba Server Configuration” window (see Figure 65 above).
- User will be prompted to the “Create Samba Share” window (see Figure 68 below).
- From the “Basic” tab choose the “Directory”, “Share name”, “Description”, and whether the directory is “Writable” or “Visible” (see Figure 68 below).
- From the “Access” tab choose to “allow access to everyone” or “only allow access to specific users” (see Figure 69 below).

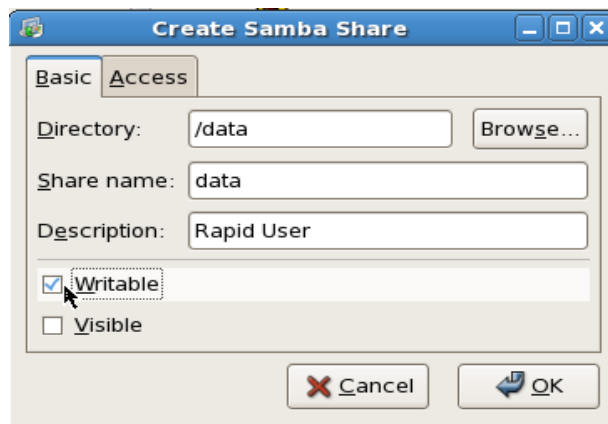


Figure 68: Create Samba Share Window - Basic Tab



Figure 69: Create Samba Share Window - Access Tab

- By default the share directory is accessible on the “Mygroup” domain under the Windows network.
- To modify any of the basic settings and security options for the default server, do the following:
 - From the "Samba Server Configuration" window go to “Preferences”.
 - Click “Server Settings” (see Figure 70 below).
 - User will be prompted to the “Server Settings” where necessary modifications from the “Basic” and “Security” tabs are made (see Figure 71 below).

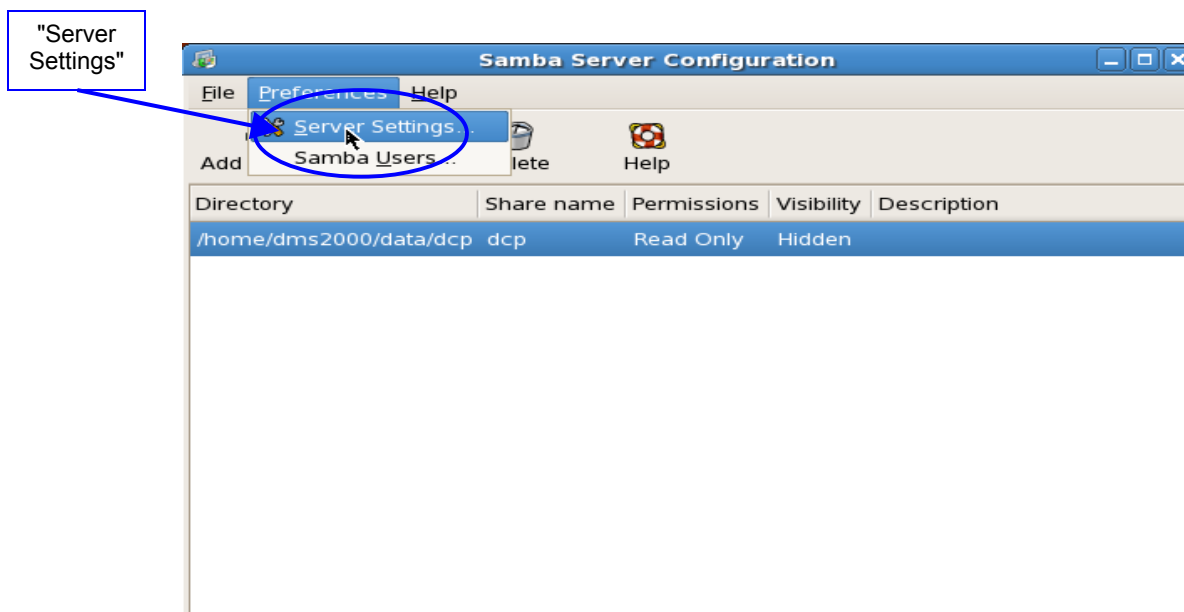


Figure 70: Samba Server Configuration Window

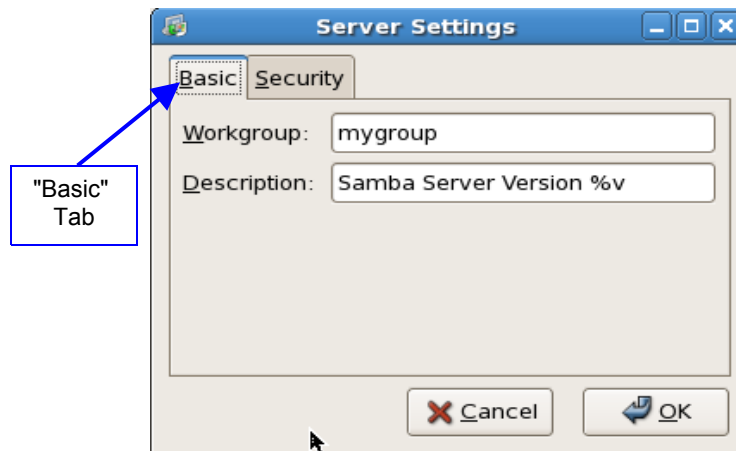


Figure 71: Server Settings Window - Basic Tab



Figure 72: Server Settings Window - Security Tab

14.2 Connecting to a Samba Network

- To mount a Samba share directory type the following commands:
 - Type: **su** and then press "Enter".
 - Password: The password will be the one that corresponds to the "root" username and login.
 - Type: **mount** <space>-t<space>cifs<space>//"ipaddress"/data/mntsamba<space>-o<space>username=login and then press "Enter".
 - Where the IP address can be replaced by the hostname of the computer.
 - "/data" is the name of the directory shared on this unit.
 - "login" is a username used to connect to the Samba share.

Note: Another way to access a Samba network is to go to the RedHat menu "Network Servers" and follow the network and computer found.

15 Useful Commands

15.1 LS

This command lists the content of the directory:

- Type: **ls -l** and then press "Enter"
- total 0

```
drwxrwxr-x  2 dms2000 capture    6 Aug 25 2005 backup
drwxrwxr-x  2 dms2000 capture   53 Aug 28 11:05 db
drwxrwxr-x  2 dms2000 capture    6 Aug 25 2005 dcdm
drwxrwxr-x  3 dms2000 capture   21 Aug 28 10:50 dcp
drwxrwxr-x  3 dms2000 capture   21 Aug 25 17:11 j2c
drwxrwxr-x  2 dms2000 capture    6 Aug 25 2005 kdm
drwxrwxr-x  2 dms2000 capture    6 Aug 25 2005 pcf
```

15.2 DU

This command indicates the disk space used by the content of a directory:

- Type: **du -sh *** and then press "Enter"
- 0 backup

```
4.0K db
0 dcdm
11G dcp
11G j2c
0 kdm
0 pcf
```

15.3 DF

This command indicates the available disk space of the different partitions currently mounted:

- Type: **df -h** and then press "Enter"

Filesystem	Size	Used	Avail	Use%	Mounted on
/dev/hda2	9.7G	5.4G	3.9G	59%	/
/dev/hda1	99M	13M	82M	14%	/boot
none	314M	0	314M	0%	/dev/shm
/dev/hda4	357G	114G	225G	34%	/datalocal
/dev/md0	1.1T	21G	1.1T	2%	/data
/dev/sdd1	276G	258G	4.1G	99%	/mnt/usb

15.4 MOUNT

This command indicates the currently mounted partitions:

- Type: **mount** and then press "Enter"

```
/dev/hda2 on / type ext3 (rw)
none on /proc type proc (rw)
usbdevfs on /proc/bus/usb type usbdevfs (rw)
/dev/hda1 on /boot type ext3 (rw)
none on /dev/pts type devpts (rw,gid=5,mode=620)
none on /dev/shm type tmpfs (rw)
/dev/hda4 on /data local type ext3 (rw)
/dev/md0 on /data type xfs (rw)
/dev/sdd1 on /mnt/usb type ext3 (rw)
```

15.5 FDISK

This command lists the different drives and partitions connected on the DMS2000:

- Type: **su** and then press "Enter"
- Password: "enter the root password"
- Type: **/sbin/fdisk -l** and then press "Enter"

Disk /dev/sda: 400.0 GB, 400088457216 bytes
255 heads, 63 sectors/track, 48641 cylinders
Units = cylinders of 16065 * 512 = 8225280 bytes

Device	Boot	Start	End	Blocks	Id	System
/dev/sda1		1	48641	390708801	83	Linux

Disk /dev/sdb: 400.0 GB, 400088457216 bytes
255 heads, 63 sectors/track, 48641 cylinders
Units = cylinders of 16065 * 512 = 8225280 bytes

Device	Boot	Start	End	Blocks	Id	System
/dev/sdb1		1	48641	390708801	83	Linux

Disk /dev/sdc: 400.0 GB, 400088457216 bytes
255 heads, 63 sectors/track, 48641 cylinders
Units = cylinders of 16065 * 512 = 8225280 bytes

Device	Boot	Start	End	Blocks	Id	System
/dev/sdc1		1	48641	390708801	83	Linux

Disk /dev/sdd: 300.0 GB, 300090728448 bytes
255 heads, 63 sectors/track, 36483 cylinders

Units = cylinders of 16065 * 512 = 8225280 bytes

Device	Boot	Start	End	Blocks	Id	System
/dev/sdd1		1	36483	293049666	83	Linux

Disk /dev/hda: 400.0 GB, 400088457216 bytes

255 heads, 63 sectors/track, 48641 cylinders

Units = cylinders of 16065 * 512 = 8225280 bytes

Device	Boot	Start	End	Blocks	Id	System
/dev/hda1	*	1	13	104391	83	Linux
/dev/hda2		14	1287	10233405	83	Linux
/dev/hda3		1288	1417	1044225	82	Linux swap
/dev/hda4		1418	48641	379326780	83	Linux

- Type: **exit** and then press "Enter"

exit

16 Trouble Shooting

The following is a list of bugs/problems that the user might encounter and the possible solutions. If the user has encountered a bug/problem that is not listed, check the user manual first. If the particular issue is not addressed contact Doremi Technical Support at: support@doremicinema.com

- Issue: If user receives the following error messages:
 - “ JPEG-2000 Encoder is not ready;”
 - “hardware licensing module not responding”
 - Other similar type of error message at login.
 - Solution: If the user gets an error message, the JPEG-2000 hardware encoder has been left powered off for a few hours or more and is causing a problem at start-up. Shut down the unit (do not just reboot) and power it back up after a few seconds. The error message should disappear.
- Issue: If user has the following problems:
 - User loses a lot of frames at the end of each encoding job.
 - The audio is poor (i.e., a lot of audio glitches).
 - User is playing content with a VTR (Video Tape Recorder) at 24fps but it was originally recorded at a different frame rate (i.e., 25fps).
 - Solution: The VTR is sending the audio and video signals at 24fps but the timcode setup is still at 25fps. There is a glitch of data once per second. Set up the VTR to use the correct time code (i.e., at 24fps).
- Issue:
 - User begins an encoding job but the encoder skips that job and goes to the next job. In the “Report” tab a message appears saying that it “could not open destination file”.
 - User begins an encoding job and the server does not start to encode and user gets the same message “could not open destination file” in the “Report” tab.
 - Solution:
 - The encoder can not write to the destination folder. The disk may be full, or the folder may not exist. The encoder may not have sufficient permissions to write to the folder.
- Issue:

- During a live HD-SDI capture the encoder drops a lot of frames. In the 'Report' tab there are numerous warnings stating that the encoder is too slow.
 - If user opens a terminal and the “top -d 1” command shows processes taking a lot of CPU time (nautilus, gam_server, etc.).
 - System-monitoring processes require a lot of processing power and the RAPID is no longer able to encode at real-time.
 - Solution:
 - Close all the file browser windows that are open on the desktops and only leave the RAPID Encoder GUI open.
-
- Issue:
 - The “display” command interacts badly with the JPEG-2000 display utility and causes the images to become saturated. In other words, using the “display” utility command to view “j2c” files causes the images to be corrupted (i.e., the white regions of the frames are replaced with yellow, purple, and or blue pixels).
 - Solution:
 - Use Kakadu or the command line utility “/doremi/bin/displayj2c” to view the “j2c” files. There is a bug in the “display” tool that shows the white pixels in the “j2c” files incorrectly. The frames are in fact correct.

17 Acronyms

Term	Definition
GUI	Graphical User Interface
CBR	Constant Bit Rate
DCI	Digital Cinema Initiatives, LLC
VBR	Variable Bit rate
MXF	Material eXchange Format
VTR	Video Tape Recorder
FTP	File Transfer Protocol
NFS	Network File Systems

18 Document Revision History

Date	Version	Description
12/22/2009	1.0	First version.
08/26/2010	1.1	Revised to include license page. All sections updated and modified.
11/09/2010	1.2	Revised to include updated software version 3.0.3. Sections 5.3.1.3 and 5.3.1.4 added.
01/11/2010	1.3	All sections revised. Sections 1.3 and 4.5 modified. New Section 1.4 added.
07/20/2012	1.4	Logo updated and contact information added.