

Low Speed Technology System

HUROM[®]

SLOW JUICER

HU-100

Instruction Manual

Please read the instructions carefully before using.
Please keep this user's guide where it is easily accessible.
Design and product development may be upgraded without a public notice.

<http://www.hurom-slowjuicer.com>





Hurom

Enjoy the pure flavor and goodness of nature with **HUROM**

HUROM gently presses to retrieve juice rather than forcing juice by shredding and grinding.

HUROM is a newly developed patent technology which can retrieve juice not only from fruits and vegetables but also from soy as well.

 
 
 
 
 
 
 
HUROM is also capable in making organic tofu, wheatgrass shot, ice cream, and so much more...

For better use and proper maintenance, please follow the instructions carefully. Please refer to user's manual when times of technical difficulties or unsure of the usage of this product. We are not liable for any injuries or damages that may occur due to the lack of understanding of the user's manual .

CONTENTS

- 02 Attachment Listing
- 04 Safety Precautions
- 07 Assembly Instruction (Type1)
- 08 Assembly Instruction (Type2)
- 11 How to use HUROM slow juicer
- 12 Warning while operating
- 13 How to disassemble and clean
- 14 Troubleshooting
- 16 Product Specification

Attachment Listing

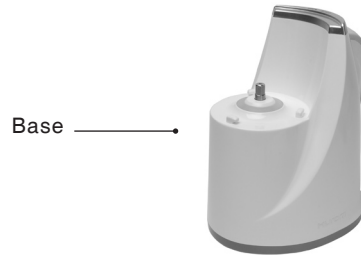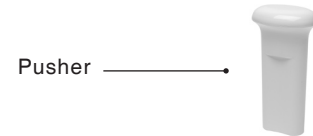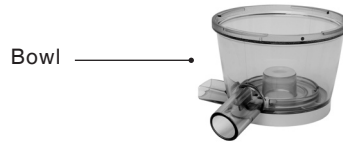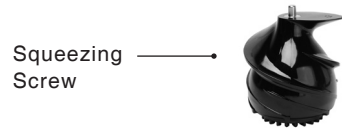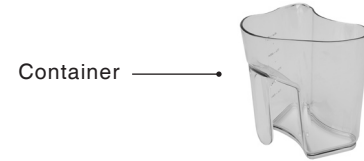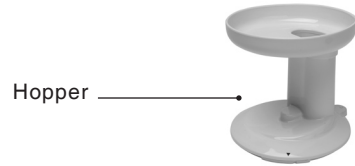



Attachment Listing

- Hopper (1EA)
- Squeezing Screw (1EA)
- Strainer (1EA)
- Spinning Brush (1EA)
- Bowl (1EA)
- Base (1EA)
- Container (2EA)
- Pusher (1EA)
- Cleaning brush (1EA)



As shown above, the hopper edge must point to "close" on the base in order for the machine to operate properly.

Safety Precautions

For safety and proper use, please read every caution tips thoroughly before using the product.

Please do not plug or unplug electrical outlet with wet hands.

a.Can cause electrocution

Please plug in electrical plug properly.

a.Not doing so may cause fire damage.

Please do not force pull or push in the electrical plug, make sure the plug is distant from any heat sources and is not bent or twisted in anyway.

a.Not doing so may cause fire damage and possible electrocution.

Please do not put anything other than what is mentioned in the user's manual into product's openings

a.Not doing so may cause physical damage, fire, or electrocution.

Please do not clean product(Base) with running water. When the product is wet; stop operating and request service to your purchased store or to toll free customer service number.

a.Not doing so may cause product damage.

When screw is stuck and does not spin, please turn off the machine and put in reverse for 2-3 seconds.

a.Not doing so may cause overheating which can lead to motor failure.

Please do not use when electrical cord or plug is loose or damaged.

a.Not doing so may cause fire hazard or electrocution.

b.Please consult to professional service technician

Please do not disassemble the machine while operating nor put anything into juice or pulp ejection while operating.

a.Not doing so may lead to product damage.

Please do not disassemble or move the machine while operating.

a.Not doing so may cause product damage.

This appliance is not intended for use by persons(including children) with reduced physical, sensory or mental capabilities,or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

Children should be supervised to ensure that they do not play with the appliance

Product is 6.3 kg, please use both hands when picking up the machine.

a. Not doing so may cause physical damage.

Please keep away from children's reach.

a. Mishandling or dropping the machine may cause product failure.

In case of any unusual odor, heat, or smoke, stop operating immediately and contact the nearest purchased store, retail center, or toll free customer service number.

Please do not use longer than 30 minutes continuously, this product is for home use, excessive use can cause overheating which can lead to motor failure.

Please do not operate the machine when hopper is not assembled.

a. Not doing so may cause product damage.

Do not disassemble the base. Please consult with repair technician for troubleshooting.

Please operate on a flat and steady surface.

a. Not doing so may cause product damage.

Please do not drop or give impact to product.

a. Not doing so may cause product damage and fire hazard.

Please do not clean under water that is over 80°C.

a. Not doing so may cause product damage and transform.

Please do not use anything other 220 - 240 volts.

a. Not doing so may cause fire damage and possible electrocution.

Please open all windows and doors for air ventilation when exposed to gas.

 
Please contact customer service for technical difficulties.

Do not customize or upgrade machine without professional supervision.

When inputting materials into the hopper, please do not use anything other than the pusher.



Assembly instruction – Type 1

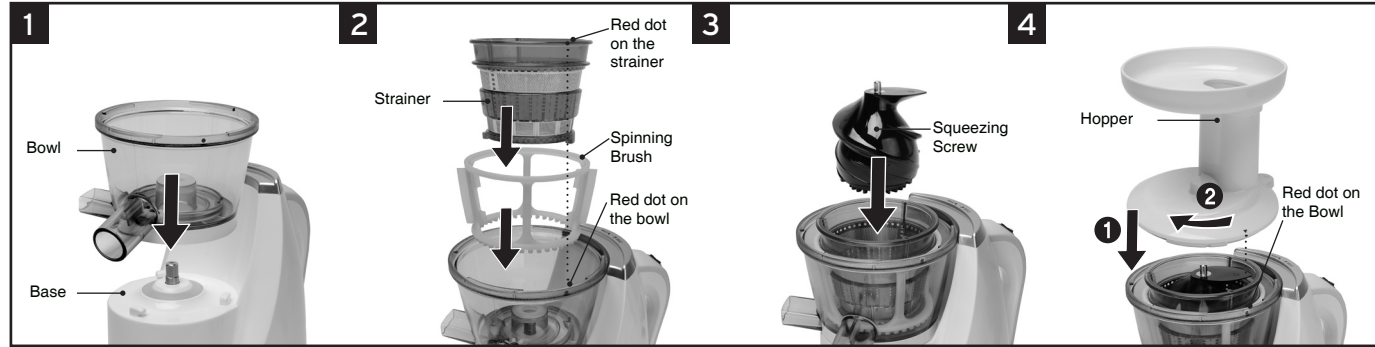

1. Assemble the bowl on the base.

- ① Make sure the bowl is all the way into the shaft of the base.
- ② Twist the bowl to close.

2. Assemble the strainer + spinning brush into the bowl.

- ① Make sure the red dot on the strainer and the red dot on the bowl are aligned.

3. Place the squeezing screw in the center of the bowl.

 
4. Assemble the hopper onto the bowl.

- ① Make sure the arrow on the hopper and the red dot on the bowl are aligned.
- ② Make sure the arrow on the hopper is pointing to "close" on the base.




Reverse the step carefully when disassembling.

Assembly instruction – Type 2

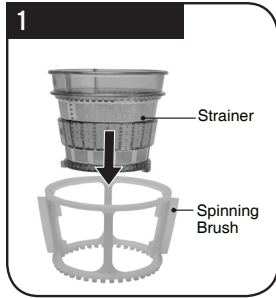


 Place the strainer into the spinning brush

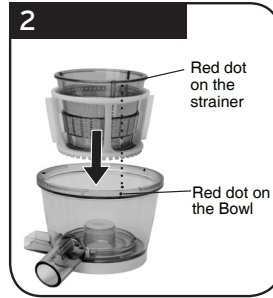


Place the strainer + spinning brush into the bowl.

 ① Make sure the red dot on the strainer and the red dot on the bowl are aligned.

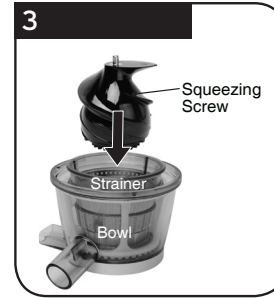


 Push the squeezing screw into the strainer.

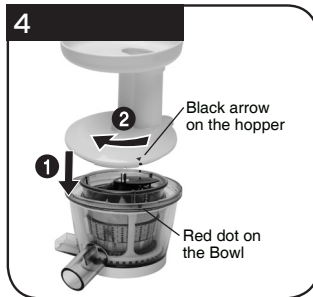

Assemble the hopper onto the bowl.

 
① Make sure the arrow on the hopper and the red dot on the bowl are aligned.
② Make sure the arrow on the hopper is pointing to "close" on the base.

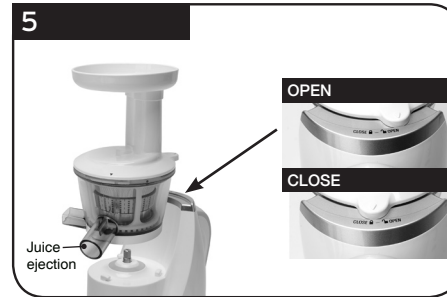

Assemble the entire Top Set onto the base.

① As shown left, assemble the bowl onto the base and twist the bowl so that hopper edge is pointing to "close" on the base.

 Assembly instruction – Type 1,2



Must connect the power cord.

**Place containers under both ejections.
(Juice & pulp ejection)**

Assembling rubber packing after cleaning

After cleaning, please plug back in the rubber packing as shown in below pictures. Underneath the bowl, there is a yellow rubber pad which allows all the juice to only discharge from the fresh juice ejection. The rubber pad is removable. Simply grab onto one side of the rubber pad and pull out.



Low Speed Technology System

HUROM[®]
SLOW JUICER

How to use HUROM Slow Juicer



The machine has three(3) settings.

- ▶ “On” starts motor, start making juice.
- ▶ “Rev” is reverse. Only use when something is stuck and you need to unclog.
- ▶ “Off” is at center position. This allows the machine to turn off.



Please rinse everything thoroughly before putting into the machine.

After rinsing, put material into the machine using the pusher.

Please remove any hard seeds before using.

Please cut or split any hard materials such as carrot into thin slices before inputting into the machine.



Turn off the machine after using.

Please dry your hands before touching the power switch.



Warning

Do not operate with wet hands.
Do not pre-operate before inputting materials or Do not operate with an empty bowl.

Warning while operating



Do not use longer than 30minutes at a time.

Violating the warning may cause serious damage to the product.



Remove any hard seeds.

Violating the warning may cause serious damage to the product especially the screw.



Do not use anything as a pusher (fork, chopsticks, spoons, etc) other than the pusher itself.

Violating the warning may cause serious damage to the product.

 


Do not operate with wet hands.

Violating the warning may cause serious injuries or electrocution.

When the machine is stuck and not operable, Please...

ON
OFF
REV

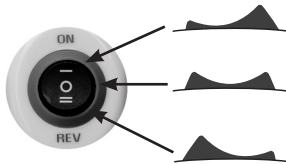

Turn off the machine and put it reverse for few seconds then try operating again.

When reverse switch does not work, turn off the machine and reassemble following the instructions given. After reassemble, please try turning on the machine.



Warning

please reassure the switch is completely dry before operating

How to disassemble and clean

1 Turn machine "OFF".



Twist the hopper to unlock by grabbing the two ejections. Make sure the edge is aligned to "open" before pulling off the bowl.



Order to disassemble.


1. Hopper
2. Squeezing screw
3. Strainer
4. Spinning brush
5. Bowl



Use the brush to clean thoroughly after operating.

5 Do not rinse the base with direct water, use dry towel or wet towel to clean.

6 Please dry the attachments after cleaning.

 Please use smooth wet towel for cleaning the base.
Warning Please do not use dish washer or high temperature cleaner for cleaning

HUROM Troubleshooting

| | <i>Problem</i> | <i>Possible Reasons</i> | <i>Solution</i> |
|---|--|---|--|
| 1 | Bowl is stuck and does not detach from the base. | Excessive food in the bowl. Unknown substance in the bowl. | Press reverse switch 3-5 seconds. Repeat process 2-3 times. Then, push bowl upward while turning. |
| 2 | Hopper / lid is stuck. | Excessive food in the bowl. Unknown substance in the bowl | Press reverse switch 3-5 seconds. Repeat process 2-3 times. Then, press down on top of lid while turning. |
| 3 | Motor is stuck or has stopped. | Excessive food in the bowl. Safety feature: automatic shutoff due to overheating. | Press reverse switch 3-5 seconds. Repeat process 2-3 times. If motor has stopped, let cool down before trying again. |
| 4 | Leaking from underneath the bowl. | Extraction packing not plugged in correctly. | Be sure to plug in extraction packing tightly after cleaning. |
| 5 | Squeaking noise when juicing. | Friction between the squeezing screw and bowl or food. | Squeaking sound is perfectly normal. Do not run the juicer without any food. |
| 6 | The unit vibrates. | Sign of motor working properly. | Vibration is perfectly normal. However, severe shaking which causes imbalance of the unit should be checked for a defective screw. |

HUROM Troubleshooting

| | <i>Problem</i> | <i>Possible Reasons</i> | <i>Solution</i> |
|----|---|---|--|
| 7 | Water mark or scratch on the squeezing screw. | Molding marks during manufacturing process. | These marks and lines on the squeezing screw are perfectly normal. |
| 8 | Color stain on the bowl, strainer, spinning brush | Natural dye from food. | Hurom is chemical-free on all attachments. Therefore natural dye from food when juicing is perfectly normal. To reduce staining, rinse and clean immediately after each use. Diluted vinegar or the similar can be used. |
| 9 | Mold in silicone part of spinning brush. | Poor cleaning. | Be sure to clean thoroughly by detaching the silicone brushes from the spinning brush. Don't forget to plug it back in before juicing. |
| 10 | Strainer damage. | Ice, frozen foods, large hard seeds or pits, unknown substance, or excess food in bowl. | Refer to instruction manual for proper usage and juicing tips. Remember not to overcrowd food or force foods in. |
| 11 | Deformation of attachments. | Exposed to heat or abrasive materials. | Do not clean any attachments in dishwasher or use hard cleaners. Plastic tends to deform when exposed to high heat. |
| 12 | Too much pulp coming out. | Excess food in bowl clogging up the strainer or food not cut into small pieces. | Cut food, especially fibrous food, into smaller pieces to avoid the fibers wrapping around the screw. Also input food at a slow pace allowing all the pulp to eject before adding more food. |

Product Specification



| Specification | | | |
|------------------------|-----------------------------------|-------------|---------|
| Product Name | HUROM Slow Juicer | | |
| Model Name | HU-100 | | |
| Voltage | 120V | 100V | 230V |
| Frequency | 60Hz | 50 / 60Hz | 50Hz |
| Power Consumption | 150w | 150w | 150w |
| RPM | 80 rpm | 70 / 80 rpm | 70 rpm |
| Electrical cord length | 4.592 ft + | 1.4 M + | 1.4 M + |
| Motor | Single-Phase induction | | |
| Weight | 11.466 lbs | 6.3 kg | 6.3 kg |
| Dimensions | Width | 6.81 in | 173 mm |
| | Length | 9.84 in | 250 mm |
| | Height | 15.83 in | 402 mm |
| Standard usage time | Less than 30 minutes continuously | | |

Memo

Hurom[®]
SLOW JUICER

<http://www.hurom-slowjuicer.com>