ÖKO-LAVAMAT 86760 update

The environmentally friendly washing machine

User information



Dear Customer,

Please read this user information carefully.

Pay particular attention to the section "Safety" on the first Info pages. Please keep this user information in a safe place for later reference. Pass it on to any future owners of the unit.



The warning triangle and /or signal words (Warning!, Caution!, Important!) emphasise information which is important for your safety or for the unit's functional reliability. It is imperative that this information is observed.

- 1. This symbol guides you step by step through the operation of the appliance.
 - 2. ...
- Next to this symbol you will find additional information and practical tips on using the appliance.
- Tips and information on economical and environmentally responsible use of the unit are identified with the clover leaf.

For any faults which occur, this user information contains information on how to remedy these faults yourself. See the section "What to do if ..."

Printed on recycled paper.

Thinking ecologically means acting ecologically.

Contents

Operating Instructions	6
Safety	6
Disposal	8
Environmental Tips	8
Unit description Front view Drawer for detergent and care agent Control Panel Programme Selector Programme Option Buttons Programmable functions	9 9 10 10 12 13
Consumption Values and Programme Times Wash Time Display	14 14
What does "UPDATE" mean?	15
Anti-flood system Aqua Control + Aqua Alarm	15
Before the First Wash	16
Preparing a Wash Load Sorting and preparing a wash load Washing Types and Care Symbols Washing Detergents and Care Agents Which washing detergent and care agent? How much washing detergent and care agent? Water softener	16 16 17 18 18 18
Running a Wash Cycle Brief Instructions Setting the wash programme Changing Spin Speed /selecting RINSE HOLD Setting the delay timer/soaking duration Opening and closing the door Loading the Washing Add detergent/conditioner	19 19 20 21 22 23 23 24
Starting the wash programme	25

3 3	26 27
Washing Separate Rinse/Conditioning/Starching/Treating	28 28 29 29
Control panel Detergent Drawer Washing Drum	30 30 30 31 31
Remedying faults If the washing results are not satisfactory Carrying out emergency drainage Drain pump Emergency unlocking of the door Additional Rinse RINSE+ Water Cooling Additional Rinse and Water Cooling	32 32 36 37 38 39 40 41 41 42
Programme Protection	43
Child Safety Feature	44
	45
	45
Transporting the appliance Remove transport packaging Prepare the installation place Installation on a concrete base Installation on vibrating floors	46 46 46 48 48
Compensate for floor unevenness	49

Electrical connection	50
Water connection Permissible water pressure Water inflow Water drain Delivery heads over 1m	50 51 52
Technical data	53
Dimensions	53
Warranty conditions / Customer service centres	54
Index	58
Service	59

Operating Instructions



Safety

The safety aspects of AEG electrical appliances comply with accepted technical standards and the German Appliance Safety Law. However, as manufacturers we regard it as our responsibility to inform you about the following safety instructions.

Before Using for the First Time

- Refer to the "Installation and Connection Instructions" further on in this user information
- If units are delivered in the winter months at minus temperatures: Store the washing machine at room temperature for a few hours before putting it into operation.

Correct Use

- The washing machine is only intended for washing normal domestic washing. If the appliance is used for a wrong purpose or wrongly operated, the manufacturer cannot assume any liability for any damages.
- Additions or modifications to the washing machine are strictly forbidden due to safety reasons.
- Use only detergent which is suitable for washing machines. Refer to the detergent manufacturer's instructions.
- The washing must not contain any flammable solvents. Also bear this in mind when washing pre-cleaned washing.
- Do not use the washing machine for dry-cleaning.
- Dves /dye-removing agents may only be used in the washing machine if the manufacturer expressly permits use of these products. We cannot accept liability for any damage.
- Use only water from the water mains. Use rain water or service water only if it meets the requirements defined in DIN 1986 and DIN 1988.
- Frost damage is not covered by the warranty! If the washing machine is in a room subject to possible frost hazards, emergency emptying must be carried out if there is a risk of frost (see the Section "Carrying out emergency emptying").

Safety of Children and Infirm Persons

- Packaging materials (e.g. films, polystyrene) can be dangerous for children. Risk of suffocation! Keep packaging away from children.
- The appliance is not intendet for use by young children or infirm persons without supervision.
- Children frequently cannot recognise hazards involved in handling electrical appliances. Therefore, ensure that they are properly supervised during operation and never allow children to play with the washing machine there is a risk that they can lock themselves inside it.
- Ensure that children or small animals do not climb into the washing machine's drum.
- When disposing of washing machines pull out the mains plug, destroy
 the door lock, cut off the electrical supply lead and dispose of the
 plug and remaining cable. This means that playing children cannot
 shut themselves in and cannot encounter a potentially lethal hazard.

General Safety

- Repairs to washing machines may only be carried out by skilled persons. Improper repairs can cause significant hazards for the user.
 If your appliance needs repairing, please contact customer service or your dealer.
- Never put the washing machine into operation if the mains cable is damaged or if the control panel, work top or base area is damaged in such a way that the inside of the appliance is openly accessible.
- Before cleaning, care and maintenance work, switch off the washing machine. Also, pull the mains plug out of the socket, or - in the case of permanent connection - switch off the LS switch in the fuse box or completely unscrew the screw-in fuse.
- If operation is stopped, disconnect the appliance from the mains supply and shut off the tap.
- Never pull the mains plug out of the socket by the cable. Always use the plug.
- Multiple connectors, couplings and extension cables must not be used. Fire hazard through overheating!
- Do not spray down the washing machine with a water jet. Danger of electrical shock!
- The glass in the filling door become hot when high-temperature washing programmes are used. Do not touch!

- Allow the washing solution to cool down before performing and emergency emptying of the appliance, before cleaning the solution pump or before an emergency opening of the filling door.
- Small animals can chew on power cables and water hoses. This can cause a danger of electric shock and water damage. Keep small animals away from washing machines.

Disposal

Disposing of the Packaging Material!

Dispose of the packaging of your washing machine correctly. All pakkaging materials used are environmentally-compatible and recyclable.

- Plastic parts are identified with internationally standardised abbreviations:
 - >PE< for polyethylene, e.g. packing films.
 - >PS< for polystyrene, e.g. cushion parts (always CFC-free)
 - >POM< for polyoxymethylene, e.g. plastic clips.
- Cardboard packaging is manufactured from recycled paper and should be deposited in the waste paper collection for recycling.

Disposing of your old appliance!


When you put your unit out of operation one day, please bring it to your nearest recycling centre or to your dealer.

Environmental Tips


- You do not need to use a pre wash cycle or soak for washing with average soiling. This saves detergent, water and time (and protects the environment).
- When loaded to the capacities indicated the washing machine is especially efficient.
- For small loads, use only one half to two thirds of the recommended quantity of detergent.
- By pre-treating stains and marks you will be able to wash at a lower temperature.
- It is often possible to wash without using softener. Give it a try! If you use a drier, your washing will be soft and fluffy even without a softener.
- For medium to high water hardness (from hardness range II, see "Detergents and Conditioners") you should use water softener. The detergent can then always be dosed as for hardness range I (= soft).

Unit description


Front view

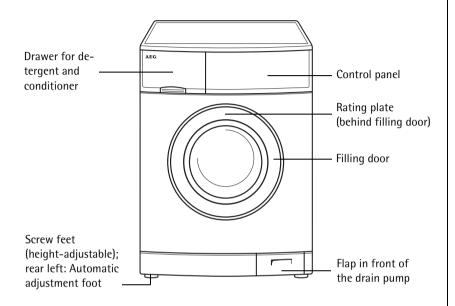

Drawer for detergent and care agent

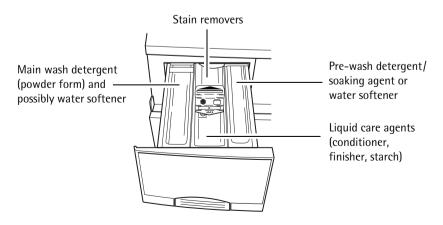

Control Panel

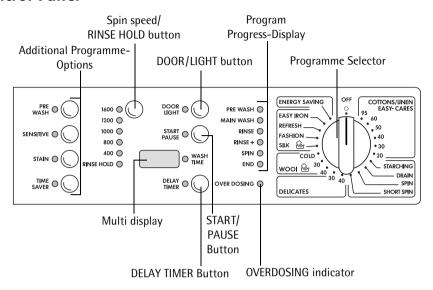


Programme Selector

The programme selector defines the nature of the wash cycle (e.g. water level, drum movement, number of rinses, spin speed) to suit the type of washing, as well as the water temperature.

OFF

Switches the washing machine off; the machine is switched on at all other positions.

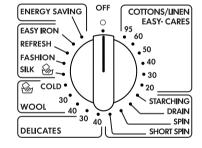

To correct programme settings that have been selected accidentally turn the programme selector to the OFF position. The initial position is reinstated.

COTTONS/LINEN, EASY-CARES

Wash programme between 20 °C and 95 °C, may be used for all cotton and linen washing (cottons/linen), easy-cares (blended fabrics, e.g., cotton/polyester) and synthetics. The wash programme adjusts to suit the various types of fabric and quantities. If there is mostly cotton/linen a suitable cottons/linen programme is carried out; if there is more synthetic material a programme for easy-cares is selected. If the machine is loaded exclusively with easy-cares the quantity should not exceed 2.5 kg in order to avoid creasing.

STARCHING

Separate starching, separate rinsing, separate conditioning or separate soaking of damp washing (1 rinse, liquid conditioner is added from the compartment &, spin).

If a separate rinse is carried out do not put any conditioner into the compartment.

DRAIN

The water is pumped away after a rinse hold (without spin).

Rinse hold means: the washing remains in the last rinsing water and is not spun.

SPIN

The water is pumped out at the end of a rinse hold and spin, or hand washed cottons/linen and easy cares are spun separately.

SHORT SPIN

The water is pumped out at the end of a rinse hold and short spin, or delicate fabrics (delicates, woollens) are given a separate short spin at low revs.

DELICATES

Wash programme for delicates at 30 °C or 40 °C.

WOOL / Mand wash

Wash programme (cold to 40 °C) for machine-washable woollens and for hand-washable woollen fabrics bearing the 🖼 care symbol (hand wash).

SILK / A Hand wash

Wash programme at 30 °C for hand and machine-washable silk.

As silk is a very sensitive fabric, we recommend that you only wash one item of clothing at a time, and that such items never be washed with other rough fabrics. A still more gentle wash is possible for extremely sensitive silk fabrics using the TIME SAVER button.

FASHION

A particularly gentle special programme at 40 °C for modern fabrics such as viscose, modal, cupro, lyocell, with a gentler wash action than the DELICATES programme, but washing more thoroughly than the hand wash programmes.

RFFRFSH

A special programme lasting approx. 20 minutes at 30 °C to give fabrics a guick wash, such as, for example, very slightly soiled sports clothes that have been worn only once.

EASY IRON

Wash programme at 40 °C for easy-care fabrics that will only need to be ironed lightly, if at all, at the conclusion of the programme.

 


ENERGY SAVING

A wash programme at approx. 60 °C that is particularly economical on electricity and water for slightly to normally soiled cotton and linen washing (cottons/linen) with an extended washing time.

Programme Option Buttons

The programme option buttons are used to adapt the programme to suit the degree of soiling of the wash. The additional PRE WASH and STAIN options are not needed for normally soiled washing. The different functions can be combined together, depending on the programme.



PRE WASH (Pre-wash/Soaking)

Cold pre-wash before the main wash cycle, which follows automatically. The DELAY TIMER button changes Pre-wash to warm soaking.

SENSITIVE

Special extra programme function that gives an extra rinse along with better fabric care (less drum movement). This is ideal when frequent washes are necessary, for example in cases of sensitive skin. RINSE+ can still be selected as well.

STAIN

For heavily soiled or stained washing. (In-wash stain treatment products (powder or tablets) are washed in at the optimum time as the programme progresses.)

With the WOOL/ (Handwash) setting, the additional programme opi tion buttons cannot be used.

TIME SAVER

Shortened wash programme for lightly soiled washing, consisting of three stages with the COTTONS/LINEN, EASY-CARES programme and two stages with the other programmes.

	Length of programmes			
Programme	Without TIME SAVER	With TIME SAVER		
		Button pressed once	Button pressed twice	
COTTONS/LINEN, EASY-CARES at 60 °C	119 mins.	91 mins.	63 mins.	
Other programmes, for example DELICATES at 30 °C	68 mins.	52 mins.	-	

Programmable functions

The programmable functions Extra Rinse (RINSE+), Water Cooling and Variomatic Spin are described in the Chapter "What to do if ...".

Consumption Values and Programme Times

The following table gives the values for selected programmes under standard conditions. Consumption values depend on the selected programme settings (optional functions), washing type and quantity, water pressure, such as water inlet temperature, water hardness, room temperature or detergent used, etc. The tables do, however, give a helpful quide for normal household use.

Programme Selector (Temperature)	Type of material	Load in kg	Water in litres	Energy in kWh	Time in minutes
ENERGY SAVING 1)	Cotton	6	42	1.02	120
COTTONS/LINEN, EASY-CARES 95	Cotton	6	50	2.05	148
COTTONS/LINEN, EASY-CARES 60	Cotton	6	50	1.08	119
COTTONS/LINEN, EASY-CARES 40	Cotton	6	58	0.66	116
COTTONS/LINEN, EASY-CARES 60 TIME SAVER (press once) 1)	Synthetics	3	56	0.95	91
COTTONS/LINEN, EASY-CARES 40 TIME SAVER (press once) 1)	Synthetics	3	52	0.55	88
COTTONS/LINEN, EASY-CARES 40 TIME SAVER (press twice)	Synthetics	3	50	0.58	59
DELICATES 30	Synthetics	3	56	0.36	68
WOOL / 🚳 (Handwash) 30		2	42	0.18	35

¹⁾ **Note:**Programme setting for testing in accordance with or in support of Standard EN 60 456 and IEC 60 456.

Wash Time Display

The wash times for the wash programmes depend on the usual washing practice and the ambient conditions at the place of installation. The washing type and quantity, the type of washing detergent, the water temperature and the room temperature etc. can influence the duration of the wash programme.

What does "UPDATE" mean?

The wash programmes in your washing machine are controlled by software.

New types of fabric or new detergents may require new wash programmes in the future. In most cases, the software can be adapted to this.

For further information on a possible "update" please contact customer service

Anti-flood system Aqua Control + Aqua Alarm

In the event of damage to the supply hose, the system blocks the further supply of water to the unit directly st the water tap.

If water escapes at another point, the drainage pump pumps the water off automatically – even if the unit is switched on. It is merely necessary for the washing machine to be connected to the mains. If the antiflood system responds, a warning signal sounds at the same time.

Before the First Wash



Run a wash cycle without washing; COTTONS/LINEN, EASY-CARES 95 programme with half the amount of washing detergent. This removes any residues from the drum and solution container which may have been left during manufacturing.

Preparing a Wash Load

Sorting and preparing a wash load

- Sort the washing according to care symbol (see "Washing Types and Care Symbols").
- · Empty all pockets.
- Remove metal objects (paper clips, safety pins etc.).
- In order to prevent the washing tangling and being damaged: close zippers, button up duvet covers and pillow cases, and tie up loose straps such as from aprons.
- Turn articles with double layered fabric inside out (sleeping bags, anoraks etc.).
- In the case of knitted coloured fabrics and also wool and fabrics with jewellery attached: turn inside out.
- Place small and delicate articles (baby booties, stockings, bras etc.) into a washing net, a pillow case with zipper, or in large socks before washing.
- Handle curtains with particular care. Metal fittings or burred, plastic fittings must be removed or tied into a net or bag. We cannot accept liability for damage.
- Do not wash coloured and white washing together. This could transfer colour to white washing or turn it grey.
- New coloured items often have an excess of colour. It is better to wash such items separately the first time.
- Mix small and large items of washing. This improves the wash efficiency and the washing is more evenly distributed during the spin cycle.
- Shake out washing before placing into the washing machine.
- Do not place folded washing into the drum.
- Observe such washing instructions as "wash separately" and "wash separately several times"!

Washing Types and Care Symbols

The care symbols help you choose the correct wash programme. Washing should be sorted according to type and care symbol. The temperatures indicated in the care symbols are all maximum temperatures.

Cottons 1951

Fabrics made from cotton and linen with this care symbol will withstand maximum wash actions and high temperatures. The COTTONS/ LINEN, EASY-CARES programme is suitable for this type of washing.

Linen 60 40

Fabrics made from cotton and linen which carry this care symbol will withstand maximum wash actions. The COTTONS/LINEN, EASY-CARES programme is suitable for this type of washing.

Easy-care washing 1997 1997

Fabrics such as treated cotton, cotton mixed fabrics and synthetics which carry this care symbol need a gentler wash action. The COTTONS/LINEN, EASY-CARES and EASY IRON programmes are available for this type of washing.

Delicates ₩

Fabrics such as those with layered fibres, microfibres, synthetics and curtains with this care symbol require particularly careful handling. The DELICATES programme is appropriate for these types of washing.

Viscose 40 40

Modern fabrics such as viscose, cupro, lyocell, modal and others require particularly careful handling. The FASHION programme is appropriate for these types of washing.

Woollens, silk and particularly delicate wash items Fabrics such as wool, wool mixtures and silk which carry these care symbols require a very gentle wash cycle. The WOOL Hand wash and SILK Hand wash programmes are suitable for this type of fabric. Important! Fabrics which bear the care symbol (Do not wash!) may not be machine washed!

Washing Detergents and Care Agents

Which washing detergent and care agent?

Use only washing detergents and care agents which are suitable for use in washing machines. Always follow the manufacturer's instructions.

How much washing detergent and care agent?

The amount to be used depends on:

- the dirtiness of the washing
- the hardness category of the mains water supply
- the filling quantity



If the detergent manufacturer gives no details of the dosing quantities for minimum loads, add one third less for half loads and, in the case of very small loads and for EASY IRON, only half the amount of detergent recommended for a full load.

Refer to the detergent/care agent manufacturer's instructions on use and dosage.

Water softener

For medium to high water hardness (hardness class II upwards), you should use softener. Refer to the manufacturer's instructions. Then always add the appropriate amount of detergent for hardness class I (= soft). The responisable water works will provide information on the local water hardness.



Since the water softener is rinsed in before the main detergent (water pre-softening), 80% of the stated quantity of softener shown on the package is sufficient.

Water hardness details

Hardness class	Water hardness in °dH (German hardness scale)	Water hardness in mmol (millimol per litre)
I - soft	0 - 7	to 1.3
II - medium hard	7 - 14	1.3 - 2.5
III - hard	14 - 21	2.5 - 3.8
IV - very hard	greater than 21	greater than 3.8

Running a Wash Cycle

Brief Instructions

A wash cycle consists of the following steps:

- **1.** Set the correct wash programme:
 - select the programme and temperature using the programme selector
 - if required, select programme option
 - 2. If required change the spin speed/select rinse hold.
 - 3. If required, set the DELAY TIMER.
 - 4. Open the door and load the washing.
 - 5. Close the door.
 - 6. Add detergent/conditioner.
 - **7.** Start the wash programme by pressing the START/PAUSE button.

When the wash programme has ended:

Important! If the wash cycle has ended with a rinse hold, activate DRAIN, SPIN or SHORT SPIN before opening the door.


- 8. Open the door and remove the washing.
- **9.** Switch off the washing machine: set the programme selector to OFF.

Setting the wash programme


For suitable programme, correct temperature and possible additional programs for the respective type of washing, see "Programme tables".

1. With the programme knob, set the desired wash programme and temperature.

In the multi-display the probable duration of the set programmes will be shown in minutes.

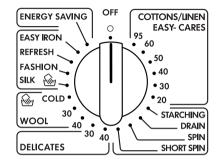

 - **2.** If necessary, press additional programme button(s): The display of the selected additional programme is displayed.
 - For changing to another selection, press another button.
 - For resetting, press button again.



Changing Spin Speed /selecting RINSE HOLD

B	To change Spin Speed for the final spin (if necessary)/select RINSE HOLD:	1600 🔘
	Press the Spin Speed/RINSE HOLD button as often	1200
	as necessary, until the indicator light for the de-	1000 🔘
	sired speed (or RINSE HOLD) is lit.	800 🔘
	If RINSE HOLD is selected, the washing is left to	400 🔘
	soak in the last rinse water, without spinning.	RINSE HOLD

If the Spin Speed is not changed, the final spin is automatically adjusted to suit the washing programme:

- COTTONS/LINEN, EASY-CARES	1600 revolutions per minute
– ENERGY SAVING	1600 revolutions per minute
- DELICATES	1200 revolutions per minute
– WOOL / 🗟 (Handwash)	1200 revolutions per minute
– SILK/ 🗟 (Handwash)	1200 revolutions per minute
– FASHION	1200 revolutions per minute
– EASY IRON	1200 revolutions per minute

The speed of intermediate spins depends on the selected programme, and cannot be changed.

Setting the delay timer/soaking duration

Delay timer

The DELAY TIMER button makes it possible to delay the start of a wash programme by 1 to a maximum of 19 hours.

- **1.** Select wash programme.
 - 2. Press DELAY TIMER button.
 - 3. Press START/PAUSE button.





When start delay has been set, the DELAY TIMER display lights up.

Depress the DELAY TIMER button until the desired start delay appears, e. g. 12h for a 12 hour delay to the start of the programme. If 19h is displayed and the button is pressed again, then the delay timer is cancelled. The duration of the set wash programme will now appear in the display in minutes, e. g. 120.

The set delay timer can also be cancelled it the programme selector is set to the OFF position.

Soaking duration

With depressed PRE WASH button, by pressing the DELAY TIMER button, the duration of soaking can be extended by 1 to a maximum of 19 hours.

- 1. Press the PRE WASH button.
 - 2. Press DELAY TIMER button.

Soaking is set, the WASH TIME indicator illuminates.

The soaking time is now increased by 1 hour.

3. By repeated pressing of the DELAY TIMER button, the soaking times can be increased in steps of an hour.

The WASH TIME and DELAY TIMER displays light up.

Opening and closing the door

Open: Press the DOOR/LIGHT button. The door springs open.

DOOR O



Close: Press the door firmly closed.

When the unit is switched on, the DOOR/LIGHT display shows whether the door can be opened:

green: The door can be opened (not when programming is activated, see the section "Programme protection" for details)

off: Door cannot be opened

– red: Door is open

The washing drum is illuminated when the door is open. The light goes out automatically after approx. 3 minutes.

Loading the Washing

- For maximum load, see "Programme Tables".

 See "Sorting and Preparing a Wash Load" for information on how to prepare washing correctly.
- 1. Sort and prepare the washing according to type and colour.
 - **2.** Open the door: Press DOOR/LIGHT button. Door springs open.
 - 3. Load the washing.

Important! Do not trap washing when closing the door. The fabrics and the appliance could be damaged.

4. Close the door firmly.



Add detergent/conditioner

For information concerning detergent and conditioners see the section "Detergent and Conditioners".

1. Open the detergent dispenser drawer: grasp the drawer at the flap at the bottom (1), and pull out the drawer to its full extent (2).




2. Add detergent/conditioner.

Compartment for in-wash stain treatment/tablets

Only for STAIN programme option.

Compartment for washing powder/ tablets for main wash

(If you use water softener and need the right compartment for the pre-wash detergent/soaking agent, add the water softener to the main wash detergent in this compartment.)

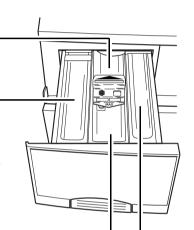

Compartment for liquid conditioner

(softener, finisher, starch)

Important! Do not fill compartment above the MAX mark. Concentrated conditioner may need to be diluted up to the MAX mark; dissolve starch powder.

Information: A small amount of residual water in the compartment for liquid conditioners is normal and will not affect the rinse results.

Compartment for pre wash detergent/soaking agent Only for PRE WASH programme option or for water softener.

3. Push the detergent dispenser drawer in fully.

i If using liquid detergent/tablets:

Use the dispensing containers supplied by the detergent industry for adding liquid detergent or tablets. Follow the instructions on the detergent package.

Starting the wash programme

- 1. Check that the water tap is open.
 - **2.** Starting the wash programme: Press the START/PAUSE button. The wash programme is started or starts after the end of the time delay set.





If the DOOR/LIGHT indicator flashes red when pressing the START/PAUSE button, then the door is not properly closed. Press the door firmly closed and press the START/PAUSE button again.

If a delay start has been set:

The delay time set counts down, the remaining time until the start of the programme is displayed in the multi display (in hours remaining). During this time, you can add washing or change the delay time or cancel it.

- Adding washing: Press the START/PAUSE button. The door can be opened. Then close the door and press the START/PAUSE button again.
- Changing or stopping the delay time: Press the DELAY TIMER button until the desired time is displayed; when the duration of the programme is displayed (e. g. 120 minutes) the wash programme starts immediately.

Washing Programme Progress

Programme progress display

Prior to the start, the programme steps chosen are displayed by the Programme progress display. During the washing programme the current programme step is displayed.

PRE WASH

MAIN WASH

RINSE ()

RINSE +

SPIN 🔘

END (

Multi display

The expected time remaining (in minutes) up to the end of the programme is shown in the Multi display.



The multi display indicates the estimated duration, in minutes, of the programme. These timings are estimates and can vary according to incoming water temperature, type and quantity of laundry, out of balance spin detection and foam detection. During the programme countdown, the remaining time can be recalculated due to any of the above factors.

Changing spin speed

During the washing programme, the spin speed can still be changed or RINSE HOLD can be set.

Other settings cannot be changed.

Stopping the programme

- Turn the programme selector to OFF in order to stop the washing prematurely.
- The programme can be interrupted at any time with the START/PAUSE button and can be continued again by pressing this button again.

Washing cycle complete/Removing the washing

Once the wash programme has come to an end the END indicator illuminates on the programme progress display.

- If the EASY IRON programme was selected, and anti-crease phase of approximately 30 minutes follows the programme end. Here, the multi display shows the remaining time and the END indicator illuminates. During the anti-creasing phase, the door can be opened at any time and the washing can be removed.
- If RINSE HOLD was selected, the display next to the START/PAUSE button flashs.
- **1.** After a rinse hold, the water must first be pumped out:
 - Either press the START/PAUSE button (water is pumped out and the washing is spun according to the completed programme; using the RINSE HOLD spin speed button, it is possible to change the spin speed during spinning),

or

- Turn the programme selector to DRAIN and press the START/PAUSE button (the water is pumped off without spinning), or
- Turn the programme selector to SPIN or SHORT SPIN and press START/ PAUSE button (water is pumped out and the washing is spun accordingly).

After the end of this programme step, the END display lights up.

2. Open the door.

As soon as the indicator next to the DOOR/LIGHT button is green, the door can be opened (not if programme security is activated. For details see "Programme security").

- 3. Remove the washing.
- **4.** Turn the programme selector to OFF.
- **5.** After washing, pull the washing detergent drawer out a little so that it can dry out. Leave the door ajar so that air can circulate in the drum.
- If the display OVER DOSING lights up, too much washing detergent was used in the washing program just ended. During the next wash, pay attention to the dosing information of the washing detergent manufacturer and pay attention to the filling quantity!

Caution! If the washing machine is not used for a long time: Close the water tap and disconnect the washing machine from the electricity mains. (Anti-flood system Aqua Control with Aqua Alarm does not function if the power supply is interrupted.)

Programme Tables

Washing

The tables do not show all the possible settings, only those most likely to be selected for everyday purposes.

Type of washing, Care symbol	Max. Load ¹⁾ (Dry weight) ²⁾	Programme selector Temperature [in °C]	Possible Programme options or functions
Cottons/Coloureds ³⁾	6kg	ENERGY SAVING 60	PRE WASH SENSITIVE STAIN TIME SAVER
Cottons/Coloureds ன் ன் ன்	6kg	COTTONS/LINEN, EASY-CARES 20 to 95	PRE WASH SENSITIVE STAIN TIME SAVER
	3 kg	REFRESH 30	
Easy-Cares ³⁾	3kg	COTTONS/LINEN, EASY-CARES 20 to 60	PRE WASH SENSITIVE STAIN TIME SAVER
	1 kg	EASY IRON ⁴⁾ 40	PRE WASH STAIN TIME SAVER
	3 kg	REFRESH 30	
Delicates	3kg (or 15-20m ² net curtains)	DELICATES 30, 40	PRE WASH STAIN TIME SAVER
	3kg	FASHION 40	THE STATE

Type of washing, Care symbol	Max. Load ¹⁾ (Dry weight) ²⁾	Programme selector Temperature [in °C]	Possible Programme options or functions
Wool/ Handwash	2kg	WOOL∕ 6 COLD to 40	
Silk/Handwash	1kg	SILK/ 30	TIME SAVER

¹⁾The load amount inquiry operates in accordance with the EN 60456 standard load.

Separate Rinse/Conditioning/Starching/Treating

Type of washing	Max. load (dry weight)	Programme selector
Cottons/Coloureds	6kg	STARCHING
Wool/Handwash	2kg	STARCHING + TIME SAVER button

Separate Spinning

Type of washing	Max. load (dry weight)	Programme selector
Cottons/Coloureds	6kg	SPIN
Easy-Cares	3kg	SFIN
Delicates	3 kg	
Wool/Handwash	2 kg	SHORT SPIN
Silk	1kg	

²⁾ A 10 litre bucket holds around 2.5kg of dry clothes (cotton).

³⁾ Programme settings for testing in accordance with or in support of standard EN 60 456 and IEC 60 456, are described in the Chapter "Consumption Values and Programme Times".

⁴⁾ Creasing can be largely avoided by keeping wash loads under 1kg (roughly 5 to 7 easy-care men's shirts).

Cleaning and Care

Control panel

Important! Do not use any furniture cleaning agents or aggressive cleaning agents in order to clean panel and control parts.

Wipe control panels with a damp cloth. When doing so, use warm water.

Detergent Drawer

The detergent drawer should be cleaned from time to time.

- 1. Pull the detergent drawer out as far as it will go.
 - 2. Remove the detergent drawer by pulling sharply.
 - **3.** Take the conditioner insert out of the middle compartment.
 - **4.** Clean the conditioner insert under running water.

 


5. Clean the compartments with warm water from the rear side. It is best to use a flat brush



6. Push on the conditioner insert as far as it will go so that it is securely in place.

7. Use a brush to clean the entire rinsing-in section of the washing machine, particularly also the nozzles on the top side of the rinsing-in chamber.



8. Set the detergent drawer into the guide tracks and push in.

Washing Drum

The washing drum is made of stainless steel. Rusting foreign bodies in the washing can cause rust deposits on the drum.

Important! Do not clean the stainless steel drum with decalcifying agents containing acids, scouring agents containing chlorine or iron, or steel wool. Our Customer Service can provide suitable agents.

Remove any rust deposits on the drum using a stainless steel cleaning agent.

Main door

Check on a regular basis to see if deposits or foreign objects are present in or at the rubber sleeve behind the door, and remove.

What to do if...

Remedying faults

In the event of a fault, try to solve the problem yourself with the aid of the information provided here. If you use the Customer Service for one of the faults listed here or to remedy an operating error, the Customer Service technician's visit will not be free of charge, even during the warranty period.

• If the fault code <code>L ! or L2</code> is shown in the Multi-display, you may be able to remedy the problem yourself (see the faults table below). When you have remedied the fault, press the START/PAUSE button.



• With all other displayed faults (**£** plus number or letter): switch appliance off and on again. Reset the wash programme and press the START/PAUSE button.

If the fault code is displayed again, please contact the Customer Service department quoting the fault code.

Problem	Possible cause	Remedy
Washing machine does not work.	The mains plug is not plugged in.	Plug in the mains plug.
	The house fuse has blown.	Replace the fuse.
	Door is not properly closed.	Close door; Lock must engage audibly .
	START/PAUSE button has not been pressed long enough.	Keep the START/PAUSE button pressed until the programme starts.
Door cannot be closed.	Child safety feature is switched On.	Cancel child safety feature (see section "Child safety feature").
Water is not entering. Error code [! appears.	Water tap is closed.	Open water tap.
	Filter in the socket of the in- let hose connection is blocked.	Close water tap. Disconnect hose from water tap, remove filter and clean under running water.
	Water tap is blocked with limescale or is faulty.	Check the water tap and have it reaired if necessary.

Problem	Possible cause	Remedy
Washing machine vibrates during operation or is unstable.	Transport packaging has not been removed.	Remove transport packaging according to setting up and connection instructions.
	The machine is not level.	Adjust the feet according to installation and connection instructions.
	There is very little washing in the drum (e.g. only a dressing gown).	This does not affect the operation of the machine.
	Water could not be fully pumped out before spinning because the drain hose is kinked or water pump is blocked.	Check the drain hose and remove any kink if necessary, or clean the drain pump and, if necessary, remove foreign bodies from the pump housing.
Excessive foaming during the main wash.	Probably too much detergent has been used.	If may be necessary to reduce the amount of detergent used. Follow the detergent manufacturer's recommendations.
Water leaks out of the washing machine.	The screw Connection on the inlet hose is leaking.	Tighten the inlet hose screw connection.
	Drainage hose is leaking.	Check the drain hose and replace it if necessary.
	The drain pump cover is not correctly close.	Close cover correctly.
	Washing is caught in the door.	Stop the programme, remove the washing caught in the door. Restart the programme.
	The emergency emptying hose is not correctly closed or is leaking.	Close the emergency empty- ing hose (see section "Carry out emergency emptying"). Call your local Service Force Centre if the emergency emptying hose is leaking.

Problem	Possible cause	Remedy
The drain pump runs constantly – even when the appliance is switched off.	The Aqua Control anti-flood system has been activated.	Close the water tap, remove the mains plug and inform your local Service Force Cen- tre.
Fabric softener was not rinsed in, compart-ment & for conditioners is filled with water.	The insert in the compartiment for conditioners is not correctly attached or is blokked.	Clean the detergent dispenser drawer and attach the conditioner insert correctly.
Washing is heavily creased.	Probably too much washing has been put in drum.	Pay attention to the maximum load quantity (see programme tables). In the case of easy-care fabrics select the EASY IRON programme.
The washing has not been spun as dry as usual.	The washing was not able to be distributed evenly in the drum prior to spinning.	Always load the drum as ful as possible with a combination of large and small items.
	Drain hose is kinked.	Remove the kink.
The washing is not sufficiently spun. Water is left in the drum. Error code [2] appears	Maximum pump height (emptying height 1 m from base surface of the appli- ance) is exceeded.	Contact your local Service Force Centre. For pumping heights over 1 m a conver- sion kit is available as a spe- cial accessory.
	Drain pump is blocked.	Switch off appliance and pull out the mains plug. Clean the drain pump.
	At the siphon connection: Siphon is blocked.	Clean siphon.
The door cannot be opened when appliance is switched on.	The door is locked for safety reasons (DOOR/LIGHT display is off).	Wait until the DOOR/LIGHT display lights up green.
	The programme security function is On.	Cancel programme security (see section "Programme protection").

Problem	Possible cause	Remedy
Remnants of detergent are building up in the detergent drawer.	Water tap is not fully opened.	Open water tap fully.
	The inlet hose filter in the coupling of the inlet hose at the tap is blocked.	Close the water tap. Unscrew the inlet pipe from water tap and from the appliance and clean the filter.
The rinse water is cloudy.	The cause is probably a detergent with a high silicate content.	No negative influence on the rinse results, use a liquid detergent if necessary.
When pressing a programme option button the corresponding display does not light up.	The selected programme option cannot be combined with the set programme.	Make another selection.
Programme cycledisplay flashes constantly.	Programme security is switched On; the programme selector has been moved during the wash cycle.	Turn programme selector to its original position (see "Programme security").

If the washing results are not satisfactory

If the washing has turned grey and if limescale is deposited in the drum, then

- Too little detergent was used.
- The wrong detergent was used.
- Special soiling was not pre-treated.
- Program or temperature not set correctly.
- If multi-component detergents are used, the individual components were not used in the correct ratio.

If there are still grey spots on the washing,

- Washing soiled with ointments, grease or oils was washed with too little detergent.
- Too lower temperature was used for washing.
- A frequent cause is that softener particularly that in concentrated form has reached the washing. Wash out such spots quickly and use the softener concerned carefully.

If at the end of the last rinse foam is still visible

• Modern detergents can also cause foam in the last rinse. However, the washing is still sufficiently rinsed.

If there are white remnants on the washing

 These are insoluble components of modern detergents. They are not the result of an insufficient rinsing effect.
 Shake or brush out the washing. In future, perhaps you should turn the washing inside out before washing it. Examine your choice of detergent and if necessary use liquid detergent.

Carrying out emergency drainage

- If the washing machine no longer pumps off the washing solution, emergency drainage must be performed.
- If the washing machine is in a room where there is a risk of frost, emergency drainage must be performed if there is a possibility of frost.

 
In addition: unscrew the inlet hose form the water tap and place it on the floor. Empty the drainage hose.



Warning! Switch off the washing machine before performing emergency drainage and pull out the mains plug.

Caution! The washing solution escaping from the emergency drainage hose may be hot. There is a risk of scalding! Allow the washing solution to cool down before performing emergency drainage.

- 1. Place a flat collecting vessel in order to collect the washing solution which is draining off.
 - **2.** Fold open the flap in the right section of the base outwards and pull it off.



3. Remove the emergency drainage hose from its holder.



- **4.** Place the container under the hose.
- **5.** Detach the plug of the emergency drainage hose by turning it anticlockwise and pull it out.

The washing solution runs out. Depending on the amount of solution, it may be necessary to empty the collecting vessel several times. To do this, close the emergency drainage hose temporarily with the plug.



When the water is completely drained:

- **6.** Push the plug securely into the emergency drainage hose and turn it clockwise to secure it.
- **7.** Replace the emergency drainage hose in its holder.
- 8. Put on the flap and close.

Drain pump

The drain pump is maintenance free. The cover of the drain pump must only opened in the event of a malfunction when no more water is being pumped out, e.g. if the pump is blocked.

Before loading the machine, please always ensure that there are no foreign objects left in the pockets or in between the items to be washed. Paper clips, nails etc. which may find their way into the washing machine along with the washing will remain in the drain pump housing.

To restart the drain pump when it is blocked, please proceed as follows:



Warning! Switch off the washing machine and remove the mains plug before cleaning the drain pump!

 
- 1. First carry out an emergency emptying procedure (see section "Carrying out emergency emptying").
 - **2.** Place a cloth on the floor in front of the cover of the drain pump. Residual water may run out.
 - **3.** Unscrew the drain pump cover in an anti-clockwise direction and pull it out.



4. Remove any foreign objects and fabric lint from the pump housing.



5. Replace the pump cover. Laterally insert the webs on the cover into the guide slots and screw on the cover in a clockwise direction



- 6. Close the emergency emptying hose and place it in the holder.
- 7. Close the flap.



Emergency unlocking of the door

 
If the filling door can no longer be opened, it can be opened with the aid of the emergency unlocking facility.



Warning! Switch off the washing machine before operating the emergency unlocking and remove the plug from the mains!



- 1. If water is visible in the door's window, first perform emergency emptying (see the section "Carrying out emergency emptying").
 - 2. Open the flap downwards in the right part of the base panel.
 - 3. Turn the rotary knob clockwise using a coin. The filling door springs open.



Additional Rinse RINSE+

The washing machine is set for very economical water consumption. However, for persons who suffer from allergies to detergents, it can be helpful to rinse with extra water.

If this function is set, an additional rinse cycle is carried out for the COTTONS/LINEN, EASY-CARES, EASY IRON and DELICATES programmes. When the appliance is supplied from the factory, the additional rinse function is not set.

Setting the additional rinse function:

- **1.** Turn the programme selector to SHORT SPIN.
 - **2.** Press the SENSITIVE button for at least 5 seconds. After the button has been pressed for 5 seconds, RINSE+ will flash in the programme progress display for 5 seconds.
 - **3.** While RINSE+ is flashing, release the SENSITIVE button. Once the flashing has stopped, the additional rinse has been set. It will remain set until it is cancelled again. When the additional rinse has been set, the RINSE+ indicator in the programme progress display is illuminated before the programme starts and during the additional rinse.
 - **4.** If you wish to check whether the additional rinse is set:
 - Turn the programme selector to SHORT SPIN.
 - Press the SENSITIVE button briefly.

If RINSE+ flashes in the programme progress display the additional rinse has been set.

Cancelling the additional rinse:

- **1.** Turn the programme selector to SHORT SPIN.
 - 2. Press the SENSITIVE button for at least 5 seconds. Immediately the button is pressed RINSE+ will flash in the programme progress display. After 5 seconds RINSE+ will stop flashing and remain constantly illuminated for a further 5 seconds.
 - **3.** While RINSE+ is constantly illuminated, release the SENSITIVE button. Once RINSE+ is no longer illuminated the additional rinse has been cancelled.
- An additional rinse cycle increases water consumption and the programme duration.

Water Cooling

It may be necessary to cool down the water before pumping it out in order to prevent thermal damage to the plastic drainage pipes.

The water is cooled down before pumping out at the end of the main wash cycle (by adding cold water). This setting only works on the COTTONS/LINEN, EASY-CARES programme when the temperature is above 40 °C.

When the appliance is supplied water cooling is not set except for the SENSITIVE programme option.

Setting the water cooling function:

- **1.** Turn the programme selector to SHORT SPIN.
 - **2.** Press the PRE WASH button for at least 5 seconds. After the button has been kept pressed for 5 seconds, MAIN WASH flashes on the programme progress display for 5 seconds.
 - **3.** Release the PRE WASH button while MAIN WASH is flashing. Once it has stopped flashing, the water cooling function is set. It remains set until it is cancelled again.
 - **4.** If you wish to check whether the water cooling function is set:
 - Turn the programme selector to SHORT SPIN.
 - Press the PRE WASH button briefly.

When MAIN WASH flashes in the programme progress display, the water cooling function is set.

Cancelling the water cooling function:

- 1. Turn the programme selector to SHORT SPIN.
 - 2. Press the PRE WASH button for at least 5 seconds. MAIN WASH flashes in the programme progress display as soon as the button is pressed. After 5 seconds MAIN WASH will stop flashing and remain constantly illuminated for 5 seconds.
 - **3.** While MAIN WASH is constantly illuminated, release the PRE WASH button. Once MAIN WASH is no longer illuminated, the water cooling function has been cancelled.
- Water cooling increases water consumption and the programme duration.

Additional Rinse and Water Cooling

You can combine the additional rinse cycle with water cooling. Setting as for "Additional Rinse" and "Water Cooling".

Variomatic Loose Spin

A spin function that can be set as an integrated part of the final spin. The washing clings less to the drum wall and can be removed more easily. May be selected with COTTONS/LINEN, EASY-CARES.

Setting loose spin:

- **1.** Turn the programme selector to SHORT SPIN.
 - **2.** Press the STAIN button for at least 5 seconds. After the button has been kept pressed for 5 seconds, END flashes on the programme progress display for 5 seconds.
 - **3.** Release the STAIN button while END is flashing. Once it has stopped flashing, the loose spin function has been set. It will remain set until it is cancelled again.
 - **4.** If you wish to check whether the loose spin function is set:
 - Turn the programme selector to SHORT SPIN.
 - Press the STAIN button briefly.

If END flashes in the programme progress display, the loose spin function has been set.

Cancelling loose spin:

- **1.** Turn the programme selector to SHORT SPIN.
 - 2. Press the STAIN button for at least 5 seconds. END flashes in the programme progress display as soon as the button is pressed. After 5 seconds END will stop flashing and remain constantly illuminated for 5 seconds.
 - **3.** While END is constantly illuminated, release the STAIN button. Once END is no longer illuminated, the loose spin function has been cancelled.

Programme Protection

To safeguard a programme setting against unwanted changes (e. g. program selector turned, option buttons pressed etc.), you can set the programme protection. This prevents your washing being damaged.

It is possible to set or cancel the programme protection at any time during a programme.

Selecting programme protection:

- **1.** Select the desired wash programme settings.
 - 2. Press the START/PAUSE button to start the programme.
 - **3.** Press and hold down the PRE WASH and SENSITIVE buttons simultaneously for 5 seconds. The programme progress indicator will flash for 5 seconds; programme protection has been set.
- As long as the programme protection is set, you cannot make any other settings. The door cannot be opened using the DOOR/LIGHT button. Even after the wash cycle has finished you will need to cancel the programme protection before you can open the door.

If an attempt is made to change the selected settings during the wash cycle by activating a button, the programme progress display will flash for 5 seconds.

If you attempt to change the selected setting by turning the programme selector, the programme progress display will flash until the original setting of the programme selector is restored. The wash cycle is not influenced in either case.

The programme selector must be in its original position in order to cancel the programme protection.

Cancelling programme protection:

Press and hold down the PRE WASH and SENSITIVE buttons simultaneously for 5 seconds. The programme progress indicator flashes for 5 seconds and then remains illuminated constantly for 5 seconds. Programme protection has been cancelled.

Child Safety Feature

If the child safety feature is set, the filling door can no longer be closed and no washing program can be started.

Setting the child safety feature Use a coin to turn the rotary knob

Use a coin to turn the rotary knob on the inside of the filling door clockwise as far as it will go.


<u>(1)</u>


B

Warning! The rotary knob must not be in a vertical position after adjustment, otherwise the child safety feature is not active. The rotary knob must project as shown in the diagram

Cancelling the child safety feature

Turn the rotary knob anticlockwise as far as it will go.

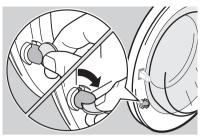

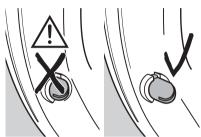

Installation and connection instructions

Installation Safety Precautions

- Do not tilt the washing machine onto its front or onto its right side (viewed from the front). Electronic components can get wet.
- Check the washing machine for transport damages. A damaged unit must never be put into operation under any circumstances. In the event of damage, please contact your supplier.
- Ensure that all parts of the transport safeguard are removed and that the unit is splash protected, see "Removing transport safeguard". Otherwise, the units or neighbouring furniture can be damaged when spinning.
- Always insert the plug into a correctly installed earthed socket.
- In the case of permanent connection: A permanent connection may only be made by an authorised specialist.
- Before putting the machine into operation, ensure that the mains voltage and current type shown on the unit's rating plate correspond with those at the place where the machine is being installed. The fuse rating is also found on the rating plate.
- Should work be carried out on the water supply installations in order to allow the machine to be connected properly to the water supply, this work must be carried out by an authorised installer.
- Should work be carried out on the mains supply in order to allow the machine to be connected properly to the electricity supply, this work must be carried out by an authorised electrician.
- The mains lead may only be replaced by the customer service or by an authorised electrician

Installation of the appliance

 $oxed{i}$

Washing machines with curved panels are not suitable for installing under units.

Transporting the appliance

- Do not place the washing machine on its front or on its right side (viewed from the front). Otherwise, electrical components can get wet.
- Never transport the unit without the transport safeguard. Do not remove the transport safeguard until the appliance is at the installation location. Transporting the unit without the transport safeguard can damage it.
- Lift the appliance neither by an open filling door nor by the base.


When transporting the unit with a sack trolley:

 Attach the sack trolley only at the side. The sack trolley shovel must not be longer than 24 cm, otherwise the float switch can be destroyed.


Remove transport packaging

Important! It is essential to remove the transport packaging before putting the appliance into operation. Keep all parts of the transport packaging in a safe place for future use.

1. Open both hose holders on the appliance's rear side and remove the hoses and mains cable.

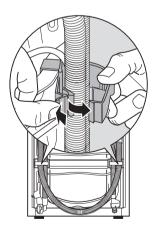


 
- **2.** Pull both hose holders off the appliance with a strong pull.



- **3.** Remove the screw D, including the compression spring with the special spanner A.
- **4.** Cover the hole with the cap C. **Important!** When fitting the plastic caps, press until they snap into the rear panel securely.
- **5.** Remove the two screws (E) with the special spanner (A).
- 6. Remove the 4 screws (F).
- 7. Remove the transit bar (G).
- **8.** Screw the 4 screws (F) back in for safe keeping.
- **9.** Close the 2 large holes with the caps (B).

 Important! When fitting the plastic caps, press until they snap into the rear panel securely.



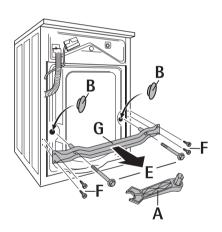

Prepare the installation place

- The installation surface must be clean and dry, free of floor polish residues and other greasy coatings so that the unit does not slip away. Do not use lubricants as a sliding aid.
- Installation on a high-veil carpet or floor tiles with soft sponge backs is not recommended because the standing safety of the appliance is then no longer ensured.
- By installation surfaces with small-format tiles, lay a conventional rubber mat underneath.
- Minor unevenness of the floor surface should never be levelled out by laying pieces of wood, card or similar materials, but rather should always be compensated for by adjusting the screw feet.
- If, for space reasons, it is not possible to avoid setting up the unit directly next to a gas or coal-fired cooker: install a thermal insulation panel between the cooker and washing machine (85 x 57cm) which must have an aluminium film on the side against the cooker.
- The washing machine must not be set up in a room where there is a danger of frost. Frost hazard!
- Flexible feed and drain tubings may not be crinkled or squeezed.

Installation on a concrete base

If the unit is set up on a concrete base, for safety reasons it is essential to fit stand plates in which the washing machine is adjusted. The stand plates are available from Customer Service under the spare parts number 645 425 058.



Installation on vibrating floors

Where the floor vibrates, particularly in the case of wooden beam floors with pliable boards, securely screw a water-resistant wooden panel at least 15mm thick onto at least 2 floor planks. If possible, set up the unit in the corner of a room, as the wooden floor is optimally restrained there and is therefore least likely to be subject to resonance vibrations.

Compensate for floor unevenness

Automatic adjustment foot: The rear left foot of your washing machine is designed as a spring leg. This means that it guarantees that your unit will stand securely even at high spin speeds.


If, nevertheless, the washing machine is unstable during spinning, please proceed as follows:

1. Set the three adjusted feet at the nominal value of 10 mm. To do this, use the supplied special spanner to remove the transport safeguard.

If the automatically adjusting foot does not reach the floor:

- 2. Automatic adjustment foot (rear left) manually for extending the regired dimension.
- **3.** If necessary, check the setting with a spirit level.


Caution! Never use wood, card or similar underlays to level out minor floor unevenness. Instead, always adjust the adjustment foot.

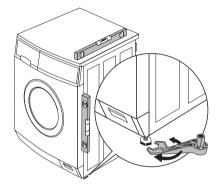

Electrical connection

Details of the mains voltage, current type and required fuses can be found on the rating plate. The rating plate is located at the top above the filling door.

 For permanent electrical connection within the electrical circuit, provi-



sions must be made which allow for electrical disconnection of the appliance from the mains with a contact opening of at least 3 mm at all poles. Suitable devices include circuit breakers, fuses (threaded fuses must be entirely removed from the socket), ground fault circuit interrupters and contactors. Permanent connection may only be carried out by an authorised electrician.

- This appliance complies with the following EC directives:
 - The "Low Voltage Directive" 72/23/EU with changes
 - The "EMC Directive" 89/336/EU with changes

Water connection

The washing machine has safety features which prevent back-contamination of the drinking water and which conform to the national regulations of the water authorities (e.g. for Germany: DVGW guidelines). This means that additional protective measures in the installation are not necessary.

Important!

- Units for connecting to cold water must not be connected to hot water.
- Use only new hose sets for the connection.

Permissible water pressure

The water pressure must be at least 1 bar (= $10 \text{ N/cm}^2 = 0.1 \text{ Mpa}$), maximum 10 bar = $100 \text{ N/cm}^2 = 1 \text{ Mpa}$).

- If more than 10 bar: Connect a pressure-reduction valve upstream.
- If less than 1 bar: Unscrew the inlet hose on the unit side at the solenoid intake valve and remove the flow regulator (to do this, remove the filter with pointed pliers and take out the rubber washer behind). Replace the filter.

Water inflow

A pressure hose 1.5m in length is supplied.

If a longer inflow hose is required, only a VDE-approved, complete set of hoses with fitted hose screw connections offered by our Customer Service is permissible.

- Hose sets in lengths of 2.2m, 3.5m and 5m are available for washing machines without Aqua-Control.
- Hose sets in lengths of 2.0m, 2.9m and 3.9m are available for washing machines with Aqua-Control.

 
Caution! Never cut into pieces in order to extend the hoses!

- Sealing rings are supplied either in the plastic nuts of the hose screw connection or in the enclosed pack. Do not use other seals!
- 1. Connect the hose with the angled connection to the machine.




Caution!

- Do not lay the infeed hose vertically downwards. Instead, turn it to the right or left as shown in the diagram.
- Tighten the hose connection only by hand.



 - Connect the hose with the straight connection to a water tap with a R 3/4 (inch) screw thread.
 Caution! Only tighten the screw connection manually.
- **3.** By slowly opening the water tap before putting the washing machine into operation, check that the connection is free of leaks.



Water drain

The drainage hose can either be connected to a siphon or hung in a wash basin or discharge basin or a bath tub.

 
Only original hoses may be used for extensions (max. 3m laid on the floor and then up to 80cm high). Customer Service stocks drainage hoses in lengths of 2.7 and 4m.

Important! It is essential to lay the drainage hose without kinks.

Water drain-off inside a siphon


The grommet on the hose end fits all standard siphon types.


Secure the connection between the grommet and siphon with a hose clamp.



- Small basins are not suitable for drainage. Water could overflow!
- The end of the drainage hose must not be submerged in the pumped-out water. Otherwise, the water could be sucked back into the unit.
- When hanging in a wash basin or a bath tub, the drainage hose must be secured with the supplied attachable bend to prevent it slipping. The backsurge force of the escaping water could otherwise force the hose out of the basin.

 Tie the bend to the tap or the wall using a piece of string.

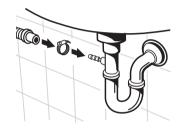





Delivery heads over 1m

To pump off the washing / rinsing solution, every washing machine has a drain pump which carries liquids up to a height of 1m via the drainage hose, calculated from the machine's standing surface.


Please contact Customer Service for delivery heads of over 1m.

Technical data

Adjustment possibility
Filling quantity (program-dependent)
Area of use
Drum speed, spinning
Water pressure

Approx. +10 / -5mm max. 6kg Domestic See rating plate 1-10 bar (= 10 - 100 N/cm² = 0.1 - 1.0 Mpa)

Dimensions

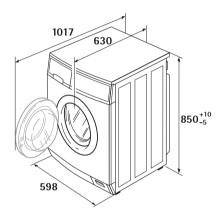

(dimensions in mm)

Warranty conditions / Customer service centres

Weitere Kundendienststellen im Ausland

In diesen Ländern gelten die Garantiebedingungen der örtlichen Partner. Diese können dort eingesehen werden.

Further after-sales service agencies overseas

In these countries our AEG agents' own guarantee conditions are applicable. Please obtain further details direct.

Autres agences étrangères assurant le service après-vente

Dans ces pays, les conditions de garantie des concessionnaires de la région sont valables. Vous pouvez les consulter sur place.

Otros puntos de Postventa en el extranjero

En estos países rigen las condiciones de nuestros representantes locales. las cuales pueden ser consultadas allí mismo.

Ulteriori uffici del servizio tecnico assistenza clienti all'estero

In questi paesi sono valide le condizioni di garanzia dei partner locali. Queste condizioni possono essere esaminante sul luogo.

Serviços de assistência técnica no estrangeiro

Nestes países são válidas as condições de garantia dos concessionários locais, podendo aí ser consultadas.

További vevöszolgálati irodák külföldön

Ezekben az országokban a mi AEG vevöszolgálatainknál saját jótállási feltételek alkalmazhatók. A további adatokat kérjük közvetlenül szerezzék be.

U.A.E. Abu Dhabi	Jordan	Malta
Universal Trading Company	Jordan Household	ITC
P.O. Box 43 99	Supply Co. Ltd.	International Trading Com-
Tel.: 335331	P.O. Box 3/68	pany
	Amman/Tel.: 69 70 50	White House Building
		Mountbatte Street
		Blata L-Bajda/Tel.: 220644

Egypt	Kanada	Mauritius
Middle East Commercial	EURO-LINE Appliances	Happy World Centre Ltd.
Center	2150 Winston PARK Drive 20	P.O. 7 54
P.O. Box 19	Oakville, Ontario L6H 5V1	1 Chausee Street
Kairo-Heliopolis	Tel.: 905 829 3980	Port Louis
Tel.: 29917/31634	Fax: 905 829 3985	Tel.: 25355

Australia

ANDI-Co Pty. Ltd 9 Kingston Town Close Oakleigh VIC 3166

Tel.: (03) 9569 1235

Fax: (03) 9569 1450

Bahrain/Arabian Gulf

A.A. Zayani & Sons P.O. Box 9 32 Bahrain

Tel.: 261060

Bulgaria

Electrolux Bulgaria E.O.O.D. 91 Levski Blvd.

1000 Sofia Tel.: 2 806676

Fax. 2 980 5276

Cyprus

Hadjikyrlakos & Sons Ltd. Prodromou 121 P.O. Box 21587 Nicosia 1511 Service Telephones: Nicosia 02 481226 Limassol 05 562182 Larnaca 04 633929

Estonia

Electrolux Estonia Ltd. Mustamäe tee 24 EE0006 Tallinn Tel.: (372) 6 650 090

Paphos 06 932 699

Fax: (372) 6 650 092

Hongkong

Wo Kee Services Ltd. 585-609 Castle Peak Road Kwai Chung N.T. Hongkong

Tel.: 2494 4000

Korea (South)

Core Incorp. 3/F Chewoo Bldg. 200 Nonhyun-Dong Kangnam-Ku

Seoul

Telefon 82 2 549 89 61

Croatia

Electrolux D.O.O. Suplova 7 10000 Zagreb Tel.: 1 61 19512

Fax: 1 61 19513

Kuwait/Arabian Gulf

Ali Al-Ghanim Est. P.O. Box 10 83 Tel.: 5322463 Fax: 5242114

Lebanon Adib & Assaferi P.O. Box 539 Tripoli

Latavia

Electrolux Latavia Ltd. Terlaton Street 42/44 1011 Riga

Tel.: 371 2 297821 Fax: 371 2 821286

Lthuania

Electrolux Lthuania Verkui 29 2600 Vilnus Tel.: 372 272 3326 Fax: 372 272 3366 Namibia

AEG NAMIBIA (PTY) LIM-ITED-Jeppe Street Northern Industrial Area Windhoek

Tel.: (061) 21-6082/4 Fax: (061) 217838

New Zealand

Euro-Life New Zealand Ltd. Privat Bag 58 Symonds Street Auckland

Tel.: (09) 525 2222

Nouvelle Caledonie

Socometra N.C. B.P. 483 Nouman Tel.: 275444

Oman

Moshin Haider Darwish P.O. Box 1 35 Muscat Tel.: 703743

Poland

Electrolux Poland Sp. zo.o. ul. Domaniewska 41 02-034 Warszawa tel.: 022 874 33 33 fax: 022 874 33 00

Russia

Electrolux Russia Ltd. 16 Olympiysky prospekt 129090 Moscow Tel.: (095) 937 7837

Fax: (095) 926 5513

Israel

Electricity & Electronic Services-Evis LTD. 19 Hataasia st. Raanana.

Industrial area 43654 Tel: 972-9-7448118

Fax: 972-9-7603618 e-mail:evis@evis.co.il

Malaysia

Arzbergh Engineering No. 49A/B, Jalan Petaling Utama 7

4600 Petaling Java Tel.: 3 795 1084 Fax: 3 795 1082

Alia Trading Corporation P.O. Box 4101 King Abdul Aziz Street Riyadh Tel.: 4645977

Al Nahas Est Musaidia Market I PO Rox 1 15 29 Jeddah

Tel.: 6606852

Saudi Arabia

Japan

Electrolux Japan Ltd. Domestic Appliances Depart- 19 Tanglin Road 06-07 ment

Maruzen Showa Warehouse

Building

Tookai 4-5-12, Ota-ku 143-006 Tokyo

Tel.: 0120-13-7117 Fax: 03-3790-5257

Singapore

Arzbergh Engineering Singapore 247909 Tel.: 65 7356572

Fax: 7351124

Slovenia

Electrolux Slovenia D.O.O.

Traska Ul. 132 1000 Ljubljana Tel.: 61 1234 137 Fax: 61 1234 238

Thailand

OLYMPIA Thai Ltd. 44 Ratchadapisek Road 10320 Bangkok

Tel.: 2 513 6111 Fax: 2 513 2574

Slovakia Rep.

Electrolux Slovakia S.R.O. Seberiniho 1 821 03 Bratislava Tel.: 02 4333 4322, 4355 Fax: 02 4333 6976

USA

ANDI Co. Appl. Inc. East 65 Campus Plaza Edison, New Jersey 0837 USA/Tel.: (201) 2258839

South Africa

AEG (Pty) Ltd. 55, 12th Road P.O. Box 1 02 64 Kew/Johannesburg 2000

Tel.: 8069111

Svria

Masri & Shami P.O. Box 24 96 Damascus Tel.: 214080

Hungary

Electrolux Lehel KFT (AEG Div) Erzsébet Királyné útja 87. 1142 Budapest

Tel.: 00361/467-3200

Index


A	P
Aqua Control15, 27	Pre-wash 12, 20, 24, 28
Automatic adjustment foot9, 49	Pre-wash detergent
C	Programme option buttons 12, 28
Care agent9, 18	Programme progress display10
Child safety feature32, 44	Programme protection 23, 43
Coloureds	Pump out27
Conditioner 9, 11, 19, 24, 29	R
Correcting a programme	Rating plate9, 50, 59
Cottons	Refresh
Cottons/Linen, Easy-Cares	Rinse +40
Curtains 16	Rinse hold11, 21, 27
Customer Service15, 31, 32, 59	Rinsing29
D	Risk of frost 6, 37
Delay timer	S
Delicates	Sensitive12
Detergent	Short spin11
Detergent drawer	Silk11, 17, 29
Drain	hand-washable11
Drain pump9, 38	Soaking
E	Soaking agent24
Easy iron12, 28	Softener 8, 24
Easy-cares	Spinning 11, 19, 21, 23, 26, 29
Emergency drainage	Stain9, 12, 20, 28, 36
Emergency unlocking	Starching
Energy Saving Programme12, 28	T
F	Time Saver
Fashion12, 28	U
Н	Update15
Handwash11, 29	W
I	Warranty
In-wash stain treatment9, 24	Wash time
L	Washing powder
Linen	Water
Load14, 28	hardness 8, 18
M	pumping out
Multi-display 10, 32, 59	softener
	Water Cooling41
0	Wool
Opening the door23, 27, 39, 43	Woollens
Over-dosed	hand-washable11

Service

In the chapter "What to do if...", some faults are listed which you can remedy yourself. Look there first if a fault occurs. If you do not find any information there, please consult your Customer Service. (You can find the addresses and telephone numbers in the section "Customer Service Centres".)

Always prepare in advance for the discussion. By doing so you will simplify the diagnosis and the decision on whether customer service is necessary.

 Note the PNC number and S. number. You will find both on the rating plate on the inside of the door of your washing machine.



PNC

Answer as precisely as possible:

- What form does the fault take?
- Under what circumstances does the fault occur?
- Does the multi display show an error message?

When do you incur costs even during the warranty period?

- If you could have remedied the fault yourself with the aid of the fault table (see the section "What to do if..."),
- If several journeys by the customer service technician are necessary because for example he did not receive all the important information before his visit and must collect spare parts. These multiple trips can be avoided if you prepare your phone call as described above.

From the Electrolux Group. The world's No.1 choice.

The Electrolux Group is the world's largest producer of powered appliances for kitchen, cleaning and outdoor use. More than 55 million Electrolux Group products (such as refrigerators, cookers, washing machines, vacuum cleaners, chain saws and lawn mowers) are sold each year to a value of approx. USD 14 billion in more than 150 countries around the world.

AEG Hausgeräte GmbH Postfach 1036 D-90327 Nürnberg

http://www.aeg.hausgeraete.de

© Copyright by AEG

822 943 585-01-170403-01