

H A S S E L B L A D



User Manual

H4D-200MS

H4D-60

H4D-50MS

H4D-50

H4D-40

H4D-31

Customizable button function list

The **TRUE FOCUS**, **AE-L**, **STOP DOWN** and **M.UP** buttons can all be reassigned to different functions. Default settings are as according to name.

None

The button has no function.

True Focus

Activates True Focus function.

AF

Activates the AF system in any focusing mode. When the button is pressed the AF system sets the correct focusing point automatically. This is a rapid, accurate and handy way of using the AF system when the camera is set to manual focus mode. In this manner you take advantage of the accuracy and certainty of the autofocus system while retaining the control inherent in manual focusing mode.

AE-lock

Activates AE lock function.

Self timer

Initiates self timer function.

Bracketing

Initiates bracketing function.

Mirror up

Controls the mirror up or down function (same function as the M-UP button).

Stop down

Stops the lens down.

B mode

Sets the shutter speed to B exposure mode.

T mode

Sets the shutter speed to T exposure mode.

Flash Measure

Initiates flash measure function.

Interval timer

Initiates interval timer function.

Cycle LM mode

Changes the light-metering method in a loop manner: Centre Weighted/ CentreSpot/Spot.

Expose

Acts as alternative shutter release button.

Standby

Sets the camera in standby mode to save battery consumption.

Histogram

Recalls the last shown histogram on the grip LCD.

IAA toggle

Allows IAA rating change of last capture.

Dig. foc check

Displays last exposure taken at 100% scale on digital backs with LCD.

Delete last image

Activate the delete function for the last image in a digital back. (to be implemented at a later stage).

Grey balance exp.


Initiates a grey balance exposure using the marker frame to select the desired tone.

Spirit Level

Activates digital spirit level on sensor unit display and in viewfinder (Currently 60 Mpix model only).

Rear Info Screen

Displays camera information on sensor unit LCD (Currently 60 Mpix model only).

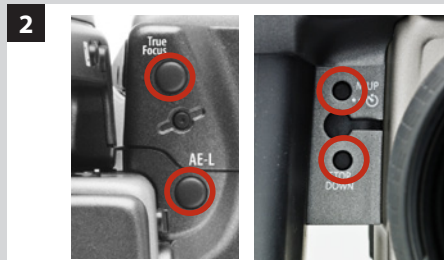

- 1) Press the **Menu** button.
- 2) Press the button you want to reassign (**True Focus**, **AE-L**, **M.UP** or **Stop Down**). This directly accesses the particular button you chose at the **Custom options** level in the menu.
- 3) Rotate the rear control wheel to select the function you want the button to activate.
- 4) Press the **Save** button.



Hasselblad A/S
Hejrevej 30, DK - 2400 Copenhagen,
Denmark

Victor Hasselblad AB
Box 220, SE - 401 23 Göteborg,
Sweden