

Wonky Monkey

User Instructions

Specifications

Model	Rumble Speaker MW SP-BT85
Input	DC 5V Micro-USB (cable included) / AUX (20Hz-20KHz (input frequency)
Output	4Ω3W x 1(Watt), 170Hz-18KHz (speaker frequency)
Battery	Polymer Li-ion Battery. 3.7V 400mAh (charge in 2 hours)
Wireless	2.4GHz Bluetooth 2.1 RDA5851S
Size	Φ60x63.5mm

Included

1x	Bluetooth speaker
1x	USB-MicroUSB charging cable (60cm)
1x	AUX connection cable (40cm)
1x	User manual
1x	CE statement



How to charge the Wonky Monkey Rumble Speaker?

Connect the included USB charging cable to the Micro-USB port on the Wonky Monkey Bluetooth Speaker and to a USB power source, for instance on a PC, laptop or USB-AC adapter (not included).

How to play music on the Monkey Wonky Rumble Speaker?

Charge the speaker and switch it on. Connect the speaker via Bluetooth (wirelessly) or via the AUX connection cable (3.5mm jack) to an audio source. To pair the speaker via Bluetooth, switch it on; you can hear a tone and see a blue/red LED blinking. Turn on Bluetooth on your audio player and pair it with the Wonky Monkey speaker. Play music on your audio player and it will play wirelessly on you Wonky Monkey speaker. Switch it off when you're done to preserve the battery. Hands free calling via Bluetooth only.

Warnings

- Recommended speaking distance for hands free calling: approx. 50cm
- Do not expose the speaker to a heat source or hot environment.
- Do not short-circuit the speaker. Do not submerge or expose the speaker to fluids.
- Do not pierce, break, twist, bend, throw, hit or apply any pressure to the speaker.
- Do not disassemble or alter the outside cover or the speaker.