

---

# User's Manual:

NETmate

NM-9010

Synchronous to Asynchronous Communication Interface

Software Revision 1.010

---

Copyright ©2004, ADD-Engineering B.V.  
Online version copyright © 2004  
All rights reserved.

Printed in the Netherlands

This document is protected by Copyright Protection Laws. The online version of this document may be freely printed and distributed internally, but cannot be modified, in whole or in part, or included in any other work without prior written consent from ADD-Engineering B.V.

### **Limitation of Liability**


ADD-Engineering B.V. makes NO WARRANTY, EXPRESSED or IMPLIED, with respect to this user-manual, and any related items, its quality, performance, merchantability, or fitness for any particular use. It is solely the purchaser's responsibility to determine its suitability for any particular use. Information contained in this document is subject to change without notice.

### **Trademark credits**

The following are trademarks of ADD-Engineering B.V.

NETmate  
SyncMate  
ClockMate

---

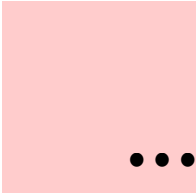

# Contents

- Chapter 1 Introduction 5**
  - Functional Description 6
  - Specification Overview 7
  
- Chapter 2 Front and back panel 11**
  - Front panel 11
  - PWR-LED 11
  - CH1-group 12
    - RxD 12
    - TxD 12
    - CTS 12
    - RxC 12
    - TxC 12
    - ExC 13
  - CH2-group 13
    - RxD 13
    - TxD 13
    - CTS 13
    - RxC 13
    - TxC 13
    - ExC 13
  - N-group 14
    - RxD 14
    - TxD 14
    - DRP 14
  - Back panel 14

	Uplink	14
	Led indicators	15
	1	15
	2	15
	3	15
	4	15
	5	16
<b>Chapter 3</b>	<b>User Interface</b>	<b>17</b>
	Network	17
	Authentication	18
	Main menu	20
<b>Chapter 4</b>	<b>Channel Setup</b>	<b>21</b>
	Channel Configuration 1	21
	Bit Encoding	22
	Bit Order	24
	Sync Pattern	25
	Sync Stripping	25
	Bit Stuffing/Insertion	26
	Frame-Size	27
	Idle-State	27
	Checksum-Mode	28
	Synchronous Speed	28
	Clock-source	30
	Clock Line Inversion	31
	Forward Data To	31
	Async-Speed	31
	Channel Configuration 2	33
<b>Chapter 5</b>	<b>Network Configuration</b>	<b>35</b>
	IP-Configuration	35



	Firmware Upgrade	43
	Upgrade	43
<b>Chapter 8</b>	<b>Factory Defaults</b>	<b>45</b>
	Network defaults	45
	Serial defaults	45
	Authentication defaults	46
<b>Appendix A</b>	<b>Warranty and Maintenance</b>	<b>47</b>
<b>Appendix B</b>	<b>Cables and Connectors</b>	<b>51</b>



# Chapter 1

## Introduction



Congratulations on purchasing your NETmate (NM-9010) from ADD-Engineering. The NETmate combines dedicated communication hardware with on-board data processing software to provide an efficient means of interfacing asynchronous Data Terminal Equipment to synchronous Data Communication Equipment.

By doing this the NETmate off-load communications overhead from your Data Terminal Equipment's CPU for optimum system performance.

## Functional Description

The NETmate is a device that establishes the interface from standard asynchronous serial ports with an RS-232 electrical interface (the ones which are usually standard on computer systems) to standard as well as "non-standard" synchronous systems with an RS-232 electrical interface (non-standard in terms of Commercially Of The Shelf equipment).

The NETmate can interface a single synchronous system to a single asynchronous system. Apart from the configurable "Universal-mode", the NETmate also provides a Link-1, a Link-11B and a transparent interface mode.

To provide flexibility and create a wide adaptation level within these different modes, the NETmate has a number of parameters that can be altered to be able to interface to specific military and commercial protocols. Synchronisation word, bit encoding and bit stripping are only a couple of these parameters.

Though the NETmate is designed from a total new concept, a lot of its functionality is comparable to that of the standard UCC, SyncMate and the ClockMate.

The NETmate provides more functionality, flexibility, stability, configurability, ease of installation and fault check mechanisms.

Above all that, the NETmate also provides a mechanism to remote monitor/configure the unit by means of a web-browser and a TCPI/IP based ethernet connection.

System configuration security (and access control) is guaranteed by a user-name and password combination.



## Specification Overview

<b>DCE / Asynchronous Interface</b>	
Ports	1
Connector	RJ-45 (socket)
Electrical Interface	RS-232
Speed	1200, 2400, 4800, 9600, 19k2 , 38k4, 115k2 bps
Start/Stop bits	1
Data bits	8
Bit order	LSB-first, MSB-first
Flow control	CTS/RTS
Input buffer	128 bytes
Output buffer	32 bytes
Available signals	CTS, RTS, TxD, RxD

Table 1: Specification of DCE interface

<b>DTE / Synchronous Interface</b>	
Ports	1
Connector	RJ-45 (socket)
Electrical Interface	RS-232
Speed	600, 1200, 2400, 4800, 9600, 19k2, 56k, 64k bps
Clock mode	Internal, Dpll, External
Clock source	input: TxC, RxC output: ExC
Sync Length	5...16 bits

Table 2: Specification of DTE interface



<b>Dimensions</b>	
Enclosure	Metal painted light grey
Width	100 mm
Height	26 mm
Depth	79 mm

Table 5: Dimensions



## Chapter 2

# Front and back panel

.....

The NETmate is controlled and configured through a web-browser interface. Through the use of this concept there is no requirement for a front panel keyboard or configuration switches. Only the power supply connector and indication LEDs are placed at the front panel of the unit.

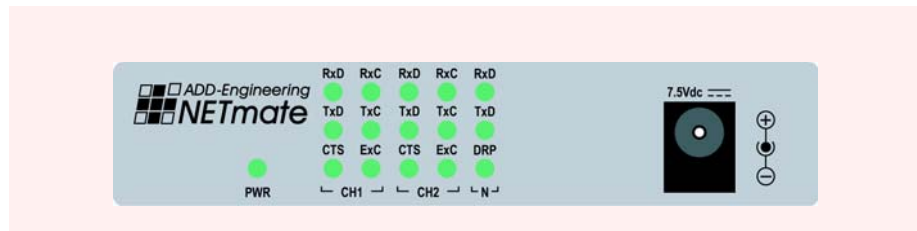


Figure 1: NETmate front panel

### Front panel

The front panel of the NETmate contains a large number of status LEDs (see Figure 1: “NETmate front panel.”), each providing information on unit’s status or an RS-232 signal. The large number of LEDs facilitates easy troubleshooting of a configuration or connection.

### PWR-LED

The PWR-LED indicates that power is supplied to the NETmate. If the PWR-LED is on, power is supplied through the power supply connector, if the PWR-LED is off, power is not supplied. When using another power-supply adapter than the one included, please make sure that the polarity is correct.

## CH1-group

The CH1-group provides information on the synchronous interface side of the NETmate.

### RxD

The RxD-LED indicates that reception of a frame is in progress.

### TxD

The TxD-LED indicates that a transmission of a frame is in progress.

### CTS

The CTS-LED indicates the state of the Clear To Send signal. In case the CTS-LED is off, the NETmate will not transmit frames through the synchronous interface. When the CTS state is inactive and the system connected to the asynchronous side of the NETmate continues to provide frames, the Clear To Send signal on the asynchronous side will change to inactive (after the buffer is filled).

### RxC

The RxC-LED indicates the state of the Receive Clock signal. The RxC-LED is tied "directly" to the clock-signal on pin 17. A normal clock signal alternates, the RxC-LED blinks at the same frequency as the clock signal.

### TxC

The TxC-LED indicates the state of the Transmit Clock signal. The TxC-LED is tied "directly" to the clock-signal on pin 15. A normal clock signal alternates, the TxC-LED blinks at the same frequency as the clock signal.

## **ExC**

The ExC-LED indicates the state of the External Clock signal. The ExC-LED is tied directly to the clock-signal on pin 24. A normal clock signal alternates, the ExC-LED blinks at the same frequency as the clock signal.

## **CH2-group**

The CH2-group provides information on the asynchronous interface side of the NETmate.

## **RxD**

The RxD-LED indicates the reception of data from the asynchronous interface side of the NETmate is in progress.

## **TxD**

The TxD-LED indicates that the transmission of a frame just received (or in progress) at the synchronous interface side, is in progress.

## **CTS**

The CTS-LED indicates that the Clear To Send signal on the asynchronous interface side is active, thus the system connected to the asynchronous interface side is allowed to submit data.

## **RxC**

The RxC-LED is not used by the NETmate model NM-9010.

## **TxC**

The TxC-LED is not used by the NETmate model NM-9010.

## **ExC**

The ExC-LED is not used by the NETmate model NM-9010.

## N-group

The N-group provides information on the network interface side of the NETmate.

## RxD

The RxD-LED is not used by the NETmate model NM-9010.

## TxD

The TxD-LED is not used by the NETmate model NM-9010.

## DRP

The DRP-LED is not used by the NETmate model NM-9010.

## Back panel

The back panel of the NETmate (see Figure 2: “NETmate back panel.”) contains 6 space saving RJ-45 connectors. Through the use of the supplied RJ-45 to DB25 adapter cables, the unit can be connected to systems using a DB25 physical interface.

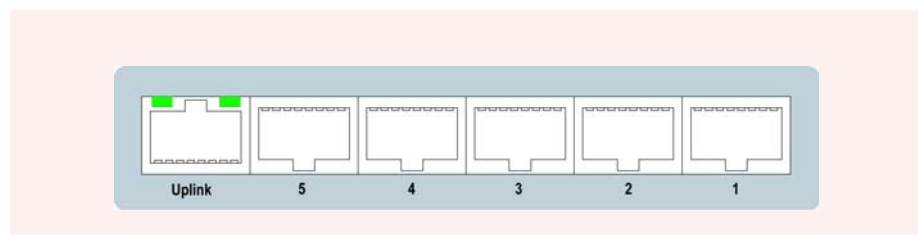


Figure 2: NETmate back panel

## Uplink

The Uplink-port is used to connect the NETmate to the 10/100Mb ethernet.



## Led indicators

Left LED	Right LED	
Color	Color	Meaning
Off	Off	No Link
Off	Solid Amber	100BASE-T Half Duplex Link
Off	Blinking Amber	100BASE-T Half Duplex Activity
Off	Solid Green	100BASE-T Full Duplex Link
Off	Blinking Green	100BASE-T Full Duplex Activity
Solid Amber	Off	10BASE-T Half Duplex Link
Blinking Amber	Off	10BASE-T Half Duplex Activity
Solid Green	Off	10BASE-T Full Duplex Link
Blinking Green	Off	10BASE-T Full Duplex Activity

Table 6: Network status LED indicators

**1**

Port number 1 is not used on the NETmate model NM-9010.

**2**

Port number 2 is not used on the NETmate model NM-9010.

**3**

Port number 3 is not used on the NETmate model NM-9010.

**4**

Port number 4 is the asynchronous interface of the NETmate. Use the cable with the **blue** RJ-45 connector (and with the DB25-female connector) supplied with the NETmate to connect to this port.

## 5

Port number 5 is the synchronous interface of the NETmate. Use the cable with the **red** RJ-45 connector (and with the DB25-male connector) supplied with the NETmate to connect to this port.



## Chapter 3 User Interface

•••••

The NETmate is equipped with an HTML-based user interface through an embedded HTTP-server. Through the use of a standard HTTP-client (web-browser) the unit can be configured in just a few minutes.

### Network

The NETmate has the default settings as specified in Table 7: “Network default settings.”.

Parameter name	Value
IP-address	192.168.1.1
Network mask	255.255.255.0
Default gateway	192.168.1.254

Table 7: Network default settings

To be able to configure the unit please make sure that the IP-address of the system that is used to configure the NETmate, is within the network address range of the NETmate. In other words, the configuring system should have an address in the range 192.168.1.2 - 192.168.1.254.

## Authentication

The first dialog that appears when trying to establish a connection with the NETmate is an authentication dialog see Figure 3: “Authentication dialog.”. By entering the correct User Name and Password combination, access to the NETmate is granted. The NETmate has the default settings for authentication as specified in Table 8: “Authentication default settings.”

Parameter name	Value
User Name	root
Password	manager

Table 8: Authentication default settings

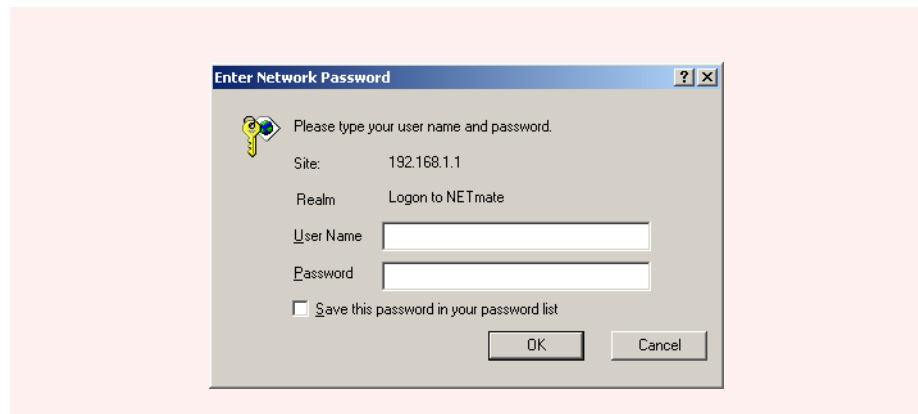


Figure 3: Authentication dialog

In case multiple attempt to logon fail or in case the "Cancel" button is selected in the logon-dialog, the NETmate will generate a message "401 UNAUTHORIZED" that will be displayed in the web-browser as illustrated in Figure 4: “Multiple logon attempts failed.”.

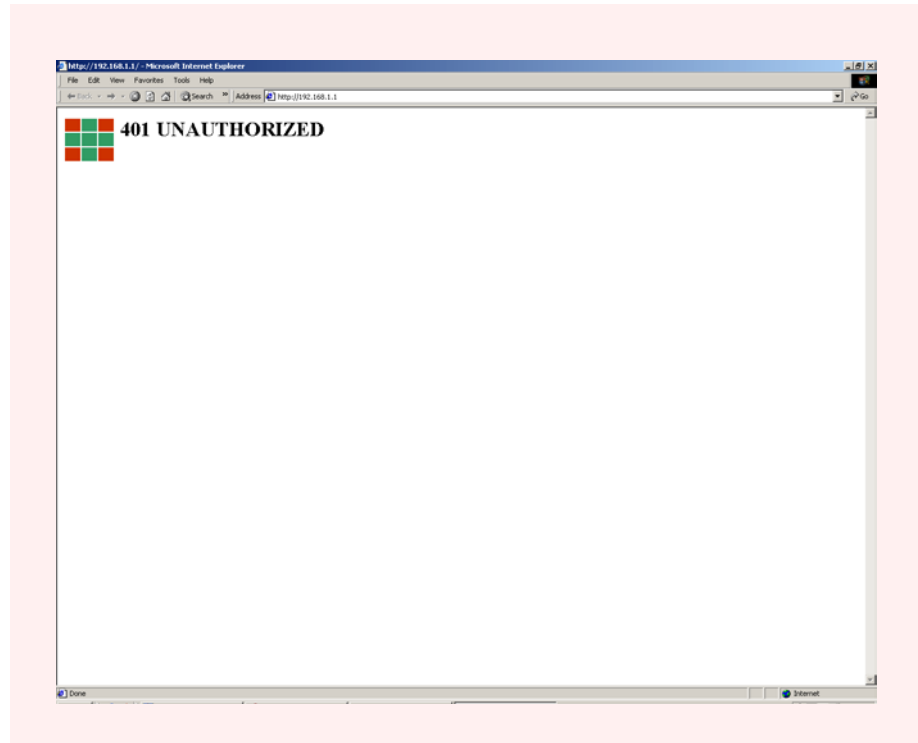


Figure 4: Multiple logon attempts failed

## Main menu

Using the HTML-links (underlined texts) provided on the Main menu (see Figure 5: “Main menu.”), it is possible to navigate through the available management, configuration and statistics menu’s of the NETmate.

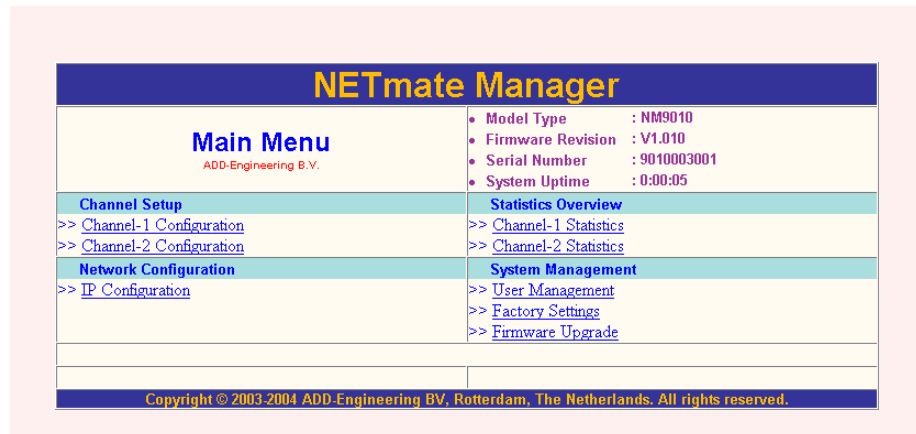


Figure 5: Main menu

Please note the information in the top-right corner of the menu’s (in this case the main menu).

Model Type	The specific model of the NETmate
Firmware Revision	Revision of the software embedded in the NETmate
Serial Number	The factory assigned serial number
System Uptime	Elapsed time since the unit was powered on

## Chapter 4 Channel Setup

The channel configuration menu can be selected by following the “Channel Configuration 1” or “Channel Configuration 2” link from the Main menu.

### Channel Configuration 1

After selecting the link the menu as illustrated in Figure 6: “Channel 1 Configuration.” is displayed.

The screenshot shows the 'Channel 1 Configuration' interface within the 'NETmate Manager'. The interface is divided into two main sections: a configuration table and a status summary.

Channel 1 Configuration	
Serial data format	Universal
Bit Encoding	INRZ1
Bit Order	Lsb-first
Sync Pattern	00000000
Sync Stripping	Strip
Bit Stuffing/Insertion	00
Frame Size	16
Idle State	Alternate
Checksum Mode	OFF
Synchronous Speed	1200
Clock Source	EXT
Clock Line Inversion	ON
Forward Data To	Async-Channel-2
Async Speed	2400

Model Type : NM9010  
Firmware Revision : V1.010  
Serial Number : 9010003001  
System Uptime : 0:03:06

Buttons: Submit, Save all, Main Menu

Copyright © 2003-2004 ADD-Engineering BV, Rotterdam, The Netherlands. All rights reserved.

Figure 6: Channel 1 Configuration

Serial data format type selects the type of “protocol” for the specific channel. After selecting a specific serial data format the user should click on the "Submit" button, in this way the parameters that are of no use for the selected serial data format will be hidden. The NETmate provides 4 types of channels, Universal, Link-1, Link-11B and Transparent.

- Universal  
The standard operating mode used for processing different military protocols.
- Link-1  
The operating mode providing an interface to Link-1
- Link-11B  
The operating mode providing an interface to Link-11B
- Transparent  
The operating mode that provides a transparent interface from asynchronous to synchronous and vice versa.

## Bit Encoding

### Receiver

Bit-encoding for the receiver can be described as the way the line-state is decoded to a received bit. With the NETmate it is possible to specify 4 different bit-encoding methods, NRZ, !NRZ, !NRZI and NRZI.

- NRZ  
Generally known as Non Return to Zero, the line-state is directly decoded to form a bit. A ‘1’ on the physical line is "decoded" to a bit with the value ‘1’. A ‘0’ on the physical line is "decoded" to a bit with the value ‘0’.
- !NRZ  
Almost the same as NRZ but in this case all bits are simply inverted. A ‘1’ on the physical line is "decoded" to a bit with the value ‘0’ in memory. A ‘0’ on the physical line is "decoded" to a bit with the value ‘1’.
- NRZI



Generally known as Non Return to Zero Inverted. Although the name implies that it is just the inverted version of NRZ, there is a more significant difference between these two. To decode the line-state to a bit in NRZI requires knowledge of the previous line-state. If there is a difference between the previous line-state and the actual line-state then it is decoded to a bit with the value '0'. If there is no difference between the previous and the actual line-state then it is decoded to a bit with the value '1'. In short, transitions will be decoded to form a bit with the value '0' and steady states will be decoded to form a bit with the value '1'.

- !NRZI  
Almost the same as NRZI but in this case all bits are simply inverted. Transitions will be decoded to form a bit with the value '1' and steady states will be decoded to form a bit with the value '0'.

## Transmitter

Bit-encoding for the transmitter can be described as the way the bits which need to be transmitted are encoded to a line state.

- NRZ  
Generally known as Non Return to Zero, the bit is directly encoded to form a line-state. A bit with the value '1' is encoded to the physical line-state 1. A bit with the value '0' is encoded to the physical line-state '0'.
- !NRZ  
Almost the same as NRZ but in this case all bits are simply inverted first. A bit with the value '1' is encoded to the physical line-state '0'. A bit with the value '0' is encoded to the physical line-state '1'.
- NRZI  
To encode the bit to transmit to a line-state in NRZI requires knowledge of the previous line-state. If a bit with the value '0' needs to be encoded then the line-state should alter, so the actual line-state should be the inverted version of the previous line-state. If a bit with the value '1' needs to be encoded the actual line-state should be the same as the previous line-state. In short, bits with the value '0' will be encoded as transitions and bits with the value '1' will be encoded as steady-states.
- !NRZI

Almost the same as NRZI but in this case all bits are simply inverted first. In short, bits with the value '1' will be encoded as transitions and bits with the value '0' will be encoded as steady-states.

## Bit Order

### Receiver

For the receiver the bit-order can best be described as the order in which the synchronously received bits are submitted to the asynchronous receiver. The most commonly used bit-order is LSB-first, however some applications require the opposite.

- **LSB-FIRST**

The bit which is received first at the synchronous line will be placed at the LSB-position of the byte which will be submitted to the asynchronous receiver. No bit-reversal is taking place.

- **MSB-FIRST**

The bit which is received first at the synchronous line will be placed at the MSB-position of the byte which will be submitted to the asynchronous receiver. In short it means that bit 0 becomes bit 7, bit 1 becomes bit 6 and so on.

### Transmitter

For the transmitter the bit-order can best be described as the order in which the asynchronously received bytes are transmitted by the synchronous transmitter. The most commonly used bit-order is LSB-first, however some applications require the opposite.

- **LSB-FIRST**

The bit at the LSB-position of the byte received at the asynchronous input will be transmitted first by the synchronous transmitter. No bit-reversal is taking place.

- **MSB-FIRST**

The bit at the MSB-position of the byte received at the asynchronous input will be transmitted first by the synchronous transmitter. In short it means that bit 0 becomes bit 7, bit 1 becomes bit 6 and so on.

## Sync Pattern

### Receiver

The Sync-Pattern specifies the sync-word (a pattern of ones and zeros) on which the receiver will synchronise. The length of the sync-pattern is a minimum of 5 bits and a maximum of 16 bits. The sync-pattern is compared after bit-decoding takes place. When the Sync-Pattern has been received the device is considered to be in-sync. Bytes will now be submitted to the user asynchronously.

### Transmitter

The Sync-Pattern denotes the start of a frame. The pattern will be transmitted if there are bytes in the internal buffer. If there are less bytes in the buffer than the specified frame-length, the NETmate will transmit the bytes in the buffer and fill up the remaining bytes (which were not submitted) with idle bits. The Sync-Pattern is fully user definable.

## Sync Stripping

To provide the user with the possibility to strip or not strip the sync-word from the synchronously received data or to insert or not insert the sync-word into the synchronously transmitted data, this option is implemented in the NETmate.

### Receiver

- NOSTRIP

The synchronously received sync-word is submitted to the user via the asynchronous output. In case the bit-order is reversed the sync-word will also be reversed.

- STRIP

The number of synchronisation bits are stripped from the synchronously received data. In other words the sync-word is stripped from the data.

### Transmitter

- NOSTRIP

Nostrip in this context actually means no-insertion. No insertion of a sync-word takes place at the synchronous transmitter side. The user has to submit the sync-word via the asynchronous input port.

- **STRIP**  
Strip means that the sync-word is inserted by the NETmate in case a new frame needs to be transmitted. The sync-word that is inserted is specified by the pattern "Sync-Pattern". The pattern should be read from right to left with the right bit (LSB) transmitted first.

## Bit Stuffing/Insertion

Specific bits are stripped from the data at the receiver's side and inserted at the transmitter's side.

### Receiver

At the receiver's side (synchronous) the specified bit will be stripped from the data. The insert parameter in this menu is of no significance for the receiver's side. The bitposition parameter specifies which bit will be stripped after reception of the Sync-Word. Assuming the Sync-Word is found and the strip/insert parameter is set to bitposition '1', insert '0'. Then the first bit after the Sync-Word is stripped from the data (in case Sync-Stripping is also enabled), then the next 8 bits are forwarded to the asynchronous port and the next "first" bit is stripped from the data. This continues until all the bytes of the frame are received.

### Transmitter

At the transmitter's side (synchronous) the specified bit will be inserted in the data. The insert parameter in this menu specifies if a '0' or a '1' will be inserted. Assuming the Sync-Word has already been transmitted (and sync-stripping is also enabled) and the strip/insert parameter is set to bitposition '1', insert '0'. Then the first bit transmitted after the sync-word will be a '0'. After that a byte which is submitted via the asynchronous port will be forwarded to the synchronous port and then another '0' will be inserted. This continues until all the bytes of the frame are transmitted.

## Frame-Size

The frame-size is selectable in the range of [1..254]. In general the Frame-Size is the number of bytes the user will submit or can expect asynchronously. The latter with some exceptions which can be read hereunder.

### Receiver

With the Fame-Length parameter the number of bytes which the user expects is specified. The number of bytes are submitted to the asynchronous side. All the bytes which are received are included in the Frame-Size. So, in case the sync-word is not stripped the Sync-Word will count as part of the total Frame-Length.

### Transmitter

With the Frame-Length parameter the number of bytes which the user will submit is specified. In case the Sync-Word is not stripped, the Sync-Word should be submitted by the user via the asynchronous port and thus will count as part of the Frame-Size. However, if a checksum-mode is selected, one byte less should be submitted while the NETmate is generating its own checksum to be forwarded with the data.

## Idle-State

The idle-state is used to specify the behaviour of the transmitter in the case that there are no bytes to transmit. The idle-state is directly related to the line-state and thus no bit-encoding will take place. There are three possible idle-states, '0', '1' and ALT.

### Receiver

This parameter is of no significance for the receiver.

### Transmitter

- '0'  
Idle in zero's, invalid for NRZI and !NRZI bit encoding methods.
- '1'  
Idle in one's, invalid for NRZI and !NRZI bit encoding methods.
- ALT

Idle in alternating states, normally this is used to keep receivers with DPLL in sync.

## Checksum-Mode

Checksums can be generated by the NETmate, it means that the user does not have to calculate checksums over the data submitted to the NETmate. The checksum is transmitted as the last byte of a frame. The checksum-mode has three options, OFF, XOR and XNOR.

### Receiver

The checksum-mode parameter is of no significance in the receiver.

### Transmitter

The checksum calculated using the method defined above is attached to the frame as a last byte.

- OFF  
No checksum is attached to the frame
- XOR  
An XOR (exclusive or) will be performed over all the bytes in the frame (except the sync-word).
- XNOR  
An XNOR (inverted exclusive or) will be performed over all the bytes in the frame (except the sync-word).

## Synchronous Speed

The Synchronous-Speed parameter of the NETmate has only significance if INT (internal) or DPLL (digital phase locked loop) is enabled. In other cases the transmit/receive clock submitted will dictate the synchronous speed. Thus, when using external clock, the user is not limited by the selection of synchronous-speeds down here. However, there is an upper-limit to the external supplied synchronous clock which is 64k.

- 600  
Data is clocked in and out at 600 bps.
- 1200

Data is clocked in and out at 1200 bps.

- 2400  
Data is clocked in and out at 2400 bps.
- 4800  
Data is clocked in and out at 4800 bps.
- 9600  
Data is clocked in and out at 9600 bps.
- 19200  
Data is clocked in and out at 19200 bps.
- 56K  
Data is clocked in and out at 56kbps.
- 64K  
Data is clocked in and out at 64 kbps.

### **Receiver**

Data is clocked in at the selected speed.

### **Transmitter**

Data is clocked out at the selected speed.

## Clock-source

With the NETmate it is possible to select three different clock-sources. The first most commonly used is the external (EXT) clock-mode, the second is the internal (INT) clock-mode and the third and last is the digital pll (DPLL) clock-mode.

- INT  
The internal clock-mode is used when the NETmate should generate the clocking signals required. The synchronous clock-speed can be selected from the Sync-Speed menu. The clock which is generated internally is placed on pin 24 of the DB25M connector.
- DPLL  
The digital pll clock-mode is used when synchronous data is coming in at a known synchronous bit-rate but not accompanied by a clock signal. The synchronous clock-speed can be selected from the Synchronous-Speed menu. The clock which is generated internally is placed on pin 24 of the DB25M connector. The internally generated clock is synchronised continuously with the received data, or better with the transitions in this data.
- EXT  
With the external clock-mode clock-signals should be connected to the NETmate at pin 17 (RCLK) and pin 15 (TCLK). The RCLK is timebase related to the data on pins 3 (RxD) and the TCLK is timebase related to the data on pin 2 (TxD). The TCLK and RCLK need not to be related, however usually they are.

### Receiver

Data is clocked in at the rate specified by the clock-signal.

### Transmitter

Data is clocked out at the rate specified by the clock-signal.



## Clock Line Inversion

The NETmate has the capability to invert the clock signals when required by the specific type of modem connected to the NETmate. The term "inverted" means the opposite of the standard clock signal used for commercial equipment. Clock Line Inversion OFF thus means that the NETmate is adapted for commercial synchronous equipment.

- ON  
The clock signals (incoming and outgoing, TxC, RxC, ExC) of the NETmate are inverted.
- OFF  
The clock signals (incoming and outgoing, TxC, RxC, ExC) of the NETmate are **not** inverted.

## Receiver

Data is clocked in at the inverted or non-inverted clock-signal.

## Transmitter

Data is clocked out at the inverted or non-inverted clock-signal.

## Forward Data To

The NETmate model NM-9010 can only forward data to the asynchronous channel 2 (Async-Channel-2).

## Async-Speed

The speed selected in this menu is used to transmit and receive asynchronous data via the asynchronous ports. Make sure that the asynchronous baudrate is always higher than the synchronous speed.

- 1200  
Asynchronous bitrate is 1200, No Parity, 8 Bits, 1 Stop bit.
- 2400  
Asynchronous bitrate is 2400, No Parity, 8 Bits, 1 Stop bit.
- 4800

Asynchronous bitrate is 4800, No Parity, 8 Bits, 1 Stop bit.

- 9600  
Asynchronous bitrate is 9600, No Parity, 8 Bits, 1 Stop bit.
- 19200  
Asynchronous bitrate is 19200, No Parity, 8 Bits, 1 Stop bit.
- 38400  
Asynchronous bitrate is 38400, No Parity, 8 Bits, 1 Stop bit.
- 115K2  
Asynchronous bitrate is 115200, No Parity, 8 Bits, 1 Stop bit.

### **Receiver**

The asynchronous receive rate.

### **Transmitter**

The asynchronous transmit rate.

## Channel Configuration 2

After selecting the link the menu as illustrated in Figure 7: “Channel 2 Configuration.” is displayed

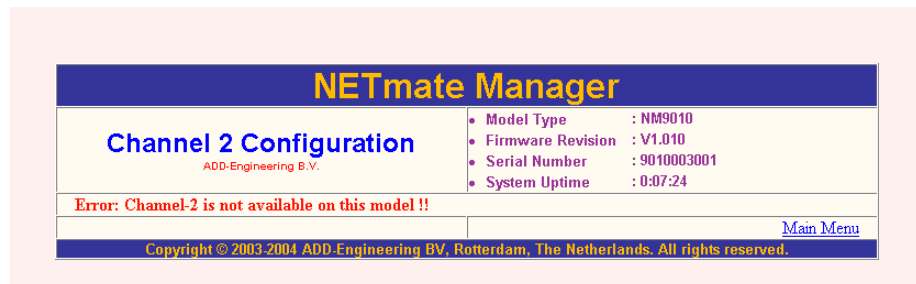


Figure 7: Channel 2 Configuration


The NETmate model NM-9010 only supports 1 synchronous communication channel, thus channel-2 can not be configured.



## Chapter 5 Network Configuration

The NETmate has a number of network parameters that can be configured to adapt the NETmate to your Local Area Network configuration. After selecting the IP-Configuration link, the following menu is displayed.

### IP-Configuration

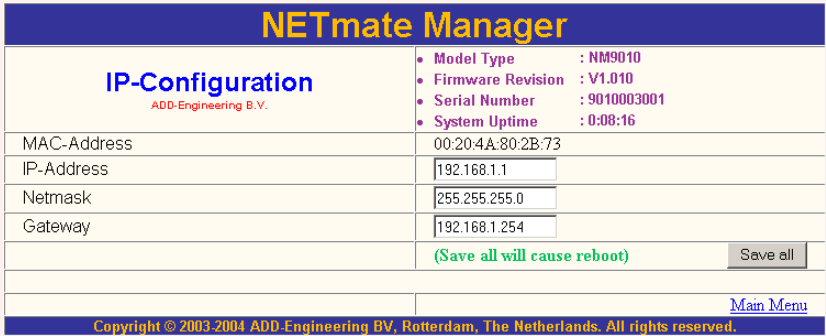

NETmate Manager	
<b>IP-Configuration</b> <small>ADD-Engineering B.V.</small>	<ul style="list-style-type: none"><li>• Model Type : NM9010</li><li>• Firmware Revision : V1.010</li><li>• Serial Number : 9010003001</li><li>• System Uptime : 0:08:16</li></ul>
MAC-Address	00:20:4A:80:2B:73
IP-Address	<input type="text" value="192.168.1.1"/>
Netmask	<input type="text" value="255.255.255.0"/>
Gateway	<input type="text" value="192.168.1.254"/>
(Save all will cause reboot)	
<input type="button" value="Save all"/>	
<a href="#">Main Menu</a>	
<small>Copyright © 2003-2004 ADD-Engineering BV, Rotterdam, The Netherlands. All rights reserved.</small>	

Figure 8: IP-Configuration menu

### MAC-Address

The MAC-Address specifies the unique hardware address of the NETmate. The hardware address can not be altered and is only displayed in this menu for information.

## IP-Address

The IP-address of the NETmate. The user should take care that a network unique IP-address is assigned to the NETmate.

## Netmask

The network mask of the NETmate and in this way selects a class-A, class-B or a class-C network. Please see other documentation on TCP/IP for a detailed explanation on the netmask.

## Gateway

The gateway to use when communicating with systems outside the Local Area Network.

## Save all

After making the required changes, click on the "Save all" button to store the settings in the NETmate. After storing these settings, the NETmate will reboot. Please follow instructions as displayed in Figure 9: "IP-Configuration menu."

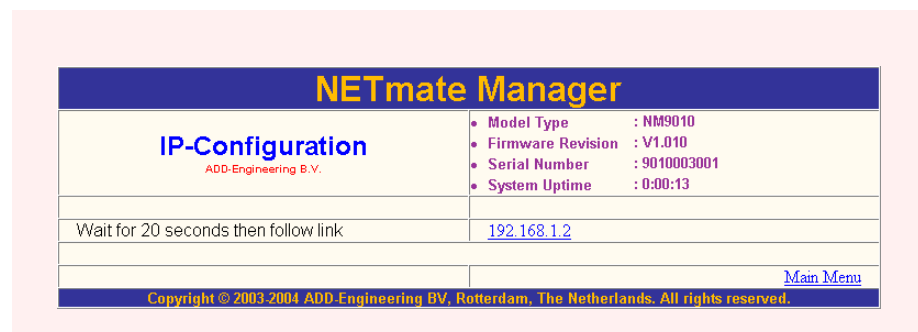



Figure 9: IP-Configuration menu

## Chapter 6 Statistics Overview

The NETmate has a number of facilities to monitor the behaviour of the communication link and the unit. By selecting "Channel-1 Statistics" or "Channel-2 Statistics" information is provided on the selected synchronous channel.

### Channel-1 Statistics

After selecting the "Channel-1 Statistics" link, the menu as illustrated in Figure 10: "Channel 1 Statistics menu." is displayed.

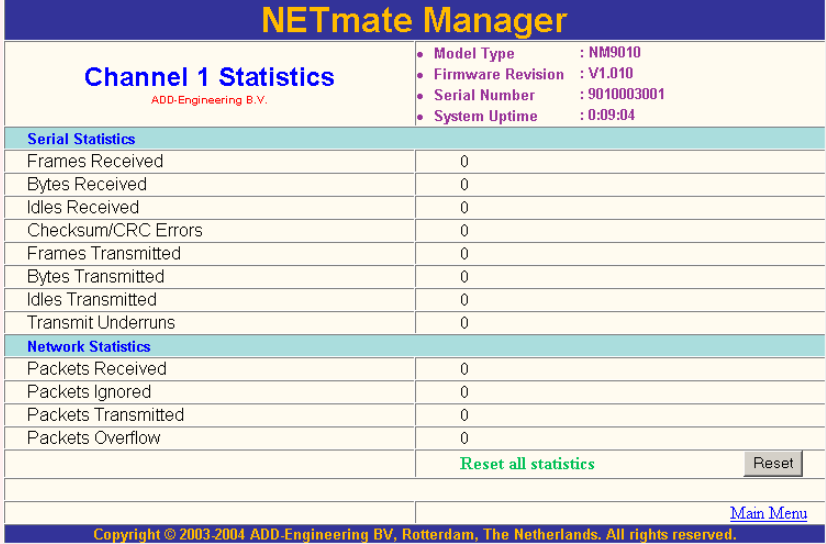

NETmate Manager	
<b>Channel 1 Statistics</b> <small>ADD-Engineering B.V.</small>	<ul style="list-style-type: none"><li>• Model Type : NM9010</li><li>• Firmware Revision : V1.010</li><li>• Serial Number : 9010003001</li><li>• System Uptime : 0:09:04</li></ul>
<b>Serial Statistics</b>	
Frames Received	0
Bytes Received	0
Idles Received	0
Checksum/CRC Errors	0
Frames Transmitted	0
Bytes Transmitted	0
Idles Transmitted	0
Transmit Underruns	0
<b>Network Statistics</b>	
Packets Received	0
Packets Ignored	0
Packets Transmitted	0
Packets Overflow	0
<a href="#">Reset all statistics</a> <input type="button" value="Reset"/>	
<a href="#">Main Menu</a>	
<small>Copyright © 2003-2004 ADD-Engineering BV, Rotterdam, The Netherlands. All rights reserved.</small>	

Figure 10: Channel 1 Statistics menu

## Serial Statistics

### Frames Received

The number of frames received through the synchronous interface side.

### Bytes Received

The number of bytes received through the synchronous interface side.

### Idles Received

The number of idles (idle-bytes) received through the synchronous interface side.

### Checksum/CRC Errors

Only applicable to the Link-1 and Link-11B data format. Indicates the number of detected checksum errors for the specified data format.

### Frames Transmitted

The number of frames transmitted through the synchronous interface side.

### Bytes Transmitted

The number of bytes transmitted through the synchronous interface side.

### Idles Transmitted

The number of idles (idle bytes) transmitted through the synchronous interface side.



## **Transmit Underruns**

The number of transmitter underruns. An underrun occurs when the request for data is not handled successfully. Normally this should remain 0.

## **Network Statistics**

The network statistics are applicable to the data packets (thus the frames received/transmitted through the synchronous interface) send/received through the network interface. Since the NETmate model NM-9010 has no capability to transfer synchronously received/transmitted data across the network, the network statistics are not applicable.

## **Packets Received**

Not applicable to the NETmate model NM-9010

## **Packets Ignored**

Not applicable to the NETmate model NM-9010

## **Packets Transmitted**

Not applicable to the NETmate model NM-9010

## **Packets Overflow**

Not applicable to the NETmate model NM-9010

## **General**

## **Reset**

Sets all the statistics to the value of zero.

## Channel-2 Statistics

After selecting the "Channel-2 Statistics" link the following menu is displayed.

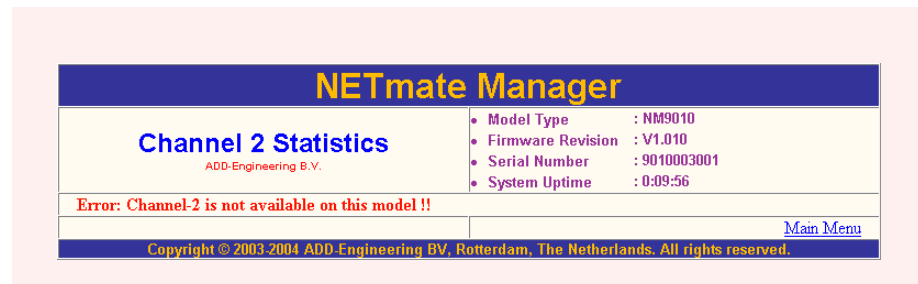


Figure 11: Channel 2 Statistics menu

Since the NETmate model NM-9010 only supports one synchronous communication channel, channel-2 statistics are not available.

## Chapter 7 System Management

Through system-management the firmware of the unit can be upgraded, the unit's settings can be reset to factory defaults and the username and password combination can be changed.

### User Management

When clicking on the link "User Management" the menu as illustrated in Figure 12: "User Management menu." is displayed. Through this menu, the username and password can be changed. After changing username and password, the same menu is displayed. When selecting another menu, an authentication dialog (logon-dialog) is displayed where the new username and password should be entered.

NETmate Manager	
<b>User Management</b> <small>ADD-Engineering B.V.</small>	<ul style="list-style-type: none"><li>• Model Type : NM9010</li><li>• Firmware Revision : V1.010</li><li>• Serial Number : 9010003001</li><li>• System Uptime : 0:10:37</li></ul>
Old Username	<input type="text"/>
New Username	<input type="text"/>
Old Password	<input type="text"/>
New Password	<input type="text"/>
Retype New Password	<input type="text"/>
	<input type="button" value="Save all"/>
	<a href="#">Main Menu</a>
<small>Copyright © 2003-2004 ADD-Engineering BV, Rotterdam, The Netherlands. All rights reserved.</small>	

Figure 12: User Management menu



## Firmware Upgrade

When clicking on the link "Firmware Upgrade" the menu as illustrated in Figure 13: "Firmware upgrade menu." is displayed. Through this menu, the firmware embedded in the NETmate can be upgraded.

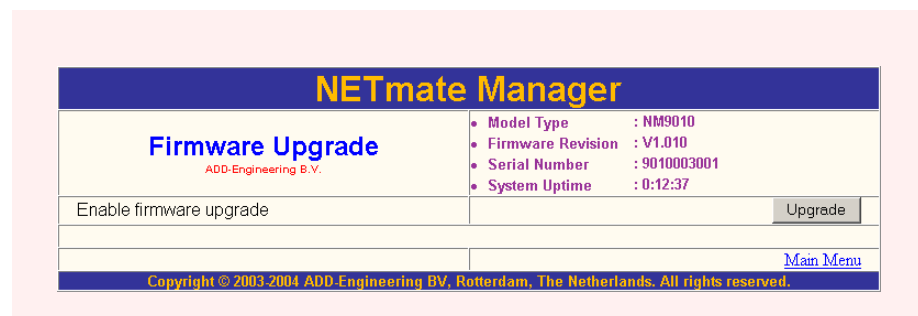


Figure 13: Firmware upgrade menu

## Upgrade

Places the NETmate into "firmware upgrade mode". The unit is now ready for a new software version. Please use the appropriate software upgrade tool supplied by ADD-Engineering. Do not power off the unit when firmware upgrade is in progress (and thus the upgrade tool has been started). **The unit should never be powered off when the upgrade tool has been started and a firmware upgrade is in progress. The NETmate can be damaged permanently when not following the instructions above.**



## Chapter 8 Factory Defaults

This chapter describes the settings of the NETmate model NM-9010 when shipped by ADD-Engineering. These settings can be restored using the "Factory Settings" option in the System Management group.

### Network defaults

Parameter name	Value
IP-address	192.168.1.1
Network mask	255.255.255.0
Gateway	192.168.1.254

Table 9: Network default settings

### Serial defaults

Parameter name	Value
Data format	Link-1
Bit Encoding	!NRZI
Bit Order	LSB-First
Sync Pattern	00000000

Table 10: Serial port default settings

Parameter name	Value
Sync Stripping	ON
Bit Stuffing/Insertion	00
Frame Size	16
Idle State	Alternate
Checksum-Mode	OFF
Synchronous Speed	1200
Clock-source	EXT
Clock-inversion	ON
Forward Data To	Async-Channel-2
Async Speed	2400

Table 10: Serial port default settings

## Authentication defaults

Parameter name	Value
Username	root
Password	manager

Table 11: Authentication default settings





## Appendix A Warranty and Maintenance



### Warranty Information

#### Hardware

All ADD-Engineering B.V.'s hardware products are covered by a one year warranty from the original date of purchase. Warranty coverage includes:

**Telephone support.** Free phone support on any hardware product for one year after initial product purchase. ADD-Engineering's Customer Service and Support (CSS) hours are 9:00 am to 5:00 pm, Monday through Friday.

**Rapid replacement.** Upon CSS phone verification of hardware failure within the first 90 days after purchase, ADD-Engineering will issue a return material authorization (RMA) number for rapid replacement. If the failed unit is in stock, a replacement unit will be shipped within one business day. If the failed unit is not in stock, it will receive the highest priority for repair once ADD-Engineering receives the unit.

**Extended maintenance option.** Extends the standard warranty coverage, including rapid replacement, to three years when purchased within 90 days of initial product purchase.

Out of warranty repair service is available for a per-product flat fee. Typical turnaround for out-of-warranty repairs is four to six weeks from date of factory receipt.

**Limited Hardware Warranty.** ADD-Engineering warrants its hardware products to be free from defect in materials and workmanship. ADD-Engineering will repair or replace (at its option) all defective product returned freight pre-paid, in original packaging, to its factory in Rotterdam, The Netherlands within one (1) year. ADD-Engineering reserves the right to ship replacement units from our inventory of reconditioned units. All other warranties, expressed or implied, are limited to the restrictions of this warranty. Product abuse, alteration, or misuse invalidates all warranties. This warranty does not cover damages incurred by natural or electrical forces exceeding the stated product specifications. In no event will ADD-Engineering's warranty liability exceed the purchase price of the product. No liability is assumed for any consequential damages resulting from the use of any ADD-Engineering product.

This warranty is in lieu of all other warranties, including but not limited to the warranties of merchantability and fitness for a particular purpose. National, state and local laws may offer rights in addition to those stated above.

## Product Information Worksheet

Please record the following information about your NETmate model NM-9010.

NETmate Serial number:

NETmate MAC address:

Purchase date:





## Appendix B Cables and Connectors

.....

This appendix provides necessary background information for making connections to the serial and the network ports on the NETmate model NM-9010. It discusses modem and null modem connectors, the standard RS-232 pinouts, the RJ-45 pinouts, and describes some typical cables

Two terms used frequently throughout this appendix are

- Data Communication Equipment (DCE)
- Data Terminal Equipment (DTE)

DCE peripheral devices usually refer to modems

DTE devices include terminals, computers and printers.

## Cabling Overview

To connect a peripheral device to the NETmate, you need an interface cable to run electrical signals from one of the RJ-45 connectors to the peripheral device. ADD-Engineering includes the cables required to connect the NETmate to a standard asynchronous port and to a standard synchronous port. Cables required to connect the NETmate to the network are not included. You can purchase ready-made network cables at your local computer store or make them on your own

DCE and DTE devices send and receive signals through different pins. The NETmate is at one side (asynchronous) configured to be a DCE device with an RS-232 electrical interface and on the other side (synchronous) to be a DTE device with an RS-232 electrical interface.

## Serial Connector Pinouts

All of the NETmate's synchronous communication ports are equipped with an RJ-45 connector. The electrical interface for these ports is RS-232. The port behaves like a DTE (with respect to the clocking signals).

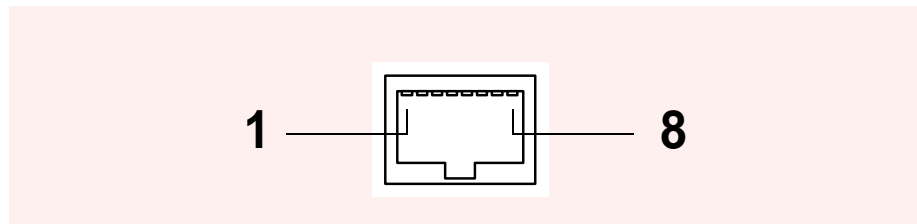


Figure 14: Serial connector pin diagram (DTE RJ-45)

Pin Number	RS-232 Signal	V.24 Signal	Direction
1	RxC	115	Input
2	TxC	114	Input
3	ExC	113	Output
4	Signal GND		None
5	RxD	104	Input
6	TxD	103	Output
7	CTS	106	Input
8	RTS	105	Output

Table 12: Pinout of synchronous serial interface





Signal	Description
TxD	Transmit Data. Sends data to peripheral device
RxD	Receive Data. Receives data from the peripheral
RxC	Receive Data Clock. Input for receiver signal element timing from a synchronous DCE-device.
TxC	Transmit Data Clock. Input for transmitter signal element timing from a synchronous DCE-device
TxC	Transmit Data Clock. Output for transmitter signal element timing generated on the NETmate
CTS	Clear To Send handshake signal
RTS	Request To Send handshake signal

Table 14: Signal descriptions

### RJ-45 to DB25-male cable (RED)

RJ-45 Pin Number	RS-232 Signal	Direction	DB25-male Pin Number
1	RxC	<-	17
2	TxC	<-	15
3	ExC	->	24
4	Signal GND		7
5	RxD	<-	3
6	TxD	->	2
7	CTS	<-	5
8	RTS	->	4

Table 15: RJ-45 to DB25-male cable pinout



Numerics  
401 UNAUTHORIZED 18  
A  
alternating 28  
Asynchronous Interface 7  
asynchronous ports 54  
Async-Speed 31  
Authentication 18  
Authentication defaults 46  
B  
back panel 14  
Bit Stuffing/Insertion 26  
Bit-encoding 22  
bit-order 24  
C  
Cabling Overview 52  
CD-2 6, 22  
CH1-group 12  
CH2-group 13  
Channel Configuration 1 21  
Channel Configuration 2 33  
Channel Setup 21  
Channel-1 Statistics 37  
Channel-2 Statistics 40  
Checksum-Mode 28  
Clock Line Inversion 31  
ClockMate 6  
clock-sources 30  
Control Port 8  
D  
digital pll clock 30  
Dimensions 9  
DPLL 30  
E  
EXT 30  
external clock 30  
F  
Factory Settings 42

Firmware Upgrade 43  
Forward Data To 31  
frame-length 27  
front panel 11  
Functional Description 6  
G  
Gateway 36  
H  
HTTP-server 17  
I  
idle-state 27  
INT 30  
internal clock 30  
IP-Address 36  
IP-Configuration 35  
L  
Led indicators 15  
Link-11B 22  
LSB-FIRST 24  
M  
MAC-Address 35  
Main menu 20  
MSB-FIRST 24  
N  
Netmask 36  
Network 17  
Network defaults 45  
Network Statistics 39  
N-group 14  
NRZ 22  
NRZI 22  
P  
pinouts 51  
Power Requirements 8  
PWR-LED 11  
S  
Serial defaults 45  
Serial Statistics 38

strip 25  
Synchronous Interface 7  
SyncMate 6  
Sync-Pattern 25  
Sync-Speed 28  
system-management 41  
T  
Transparent 22  
transparent 6  
U  
UCC 6  
Universal 6, 22  
user interface 17  
User Management 41  
W  
Warranty Information 47  
X  
XNOR 28  
XOR 28