



NAUTA



Nauta BV
info@nauta.com
nauta.com

NAUTA



Nauta Security Storage BV
info@nautasecurity.com
nautasecurity.com

CITY



Citysafe Wholesale Ltd.
info@citysafe.co.uk
citysafe.co.uk

Hanzeweg 10
3771 NG Barneveld
The Netherlands

Unit 9, Southampton Trade Park
Third Avenue, Hampshire
Southampton SO15 0LE
United Kingdom

MEMBER OF
NAUTA
GROUP



think safe

USER INSTRUCTIONS

Mechanical combination lock



User instructions mechanical combination lock

General

- Always turn the dial slowly and carefully.
- Place the chosen numbers exactly inline with the opening or changing index.
- You can stop turning as much as you like. If a number is over flown, start all over again with the first number.
- Never choose the last number between 0 and 20.
- Each number has to be at least 4 increments apart from the other.
- Try the new combination several times to make sure the lock opens and locks perfectly, before locking the door.
- Never force the lock; turning must always go smoothly. If not, contact your dealer.

Opening the lock (using the opening index)

Attention! The factory code is 10-20-30.

1. 4x turn left and pass '10' three times.
2. 3x turn right and pass '20' two times.
3. 2x turn left and pass '30' once.
4. Turn right until stop and the lock is open.

Locking the combination lock

Turn at least four complete turns left.

Changing instructions (using the changing index)

To change the combination, you will need access to the existing combination and the change key.

Open the lock and door. With the bolts fully retracted (lock open) before changing combinations, verify that the dial stops between 90 and 0 on the opening index.

Dial the existing code using the changing index, for example 10-20-30:

1. 4x turn left and pass '10' three times.
2. 3x turn right and pass '20' two times.
3. 2x turn left and pass '30' once and stop exactly on the changing index.

Insert the change key (with the long side) in the key hole at the back of the door and turn to the RIGHT until stop. Do not force the change key.

If the key will not go far enough - it will not turn. Remove the key and dial the old code on the changing index, stopping exactly on each number. Select a new combination code using the changing index. For example 47-8-82:

1. 4x turn left and pass '47' three times.
2. 3x turn right and pass '8' two times.
3. 2x turn left and pass '82' once and stop exactly on the changing index.

If a number is over flown, start on the beginning, using the changing index. Turn change key left and remove the key. The new code is inserted.

Important!

- Try new combinations several times to make sure the lock opens and locks perfectly, before locking the door.
- For security reasons, never select a code from personal data (birthday or phone number).
- Each number has to be at least 4 increments apart from the others. For example 49-45-41 and not 51-52-53.

Questions / malfunctions

Do you have questions about your safe, the electronic lock or is there an unexpected malfunction? Please contact your local dealer.

