
OSCOPTM

OMNI SPECTRAL CORRELATOR

OSC-5000

OWNER'S GUIDE

VER 4.0

INTERNATIONAL PROCUREMENT SERVICES (OVERSEAS) LTD
163-168 Brompton Road, Knightsbridge, London, SW3 1PY
UNITED KINGDOM

Phone: +44 020 7258 3771 Fax: +44 020 7724 7925

e-mail : sales@intpro.co.uk web page: www.intpro.co.uk & www.securitysearch.co.uk

US Patents: 4,399,556 5,020,137 5,241,699

Copyright 2001

US Patents 5020137, 5241699, 4,399,556

Serial Number _____

Program Key Version _____

Kernal Version _____

TABLE OF CONTENTS

<u>TABLE OF CONTENTS</u>	3
<u>TABLE OF FIGURES</u>	5
<u>SECTION 1: INTRODUCTION</u>	6
<u>OSCOR EQUIPMENT DESCRIPTION</u>	8
<i>Main Panel</i>	8
<i>Antenna Panel</i>	10
<i>Power System</i>	11
<i>Program Key</i>	12
<i>Storage Compartment and Accessories</i>	13
<i>Optional Accessories and Upgrades</i>	16
<i>OSCOR Deluxe Package of OPTIONS</i>	16
<u>SECTION 2: USING THE OSCOR</u>	18
<u>SETTING UP THE SYSTEM</u>	18
<u>OSCOR MANUAL MODE OPERATION</u>	20
<i>Sweep Mode (Spectrum Analyzer Functions)</i>	20
<i>Alternate RF Spectrum Display Modes</i>	25
<i>Analyze Mode</i>	28
<i>Data Functions (STORE/RECALL)</i>	34
<i>Audio Functions</i>	39
<i>Oscilloscope Analysis (Audio Spectrum Analysis Screen)</i>	43
<i>Acoustic Correlator System (Manual)</i>	43
<i>Locating the Threat</i>	45
<i>Strip Chart Plotter</i>	51
<i>Miscellaneous Functions</i>	54
<u>OSCOR AUTOMATIC MODE OPERATION</u>	55
<i>Signal Review</i>	57
<i>Setup Inputs</i>	57
<i>Load Friendly</i>	59
<i>Start Auto Mode</i>	60
<i>Outputs</i>	60
<i>Correlate: Acoustic Correlator System (Automatic)</i>	63
<u>DETECTING VIDEO THREATS</u>	65
<u>SECTION 3: PREPARING FOR A SWEEP</u>	69
<u>SECTION 4: CONDUCTING A SWEEP</u>	71
<u>PRE-LOADING SIGNALS INTO MEMORY</u>	72
<u>GENERATING A SIGNAL CHART OF THE AREA</u>	72
<u>SECURE THE AREA</u>	73
<u>ACTIVATING A KNOWN SOUND SOURCE</u>	73
<u>SPECIAL CONSIDERATIONS FOR INFRARED AND LASER THREATS</u>	74

<u>MANUALLY SWEEPING SELECTED INPUTS</u>	75
<u>CHECKING FOR CARRIER CURRENT THREATS</u>	75
<u>SETTING UP FOR AUTOMATIC OPERATION</u>	75
<u>THE PHYSICAL SEARCH</u>	76
<u>SECTION 5: MONITORING A MEETING IN PROGRESS</u>	82
<u>SECTION 6: TESTING TELEPHONES WITH OSCOR</u>	83
<u>SECTION 7: SUMMARY OF OSCOR SPECIFICATIONS</u>	85
<u>SECTION 8: OTHER TYPES OF EQUIPMENT</u>	86
<u>SPECTRUM ANALYZERS</u>	88
<u>HARMONIC RECEIVERS</u>	88
<u>BROADBAND ENERGY DETECTORS</u>	89
<u>TAPE RECORDER DETECTORS</u>	90
<u>TELEPHONE ANALYZERS</u>	90
<u>NON-LINEAR JUNCTION DETECTORS</u>	92
<u>ACOUSTIC NOISE GENERATING SYSTEMS</u>	93
<u>SECTION 9: STANDARD FREQUENCY INFORMATION</u>	93
<u>REGION 1 DATA</u>	95
<u>REGION 2 DATA</u>	97
<u>REGION 3 DATA</u>	101
<u>STANDARD TELEVISION FREQUENCY DATA (USA)</u>	105
<u>INDEX</u>	107
<u>OSCOR QUICK REFERENCE GUIDE</u>	109

TABLE OF FIGURES

FIGURE 1: OSCOR - 5000 DELUXE PACKAGE.....	6
FIGURE 2: MAIN PANEL.....	8
FIGURE 3: ANTENNA PANEL.....	10
FIGURE 4: CONNECTOR WIRING CONVENTIONS	11
FIGURE 5: STORAGE COMPARTMENT	13
FIGURE 6: ACCESSORIES AND CONNECTOR TRAY	14
FIGURE 7: SWEEP MODE SCREEN DISPLAY	21
FIGURE 8: SWEEP MODE SCREEN DISPLAY WITH WIDE BANDWIDTH.....	22
FIGURE 9: SWEEP MODE SCREEN DISPLAY WITH NARROW BANDWIDTH	22
FIGURE 10: INPUT, FREQUENCY, DEMODULATOR, AND BANDWIDTH COMBINATIONS	23
FIGURE 11: ANALYZE MODE SCREEN DISPLAY	29
FIGURE 12: SCREEN LABELS FOR DEMODULATIONS	30
FIGURE 13: EXAMPLE SIGNAL LIST SCREEN DISPLAY	35
FIGURE 14: SIGNAL LIST MENU (2 ND).....	36
FIGURE 15: SWEEP SPAN LIST SCREEN DISPLAY	37
FIGURE 16: CORRELATOR SCREEN DISPLAY	44
FIGURE 17: THREAT LEVEL CLASSIFICATIONS	44
FIGURE 18: LOCATING CAPABILITY DIRECTIONAL DIAGRAM.....	49
FIGURE 19: CURSOR LOCATION FOR OTL	50
FIGURE 20: POSITIONS FOR RANGE MEASUREMENTS	51
FIGURE 21: AUTOMATIC MODE PROGRAMMING MAP	56
FIGURE 22: AUTOMATIC MODE MAIN MENU	56
FIGURE 23: PRE-PROGRAMMED STANDARD INPUTS	57
FIGURE 24: AUTOMATIC MODE LOAD FRIENDLY MENU	59
FIGURE 25: AUTOMATIC MODE START MENU	60
FIGURE 26: AUTOMATIC MODE OUTPUTS MENU.....	61
FIGURE 27: AUTOMATIC MODE CORRELATOR SETUP MENU	63
FIGURE 28: VIDEO SIGNAL WITH NEGATIVE SYNCH PULSE.....	67
FIGURE 29: UNINTENTIONAL RADIATOR PROBABILITY	81
FIGURE 30: THREAT/PRODUCT EVALUATION SUMMARY	87
FIGURE 31: REGIONAL FREQUENCY ALLOCATION MAP	94
FIGURE 32: SHIFT FUNCTION.....	110

SECTION 1: INTRODUCTION



FIGURE 1: OSCOR - 5000 DELUXE PACKAGE

This manual provides an overview and background information of the utility and diverse operations of the OSCOR - 5000 and step-by-step instructions on how to perform the various functions. It is arranged so that as you read through the sections, you will learn to perform the individual functions of which the OSCOR is capable. Then you will learn how to use the functions together to search for transmitting devices.

In order to become familiar with all of the available functions and programs of the OSCOR, this manual should be read and studied thoroughly. The fastest way to become familiar with the OSCOR is to follow the step by step instructions while reading the manual. The sections are organized in a manner designed to aid learning.

Do not attempt to memorize all of the step-by-step procedures. These are provided as a guide to assist you in learning to control the available OSCOR functions. Once you have a good understanding of the functionality, you can develop procedures to customize the OSCOR operation to your specific needs and security issues.

Notes:

- Due to the related nature of many functions, you will find some duplication of descriptions and instructions.
- All instructions are printed in *Italics*.
- **Bolded** words in instructions represent the button to push.
- Please pay close attention to the special “**Note:**”, “**Technical Note:**”, and “**WARNING**” cited throughout the manual.

REI has developed the OSCOR with the following goals in mind:

- Professional sweep teams need the best equipment available for reliable results, but this equipment should be portable.
- People with information protection needs should be able to own Countersurveillance equipment to use at their discretion. Equipment should be a complete, comprehensive package that is easy to utilize, cost effective, capable of monitoring the environment 24 hours a day, and does not require extensive training.

With these needs in mind, our developers have created the OSCOR - 5000 (Omni Spectral Correlator), the most advanced Countersurveillance detection system on the market today. The OSCOR is the only product that provides automatic, reliable, and cost effective protection for your business environment 24 hours a day. The OSCOR is designed to detect major types of audio and video transmitters including RF, carrier current, and infrared.

The OSCOR Advantages:

- **Portable and Programmable** - continuously scans all bands and silently detects eavesdropping equipment.
- **Complete Package of Sweep Equipment** - includes a complete set of sweep antennas that switch automatically. All equipment folds into a highly durable attaché-style case.
- **High Sensitivity Digital Synthesized Receiver** - scans for audio (50 Hz-15 kHz), radio frequency (10 kHz-3 GHz) and infrared (850-1070 nM) signals.
- **Audio Analyze Mode** - demodulates a received signal to audio, and provides audio signal lock to support correlation.
- **Acoustic Correlator** - uses passive sound pattern matching to automatically detect a listening device.
- **Strip Chart Plotter** - provides a graph of threat lists and all available signal analysis screens. It also provides a hard copy of important data for future reference.
- **Signal Database** - allows for the storage and recall of all detected signals.
- **Threat Location System** - aids with rapid threat recovery.
- **Video Demodulators and Monitors** - allows viewing of covert video transmitters.
- **Computer Interface** - creates permanent database records and reports of signal information. Computer interface also provides the capability to remotely control the OSCOR via modems.

OSCOR Equipment Description

This section provides an overview of the equipment and features of the OSCOR. It does not cover OSCOR operation.

Main Panel



FIGURE 2: MAIN PANEL

1. **POWER / MODE** – turns on the unit and toggles the Auto and Manual Modes
2. **PROGRAM KEY** - allows easy software upgrades. The plug-in keys are user-installable and simple to replace.
3. **GRAPHIC LCD DISPLAY** - displays 128 x 256 pixel, contrast-controllable, images that are easy to read in direct sunlight.
4. **STORE/RECALL** - stores threat signals, friendly signals, and sweep spans or direct tuning in the memory, and is user-controllable
5. **ALARM CONTROL** - TONE selects silent or ringer alert and TAPE controls the power of the tape recorder for threat activated alarm.
6. **PLOTTER CONTROL** - PLOT prints displayed information or Threat Level Listings. FEED advances printer paper.
7. **AUDIO MONITOR** - FILTER selects voiceband filter (300 - 3000 Hz) to reduce monitored noise. EXT (external sound source) allows listening to or correlating through the system, input through patch cords or add-on modules.
8. **AUDIO ANALYSIS** - CORR activates acoustic correlator for audio pattern matching. SPECT displays real time audio wave shapes for analysis.
9. **ROTARY DIAL (OPTICAL ENCODER)** - allows precise frequency selection.
10. **EXPAND / NARROW** - expands or narrows displayed frequency span.
11. **SWEEP / ANALYZE** - allows instant jump between receiver swept spectrum profiles and demodulated signal analysis.
12. **SEEK / LIMITS** - seeks to next signal (LIMITS reserved for future use).
13. **DOWN / UP** - changes screen to a higher or lower frequency span, or tunes subcarrier.

14. **REFERENCE MICROPHONE** - receives “acoustic stimulus” within the target area and is internally coupled to the correlator reference input. EXT REF input jack allows magnetic phone couplers, remotely located external microphones, or direct sound source inputs.
15. **VOLUME/SQUELCH** - controls audio output levels and squelch function for use when monitoring received signals.
16. **POWER INPUT**- IEC-320 international power cord compatible, 115/230 VAC (switch selectable), 50/60 Hz or external 12-18 VDC input.
17. **CONTROL / RF CABLES** - connects main unit and antenna array.
18. **VIDEO OUTPUT** - provides standard video signal for use with external monitor.
19. **SERIAL COMMUNICATIONS** - RS-232 I/O port to support computer interface.
20. **EXPANSION MODULE PORT** - supports OTL (OSCOR Triangulate and Locate option) and the OSCOR Microwave Downconverter MDC-2100
21. **RECORDER OUTPUT** - provides option of recording received audio signals.
22. **EXTERNAL SPEAKER** - drives larger speakers or speakers at remote locations. Output is rated for 8 ohms, 3 watts.
23. **INTERNAL SPEAKER** - 3" x 5" optimized for voiceband reception; will deliver high output audio for monitoring or alert tones.
24. **PRINTER ACCESS** - allows for easy replacement of 2-in. thermal paper, graphic strip charts allow detailed comparisons or additions to log books.

Features not shown:

- **RECHARGEABLE BUILT-IN BATTERY** - provides 2-5 hours operation per charge. Built-in automatic recharging system (not shown).
- **Microprocessor** - instructs all subsystems, manages memory, and controls analog A/D, D/A Blocks.
- **Power Management System** - controls each operating subsystem independently to reduce operating power and extend battery life.
- **Audio Automatic Gain Control** - provided in main receiver and reference channels to continuously adjust audio value to optimum levels.
- **High Performance Receiver** - sensitive quad conversion receiver controlled by three phase-locked loop synthesizers. Frequency range 10 kHz - 3 GHz (21 GHz is optional). Multiple IF filters, used throughout, allow tight selectivity in all bandwidth selections.
- **Input Attenuators** - selected when high RF or Audio levels are encountered.

Antenna Panel

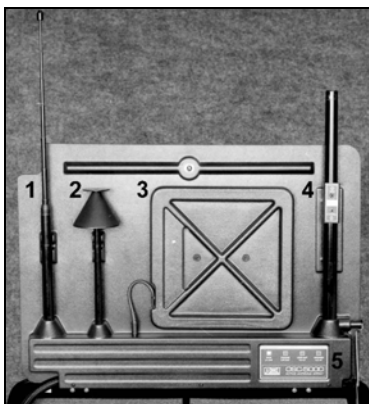


FIGURE 3: ANTENNA PANEL

The OSCOR antenna panel provides an integrated package of probes that are automatically selected based on the operating frequency. The OSCOR central processor controls the automatic switching; hence, manual antenna selection is not required for operation.

1. **ACTIVE WHIP ANTENNA** - GaAs FET preamplifier and telescoping whip provide high sensitivity and wide 0.5-1500 MHz frequency coverage. *
2. **DISCONE ANTENNA** - mounted in a fixed position, the DISCONE covers a 1500-3000 MHz frequency range. *
3. **BALANCED LOOP ANTENNA** - contains an active amplifier with a remote controlled NARROW BAND tape mode for detection of tape recorders. The LOOP ANTENNA can also be removed from the antenna array panel and placed at a remote location. WIDE MODE covers from 10-500 kHz, and NARROW covers 32.5-45 kHz for tape recorder detection.
4. **INFRARED DETECTOR** - when extended, the IR DETECTOR will observe a 360° view and detect IR energy with a wavelength of 850-1050 nM and modulation of 15 kHz to 5 MHz.
5. **STATUS INDICATORS** - shows the antenna currently selected.
6. **AC VLF** (not shown in picture) - AC power cord (also called AC VLF probe) tests the AC power supply for carrier transmitters. The AC VLF probe can test any pair of conductors for carrier current (provided the voltage level is less than 250 volts).
7. **MICROWAVE DOWNCONVERTER** - Provides observation of frequencies from 3 GHz to 21 GHz.

WARNING: The *ACTIVE WHIP ANTENNA* and *DISCONE* contain circuitry that can be damaged by electrostatic discharge. If electrostatic conditions exist, be sure to touch the OSCOR main chassis before touching the WHIP or DISCONE.

WARNING: The AC VLF probe is designed to handle voltage levels up to 250 volts. Do not exceed this limit, or the unit may be damaged. (If this limit is exceeded and your unit is damaged, return it to REI or your dealer for repair. An internal breaker must be replaced.)

Power System

Power is obtained in one of three ways:

1. AC mains power of 115/230 VAC
2. Internal Rechargeable 12 VDC Battery
3. External 12-18 VDC input

Note: Whenever possible, it is best to use AC power to keep the battery charged and to allow the AC VLF to scan for carrier current eavesdropping devices.

AC Power

The internal AC power supply actively monitors the voltage level of the Mains Input. The green LED (labeled “AC ~”) will show when there is sufficient power. The LED will remain off if insufficient voltage and/or internal overloads are detected.

To prepare the unit:

1. *Set the Voltage Selector switch to your particular Line Voltage of 115 or 230 VAC, 50 or 60 Hz.*
2. *Connect the power plug to an operational AC outlet and observe that the green AC ~ LED is illuminated.*

The AC power receptacle is a worldwide IEC-320 standard and will accept right-angle style power cables for most countries. If the appropriate cord or adapter is not readily available, the cord provided can be fitted with another plug.

Observe the wiring conventions for the connector of your choice, and follow the color assignments of the USA/Canada power cord supplied with the OSC-5000. Although the use of earth ground is always preferable, it is not essential that your power system provide that connection. Contact REI or your dealer with your particular power requirements.

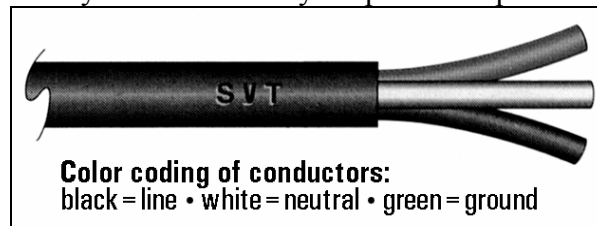


FIGURE 4: CONNECTOR WIRING CONVENTIONS

Note: Battery charging and other internal functions are automatic.

WARNING: Be sure the voltage selector switch is set to the proper input voltage before operation.

Battery

Battery operation will typically last for 2-5 hours, depending on internal loading. A “Low Battery” warning will appear on the display when the battery power level is at approximately 10%. If the unit continues to operate after the “Low Battery” warning appears, the unit will automatically shut off before the battery is fully discharged to prevent RAM memory loss.

Note: For optimum data retention and maximum battery life, do not store in a discharged (“Low Battery”) condition. Charge as soon as possible.

Battery charging is automatic. Whenever the AC power cord is plugged in and the unit has been turned on, the unit will select FULL CHARGE, and then FLOAT when charging is completed. Charging time is highly dependent upon operating load and depth of discharge. Typical charging time is approximately 4-6 hours. Charging a completely drained battery may require a 12-16 hour “overnight” charge.

External DC Power

When connected to an external 12-18 VDC source, unit operation will be normal, but the battery will only partially charge. External 12-18 VDC is best used for field operations when extended operation is required and no AC power is available.

Contact REI or your dealer for a 12 VDC cigarette lighter plug or DC power cord.

Program Key

The user-installable “PLUG-IN PROGRAM KEY” contains operating software and allows easy program updates or new software installation. This program key is located on the far left of the main panel.

Note: Use care when removing or installing the program key. Be sure to touch the unit’s front panel to prevent electrostatic discharge to the key or socket.

After key removal, press the **OFF** button, and then follow screen prompts when using AUTO or MANUAL operation. All stored information and settings are deleted when the program key is replaced.

Note: To ensure desired information is retained, leave the program key inserted in the OSCOR after the power is off. Also, in case of program error, the key may be used as a system reset. Remove the key and re-insert, then follow screen prompts for setup.

Connector Tray Input/Output Jacks

The I/O jacks provided in the connector tray offer a wide degree of flexibility for future options.

CONTROL / RF CABLES - connect the main unit and the ANTENNA ARRAY. The easily removed BNC connectors provide easy input of specialized RF probes or cables. VLF/MF provides input for 10 kHz to 5 MHz; HF/UHF provides input for 5 MHz to 3 GHz)

VIDEO OUTPUT (Optional) - provides a video output for viewing video signals. See page 65 Detecting Video Threats.

SERIAL COMMUNICATIONS - RS-232 I/O PORT connects with IBM or equivalent PC computer for control or database storage. Can also be used with MODEM TELECOM remote operation.

EXPANSION PORT - interfaces with OTL option and the MDC (Microwave downconverter) options.

RECORDER OUTPUT - allows the use of micro-cassette recorder to record received audio for later review or proof of an eavesdropping device.

OIF-5000 Interface - special option that provides 10.7 MHz IF output.

Storage Compartment and Accessories



FIGURE 5: STORAGE COMPARTMENT

The built-in accessory storage area contains specific locations for connectors and accessories. The above photo illustrates the standard product placement determined by size and weight.

If you desire to add other items or change the location of items, you must consider the following:

- Heavy items should be placed toward the bottom to prevent an unbalanced condition.
- Items protruding too far above the die cut foam may damage the elements on the antenna array.

WARNING: Antenna Array damage can occur if packaged improperly. Be sure to replace each item as suggested above. Do not force when closing.

Note: The storage compartment shown might be different from others due to the standard and/or optional accessories chosen. Please contact REI or your dealer for a current list of available accessories. See page 14 for placement of accessories in the storage compartment.

The OSCOR accessories described in this section will all fit inside the OSCOR storage compartment. The figure below illustrates the placement of these accessories.

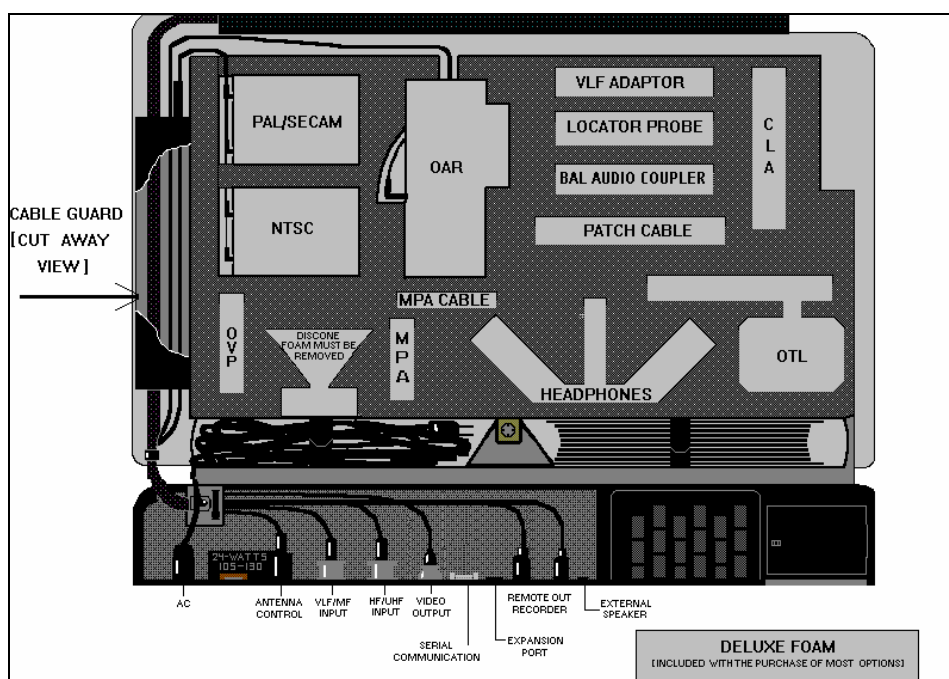


FIGURE 6: ACCESSORIES AND CONNECTOR TRAY

Low Leakage Headphones

The headphones have been designed to limit the audible emissions when worn properly and used at moderate volume levels. When using the headphones, make sure both earpieces are close against your ears, since it is possible for a highly sensitive audio surveillance device to “hear” the headphones (a feedback is possible).

Audio Patch Cord 4 ft (1.22 M)

The Audio Patch Cord with 3.5 mm male to male connectors is used with the Balanced Audio Coupler, Mini Microphone, Direct Tape or CD inputs to the EXT REF input.

Miniplug Extension Cable 12 ft (3.66 M)

The Miniplug Extension with 3.5 mm male to female connectors is used as a headphone extension when monitoring a detected device's audio. It also allows the Loop Antenna to be used apart from the Antenna Array panel. Placed remotely in an area such as an individual's chair, couch, or nearby table, it can screen for tape recorders or video cameras and can be used with the mini microphone.

RF Extension 12 ft (3.66 M)

The RF extension with male to male BNC connectors, used with the headphone extension, allows connection of the Locator Probe for pinpointing the location of a detected surveillance device.

Locator Probe

The Locator Probe allows the OSCOR to find signals identified as surveillance devices. The probe provides a localized signal strength input that the OSCOR converts to a variable frequency tone (a higher tone implies closer proximity). The telescoping antenna and the squelch-control adjustment provide additional flexibility for narrowing the search area. (See page 45 Locating the Threat.)

VLF Adapter

The VLF adapter takes advantage of OSCOR's ability to detect carrier current devices on the AC line through its own supply. By disconnecting the AC power and running OSCOR on its internal DC supply, the AC power cord, by way of the VLF adapter, can be connected to any wire or cable that is suspected of containing carrier current transmissions. Likely candidates for closer inspection include telephone, fax, and data lines, MATV/CATV, intercom, thermostat, etc.

Note: Make sure to check and select the correct voltage in the OSCOR connector tray.

Balanced Audio Coupler (BAC - 5000)

The Balanced Audio Coupler provides a balanced and isolated connection for testing telephone, fax, data lines, or unknown wiring or cables. The coupler and patch cord can extract line audio or can be used for direct correlator reference as used in testing for telecom "hot mikes," hook-switch bypass, electronic triggers, etc. Any suspicious wiring can also be tested for microphones by monitoring it through the system's reference circuit and listening to the headphones. (See page 83 Testing Telephones with OSCOR.)

WARNING: Before attempting to connect the Balanced Audio Coupler to an unknown wire or cable, you must first determine if it carries a hazardous voltage. The coupler should not be connected to voltages greater than 250 volts. Unit damage or personal injury may result.

Optional Accessories and Upgrades

This section describes optional accessories currently available for the OSCOR.

OSCOR Personal Computer Interface (OPC-5000)

The OPC provides computer interface with the OSCOR using a direct serial communications cable. The software allows the user to store signal lists, sweep information, and sweep span settings, and the information can be transferred back and forth between the PC and the OSCOR. Plus, the software lets the user create reports, graphs and charts from the stored information.

OSCOR Microwave Downconverter (MDC-2100)

The OSCOR Microwave Downconverter option (MDC-2100) expands the OSCOR's frequency range limit to 21 GHz. The term "Downconverter" means that the MDC-2100 takes higher frequency signals and converts their transmit frequency down into the operational frequency range of the OSCOR spectrum analyzer. Microwave signals tend to be directional, so the MDC-2100 features a high gain directional antenna array. The MDC-2100 is compatible with the OPC Interface and the OTL locator options. It can function in the sweep, analyze and correlation modes and includes a tripod, which provides the stability needed to securely point the downconverter antenna array and a swivel neck for easy positioning.

OSCOR Deluxe Package of OPTIONS

- **OSCOR Triangulate and Locate Option (OTL-5000)**

This option utilizes a patented ranging process (REI maintains exclusive patent rights to Glenn Whidden's patent # 4,399,556) to triangulate on the location of an eavesdropping device. This option does not require return to REI for installation. (See page 48 OSCOR Triangulate and Locate Option.)

- **OSCOR Video Option (OVM-5000)**

This allows the OSCOR to provide viewing of video signals and can be used for detection of covert surveillance cameras. It supports NTSC, PAL and SECAM and includes a video demodulator circuit board, which must be installed in the OSCOR main unit, and two video monitors that fit inside the OSCOR Storage Compartment. It includes OVP-5000. (See page 65 Detecting Video Threats.)

- **OSCOR Video Patch Cord (OVP-5000)**

This patch cord allows received video signals to be fed directly into an alternative video monitor or a video recorder. Video output is provided in a standard RCA plug.

- **OSCOR Audio Recorder and Cables (OAR-5000)**

An audio micro-cassette recorder connects directly into the connector tray to use the OSCOR audio recorder functions.

- **Locator Probe Extension Cable (LPE-5000)**

This BNC cable is identical to the locator probe cable. It comes with a barrel connector and provides extension for the Locator Probe.

- **Miniature Microphone (MIC-5000)**

This may be used with the standard OSCOR cables to provide a remote microphone input.

- **OSCOR Multiple Purpose Cable (MPC-5000)**

A 12-ft cable with 3.5mm male and 3.5mm female connectors that extend the Loop Antenna range, or connect the OSCOR Balanced Audio Coupler and MIC-5000.

- **Modular Phone Adapter (MPA-700)**

The MPA provides easy access to telephone conductors for testing. The universal connector works for 2,4,6, & 8 conductor telephone systems. (See page 83 Testing Telephones with OSCOR.)

- **Cigarette Lighter Adapter (CLA-700)**

The Cigarette Light Adapter provides DC input to power the OSCOR from an automobile cigarette lighter.

- **OSCOR Intermediate Frequency Output (OIF-5000)**

The Intermediate Frequency Output provides an IF output of 10.7 MHz for detailed signal analysis. OSCOR must be sent to REI for installation.

SECTION 2: USING THE OSCOR

The OSCOR is designed to operate either manually or in a stand-alone, automatic configuration, constantly monitoring the environment for the evidence of eavesdropping devices. REI wanted to create a product that provides portable, cost-effective Countersurveillance equipment, capable of operating independently with minimum preparation required. While this section describes how to set-up the OSCOR and perform manual and automatic operations, the upcoming section entitled “SECTION 4: CONDUCTING A SWEEP,” that begins on page 71, provides recommended guidelines for using the OSCOR to perform a sweep.

In either the Automatic or Manual Mode, the basic detection approach of the OSCOR consists of four steps:

<u>Operational Step</u>	<u>OSCOR Mode</u>
Identification of the signal, using spectrum analyzer sweep functions.	SWEEP
Analyzing the Signal.	ANALYZE
Classifying the Signal	CORRELATION
Locating the Signal	Triangulate Mode or Locator Probe

In the Automatic Mode, the OSCOR will continuously scan all selected inputs, automatically seek to each received signal, analyze each signal for audio information, and perform audio correlation to evaluate the threat.

In contrast, the Manual Mode allows full user control of the system for detailed study or verification of suspicious signals. The Manual operation is made easy by specialized functions such as: automatic switching of antenna array elements, seek to next signal capability, and one touch toggle between Sweep Mode, Analyze Mode, and Correlate Mode.

Setting up the System

Each OSCOR unit comes from the factory configured for most standard operations. Most users will never have the need to access this menu except for setting the internal clock and setting up security protection. This menu addresses the following options:

- Manual control of the battery charging function and display of current mode
- Custom menu
 - Set clock
 - Set units (metric/English)
 - Specify job name
 - Establish password access control
 - Resetting the OSCOR using the Reset Button.

To turn on the OSCOR, press the **AUTO/MANUAL** button located near the bottom left of the main panel.

The System Set-Up Menu can be entered from the Sweep Mode, the Analyze Mode, or the Correlate Mode by pressing the **MENU** button twice.

To perform these functions:

To set the clock (set date and time):

1. In the System Set-up Menu, press the **F4** button (labeled CONFIG/CUSTOM).
2. In the Master Config Menu, press the **F1** button (labeled REALTIME CLOCK).
3. Under Time of Day, Press **F1** to set the time and **F2** to toggle the time format (12/24 hour).
4. Press **F4** to set the date.

To change the units:

1. In the System Set-up Menu, press the **F4** button (labeled CUSTOM).
2. Press the **F3** button (labeled DISPLAY OPTIONS).
3. In the Custom Config Menu, press the **F3** button (labeled UNITS METRIC/ENGLISH); the units will toggle between METRIC and ENGLISH.

To specify a Job Title to label all plots associated with a job:

1. In the System Set-up Menu, press the **F4** button (labeled CUSTOM).
2. In the Custom Config Menu, press the **F2** button (labeled EDIT JOB TITLE) and follow on screen instructions for labeling.

To establish password access to the OSCOR unit:

1. In the System Set-up Menu, press the **F3** button (labeled PASSWORD/SECURITY).
2. In the Security Set-up Menu, press the **F4** button (labeled CHANGE ACCESS PASSWORD).
3. Enter the desired password and press **ENTER**.

Note: The Security Set-up Menu allows you to:

F1 - Lock/Unlock Automatic operation

F2 - Lock/Unlock access to the signal database

F3 - Lock/Unlock COM Port

Reset Button:

A Reset button is built into the OSCOR connector tray. This Reset button is a small white button on the right side of the connector tray. By disconnecting the OSCOR from AC power and pressing this button for 10 seconds, the OSCOR firmware will be completely reset to all factory defaults and all memory will be erased. This button is used if the unit has locked up or is not functioning normally due to an unforeseen programming condition.

OSCOR Manual Mode Operation

The OSCOR can detect eavesdropping devices in many different ways. This section provides an overview of OSCOR functions and explains how to control these functions manually. Most of the functions in this section can also be automatically controlled so that the OSCOR can operate in a stand-alone configuration (see page 55 OSCOR Automatic Mode Operation).

Sweep Mode (Spectrum Analyzer Functions)

The OSCOR receiver surpasses other test equipment by combining fast and accurate frequency acquisition with high sensitivity. Most spectrum analyzers of similar cost are analog, resulting in inaccurate frequency readouts due to unstable tuning oscillators requiring constant adjustment.

The OSCOR, however, contains a digitally synthesized receiver (quad conversion super heterodyne with 3 phase locked-loop synthesizers) designed specifically for the OSCOR. Various intermediate frequency bandwidths and demodulators allow the OSCOR to resolve wide or narrow bandwidth signals, including subcarrier audio.

The **SWEEP/ANALYZE** button, located just below the Rotary Dial, alternates between swept spectrum (Sweep Mode) and demodulated analyze (Analyze Mode) modes. In this screen, the following functions are available:

F1 - sequentially steps through all the available sweep spans (and input devices on the antenna array) and will automatically select the IF bandwidth and demodulator for optimum scanning speed and recovered audio (see Figure 6). This button will toggle through the entire default sweep spans as well as any spans that have been stored (see page 37 Sweep Span Storage).

F2 - selects the intermediate frequency bandwidth in a sequential step function and is combined with the wide and narrow band demodulators. Available bandwidths - 250 kHz, 15 kHz, 6 kHz (see Figure 6).

F3 - selects the appropriate demodulator for audio monitoring or correlating. Available demodulation schemes include AM, FM, FM Subcarrier, SSB/CW. The subcarrier demodulator utilizes a wide 250 kHz primary IF and then performs a second narrow band demodulation of 15 kHz and 6kHz.

Note: Since the Sweep Mode does not lock in on any single frequency, the demodulators are only important in the Analyze Mode (see page 31 Demodulators).

F4 - switches the -20dB RF Attenuator (see page 25 Receiver Attenuator) on or off at the active whip and VLF/MF input.

MENU - provides access to mode configuration and system setup.

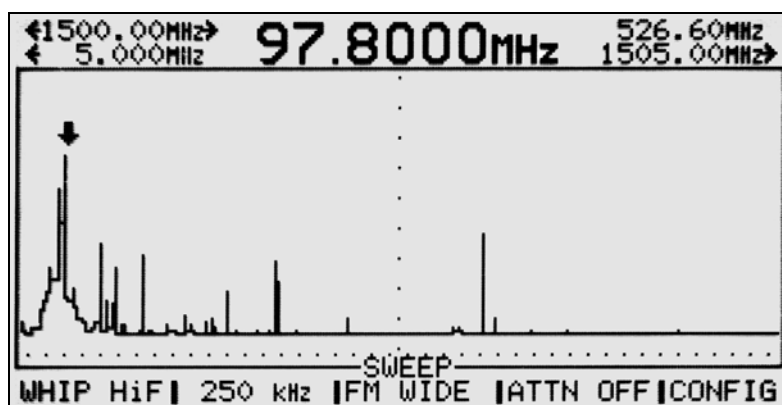


FIGURE 7: SWEEP MODE SCREEN DISPLAY

Receiver Bandwidths

The OSCOR receiver is designed to receive three different Intermediate Frequency (IF) bandwidths. The IF bandwidth refers to the frequency window that is received when the receiver is tuned to a specific frequency. For example, normal FM radio stations have a regulated bandwidth of 200 kHz. This means that a radio station at 98 MHz actually deviates from 97.9 MHz to 98.1 MHz (Note: 1,000 kHz = 1 MHz). Therefore, when the OSCOR is tuned to a frequency of 98 MHz and the IF bandwidth is 250 kHz, the OSCOR is actually receiving everything from 97.875 MHz to 98.125 MHz. The OSCOR bandwidth of 250 kHz provides adequate bandwidth for the normal radio signal with some margin to accommodate tuning inaccuracies. The various bandwidths that are available with the OSCOR are designed for standard types of audio modulation.

Using a wide 250 kHz IF bandwidth will allow the tuning synthesizer to operate at its maximum speed. This IF bandwidth is designed primarily for Frequency Modulated (FM) signals and wide band Amplitude Modulated (AM) signals (see page 31 Demodulators). The rapid “refresh” rate of the display will show the “dynamics” of the spectrum such as modulation peaks or the on-off of two way signals.

An individual signal can easily be viewed for amplitude and modulation peaks by narrowing the frequency span and adjusting the Frequency Display (see page 23 Adjusting the Frequency Display). Any signal that produces little or no modulation should also be checked with a narrower IF filter.

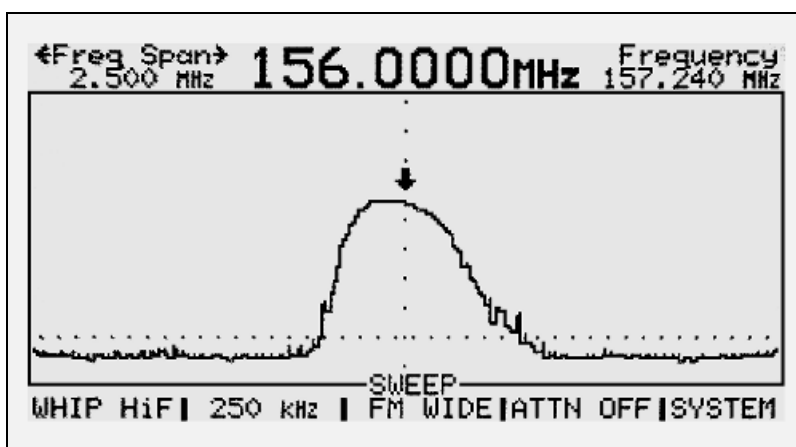


FIGURE 8: SWEEP MODE SCREEN DISPLAY WITH WIDE BANDWIDTH

The narrow 15 kHz and 6 kHz are designed primarily for narrow band FM and AM signals. These filters will indicate if two signals are hiding within a wide filter profile. Each signal should be demodulated in the Analyze Mode to determine if there is correlation or room sound present.

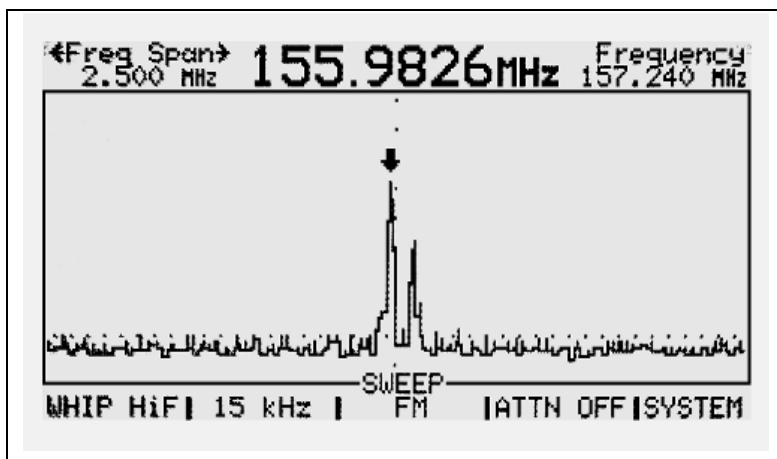


FIGURE 9: SWEEP MODE SCREEN DISPLAY WITH NARROW BANDWIDTH

Figure 9 shows that upon closer inspection, using a narrow bandwidth, the above signal contains a “snuggled” transmitter.

Note: Using narrow IF bandwidths on narrow deviation signals will reduce the system noise level and produce higher sensitivity.

The following table presents the combinations of **F1** Inputs/Frequencies, **F2** Bandwidth, and **F3** Demodulators available.

INPUT	**FREQ. RAN.	DEMODULATORS / BANDWIDTHS			
		FM	FM/SC	AM	SSB/ CW
Tape Loop*	32.5 kHz - 45 kHz	6		6	6
Infrared	10 kHz - 5 MHz**	250, 15 ,6	250/15,6	250,15,6	6
AC VLF	10 kHz – 5 MHz	250, 15 ,6	250/15,6	250,15,6	6
RF Loop	10 kHz – 510 kHz	250,15,6	250/15,6	250, 15 ,6	6
Whip Low	500 kHz – 5.5 MHz	250,15,6	250/15,6	250, 15 ,6	6
Whip High	5 MHz - 1.5 GHz	250 ,15,6	250/15,6	250,15,6	6
Discone	1.5 GHz - 3 GHz	250 ,15,6	250/15,6	250,15,6	6
Microwave Downconverter*	3 GHz – 21 GHz	250 ,15,6	250/15,6	250,15,6	6

FIGURE 10: INPUT, FREQUENCY, DEMODULATOR, AND BANDWIDTH COMBINATIONS

Bold indicates default IF bandwidths and demodulators used in Automatic Mode.

These IF bandwidths are designed for the majority of signals within the specified frequency range.

* not available in Automatic Mode

** the frequency range refers to the modulated frequencies that are scanned.

The infrared sensor is designed to support wavelengths 850 -1070 nM.

Adjusting the Frequency Display

The frequency controls are similar in design to most high quality spectrum and network analyzers. They were designed for speed and ease of use. In both the Sweep Mode and the Analyze Mode, the Frequency Display indicates both start and stop frequencies, as well as the frequency span, sweep frequency, and cursor frequency. The frequency parameters are indicated using arrows on the screen.

The start frequency is indicated with a left arrow: **←#####**

The stop frequency is indicated with a right arrow: **##### →**

The frequency span is indicated with two arrows: **← ##### →**

The tuning frequency is indicated with no arrows: **#####**

The cursor frequency is indicated with large numbers: **#####**

Note: In the Sweep Mode, the tuning frequency will be continuously changing as the receiver sweeps the frequency span. In the Analyze Mode, the tuning frequency will be continuously changing only if the cursor frequency is below the squelch level.

Rotary Dial

The Rotary Dial allows smooth and accurate placement of the tuning cursor and will jump to the next frequency span when the cursor reaches a screen end limit. Entering the desired frequency directly on the keypad can also move the cursor.

Note: The Rotary Dial is a digitally controlled optical encoder programmed with a variable rate. It will adjust its step size according to rotational speed. The cursor can be positioned over any signal to identify its frequency or to select that frequency in the Analyze Mode.

EXPAND and NARROW

The displayed frequency span can be adjusted by using the **EXPAND** and **NARROW** buttons. Each push of these buttons increases or decreases the Frequency Display by a pre-defined increment (these increments vary depending on the current location, but usually nearly double or half the frequency).

Pressing **SHIFT** then **EXPAND** key will force the screen to jump to the maximum frequency display. The **SHIFT** key followed by the **NARROW** key will move the frequency display toward the minimum very quickly, but may sometimes require a repetition in order to reach the minimum display.

“Wide spans” will show multiple signals’ frequency placement and amplitude. Stronger signals, signals with harmonic multiples (see page 79 Transmitter Harmonics), or signals that are “out of band” can be easily identified. A typical “medium span” view allows easier separation of each signal when selecting one to view in the Analyze Mode. A close-up “narrow span” will clearly show each individual signal and its modulation.

To narrow in on a signal:

- Use the Rotary Dial and the **NARROW** button to focus on the signal while decreasing the frequency span of the display.

UP and DOWN

Similar in function to the Rotary Dial, the **UP** and **DOWN** buttons will immediately jump to the next higher or lower frequency span (Frequency Display Window). These buttons are also used for tuning the subcarrier system (see page 31 Tuning Subcarrier). Pressing **SHIFT** followed by **UP** or **DOWN** will jump one half screen. The **UP** and **DOWN** buttons are also used to scroll through the input lists and signal database lists (see page 34 Data Functions (STORE/RECALL)).

SEEK/LIMITS

The **SEEK/LIMITS** button uses the automatic tuning function to automatically adjust the signal being received and analyzed.

- Press **SHIFT** then **SEEK/LIMITS** to scan to the next higher frequency signal while operating in the Analyze mode.

Direct Frequency Entry

Rather than using the Rotary Dial with the **EXPAND/NARROW** and **UP/DOWN** buttons, a frequency can be entered directly from the keypad. If the OSCOR is receiving RF, the OSCOR will immediately jump to the required input antenna and appropriate frequency window to view the desired frequency.

To enter a frequency directly using the keypad:

- *In megahertz:*
 1. *Type the desired frequency and press **ENTER**.*
- *In kilohertz:*
 1. *Type in the desired frequency*
 2. *Press the **k/MHz** button to change the units mode to kilohertz, then press **ENTER**.*

Receiver Attenuator

Since the OSCOR is a highly sensitive receiver, it is possible for very strong signals to have an overloading effect on the Antenna Pre-amplifiers. Receiver overload is evidenced by strong signals (such as FM broadcast radio stations) appearing at harmonic frequencies.

The transmitter is not actually radiating these harmonic signals; they are being generated in the receiver as a result of an overloaded RF circuit. However, most harmonic signals (especially those from bugging devices) are a result of an impure transmitter oscillator. To determine the cause of the harmonic signal (see page 79 Transmitter Harmonics), the built-in attenuator should be turned on to reduce or eliminate in most cases the RF overload. The RF attenuator will reduce sensitivity by 20 dB. The attenuation is being applied to receive signals prior to amplification in the Antenna Panel pre-amplifiers.

To turn on the RF attenuator:

*In the Sweep or Analyze Mode, press the **F4** button (labeled **ATTN OFF** on the Display). The **F4** button toggles the attenuator mode to on or off.*

Note: The OSCOR also has a built-in audio attenuator that is used to protect the audio circuitry from high power audio inputs (see page 41 Audio Attenuator).

Note: The OSCOR attenuator does not affect the operation of the MDC-2100.

Alternate RF Spectrum Display Modes

The OSCOR provides several different ways to view the RF spectrum in the sweep mode. These display modes are defined below:

- Real-time Spectrum Display – Provides the most recent view of the RF spectrum according to the OSCOR receiver. This data is not stored in RAM memory and is only displayed as the data is measured.
- Friendly Spectrum Display – This is an image that is stored in RAM memory. This image of the frequency spectrum should only be taken at a location that is known to be free of bugging devices.
- Peak Spectrum Display– This is an image that is stored in RAM memory. This image is continuously updated based on peak values measured from the Real-time frequency data.
- Integration Spectrum Display – This is a spectrum display mode developed by integrating the spectrum data from the Real-time frequency spectrum. This image is not stored in RAM memory and is completely reset whenever the frequency display window is altered in any way.

- Difference Spectrum Display – This display mode displays the difference between any two of the spectrum display modes described above. This mode is particularly useful for comparing a Friendly frequency spectrum to the Real-time frequency spectrum. Using this display mode, signals that are unique to the sweep environment are quickly identified providing a very rapid method of detection for some bugging devices.

The Friendly and Peak Spectrum display modes are stored in RAM memory in the OSCOR. This data is retained in OSCOR memory even if the unit is turned off. This data is only reset if the OSCOR memory reset or if the individual memory buffer is reset. This procedure is further described later in this section.

Technical Note: The Friendly and Peak spectrum data only applies to the basic OSCOR frequency spectrum. The MDC-2100 does not support the Friendly and Peak spectrum display data.

The paragraphs below describe these display modes in greater detail.

Friendly Spectrum Display

Prior to conducting a sweep, it is highly recommended that the OSCOR be taken out of the sweep environment run in a load friendly mode. This mode will be described in much greater detail later in the manual. However, when the “Load Friendly” is executed, the OSCOR first stores the RF frequency spectrum in RAM memory. This data is referred to as the Friendly RF spectrum display data. This Friendly data is then utilized to compare to the Real-time frequency data to quickly identify signals that are unique to one environment.

The Friendly Spectrum display data is automatically loaded when the “Load Friendly” operation is executed. Also, the Friendly RF Spectrum data can be captured without running the automatic mode using the procedure outlined below.

To Load the Friendly spectrum data:

1. Ensure that the OSCOR is in the Sweep Mode.
2. Press the **MENU** button (labeled CONFIG).
3. Press the **F4** button (labeled MANAGE IMAGES).
4. Press the **F4** button (labeled ‘Capture Span as Friendly’).

To Display the Friendly spectrum data:

1. Ensure that the OSCOR is in the Sweep Mode.
2. Press the **MENU** button (labeled CONFIG).
3. Press the **F1** button repeatedly until the label reads “PRIMARY FRIENDLY” or press the **F2** button repeatedly until the label reads “DOT IMG FRIENDLY”. You may also capture friendly from the Auto Mode “Loading Friendly”.

To Clear the Friendly spectrum data:

1. Ensure that the OSCOR is in the Sweep Mode.
2. Press the **MENU** button (labeled CONFIG).
3. Press the **F4** button (labeled MANAGE IMAGES).
4. Press the **F3** button (labeled ‘Clear Comparison Span Memory “FRIENDLY”’).

5. Press the **F1** button (labeled **DELETE**) to confirm deletion.

Peak Spectrum Display

Many RF signals are sporadic in nature which means they only transmit at random times and are therefore very difficult to detect. These types of signals include pagers, cellular phones, police and aircraft radios, etc. Also, certain types of very sophisticated bugs are quite elusive. For example, bugs that do not stay on the same frequency for very long or only transmit at certain intervals are very difficult to locate. These signals may be Frequency Hopping, Spread Spectrum, or Burst Bugs (see page 79 Spread Spectrum and page 80 Frequency Hopping). For this reason, the OSCOR was designed with a Peak Signal Display Mode. In this mode, the OSCOR will display the peak signal that occurs at each frequency as it continuously scans. The Peak Signal function combines the peak signal from each continuous sweep. Therefore, if the OSCOR is allowed to sweep across the spectrum for several minutes, the envelope of all transmissions will be recorded. After a period of time, the envelope of a frequency hopping bug or a burst bug will be displayed.

This operation should be performed periodically with the Frequency Display set to approximately 100 MHz. Allowing the OSCOR to run for 5 to 10 minutes in each window will be plenty of time to establish a complete Peak Signal Profile and acquire sporadic signals.

To Display the Peak Signal spectrum:

1. Establish the frequency span of interest in the Sweep Mode.
2. Press the **MENU** button (labeled **CONFIG**).
3. Press the **F1** button repeatedly until the label reads “PRIMARY PEAK” or press the **F2** button repeatedly until the label reads “DOT IMG PEAK”.

To Clear the Peak spectrum data:

1. Ensure that the OSCOR is in the Sweep Mode.
2. Press the **MENU** button (labeled **CONFIG**).
3. Press the **F4** button (labeled **MANAGE IMAGES**).
4. Press the **F2** button (labeled ‘Clear Comparison Span Memory “PEAK”’).
5. Press the **F1** button (labeled **DELETE**) to confirm deletion.

The peak display spectrum is continuously stored and updated in the unit. Therefore, it is important to “Clear the Comparison Span Memory” for analysis in each environment or to compare different rooms in the same environment. This is significantly different from previous versions of the software. Previous versions of the software reset the peak display data whenever the frequency display was altered in any way.

Integration Spectrum Display

Most RF signals utilize a modulation technique that results in the frequency spectrum of the signal modulating significantly in real-time. This is obvious when looking at a FM modulated signal with a high-speed analog spectrum analyzer. Furthermore, FM signals provide an excellent opportunity to hide a “snuggle bug” in the sides or skirts of the signal as described previously in this manual (see page 21 Receiver Bandwidths). While most smuggled transmitters can be easily viewed using the narrow bandwidths, the OSCOR software provides an improved way of viewing these signals by integrating the frequency display to minimize the interference from the modulation. The Integration Spectrum Display

is a real-time frequency display function that is not stored in the OSCOR memory. Anytime the frequency display is altered in any way from using the EXPAND/NARROW keys or the UP/DOWN keys, the integration data is completely reset.

To Display the Integration spectrum data:

1. Ensure that the OSCOR is in the Sweep Mode.
2. Press the **MENU** button (labeled CONFIG).
3. Press the **F1** button repeatedly until the label reads “PRIMARY INTEGRAT” or press the **F2** button repeatedly until the label reads “DOT IMG INTEGRAT”.

To reset the Integration spectrum data:

1. Ensure that the OSCOR is in the Sweep Mode.
2. Press the **MENU** button (labeled CONFIG).
3. Press the **F4** button (labeled MANAGE IMAGES).
4. Press the **F1** button (labeled ‘Reset Integrat IMAGE’).

Note: The Integration spectrum data is also automatically reset when the frequency display is altered.

Difference Spectrum Display

The OSCOR provides the ability to compare two different display modes. This mode is particularly useful for comparing a Friendly frequency spectrum to the Real-time frequency spectrum. Using this display mode, signals that are unique to the sweep environment are quickly identified providing a very rapid method of detection for some bugging devices. However, this mode may also prove to be very useful when trying to determine the location of transmitter within an environment. You may wish to compare the RF spectrum of one room to another room. It is also useful when looking for snuggle bugs and comparing the real-time spectrum with the integrated spectrum.

To Display the Integration spectrum data:

1. Ensure that the OSCOR is in the Sweep Mode.
2. Press the **MENU** button (labeled CONFIG).
3. Utilize the **F1** and **F2** buttons to select the two display modes that you wish to compare.
4. Press the **F3** button (labeled ‘DIFFERNC’) to turn on the Difference mode.

Note: There must be two images selected using the **F1** and **F2** buttons to access the difference mode. Also, you may turn on the difference mode exclusively using the **F3** button and pressing until the label reads “DIFFERNC ONLY”.

Analyze Mode

The Analyze Mode changes the operation from a sweep function to a single frequency signal analysis. Specify the frequency of interest with the cursor (controlled with the Rotary Dial) or the numeric keypad. The Analyze Mode will demodulate a signal to audio, display a refreshed signal profile, and indicate specific conditions prior to correlation.

Technical Note: Modulation is the process of converting a normal signal to a radio frequency suitable for transmission; demodulation is the process of converting a transmitted signal from its modulated form back to its original signal form. The most common types of modulation are AM (Amplitude Modulation) and FM (Frequency Modulation).

To enter the Analyze Mode:

- Press the **SWEEP/ANALYZE** button located just below the Rotary Dial.

This button toggles between the Sweep Mode and demodulated Analyze Mode. You can listen to the signal indicated by the cursor by entering the Analyze Mode and adjusting the volume control. The menu for the function keys in the Analyze Mode is identical to the Sweep Mode.

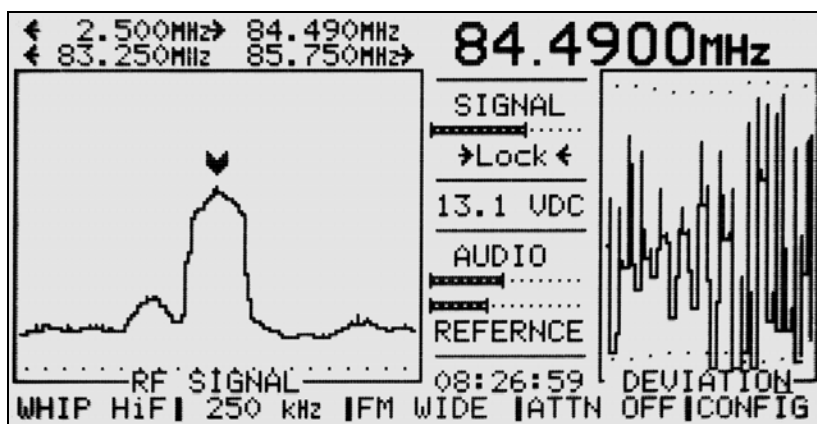


FIGURE 11: ANALYZE MODE SCREEN DISPLAY

The Analyze display screen contains two plots. The plot on the left half of the screen is the frequency spectrum. Since the Analyze Mode is not a frequency sweeping process, the graph of the signal profile is not refreshed, and the tuning frequency is equal to the cursor frequency. However, if the signal level (at the cursor) is below the squelch threshold, the Analyze Mode will function like the Sweep Mode, with the screen constantly being updated and the tuning frequency constantly changing. If the signal level exceeds the squelch level, the Frequency Display can be refreshed by several methods:

- toggle to the Sweep Mode and back to Analyze Mode
- expand or narrow the frequency span
- manually scan the cursor across the screen using the Rotary Dial, or
- program the Frequency Display to periodically refresh itself

To program the Analyze Mode to automatically refresh:

1. In the Analyze Mode, press **MENU** button (labeled CONFIG).
 2. Press the **F1** button (labeled REFRESH/OFF)
 3. Type the desired number of seconds for periodic refresh, and press **ENTER**.
- (To cancel the refresh, repeat steps 1-3 and enter 0 for the desired number of seconds.)

The graph on the right half of the screen is an oscilloscope view of the demodulated signal (also see page 43 Oscilloscope Analysis (Audio Spectrum Analysis Screen)). This graph may be changed to display the OSCOR phase correlator results.

To change the analyze mode deviation graph to a correlate graph:

1. In the Analyze Mode, press **MENU** button (labeled *CONFIG*).
2. Press the **F2** button (labeled *DETAIL/SOURCE*). Pressing **F2** in this menu will toggle the graph between the time display and the correlate display.

Depending on the demodulator selected, the time display graph is labeled as follows:

<i>Demodulation</i>	<i>Screen Label</i>
FM or FM Wide	Deviation
AM or AM Wide	Amplitude
Sub-Carrier	SubCarr

FIGURE 12: SCREEN LABELS FOR DEMODULATIONS

The center of the Analyze Screen displays the following information:

- Relative signal strength
- Signal Lock status (when the OSCOR tunes to the center of a signal, the AFC (Audio Frequency Circuit) will prevent signal drift).
- Battery voltage display (Battery voltage display is an optional display that must be selected using the System Set-Up Menu.)

Demodulators

The **F3** button in the Sweep or Analyze Mode can select the following demodulators:

- FM WIDE: 250 kHz as used with FM Broadcast and TV sound channel
- FM NARROW: 15, 6 kHz as used with most two-way communications
- SubCFM: uses 250 kHz primary IF and 15 or 6 kHz secondary demodulator
- AM WIDE: 250 kHz used for fast scanning
- AM NARROW: 15, 6 kHz used with AM Broadcast, short wave, CB, aircraft
- SSB / CW: 6 kHz used with short wave, marine, amateur radio

Technical Notes:

- DEMODULATING NARROW DEVIATION FM WITH A WIDE 250 kHz FILTER: The OSCOR will sufficiently demodulate narrow deviation FM signals when operating in the wide 250 kHz bandwidth. The automatic gain control will continuously adjust the audio level to the correlator or headphones for optimum results.
- WIDE DEVIATION FM WITH A NARROW 15, 6 kHz FILTER: If a narrow bandwidth filter is used on wide deviation signals, over-modulation of the signal profile and distorted audio will result.
- USE OF THE PROPER DEMODULATOR WILL RESULT IN THE BEST RECOVERED AUDIO--LOWEST DISTORTION AND LOWEST NOISE: Surveillance devices using FM modulation will normally produce a small percentage of AM modulation due to poor oscillator/buffer design, unregulated power supplies, or effects of antenna/reflection.
- AM modulated devices may also contain a small percentage of FM modulation primarily due to an unstable oscillator.
- Receivers also respond to FM signals with AM demodulation due to slope detection against the IF filter skirts, and phase/group delay in the filter systems.
- When receiving AM signals with FM demodulators, the imperfect limiting action of an FM IF/demodulator will allow a small percentage of AM to also be detected.

Tuning Subcarrier

Subcarrier demodulation is a means of decoding a second “piggy backed” signal carried on a normal transmitted radio signal. This is sometimes referred to as double demodulation. Subcarrier signals are most commonly used for background music and nationwide digital pagers. These frequencies normally fall between 50 - 120 kHz.

When a subcarrier signal is suspected, you may perform a second demodulation by activating the FM/SC demodulator, indicated on the display as *SubC FM*. Many commercial FM radio stations and TV sound channels have subcarrier signals that typically contain MUZAK (elevator music), paging systems, or news stations.

To activate the Subcarrier demodulator:

1. *In the Analyze Mode, select the 250 kHz bandwidth using the **F2** button.*
2. *Activate the Subcarrier tuner by using the **F3** button.*
3. *Select the Subcarrier bandwidth using the **F2** button after the Subcarrier demodulator has been selected. (The second demodulator bandwidth can be either 15 kHz or 6 kHz.)*

4. Once the subcarrier demodulator has been activated, the subcarrier signal must be tuned. Use the Rotary Dial to tune to the main signal on the profile screen.
5. Use the **UP/DOWN** buttons to tune the subcarrier receiver between 10 kHz and 250 kHz. The signal line within the subcarrier screen will show the actual level of a subcarrier and centering will be indicated by a **>LOCK<** condition.

Note: The lock function will only work when the subcarrier tuning is within the bandwidth of 15 kHz or 6 kHz.

Note: For very low frequencies (10-35 kHz), many FM radio stations may “bleed” through to the sub-carrier demodulator. It should be obvious if the bleed is coming from the main radio signal by toggling to the FM demodulator and comparing the audio content to the sub-carrier demodulator.




Auto Fine Tune

The **SEEK/LIMITS** button, located below the **SWEEP/ANALYZE** button, performs an automatic fine tune (AFT) operation. This is a particularly useful mode when manually tuning a signal because the OSCOR will automatically lock on a signal and if the signal drifts in frequency, the AFT function will track the signal. The AFT function is identified on the ANALYZE screen by the LOCK indicator between the two graphs. If the AFT function has been activated, the LOCK indicator is replaced with the following: (**>>AFT<<**), this indicates that the AFT function is turned on and active. The AFT function is turned off immediately when the rotary dial or any other controls are activated that affect frequency control. Also, vertical dotted lines on the screen will indicate the frequency range over which the AFT function is performed.

Pressing **SHIFT** and **SEEK/LIMITS** will invoke the automatic seek to next signal function. The Squelch knob in the audio panel is used to set the signal threshold level. The squelch threshold is identified by a horizontal dotted line across the graphs in both the sweep and analyze modes.

Cursor Indicators

The cursor, controlled with the Rotary Dial, indicates the status of the signal at the specified location. The cursor has three different shapes:

-  Indicates that the signal is above the squelch level, but that the demodulator circuit has not locked onto a signal.
-  Indicates that the demodulator has locked onto a signal.
-  Indicates that the signal is below the squelch level.

Snuggle Bug Analysis

The Analyze Mode has a feature that provides the capability to quickly analyze a signal for the presence of a smuggled transmitter. A smuggled bug is typically a narrow band RF transmitter that tuned very close to frequency of an existing wide band signal such as an FM radio station. By tuning the smuggled signal very close to the center frequency of the wide band ambient signal, the smuggled signal is essentially masked by the demodulation of the ambient signal. Therefore, visual inspection of the ambient signal using a spectrum analyzer in a wide band bandwidth mode does not easily reveal the presence of the smuggled transmitter. This effect can be readily seen from Figures 7 and 8 on page 21 in the section on Receiver Bandwidths. Therefore, the OSCOR has a special function designed specifically for identifying the presence of these types of smuggled transmitters. This function, which is accessed through the Analyze mode, takes the OSCOR into its narrowest operational bandwidth and then begins the frequency display integration function. This process insures that the modulation effect of the signal will be integrated out of the spectrum display so that smuggled transmitters can easily be seen in the spectrum.

To access the Snuggle Bug Analysis:

1. *Ensure that the OSCOR is in the Analyze mode and that the desired signal is locked.*
2. *Press the **MENU** button labeled CONFIG.*
3. *Press the **F3** button (labeled SNUGGLE START). This will change the Analyze display to a narrow band (6 kHz) and integrate the frequency spectrum. If a snuggle bug exist, an additional signal will appear in the spectrum.*

To turn off the snuggle analysis and return to the original Analyze mode bandwidth parameters:

- *Press the **MENU** button labeled CONFIG.*

Harmonic Frequency Analysis

The Analyze Mode has a feature that provides the capability to quickly tune to harmonic frequencies or sub-harmonic frequencies of a signal being analyzed. This is a very useful feature when analyzing a signal from a potential bugging device because most RF bugging devices have transmitters that produce many harmonics.

The Frequency analysis function also provides the ability to inspect the LO image in the OSCOR. The LO image is a false image that is generated internally by a Local Oscillator in the OSCOR. This LO image only impacts the WhipHi and Discone antenna inputs and the basic result is that if a very strong signal exist in one input, it is possible for this signal to also occur in the other input at a significantly reduced level. For example, a very strong signal exists at 98.5MHz, it is possible for a false image to occur at 1598.5MHz in the Discone input. This image is not of significant concern, except that it can cause some confusion when analyzing signals in the Discone frequency band.

To access the Harmonic Frequency Analysis:

1. *Ensure that the OSCOR is in the Analyze mode and that the desired signal is selected.*
2. *Press the **MENU** button labeled CONFIG.*
3. *Press the **F4** button labeled FREQ. ANALYSIS.*

4. Use the F1 – F4 keys to perform various frequency analyses.
 - Press **F1** to return to the original signal
 - Press **F2** to tune directly to the first sub-harmonic of the original signal.
 - Press **F3** to tune to the next harmonic of the original signal.
 - Press **F4** to view the LO image of the original signal. (if in the WhipHI, the LO image = original signal + 1500MHz; if in the Discone, the LO image = original signal – 1500MHz).

Note: the frequency analysis menu is linked to a particular frequency being analyzed. If the frequency is manually tuned, the menus do not update unless the menu is exited and returned to the Frequency analysis.

Data Functions (STORE/RECALL)

OSCOR has two types of information that can be stored for recall, Signal information and Frequency Sweep Span information.

The Signal storage capabilities can store information for up to 7,168 signals (this assumes that your OSCOR has the extra memory option. All OSCORs sold after 1 March 2000 contain the extra memory included in the unit). This information includes input source (RF, Carrier Current, or Infrared), frequency, demodulator, time/date of the last threat upgrade, and history of threat detection's (how many times this signal has been analyzed in the Automatic Mode). The Sweep Span storage can store up to 31 sweep spans. These can be used to recall a desired frequency band or to program the Automatic Mode to sweep multiple frequency spans and bandwidths using the same input.

Signal Storage

The OSCOR has a built-in database used to store selected signals. With OSCOR in the Automatic Mode, each detected signal is stored in the OSCOR memory for later recall. Moreover, the OSCOR has user-controllable memory storage or recall functions, allowing specific signals to be entered or deleted manually. Manually entered signals can be classified with a specified threat level. Signals that are stored as "FRIENDLY" signals are ignored in the Automatic Mode to increase the speed of the search process.

The threat level of any signal can be manually edited. Signals classified as "DECLARE" are signals that have been evaluated and declared to be threats. Declared threats are also ignored in the Automatic Sweep Mode. The OSCOR signal storage is an easy way to reduce the time required of the automatic sweep process. For example, if all local radio and TV stations are entered as friendly signals, they will be ignored in subsequent automatic sweeps, unless their power level changes by greater than 4% (see page 72 Pre-Loading Signals into Memory).

The following is an example of a signal list.

ALL STORED SIGNALS			TIME DATE	THRT/PK	#
RF	FM	66.0345MHZ	08:38 7/15	FRIENDLY	14
RF	FMW	90.8950MHz	08:41 7/15	FRIENDLY	18
RF	FMW	93.6950MHz	08:41 7/15	FRIENDLY	13
RF	FMW	117.6050MHz	08:41 7/15	FRIENDLY	10
RF	FMW	169.2650MHz	10:41 7/15	4:4	21
-----MODIFY THREAT LEVEL-----					
<input type="checkbox"/> RAISE LOWER <input type="checkbox"/>			FRIENDLY	DELETE SIGNAL	SETUP MENU

FIGURE 13: EXAMPLE SIGNAL LIST SCREEN DISPLAY

The first three columns specify the type of input, the frequency, and the type of demodulation of the stored signal such as FMW (FM wide) which is used for FM broadcast and TV channel sound, or FM (FM narrow) which is used by most two-way communications (see page 31 Demodulators for more information).

- The fourth column specifies the date and time.
- The fifth column (labeled Thrt/Pk) indicates the threat level of the stored signal. These values may be labeled with numeric values of 1 to 5, “FRIENDLY” for friendly signals or “DECLARE” to indicate that the user has declared the signal as a threat. The number to the left of the colon indicates the average threat level; the number to the right of the colon indicates the peak threat level.
- The last column on the list (labeled “#”) indicates the number of times the signal was detected in the Automatic Mode. This number is useful for determining if a signal has only intermittent transmission.

Note: Having friendly signals stored in memory is very advantageous when conducting sweeps requiring fast results (see page 72 Pre-Loading Signals into Memory). For example, when using the OSCOR to monitor a meeting in progress (see page 82 MONITORING A MEETING IN PROGRESS), it is imperative that the Automatic Mode sweep through the frequency spectrum as quickly as possible.

To manually store a signal:

1. In the Analyze Mode, select the signal with the cursor and adjust the tuning to lock onto the desired signal.
2. Press the **STORE** button to store the signal into memory.
3. Adjust the desired threat level using the **F1** and **F2** buttons.
4. Press **F4** (labeled LIST) in this menu to bring up the signal list (same as pressing **RECALL**).

To recall stored signals:

1. Press the **RECALL** button to toggle between the normal Analyze Mode and the Signal List Mode.
2. Use the Rotary Dial or the **UP/DOWN** buttons to select various signals in the database.

Editing Signals

The Signal Listing Mode has two menus to control signal database functions. The first menu provides the basic functions to act on individual signals (see figure 13). The second menu lists functions that affect the entire list.

LIST ALL SIGNALS	ALERT AT LEVEL 3	PLOT AS 1 LINE	DELETE SIGNALS	EDIT MENU
---------------------	---------------------	-------------------	-------------------	--------------

FIGURE 14: SIGNAL LIST MENU (2ND)

To change the threat level of a signal stored in the database:

1. Use the **RECALL** button in the Analyze Mode to access the signal list.
2. Select the desired signal using the Rotary Dial or the **UP/DOWN** buttons.
3. Select the appropriate menu using the **MENU** button (see Figure 13))
4. Select the desired threat level using the **F1** and **F2** buttons. **F1** and **F2** toggle up and down through the available threat levels (FRND, 1, 2, 3, 4, 5, DECLARE). Press **F3** to immediately change the level to a FRIENDLY signal.

To delete a signal stored in the database:

1. Use the **RECALL** button in the Analyze Mode to access the signal list.
2. Select the desired signal using the Rotary Dial or the **UP/DOWN** buttons.
3. Press the **F4** button (labeled DELETE/SIGNAL).
4. Press the **F1** button (labeled DELETE CONFIRM) to delete a single signal.
Press **MENU** (labeled CANCEL) to cancel the deletion process.

Filtering the Signal List

The signal database can be filtered to view, plot or delete only a certain signal classification.

Signals are classified according to the following criteria (which will become more apparent later in the manual)

- FRIENDLY - Signals common to the ambient environment and posing no threat
- NO CORR - Signals that have been stored with no classification or correlation.
- LOW CORR - Signals with a correlation level below the threat level threshold.
- THREATS - Signals with a correlation level exceeding the threat level threshold.
- DECLARED - Signals that the user has evaluated and flagged as known threat signals.

To filter the signal list:

1. Press the **RECALL** button in the Analyze Mode to display the signal list.
2. Select the appropriate menu using the **MENU** button (see Figure 14).
3. Press the **F1** button (labeled LIST ALL) to select the desired filter criteria. The **F1** button cycles through the various available combinations: SIGNALS, FRIENDLY, NO CORR, LOW CORR, THREATS, & DECLARED.

To delete a filtered signal list or Clean-up Spurious Signals:

1. Use the **RECALL** button in the Analyze Mode to access the signal list.
2. Select the appropriate menu using the **MENU** button (see Figure 14).
3. Press the **F1** button (labeled LIST ALL) to select the desired filter criteria.
4. Press the **F4** button (labeled DELETE).
5. Press the **F2** button (labeled DELETE) to delete the displayed signal list or Press **F4** (labeled SPURIOUS/CLEAN UP) to delete all signals that have a LOW CORR and have a history of less than 5 encounters. This mode is used to eliminate detected noises that are not associated with real signals.
6. Press **F1** to confirm the deletion process.

Sweep Span Storage

The OSCOR has 6 pre-programmed input frequency spans covering the available range of the electromagnetic spectrum. Up to 31 additional frequency spans may be added to the memory for rapid manual recall of stored span or for use in the Automatic Mode (see page 57 Editing or Creating a Frequency Span for Automatic Operation). These stored alternative frequency spans can be recalled and/or modified in the Manual Mode using the normal STORE/RECALL functions.

For your convenience, the OSCOR is pre-programmed with these standard inputs and their associated frequency spans:

To display the list of stored sweep spans:

1. Place the OSCOR in the Sweep Mode using the **SWEEP/ANALYZE** button. Press the **RECALL** button to display the sweep span list. In this mode, the Rotary Dial or the **UP/DOWN** buttons can be used to select a specific sweep span. (The **RECALL** button toggles between the Sweep Span List Mode and the normal frequency spectrum view.)

The following is a description of the sweep span list.

Select with Rotary Dial / <input type="checkbox"/> Down & UP <input type="checkbox"/> Keys				
SCAN	INPUT	DMD	FREQUENCY RANGE	ATN
OFF	RF/LOOP	AM	10.0KHz – 510.0KHz	OFF
MED	RF/WhipL	AM	500.0KHz – 5.500MHz	OFF
MED	RF/WhipH	FMW	5.000MHz – 1505.00MHz	OFF
OFF	RF/DISC	FMW	1505.00MHz – 3005.00MHz	OFF
OFF	INFRARED	FM	10.0KHz – 5.010MHz	OFF
OFF	AC VLF	FM	10.0KHz – 5.010MHz	OFF
-----EDIT SELECTED SPAN-----			EDIT AS	EDIT
SPAN OFF	DEFAULT	ATTN OFF	GROUP	EXIT

FIGURE 15: SWEEP SPAN LIST SCREEN DISPLAY

- The first column of the Sweep Span list screen displays the enable status for Automatic Mode operation. For further details on Automatic Mode operation (see page 57 Setup Inputs).

- The second column indicates the antenna being used as an input source.
- The third column indicates the type of modulation. The “W” indicates wide-band modulation.
- The fourth column indicates the Frequency range of the span.
- The last column indicates whether the sweep span has been programmed to used the attenuator. “OFF” indicates that the attenuator is not in use for automatic operation.

Note: The default menu has options that apply to editing a single sweep span. However, there is also a menu to edit all of the sweep span inputs. These procedures are described below.

To Store a Sweep Span in memory:

1. In the Sweep Mode, choose the desired sweep input, frequency span, demodulator, and bandwidth using the Frequency Display controls.
2. Press the **STORE** button to save the span in memory.
3. Press **F3** button (labeled EDIT) to view the complete list of saved Sweep Span parameters.

*To Enable or Disable the selected input, for automatic operation, press **F1** (see page 57 Editing or Creating a Frequency Span for Automatic Operation).*

To delete a programmed sweep span from memory:

1. Display the Sweep Span list using the **SWEEP/ANALYZE** button and the **RECALL** button (if it is not already in the Sweep Mode).
2. Use the Rotary Dial or the **UP/DOWN** buttons to select the desired sweep span.
3. Press **F2** (labeled DELETE).
4. Press **F1** to confirm the deletion.

To edit an individual Sweep Span:

1. Display the Sweep Span list using the **SWEEP/ANALYZE** button and the **RECALL** button (if it is not already in the Sweep Mode).
 - Press **F1** to turn an individual span off.
 - Press **F2** to delete an individual span, followed by pressing **F1** to confirm the deletion.
 - Press **F3** to toggle the Attenuator setting for an individual span.

To delete all programmed sweep spans from memory:

1. Display the Sweep Span list using the ***SWEEP/ANALYZE*** button and the ***RECALL*** button (if it is not already in the Sweep Mode).
2. Press ***F4*** (labeled ***EDIT AS GROUP***) to display
3. Press ***F4*** (labeled ***ALL USER DELETE***).
4. Press ***F1*** to confirm the deletion.

To Reset the Sweep Spans to defaults:

1. Display the Sweep Span list using the ***SWEEP/ANALYZE*** button and the ***RECALL*** button (if it is not already in the Sweep Mode).
2. Press ***F4*** (labeled ***EDIT AS GROUP***)
 - Press ***F1*** (labeled ***Span Off***) to set all spans to ***OFF***.
 - Press ***F2*** (labeled ***DELETE***) to delete all user specified spans.
 - Press ***F3*** (labeled ***ATTN OFF***) to turn the attenuator off on all spans.

Audio Functions

The OSCOR's built-in audio amplifier and audio circuitry can be used in several ways. The following sub-sections describe these audio functions.

Reference Audio System

For the Correlator to work properly, the OSCOR must have a reference audio signal. In the Correlate Mode, the OSCOR constantly compares the audio arriving through the receiver system with the reference audio signal. If the two audio signals are similar (which means that they correlate) there is a very high probability of a bugging device.

The Reference System provides an audio input to the Acoustic Correlator and will normally listen to the ambient sounds of the room. The built-in Reference Microphone is combined with a high-gain, automatic level control to provide signals to the Acoustic Correlator. The input LED indicator lights when a sufficient input level is delivered to the Reference System.

Note: The OSC-5000 constantly measures the acoustic level. The OSCOR will prompt you to use a supplementary sound source such as a tape deck or CD player if the room sound level is too low or irregular.

The OSCOR can use the external reference to remotely monitor a conference room or office. Use an external microphone with a long extension cable to provide reference audio to the correlator while the OSCOR is in another location (see page 82 MONITORING A MEETING IN PROGRESS).

Speaker Monitoring Control

The ***EXT*** button provides control of input to the OSCOR speaker. Using this button, the speaker can be configured to monitor the main audio from the receiver (this is the default), the reference audio system (from either the built-in OSCOR microphone or using an external reference sound source), or sound from an external source. These features allow the OSCOR's built-in audio amplifier to be used for miscellaneous audio testing.

The OSCOR can also use the external reference to directly feed a known sound source such as a tape deck or CD player into the correlator. Plug an external source into the EXT REF input using a patch cord to automatically by-pass the reference microphone and feed the external signal directly into the correlator system. Once the external source is plugged in, the OSCOR speaker can be used to output the reference signal.

The EXT REF jack is used to provide an input for an external reference sound source such as a remote microphone, a music source (tape deck or CD player), or an intercom system (see page 73 Activating a Known Sound Source). Moreover, you can plug the Balanced Audio Coupler using the Audio Patch Cord into the EXT REF input and connect it to the earpiece to listen to the normal phone sounds (see page 83 Testing Telephone with OSCOR).

The default operation is to monitor the audio from the received signals.

To monitor the main receiver system:

1. Press the **EXT** button to access the Audio Monitor Menu.
2. Press the **F1** button until the display says "MONITOR / RECEIVER".

To use the OSCOR as an audio amplifier by inputting a reference external audio source:

1. Connect the external source of your choice, and press the **EXT** button to access the Audio Monitor menu.
2. Press the **F1** button until the display says "MONITOR / REFERENCE".
3. Press the **F4** to choose the attenuator mode. For external microphones and telephone pickups, select AUTOATTN or ATTN OFF. For Tape or CD inputs, select AUTOATTN or ATTN ON and set the Tape or CD player in the Normal Play Mode with the volume at half level. The Input Level LED should be illuminated but not constant. The default for the MONITOR/ REFERENCE mode is ATTN ON.

Technical Notes:

- Since some music sources such as walkman machines or CD players do not have external speakers, you can use the OSCOR speaker to provide the sound source.
- While listening to the speaker or using the headphones, if you hear the reference sound source, you have verified that the OSCOR is in the correct mode. If there is nothing plugged into the EXT REF jack and the OSCOR is placed in the MONITOR/REFERENCE Mode, the speaker will have a feedback ringing because the built-in microphone is being fed directly to the speaker.

Note: It is recommended that the AUTOATTN not be used in conjunction with Automatic Mode operation because it slows down the automatic operation. ATTN ON is the recommended setting.

Note: When connecting external sources that do not have their own speakers, be sure the volume on the OSCOR loudspeaker is loud enough to be detected by any eavesdropping device that may be in the room.

Note: The headphones must be unplugged to patch an external sound source through the OSCOR speaker (see page 42 Headphones).

Audio Attenuator

The Audio monitoring system has a built-in audio attenuator, which is used to prevent the audio circuitry from being overloaded by strong audio inputs (primarily from the EXT REF jack). The audio attenuator control has three modes of operation ATTN ON and ATTN OFF.

Audio Filter

The Filter selects either a wide frequency audio response (20 Hz - 15 kHz) or voice band filter (300 Hz to 3000 Hz) and will reduce many types of audio interference. The audio filter affects the speaker and headphone outputs only. The **FILTER** button on the keypad controls this filter. *To toggle the audio filter mode press the **FILTER** button.*

This button toggles the audio filter on or off, which is indicated in the center left of the top of the display as SPEAKER FILTER ON or SPEAKER FILTER OFF.

Volume Control

The volume control increases or decreases received or monitored audio levels to the internal speaker or headphones.

Note: To prevent accidental audio output while operating in the Automatic Mode, the speaker is automatically turned off unless it is being used to provide a sound source. The headphones are operational in the Automatic Mode.

Headphones

The headphones automatically transfer the speaker output to the headphones. The headphones used with the OSC-5000 have been custom designed for low acoustic leakage and high quality.

Note: Do not operate the headphone volume higher than necessary. It is possible for a highly sensitive audio surveillance device to “hear” your headphones (a feedback is possible).

Squelch/Signal Threshold

The squelch control will move the position of the squelch baseline on the display and the trip point of the squelch circuit. In the Sweep and Analyze Modes, the squelch level is indicated on the screen by a horizontal dotted line. This squelch line has several applications:

Sets the signal threshold when using “seek to next signal” function in the Analyze Mode. In the Analyze Mode, only signals above the squelch threshold will be demodulated to produce audio output.

Sets the signal threshold when using the locator probe. In this mode, the OSCOR generates an audible tone, where the pitch corresponds to the strength above the squelch threshold of the signal. This is used to find an RF transmitter or an IR threat when using the parabolic audio reflector that is part of the OTL. (See page 45

Locating the Threat.)

Adjusts the delay time from 0.1 to 99 seconds, using the **MENU** button to access the Squelch Menu.

Tone Ringer System

The OSCOR has a built-in ringing system designed to mimic a telephone ringer. This ringer can be used for several functions:

- To provide a reliable sound source to confirm threats when using the Correlator Mode manually (see page 44 Correlate Confirm Mode).
- To provide an audible alert in the Automatic Mode (see page 61 Automatic Mode Audible Alert).
- To provide a sound source for the Verify and Active correlate methods in the Automatic Mode (see page 63 Correlate: Acoustic Correlator System(Automatic)).

There are three volume levels for the tone ringer system: “LOW”, “MEDIUM”, and “LOUD”.

To set the volume of the tone ringer system:

1. Press the **TONE** button; this will automatically turn on the ringer to allow you to monitor the volume and open a Tone Alert Volume Menu.
2. Select the desired volume by pressing
 - F1** (labeled LOW)
 - F2** (labeled MEDIUM)
 - F3** (labeled LOUD)

To stop the ringing:

- Press the **TONE** button or the **F4** button (labeled **SILENCE**). The **MENU** button will exit the menu but will not terminate the ringer.

Oscilloscope Analysis (Audio Spectrum Analysis Screen)

The **SPECT** button (in the audio panel) switches the display to the Audio Spectrum Analysis Screen. This is an oscilloscope-style display of the input waveform. It allows visual inspection of received audio and can be helpful when identifying video and digital transmissions. In this mode, high frequency, digital signals may have very little signal level due to the limited sampling frequency of the OSCOR microprocessor.

*To enter the Audio Spectrum Analysis Screen, press the **SPECT** button.*

To configure the Audio Spectrum Analysis Screen:

1. In the Audio Spectrum Analysis Mode, press the **MENU** button (labeled **CONFIG**).
2. Press **F1** to toggle the Peak Audio Level Display mode.
3. Press **F2** to access the Video Control Menu.
4. Press **F3** to toggle the trigger mode. The trigger mode is similar to the trigger control on an oscilloscope.
5. Press **F4** to freeze the screen.
6. Use the **EXPAND/NARROW** buttons to control the time spectrum of the display.
7. Use the **UP/DOWN** buttons to control the vertical display size.

Acoustic Correlator System (Manual)

The acoustic correlator system allows the OSCOR to recognize a signal as an eavesdropping device. It compares complex sound patterns arriving from the reference audio system and received audio channels. In a typical environment, there are many passive sounds such as talking, music, and air-conditioner. When OSCOR hears the same acoustic information on both the reference and the received channels, the threat level increases. The correlator can be used in either the Manual or Automatic Mode of operation. To prepare the correlator system for use in the Automatic Mode (see page 63 Correlate: Acoustic Correlator System (Automatic)).

To enter the Correlate Mode

1. Select the desired signal in the Analyze Mode.
2. Press the **CORR** button to enter the Correlate Mode. Press **CORR** again or the **SWEEP/ANALYZE** to return to the Analyze Mode.

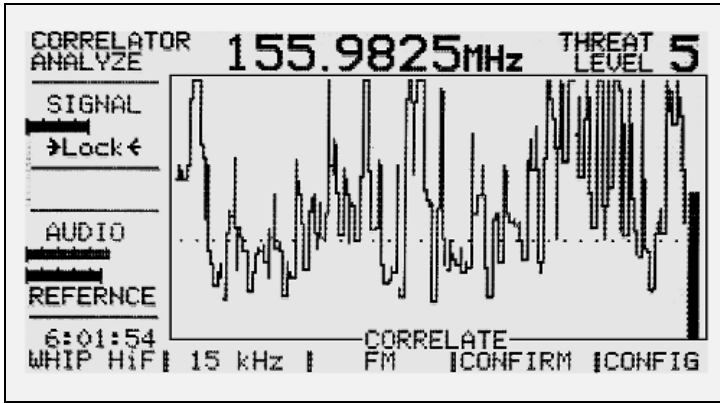


FIGURE 16: CORRELATOR SCREEN DISPLAY

The Correlator Screen will provide a visual graph of sound pattern matching vs. time. When the two signals have a high degree of correlation, the graph level will increase. The bar graph at the right of the screen indicates an average of the correlation. The threat level corresponds to the amount of correlation and is based on a scale of 1 to 5.

The following table contains recommended conclusions based on the threat level.

Threat Level	Conclusion
1	No Correlation*
2	Slight Correlation*
3	Potential threat*
4	Highly Probable threat
5	Highly Probable threat

FIGURE 17: THREAT LEVEL CLASSIFICATIONS

*No Correlation does not necessarily mean that the signal is not a threat; it only means that the signal does not acoustically correlate with the selected form of demodulation. Signals or video that are scrambled, digitally modulated, spread spectrum or frequency hopping will not correlate, so it is important to try to identify each signal.

Three approaches are recommended to confirm threat existence:

1. Listen to the received signal using the headphones
2. Change the environment (turn up some music, whistling works very well but may not be considered covert)
3. Use the Correlate Confirm Mode as described below.

Correlate Confirm Mode

The OSCOR has a built-in ringer (which sounds like a telephone ringing) designed to maximize the correlation if an eavesdropping device is present.

To use the correlator confirm ringer:

1. With a signal selected in the Analyze Mode, press the **CORR** button to enter the Correlate Mode.
2. Press **F4** (labeled CONFIRM) or the **TONE** button to activate a ringer tone output for positive ID. The volume of the ringer tone can be adjusted as described below.

To set the volume of the confirm tone alert:

1. With the confirm ringer ringing from the procedure above, select the desired volume by pressing one of the following:
F1 - LOW
F2 - MEDIUM
F3 - LOUD*
2. To terminate the ringing, press the **TONE** button or the **F4** button (labeled SILENCE). The **MENU** button will exit the menu but will not terminate the ringer.

* The LOUD setting for the Correlate Confirm Mode is much louder than a typical telephone and is normally used only in large conference rooms or for penetration into an adjacent room.

Note: In some cases, it is possible to have false readings from the loud mode because the ringer is so loud that it vibrates the receiver unit at acoustic frequencies and modulates a false signal into the receiver.

Correlator Configuration

Pressing the **MENU** button (labeled CONFIG) enters the Manual Correlator Menu. In this menu the following options are available:

- Press **F1** and **F2** to adjust the Correlator Screen scan time. The available times range from 3 to 60 seconds.

Press the **F4** button to freeze the correlation screen.

Locating the Threat

Once a signal has been identified as an eavesdropping device (or a video transmitter), the next step is to locate the threat signal.

Locating Magnetic Tape Recorders and Low Frequency RF (10 kHz - 500 kHz)

Low frequency magnetic signals emitted from tape recorders are typically very low powered. The OSCOR has two modes of operation for the loop antenna: the RF Loop mode, (10 kHz to 500 kHz) and the Tape Rec mode (Loop antenna tuned for 32.5 kHz -45 kHz to pick up the bias oscillator within the tape recorder; see page 90 Tape Recorder Detectors).

Note: The Tape Rec Mode is only available when operating in the Manual Mode.

To locate a tape recorder:

1. Remove the loop antenna from the antenna panel using the two thumbscrews on the panel.
2. Patch the separated loop antenna to the antenna panel using the 12ft 3.5mm patch cord located in the cord tray.
3. Place the OSCOR in the Analyze Mode (using the **SWEEP/ANALYZE** button) with the TAPE REC input selected (using the **F1** button).
4. Press the **THREAT** button to bring up the Threat Locator Menu.
5. Press the **F1** button (labeled Probeoff) to turn on the locator function.
6. Adjust the volume control to an acceptable level.
7. Adjust the squelch level (indicated by a horizontal dotted line) to just above the noise threshold at 40 kHz.
8. With the loop antenna, manually sweep over any object that may contain a tape recorder. (The loop antenna needs to be within about 3 ft for good signal reception.)

Note: Not all models of tape recorders contain a bias oscillator, therefore, some models of tape recorders may not be detected by these means (see page 90 Tape Recorder Detectors).

To locate Low Frequency RF:

1. Remove the loop antenna from the antenna panel using the two thumbscrews on the panel.
2. Patch the separated loop antenna to the antenna panel using the 12ft 3.5mm patch cord located in the cord tray
3. Tune the cursor to the signal of interest and place the OSCOR in the Analyze Mode.
4. Press the **THREAT** button to bring up the Threat Locator Menu.
5. Press the **F1** button (labeled Probeoff) to turn on the locator function.
6. Adjust the volume control to an acceptable level. (You should hear a buzzing sound.)
7. Adjust the squelch level (indicated by a horizontal dotted line) to the very peak of the signal. (If the squelch level is adjusted properly, the buzzing sound will have a very low frequency pitch and may occasionally stop.)
8. Walk around the room while listening to the pitch of the buzzing sound. As the locator probe is brought in the vicinity of the transmitter, the frequency of the buzzing sound will increase with the signal strength.

Note: It is important to remember that if the OSCOR speaker is used to broadcast the buzzing sound, the unit is not covert. Anyone using an eavesdropping device could hear the locator buzz. To use the loop antenna in a covert mode, the headphones can be used in conjunction with the loop antenna.

Locating RF Threats (500KHz to 21GHz)

The RF locating system works on the principle that as the receiving antenna is moved closer to the signal transmitter, the signal strength will increase. Since it is impracticable to move the OSCOR unit around the room, the OSCOR case contains a locator probe antenna and coaxial cable designed specifically for this purpose. The OSCOR must be in the Analyze Mode, since the locator probe uses signal strength to locate the signal (see page 28 Analyze Mode).

To set up the locator probe hardware for signals from 10KHz to 3GHz:

1. Remove the coaxial cable with BNC connectors on both ends from the storage compartment.
2. Disconnect either the VLF/MF or HF/UHF antenna connections from the connector tray. Select the connection based on the signal frequency. (Frequencies below 5 MHz should be plugged into the jack labeled VLF/MF. Frequencies above 5 MHz should be plugged into the jack labeled HF/UHF.)
3. Connect one end of the coaxial cable to the appropriate antenna connection in the connector tray and the other end to the locator probe.

To set up the locator probe hardware for signals from 3GHz to 21GHz (You must have the MDC-2100 option for this procedure):

1. Connect the MDC-2100 into the expansion port located on the OSCOR main panel.
2. Press **F1** to toggle between the various antennas of the DownConverter.
3. Place the OSCOR in the Analyze mode and select the desired signal. Press the **THREAT** button to bring up the Threat Locator Menu.
4. Press the **F1** button (labeled Probeoff) to turn on the locator function.
5. Adjust the volume control to an acceptable level. You should hear a buzzing sound.
6. Adjust the squelch level (indicated by a horizontal dotted line) to the very peak of the signal. When the squelch level is adjusted properly, the buzzing sound will have a very low frequency pitch and may intermittently stop.
7. Walk around the room while listening to the pitch of the buzzing sound. As the locator probe is brought into the vicinity of the transmitter, the frequency of the buzzing sound will increase with the signal strength.

To use the RF locator probe to locate an RF threat:

1. Select the signal of interest using the cursor in the Analyze Mode.
2. Press the **THREAT** button to bring up the Threat Locator Menu.
3. Press the **F1** button (labeled Probeoff) to turn on the locator function.
4. Adjust the volume control to an acceptable level. You should hear a buzzing sound.
5. Adjust the squelch level (indicated by a horizontal dotted line) to the very peak of the signal. When the squelch level is adjusted properly, the buzzing sound will have a very low frequency pitch and may intermittently stop.
6. Walk around the room while listening to the pitch of the buzzing sound. As the locator probe is brought into the vicinity of the transmitter, the frequency of the buzzing sound will increase with the signal strength.

Note: As you near the signal source, it may be necessary to adjust the squelch level. It may also be helpful to collapse the locator probe antenna to reduce the antenna gain when zeroing in on the threat location.

Note: It is important to remember that if the OSCOR speaker is used to broadcast the locator buzzing sound, the unit is not covert. Anyone using an eavesdropping device can hear the locator buzz. To use the locator probe in a covert mode, the headphones can be used with the mini-plug patch cord. This patch cord is on the same cord winder as the locator probe patch cord.

Locating Infrared Threat Signals

There is not a separate locator probe for locating infrared threats. It is important to note that infrared signals must be in line of sight between the OSCOR detector and either the infrared transmitter or a reflection from the transmitter. The OSCOR infrared detector is omnidirectional (it has a 360-degree viewing angle), therefore, a simple method for determining the direction of the transmitter is to block the various angles of the detector until the signal stops.

To locate an infrared transmitter:

1. *If you can demodulate the audio from the infrared signal, use the OTL device to locate the microphone following the previously described process.*
2. *Place the OSCOR in the Sweep Mode.*
3. *Narrow in on the signal of interest using the Rotary Dial and the **EXPAND/NARROW** buttons. Place the OSCOR in the Analyze Mode.*
4. *Press the **THREAT** button and then **F1** to turn on the locator probe function.*
5. *Adjust the volume so that you can hear the locator tone.*
6. *Adjust the squelch level so that the squelch is just above the signal level and the tone is silenced.*
7. *Place the OTL parabolic reflector on the infrared detector (see page 16 OSCOR Triangulate and Locate Option)*
8. *Rotate the parabolic reflector until the locator tone is at a maximum. This is the direction of the infrared transmitter.*

Note: There is no need to check for infrared transmitters in rooms without windows. For rooms with windows, the OSCOR should be placed directly in front of the window to detect any IR transmitters that may be transmitting through it. Infrared transmitters can also be placed outside a building and aimed away from it. To defend against this type of threat, it is necessary to take the OSCOR unit outside and carry it around the perimeter of the building while scanning for IR threats. On sunny days, the OSCOR IR probe should be shaded from direct sunlight or bright reflections to prevent overload from the Sun (direct sunlight will not damage the IR detector).

OSCOR Triangulate and Locate Option

The OSCOR Triangulate and Locate Option (OTL-5000) is designed to locate a microphone associated with an eavesdropping device. While the OSCOR locator probe (see page 46 Locating RF Threats (500KHz to 21GHz)) is designed to locate the transmitter antenna, the OTL-5000 option uses sonic ranging to locate the microphone. The OTL-5000 program is built into the OSCOR 2.0 software as well as all upcoming versions. The OTL-5000 hardware includes a piezo clicking device and a parabolic acoustic reflector that plugs into the OSCOR expansion port. When the OTL-5000 hardware is plugged into the OSCOR, the software recognizes the connection and provides access to the Triangulate and Locate software routines.

The OTL-5000 device uses the speed of sound to calculate the range from the eavesdropping microphone to three independent OTL-5000 positions. The location of the eavesdropping

microphone can be determined using basic triangulation equations and these measurements in a manner similar to the U.S. Global Positioning system.

Note: The OSCOR is not covert in this mode since the OTL-5000 emits a clicking sound to make range measurements.

The parabolic reflector that comes with the OTL-5000 provides the ability to point the clicking hardware at various locations to determine the location of the microphone. The piezo device should point into the reflector (the hole pointing into the curve of the reflector) to provide a directional sound source.

The OSCOR should be placed in a corner of the room (or test environment) with the operator facing into the room. The triangulation equations are only designed to provide accurate results on the exterior side of the antenna panel as described below. Since the method relies on sonic ranging, the most accurate results are achieved when the eavesdropping device is in line of sight to the OSCOR and on the exterior side of the deployed antenna panel.

OTL-5000 can only locate eavesdropping devices on this side of the OSCOR.

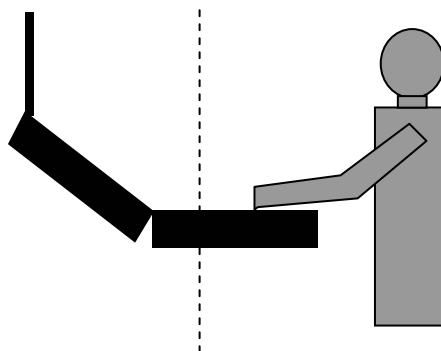


FIGURE 18: LOCATING CAPABILITY DIRECTIONAL DIAGRAM

To use the OTL-5000 to locate a microphone:

1. Plug the OSCOR Triangulate & Locate device (OTL-5000) into the expansion port.
2. Select the transmitter frequency with the cursor in the Analyze Mode.
3. Listen to the signal to confirm lock on the signal.
4. Press the **THREAT** Button to bring up the Location Menu.
5. Press **F2** (labeled Tri/Locate) to bring up the OTL-5000 Menu (this menu will only appear when the OTL is plugged in).
6. Press **F1** to select either a single click (labeled **SINGLE**) or multiple clicks (labeled **AUTO**).

Technical Note: The single click method provides only one click per range measurement. The multiple click method integrates a maximum of 10 clicks for a very reliable measurement that filters out any extraneous noise. Therefore, the single click method will work well only in a very quiet room. However, the single click method is advantageous because it is more covert than the multiple click method. The multiple click method is very noisy and may alert the eavesdropper.

7. Press **F2**, **F3**, or **F4** to initiate the clicking device.

- Adjust the volume of the clicking with the **UP/DOWN** buttons.
 - Adjust the screen width with the **EXPAND/NARROW** buttons. For best accuracy, the screen should be at the minimum range (Narrow) that still allows the audio spikes to be visible.
8. Adjust the directional sound characteristics by using the parabolic reflector attached to the OTL-5000 device. When the first spike on the display is maximized, the OTL-5000 device is pointing in the direction of the microphone. The OSCOR in this mode displays the range to the bug. The spikes on the screen represent the sound of the clicking being received by the bug. The multiple spikes are the echoes from the clicking. The rising edge of the very first spike is the direct path to the bug and should be used for each range measurement.
 9. The range is measured in three positions (represented by left, center, and right) by placing the cursor at the rising edge of the first spike (using the Rotary Dial). The range measurement is "locked" into memory by pressing **F2**, **F3**, or **F4** for each respective range measurement. The range measurement is based on the location of the cursor when pressing **F2**, **F3**, or **F4**.

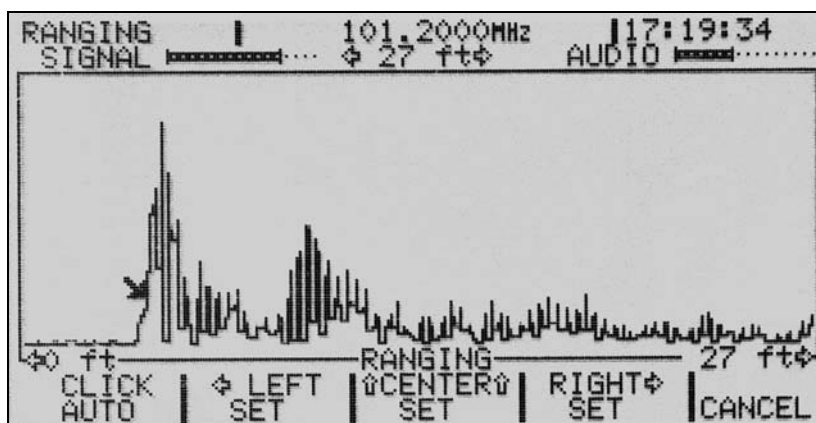


FIGURE 19: CURSOR LOCATION FOR OTL

10. After all measurements have been made, press the **MENU** button (labeled **LOCATE**) to view the position of the microphone. The positions indicated on the screen are referenced to the OSCOR connector tray expansion port connector. The accuracy of the triangulated position may vary depending on the consistency of the range measurements and the position of the eavesdropping device.

Technical Note: It is very important to hold the clicking device in the correct position while making measurements. Position errors of only a few inches at the clicking device may result in errors of several feet when locating a bugging device.

Technical Note: If the above method results in only very small spikes or no spikes at all, but the signal provides confirmed demodulated audio, try the following:

Adjust the range of the screen to its maximum value (60 ft/18 meters).

1. Try different bandwidths and demodulators (see pages 21 Receiver and 31 Bandwidths)

Demodulators).

2. Move to another location in the room, and try again.

The position for each range measurement is referenced to the expansion port connection. The range measurements should be made in the same plane.

To do this:

1. Hold the clicking device with the parabolic reflective surface facing away from the user,
2. Take the range measurements as described here.
 - Left position - stretch the OTL-5000 device directly left (over the AC power connector) until the cable is parallel to the OSCOR main panel.
 - Right position - stretch the OTL-5000 device directly right (over the OSC-5000 printer paper) until the cable is parallel to the OSCOR main panel.
 - Center position - stretch the OTL-5000 device directly vertical until the cable is perpendicular to the OSCOR main panel.

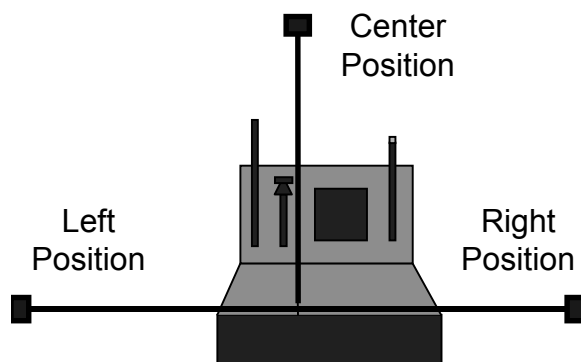


FIGURE 20: POSITIONS FOR RANGE MEASUREMENTS

Strip Chart Plotter

The strip chart plotter can record the standards, the procedures and setup information for a given sweep. Technicians can make notes on the printouts before entering them into a logbook. In this manner, a sweep history of a location is available to provide faster preparation and data collection during follow-up sweeps.

Note: Video monitors are automatically shut off when the printer is being used.

Sweep Plots (Frequency Spectrum Plots)

Setting a wide frequency span in the Sweep Mode provides a complete illustration of the spectrum of interest for a particular location. Any signals that warrant closer inspection can be marked for attention when setting up prior sweeps. When comparing plots of the same area from different dates, new signals stand out quickly and should be cause for suspicion. Signals that are known to be “FRIENDLY” can also be noted. For further information on the advantages of this approach (see page 72 Generating a Signal Chart of the Area).

To generate a plot of the frequency spectrum in the Sweep Mode:

1. *With the desired frequency span displayed, press the **PLOT** button to display the Plot-Width Menu.*
2. *Select the plot width using buttons **F2** and **F4**.*
3. *Press the **F1** button labeled **PLOT** to execute the plot.*
4. *A plot may be canceled by pressing **MENU**.*

Sweep Span Listing

The OSCOR can also print the sweep spans stored in memory. This listing will always include the default sweep spans that are permanently stored in memory.

To plot a listing of the stored sweep spans:

1. *Place the OSCOR in the Sweep Mode using the **SWEEP/ANALYZE** button.*
2. *Press the **RECALL** button to display the sweep span list. The **RECALL** button toggles the unit between the sweep span list and the frequency spectrum view.*
3. *Press the **PLOT** button.*
4. *A plot may be canceled by pressing **MENU**.*

Analyze Mode and Correlate Mode Plots

To generate a plot of the Analyze Mode or the Correlate Mode:

- *When the desired mode is displayed, press the **PLOT** button. The plotting process can be canceled by pressing **MENU**.*

Signal Listing

Another useful plot is the signal listing. All the signals stored in the OSCOR database can be plotted (see page 34 Signal Storage). All signals are plotted in ascending frequency order. Information about each signal may include threat level, time and date detected, frequency, antenna input, bandwidth used and demodulator selected. Whether lists are created in Automatic or Manual Mode, their appearance will be similar. In Automatic Mode, the type of signal list and their order are determined by the setup (see page 62

Auto Plotting of Threat Signals).

To plot a signal list:

1. Place the OSCOR in the Analyze Mode by pressing the **SWEEP/ANALYZE** button.
2. Press the **RECALL** button to display the signal list. The **RECALL** button toggles the unit between the signal list and the Analyze Mode spectrum view.
3. Press the **PLOT** button to print the list that is displayed on the screen using the print format specified under the CONFIG sub-menu (MENU button). (
 - After pressing the **MENU** button, adjust the print format using the **F3** button.
 - Use **F1** button to filter the list printing only specific threat levels (ie **FRIENDLY**, **LOW THREATS**, **THREATS**, ...)

Note: Only the signals that are displayed in the recall mode will be printed. The signal database can be filtered so that only a certain threat level can be viewed, plotted, or deleted.

To change the type of signal listing:

1. Place the OSCOR in the Analyze Mode by pressing the **SWEEP/ANALYZE** button.
2. Press the **RECALL** button, which toggles the unit between the signal list and the spectrum view.
3. Press the **MENU** button (labeled CONFIG) to enter the Listing Configuration Menu.
4. Press the **F3** button to toggle between “1 LINE”, “2 LINE”, and “BLOCKLIST”.

Paper Installation

To properly install the printer paper:

1. With the unit's power on, remove the printer cover.
2. Load a roll of paper onto the paper tray, observing the direction of the roll.
3. Lay the paper and bail in the power cord tray with a few inches of paper off the roll.
4. Insert the paper into the slot just below the metal plate at the back of the printer.
5. Press and hold the **FEED** button until paper is seen at the cutting surface.
6. Place the paper and bail in the paper tray, and press **FEED** again to ensure alignment and to take up any remaining slack.
7. Tear off the excess paper, and replace the printer cover.

Note: Each press of the **FEED** button advances the paper one line, whereas pressing **SHIFT** followed by **FEED** reverses the paper one line.

WARNING: Do not attempt to plot without paper loaded. The paper prevents the printer head from overheating. Do not try to load paper using the **PLOT** button instead of the **FEED** button. This could result in a paper jam or damaged printer. The head must be in the parked position to provide a gap for the paper.

Note: Thermal paper should be stored in a dark room, at an average temperature less than 25 degrees Celsius and a relative humidity less than 65%. Under these conditions, new paper remains usable and printouts in a logbook remain legible for at least 5 years. For optimum print quality and thermal head life, use SEIKO part No. TP201-211-25C (57.5 mm X 25 M) thermal paper or contact REI.

Miscellaneous Functions

SHIFT Functions

The **SHIFT** button provides access to a variety of functions that are seldom required, but sometimes useful. These functions have been added at the request of various users throughout the history of the OSCOR. These functions are listed in table in the quick reference guide at the back of the manual.

Note: To use the shift functions, press the **SHIFT** button, release it, and then press the next desired button. OSCOR accepts only one command at a time; therefore, pressing both buttons at once will not provide the desired result.

Freeze Screen

There are many cases when you may wish to freeze the OSCOR display. In most of the normal operation modes (sweep, oscilloscope analysis, etc.), this may be performed by one of the following methods.

To freeze the OSCOR Display:

1. Press the **SHIFT** button.
2. Press the **IMAGE** button.
3. To un-freeze, press any key.

To freeze the OSCOR Display in many modes:

1. Press the **MENU** button labeled **CONFIG**.
2. Press the **F3** button labeled **FREEZE**.
3. To un-freeze, press any key.

Tape Recorder Controls

Pressing the **TAPE** button activates and deactivates the tape recorder. Recordings provide evidence of OSCOR's received audio and can be useful in documenting evidence of surveillance devices.

The record outputs have two plugs: one plug provides audio to the recorder's microphone input and the second provides a contact closure to remotely start the recorder's motor.

The OSCOR can also be configured for remote recording in Automatic Mode (see page 62 Auto Tape Recording of Threat Signals).

Note: REI provides a recommended optional tape recorder for recording of received audio signals. There are many tape recorders that will work equally well for this option. However, the tape recorder offered by REI does not contain a bias oscillator. Therefore, it does not interfere with normal OSCOR operation in the tape recorder detection mode. It also contains a remote jack for external control. If you use a tape recorder not supplied by REI, the recorder must have a "remote" jack for on/off motor control. (Normally a smaller 2.5mm sub-mini phone jack is used.)

To connect a recorder to OSCOR's outputs:

1. Plug a 3.5mm miniature phone plug patch cord into the RECORD output jack and the MICROPHONE input of the tape recorder.
2. For remote start/stop operation, connect a 2.5mm patch cord to the REMOTE output and REMOTE input of the tape recorder.

To set the recorder to a ready condition:

Press the RECORD and PLAY buttons simultaneously on the tape recorder. This will prepare the recorder to run when the unit's REMOTE output jack gives an ALARM. (see page 62 Auto Tape Recording of Threat Signals)

To manually record:

1. Press the **TAPE** button. An illuminated LED and the rotation of the micro-cassette reels indicate recording.
2. To stop recording, press the **TAPE** button again.

Note: To reduce high and low frequency noise, all recordings utilize a band-filtered response. The voice-band filter is toggled on and off by pressing the filter button.

OSCOR Automatic Mode Operation

In the Automatic Mode, the OSCOR will scan all programmed inputs and frequency bands. If friendly signals have already been stored in the OSCOR (either by uploading the information from a PC or with the procedure on page 72 "Pre-Loading Signals into Memory"). This procedure greatly speeds up the automatic search process because when the OSCOR is programmed to search for bugging devices, the signals labeled as "FRIENDLY" will be ignored unless their power level changes by greater than 4%. Otherwise, each signal detected is stored in the internal signal database and analyzed for threat correlation (see page 63 Correlate: Acoustic Correlator System (Automatic)).

The Quick Reference Guide on page 109 at the end of the manual provides a map of the automatic mode programming menus. It is highly recommended that this map be referenced when studying this portion of the manual. Provided below is a small version of this guide.



Automatic Mode Set-up Menus

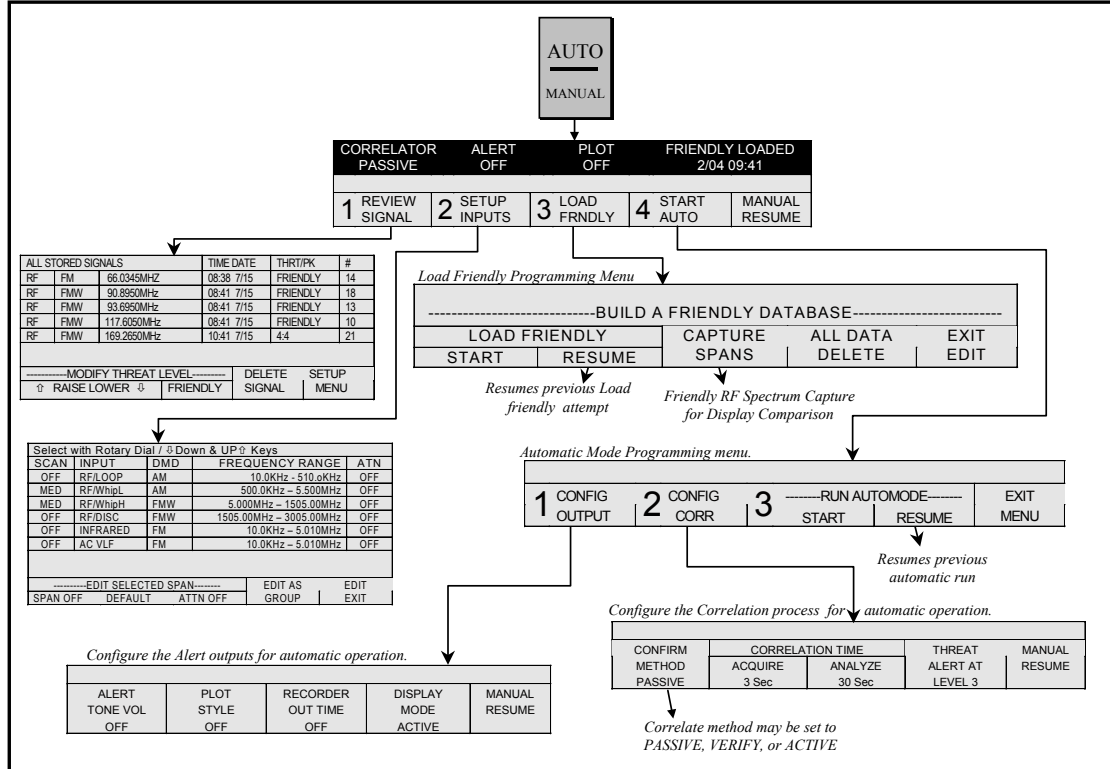


FIGURE 21: AUTOMATIC MODE PROGRAMMING MAP

- To program the automatic operation of the OSCOR press the **AUTO/MANUAL** button. The following menu will appear:

CORRELATOR PASSIVE		ALERT OFF		PLOT OFF		FRIENDLY LOADED 2/04 09:41	
1	REVIEW SIGNAL	2	SETUP INPUTS	3	LOAD FRNDLY	4	START AUTO
							MANUAL RESUME

FIGURE 22: AUTOMATIC MODE MAIN MENU

The shaded region provides detailed information about the current correlator mode (in this case "PASSIVE"), the output conditions (tone alert and plotting mode) and whether or not a friendly database has been loaded (in the example above, the friendly database was loaded on Feb 4 at 09:41 am). The bottom portion of the menu corresponds to the OSCOR function buttons. The numbers represent the normal four-step process to do a sweep.

- To review the current signal database, Press the **F1** button labeled **REVIEW SIGNALS**.
- To review the inputs to search, Press the **F2** button labeled **SETUP INPUTS**.
- To load a friendly database, Press the **F3** button labeled **LOAD FRNDLY**.
- To start the automatic mode and search for bugging devices, Press the **F4** button labeled **START AUTO**.

- To return to the Automatic mode programming screen after reviewing either the signal list or the input list, press the **AUTO MANUAL** button.
- To stop the automatic operation, press the **AUTO/MANUAL** button.

Signal Review

Pressing the **F1** button (labeled “REVIEW SIGNALS”) is the same as pressing the **RECALL** button when in the Analyze mode. This allows the user to quickly review the signal database before starting any automatic mode programming. To return to the Automatic Mode programming screen, press the **AUTO/MANUAL** button.

Setup Inputs

Pressing the **F2** button is the same as pressing the **RECALL** button when in the Sweep mode. This allows the user to edit and quickly review the available inputs for automatic searching. To return to the Automatic mode programming screen, press the **AUTO/MANUAL** button.

Editing or Creating a Frequency Span for Automatic Operation

Unless otherwise specified, the frequency range scanned for each input is the default span noted in Figure 16. However, alternative frequency spans can be scanned in the same input band. This allows the user to program multiple frequency windows within the same input device.

The OSCOR has 6 pre-programmed input frequency spans that include the available range of the electromagnetic spectrum. The bandwidths used for automatic operation are covered in Figure 9. Up to 100 additional frequency spans may be in memory. Additional span or input parameters are described in detail on page 37 Sweep Span Storage. These stored additional frequency spans can be recalled and/or modified in the Manual Mode using the normal STORE/RECALL functions.

The following chart shows the pre-programmed (default) inputs and their associated frequency ranges.

Labeled Input	Default Frequency Range
RF LOOP	10 kHz - 510 kHz
WHIP LoF	500 kHz - 5.5 MHz
WHIP HiF	5 MHz - 1505 MHz
DISCONE	1505 MHz - 3005 MHz
INFRARED**	10 kHz - 5 MHz
AC VLF*	10 kHz - 5 MHz

FIGURE 23: PRE-PROGRAMMED STANDARD INPUTS

*The AC VLF Mode checks the power cord for carrier current signal. The AC power cord can be plugged into outlets to check the AC power, or the power cord may be used with the AC VLF adapter to check any unknown pair of wires (see page 14).

****** The infrared detector receives wavelengths between 850-1050 nm. This covers the majority of available infrared transmitters.

The Automatic Mode operation contains an automatic squelch level setting. The far-left column of the sweep span list screen displays the automatic squelch level status for Automatic Mode operation. The available selections are “Span Off,” “FastSkim”, “MedHunt”, “Deep Dig” and “ManSqlch.” These selections control whether the sweep span will be swept and how deep the search will be applied.

Span Off - the frequency span will not be swept in the Automatic Mode.

FastSkim - the frequency span will be swept at a very fast pace because the squelch threshold is set relatively high and only the stronger signals will be detected.

MedHunt - the frequency span will be swept at a moderate pace and medium strength signals will be detected.

Deep Dig - the frequency span will be swept at slow pace because the squelch level is set very low and even very weak signals are analyzed. This mode may also detect many “false” signals that are nothing more than deceptive noise signals.

ManSqlch - sets the squelch level manually.

It is important to note that most bugging signals will be somewhat powerful if you are in the room in which the bug is located. Therefore, most bugs can be found using FastSkim or MedHunt. Therefore, if you use MedHunt, the unit first makes a pass using FastSkim in hopes that bug is reasonably strong signal and you will find the bug very fast. For the same reason, if you use Deep Dig, the unit automatically goes through FastSkim and MedHunt first to quickly find the bugs before the unit gets into the long and slow process of Deep Dig.

To select the sweep inputs:

1. From the **CONFIGURE AUTO** Menu, press the **F2** button (labeled **SETUP INPUTS**).
This sweep span display screen is identical to the sweep span screen described on page 37 Sweep Span Storage.
2. Use the **UP/DOWN** buttons to select the desired sweep span.
3. Press the **F1** button to select the sweep span status.
4. Press the **F3** button to select whether or not to sweep the span with or without the attenuator.

Note:: it is recommended that the Attenuator is not used because it automatically decreases the detection sensitivity of the received signals.

To manually set the squelch level for automatic operation

1. In the Sweep Span List Display, select the desired input using the **UP/DOWN** buttons or the Rotary Dial.
2. Press **F1** until the Input label indicates ManSqlch or Man.
3. Press the **RECALL** button to display the frequency spectrum.
4. Use the squelch knob to set the dotted line at the desired squelch level.
5. Press **F2** (labeled Set Sqlc) to set the squelch level. A dashed line should appear at the desired squelch level.
6. Press the **F3** button to return to the Input list mode.

To delete or reset the sweep span Inputs:

1. In the sweep span list display, Press **F4** labeled “**RESET/DELETE**”
2. In the Reset/Delete Menu:

F1 - Resets a single span to the factory default.

F2 - Resets all spans to factory defaults.

F3 - Erases all manually stored spans, but retains default inputs.

F4 - Sets all spans to "Span Off"

Note: Sweep time is largely dependent on the number of signals in the ambient environment and the settings on the Correlate Mode (see page 63 Correlate: Acoustic Correlator System (Automatic)).

The Deep Dig Mode is the most reliable method of detecting low power signals, but it has the slowest sweep time and may detect false signals (bumps in the noise). If the OSCOR is to be used for a very thorough sweep, the Deep Dig Mode should be used. However, most bugs that have sufficient power to reach a receiving station within 50 yards (approximately 50m) are of sufficient power to be easily detected by the MedHunt Mode.

Load Friendly

Pressing the **F3** button in the Automatic mode main menu screen brings up a menu to build a Friendly signal database. In this mode, the OSCOR will store every signal that is detected as a Friendly signal. This mode is to be used away from the target sweep environment so that the OSCOR can be pre-loaded with the majority of the ambient environment signals.

Note: When the automatic mode is run in the normal mode (searching for bugs) signals that are labeled as Friendly are ignored unless the signal strength level has deviated by more than 5%.

CORRELATOR		ALERT	PLOT	FRIENDLY LOADED	
PASSIVE		OFF	OFF	2/04 09:41	
-----BUILD A FRIENDLY DATABASE-----					
LOAD FRIENDLY		CAPTURE SPANS	ALL DATA DELETE	EXIT	
START	RESUME			EDIT	

FIGURE 24: AUTOMATIC MODE LOAD FRIENDLY MENU

To Start the Load Friendly process:

- Press the **F1** button to start the automatic loading of Friendly signals. This process will start at the beginning frequency of the first listed input.
- Press the **F2** button to start the automatic loading of Friendly signals by resuming at the last frequency that was analyzed. This option is only available if the Friendly signals have been previously started.
- Press the **F3** button (labeled CAPTURE SPANS) to capture the Friendly frequency spectrum data only. This action will not store any signals in the database, however, it will store a friendly frequency spectrum in memory. This function is very useful when comparing the frequency spectrum of adjacent rooms or when comparing the frequency spectrum of the outside of a building with the inside of a building (see section 26 Friendly Spectrum Display)

- Press the **F4** button to delete all the Friendly signal database and Friendly frequency spectrum data.

WARNING: The load friendly process should never be executed in the target sweep environment to prevent accidentally loading a bugging signal as a friendly signal.

Start Auto Mode

Pressing the **F4** button in the Automatic mode main menu screen brings up a menu to program the automatic mode outputs and correlation process as well as to start the automatic scanning.

CORRELATOR PASSIVE		ALERT OFF		PLOT OFF		FRIENDLY LOADED 2/04 09:41	
1 CONFIG OUTPUT		2 CONFIG CORR		3 -----RUN AUTOMODE----- STARTRESUME		EXIT MENU	

FIGURE 25: AUTOMATIC MODE START MENU

In this mode, the OSCOR will evaluate every detected “non-friendly” signal for correlation. This mode is used in the target sweep environment specifically to look for bugging devices.

Note: Signals that are labeled as “FRIENDLY” are ignored unless the signal strength level has deviated by more than 5%.

- Press the **F1** button to enter the output configuration menu.
- Press the **F2** button to enter the Correlator configuration menu.
- Press the **F3** button to start the automatic mode from the beginning of the input list. This process will start at the beginning frequency of the first listed input.
- Press the **F4** button to start the automatic mode by resuming at the last frequency that was analyzed. This option is only available if the automatic process has been previously interrupted.

The sections below provide detailed explanation about the Outputs Configuration menu and the Correlator Configuration menu.

Outputs

Provides for setup of output devices:

- Audible Alert - provides an audible ring when a threat is detected.
- Autoplot - automatically plots a running threat listing or sweep plot.
- Autotape - records the threat audio signal for a specified time interval.
- Screen (ACTIVE or BLANKED) - screen activity can be hidden during Automatic Mode operation to make the unit less conspicuous.

To enter the Outputs Set-Up Menu: From the CONFIGURE AUTO Menu:

- Press the **F1** button labeled **OUTPUTS**.

CORRELATOR PASSIVE	ALERT OFF	PLOT OFF	FRIENDLY LOADED 2/04 09:41	
ALERT TONE VOL OFF	PLOT STYLE OFF	RECORDER OUT TIME OFF	DISPLAY MODE ACTIVE	MANUAL RESUME

FIGURE 26: AUTOMATIC MODE OUTPUTS MENU

Automatic Mode Audible Alert

Using this option, the OSCOR will provide an audible alert when a threat is detected in the Automatic Mode. A signal is classified as a threat when its level exceeds the threat level threshold (see page 63 Correlate: Acoustic Correlator System (Automatic).)

To turn on the Automatic Mode audible alert:

1. Enter the Automatic Mode Output Configuration Menu as described on page 60.
2. Press the **F1** button (labeled **ALERT/TONE VOL**) under the Automatic Mode Outputs Configuration Menu to toggle the audible alert between **OFF**, **LOW**, **MED**, & **LOUD**. The red LED over the **TONE** button being illuminated indicates the activation of the audible alert.

The volume of the tone alert can also be set without entering the Automatic Mode Configuration Menu by using the procedure described on page 42 (Tone Ringer System). In the Automatic Mode, the alert tone will ring for approximately 3 seconds for each single threat that exceeds the threat level threshold.

Auto Plotting of Threat Signals

Using this option, the OSCOR provides printed information about each threat signal exceeding the specified threat level. There are four options for plot styles to choose from when the feature is activated. You may choose from these choices: 1 line, 2 line, block, and chart.

The signal listing methods of 1 line, 2 line, and block provide a short description of threat signals that are encountered. All signals are plotted as they are detected. Information about each threat includes threat level, time and date detected, frequency and bandwidth used, and input and demodulator selected. This plotting method provides a quick hardcopy of the necessary signal information and requires very little paper or plotting time. Experiment with these methods to view the various results. However, the 2-line method provides the most information on the least amount of paper.

The plot style chart provides a graph of each threat signal encountered. This mode requires additional paper and increases plotting time, but it provides more information about the signal.

To toggle between the plot style, 1 line, 2 line, block, and chart modes:

1. Enter the Automatic Mode Output Configuration Menu as described on page 60.
2. Press the **F2** button (labeled PLOT STYLE) under the Outputs Menu to toggle the plotting options through the options of 1 Line, 2 Line, BLOCK, CHART, and OFF.

Auto Tape Recording of Threat Signals

Using this option, the OSCOR will provide a timed tape recording of each received signal exceeding the specified threat level. Refer to page 54 Tape Recorder Controls for more information about the tape recorder.

To activate or deactivate the Auto Tape Recording Mode:

1. Enter the Automatic Mode Output Configuration Menu as described on page 60.
2. Press the **F3** button (labeled RECORDER/TIME OUT) under the Outputs Menu to activate (or deactivate) the Automatic Recording Mode.
3. Enter the number of minutes that you wish to record of each threat signal. Entering a number of "0" will default the OSCOR to 6 minutes.

Note: The tape recorder must be properly plugged into the OSCOR unit with the 2.5mm REMOTE jack connected to the tape recorder remote control jack and the 3.5mm OUT jack plugged into the tape recorder microphone input.

Display Mode

During automatic operation, other personnel may encounter the OSCOR. It is recommended that the OSCOR screen be de-activated so that a casual observer will not know what the OSCOR is doing.

To de-activate the screen during automatic operation:

1. Enter the Automatic Mode Output Configuration Menu as described on page 60.
2. Press the **F4** button (labeled **DISPLAY MODE**) to toggle the Screen Display Mode.

With the screen in the Blanked Mode and the Automatic Mode activated, the screen will remain blank until the **AUTO/MANUAL** button is pressed to stop the Automatic Mode.

Correlate: Acoustic Correlator System (Automatic)

Options at this level allow the user to change the threat level threshold, correlation method, acquire time, and analyze time. For an overview of the acoustic correlator system refer to page 43 Acoustic Correlator System (Manual). The correlator operation is configured for the Automatic Mode using the Automatic Mode Set-Up Menu.

Note: With the OSCOR in the Automatic Mode, each signal detected is stored in the OSCOR memory.

To enter the Correlator Set-Up Menu:

1. From the **CONFIGURE AUTO** Menu, press the **F4** button (labeled **4 START AUTO**).
2. Press the **F2** button (labeled **CONFIG CORR**).

CORRELATOR PASSIVE	ALERT OFF	PLOT OFF	FRIENDLY LOADED 2/04 09:41	
CONFIRM METHOD PASSIVE	CORRELATION TIME		THREAT ALERT AT LEVEL 3	MANUAL RESUME
	ACQUIRE 3 Sec	ANALYZE 30 Sec		

FIGURE 27: AUTOMATIC MODE CORRELATOR SETUP MENU

In this menu, the following buttons perform the indicated functions

- F1** - toggles the Correlate method between LD FRND, PASSIVE, VERIFY, and ACTIVE. These methods are described in detail in the following sub-sections.
- F2** - toggles the Correlate ACQUIRE time window between 3, 5, and 10 seconds.
- F3** - toggles the ANALYZE time window between 10, 30, and 60 seconds.
- F4** - toggles through the available threat alert thresholds (2,3,4,or 5).

Note: The ACQUIRE function is only applicable to the PASSIVE and VERIFY methods of correlation.

Note: The ANALYZE function time selection is only applicable to the PASSIVE and VERIFY methods of correlation. When a threat signal is detected in the Automatic Mode of operation and the threat level exceeds the specified level, the alarm system is activated. This

alarm system activates the output options specified in Outputs on page 60. The sensitivity of the correlator and alert system are adjusted by setting the threat level threshold. It is recommended that the threat level be set to 3 or 4.

To clear an alert message and the flashing LED alert indicator:

- Press the **TONE** button. The alarm LED indicator should change from a flashing mode to a constant illumination (when the tone is activated) or no illumination (when the tone is not activated).

Passive Correlation

In the Passive Mode of correlation, the OSCOR is completely covert and relies on passive sounds in the environment for correlation. To increase the speed and accuracy of the correlation when operating in the Passive Mode, the OSCOR will systematically tune to each signal and perform two types of correlation.

- A short term Acquire screen is the primary method of identifying a signal containing correlation by detecting peaks within the screen's scan time. This Acquire function is usually performed for a relatively short period of time and relies on the peak of the correlation window. If the threat level does not exceed the specified threshold during the Acquire time, the system classifies it as a threat level 1 and continues scanning.
- If a correlation peak exceeding the threat level threshold is detected in the primary Acquire screen, the system will immediately enter a 10, 30, or 60 second analyze screen to perform statistical analysis of the function vs. time. In this Correlation Analyze Mode, the threat level indicates the average of the threat correlation over the specified time window. This average threat level is stored in memory along with other signal information.

Verify Correlation

In the Verify Mode, the correlation process functions exactly like the Passive Mode, with an additional ringer tone to ensure that the threat signal is real. In the Verify Mode, the OSCOR provides an audible ringer tone at the completion of the passive correlation for an additional correlation check. Since the ringer tone is used internally as the reference audio, the correlator sensitivity is further increased, improving threat detection and providing confirmation that an eavesdropping device exists.

Note: Since this mode provides an audible tone, it may not be considered covert by some standards. However, the tone is designed to sound like a telephone ringer, and in most situations, the ringer tone will be broadcast only a few times during a sweep.

Active Correlation

In the Active Correlation Mode, there is no Acquire and Analyze using passive operation. Instead, the OSCOR broadcasts an audible tone for 3 seconds during the correlation process of each signal. This mode of operation is definitely not covert, but it is very reliable and fast, since it uses a known signal for correlation and needs only 3 seconds to study each signal.

Detecting Video Threats

When the OSCOR was developed, the threat of covert video surveillance was small due to limited availability and utility of such devices. However, in the past few years, the “chip camera” has become a readily available, commercial product. These products may have a lens 1/32-in. in diameter, and may be hidden in walls, lamps, pictures, etc.

The usefulness of covert video surveillance depends primarily on the type of information being acquired. For example, video cameras are used to gather information that requires physical observation: evidence of burglary, drug use, sexual harassment or misconduct. Nonetheless, video cameras may be used for industrial espionage--to observe presentations of marketing plans, new product designs, or personnel conduct.

The OSCOR Deluxe Package (ODP-5000) includes a video demodulation capability with built-in monitors. This option allows the user to view the video image associated with any transmitted video signal. By providing the camera's view, the video threat is identified. It is important to note that the demodulation formats are designed for the standard modulation formats (AM for NTSC). There are some video transmissions that use the scan rates and synch pulse but a different modulation method (FM versus AM). If the modulation method is non-standard, the OSCOR will usually be able to display the image, but the quality will suffer significantly depending on the transmission.

Video Technical Background

The OSCOR unit consists of a high-sensitivity, digitally synthesized receiver that will receive video signals transmitted on a RF frequency. This can be demonstrated by tuning the OSCOR to local TV stations; in the United States the video signal is 4.5 MHz (6 MHz for some formats) below the audio signal. High-quality video transmitters typically contain an audio signal in the same format as a TV signal, but the signal will be located outside normal TV band frequencies. Since the OSCOR is designed to detect audio bugs in the Automatic Mode, the OSCOR will detect a video/audio signal by locking in on the audio portion. However, if a video transmitter exists that does not contain an audio transmitter, the OSCOR will analyze the video signal for audio information. Since there is no audio information to be correlated with the ambient environment, the OSCOR will not automatically classify a video transmitter as a threat. The operator can manually check the detected signal and view the transmitted video signals.

Note: Covert detection of video transmitters is difficult because the spy can view the sweep team in action. To conduct covert video transmitter detection, the OSCOR should be placed in a room adjacent to the suspect environment. This will allow the high-sensitivity receiver to acquire the transmitter without being caught by it. If you recognize the picture, or even see yourself, there is a video transmitter present.

Identifying a Video Signal

Video signals have a distinctive vibrating sound when received by the OSCOR audio receiver, and can be identified even without the OSCOR video option. This vibrating sound is due to the video synch pulse within the video signal. A video signal with moving images will have changing audio pitch due to moving images or a change of picture images. A still image (such as an empty room) will have a constant vibrating sound.

To locate a video signal:

1. *Select the signal of interest using the normal Sweep Mode.*
 2. *Press the **SWEEP/ANALYZE** button to toggle to the Analyze Mode.*
- Try the available demodulators and listen for the vibrating synch pulse.*

Note: One method of identifying a video signal is to test the room by listening to the audio sound of the video signal while turning the lights on and off. If the audio pitch of the vibrating audio changes significantly when the lights are turned on or off, this indicates that the video signal is responding to the changing light level of the room and the video signal is associated with the room. To locate the video signal, turn the lights off and use a focused high intensity flashlight to scan the room. When the flashlight is pointed directly at the video camera, the audio pitch of the video signal will significantly change.

Using the OSCOR Video Demodulation

To use the Video imaging option:

1. *Tune onto the signal of interest in the Analyze Mode.*
2. *Press the **IMAGE** button.*
3. *Press the **F2** button labeled VIDEO.*
4. *To select a video format (NTSC, PAL, or SECAM), press the **F1** button.*
5. *To select a positive or negative synch pulse, press the **F2** button.*
6. *To turn off the monitor press the **F4** button labeled "OFF".*

Note: The video monitor should be turned off when not in use to conserve battery power. Always turn off the video monitors from the OSCOR keypad using the method described above, not using the monitor switch on the monitor itself. Summary of Video Detection

A video transmitter is suspected under the following conditions:

1. There is not an audio signal 4.5 MHz (or 6 MHz) above the video signal. (This applies to the video threat with no audio or a threat that does not conform to the normal TV audio/video format.)
2. The received frequency does not correspond to local TV stations or is not in the normal video frequency band.
3. The Video Optional Upgrade provides the video image, and you recognize the environment.

Once a video transmitter is detected, the OSCOR locator probe can be used to locate the video transmitter using the same method as an audio transmitter, or by simply studying the picture.

Using a Separate Video Monitor

A separate video monitor may be connected to the OSCOR for the purpose of providing an improved video image display or for video recording. This is accomplished using the video patch cord (OVP-5000). The location of the OVP is described in section *Storage Compartment and Accessories* Figure 6, Page 13. This patch cord allows received video signals to be fed directly into an alternative video monitor or a video recorder. Video output is provided in a standard RCA plug.

Analyzing Video Signal Formats and Modulation

While the OSCOR video system is designed to specifically demodulate standard video formats such as NTSC, PAL, and SECAM; there are common modified video formats that may also be demodulated using the OSCOR. For example, it is very common for video transmitters to adhere to the NTSC standard with the exception that the video signal is FM modulated instead of AM modulated. In this case, tune the OSCOR receiver away from the main peak of the video signal (use the rotary dial to move the cursor to the left or right of the main peak of the signal). In this manner, you can typically receive enough AM modulation content from the video signal to display the video image. However, it should be noted that the picture quality will suffer, but the main goal is to verify the existence of the threat and not to provide beautiful video quality. Also, it is very common for the video synchronization pulse to be inverted in order to confuse the normal video demodulation process. However, the user can select the desired video synchronization pulse polarity using the main OSCOR video control menu. Further, it is very useful to press the **SPECT** button when analyzing a video signal and observing the received signal while trying the AM and FM demodulation schemes (F3). It should be noted that the **SPECT** button provides access to the OSCOR audio oscilloscope, and while viewing a video signal, the oscilloscope function will provide a visual representation of the synchronization pulses and video scan data. In this manner, you can visually identify the polarity of the synch pulse as either positive or negative.

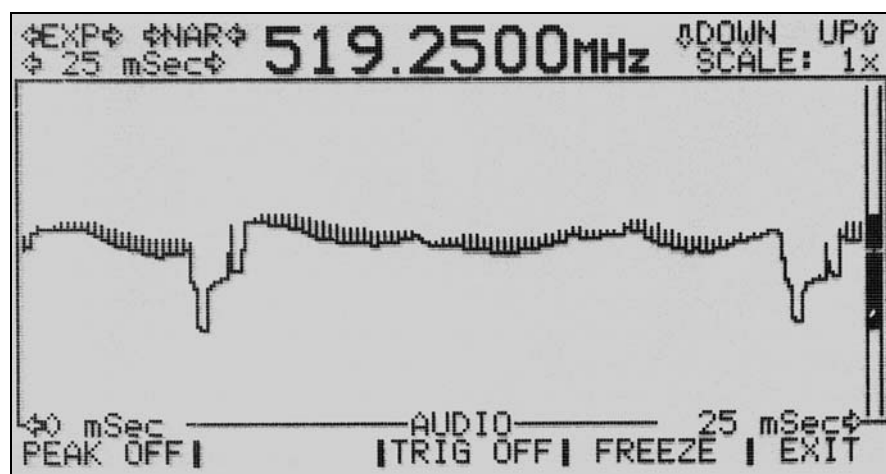


FIGURE 28: VIDEO SIGNAL WITH NEGATIVE SYNC PULSE.

OSCOR 2.4GHz Video Search Option

Since there are so many 2.4GHz video transmitters commercially available, the OSCOR has a built-in function that accesses the 2.4GHz video band with a minimum number of

Keystrokes. This function automatically tunes the OSCOR to 2,450MHz. Once this function is executed, you can quickly look for signals in this region of the frequency spectrum by utilizing the **EXPAND** and **NARROW** buttons.

To rapidly look for signals in the 2.4GHz frequency band:

1. Press the **IMAGE** button.
2. Press the **F2** button labeled **VIDEO**.
3. Press the **F3** button labeled **2.4GHz**.
4. Press the **SWEEP/ANALYZE** button to go the **SWEEP** mode.
5. Use the rotary dial and the **EXPAND/NARROW** buttons to search the spectrum.

Technical Note: Some video cameras emit a low-power, magnetic field at 15 kHz. In this case, the OSCOR loop antenna may be removed from the antenna panel and used as a locator probe. The success of this approach depends on the design of the video camera. For cameras that are well shielded, it is improbable that this method will detect the transmitter.

SECTION 3: PREPARING FOR A SWEEP

Each individual must choose the thoroughness desired in a sweep. We recommend that highly trained professional sweep teams perform two to four thorough sweeps a year for most organizations. A professional sweep should include taking apart all phones and electrical outlets for inspection, testing carrier current and all phone lines, inspecting all crawl spaces and ceiling spaces for suspicious wiring and checking all speaker (intercom) system wiring.

When contracting a professional sweep team, as few people as possible should be aware of the sweep schedule. This will decrease the likelihood of a spy learning of the sweep. However, it should be well publicized that random sweeps are performed. An internal eavesdropping threat is greatly reduced when personnel know that regular sweeps are conducted.

Furthermore, organizations should perform mini-sweeps at least once a week and before and after important meetings. These should include physical inspection of all office spaces and easily accessible wiring, and use of the OSCOR in the Automatic Mode for a RF sweep of the environment. These can be performed by in-house security personnel and are meant to serve as both effective deterrents and effective sweeps.

When the OSCOR is not being used in a dedicated sweep, it can be placed in an inconspicuous location and allowed to run continuously in the Automatic Mode. Each week, the OSCOR memory should be reviewed and cleared after each stored signal is manually reviewed.

Planning for a Sweep

It is important to remember that if your environment is being monitored, your eavesdropper may be aware of your suspicions. Sweep teams rarely find bugging devices, but they often find evidence that bugging devices have been present. If an eavesdropper is aware of an upcoming sweep, the sweep team will probably not find any bugs, but the eavesdropping may continue. Sweeps can fail for many different reasons:

- The eavesdropper finds out about the scheduled sweep.
- The sweep is discussed over a bugged phone.
- The sweep is posted on a company calendar.
- The eavesdropper observes the sweep team arrival.
- The sweep is performed after hours, but the eavesdropping equipment is activated only during business hours.
- The sweep equipment is the wrong equipment or is not used properly. There are many bug detectors on the market that are merely toys with lights and knobs, and not all expensive equipment will necessarily meet your specific needs.
- The sweep team is careless or poorly trained.
- A sweep is conducted prior to a meeting, but someone wears a body bug or tape recorder into the meeting.

Scheduling

Do not discuss the sweep on any phone or within the building of the target environment. As few people as necessary should be notified of an upcoming sweep. When scheduling a professional sweep, the contractor should be contacted using phones outside the target area. It is very important to understand the qualifications, capabilities, and limitations of the contracted personnel.

Time of Sweep

If possible, the sweep should be conducted during business hours in conference rooms and corporate offices when bugs are more likely to be active. For offices and rooms that are accessible to all employees, it is recommended that the sweep be conducted in the evenings or on weekends. A sweep should be performed as soon as possible after the sweep team has been contacted, in order to minimize the possibility of personnel finding out about the planned sweep.

Environment Setup

Since some devices may be controlled remotely, conducting a fictitious yet plausible meeting can prompt the eavesdropper to activate all devices. If the meeting is advertised as very important with outside executives attending, the eavesdropper may even heighten the level of surveillance. All office equipment (coffeepots, computers, lights, copiers, fax, etc.) should be turned on to activate any potential bugs. If the sweep will occur during normal working hours, the sweep personnel should be dressed as typical employees or business colleagues. The sweep equipment is more effective if it is easily transported and disguised.

Understanding Threat Type

Beforehand, try to determine if the threat is internal or external. An internal threat is more common but tend to be less sophisticated. An External threat typically relies on inside help in planting devices and stealing company information. Also, try to discover the purpose of the threat and the cost of confidential information. Understanding the type of threat can provide additional insight into the type and sophistication of the surveillance devices.

SECTION 4: CONDUCTING A SWEEP

This section provides a general guide for conducting sweeps however, the methods outlined are not the only ways the OSCOR may be used. This section is not intended to be comprehensive instead it presents possible methods and procedures that may enhance the effectiveness and efficiency of a sweep.

Suggested procedure for a dedicated sweep:

1. *At a significant distance from the target building, run the OSCOR in Automatic Mode with the correlation method set to LD FRND (see page 72 Pre-Loading Signals into Memory).*

Note: If you have generated and stored friendly signals using the OSCOR PC Interface software, instead of this step, simply download the stored signal from your PC.

2. *Before entering the target room, manually check the most common video frequencies (900-930 MHz, 2.4GHz, 5.7GHz).*
3. *Activate a known sound source (see page 73 Activating a Known Sound Source).*
4. *Manually check RF loop input.*
5. *Manually check infrared input (see page 74 Special Considerations for Infrared and Laser Threats).*
6. *Manually check discone input for signals between 1.5GHz and 3.0GHz.*
7. *Manually check for signals above 3GHz using the MDC-2100 (if you have this option).*
8. *Manually check electrical outlets using power cord (AC VLF) for carrier current (see page 75 Checking For Carrier Current Threats).*
9. *Compare the stored "Friendly" frequency spectrum with the realtime frequency spectrum. In this manner, it may be possible to quickly identify any unique RF signals.*
10. *Set up the OSCOR in the Automatic Mode to search the WhipLo and WhipHi Frequency inputs. Check desired settings and activate Auto Mode.*
11. *Perform a physical search while the OSCOR runs in Automatic Mode.*
12. *Review all signals detected in automatic sweep. Designate all known friendly signals as FRIENDLY. Any unidentifiable signals should be checked for sub-carrier and video content.*
13. *Review all Friendly signals for the presence of Snuggly bugs.*

Note: If you have the OSCOR PC Interface software, the signal database should be permanently stored on computer disk for future comparison. Then, every signal should be labeled as either a DECLARE (meaning declared threat) or a FRIENDLY.

14. *Use the triangulate and locate option or the locator probe to locate confirmed threats. (Do not remove threats! The proper authorities, those who will determine the proper course of action, should conduct this procedure.*
15. *Allow the OSCOR to continue monitoring your environment after all signal verification is completed.*

Pre-Loading Signals into Memory

The Load Friendly automatic operation will store every signal encountered as a friendly signal (see page 59). This should be done at least 1 mile (1.5 km) from the building to prevent accidentally storing a threat as a friendly signal.

If the OSCOR is placed far from the target environment, every signal encountered in the Automatic Mode must be normal to the ambient environment and is stored as a friendly signal. Once inside the target environment, the OSCOR is run in Automatic Mode with the Correlate method set to either PASSIVE, VERIFY, or ACTIVE. The friendly signals will be ignored, and the OSCOR will scan quickly, detecting any new signals, which should be cause for suspicion. These new signals can be identified by using the SORT SELECT functions built into the signal listing screen (see page 52 Signal Listing).

If you have the OSCOR Personal Computer Interface accessory, load the friendly signals once, then store them in your personal computer. For future sweeps, download the stored signals from your PC to the OSCOR. This is faster and easier than loading signals at safe distances before every sweep.

To Quickly pre-load friendly signals:

1. *Place the OSCOR at least 1 mile (1.5km) from the target environment.*
2. *Bring up the Automatic Mode Configuration Menu by pressing **AUTO/MANUAL**.*
3. *Review the signal list by pressing **F1**. Ensure that the database is empty and return to the Automatic Mode Configuration Menu by pressing the **AUTO/MANUAL** button.*
4. *In the Automatic Mode Configuration Menu, press **F2** and select the inputs and method of search (Fast, Med., Deep, and Man.) (See Page 57 Editing or Creating a Frequency Span for Automatic Operation). Use the **AUTO/MANUAL** button to return.*
5. *In the Automatic Mode Configuration Menu, press **F3** to access the Load Friendly menu.*
6. *Press the **F1** button (labeled START) to start the load friendly process. The screen will indicate that the process has started.*

WARNING: If the OSCOR is placed too close to the target environment when pre-loading the friendly signals, it is possible to detect and store an eavesdropping transmitter as a friendly signal. It is, therefore, highly recommended that each signal be manually inspected for verification, and that the OSCOR be at least 1mile (1.5 km) from the building when pre-loading the memory. This procedure should be exercised with caution or not used at all.

Technical Note: There are many intermittent signals that are only detected occasionally such as a digital pager or a cellular phone system. These signals should not be cause for immediate alarm, but they should be investigated.

Generating a Signal Chart of the Area

Before entering the target building, print a plot of the ambient RF environment outside the building. During the sweep, these plots can be compared to plots of signals detected inside the building. A known signal such as a radio station or TV station can be labeled directly on the chart for reference. Once inside the building, similar plots can be made in each area of interest. These plots can be overlaid and held up to a light source for a quick visual inspection of the signals within the building.

Note: Most bugging devices are RF devices ranging from 5 MHz to 3 GHz.

Comparing the Strip Chart plots provides several benefits:

1. A quick overview of the environment.
2. Immediate indications of anything out of the ordinary.
3. A plot that can be kept in a logbook and used for later comparisons.

However, there are many RF signals that transmit intermittently such as pagers, cellular phones, police band radios, and aircraft radios. This method is not reliable for detecting these kinds of signals.

To generate a wide sweep frequency plot of the environment:

1. *Set up the sweep for the frequencies of interest (see page 57 Editing or Creating a Frequency Span for Automatic Operation).*
2. *Press the **PLOT** button to bring up the Plot Menu (see page 51 Strip Chart Plotter).*
3. *Select the width of the strip chart (for maximum plot length, press the **F4** button until maximum extent is reached).*
4. *Press the **F1** button to plot.*

Secure the Area

Once the sweep is in progress, do not let employees wander into the sweep area. For sweeps performed during working hours, an employee, perhaps a receptionist, should be stationed outside of the target area to prevent intrusions. The employee does not have to be aware of the sweep, but should be informed that an important meeting is in progress and that no one is to be disturbed for any reason. Once inside the target area, close all drapes and doors inside the area.

Activating a Known Sound Source

Activate a typical sound source of a work environment such as “elevator” music or easy listening. Music should be at a volume slightly louder than typical background music. Most buildings have an intercom system or speaker system that may be used to flood the environment with a sound.

Note: If a radio or TV signal has not been pre-loaded as a friendly signal, the OSCOR will provide a false threat warning when the signal is detected, because the audio signal will correlate with the sound source.

The sound source provides many benefits:

- It masks the noises associated with testing and inspection sweep activities.
- It provides a good reference sound source for the OSCOR to perform threat correlation.
- It may activate sound-controlled devices.
- If a built-in speaker system is used to flood an entire area (several offices, a floor of a building or an entire building), the OSCOR will correlate on threats that may be located anywhere in the area as long as the bug's transmitted signal is of sufficient strength. In other words, with a known sound source flooding the building, the OSCOR can sweep many rooms at once.
- If the known sound source is fed directly into the OSCOR using the external reference input jack, then the correlation sensitivity is increased, which further increases the OSCOR detection range.

Special Considerations for Infrared and Laser Threats

Since infrared signals can not be transmitted through walls, infrared bugging devices are typically placed near windows or outside the building with a wired microphone in the building. For this reason, the OSCOR should be placed near a window when sweeping for infrared threats. The drapes or mini-blinds should be closed to make sure no one observes your activities. If the windows are large, it may be necessary to move the OSCOR to several locations when sweeping for infrared signals. If there is an infrared transmitter in the room of interest, some of the infrared signal will be reflected off the window, which provides additional opportunity for detection. The OSCOR should also be taken outside (during the night to prevent the sun from interfering with the OSCOR infrared detector) and 20 to 30 ft away from all windows. (All window coverings within the building should be opened for this type of sweep.)

Note: When sweeping for infrared signals outside a building the Correlate Mode can not be used accurately unless the sound source from within the building can be fed into the OSCOR audio input. This can be accomplished by using a portable radio or walkman, and a common radio station as the sound source. As long as the same music within the building is patched directly into the OSCOR, the Correlate Mode will function normally.

Note: When used outside the building, the OSCOR is not in a covert mode.

Note: It is not practical to search for infrared signals outside high-rise buildings even though they may be received from adjacent high-rise buildings. However, infrared is easily diffracted by windows and may still be detected within the target environment.

Manually Sweeping Selected Inputs

When performing a sweep, several inputs are easily searched using manual operation. There are very few friendly signals that exist in some inputs, such as infrared, RF Loop, and AC VLF. Rather than allowing the OSCOR to search these inputs, it is faster to select these inputs in the Manual Sweep Mode, and manually tune to any signals for verification.

Note: The above recommendation only applies when performing a dedicated sweep. If the OSCOR is being used in a monitoring function and checked only once a day, then all inputs should be activated for sweeping.

Note: Be sure that no computer monitors are turned on when testing the RF Loop antenna. The loop antenna will pick up and display several harmonic signals from a video monitor.

Checking For Carrier Current Threats

Check every outlet for carrier currents using the AC VLF probe (the OSCOR power cord). An extension cord is a useful tool for this procedure. Even within the same room, electrical outlets may be on different circuits and may not transmit carrier current if the building is large and the electrical circuits are transformer coupled. Each electrical outlet should be taken apart for inspection. The OSCOR AC power cord can also be used to test for carrier current signals on any pair of conductors less than 250 volts using the VLF adapter probe in the OSCOR case. (This is a 6-in. cable assembly with alligator clips on one end and a female power socket on the other.) Before testing an unidentified pair of power conductors, a voltmeter should be used to measure the voltage across the conductors. If this voltage exceeds 250 volts, do not test with the OSCOR. If the voltage exceeds 120V, switch the OSCOR power switch to 230V to provide extra protection against over-voltage.

To test miscellaneous conductors for Carrier Current:

1. *Be sure the conductor voltage does not exceed 250V using a voltmeter.*
2. *Place the OSCOR in the Sweep Mode with the AC VLF input displayed.*
3. *Press **SHIFT** then **EXPAND** to ensure that the maximum frequency window is displayed.*
4. *Visually inspect the display for signals. Tune to any signals of interest and evaluate the signals for threat potential.*

WARNING: Exposing the AC VLF probe to an excessive voltage (more than 450 volts DC) may cause damage to the power circuit.

Setting Up For Automatic Operation

At the beginning of a sweep, the OSCOR should be placed in Automatic Mode and allowed to operate for at least two passes. This section provides some recommended approaches for

operating the OSCOR in the Automatic Mode when performing a sweep. While the OSCOR is in the Automatic Mode, a physical search of the area can be performed to increase sweep efficiency. Using the OSCOR in this manner provides two important functions:

1. All signals will be stored in OSCOR memory and can be reviewed manually.
2. Any eavesdropping transmitters should be found during this initial sweep of the RF spectrum.

Notes:

- The recommended inputs in automatic scanning for most environments in a dedicated sweep are the WhipLo and WhipHi. For a recommended procedure for sweeping the other inputs, see page 75 (Manually Sweeping Selected Inputs). The Whip and Discone antennas cover from 500 kHz to 3 GHz, which easily encompasses the majority of the expected threats.
- In order to use the OSCOR in a covert mode, the correlate method should either be PASSIVE or VERIFY (see page 63 Correlate: Acoustic Correlator System (Automatic)). The Passive Mode is completely covert, but since it relies only on the ambient sounds in the environment it is necessary to use a sound source for good correlation. The Verify method of correlation relies on passive sound pattern matching to detect a threat. If a signal achieves a sufficient threat level using the passive sound pattern matching, then a ringer is sounded and correlation analysis is repeated to verify the threat level. This ringer provides a more reliable means of performing correlation, and it is still somewhat covert since the ringer is designed to sound like a telephone ringer and should not be activated often.
- When performing a dedicated sweep, it is important not to overlook any signals. The search level should not be set to FASTSKIM. The MED HUNT level is recommended.
- To ensure that all potential threats are identified, the threat level should be set to 3. The threat level is set low to ensure that potential threats are not ignored.
- The Autoplot List Mode should be activated to provide a hard copy of all potential threats. The Autoplot Chart is also useful when reviewing potential threat signals, but plotting the full graphical chart does take additional time and paper. All of the important information is stored in the normal threat listing.

The Physical Search

The best countersurveillance equipment will always be the human eye. While the OSCOR is operating in the Automatic Mode, the best way to spend your time is physically searching the environment for surveillance devices. The root of successful countersurveillance is the physical search.

Necessary tools typically include:

- Screwdrivers: complete set of Phillips and flathead
- Digital multi-meter with a 40MegOhm or higher range
- Pocketknife

- Pliers
- Wire strippers
- Wire cutters
- Ultraviolet pen and light (note 1)
- Small flex-head flashlight
- Flashlight
- Inspection mirrors (dental mirror)
- 8-in. piano wire probe (note 2)
- Small hand-held metal detector (note 3)
- Wire tracer (note 4)
- Extra extension cords/cables
- Lightweight ladder
- Jump suit for working in dirty areas
- Contact microphone and amplifier to test for acoustic leakage (recommend REI EAR-200 or ALP-700)
- Camera or video camera to record evidence

Note 1: An ultraviolet pen can be used to mark the screw positions for all electrical outlets, computers, and telephones. During later inspections, an ultraviolet light can be used to verify whether anyone has tampered with the electrical equipment.

Note 2: The 8-in. piano wire probe is a long piece of very thin metal that may be inserted into furniture fabric to look for devices in cushions.

Note 3: A small, hand-held metal detector (small enough to fit in a briefcase) is used to search drapes, hanging pictures, furniture pads, bookcases, and other items of décor.

Note 4: A wire tracer is a device with a transmitter connected to a pair of conductors and a receiver used to trace the conductors. The most common model is called the “Fox and Hound” wire tracer. This may be used to trace any suspected wires to discover its function.

The physical search should include but does not have to be limited to:

- Taking apart all electrical outlets to search for carrier current or RF transmitters.
- Investigating all hollow objects, especially if AC powered, such as lamps, clocks, and calculators.
- Taking apart all phones and fax machines (if possible) to look for any suspicious wiring or modifications.
- Opening computer, printer, and fax machine cabinets to search for suspicious wiring or circuitry.
- Checking all window drapes carefully for devices hidden in seams (use metal detector).
- Searching through all drawers in desks or filing cabinets.
- Checking all baseboards for suspicious wiring or tampering. Also check along the carpet edge.
- Searching behind all hanging pictures (use metal detector).
- Searching behind all bookshelves, books, and bindings (use metal detector).
- Identifying and verifying all wiring associated with computers, lamps, clocks, radios, speakers, and telephones.
- Removing any unused wiring that may present an opportunity to an eavesdropper.

- Looking above all ceiling tiles and identifying all wiring in the ceiling space.
- Identifying all wiring under crawl spaces.
- Checking the sound transfer through heating and cooling vents. Place a sound source directly in front of each air vent in the target area. Listen to all the air vents within a large area to determine potential acoustic leakage (use an ALP-700 or EAR-200 (REI products) or a similar device).
- Checking that all intercom speakers function properly. Intercom speakers make great microphones. It is relatively easy to disconnect an intercom speaker to use it for listening purposes. Unless the intercom speakers are continuously on (even with very low sound), they should be disconnected at the speaker or removed.

After the OSCOR has completed at least one pass through every input, each signal that exceeds the specified squelch level will be stored in the OSCOR memory. Reliability is increased with multiple passes through each input. By using the data recall functions described on page 33 Data Functions (STORE/RECALL), each of these signals can be reviewed. As each signal is reviewed, the threat level of friendly signals should be manually changed to “Friendly”.

It is recommended that you acquire information about the expected RF signals in your local area. In the United States, this information is available from the FCC. FCC data is provided on page 93 SECTION 9: STANDARD FREQUENCY INFORMATION.

Using the Hardcopy Plots When Reviewing Signals

A complete signal listing should be printed prior to reviewing the signals. When each signal is reviewed and manually examined, the signal can be checked off or special notes about the signals can be documented on the plot. A wide plot of the frequency spectrum is useful for identifying and documenting signals when reviewing the database.

Suspicious Signals

Any signals that are not readily identified as friendly should be further examined by testing for subcarrier or video content as described on pages 31 Tuning Subcarrier and 65 Detecting Video Threats.

If a signal is still a mystery, try using the **SPECT** button (see page 43 Oscilloscope Analysis (Audio Spectrum Analysis Screen)) to visually inspect the variations in the signal. There are digital signals such as digital pagers, messaging systems, and satellite communications that do not contain audio information. These signals will have a characteristic digital sound that may sound either like noise or you may be able to hear digital tones when listening in the Analyze Mode.

If a signal is encountered that cannot be identified using any of the methods described above, you may want to consider moving the OSCOR to several different locations throughout the building to see if the signal strength changes. Generating plots of the signal in different locations is a useful way to compare signal strength.

Also the OSCOR can be taken outside, 300 ft from the building, to investigate the signal strength in the outside environment. If the signal is still strong, then the signal is common to the environment and probably not an eavesdropping device. If a signal is unique to a building, it is important to determine the signal origin. If the signal appears to be stronger in one office, use the locator probe to locate the signal's origin. This method of comparing signal strength is similar to the method described on page 72 Pre-Loading Signals into Memory.

Transmitter Harmonics

Most RF bugging devices are designed to transmit at a single, primary frequency also called the fundamental frequency. However, due to size and cost constraints, most RF bugging devices do not contain a sufficient amount of filtering and, therefore will radiate at several harmonically related frequencies. These recurrent signals are typically at some multiple of the fundamental frequency. For example, a bug that is radiating at 110 MHz may also radiate at 220 MHz, 330 MHz, 440 MHz, or 550 MHz. The signal strength of each successive harmonic signal will normally decrease with increased frequency and eventually diminish completely. With the OSCOR scanning in the Automatic Mode, each harmonic signal will be detected as a new threat. If the harmonic is stable and accurate, OSCOR's automatic software will calculate and label the presence of the harmonic (H1, H2, etc.).

Some transmitting devices containing a lower frequency oscillator and multiplier generate sub-harmonics at frequencies multiples of the internal oscillator not fundamental frequency. For example, one wireless microphone on the commercial market that works well as a bugging device has a fundamental frequency of 155 MHz, but also radiates at 165 MHz, 175 MHz, and 185 MHz.

Harmonic signals increase the probability of detecting a transmitter, because when the OSCOR is scanning in the Automatic Mode, harmonics provide additional opportunities to detect a single transmitter. If you have multiple threats detected, examine the relationship between the frequencies to determine whether the additional signals are harmonic or multiplier frequencies.

Spread Spectrum

As technology continues to advance, spread spectrum technology is becoming more common in commercial products. This technique takes a strong signal and spreads the transmitted energy over a wide frequency spectrum, making the transmitter more elusive. Rather than seeing a large signal resembling the Washington Monument, the signal resembles a low plateau that can stretch for miles. To the casual observer, the Washington Monument is more easily noticeable than the plateau. Furthermore, spread spectrum signals are digitally coded, and unless you have a spread spectrum receiver with the proper digital code locked in synchronization with the transmitter, it is impossible to decipher the information being transmitted. Due to the method of digital encoding in the spread spectrum signal, there may appear to be multiple low-level signals that are frequency hopping. If you are unsure if the signal is a threat, try the procedures described on page 78 (Suspicious Signals).

The only way to recognize a spread spectrum transmitter with the OSCOR is to use the Sweep Mode and scan the entire frequency spectrum examining various frequency spans. Look for a long, low elevation rather than a brief steep spike. If a spread spectrum signal is suspected, it might not be an eavesdropping device. Many satellite systems and secure communication systems use spread spectrum technology.

Frequency Hopping

Another new type of elusive eavesdropping device is the frequency-hopping device. As the name implies, frequency-hopping bugs are designed to transmit on one frequency for a very short period of time (5 to 100 milliseconds) and then change frequency to an apparently random new frequency. These frequency hoppers will hop to several different frequency channels within a well-defined bandwidth.

In the Automatic Mode, the OSCOR will have a difficult time detecting frequency-hopping bugs, because the signal usually changes frequencies before the correlation analysis can confirm a threat. However, Peak Display Mode helps detect the frequency hopping threat, see page 27 Peak Spectrum Display.

If a frequency-hopping signal is found in the frequency spectrum, it is very difficult to determine the physical location of the transmitter, because the OSCOR receiver is unable to lock on the rapidly moving signal. The following procedure is recommended.

To locate and determine the threat potential of a frequency hopping signal:

1. *Determine the frequency-hopping spectrum using the method described on page 27 Peak Spectrum Display.*
2. *Allow the OSCOR to sweep the frequency span for several minutes in the target environment, to establish a well-defined frequency spectrum of the hopping signal.*
3. *Press the **PLOT** button to print the frequency spectrum, and label the plot with the physical location or room in which it was produced.*
4. *Take the OSCOR to several other locations within the building, as well as outside the building, and repeat steps 2 and 3.*
5. *Compare the signal strength of each signal by overlaying the various plots and holding them up to a light source. Using this method you can determine if the signal is originating from within the building or from outside. If the signal is stronger outside the building than any of the inside locations, the signal is probably not an eavesdropping device within the building.*
6. *If the signal strength is stronger inside the building, localize on the room containing the strongest signal using the plots and use a Broadband field strength meter to find the physical location of the transmitter (see page 89 Broadband Energy Detectors). For this kind of threat, a good physical search is imperative.*

Unintentional Radiators

Many things that are not designed to be radiators can cause false readings. Most unintentional radiators have very little range and are easy to identify by one of several methods. Since unintentional radiators have little power, the radiated signal should be very localized. The location of the radiator may be found using the locator probe. It is also easy to

turn off various pieces of equipment in the environment to determine if a signal stops. Some examples of unintentional radiators, the expected signal, and their likelihood are provided in FIGURE 28.

Note: There are many intentional radiators such as: cordless phones, cellular phones, baby monitors, any kind of advertised wireless systems (intercoms, walkie-talkies, remote control devices, etc.). It is important to become familiar with the normal transmitters in your environment to increase sweep efficiency.

Radiator	Expected Unintentional Signal	Probability
Fluorescent lights	Low frequency noise in the AC VLF, RF Loop and possibly in the WhipLo.	Moderate
computer monitors	Multiple strong harmonic signals appearing on the RF Loop antenna input and possibly in the WhipLo.	High
Computers	Potential harmonic signal appearing on the RF Loop antenna, WhipLo, and even the Whip High antenna. These signals are typically due to the various clock speeds in the computer system and may have a digital sound.	Moderate
Radio Tuners, Stereos	Low strength signals in the same frequency band as the radio. (FM-WhipHi, AM-WhipLo), and may radiate at lower frequencies. Since radios contain a tuned oscillator that is used to demodulate the received signal, this internal oscillator may re-radiate a similar signal at 455 kHz or 10.7 MHz above or below the normal frequency.	Moderate
LED displays	Low frequency noise on the RF Loop from the internal display system pulsing the LED.	Low
Fluorescent or Gas Displays	Low frequency noise in the RF Loop and possibly in the WhipLo.	Low
Wired Digital Phones	Very weak signals in the RF Loop and WhipLo. Digital phones may have a control system that operates at several kilohertz or megahertz.	Low

FIGURE 29: UNINTENTIONAL RADIATOR PROBABILITY

SECTION 5: MONITORING A MEETING IN PROGRESS

It is relatively easy for someone to carry an eavesdropping device into a meeting. Most bugging devices on the market today can be turned on only when needed and easily carried in a coat pocket, portfolio, or briefcase.

One of the unique features of the OSCOR is its ability to monitor a meeting in progress from a remote location. The OSCOR works on the following principle: if the audio information on a transmitted signal (IR, RF, or carrier current) is identical to the sounds in the environment under test (referred to as the reference sound source) then an eavesdropping transmitter is present. In normal operation, the OSCOR has a built-in microphone that serves as the reference sound source. However, an external microphone may be plugged into the unit for remote observation.

The OSCOR can be placed in a room adjacent to the target environment. A microphone is placed in the target environment with an extension cable leading to the OSCOR--the microphone extension may be run over the wall (in the case of drop ceiling), under the door or even through the wall. The OSCOR will function as if it were located in the target environment. During the meeting, the OSCOR can be locked in a closet, running in the Automatic Mode printing and storing all threats for later review, or a security person may use the OSCOR in Manual or Automatic Mode to watch for transmitters during the meeting.

When monitoring a meeting in progress, you want to detect a threat very quickly. The following suggestions should speed up the detection process.

- The Automatic signal detection method should be set to either *FASTSKIM* or *MED HUNT*. If someone is wearing a body bug, it will probably be relatively high power in order to ensure that a strong signal is being received at the remote listening (or recording) post. Setting the OSCOR at a higher squelch threshold level (*FASTSKIM* or *MED HUNT*) will speed up the automatic search process.
- All known signals should be stored in the memory as friendly signals by first allowing the OSCOR to run in the Automatic Mode long enough to complete sweeping all inputs. Manually, the user should review each signal using the recall functions and tag all known signals as friendly (see page 78 Suspicious Signals or use the procedure described on page 72 Pre-Loading Signals into Memory).
- The Whip Hi and Discone should be the only input scanned while monitoring a meeting in progress. This frequency band will cover most all body bugs and will minimize the time spent scanning the entire set of inputs.

SECTION 6: TESTING TELEPHONES WITH OSCOR

The OSCOR's primary function was not to be a telephone analyzer (see page 90 Telephone Analyzers). However, it does have some basic telephone analysis capabilities that are not present in most telephone analyzers.

Testing for Hot Phones or Hook-Switch By-Pass Bugs.

The Balanced Audio Coupler provides a balanced and isolated connection for testing telephone, fax, or data lines, or unknown wiring or cables. This coupler and patch cord are used with the OSCOR's built-in audio amplifier to extract line audio. They can also be used for direct correlator reference as used in testing for telecom "hot mikes," hook-switch bypass, infinity bugs, and electronic triggers. Any suspicious wiring can also be tested for microphones by monitoring through the system's reference circuit and listening to the headphones.

To use the OSCOR to test for audio content on any pair of conductors:

1. *Connect the Balanced Audio Coupler (BAC-5000) to the audio patch cord.*
2. *Plug the other end of the audio patch cord into the EXT REF jack in the audio panel.*
3. *Press the **EXT** button in the AUDIO panel.*
4. *Press the **F1** button (labeled MONITOR RECEIVER) until the display label reads MONITOR/REFERENCE.*
5. *Connect the alligator clips on the Balanced Audio Coupler (BAC-5000) to the desired pair of conductors.*

Note: For phone lines, all combinations of the conductors should be tested. REI provides a coupling device that provides access to all lines in modular phone connectors that contain 2 to 8 conductors.

6. *Adjust the volume control on the OSCOR unit.*

With the phone on the hook, there should be no audio on the conductors at all, unless the phone system is digital. In this case, the phone may have digital signals that will sound very much like noise on the line. You can unplug the phone from the wall outlet to verify that digital sound disappears when the phone is unplugged. With the phone plugged back into the wall and on the hook, rap lightly on the phone (i.e. strike the phone gently with a pencil). If any audio content is heard, this implies that the phone contains a hook-switch bypass, hot-speaker (for speakerphones), hot-earpiece, or hot-mike (hot means that the device is active when the phone is hung up) within the phone. There are some types of phones that are active even with the phone hung up (many speakerphone models have this problem). This type of phone is a natural threat and should be replaced.

With the phone off the hook and the audio coupler connected to the tip and ring conductors, you should hear the dial tone and any audio from the telephone mouthpiece. (For analog or hybrid systems -- a hybrid system uses analog for the normal tip and ring signals, but power and digital controls on the remaining 2 to 6 conductors.)

Testing the Telephone Lines for Carrier Current

Using the AC VLF cord (the power cord) and the VLF probe attachment, the telephone lines can be tested for carrier current transmitters. All conductor combinations should be tested using a procedure outlined on page 75 Checking For Carrier Current Threats. All phone lines in the target environment should be tested.

To test telephone lines for carrier current:

1. *Connect the VLF adapter (see page 15 VLF Adapter) to the AC power cord.*
2. *Connect the blue Modular Phone Adapter (see page 17 Modular Phone Adapter) in line with the telephone.*
3. *Select the AC VLF input with the OSCOR the Sweep Mode.*
4. *Tune to each signal that occurs and analyze it for threat potential.*
5. *Test each combination of conductors for carrier current signals.*

Testing Telephones for RF Transmitters

There are types of RF transmitting telephone bugs that are only activated when the telephone is off the hook. Therefore, it is necessary to test the telephone for this type of RF transmitter when the phone is both on and off the hook.

To Test the Telephone for an RF transmitter:

1. *Place the telephone very near the OSCOR unit; it also works well to wrap the telephone cord that connects the handset and the base unit around the OSCOR whip antenna.*
2. *Put the OSCOR in the Sweep Mode (see page 20 Spectrum Analyzer Functions).*
3. *Compare the Frequency Spectrum with the phone in the off-hook position to the Frequency Spectrum in the on-hook position. It may be useful to generate plots of these two configurations and compare the plots (see page 51 Sweep Plots (Frequency Spectrum Plots) and page 72 Generating a Signal Chart of the Area).*
4. *Any signal that appears only in the off-hook position should be further analyzed using the Analyze Mode.*

SECTION 7: SUMMARY OF OSCOR SPECIFICATIONS

RF System:

RF Receiver Type: Quad Conversion Super
Heterodyne with 3 phase locked loop
synthesizers
RF Frequency Coverage: 10kHz-3GHz
Tuning Resolution: 100Hz
Sensitivity: 0.8 μ V typical with 15kHz
Bandwidth (+15dBm MAX)
Demodulators: AM, FM Wide, FM Narrow.
FM SC, SSB/CW
IF Bandwidth: 250kHz, 15kHz, 6kHz
Attenuators: 0, -20dB at active whip,
Discone, and VLF-MF input
Dynamic Range: 90dB
Subcarrier Tuning Range: 15kHz-250kHz
Antenna Types: Balanced Loop 10kHz-
500kHz (35-45kHz Narrow)
Active Whip: 500kHz-1500MHz
Discone: 1500MHz-3000MHz
Infrared Detector: 10kHz-5MHz, 850-
1070nm
AC Carrier Current: 10kHz-5MHz (Balanced
Across Power Line)

Control System:

8/16 Bit Microcontroller
128 (512K Optional) Static RAM Memory
Optical Encoder: 128 Pulse/Rev with variable
count ratio
Program Key: 64K Byte ROM
Display: 128 x 256 Segment Graphics
Supertwist LCD
Printer: 192 Dot Per Line Graphics on 2"
wide thermal paper

Audio System:

Frequency Response: 50Hz-15kHz
Voiceband Filter: 300Hz-3000Hz -
18dB/Octave
AGC Dynamic Range: 60dB
Output Power: 3W @ 4 \square
Headphone Output: 0-2V rms @ 220 \square
Record Output: 50mV rms (with AGC) @
500 \square
Remote contact: Normally Open (200mA
32V MAX)
Balanced Auxiliary Input: 0.5V rms Nominal
@ 600 \square
Reference Audio Input: 1mV - 1V rms @
3.9K \square
Sonic Correlator: 50Hz - 15kHz (Frequency
Independent)
Audio Alarm: 3 Level Programmable Two
Tone Ringer
Squelch: Automatic digital or manual control
over full display range
Headphones: Low acoustic leakage, 16 \square
output limited to 105dBA

Power System:

AC Input: 105-130/210-260VAC, 50-60Hz,
24W
External DC Input: 12-18VDC, 1A max
Internal Battery: 12.6V, 2.6 Ah 3 hour
operation per charge typical

Mechanical:

Size (HxWxD): 6.25 x 18.5 x 14.5 in (47 x
36.8 x 15.9 cm)
Weight: 28 lb. (12.7kg)

SECTION 8: OTHER TYPES OF EQUIPMENT

It should also be noted that there are many things that professional sweep teams may do that require the use of other types of equipment. Many people have different ideas about what should be done during a sweep. This user's manual is focused primarily on the use of the OSCOR and the issues associated with the type of threats for which the OSCOR was designed. Still, other types of equipment, and the added security benefits that can be achieved from them, should not be ignored.

This section provides a brief, and as unbiased as possible, description of other types of equipment. FIGURE 29 provides an objective view of the ability of certain types of equipment to address specific threats. If you have further questions about equipment, please contact REI. If we do not manufacture the type of equipment that you are interested in, we will be happy to recommend a supplier.

Threat/Product Evaluation Summary

REL

The level of performance is indicated using numbers 1 through 5. 5 is best performance; 1 is lowest performance; - no performance.

EQUIPMENT

THREATS

Tech Lvl	Surveillance Detection										Tel. Surv. Det			Tel. Countmeasures				Cntr. M.
	OSCOR Spectrum Analyzer	ECR-2 Spectrum Analyzer	Avcom Spectrum Analyzer	Icom Scanner	Scanlock Harmonic Receiver	CPM Broadband Receiver	TRD Tape/RF Receiver	NLJT Non-Lin Junct. Det	Metal Det Hand held	Tel Anal ¹ Multi Meter	Time Domain Reflectometry	TSU Jammer	ACS Analog Scrambler	SU-III Tel. Digital Encryptor	noise generator			
RF																		
LOW	5	4	4	4	4	3	3	2	4	3	-	-	-	-	3			
LOW	5	4	4	4	4	3	3	2	4	3	-	-	-	-	3			
LOW	5	3	3	3	2	2	2	2	4	3	-	-	-	-	3			
MED	5	4	4	4	4	4	4	3	4	3	-	-	-	-	3			
MED	5	4	4	4	4	4	4	2	4	3	-	-	-	-	3			
HIGH	4	3	3	3	3	3	3	2	4	3	-	-	-	-	3			
HIGH	4	2	2	3	1	3	2	4	3	-	-	-	-	-	3			
HIGH	4	2	2	1	1	3	2	4	3	-	-	-	-	-	3			
HIGH	3	2	2	1	-	-	-	4	3	-	-	-	-	-	3			
HIGH	3	2	2	1	-	1	-	4	3	-	-	-	-	-	3			
NA	-	-	-	-	-	-	-	4	3	-	-	-	-	-	3			
Carrier Current Transmitter																		
AC outlet Devices	5	?4	?4	?4	?4	4	4	-	4	-	-	-	-	-	3			
Misc. Wiring	5	?4	?4	?4	?4	4	4	-	4	-	-	-	-	-	3			
Infrared Devices																		
Narrow Beam Devices	5	-	-	-	?4	4	4	-	4	2	-	-	-	-	3			
Broad Power Devices	5	-	-	-	?4	4	4	-	4	2	-	-	-	-	3			
Laser Devices																		
General Theoretical Capability	HIGH	-	-	-	-	-	-	-	-	-	-	-	-	-	5			
Tape Recorders																		
Cheap Microcassette Recorders (Dictation)	2	-	-	-	?	1	1	1	4	3	-	-	-	-	3			
Quality Recorders (Strong Bias Oscillators)	4	-	-	-	?	3	3	3	4	3	-	-	-	-	3			
Surveillance Grade (shielded)	MED	2	-	-	?	1	1	1	4	3	-	-	-	-	3			
Telephones																		
High Impedance Line Tap	MED	-	-	-	-	-	-	-	-	-	2	3	4	3	5			
Capacitive or Inductive Line Tap	HIGH	-	-	-	-	-	-	-	-	-	2	3	4	3	5			
Basic Tap (VOX activated)	LOW	-	-	-	-	-	-	-	-	-	4	5	4	3	5			
Carrier Current Bug	HIGH	5	?4	?4	?4	4	4	-	-	-	-	-	-	3	5			
Hookswitch By-pass, Hot Mic or Earpiece	MED	5	-	-	-	-	-	-	-	-	3	-	5	3	5			
Infinity or Harmonica Bug	MED	2	-	-	-	-	-	-	-	-	3	-	-	-	-			
RF Bug	MED	5	4	4	4	4	4	3	-	-	-	4	3	5	-			

?

Depends on whether or not the specified receiver has a specially designed adapter to perform the sweep function.

1

Assumes that the detected device is not shielded by metal or placed in location that already contains semiconductor material.

2

Assumes that the devices is not placed in a location that already contains metal

3

Assumes that the Telephone analyzer contains line impedance testing capability and line tone sweeping capability.

FIGURE 30: THREAT/PRODUCT EVALUATION SUMMARY

Spectrum Analyzers

A spectrum analyzer is a tuned receiver. It has the ability to tune to a specific frequency and receive a very narrow band of energy on either side of that frequency (see page 20 Sweep Mode for further information). A spectrum analyzer-type receiver is the preferred technology to use for countersurveillance, because it provides a very accurate picture of the electromagnetic spectrum.

The OSCOR is fundamentally a spectrum analyzer designed specifically for countersurveillance. Spectrum analyzers were historically developed for the testing, design, and development of electronic products. The best spectrum analyzers are very expensive, heavy and bulky, yet have a high degree of sensitivity and accuracy. A top-of-the-line, digitally-controlled, spectrum analyzer from Hewlett Packard or Tektronics may have a sensitivity of -118dBm @ 15 kHz bandwidth and may cost as much as \$50,000 to \$100,000. (The OSCOR has a sensitivity of -113dBm @ 15 kHz bandwidth.) Countersurveillance sweeps do not typically require a spectrum analyzer of this quality. If the signal is so low that an OSCOR cannot detect it, then it is practically impossible for most surveillance receivers to pick up the signal.

There are less expensive spectrum analyzers on the market for as low as \$2,000. Spectrum analyzers in this class are typically “free running”, analog in nature, and require a great deal of manual control while tuning and listening to individual signals due to a drift problem. Most spectrum analyzers do not come with built-in demodulators, audio amplifiers (to analyze signals) or antennas. Also, most spectrum analyzers do not have the ability to monitor an environment in an Automatic Mode, store and recall signals or create prints from a built-in plotter.

Harmonic Receivers

A harmonic receiver is similar to a spectrum analyzer in that it sweeps over a frequency band and can create a plot of the signal amplitudes as a function of frequency. However, a harmonic receiver operates on the principle that a large portion of the frequency spectrum (maybe several Giga-Hertz) can be electronically “folded” into a narrow frequency spectrum (maybe 20 MHz). It is this narrow frequency spectrum that is scanned for signals. This approach works very well if the folded frequency spectrum is very wide (maybe 100 MHz).

Advantages:

1. It scans a very large frequency spectrum very rapidly.
2. It has better sensitivity than a broadband receiver does (see the next section) in a low signal environment, because it is a tuned receiver.
3. It is very effective when carried around the environment and placed in close proximity to all surfaces that may contain threatening signals.

Disadvantages:

1. Due to the signal folding effect, a signal common to the environment may fold on top of a threat signal and completely mask it from detection. The folding effect tends to multiply common signals in the environment. Therefore, in a high signal environment, the harmonic receiver may not perform as well as a broadband receiver. The probability of detecting a signal depends greatly on the location, the number, and the strength of the signals in the ambient environment.
2. It is difficult to get an accurate frequency reading of the signal. Most harmonic receivers do not provide a frequency output information.
3. Because harmonic receivers have the appearance of being scanning receivers, people use them in the center of a room rather than walking around the room attempting to place the receiver close to a threat transmission.

The theory behind a harmonic receiver is good for countersurveillance. However, the design is greatly dependent on how much folding and scanning is actually done. It is the opinion of the engineers at REI that harmonic receivers should not be used for countersurveillance unless the actual scanning frequency is greater than 200 MHz.

There are several harmonic receivers on the market, including the “Scanlock” by Audiotel and the “Ranger” by Datong. All of these harmonic receivers have a narrow scan range (below 25MHz).

Broadband Energy Detectors

A broadband energy detector is basically an electromagnetic field strength meter. It is not a frequency tuned device, but its performance may vary over a wide range of frequencies. For example, the CPM-700 (designed and sold by REI) has the ability to receive signals up to 3 GHZ. However, this unit receives all signals at once from 100 kHz to 3 GHz. The strongest signal will display the predominate response. Most inexpensive bug detection equipment falls into this category.

Broadband devices are easy to use, inexpensive and effective for medium to high power bugs in controlled environments. However, in a big city environment, with many high-power radiating signals, the effectiveness of these devices is drastically reduced, because there are so many signals that are received simultaneously. Furthermore, most inexpensive broadband detectors are only effective over a very small portion of the RF spectrum and do not provide the ability to listen to the transmitted signal.

The CPM-700 is effective from 15 kHz to 3 GHZ, and has several probes available for testing carrier current, infrared and magnetic leakage (tape recorders). The CPM-700 also contains an audio amplifier that allows the user to listen to the signal and to perform some phone testing similar to the OSCOR testing described on page 83 Testing Telephones with OSCOR. For an adequate broadband detector, expect to pay between \$1,500 to \$2,500.

One great advantage of the broadband detector is that it is not affected by frequency hopping bugs and is very effective against spread spectrum. Many professional sweep teams use a

spectrum analyzer type device to locate the frequency of a threat and then used a broadband energy detector to physically locate the threat.

Tape Recorder Detectors

There are a few products on the market that have a tape recorder detection capability, but the ability to detect a tape recorder is greatly dependent on the design of the tape recorder. Most high-quality tape recorders contain a device called a bias oscillator, which generates a magnet field used to produce high-quality recordings. The magnetic field that is generated by the bias oscillator produces a weak signal at approximately 40 kHz. For additional information see page 45 Locating Magnetic Tape Recorders and Low Frequency RF (10 kHz - 500 kHz). For the best devices on the market (including the OSCOR), the range for tape recorder detection is not much greater than 3 to 4 ft (1m).

However, there are many microcassette recorders being produced in Asia that do not contain bias oscillators and are basically undetectable. Tape recorders without bias oscillators do not produce high-quality recordings and are not very effective for surveillance use. But there are high quality tape recorders being produced specifically for surveillance. They contain bias oscillators that are well shielded and are almost undetectable. The simple fact is that tape recorders are a difficult problem, and there are limited solutions.

Even with all the disclaimers provided above, REI offers a product called the TRD-800 that is designed to detect tape recorders, as well as RF transmitters. The TRD contains a broadband detection circuit that is very effective against body wires. This unit is smaller than a cigarette pack with an antenna that is designed to be worn on your wrist. The concept is that when you shake hands with someone, you are scanning them for an active tape recorder or body wire. If a device is detected, the TRD-800 will silently vibrate. This unit has a range of approximately 1 to 3 ft for tape recorders that do not have shielded bias oscillators, and 2 to 6 ft for most body wires.

Telephone Analyzers

Most telephone analyzers fall into one of two categories: voltage analyzers and time domain reflectometry analyzers. There are many ways to tap a phone that are practically undetectable, so the most important thing to remember is to respect the telephone. Here are a few tips for any business that has information to protect:

1. If there is no reason to have a telephone in a conference room during a meeting, then remove it.
2. Do not discuss sensitive information over the telephone unless it is absolutely necessary.
3. If a great deal of important business is being conducted over the telephone lines, invest in a secure phone system. The best secure phone system is called a STU III (Secure Telecom Unit), however, these types of phones fall under munitions control and require an export license.
4. If business partners are often away from a secure phone, use a portable scrambling device such as REI's Scrambler.

Voltage Analyzer (Voltmeters)

There are many telephone analyzers on the market and yet most of them do basically the same thing. Except for the time domain reflectometry (described below). It is a phone analyzer primarily with a voltmeter which includes switching functions designed to perform various types of tests. Phone analyzers may provide convenience when testing phones, but a simple voltmeter can also perform everything needed for standard tests. The basic procedure is to measure the on-hook voltage level (which should be approximately 50 to 54 volts) and the off-hook voltage (which should be 4 to 12 volts). Using the actual measurements achieved from these readings, several things can be determined. For example, if the off-hook voltage level measured in suspect environment is 6.5 volts, but the off-hook voltage of the same type of phone in the office next door is 7.5 volts, there is cause for suspicion of a phone bug.

Furthermore, using the voltmeter and a balanced set of resistors, the flow of the phone line can be measured. The basic goal when using any type of phone analyzer equipment is to try to determine if the phone line is tapped somewhere between the telephone and the central office. This text will not go into all of the different kinds of measurements or tests that can be performed using a voltmeter or basic analog telephone analyzer. This type of information is well publicized and feel free to contact REI for further information.

Time Domain Reflectometry (TDR)

A time domain reflectometer (TDR) is a device that checks the integrity of the phone line. This device works similarly to a radar system; the TDR is connected to any pair of phone line conductors and transmits a very short voltage pulse. This pulse travels down the telephone line and every change in the flow produces a reflection that travels back down the line to the TDR unit. The time delay between the transmitted pulse and the received pulse is directly proportional to the distance of the flow change from the TDR unit. A flow change can be anything from a very sharp bend in the telephone wire to a punch down block in the phone room within a large building.

TDRs are used primarily by telephone and cable companies to verify the integrity of the phone or cable lines, but they are also useful for countersurveillance. If your phone is tapped, the tap will result in a reflection and can be detected by the TDR. There are many varied opinions about the usefulness of such a device. Some people swear by them, but others believe they are too labor intensive.

In the right hands, a TDR can be a very effective tool. Unfortunately, most people do not have the skill, patience and dedication to use one properly. For example, for a telephone system with 6 conductors, one basic test for a single phone is to remove all conductors from the central block associated with that phone (it may be quite a chore to locate these conductors). By shorting and/or opening several combinations of pairs of conductors, a TDR plot of the tip and ring conductors, as well as at least one other pair of conductors, can be generated. You can determine if there is a flow difference in the tip and ring pair of

conductors versus another pair of conductors to try to establish whether a tap exists. Nonetheless, there are ways to tap a phone that result in practically no reflection.

Non-Linear Junction Detectors

A Non-Linear Junction Detector (NLJD) is a device designed to detect the semiconductor junction (which is a non-linear junction) that resides in diodes and transistors. The typical NLJD consists of a transmitter, a receiver and a wand that contains a radiating antenna and a receiving antenna. When a semiconductor device is radiated with a 900 MHz signal, the semiconductor device will resonate and radiate harmonics at 1800 MHz, but not at 2700 MHz. The presence of a high second harmonic indicates the presence of a semiconductor junction. The presence of harmonics at 2700 MHz, but not at 1800 MHz, indicates a metal junction that is not associated with semiconductor devices. Since all junctions (either metal or semiconductor) are not perfect, semiconductor junctions will have a low-level third harmonic and metal junctions will have a low-level second harmonic. Therefore, the sensitivity and accuracy of the Non-Linear Junction Detector are critical.

Note: The second harmonic is defined as two times the fundamental frequency; for a fundamental frequency of 900 MHz the second harmonic is defined to be 1800 MHz and the third harmonic is 2700 MHz.

The disadvantage of an NLJD is that it is sometimes difficult to distinguish a semiconductor junction from a corrosive metal junction. For example, if two nails within a wall are touching and the nails are slightly oxidized, they will produce harmonics, or if plated screws are used in a steel-studded wall, harmonics will be produced. However, since true semiconductor devices produce a higher second harmonic, a high quality NLJD minimizes false alarms.

Furthermore, any device that already contains electronics, such as a telephone or clock radio, will always give a semiconductor junction reading. There is no way to detect a bug in equipment that already contains electronic components. The greatest advantage of the NLJD is that it will function whether the eavesdropping device is turned on or not. It will find tape recorders, chip cameras and bugs. It allows the user to rapidly scan walls, bookcases and ceilings without any demolition. The typical range on an NLJD is about 6 in. to 3 ft (5 to 70 cm).

REI has recently added a non-linear junction detector to its list of products. The ORION is a lightweight, single-body device that incorporates the latest advancements in design. Other NLJDs have multiple pieces to carry, and cords that must be attached, but the ORION is contained in one unit with only one cable that is stored on an internal automatic winder. It uses only one polarized antenna which reduces the search time while providing greater reliability, and it uses a standard type camcorder battery that is rechargeable. Other NLJDs cost more than \$20,000, but the ORION costs considerably less. Contact REI or your dealer to learn more about the ORION non-linear junction detector.

Acoustic Noise Generating Systems

The basic goal with noise masking is to fill the environment with audio noise to interfere with eavesdropping microphones. The problem is that in order to communicate in a noise-filled environment; the occupants must raise their voices over the noise. This often defeats the purpose of having the noise masking system.

However, noise-masking systems are effective if they mask the environment external to the immediate conversation. For example, if you are having a conversation with people in close proximity, it is feasible to place a noise generator on the desk to defeat any bugging device or tape recorder that may be in the desk. Similarly, if you have several noise generators, it is feasible to sit in a tight circle and place the noise generators outside the circle, so that the noise generators are placed between the conversation and any potential bug locations. These noise generators may be placed above ceiling tiles, in walls, on windows (to defeat LASER threats), in heating and cooling vents or in any location in which acoustic leakage exists.

REI manufactures two noise-masking products. One product ,the ANG-2000: Acoustic Noise Generator, is a perimeter noise-masking system designed to provide perimeter protection from acoustic leakage. This system is purchased with transducers or omnidirectional speakers. The transducers are mounted on all walls and windows and the omnidirectional speaker is designed to be placed above ceiling tiles. A single noise generator unit is used to drive the transducers and the speakers creating a noised perimeter surrounding the environment. This approach avoids filling the environment with noise that will disrupt normal communication. This system defeats bugs that may be in walls, or above ceiling tiles, but may not adequately defeat bugging devices that are inside the room.

A second product ,the PNG-200: Portable Noise Generator, is a pocketsize audio noise generator that can be used for environment noise or mounted to walls and windows in a similar fashion to the ANG-2000. A kit of eight PNG-200's is the size of a briefcase and can be quickly installed in a room with no tools or mounting hardware required.

Technical Note: Many people feel secure when they have acoustic tile in their ceiling. It should be noted that acoustic tile does not prevent sound from penetrating into the ceiling space; it actually does just the opposite. Acoustic tile allows sound to pass up into the ceiling space, but prevents sound from coming back down into the room. This provides better acoustics for the room, but makes the ceiling tile an ideal location for bugging devices.

SECTION 9: STANDARD FREQUENCY INFORMATION

This section provides information about the FCC published standard database frequency allocations. All of this information is built into the OSCOR PC Interface Software database Utilities. These Utilities will allow you to automatically classify signals based on the standard frequency information alone.

Note: This classification information should only be used as a guide for classifying friendly signals. It does not correctly classify threatening signals.

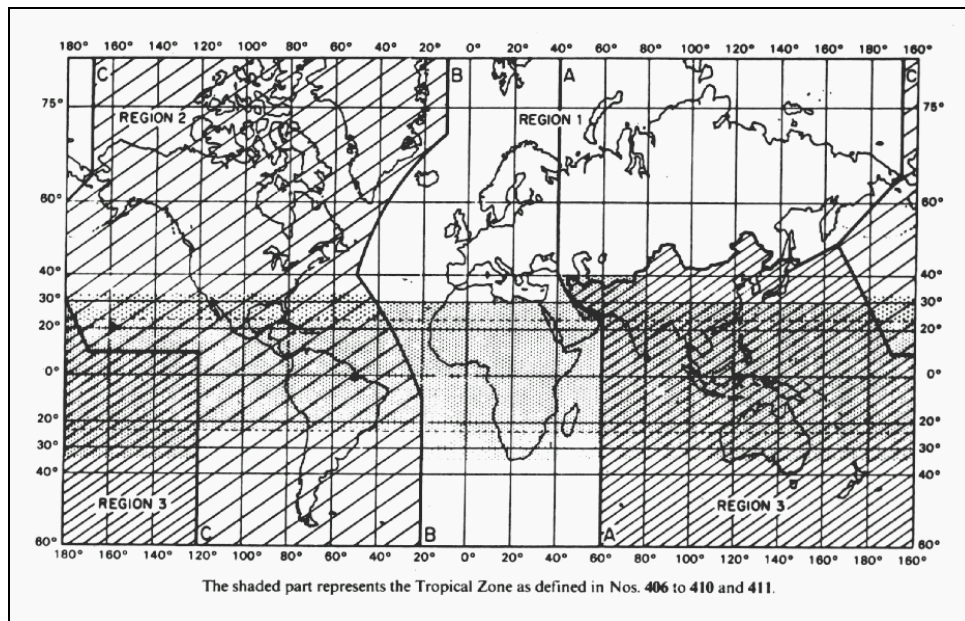


FIGURE 31: REGIONAL FREQUENCY ALLOCATION MAP

Region 1 Data

Reg	Start (MHz)	Stop (MHz)	Classification
1	0.505	0.5265	Aero. Radio-nav. / Maritime Mob.
1	0.5265	1.6065	Broadcasting
1	1.6065	1.625	Maritime Mob./Fixed/Land Mob.
1	1.625	1.635	Radio-location
1	1.635	1.8	Maritime Mob./Fixed/Land Mob.
1	1.8	1.81	Radio-location
1	1.81	1.85	Amateur
1	1.85	2.045	Fixed Mobile
1	2.045	2.16	Maritime Mob./Fixed/Land Mob.
1	2.16	2.17	Radio-location
1	2.17	2.1735	Maritime Mobile
1	2.1735	2.1905	Mobile(distress and calling)
1	2.1905	2.194	Maritime Mobile
1	2.194	2.498	Fixed Mobile(exc. aero. mobile)
1	2.498	2.502	Standard Freq./Time Signal
1	2.502	2.625	Fixed Mobile
1	2.625	2.65	Maritime. Mobile/Mari. Radio-nav
1	2.65	2.85	Fixed Mobile
1	2.85	3.155	Aero. Mobile
1	3.155	3.4	Fixed Mobile(exc. aero. mobile)
1	3.4	3.5	Aero. Mobile
1	3.5	3.8	Amateur 510 Fixed Mobile
1	3.8	3.9	Fixed Aero. Mobile/Land Mobile
1	3.9	3.95	Aeronautical Mobile
1	3.95	4	Fixed Broadcasting
1	4	4.063	Fixed/Maritime Mobile
1	4.063	4.438	Maritime Mobile
1	4.438	4.65	Fixed Mobile
1	4.65	4.75	Aero. Mobile
1	4.75	4.85	Fixed Aero. Mobile/Land Mobile
1	4.85	4.995	Fixed Land Mobile/Broadcasting
1	4.995	5.005	Standard Freq./Time Signal
1	5.005	5.06	Fixed Broadcasting
1	5.06	5.45	Fixed Mobile(exc. aero. mobile)
1	5.45	5.48	Fixed Aero. Mobile/Land Mobile
1	5.48	5.73	Aero. Mobile
1	5.73	5.95	Fixed Land Mobile
1	5.95	6.2	Broadcasting
1	6.2	6.525	Maritime Mobile
1	6.525	6.765	Aero. Mobile
1	6.765	7	Fixed Land Mobile
1	7	7.1	Amateur 510/Amateur Satellite
1	7.1	7.3	Broadcasting
1	7.3	8.1	Fixed Land Mobile
1	8.1	8.195	Fixed Maritime Mobile
1	8.195	8.815	Maritime Mobile
1	8.815	9.04	Aero. Mobile
1	9.04	9.5	Fixed
1	9.5	9.9	Broadcasting
1	9.9	9.995	Fixed
1	9.995	10.005	Standard Freq./Time Signal
1	10.005	10.1	Aero. Mobile
1	10.1	10.15	Fixed Amateur 510
1	10.15	11.175	Fixed Mobile(exc. aero. mobile)
1	11.175	11.4	Aero. Mobile
1	11.4	11.65	Fixed
1	11.65	12.05	Broadcasting

1	12.05	12.23	Fixed
1	12.23	13.2	Maritime Mobile
1	13.2	13.36	Aero. Mobile
1	13.36	13.41	Fixed Radio Astronomy
1	13.41	13.6	Fixed Mobile(exc. aero. mobile)
1	13.6	13.8	Broadcasting
1	13.8	14	Fixed Mobile(exc. aero. mobile)
1	14	14.25	Amateur 510/Amateur-Satellite
1	14.25	14.35	Amateur 510
1	14.35	14.99	Fixed Mobile(exc. aero. mobile)
1	14.99	15.01	Standard Freq./Time Signal
1	15.01	15.1	Aero. Mobile
1	15.1	15.6	Broadcasting
1	15.6	16.36	Fixed
1	16.36	17.41	Maritime Mobile
1	17.41	17.55	Fixed
1	17.55	17.9	Broadcasting
1	17.9	18.03	Aero. Mobile
1	18.03	18.052	Fixed
1	18.052	18.068	Fixed/Space Research
1	18.068	18.168	Amateur 510/Amateur-Satellite
1	18.168	18.78	Fixed Mobile(exc. aero. mobile)
1	18.78	18.9	Maritime Mobile
1	18.9	19.68	Fixed
1	19.68	19.8	Maritime Mobile
1	19.8	19.99	Maritime Mobile
1	19.99	20.01	Standard Freq./Time Signal
1	20.01	21	Fixed Mobile
1	21	21.45	Amateur 510/Amateur-Satellite
1	21.45	21.85	Broadcasting
1	21.85	21.87	Fixed
1	21.87	21.924	Aero. Fixed
1	21.924	22	Aero. Mobile
1	22	22.855	Maritime Mobile
1	22.855	23	Fixed
1	23	23.2	Fixed Mobile(exc. aero. mobile)
1	23.2	23.35	Aero. Fixed/Aero. Mobile
1	23.35	24	Fixed Mobile(exc. aero. mobile)
1	24	24.89	Fixed Land Mobile
1	24.89	24.99	Amateur 510/Amateur-Satellite
1	24.99	25.01	Standard Freq./Time Signal
1	25.01	25.07	Fixed Mobile(exc. aero. mobile)
1	25.07	25.21	Maritime Mobile
1	25.21	25.55	Fixed Mobile(exc. aero. mobile)
1	25.55	25.67	Radio Astronomy
1	25.67	26.1	Broadcasting
1	26.1	26.175	Maritime Mobile
1	26.175	27.5	Fixed Mobile(exc. aero. mobile)
1	27.5	28	Meteorological Aids/Fixed Mobile
1	28	29.7	Amateur/Amateur-Satellite
1	29.7	30.005	Fixed Mobile
1	30.005	30.01	Fixed Mobile/Space Research
1	30.01	68	Fixed Mobile
1	68	74.8	Fixed Mobile(exc. aero. mobile)
1	74.8	75.2	Aero. Radio-navigation
1	75.2	87.5	Fixed Mobile(exc. aero. mobile)
1	87.5	108	FM Broadcasting
1	108	117.975	Aero. Radio-navigation
1	117.975	136	Aeronautical Mobile

1	136	137	Aero./Fixed Mobile
1	137	138	Space Operation
1	138	144	Aeronautical Mobile
1	144	146	Amateur 510/Amateur-Satellite
1	146	149.9	Fixed Mobile (exc. aero. mobile)
1	149.9	150.05	Radio-nav./Land Mobile-Satellite
1	150.05	174	Fixed Mobile (exc. aero. mobile)
1	174	223	Broadcasting
1	223	230	Broadcasting/Fixed Mobile
1	230	235	Fixed Mobile
1	235	267	Fixed Mobile
1	267	273	Fixed Mobile/Space Operation
1	273	322	Fixed Mobile
1	322	328.6	Fixed Mobile/Radio Astronomy
1	328.6	335.4	Aero. Radio-navigation
1	335.4	399.9	Fixed Mobile
1	399.9	400.05	Radio-navigation-Satellite
1	400.05	400.15	Standard Freq./Time Signal
1	400.15	401	Meteorological Aids
1	401	406	Meteorological Aids
1	406	406.1	Mobile-Satellite
1	406.1	430	Fixed Mobile(exc. aero. mobile)
1	430	440	Amateur Radio-location
1	440	470	Fixed Mobile
1	470	790	Broadcasting
1	790	862	Fixed Broadcasting
1	862	960	Fixed Mobile/Broadcasting
1	960	1215	Aero. Radio-navigation
1	1215	1260	Radio-location/Radio-nav.-Sat.
1	1260	1300	Radio-location
1	1300	1350	Aero. Radio-navigation
1	1350	1400	Fixed Mobile Radio-location
1	1400	1427	Earth Exploration-Satellite
1	1427	1429	Space Oper./Fixed Mob
1	1429	1525	Fixed Mobile (exc. aero. mobile)
1	1,525	1,535	Space Operation
1	1,535	1,544	Maritime Mobile-Satellite
1	1,544	1,545	Mobile-Satellite
1	1,545	1,555	Aeronautical Mobile-Satellite
1	1,555	1,559	Land Mobile-Satellite
1	1,559	1,610	Aero. Radio-nav./Radio-nav.-Sat.
1	1,610	1,627	Aero. Radio-nav./Mobile-Sat.
1	1,627	1,646	Maritime Mobile-Satellite
1	1,646	1,647	Mobile-Satellite
1	1,647	1,657	Aeronautical Mobile-Satellite
1	1,657	1,660	Land Mobile-Satellite
1	1,660	1,661	Radio Astronomy Land Mob. Sat.
1	1,661	1,668	Radio Astronomy/Space Research
1	1,668	1,675	Meteorological Aids
1	1675	1700	Meteorological Aids/Satellite
1	1700	1710	Fixed Meteorological Satellite
1	1710	1980	Fixed Mobile
1	1980	2010	Fixed Mobile/Mobile Satellite
1	2010	2025	Fixed Mobile
1	2025	2120	Fixed Mobile/Space Research
1	2120	2170	Fixed Mobile
1	2170	2200	Fixed Mobile/Mobile Satellite
1	2200	2290	Space Research
1	2290	2300	Fixed Space Research
1	2300	2483.5	Fixed Mobile (amateur Radio-loc.)
1	2483.5	2500	Fixed Mobile/Mobile Satellite
1	2500	2690	Fixed Mobile/Broadcasting Sat.
1	2690	2700	Earth Exploration-Satellite
1	2700	2900	Aero. Radio-navigation
1	2900	3100	Radio-navigation

Region 2 Data

Reg	Start (MHz)	Stop (MHz)	Classification
2	0.505	0.51	Maritime Mobile
2	0.51	0.525	Mobile/Aero. Radio-navigation
2	0.525	0.535	Broadcasting/Aero. Radio-nav
2	0.535	1.705	Broadcasting
2	1.705	1.8	Fixed Mob. Radio-loc & nav/Aero
2	1.8	1.85	Amateur
2	1.85	2	Amateur Fixed Mob.
2	2	2.065	Fixed Mobile
2	2.065	2.107	Maritime Mobile
2	2.107	2.17	Fixed Mobile
2	2.17	2.1735	Maritime Mobile
2	2.1735	2.1905	Mobile (distress and calling)
2	2.1905	2.194	Maritime Mobile
2	2.194	2.3	Fixed Mobile
2	2.3	2.495	Fixed Mobile Broadcasting
2	2.495	2.505	Standard Frequency/Time Signal
2	2.505	2.85	Fixed Mobile
2	2.85	3.155	Aeronautical Mobile
2	3.155	3.2	Fixed Mobile (exc. aero. Mobile)
2	3.2	3.4	Fixed Mobile, Broadcasting
2	3.4	3.5	Aeronautical Mobile
2	3.5	3.75	Amateur
2	3.75	4	Amateur / Fixed Mobile
2	4	4.063	Fixed Maritime Mobile
2	4.063	4.438	Maritime Mobile
2	4.438	4.65	Fixed Mobile(exc. aero. Mobile)
2	4.65	4.75	Aeronautical Mobile
2	4.75	4.85	Standard Frequency/Time Signal
2	4.85	4.995	Fixed Land Mobile Broadcasting
2	4.995	5.005	Standard Frequency/Time Signal
2	5.005	5.06	Fixed Broadcasting
2	5.06	5.45	Fixed Mobile(exc. aero. Mobile)
2	5.45	5.73	Aeronautical Mobile
2	5.73	5.95	Fixed Mobile(exc. aero. Mobile)
2	5.95	6.2	Broadcasting
2	6.2	6.525	Maritime Mobile
2	6.525	6.765	Aeronautical Mobile
2	6.765	7	Fixed Land Mobile
2	7	7.1	Amateur / Amateur-Satellite
2	7.1	7.3	Amateur
2	7.3	8.1	Fixed Land Mobile
2	8.1	8.195	Fixed Maritime Mobile
2	8.195	8.815	Maritime Mobile
2	8.815	9.04	Aeronautical Mobile
2	9.04	9.5	Fixed
2	9.5	9.9	Broadcasting
2	9.9	9.995	Fixed
2	9.995	10.005	Standard Frequency/Time Signal
2	10.005	10.1	Aeronautical Mobile
2	10.1	10.15	Fixed Amateur
2	10.15	11.175	Fixed Mobile(exc. aero. Mobile)
2	11.175	11.4	Aeronautical Mobile
2	11.4	11.65	Fixed
2	11.65	12.05	Broadcasting
2	12.05	12.23	Fixed
2	12.23	13.2	Maritime Mobile
2	13.2	13.36	Aeronautical Mobile

2	13.36	13.41	Fixed Radio Astronomy
2	13.41	13.6	Fixed Mobile (exc. Aero. Mobile)
2	13.6	13.8	Broadcasting
2	13.8	14	Fixed Mobile (exc. Aero. Mobile)
2	14	14.25	Amateur 510/Amateur Satellite
2	14.25	14.35	Amateur 510
2	14.35	14.99	Fixed Mobile(exc. aero. Mobile)
2	14.99	15.01	Standard Frequency/Time Signal
2	15.01	15.1	Aeronautical Mobile
2	15.1	15.6	Broadcasting
2	15.6	16.36	Fixed
2	16.36	17.41	Maritime Mobile
2	17.41	17.55	Fixed
2	17.55	17.9	Broadcasting
2	17.9	18.03	Aeronautical Mobile
2	18.03	18.052	Fixed
2	18.052	18.068	Fixed Space Research
2	18.068	18.168	Amateur 510/ Amateur-Satellite
2	18.168	18.78	Fixed Mobile (exc. Aero. Mobile)
2	18.78	18.9	Maritime Mobile
2	18.9	19.68	Fixed
2	19.68	19.8	Maritime Mobile
2	19.8	19.99	Fixed
2	19.99	20.01	Standard Frequency/Time Signal
2	20.01	21	Fixed Mobile
2	21	21.45	Amateur 510/ Amateur-Satellite
2	21.45	21.85	Broadcasting
2	21.85	21.87	Fixed
2	21.87	21.924	Aeronautical Fixed
2	21.924	22	Aeronautical Mobile
2	22	22.855	Maritime Mobile
2	22.855	23	Fixed
2	23	23.2	Fixed Mobile (exc. Aero. mobile)
2	23.2	23.35	Aero. Fixed/Aero. Mobile
2	23.35	24	Fixed Mobile (exc. Aero. mobile)
2	24	24.89	Fixed Land Mobile
2	24.89	24.99	Amateur 510/ Amateur-Satellite
2	24.99	25.01	Standard Frequency/Time Signal
2	25.01	25.07	Fixed Mobile (exc. Aero. mobile)
2	25.07	25.21	Maritime Mobile
2	25.21	25.55	Fixed Mobile (exc. Aero. mobile)
2	25.55	25.67	Radio Astronomy
2	25.67	26.1	Broadcasting
2	26.1	26.175	Maritime Mobile
2	26.175	27.5	Fixed Mobile (exc. Aero. mobile)
2	27.5	28	Meteorological Aids Fixed Mobile
2	28	29.7	Amateur/Amateur-Satellite
2	29.7	30.005	Fixed Mobile
2	30.005	30.01	Fixed Mob/Space Operations
2	30.01	37.5	Fixed Mobile
2	37.5	38.25	Fixed Mobile/Radio Astronomy
2	38.25	39.986	Fixed Mobile
2	39.986	40.02	Fixed Mobile/Space Research
2	40.02	40.98	Fixed Mobile
2	40.98	41.015	Fixed Mobile/Space Research
2	41.015	50	Fixed Mobile
2	50	54	Amateur
2	54	72	Broadcasting/Fixed Mobile
2	72	73	Fixed Mobile
2	73	74.6	Radio Astronomy
2	74.6	74.8	Fixed Mobile
2	74.8	75.2	Aeronautical Radio-navigation
2	75.2	76	Fixed Mobile
2	76	108	Broadcasting
2	108	117.98	Aeronautical Radio-navigation

2	117.98	136	Aeronautical Mobile
2	136	137	Aero. Mobile/Fixed Mobile
2	137	138	Space Res./Oper. Mob./Met.-Sat.
2	138	143.6	Fixed Mobile/Radio-location
2	143.6	143.65	Fixed Mobile/Space Research
2	143.65	144	Fixed Mobile/Radio-location
2	144	146	Amateur 510/ Amateur-Satellite
2	146	148	Amateur
2	148	149.9	Fixed Mobile/Mobile Satellite
2	149.9	150.05	Radio-nav. Sat./Land Mobile Sat.
2	150.05	156.763	Fixed Mobile
2	156.763	156.838	Maritime Mobile (distress)
2	156.838	174	Fixed Mobile
2	174	216	Broadcasting/Fixed Mobile
2	216	220	Fixed/Maritime Mobile
2	220	225	Amateur/Fixed Mobile
2	225	267	Fixed Mobile
2	267	273	Space Operation/Fixed Mobile
2	273	322	Fixed Mobile
2	322	328.6	Fixed Mobile/Radio Astronomy
2	328.6	335.4	Aeronautical Radio-navigation
2	335.4	399.9	Fixed Mobile
2	399.9	400.5	Radio-nav. Satellite
2	400.05	400.15	Std Frequency/Time Signal-Sat.
2	400.15	406	Meteorological Aids
2	406	406.1	Mobile Satellite
2	406.1	430	Fixed Mobile (exc. aero. mobile)
2	430	440	Radio-location/Amateur
2	440	450	Fixed Mobile (exc. aero. mobile)
2	450	460	Fixed Mobile
2	460	470	Fixed Mobile/ Meteor.-Satellite
2	470	512	Broadcasting/Fixed Mobile
2	512	608	Broadcasting
2	608	614	Radio Astronomy
2	614	806	Broadcasting/Fixed Mobile
2	806	890	Fixed Mobile Broadcasting
2	890	902	Fixed Mobile (exc. Aero. mobile)
2	902	928	Fixed/Amateur Mobile
2	928	942	Fixed Mobile
2	942	960	Fixed Mobile (exc. Aero. mobile)
2	960	1215	Aero. Radio-navigation
2	1215	1260	Radio-location/Radio-nav.-Sat.
2	1260	1300	Radio-location
2	1300	1350	Aero. Radio-navigation
2	1350	1400	Radio-location
2	1400	1427	Earth Exploration-Satellite
2	1427	1429	Space Operation/Fixed Mobile
2	1429	1525	Fixed Mobile
2	1525	1535	Space Operation/Maritime Mobile
2	1535	1544	Maritime Mobile-Satellite
2	1544	1545	Mobile Satellite
2	1545	1555	Aero. Mobile-Satellite
2	1555	1559	Land Mobile Satellite
2	1559	1610	Aero. Radio-nav./Radio-nav.-Sat.
2	1610	1626.5	Aero. Radio-nav./Radio-det.-Sat.
2	1626.5	1631.5	Mobile-Satellite
2	1631.5	1634.5	Maritime/Land Mobile-Satellite
2	1634.5	1645.5	Maritime Mobile-Satellite
2	1645.5	1646.5	Mobile-Satellite
2	1646.5	1656.5	Aero. Mobile-Satellite
2	1656.5	1660	Land Mobile-Satellite
2	1660	1660.5	Radio Astron./Land Mobile Sat.
2	1660.5	1668.4	Radio Astron./Space Research
2	1668.4	1700	Meteorological Aids
2	1700	1710	Fixed Meteorological Satellite

2	1710	1930	Fixed Mobile
2	1930	2010	Fixed Mobile Satellite
2	2010	2025	Fixed Mobile
2	2025	2120	Fixed Mobile/Space Research
2	2120	2200	Fixed Mobile/Mobile Satellite
2	2200	2290	Fixed Space Res./Space Op.
2	2290	2300	Fixed Mob./Space Research
2	2300	2483.5	Fixed Mobile Radio-location
2	2483.5	2500	Fixed Mobile/Radio-det.-Satellite
2	2500	2690	Fixed Sat./Broadcasting-Sat.
2	2690	2700	Earth Explore-Sat./Radio Astron.
2	2700	2900	Aeronautical Radio-navigation
2	2900	3100	Radio-navigation

Region 3 Data

Reg	Start (MHz)	Stop (MHz)	Classification
3	0.505	0.5265	Maritime Mobile/Aero. Radio-nav.
3	0.5265	0.535	Broadcasting
3	0.535	1.6065	Radio Broadcasting (AM)
3	1.6065	1.8	Fixed Mob./Radio-loc/Radio-nav
3	1.8	2	Amat. Fixed Mob(exc. aero. mob.)
3	2	2.065	Fixed Mobile
3	2.065	2.107	Maritime Mobile
3	2.107	2.17	Fixed Mobile
3	2.17	2.1735	Maritime Mobile
3	2.1735	2.1905	Mobile (distress and calling)
3	2.1905	2.194	Maritime Mobile
3	2.194	2.3	Fixed Mobile
3	2.3	2.495	Fixed Mobile Broadcasting
3	2.495	2.505	Std. Frequency/Time Signal
3	2.505	2.85	Fixed Mobile
3	2.85	3.155	Aeronautical Mobile
3	3.155	3.2	Fixed Mobile(exc. aero. Mob.)
3	3.2	3.4	Fixed Mobile/Broadcasting
3	3.4	3.5	Aero. Mobile
3	3.5	3.9	Amateur 510/Fixed Mobile
3	3.9	3.95	Aero. Mobile/Broadcasting
3	3.95	4	Fixed Broadcasting
3	4	4.063	Fixed Maritime Mobile
3	4.063	4.438	Maritime Mobile
3	4.438	4.65	Fixed Mobile(exc. aero. Mob.)
3	4.65	4.75	Aero. Mobile
3	4.75	4.85	Fixed Broadcasting
3	4.85	4.995	Fixed Land Mobile Broadcasting
3	4.995	5.005	Std. Frequency/Time Signal
3	5.005	5.06	Fixed Broadcasting
3	5.06	5.45	Fixed Mobile(exc. aero. Mob.)
3	5.45	5.48	Fixed Aero. Mobile/Land Mobile
3	5.48	5.73	Aero. Mobile
3	5.73	5.95	Fixed Mobile(exc. aero. Mob.)
3	5.95	6.2	Broadcasting
3	6.2	6.525	Maritime Mobile
3	6.525	6.765	Aero. Mobile
3	6.765	7	Fixed Land Mobile
3	7	7.1	Amateur 510/Amateur-Satellite
3	7.1	7.3	Broadcasting
3	7.3	8.1	Fixed Land Mobile
3	8.1	8.195	Fixed Maritime Mobile
3	8.195	8.815	Maritime Mobile
3	8.815	9.04	Aero. Mobile
3	9.04	9.5	Fixed
3	9.5	9.9	Broadcasting
3	9.9	9.995	Fixed
3	9.995	10.005	Std. Frequency/Time Signal
3	10.005	10.1	Aero. Mobile
3	10.1	10.15	Fixed Amateur 510
3	10.15	11.175	Fixed Mobile(exc. aero. Mob.)
3	11.175	11.4	Aero. Mobile
3	11.4	11.65	Fixed
3	11.65	12.05	Broadcasting
3	12.05	12.23	Fixed
3	12.23	13.2	Maritime Mobile
3	13.2	13.36	Aero. Mobile

3	13.36	13.41	Fixed Radio Astronomy
3	13.41	13.6	Fixed Mobile(exc. Aero. Mob.)
3	13.6	13.8	Broadcasting
3	13.8	14	Fixed Mobile(exc. Aero. Mob.)
3	14	14.35	Amateur 510
3	14.35	14.99	Fixed Mobile(exc. Aero. Mob.)
3	14.99	15.01	Std. Frequency/Time Signal
3	15.01	15.1	Aero. Mobile
3	15.1	15.6	Broadcasting
3	15.6	16.36	Fixed
3	16.36	17.41	Maritime Mobile
3	17.41	17.55	Fixed
3	17.55	17.9	Broadcasting
3	17.9	18.03	Aero. Mobile
3	18.03	18.052	Fixed
3	18.052	18.068	Fixed Space Research
3	18.068	18.168	Amateur 510/Amateur-Satellite
3	18.168	18.78	Fixed Mobile(exc. aero. Mob.)
3	18.78	18.9	Maritime Mobile
3	18.9	19.68	Fixed
3	19.68	19.8	Maritime Mobile
3	19.8	19.99	Fixed
3	19.99	20.01	Std. Frequency/Time Signal
3	20.01	21	Fixed
3	21	21.45	Amateur 510/Amateur-Satellite
3	21.45	21.85	Broadcasting
3	21.85	21.87	Fixed
3	21.87	22	Aero. Mobile
3	22	22.855	Maritime Mobile
3	22.855	23	Fixed
3	23	23.2	Fixed Mobile(exc. aero. mob.)
3	23.2	23.35	Aero. Fixed/Aero. Mobile
3	23.35	24	Fixed Mobile(exc. aero. mob.)
3	24	24.89	Fixed Land Mobile
3	24.89	24.99	Amateur 510/Amateur-Satellite
3	24.99	25.01	Std. Frequency/Time Signal
3	25.01	25.07	Fixed Mobile(exc. aero. mob.)
3	25.07	25.21	Maritime Mobile
3	25.21	25.55	Fixed Mobile(exc. aero. mob.)
3	25.55	25.67	Radio Astronomy
3	25.67	26.1	Broadcasting
3	26.1	26.175	Maritime Mobile
3	26.175	27.5	Fixed Mobile(exc. aero. mob.)
3	27.5	28	Meteorological Aids/Fixed Mob.
3	28	29.7	Amateur/Amateur Satellite
3	29.7	30.005	Fixed Mobile
3	30.005	30.01	Fixed Mobile/Space Research
3	30.01	37.5	Fixed Mobile
3	37.5	38.25	Fixed Mobile/Radio Astronomy
3	38.25	39.986	Fixed Mobile
3	39.986	40.02	Fixed Mobile/Space Research
3	40.02	40.98	Fixed Mobile
3	40.98	41.015	Fixed Mobile/Space Research
3	41.015	44	Land Mobile
3	44	47	Fixed Mobile
3	47	68	Fixed Mobile Broadcasting
3	68	74.8	Fixed Mobile
3	74.8	75.2	Aero. Radio-navigation
3	75.2	87	Fixed Mobile
3	87	100	Fixed Mobile Broadcasting
3	100	108	Broadcasting
3	108	117.975	Aero. Radio-navigation
3	117.975	137	Aero. Mobile
3	137	138	Space Operation
3	138	144	Fixed Mobile/Space Research

3	144	146	Amateur 510/Amateur-Satellite
3	146	148	Amateur Fixed Mobile
3	148	149.9	Fixed Mobile/Mobile Satellite
3	149.9	150.5	Radio-nav.-Sat./Land Mob. Sat.
3	150.5	153	Fixed Mob./Radio Astronomy
3	153	156.763	Fixed Mobile(exc. aero. mob.)
3	156.763	156.838	Maritime Mob.(distress)
3	156.838	174	Fixed Mobile
3	174	223	Fixed Mobile Broadcasting
3	223	230	Fixed
3	230	235	Fixed Mobile/Aero. Radio-nav.
3	235	267	Fixed Mobile
3	267	273	Fixed Mobile/Space Operation
3	273	322	Fixed Mobile
3	322	328.6	Fixed Mobile/Radio Astronomy
3	328.6	335.4	Aero. Radio-navigation
3	335.4	399.9	Fixed Mobile
3	399.9	400.5	Radio-nav.Satellite
3	400.5	400.15	Std. Frequency/Time Signal
3	400.15	401	Meteorological Aids
3	401	406	Meteorological Aids
3	406	406.1	Mobile-Satellite
3	406.1	410	Fixed Mobile/Radio Astronomy
3	410	430	Fixed Mobile(exc. aero. mob.)
3	430	440	Radio-loc
3	440	450	Fixed Mobile(exc. aero. mob.)
3	450	460	Fixed Mobile
3	460	470	Fixed Mob./Meteorological Sat.
3	470	585	Fixed Mobile Broadcasting
3	585	610	Fixed Mob. Broadcast./Radio-nav.
3	610	960	Fixed Mobile Broadcasting
3	960	1215	Aero. Radio-navigation
3	1215	1260	Radio-loc/Radio-nav.-Satellite
3	1260	1300	Radio-loc
3	1300	1350	Aero. Radio-navigation
3	1350	1400	Radiolocation
3	1400	1427	Earth Exploration-Satellite
3	1427	1429	Space Operation
3	1429	1525	Fixed Mobile
3	1525	1535	Space Operation
3	1535	1544	Maritime Mobile-Satellite
3	1544	1545	Mobile Satellite
3	1545	1555	Aero. Mobile-Satellite
3	1555	1559	Land Mobile Satellite
3	1559	1626.5	Aero. Radio-navigation
3	1626.5	1631.5	Mobile-Satellite
3	1631.5	1645.5	Maritime Mobile-Satellite
3	1645.5	1646.5	Mobile-Satellite
3	1646.5	1656.5	Aero. Mobile-Satellite
3	1656.5	1660	Land Mobile-Satellite
3	1660	1660.5	Radio Astronomy/Land Mobile-Sat
3	1660.5	1668.4	Radio Astronomy
3	1668.4	1700	Meteorological Aids
3	1700	1710	Fixed Meteorological-Satellite
3	1710	1980	Fixed Mobile
3	1980	2010	Fixed Mobile/Mobile Satellite
3	2010	2025	Fixed Mobile
3	2025	2120	Fixed Mobile/Space Research
3	2120	2200	Fixed Mobile/Mobile Satellite
3	2200	2290	Fixed/Space Research
3	2290	2300	Fixed Mobile/Space Research
3	2300	2500	Fixed Mobile Radio-loc
3	2500	2535	Fixed/Fixed-Satellite
3	2535	2655	Fixed Mobile/Broadcasting Sat.
3	2655	2690	Fixed/Fixed-Satellite

3	2690	2700	Earth Exploration-Satellite
3	2700	2900	Aero. Radio-navigation
3	2900	3100	Radio-navigation

Standard Television Frequency Data (USA)

Start (MHz)	Stop (MHz)	Channel
55.1875	55.3125	CH 2 Vid.
59.6875	59.8125	CH 2 Aud.
61.1875	61.3125	CH 3 Vid.
65.6875	65.8125	CH 3 Aud.
67.1875	67.3125	CH 4 Vid.
71.6875	71.8125	CH 4 Aud.
77.1875	77.3125	CH 5 Vid.
81.6875	81.8125	CH 5 Aud.
83.1875	83.3125	CH 6 Vid.
87.6875	87.8125	CH 6 Aud.
175.1875	175.3125	CH 7 Vid.
179.1875	179.3125	CH 7 Aud.
181.1875	181.3125	CH 8 Vid.
185.6875	185.8125	CH 8 Aud.
187.1875	187.3125	CH 9 Vid.
191.6875	191.8125	CH 9 Aud.
193.1875	193.3125	CH 10 Vid.
197.6875	197.8125	CH 10 Aud.
199.1875	199.3125	CH 11 Vid.
203.6875	203.8125	CH 11 Aud.
205.1875	205.3125	CH 12 Vid.
209.6875	209.8125	CH 12 Aud.
211.1875	211.3125	CH 13 Vid.
215.6875	215.8125	CH 13 Aud.
477.1875	477.3125	CH 15 Vid.
481.6875	481.8125	CH 15 Aud.
483.1875	483.3125	CH 16 Vid.
487.6875	487.8125	CH 16 Aud.
489.1875	489.3125	CH 17 Vid.
493.6875	493.8125	CH 17 Aud.
495.1875	495.3125	CH 18 Vid.
499.6875	499.8125	CH 18 Aud.
501.1875	501.3125	CH 19 Vid.
505.6875	505.8125	CH 19 Aud.
507.1875	507.3125	CH 20 Vid.
511.6875	511.8125	CH 20 Aud.
513.1875	513.3125	CH 21 Vid.
517.6875	517.8125	CH 21 Aud.
519.1875	519.3125	CH 22 Vid.
523.6875	523.8125	CH 22 Aud.
525.1875	525.3125	CH 23 Vid.
529.6875	529.8125	CH 23 Aud.
531.1875	531.3125	CH 24 Vid.
535.6875	535.8125	CH 24 Aud.
537.1875	537.3125	CH 25 Vid.
541.6875	541.8125	CH 25 Aud.
543.1875	543.3125	CH 26 Vid.
547.6875	547.8125	CH 26 Aud.
549.1875	549.3125	CH 27 Vid.
553.6875	553.8125	CH 27 Aud.
555.1875	555.3125	CH 28 Vid.
559.6875	559.8125	CH 28 Aud.
561.1875	561.3125	CH 29 Vid.
565.6875	565.8125	CH 29 Aud.
567.1875	567.3125	CH 30 Vid.
571.6875	571.8125	CH 30 Aud.
573.1875	573.3125	CH 31 Vid.
577.6875	577.8125	CH 31 Aud.

579.1875	579.3125	CH 32 Vid.
583.6875	583.8125	CH 32 Aud.
585.1875	585.3125	CH 33 Vid.
589.6875	589.8125	CH 33 Aud.
591.1875	591.3125	CH 34 Vid.
595.6875	595.8125	CH 34 Aud.
597.1875	597.3125	CH 35 Vid.
601.6875	601.8125	CH 35 Aud.
603.1875	603.3125	CH 36 Vid.
607.6875	607.8125	CH 36 Aud.
609.1875	609.3125	CH 37 Vid.
613.6875	613.8125	CH 37 Aud.
615.1875	615.3125	CH 38 Vid.
619.6875	619.8125	CH 38 Aud.
621.1875	621.3125	CH 39 Vid.
625.6875	625.8125	CH 39 Aud.
627.1875	627.3125	CH 40 Vid.
631.6875	631.8125	CH 40 Aud.
633.1875	633.3125	CH 41 Vid.
637.6875	637.8125	CH 41 Aud.
639.1875	639.3125	CH 42 Vid.
643.6875	643.8125	CH 42 Aud.
645.1875	645.3125	CH 43 Vid.
649.6875	649.8125	CH 43 Aud.
651.1875	651.3125	CH 44 Vid.
655.1875	655.3125	CH 44 Aud.
657.1875	657.3125	CH 45 Vid.
661.6875	661.8125	CH 45 Aud.
663.1875	663.3125	CH 46 Vid.
667.6875	667.8125	CH 46 Aud.
669.1875	669.3125	CH 47 Vid.
673.6875	673.8125	CH 47 Aud.
675.1875	675.3125	CH 48 Vid.
679.6875	679.8125	CH 48 Aud.
681.1875	681.3125	CH 49 Vid.
685.6875	685.8125	CH 49 Aud.
687.1875	687.3125	CH 50 Vid.
691.6875	691.8125	CH 50 Aud.
693.1875	693.3125	CH 51 Vid.
697.6875	697.8125	CH 51 Aud.
699.1875	699.3125	CH 52 Vid.
703.6875	703.8125	CH 52 Aud.
705.1875	705.3125	CH 53 Vid.
709.6875	709.8125	CH 53 Aud.
711.1875	711.3125	CH 54 Vid.
715.6875	715.8125	CH 54 Aud.
717.1875	717.3125	CH 55 Vid.
721.6875	721.8125	CH 55 Aud.
723.1875	723.3125	CH 56 Vid.
727.6875	727.8125	CH 56 Aud.
729.1875	729.3125	CH 57 Vid.
733.6875	733.8125	CH 57 Aud.
735.1875	735.3125	CH 58 Vid.
739.6875	739.8125	CH 58 Aud.
741.1875	741.3125	CH 59 Vid.
745.6875	745.8125	CH 59 Aud.
747.1875	747.3125	CH 60 Vid.
751.6875	751.8125	CH 60 Aud.
753.1875	753.3125	CH 61 Vid.
757.6875	757.8125	CH 61 Aud.

759.1875	759.3125	CH 62 Vid.
763.6875	763.8125	CH 62 Aud.
765.1875	765.3125	CH 63 Vid.
769.6875	769.8125	CH 63 Aud.
771.1875	771.3125	CH 64 Vid.
775.6875	775.8125	CH 64 Aud.
777.1875	777.3125	CH 65 Vid.
781.6875	781.8125	CH 65 Aud.
783.1875	783.3125	CH 66 Vid.
787.6875	787.8125	CH 66 Aud.
789.1875	789.3125	CH 67 Vid.
793.6875	793.8125	CH 67 Aud.
795.1875	795.3125	CH 68 Vid.
799.6875	799.8125	CH 68 Aud.
801.1875	801.3125	CH 69 Vid.
805.6875	805.8125	CH 69 Aud.

Index**A**

, 11
 AC VLF, 10
 Acoustic Correlator (Automatic), 63
 Acoustic Noise Generating Systems, 94
 Acoustic tile, 95
 AFT, 32
 AM, 31
 Analyze Mode, 29
 Auto Fine Tune, 32
 Demodulators, 31
 Harmonic Frequency Analysis, 33
 Plots, 52
 Screen Refresh, 30
 Snuggle Bug Analysis, 33
 SubCarrier, 31
 Antennas, 10
 Attenuator
 Audio, 41
 RF, 25
 Audio
 Attenuator, 41
 Filter, 41
 Patch Cord, 15
 Spectrum Analysis, 43
 Audio Tape Recorder, 17
 Auto Fine Tune, 32
 , 8
 Automatic Mode, 55, 76
 1 Signal Review, 57
 2 Setup Inputs, 57
 3 Load Friendly, 59
 4 START AUTO, 60
 Correlate, 63
 Manual Squelch, 58
 Outputs, 61
 Auto-Plotting, 62
 Auto-Record, 62

B

Bandwidths, 21
 Battery, 12
 body bug, 69, 83
 Broadband Energy Detectors, 90
 Burst Bugs, 27

C

Carrier Current, 10, 75
 Charging, 12
 Cigarette Lighter Adaptor, 17
 CLA-700 Cigarette Lighter Adaptor, 17
 Computer Interface, 16, 17
 Conducting a sweep, 71
 Confirm, 44
 Connector Tray, 13
 CORR, 43

Correlate
 Plots, 52
 Correlator
 Automatic, 63
 Manual, 43
 Correlator Mode
 Active, 65
 LD FRND, 72
 Passive, 64
 Verify, 64
 Cursor, 32

D

Data Functions, 34
 Database, 34
 Database Listing, 52
 Date, 19
 DC Power, 12
 Deep Dig, 58
 Demodulation, 29
 Difference Spectrum Display, 28
 Direct Frequency Input, 25
 Discone, 10
 Display Freeze, 54
 Display Mode, 63
 Double Demodulation, 31
 DOWN, 24

E

Expansion Port, 13
 EXT Button, 40
 EXT REF, 40
 Extension Cable, 17

F

False Alarms, 81
 Fastskim, 58
 Filter (Audio), 41
 FM, 31
 Freeze Screen, 54
 Frequency
 Display, 23
 Hopping, 80
 Ranges, 23, 57
 Frequency Allocations, FCC database, 96
 Frequency Analysis, 33
 Frequency Data
 Region 1, 97
 Region 2, 99
 Region 3, 101
 Regional Map, 96
 Frequency Expansion
 see MDC-2100, 16
 Frequency Hopping, 27
 Frequency Span Storage, 37
 Friendly, 72
 Friendly RF Spectrum, 26

H

Harmonic Frequency Analysis, 33
 Harmonic Receivers, 89
 Harmonics, 79
 Headphones, 15, 42

I

IF Output, 17
 IMAGE button, 66, 68
 Infrared, 10, 48, 74
 Infrared Parabolic Reflector, 48
 Input/Output, 13
 Inputs, 21
 Integration Spectrum Display, 28

J

Job Title, 19

K

Keypad, 25

L

LD FRND, 72
 Load Friendly, 59
 Locating the Threat
 Infrared, 48
 RF, 46
 Tape Recorders, 45
 Triangulation, 48
 Video, 67, 68
 Locator Probe, 15, 46
 Loop, 10
 LPE-5000 Locator Probe Extension, 17

M

Manual Squelch Setting, 58
 Manually Setting the Squelch Level, 58
 MDC-2100, 16, 55
 Med Hunt, 58
 , 9
 MIC-5000 Miniature Microphone, 17
 Microphone, 17
 Microwave Downconverter, 16, 55
 MiniPlug Extension Cable, 15
 Modulation, 29
 Monitoring a Meeting, 83
 MPA-700 Modular Phone Adaptor, 17
 MPC-5000 Multi-Purpose Cable, 17

N

No Correlation, 72
 Noise Generating Systems, 94
 Non-Linear Junction Detectors, 93

O

OAR-5000 OSCOR Audio Recorder, 17
 OIF-5000 OSCOR Intermediate Frequency Output
 (10.7 MHz), 17
 OPC-5000 OSCOR Computer Interface, 16, 17
 ORION, 94
 Oscilloscope, 43
 OTL-5000, 48
 OTL-5000 OSCOR Triangulate and Locate, 16, 17
 Outputs, 61
 OVM-5000 OSCOR Video Option, 17
 OVP-5000 OSCOR Video Patch Cord, 17, 67
 OVS-5000 OSCOR Video Option, 17

P

Paper Installation, 53
 Parabolic Reflector, 49
 Peak Signal Display, 27
 Peak Spectrum Display, 27
 Phone Coupler, 16
 Physical Search, 77
 Pre-Loading Friendly Signals, 72
 Program key, 12
 Programming the Auto Mode, 55

R

Ranging, 48
 RECALL, 35, 37
 Receiver, 20
 Receivers
 Broadband Detectors, 90
 Harmonic, 89
 Spectrum Analyzers, 89
 Reference Audio, 39
 Refresh, 30
 Regional Frequency Map, 96
 Reset Button, 19
 RF Attenuator, 25
 RF Extension Cord, 15
 RS-232, 13

S

Screen Active, 63
 SEEK/LIMITS, 24, 32
 Setup Inputs, 57
 SHIFT Functions, 54
 Signal
 , 37
 Deleting, 37
 Deleting, 36
 Friendly, 72
 Listing, 52
 Plots, 52
 Storage, 34
 Threat level, 36
 Signal Review, 57
 Signal Threshold, 42
 Signals

- Spurious Signal Clean up, 37
- Snuggle Bug, 22, 28
- Snuggle Bug Analysis, 33
- Span Listing, 52
- Span Off, 58
- Speaker Monitoring Control, 40
- SPECT, 43
- Spectrum Analyzer**, 20, 89
- Spread Spectrum, 27, 80
- Spurious Signal Clean up, 37
- Squelch, 42
- Squelch Level for automatic operation, 58
- Start Auto Mode, 60
- STORE, 35, 37
- Subcarrier, 31
- Sweep Mode**, 20
- Sweep Span Editing, 38
- Sweep Span Listing, 52
- Sweep Span Storage, 37
- SWEEP/ANALYZE, 20, 29
- , 69
 - Conducting, 71
 - Environment, 70
 - Planning, 69
 - Scheduling, 70
 - Securing the Area, 73
 - Signal Chart, 73
 - Sound Source, 74

T

- Tape Recorder, 17
 - Controls, 54
 - Detection*, 45
 - Detectors, 91
- Telephone
 - Adaptor, 17
 - Analyzers, 91
 - Coupler, 16

- Telephone Testing, 84
 - Carrier Current, 85
 - Hook-Switch By-Pass, 84
 - Hot Phones, 84
 - Time Domain Reflectometry (TDR), 92
 - Voltmeters, 92
- Television Frequency Data, 103
- Threat
 - Level, 44
 - Locating, 45
 - Signal Storage, 34
 - type, 70
- Threat Signals, 78
- Time Clock, 19
- Tone Ringer System, 42
- Triangulate and Locate Option, 16, 17, 48

U

- Units, 19
- UP, 24

V

- Video
 - Chip Camera, 65
 - Detection, 65
 - Identifying, 66
 - Locating, 67, 68
 - Separate Monitor, 67
- Video Option, 17
- Video Recording, 17, 67
- VLF Adapter, 15
- Volume for Tone Ringer, 42

W

- Whip, 10

OSCOR Quick Reference Guide

Shift Functions

SHIFT, AUTO	Start Automatic Mode from Start, no resume
SHIFT, TONE	Silence Confirmation Tone.
SHIFT, TAPE	Set Tape Remote Out Off.
SHIFT, FEED	Reverse Feed Plotter Paper.
SHIFT, PLOT	Print Short Test Plot.
SHIFT, FILTER	Mute Speaker, Filter to Un-mute.
SHIFT, EXT	Reset Audio to Defaults.
SHIFT, IMAGE	Freeze Screen Display.
SHIFT SEEK	Auto Fine Tune /ANALYZE
SHIFT, EXPAND	Displays the maximum available Frequency Span
SHIFT, NARROW	Displays the minimum available Frequency Span
SHIFT, UP	Shifts the Frequency display up a half Screen.
SHIFT, DOWN	Shifts the Frequency display down a half Screen.
SHIFT, 000	Display Battery Voltage on Analyze.
SHIFT, 002	Display Database Status.
SHIFT, 003	Freeze Display.
SHIFT, 004	Secure Locks opened by password.
SHIFT, 006	Toggle 12/24-Hour Clock mode.
SHIFT, 007	Set Start-up Input to current input.
SHIFT, 008	Set Squelch Delay Time.
SHIFT, 009	Manual Mode Display Privacy
SHIFT, 022	Snuggle Bug Analysis – Analyze Mode
SHIFT, 024	2.4GHz Video Shortcut
SHIFT, 100	Reset AutoMode spans & Settings
SHIFT, 101	Limited OPC-5000 Demonstration Mode
SHIFT, 102	Loads Pre-defined Spans in Memory (100MHz Inc)
SHIFT, 103	Loads Pre-defined Spans in Memory (25MHz Inc)

FIGURE 32: SHIFT FUNCTION